

Metal Privacy Screen Installation Manual

SKU:PF02BK05 PF03BK05 PF04BK05 PF05BK05

Important Installation Notes-Please Read First

1.Safety First:

Wear the gloves provided in the carton box to avoid any injuries, Work on a clean, flat, and stable surface to avoid scratching the cabinet or causing instability during assembly.

2.Adult Supervision Required:

This product must be assembled by adults only. Keep small parts (screws, washers, etc.)away from children and pets to prevent choking hazards.

3.Parts Checklist

Before beginning, open the carton box and lay out every part against the parts list to verify that all parts needed are included in your package. If any parts are missing, damaged, or defective, contact our customer service immediately by:


sales-order-service@hotmail.com

4.Tools Required:

Basic wrench and screwdriver included in the package. For faster assembly, we recommend using a power screwdriver in your home

Thank you for choosing our Metal Privacy Screen. We're honored it now stands in your space. If you have any installation or after-sales questions, please email us!


Flexible Assembly in Vertical or Horizontal Style

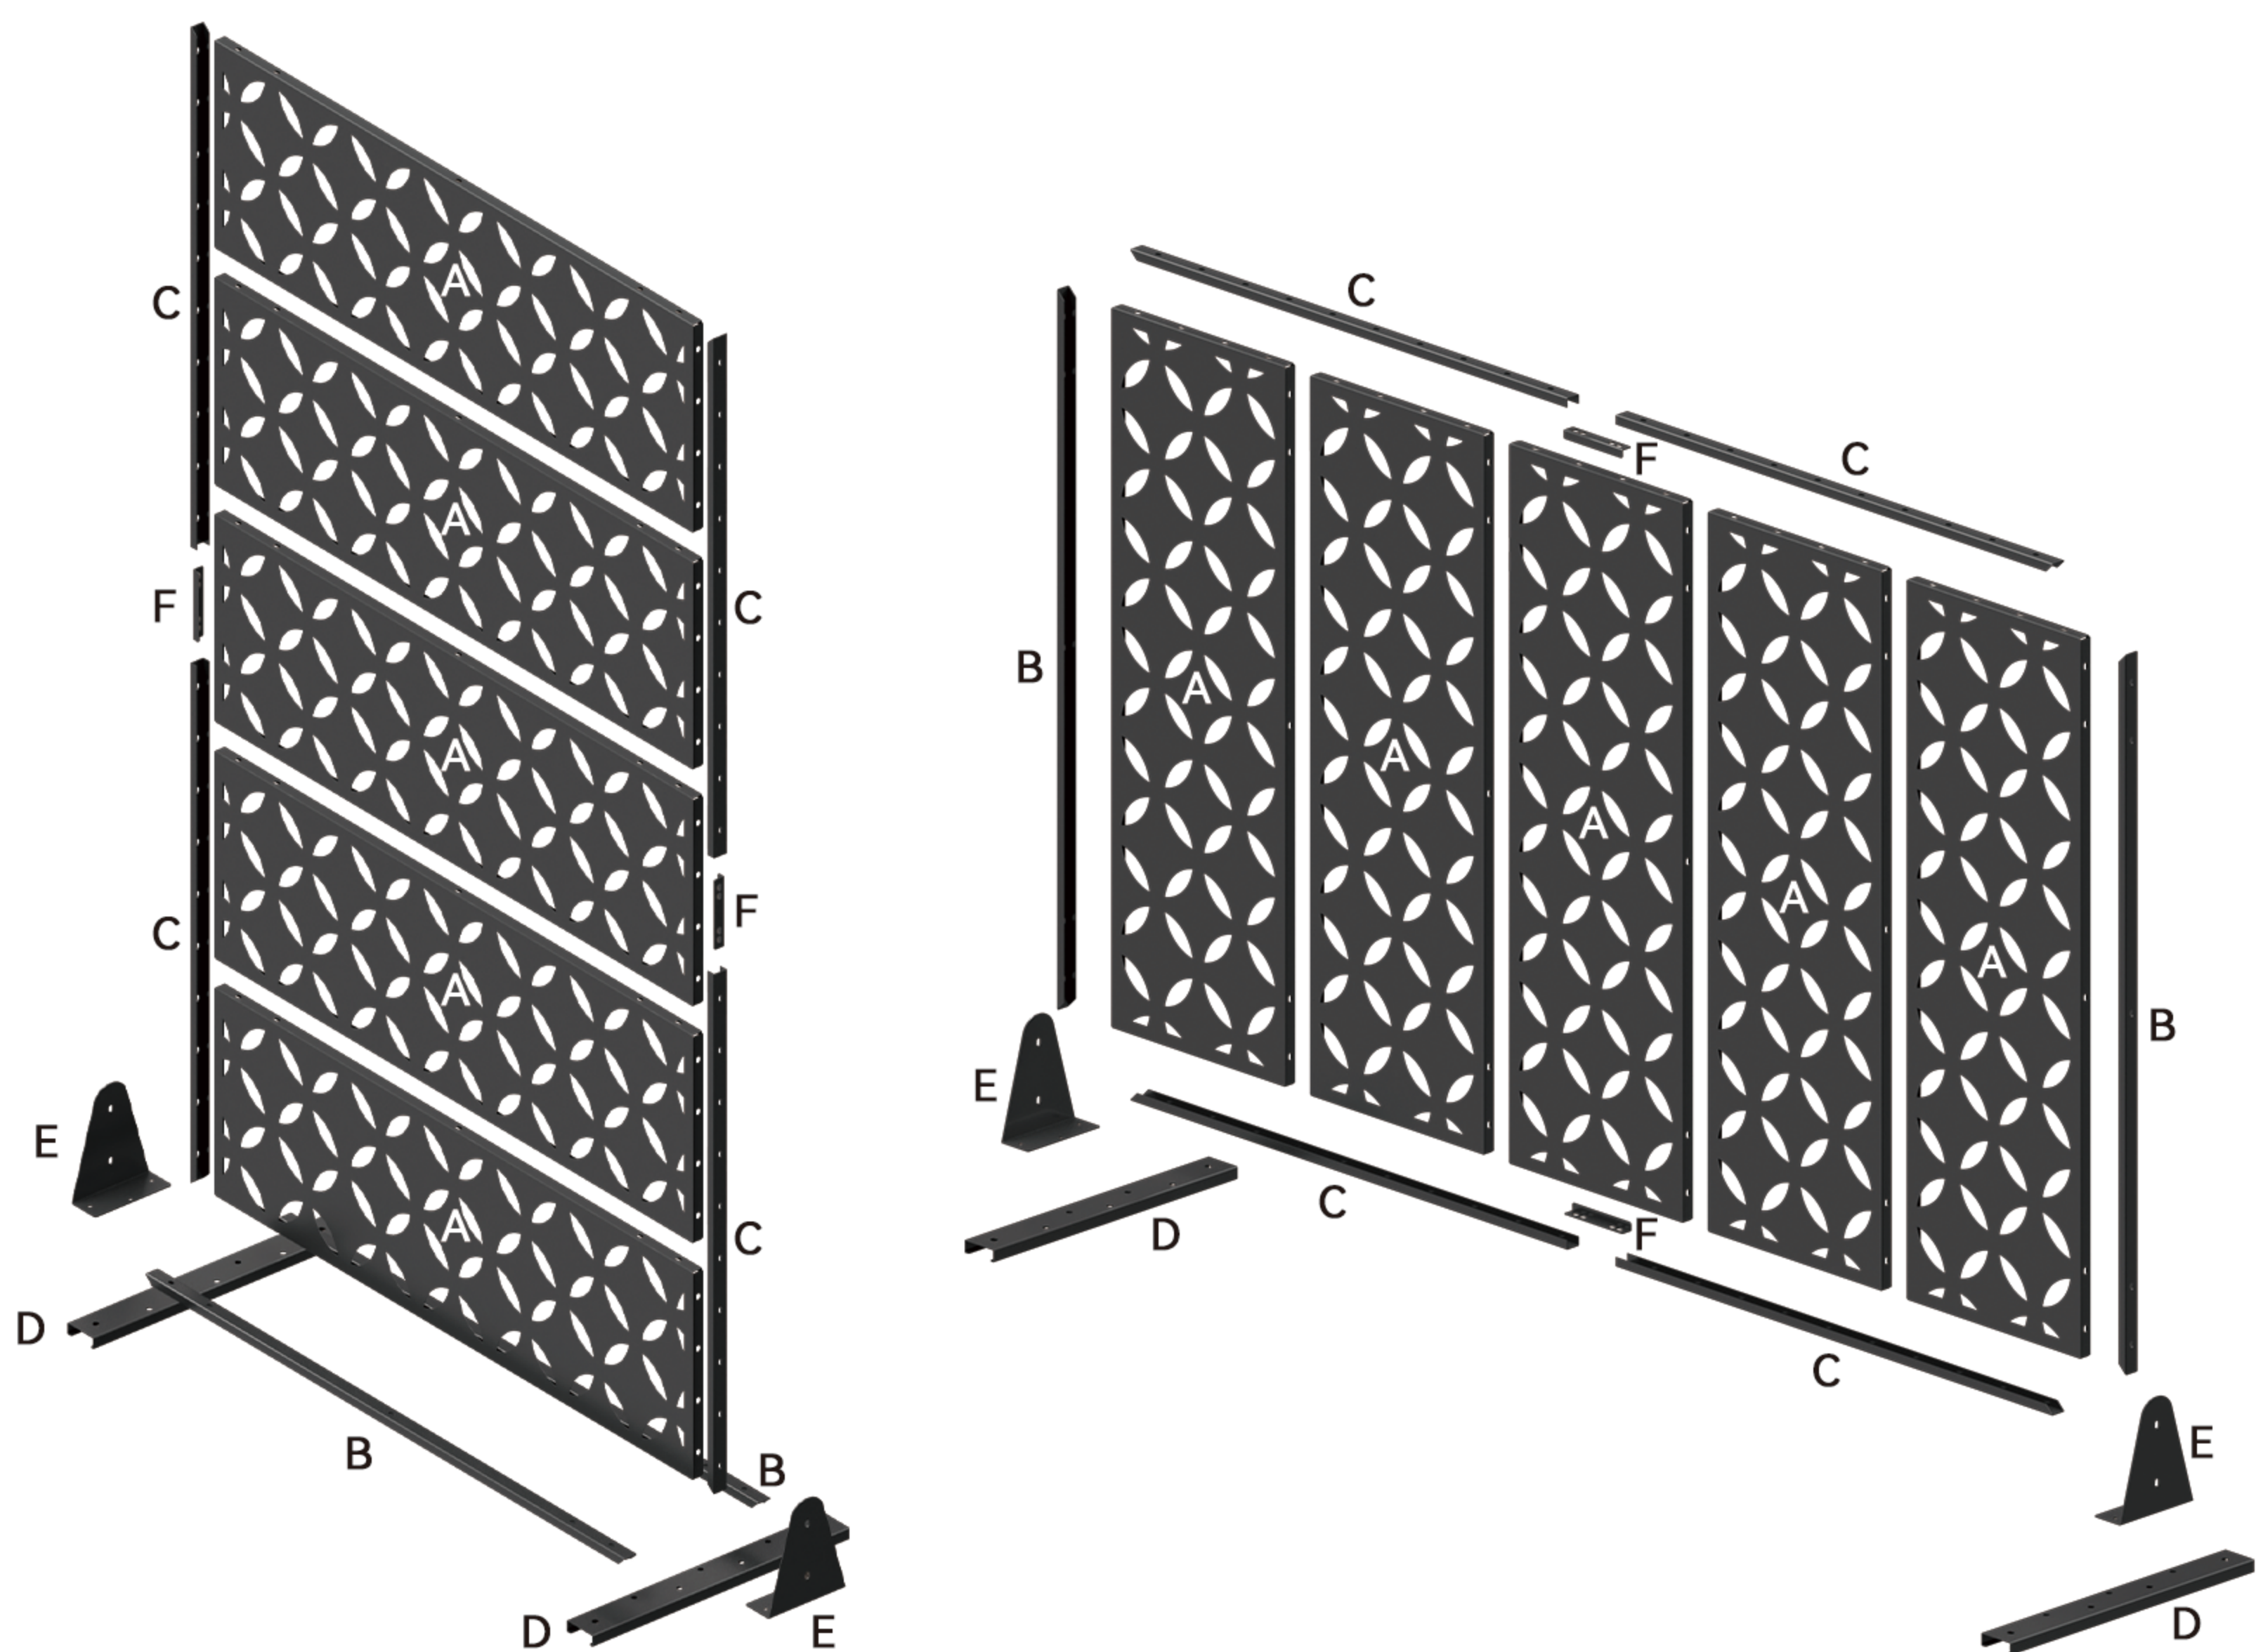

A*5	E*2	F*2
	G*4	
	H*4	
B*2	I*1	
	J*1	
C*4	K*70	L*70
	M*4	
D*2	N*6	

Vertical Privacy Screen Assembly Steps

Please refer to pages 5 to pages 12

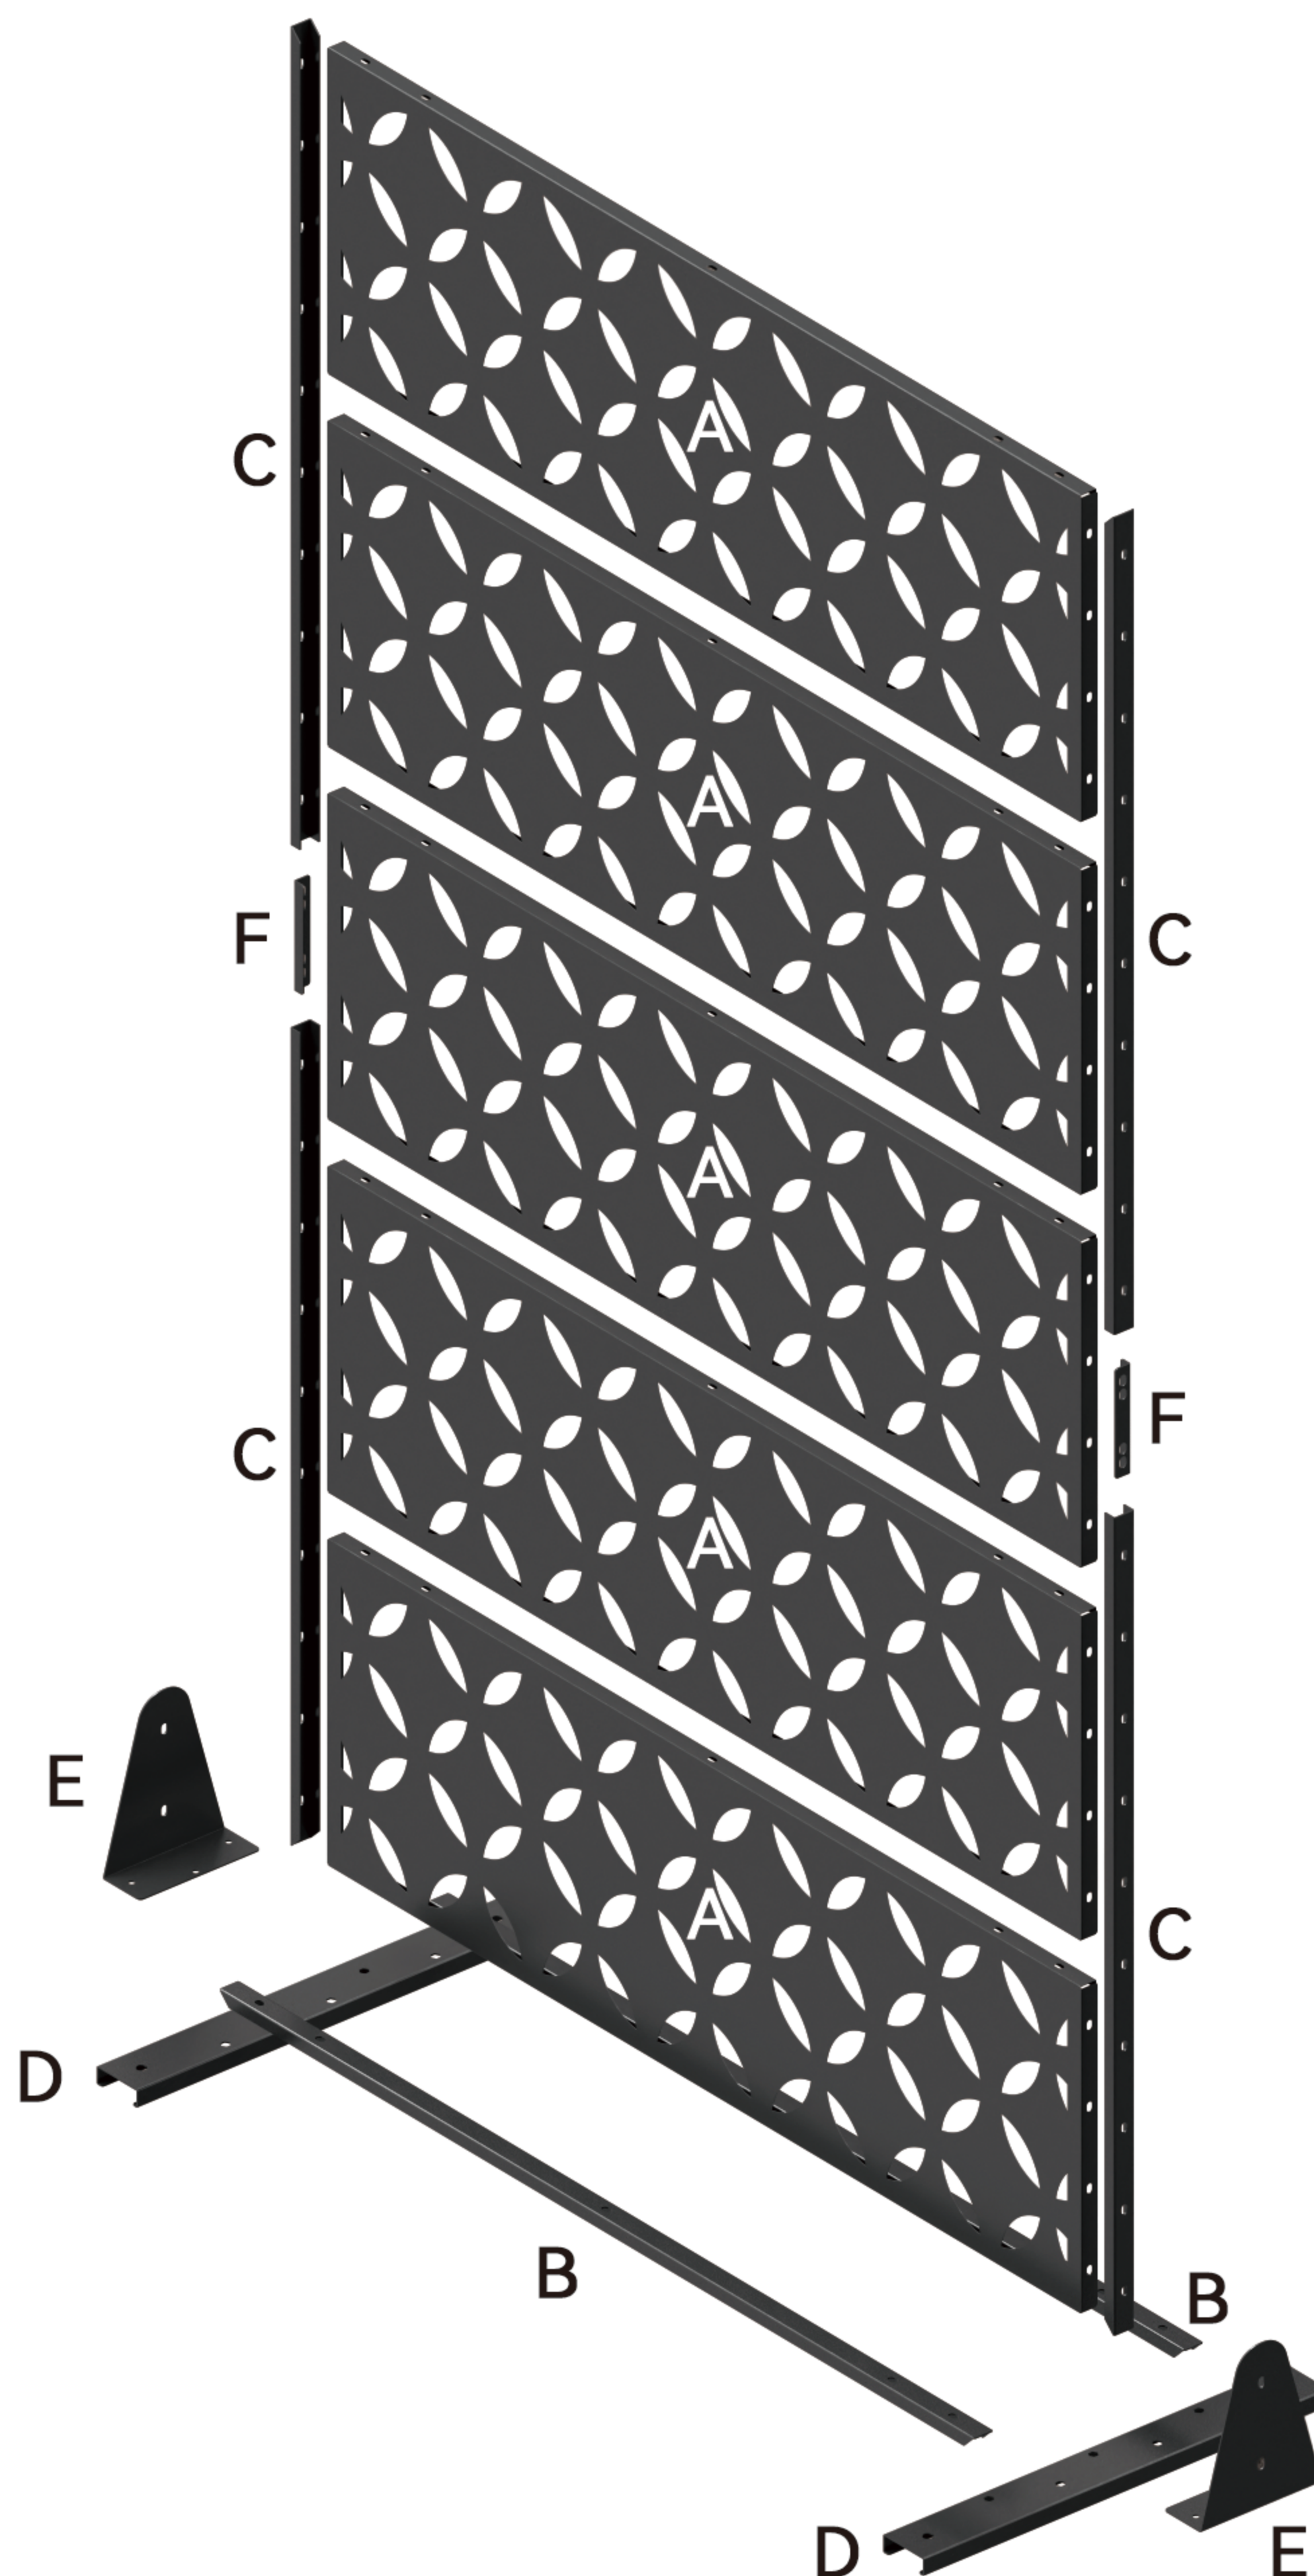


K*4 
L*4 

Connect Vertical Post C to Screen Panel A

Insert panel A into part C


Secure them with screws & nuts(K*4,L*4)

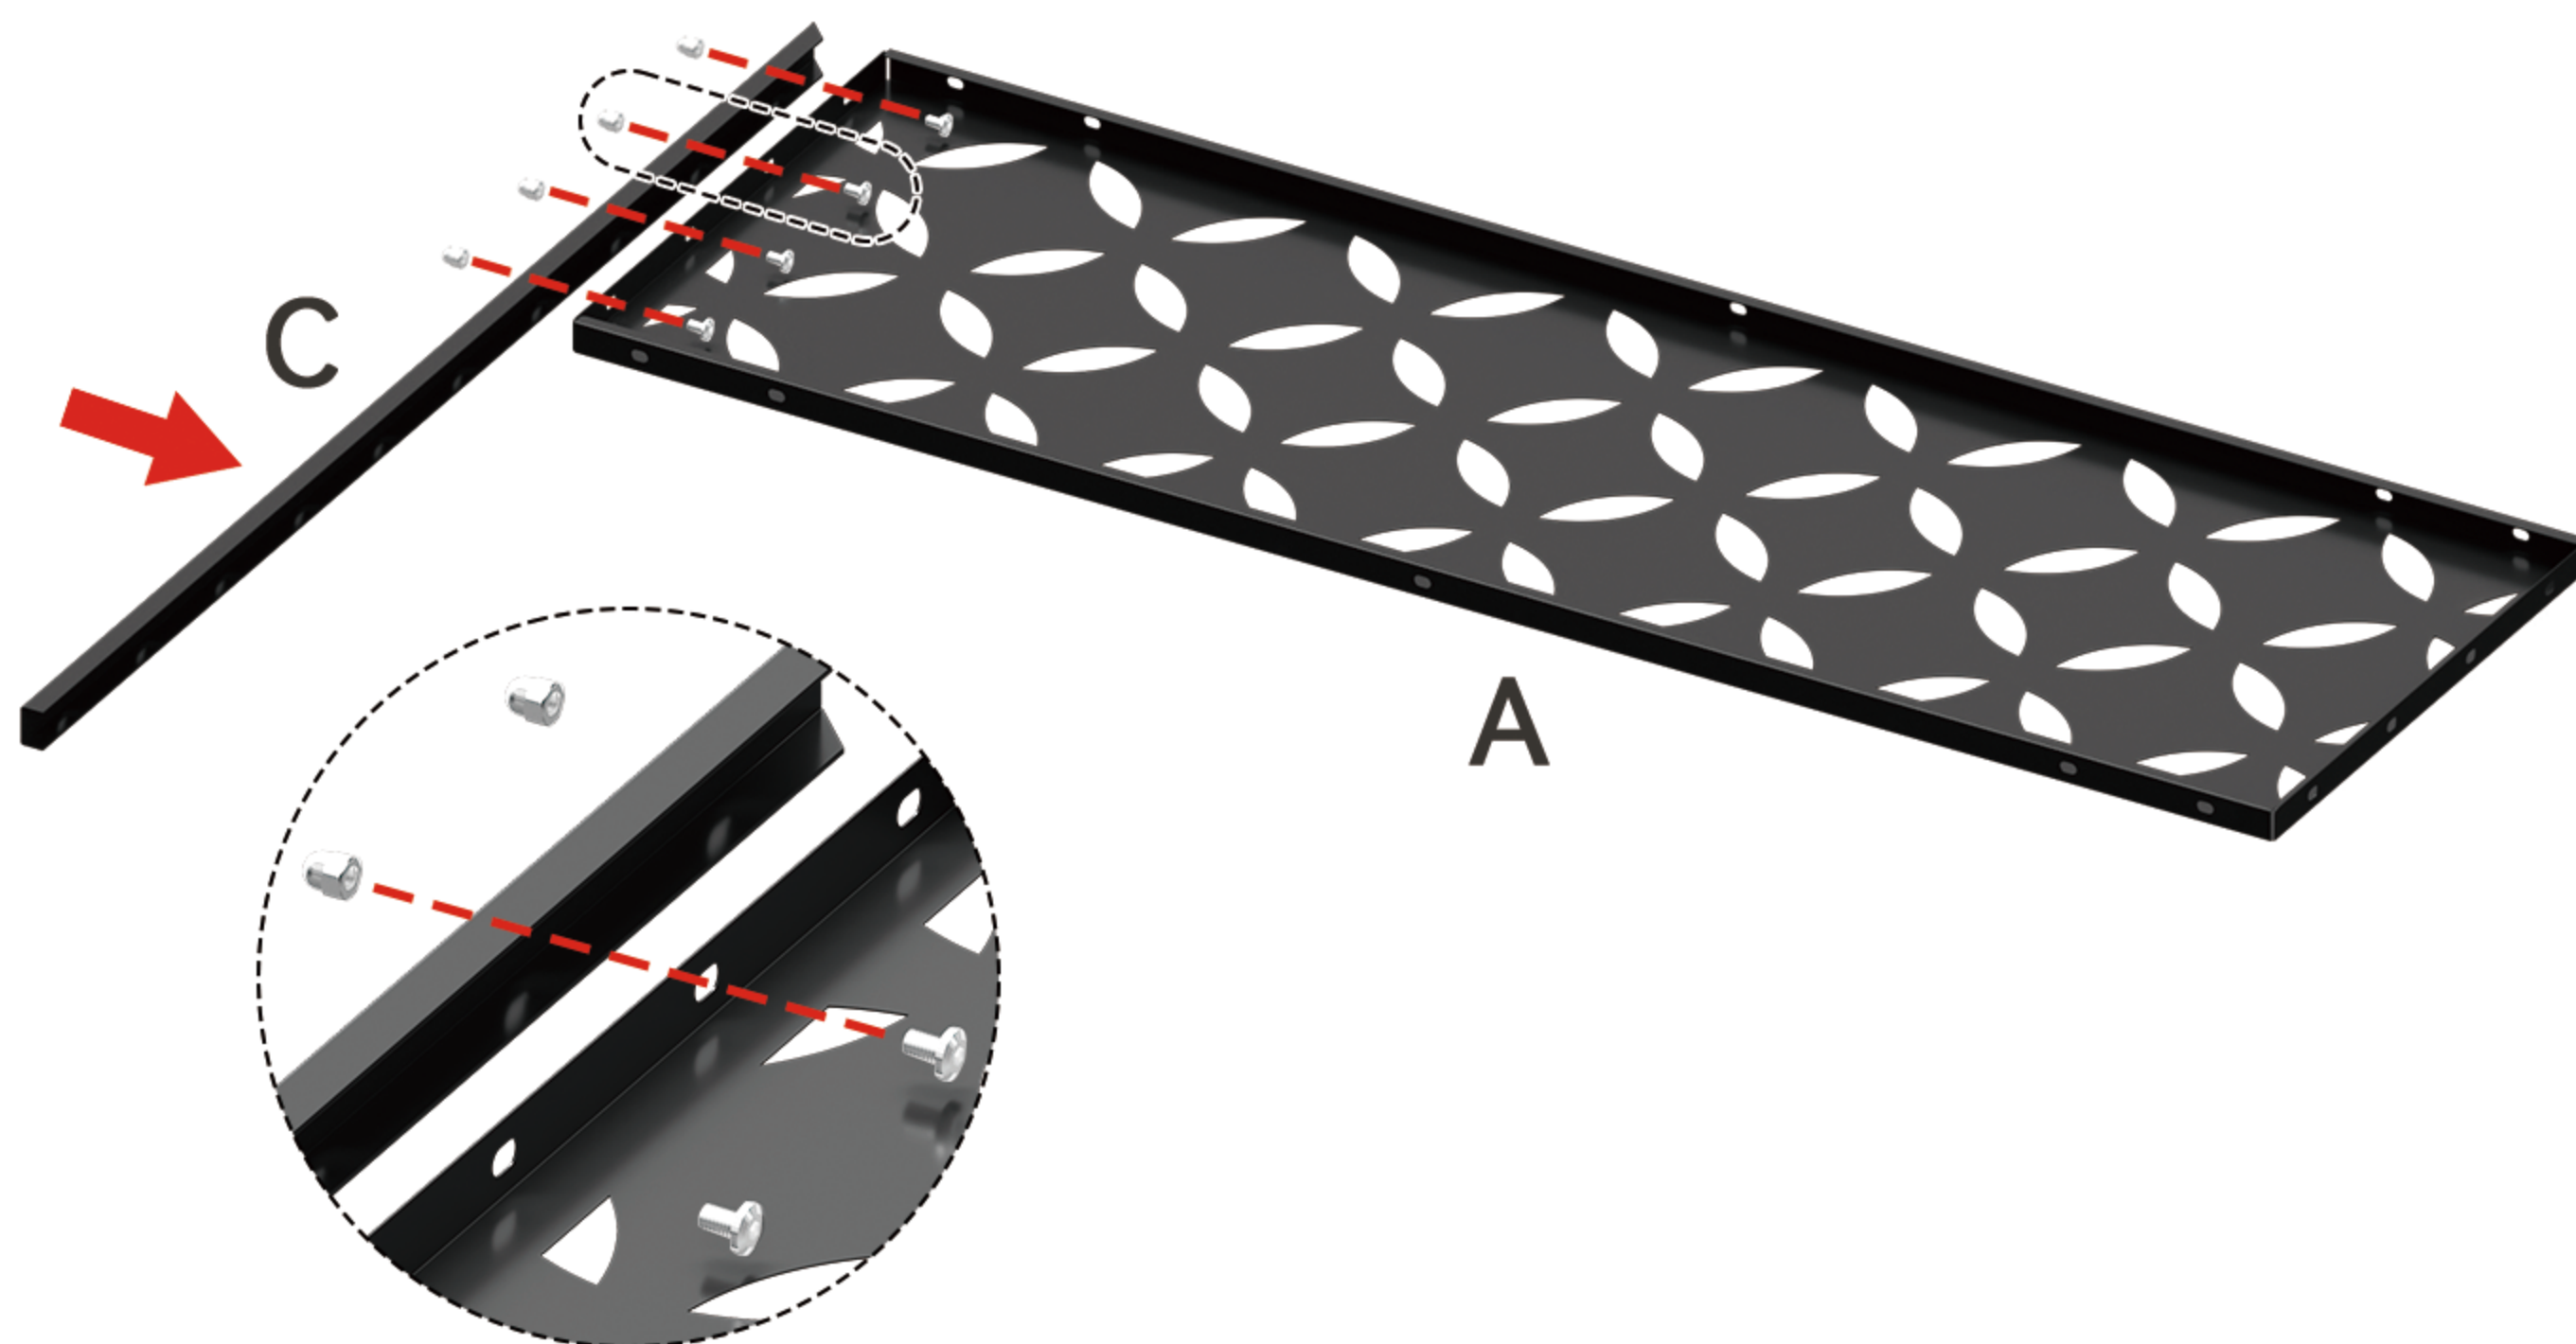

K*5 
L*5 


Install 2nd Screen Panel A

Secure two panel A together with screws & nuts (K*5,L*5)

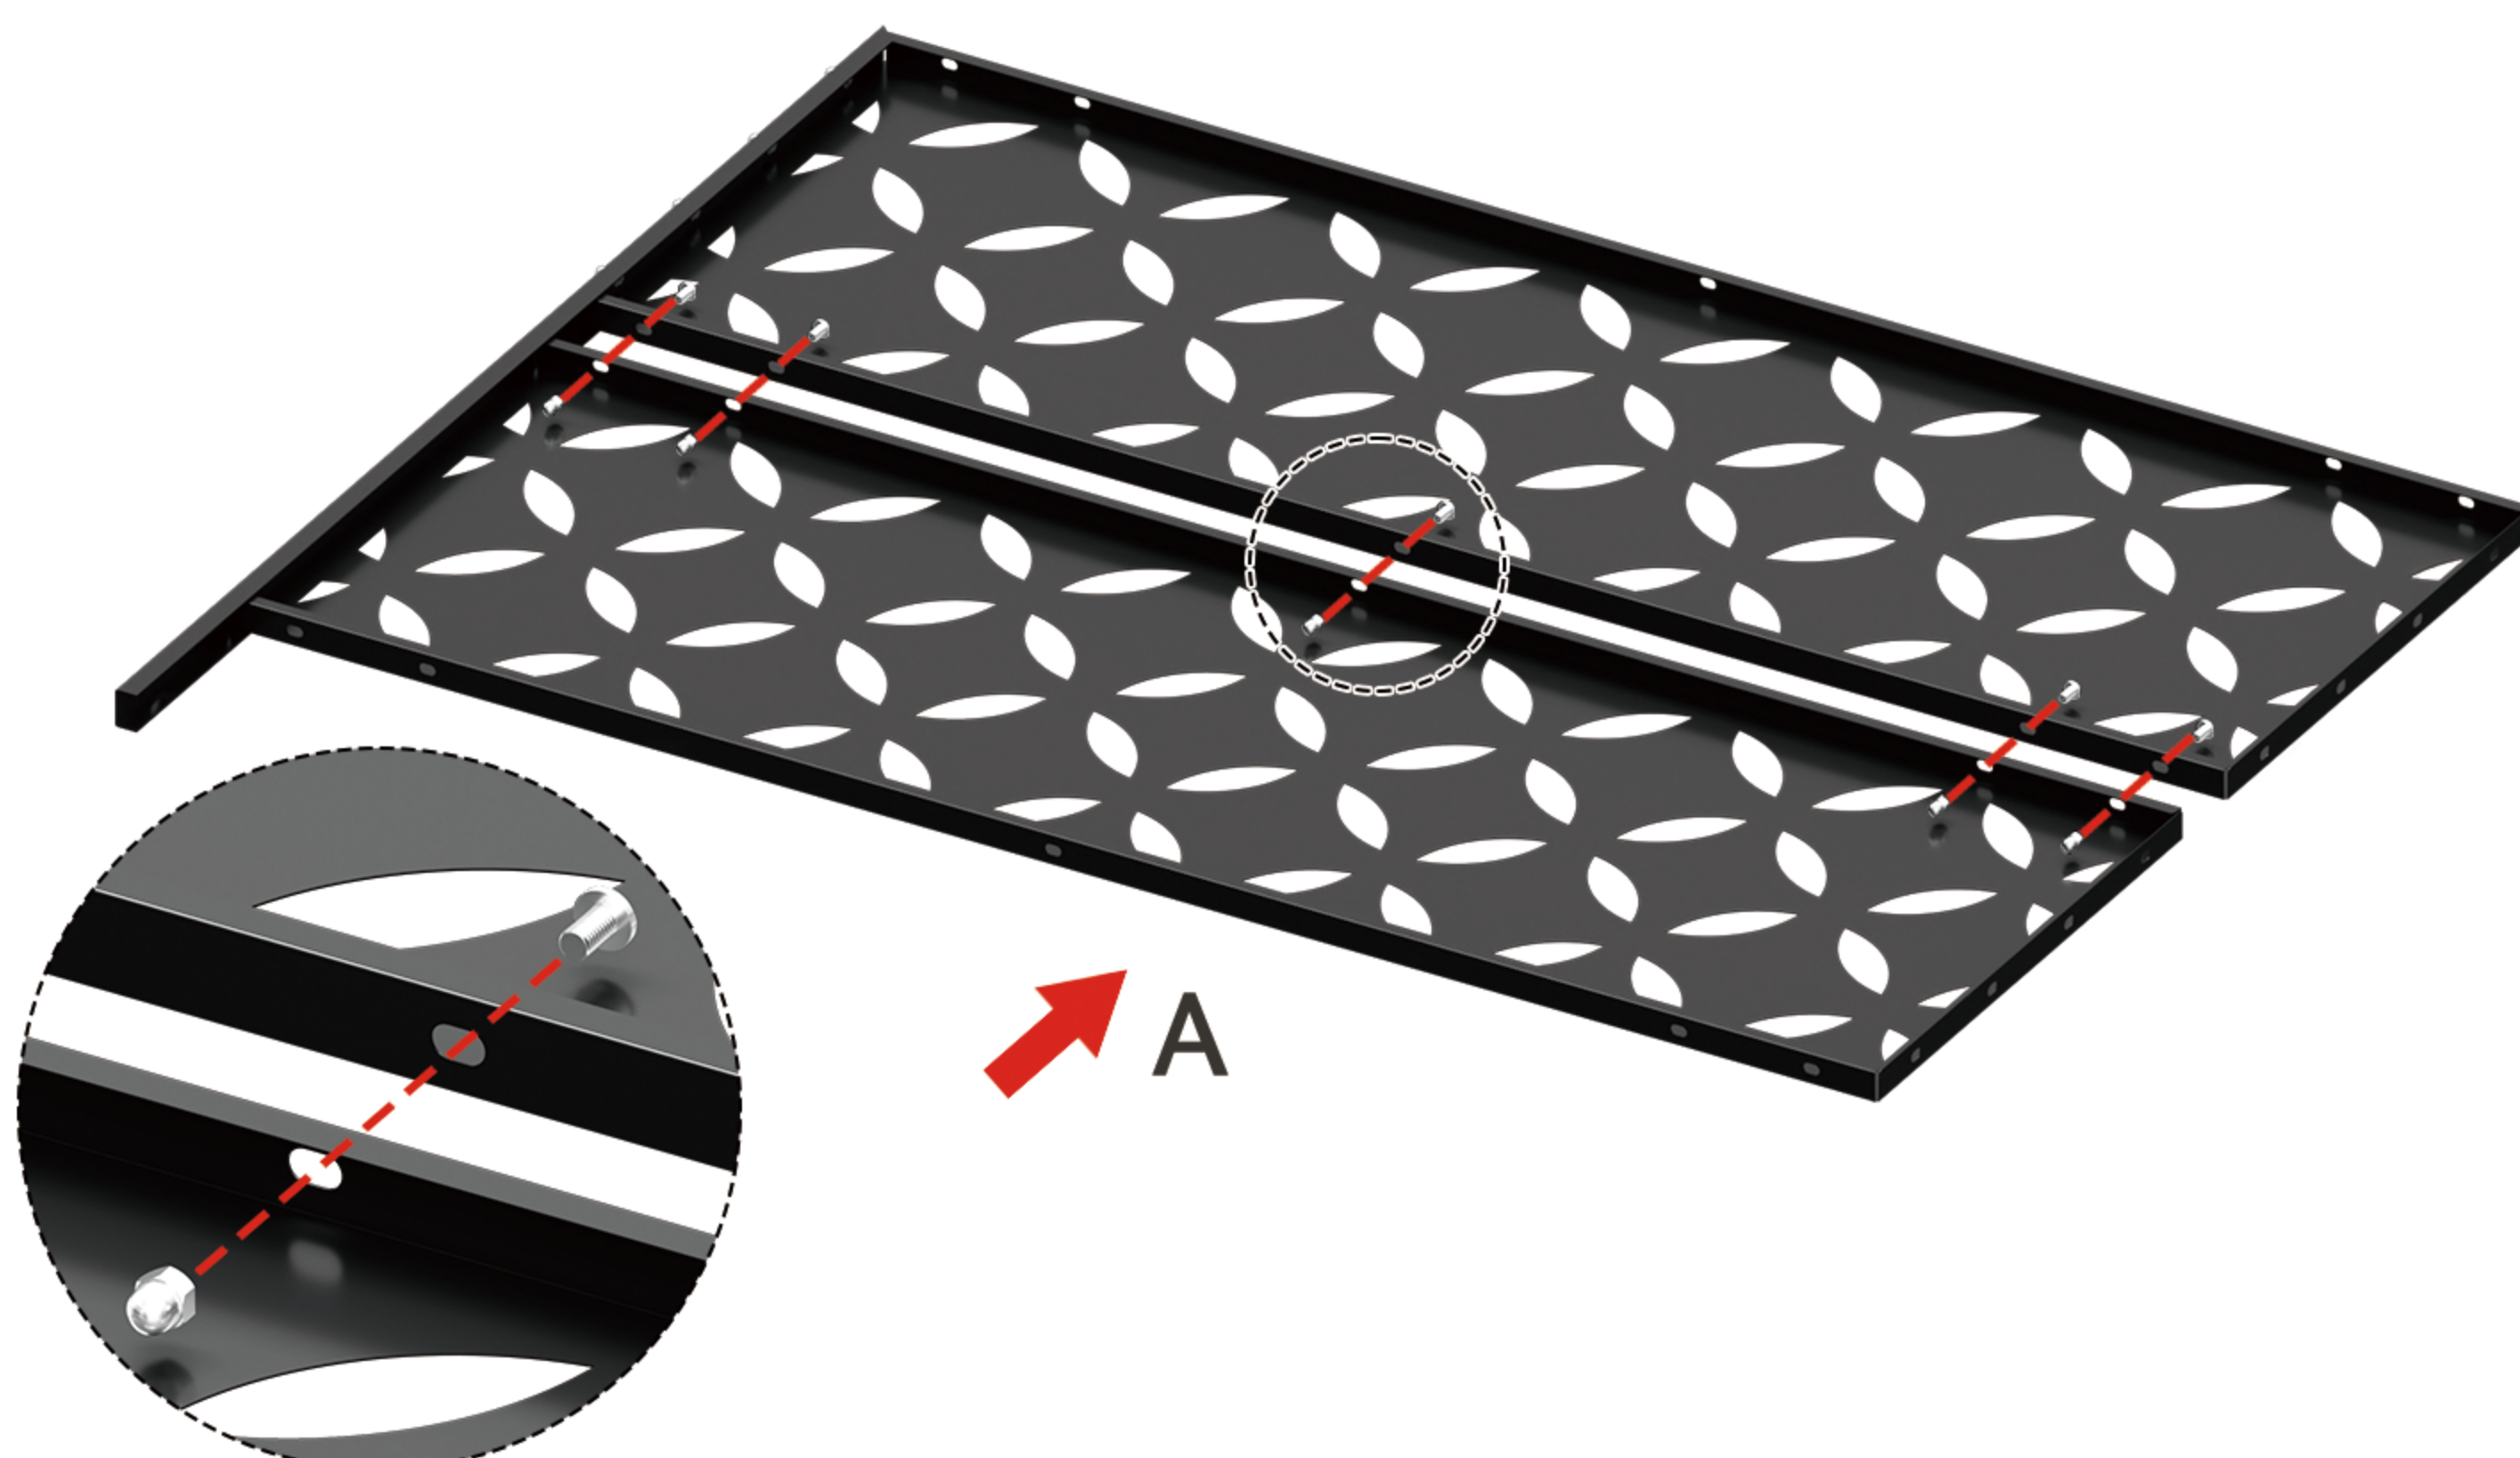


K*12 
L*12 

Connect Vertical Post C to Screen Panel A
Secure them with screws & nuts (K*12,L*12)

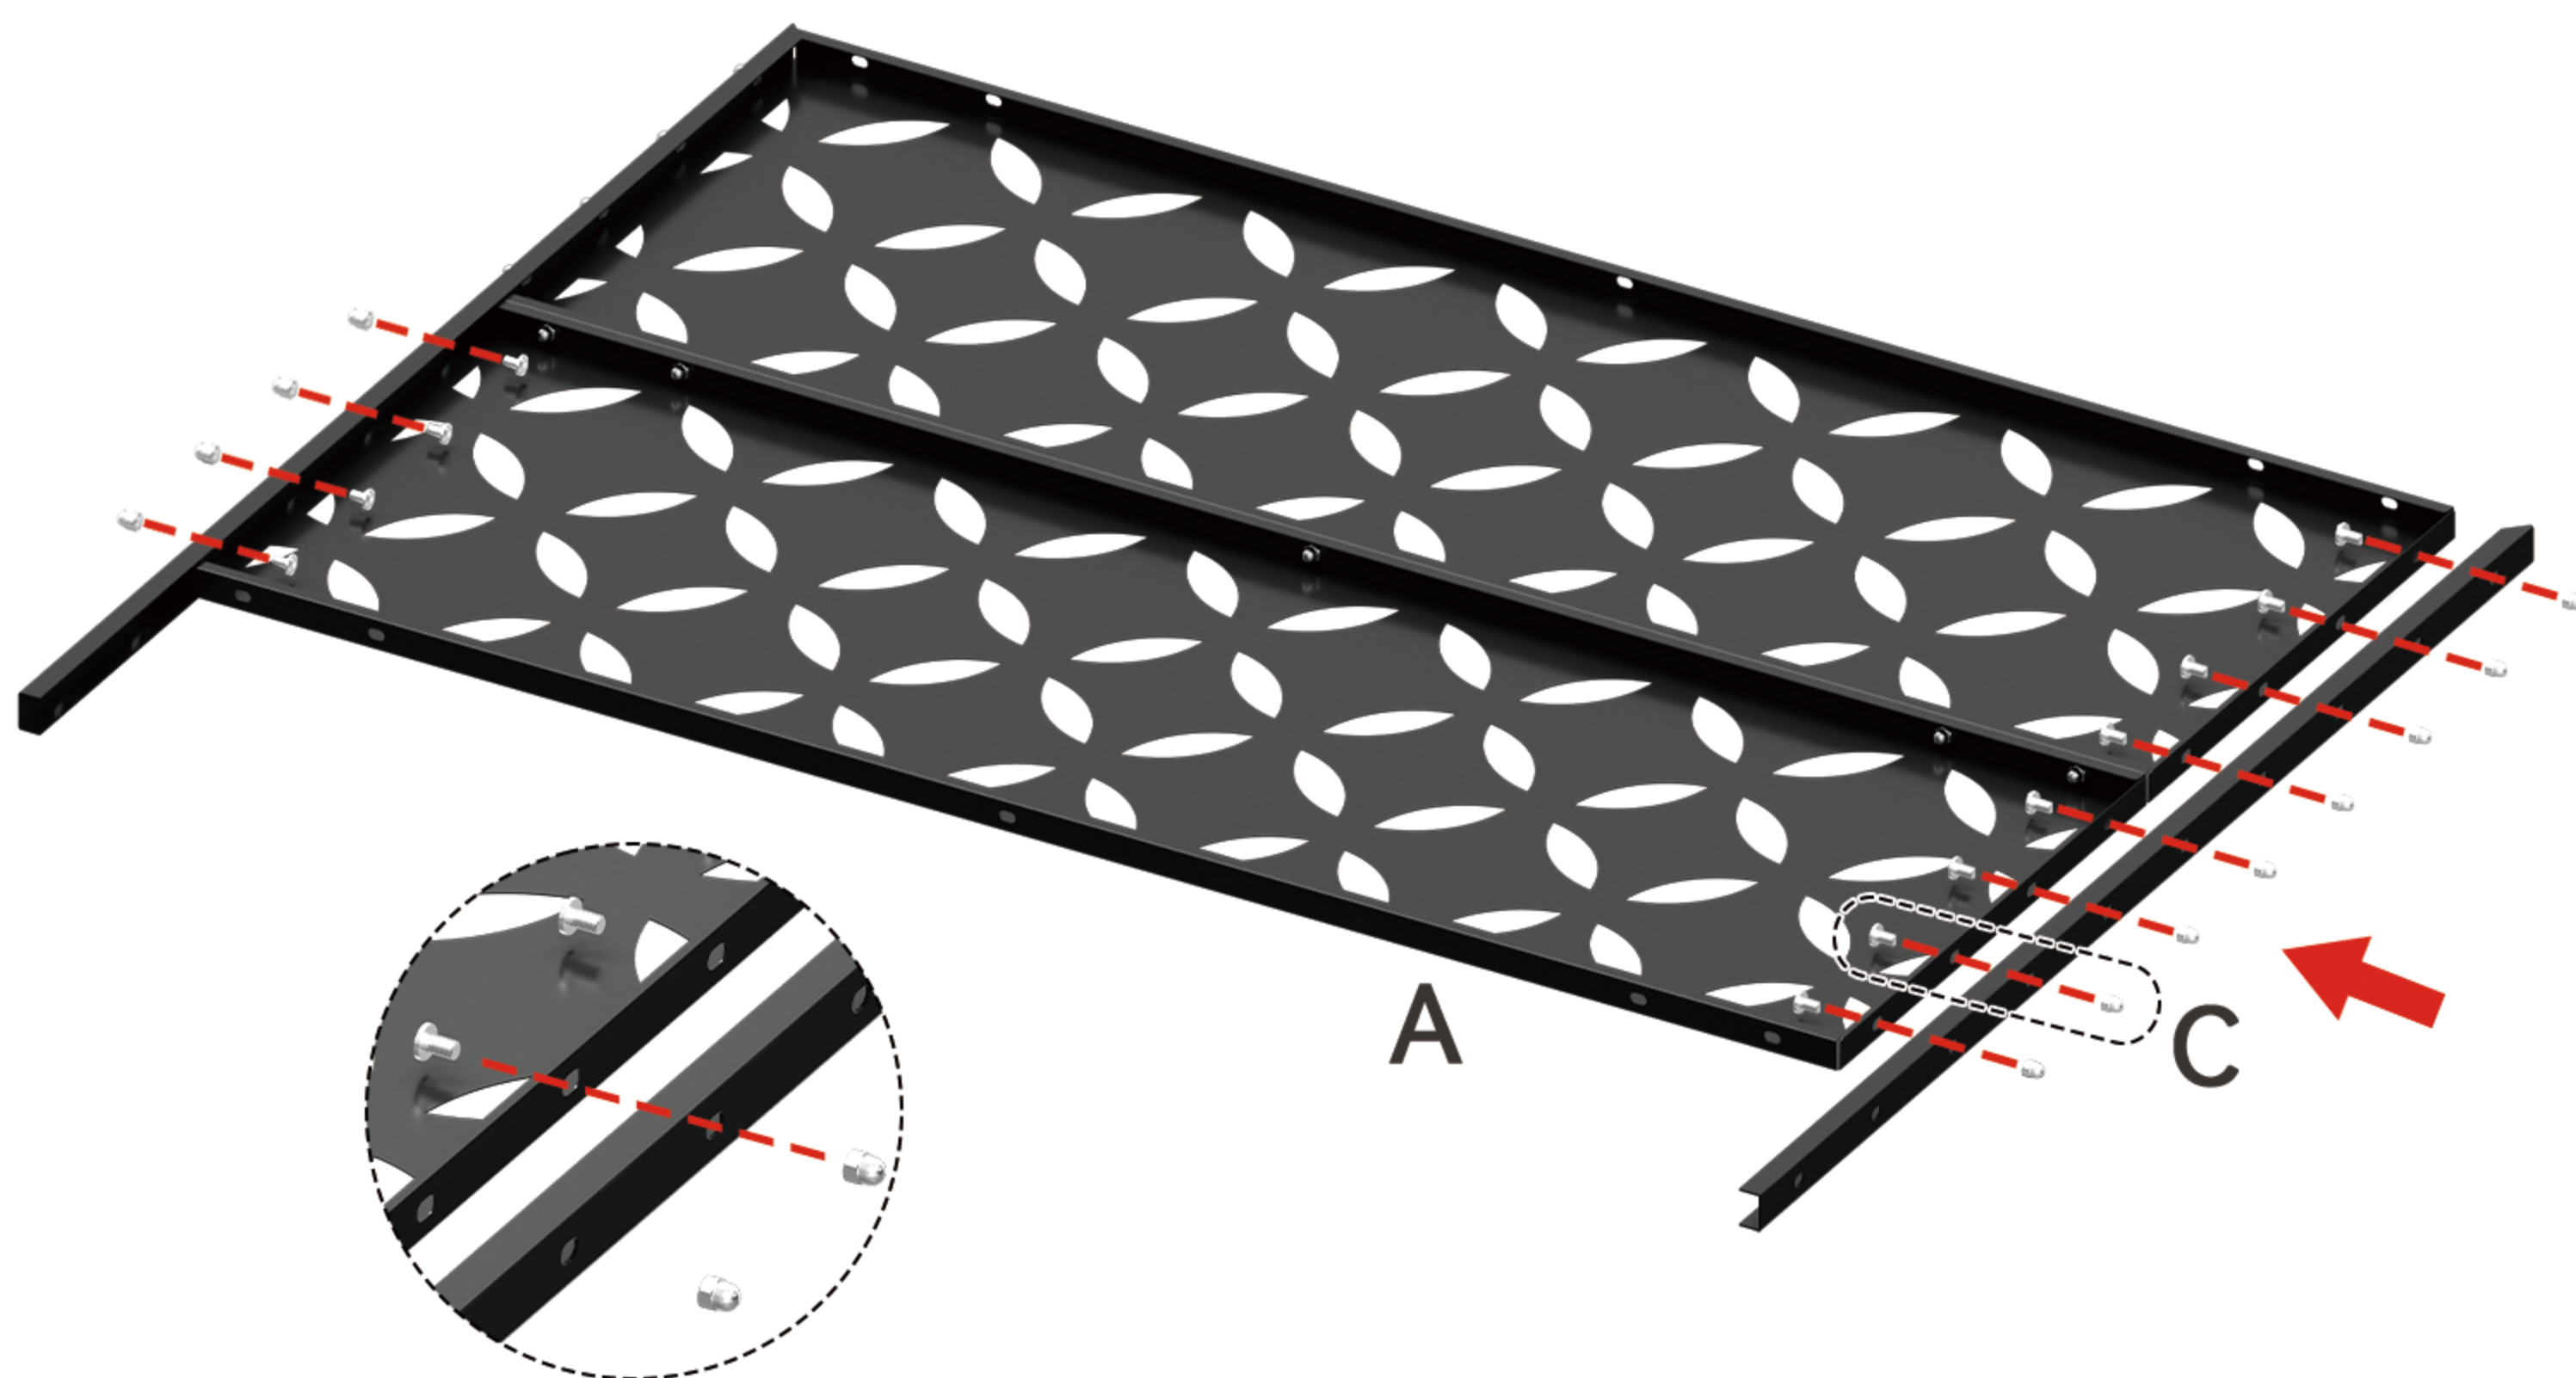

K*5 
L*5 

Install 3rd Screen Panel A
Secure two panel A together with screws & nuts (K*5,L*5)

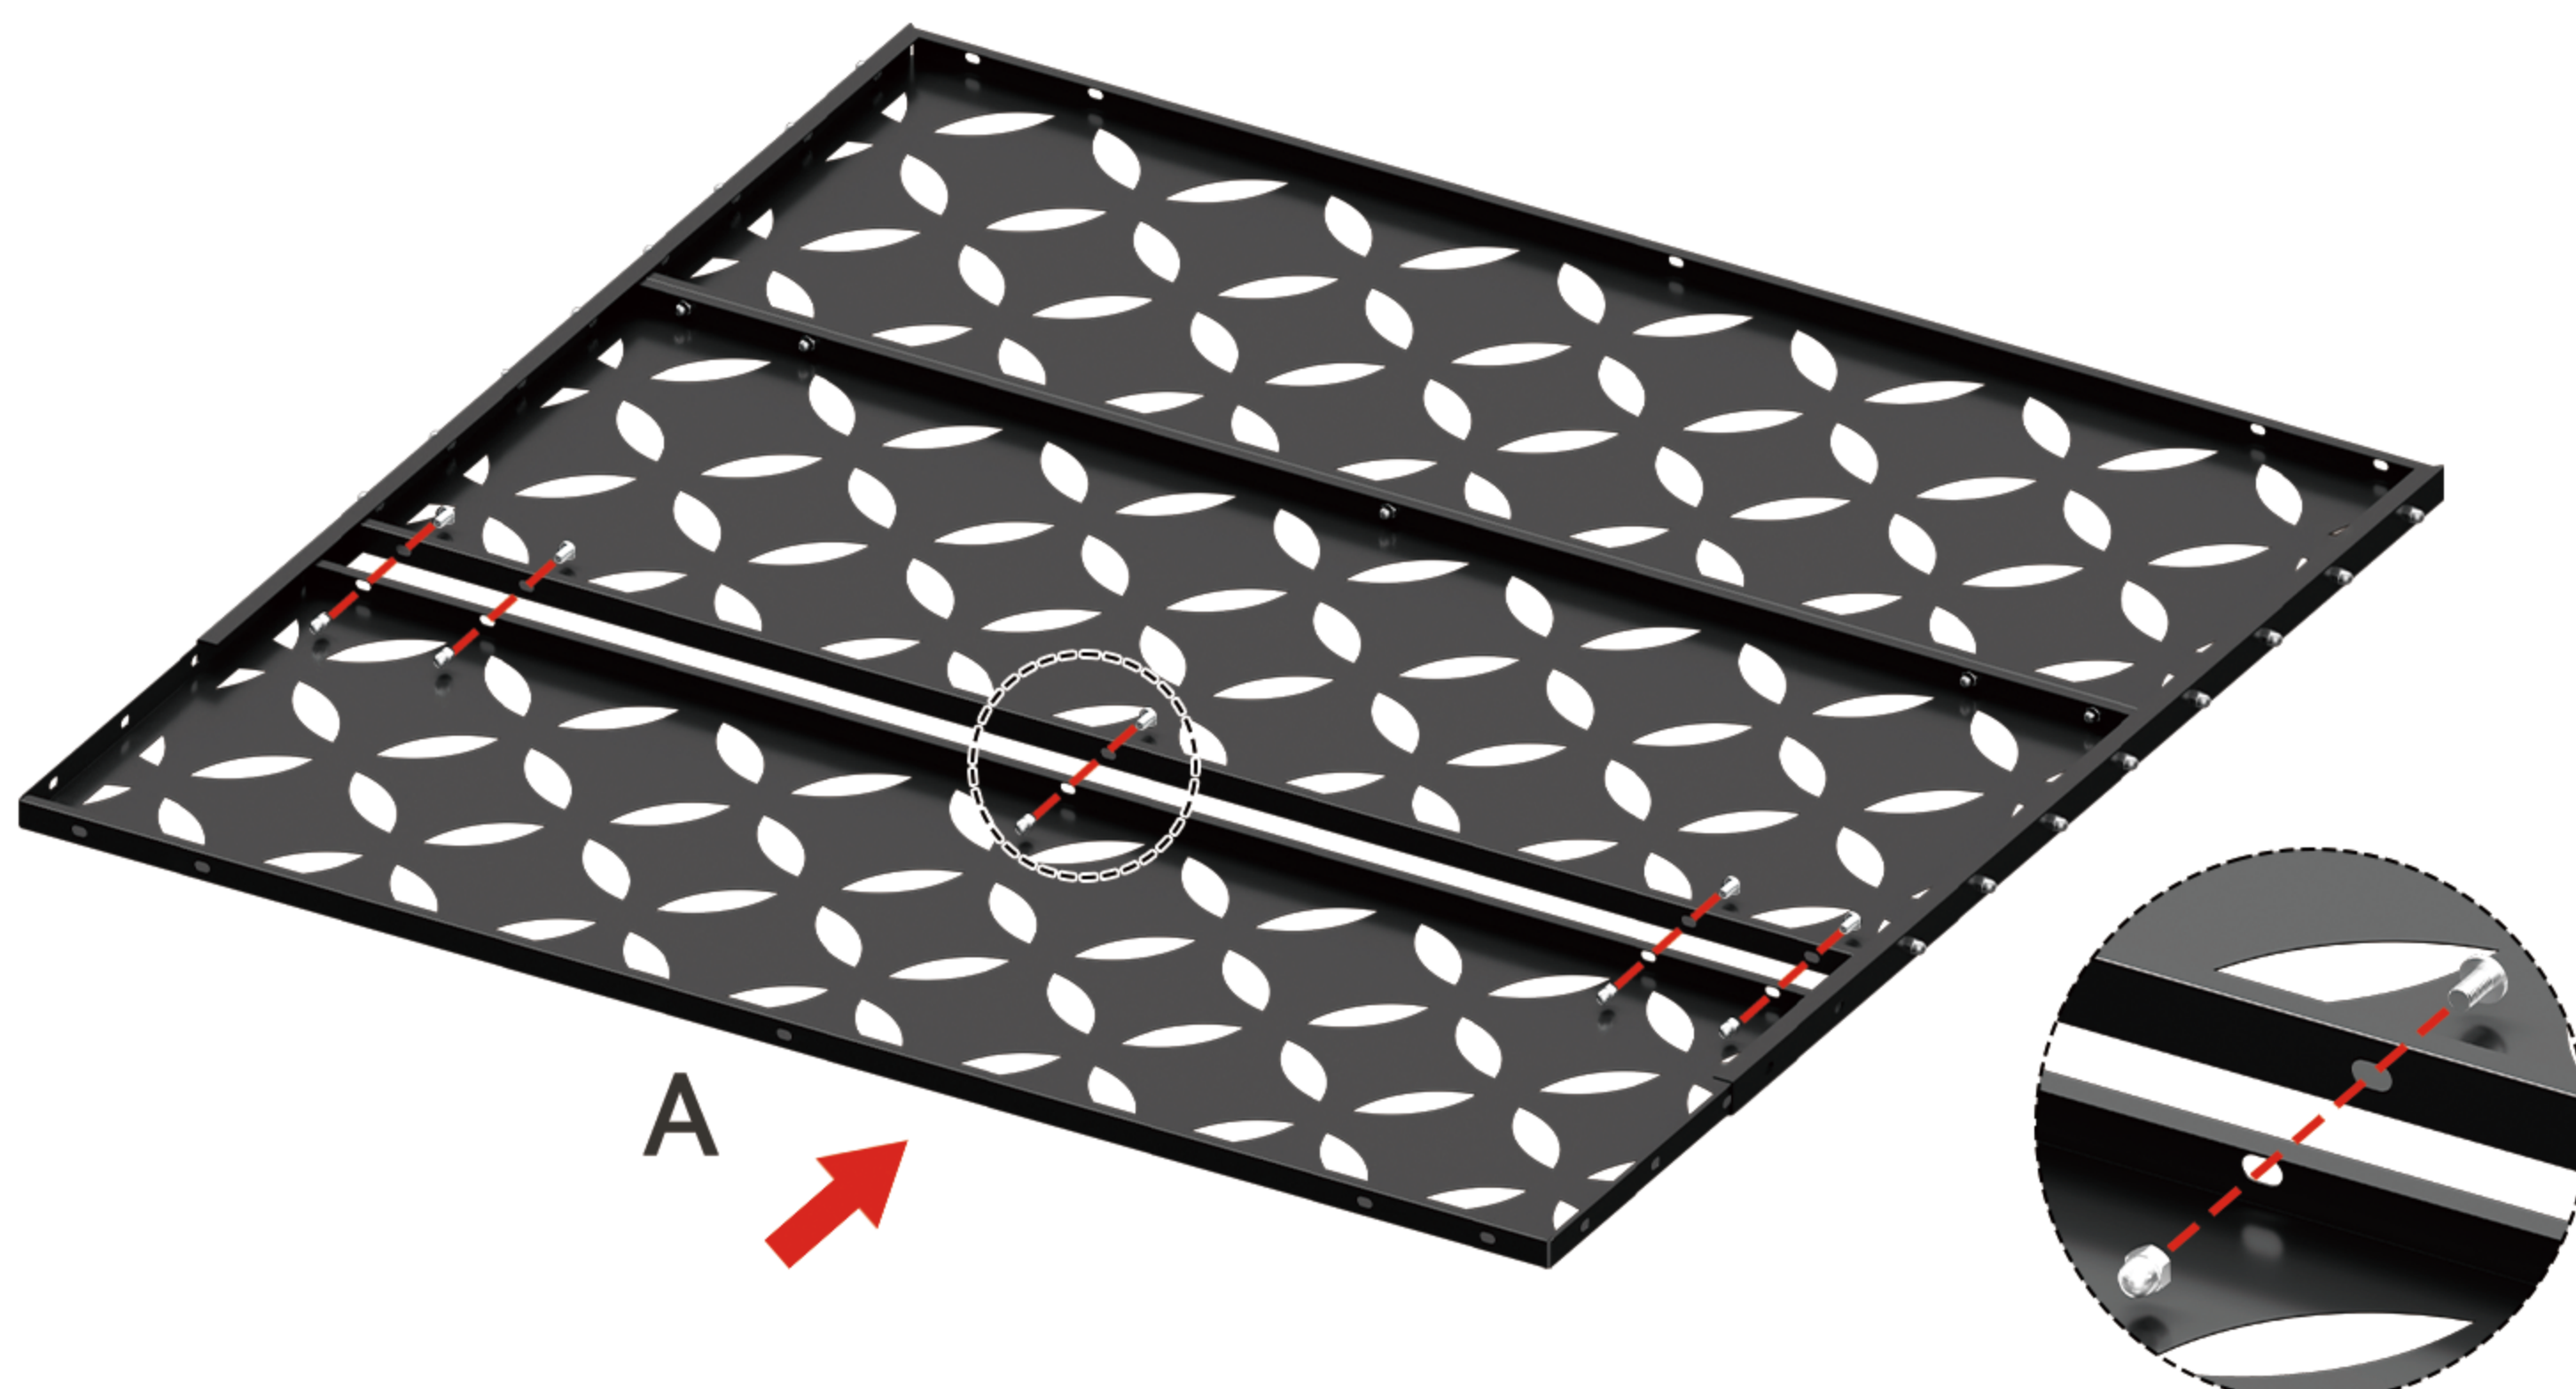


K*8
L*8




Install Vertical Post C and Connector F

Connect 3rd panel A and four vertical post C

Secure them with screws & nuts(K*4,L*4)

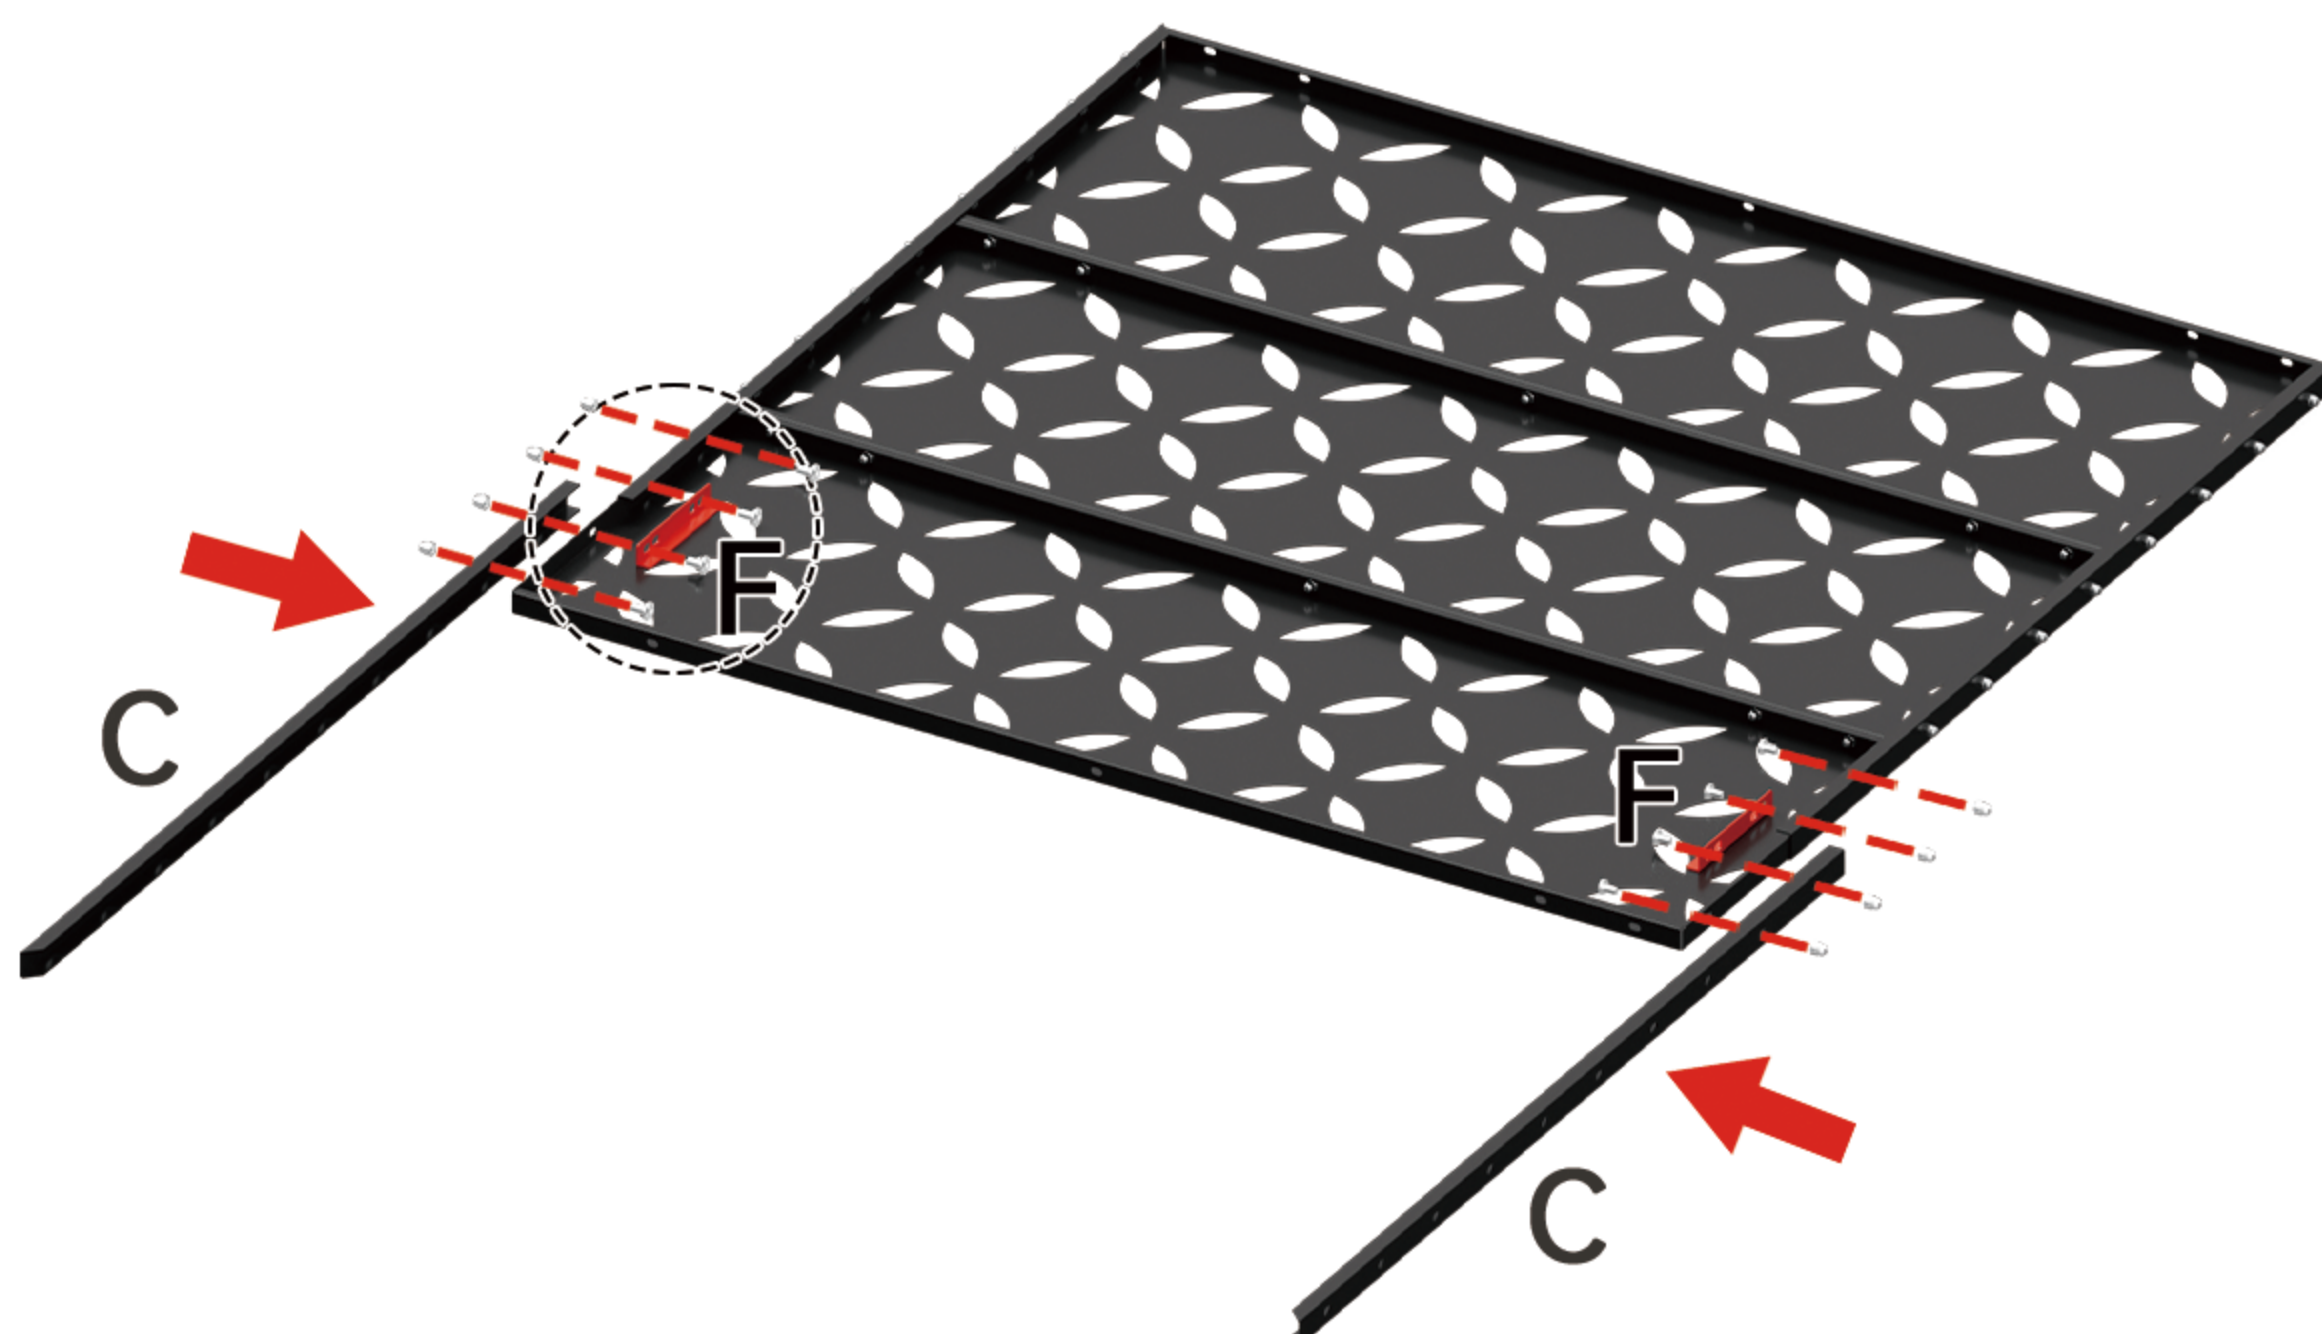

Align the holes on
part F, A and C,
then secure them
with screws &
nuts(K*4,L*4).


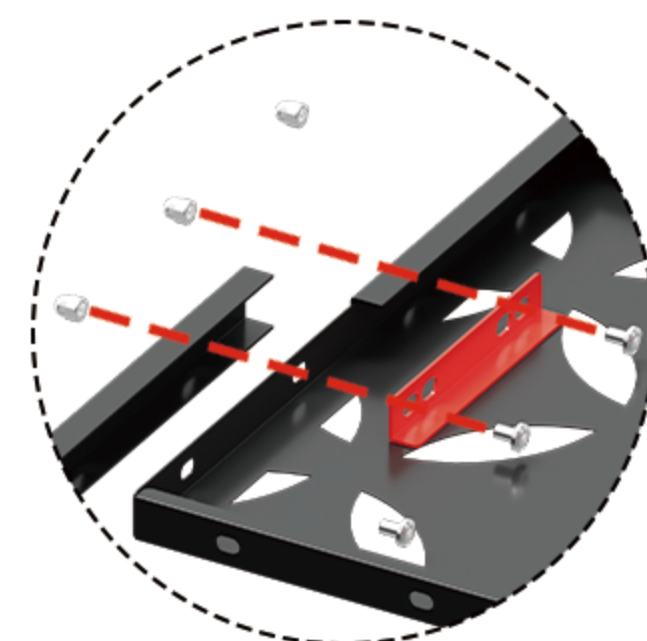


K*5
L*5



Install 4th Screen Panel A

Secure two panel A together with screws & nuts (K*5,L*5)

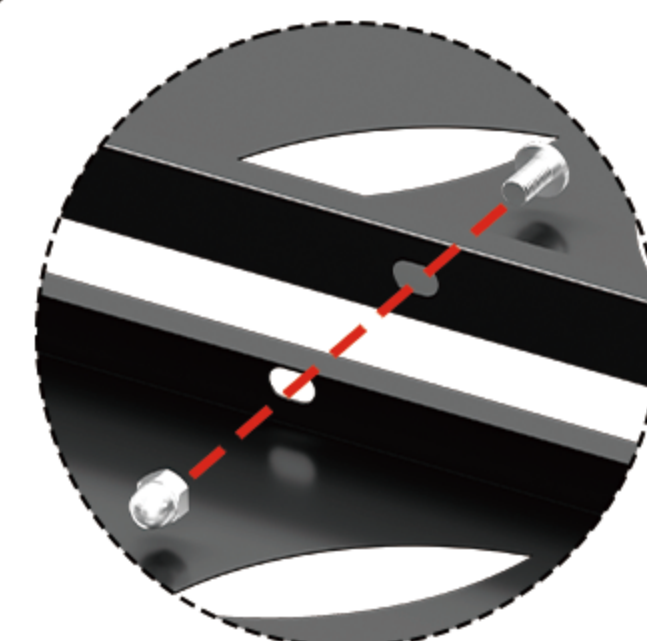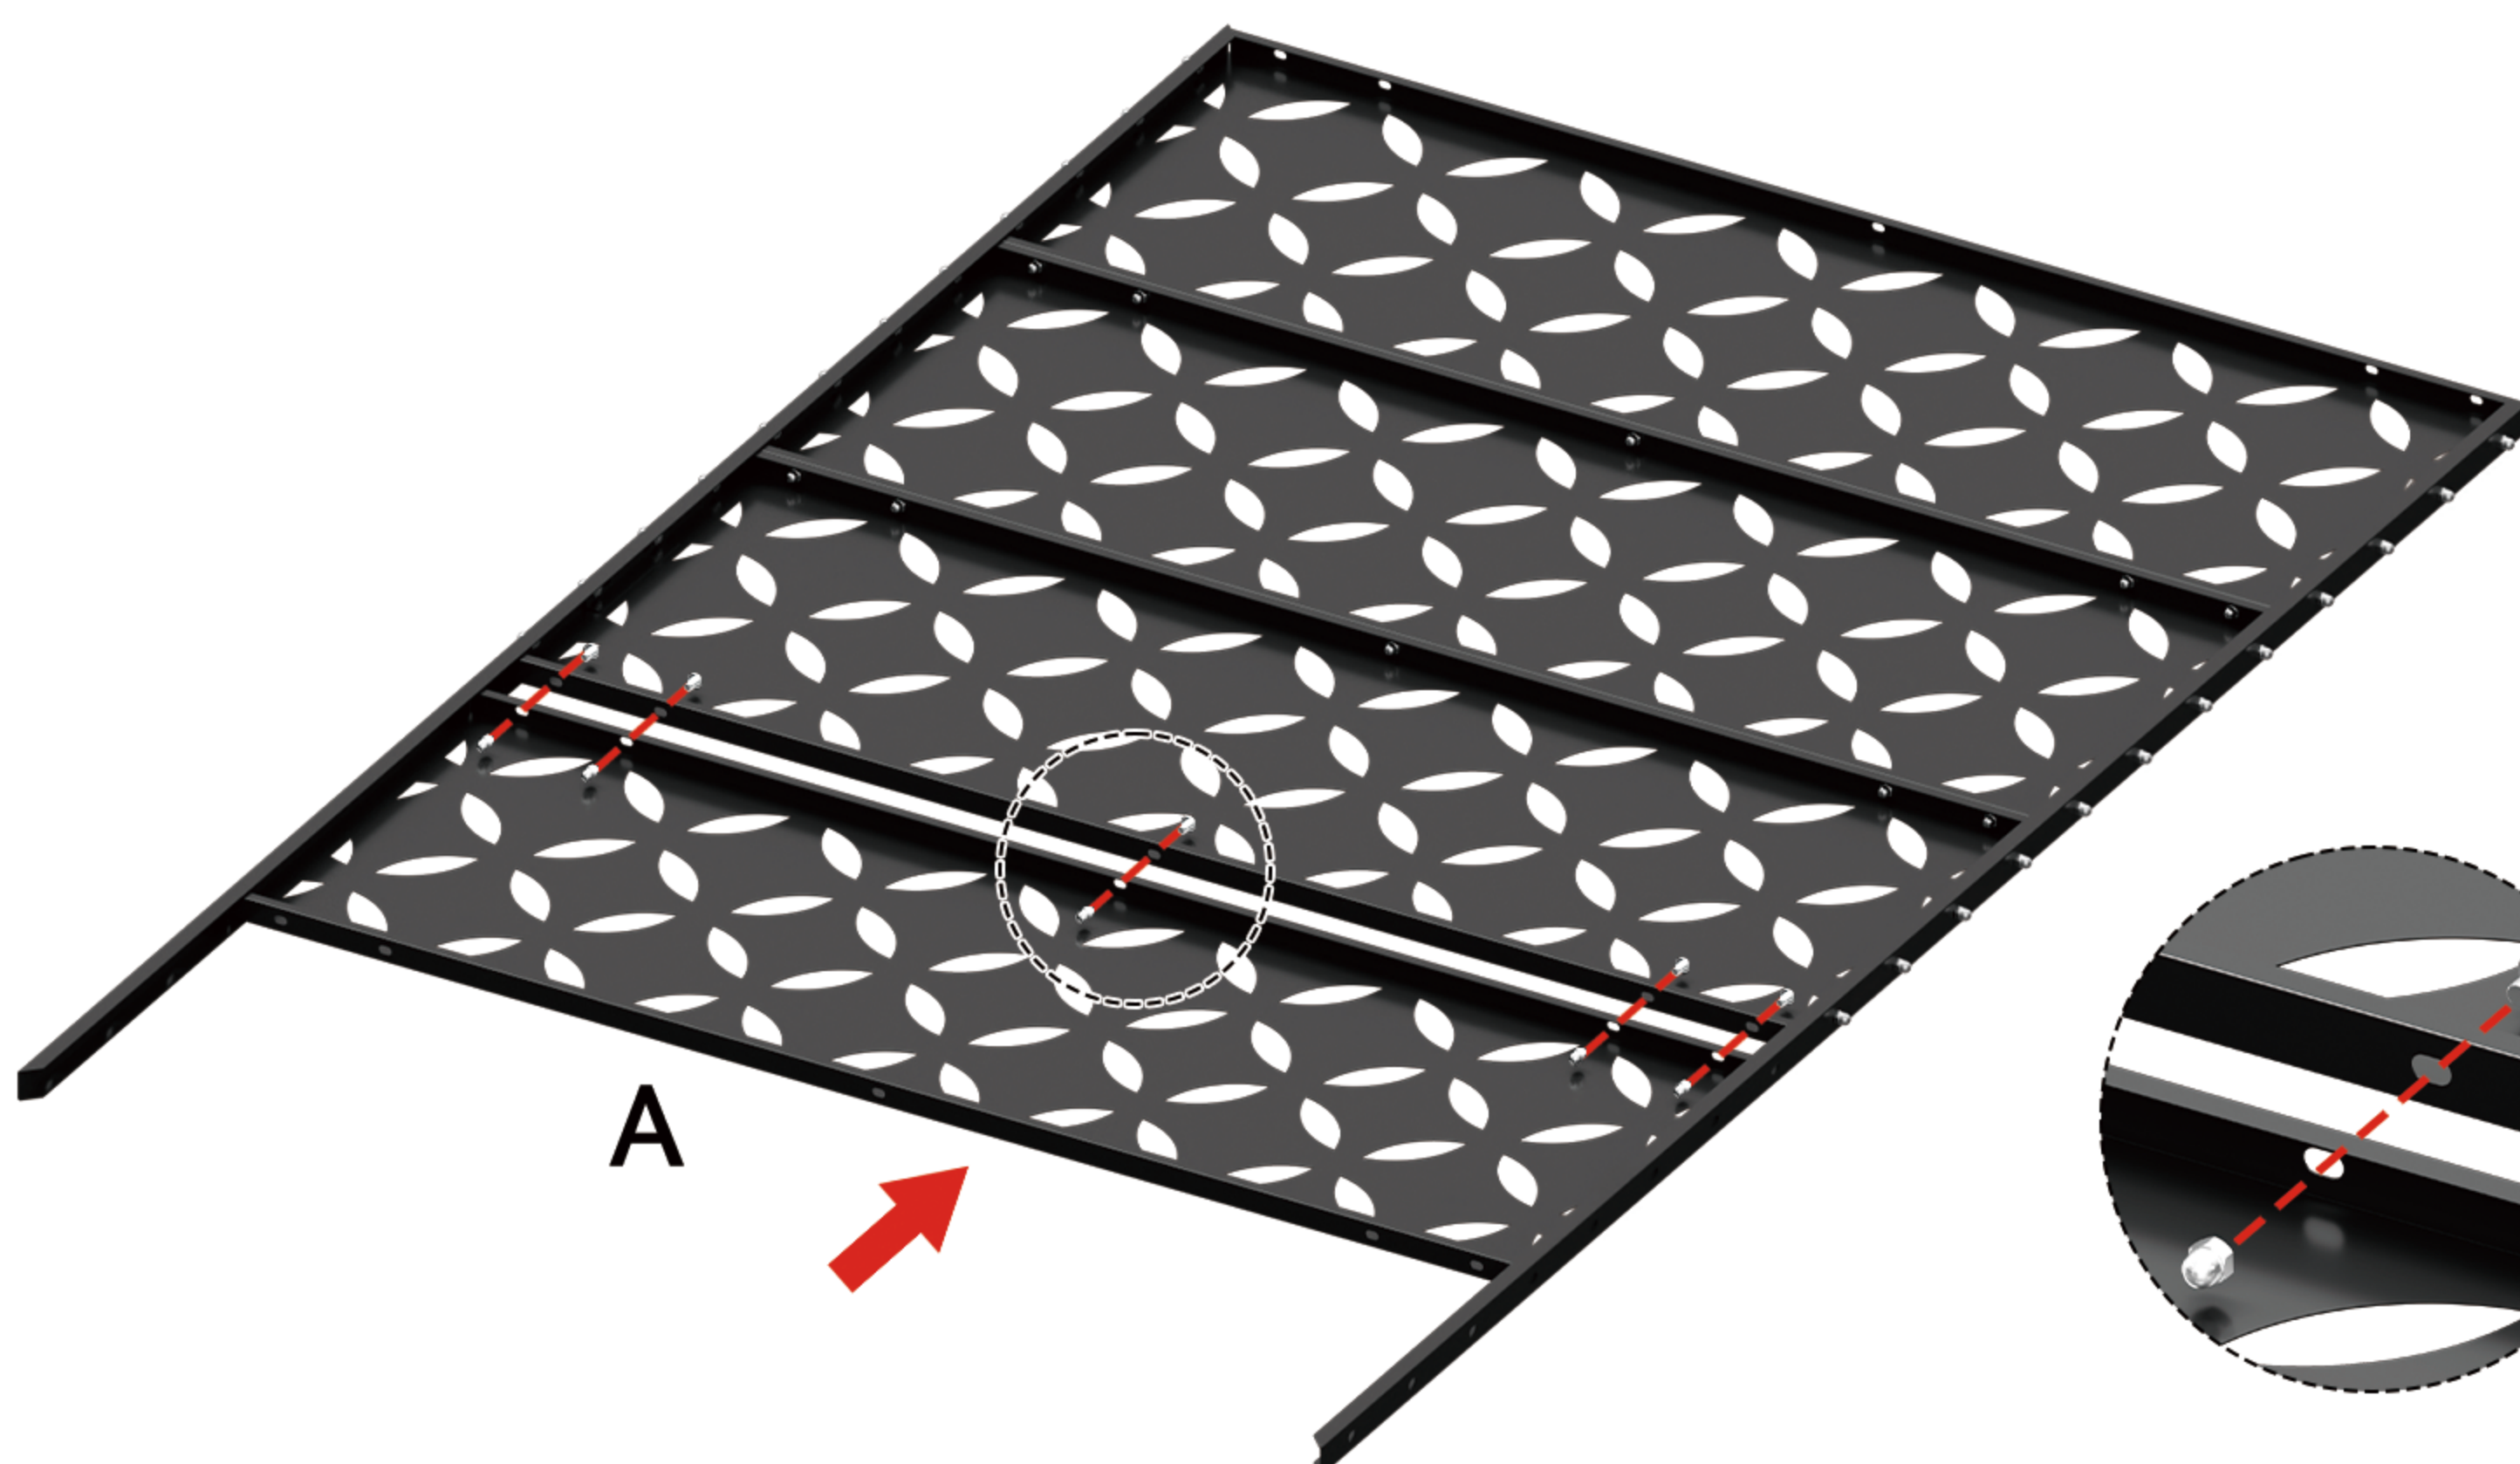

K*5




L*5



Install 5th Screen Panel A

Secure two panel A together with screws & nuts (K*5,L*5)

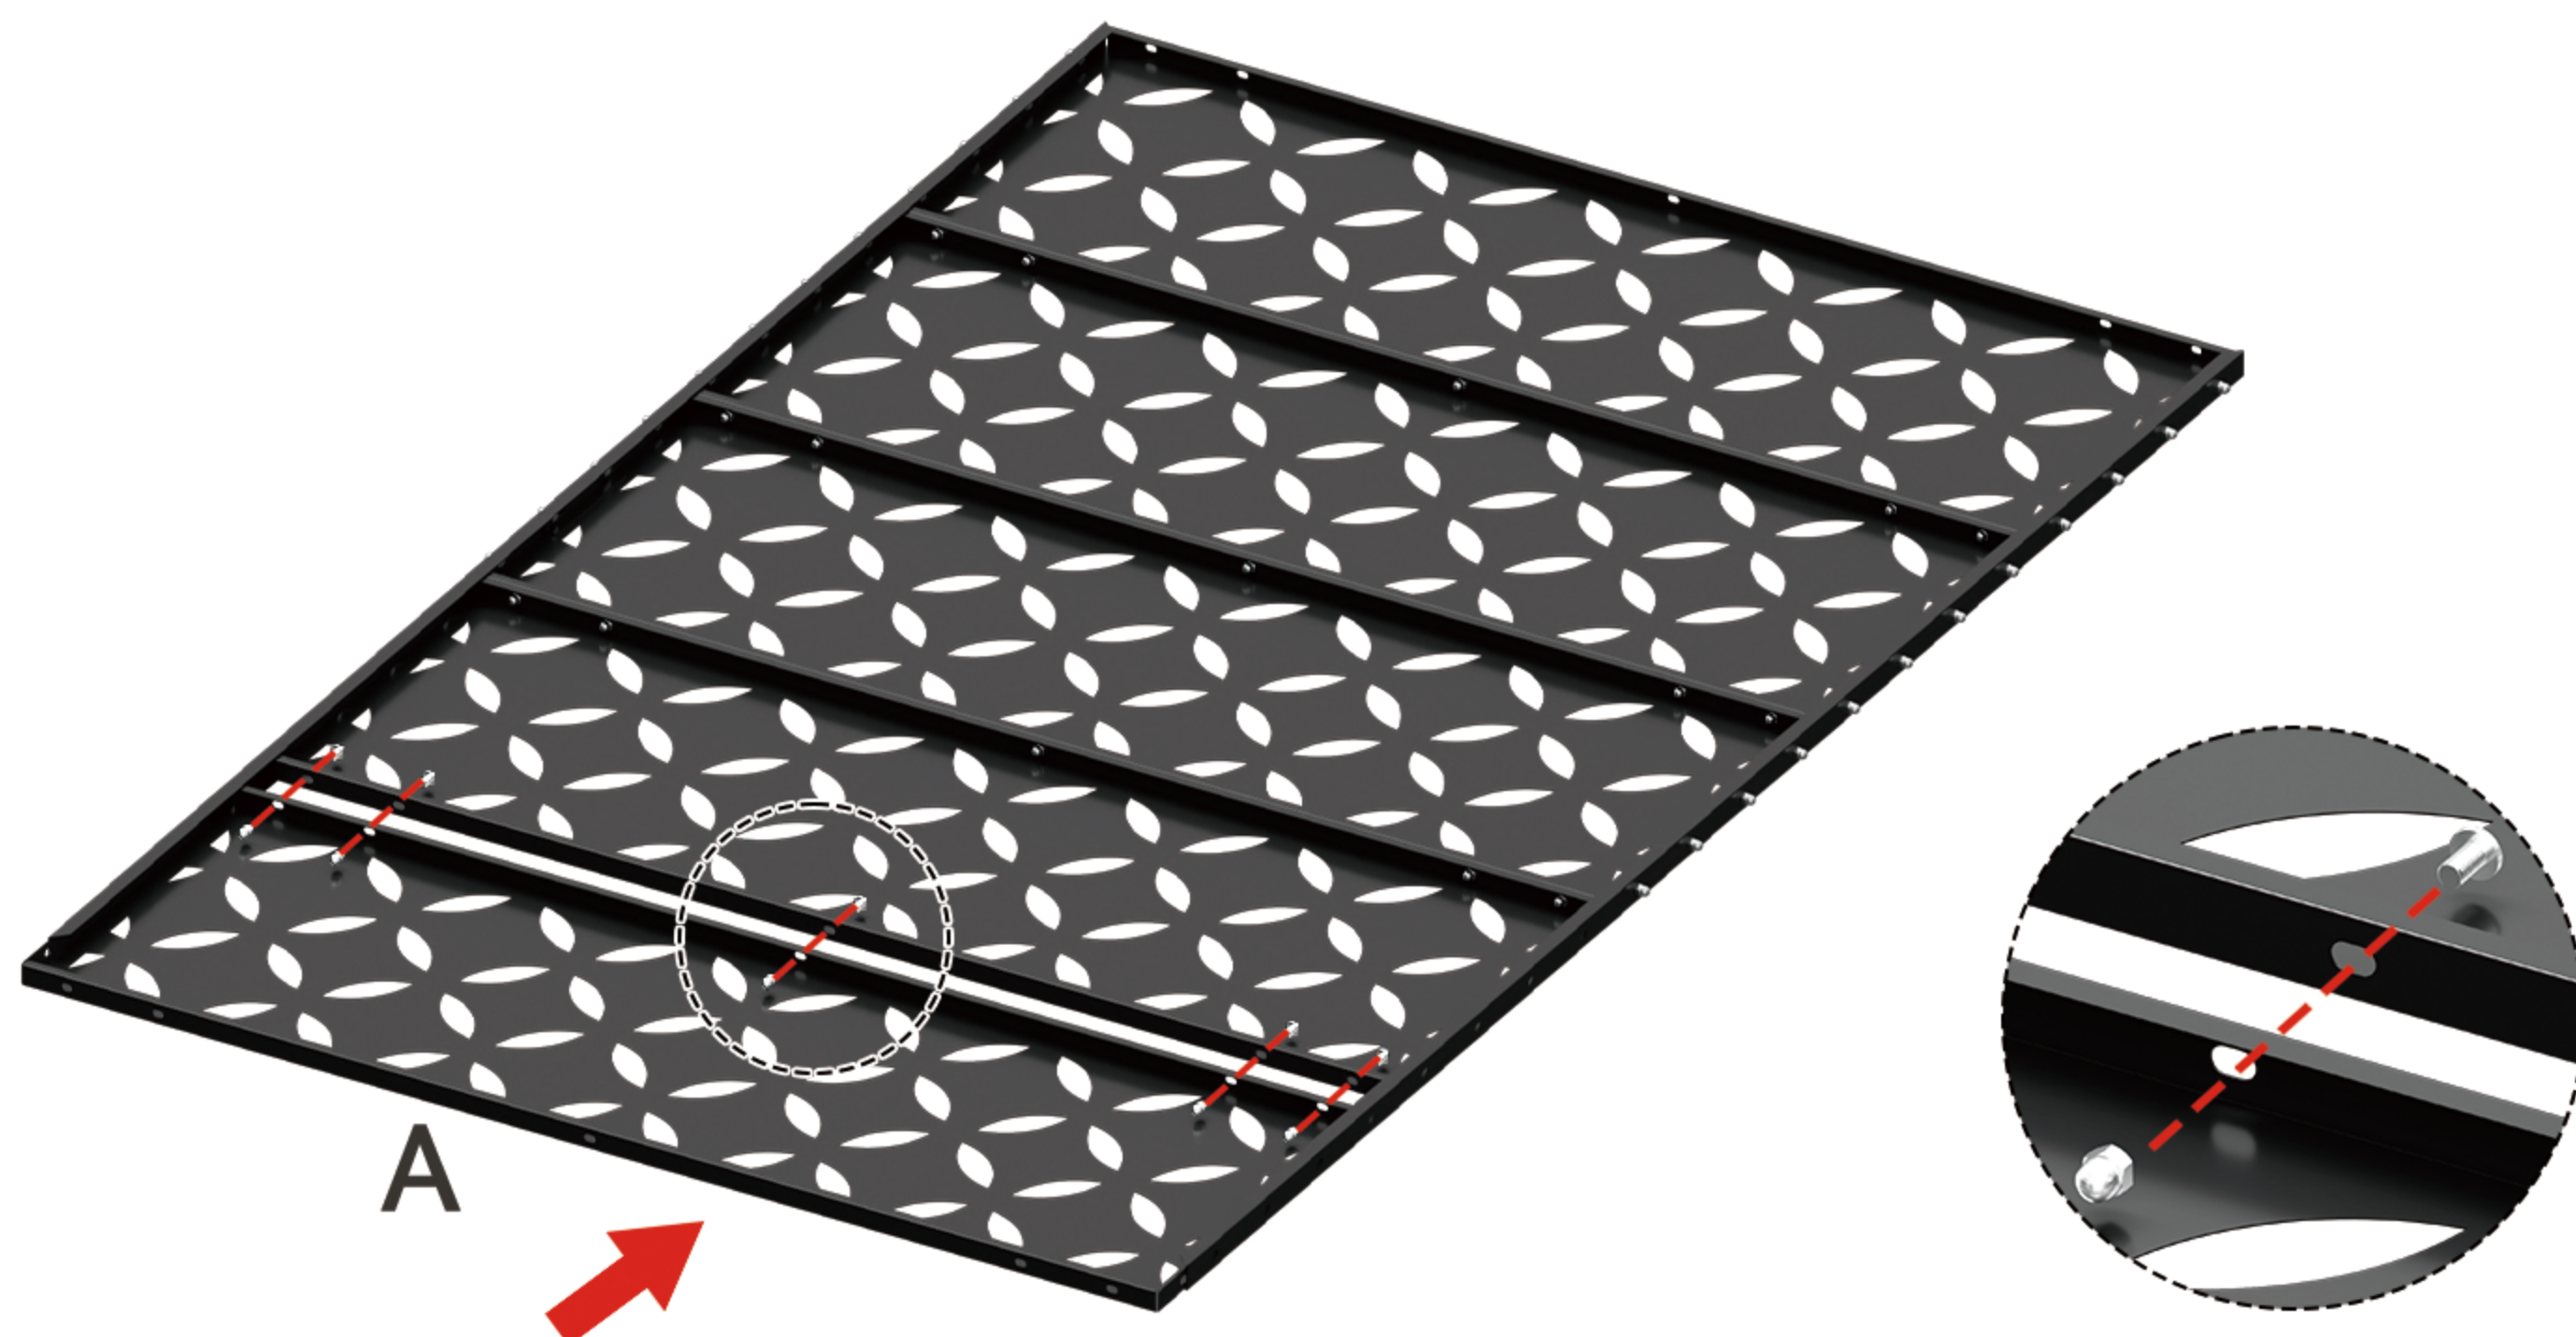

K*12




L*12



Connect Vertical Post C to Screen Panel A

Secure them with screws & nuts (K*12,L*12)

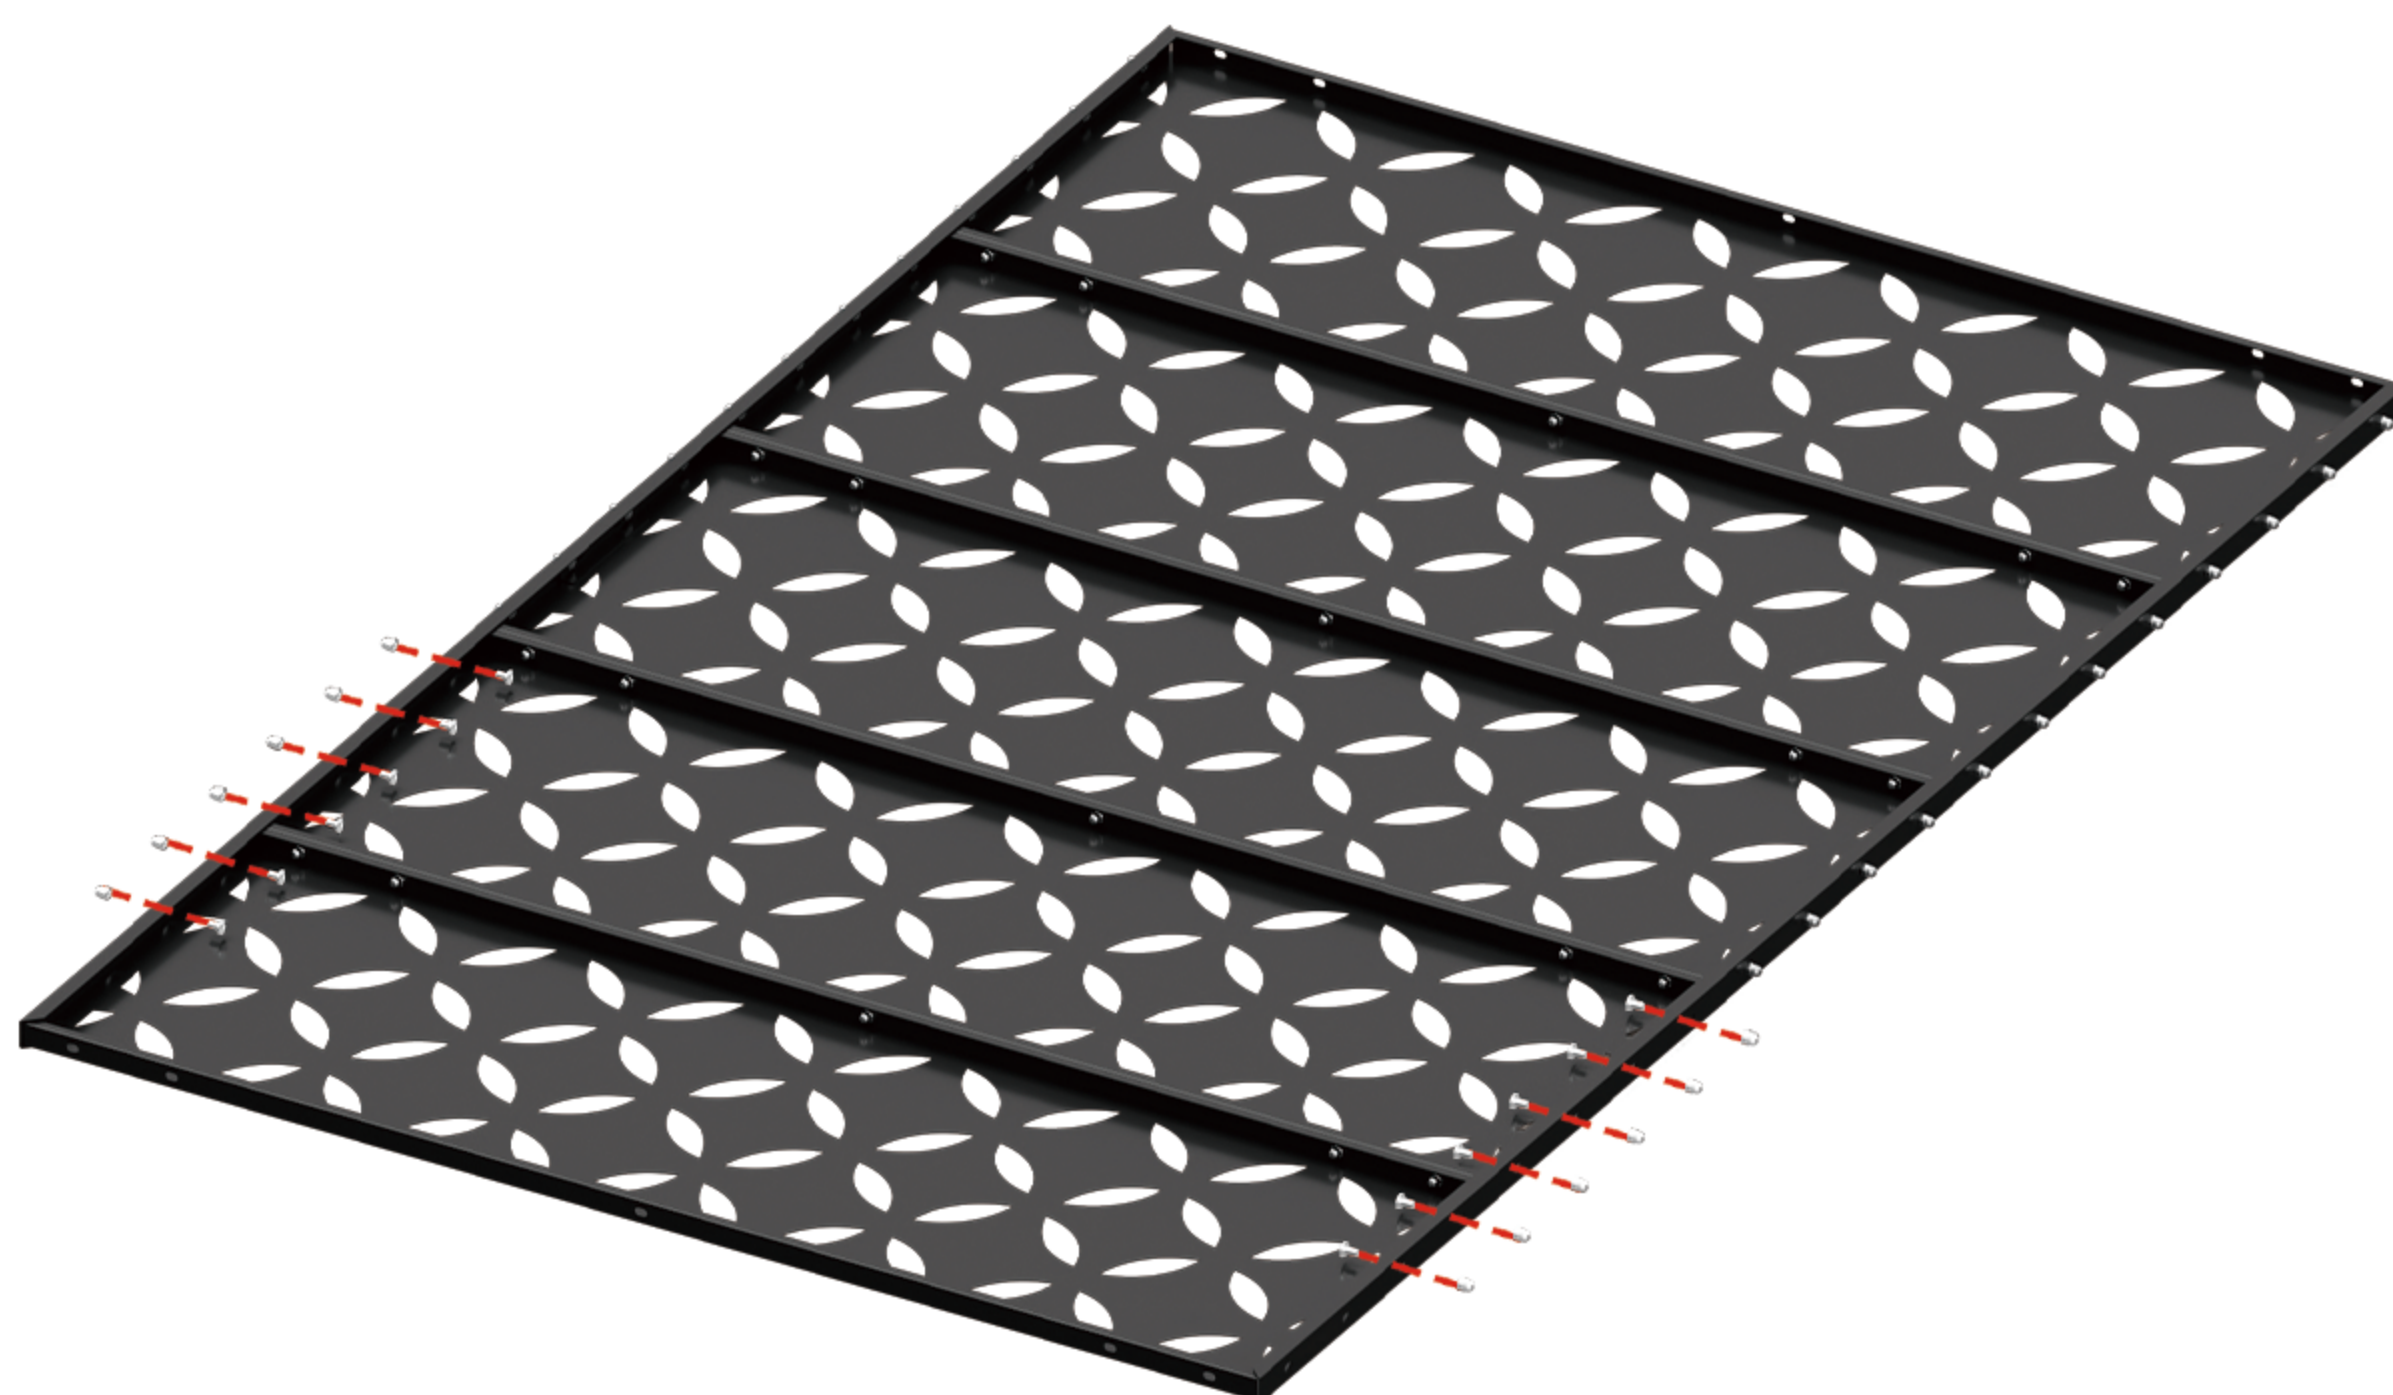

K*4





L*4



Install Part E

Contact the assembled frame to part E

Secure them with screws & nuts (K*4,L*4)

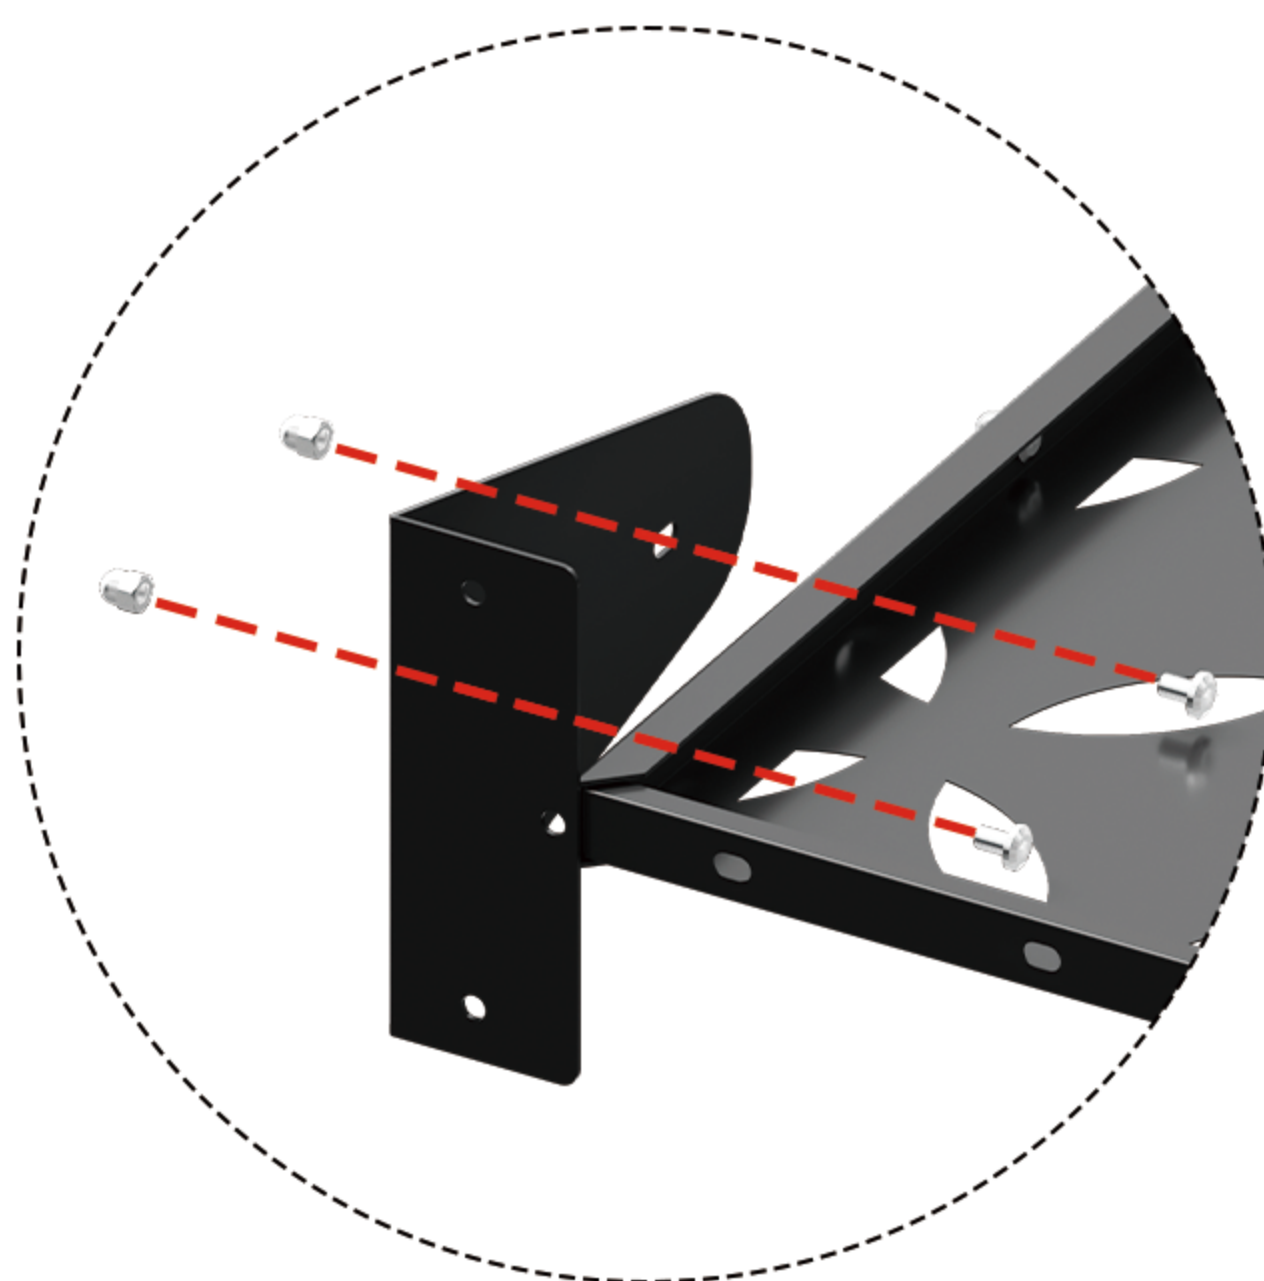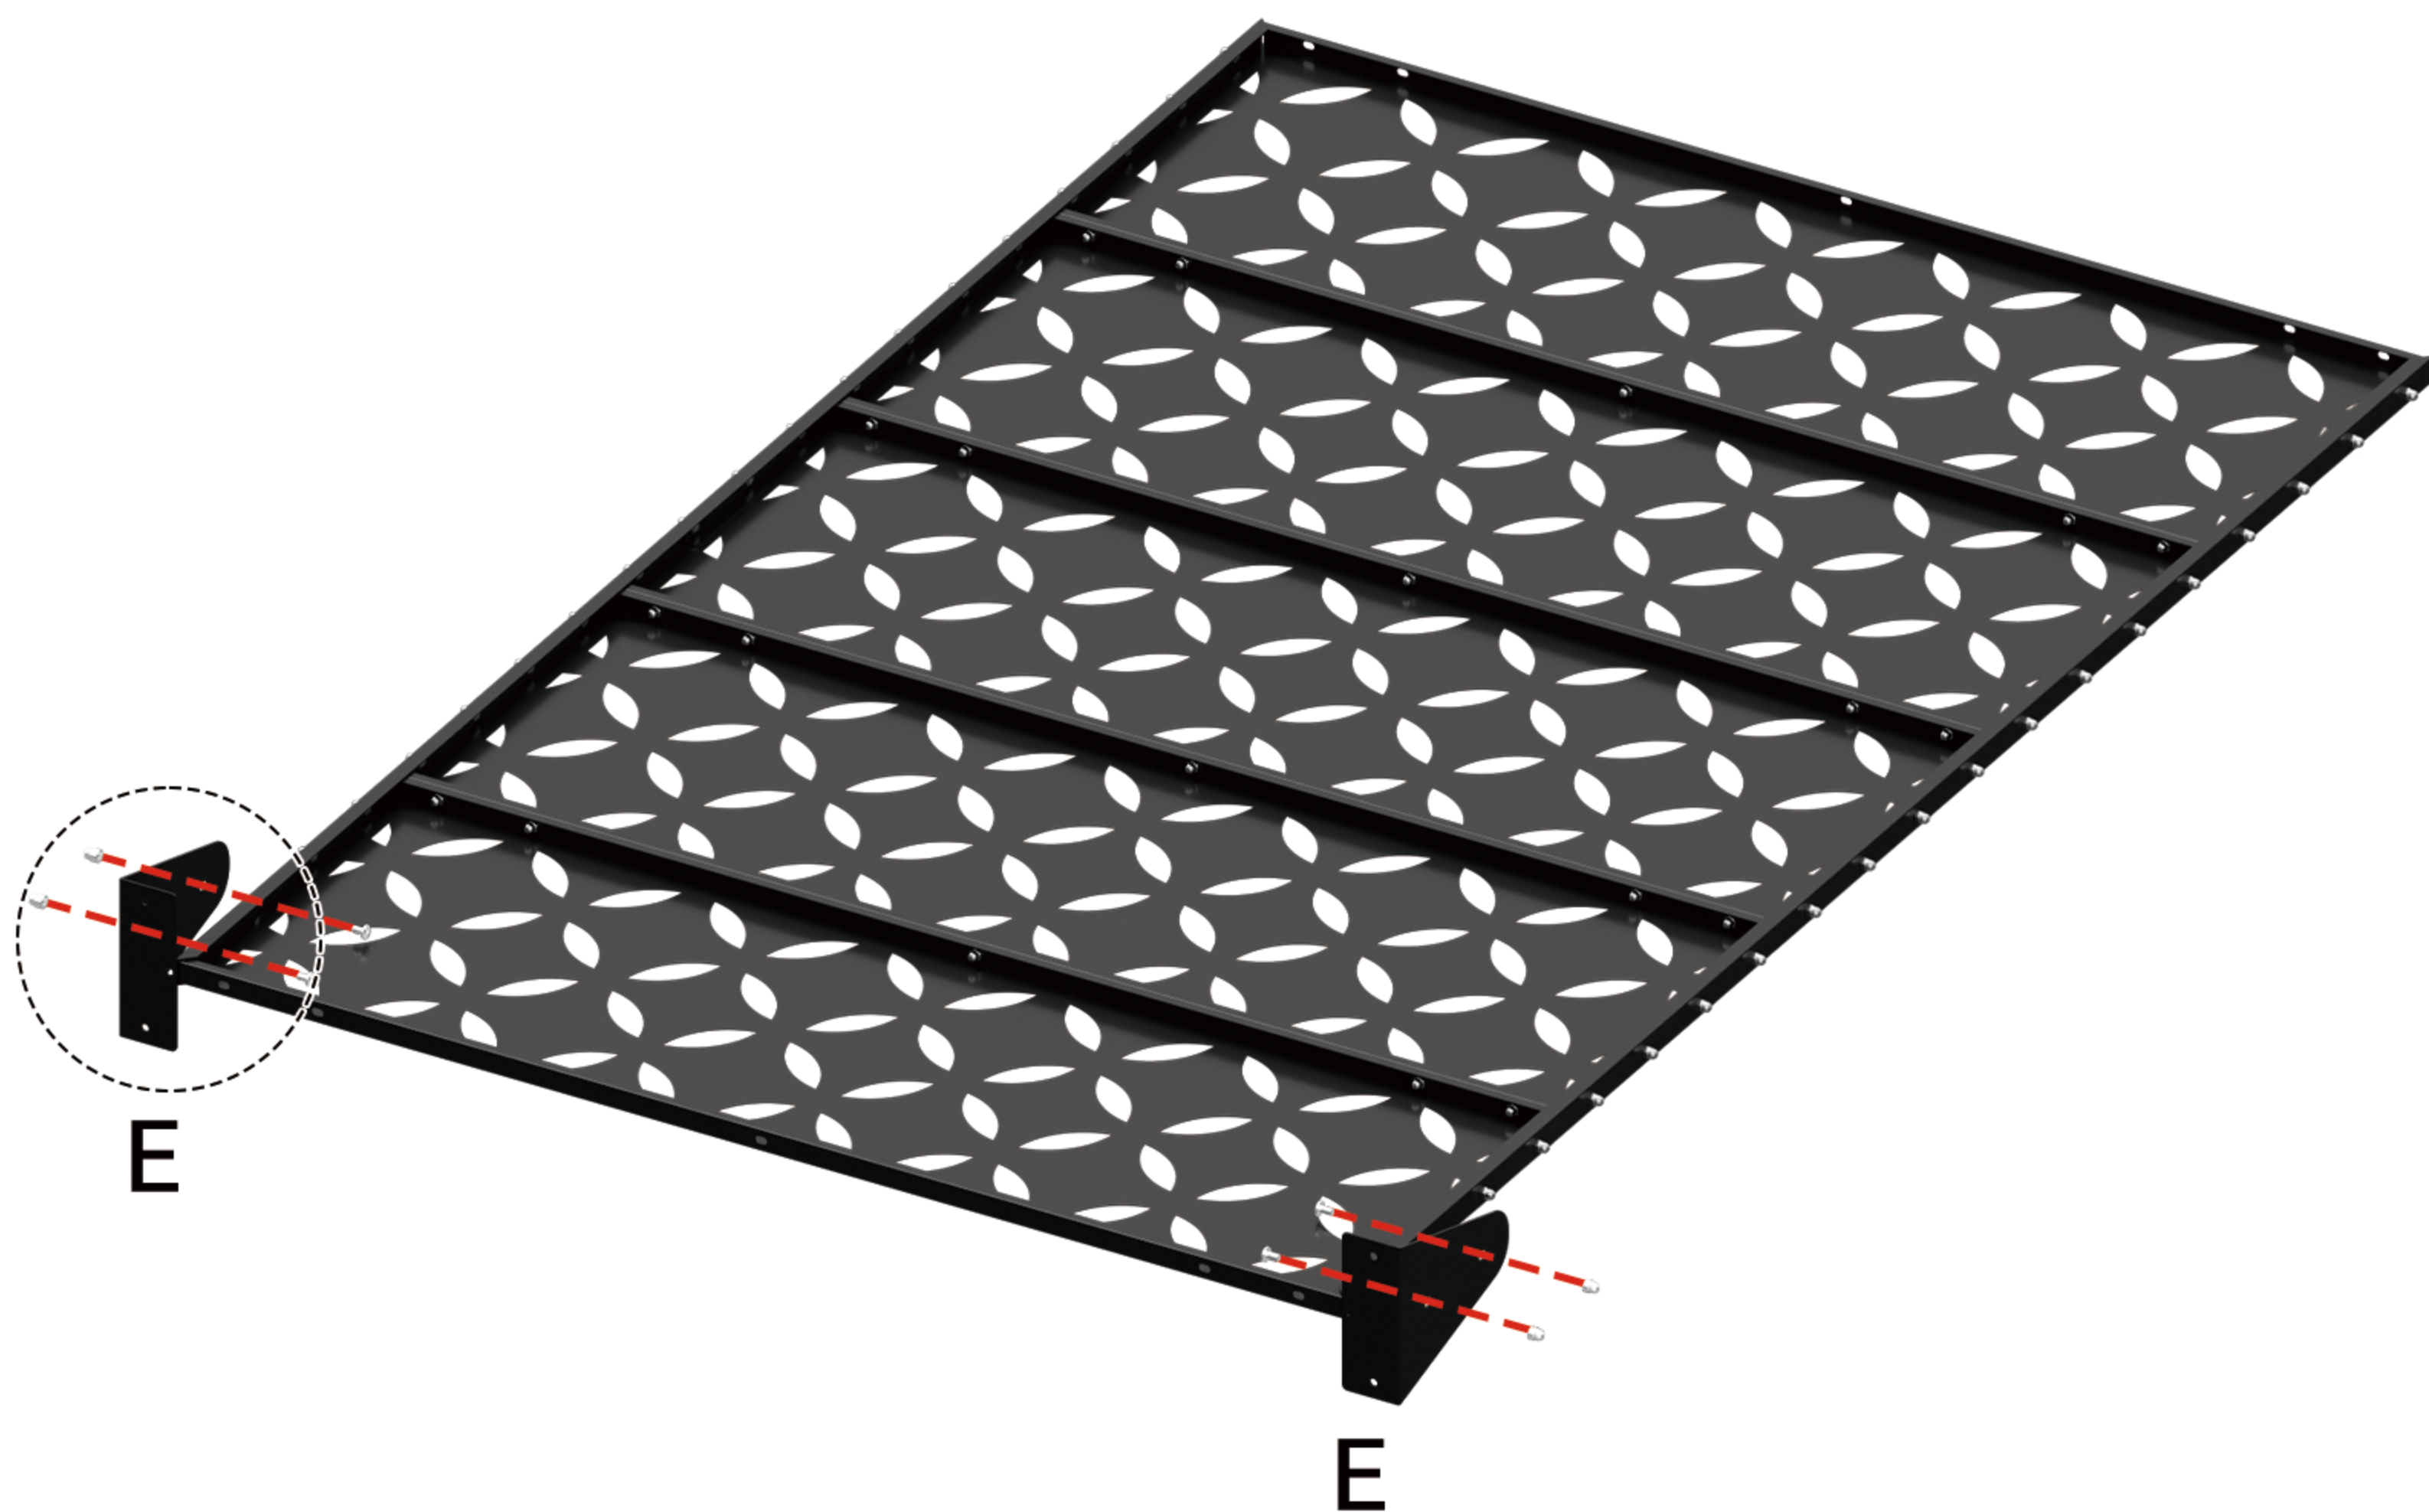

N*6



Install Support Base D

Align the holes on Part E and D,
Secure them with screws (N*6).

Kindly Note: To prevent
tipping, we recommend two
people for assembly.
One person holds the frame
steady while the other
installs the screws.



M*4




To enhanced stability and wind resistance,


Install Metal Crossbar B (Optional Step)

Connect part B and part D,

Secure them with screws (M*4).

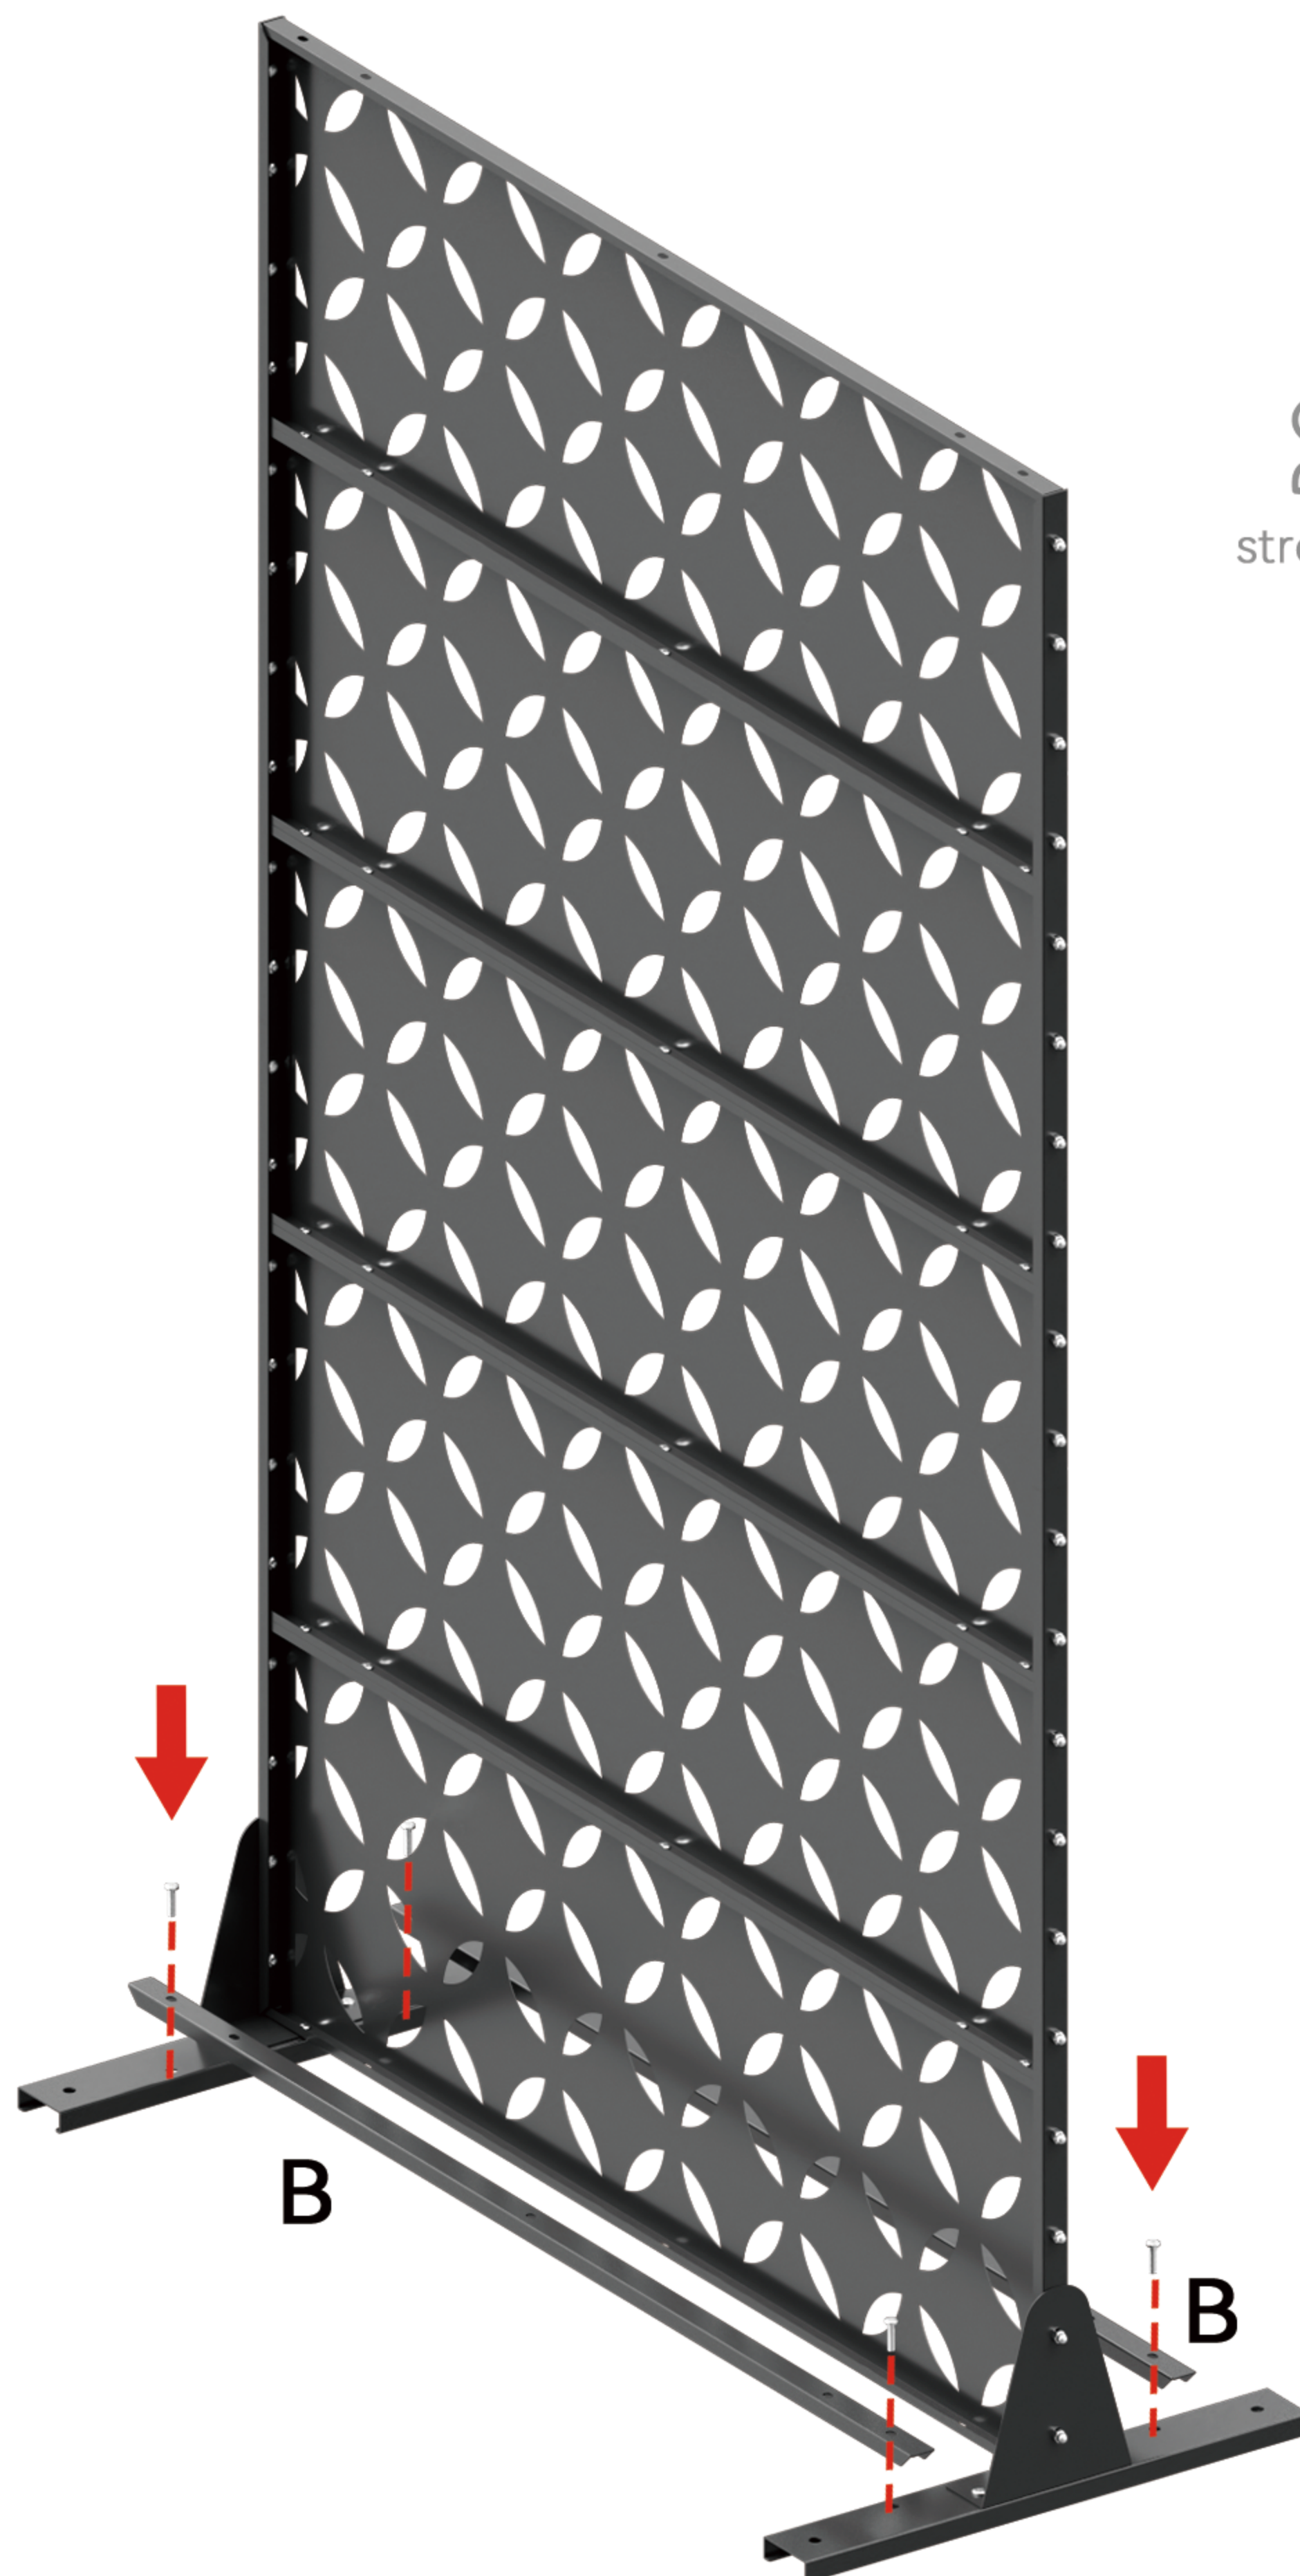


Fix Support Base D in different ground

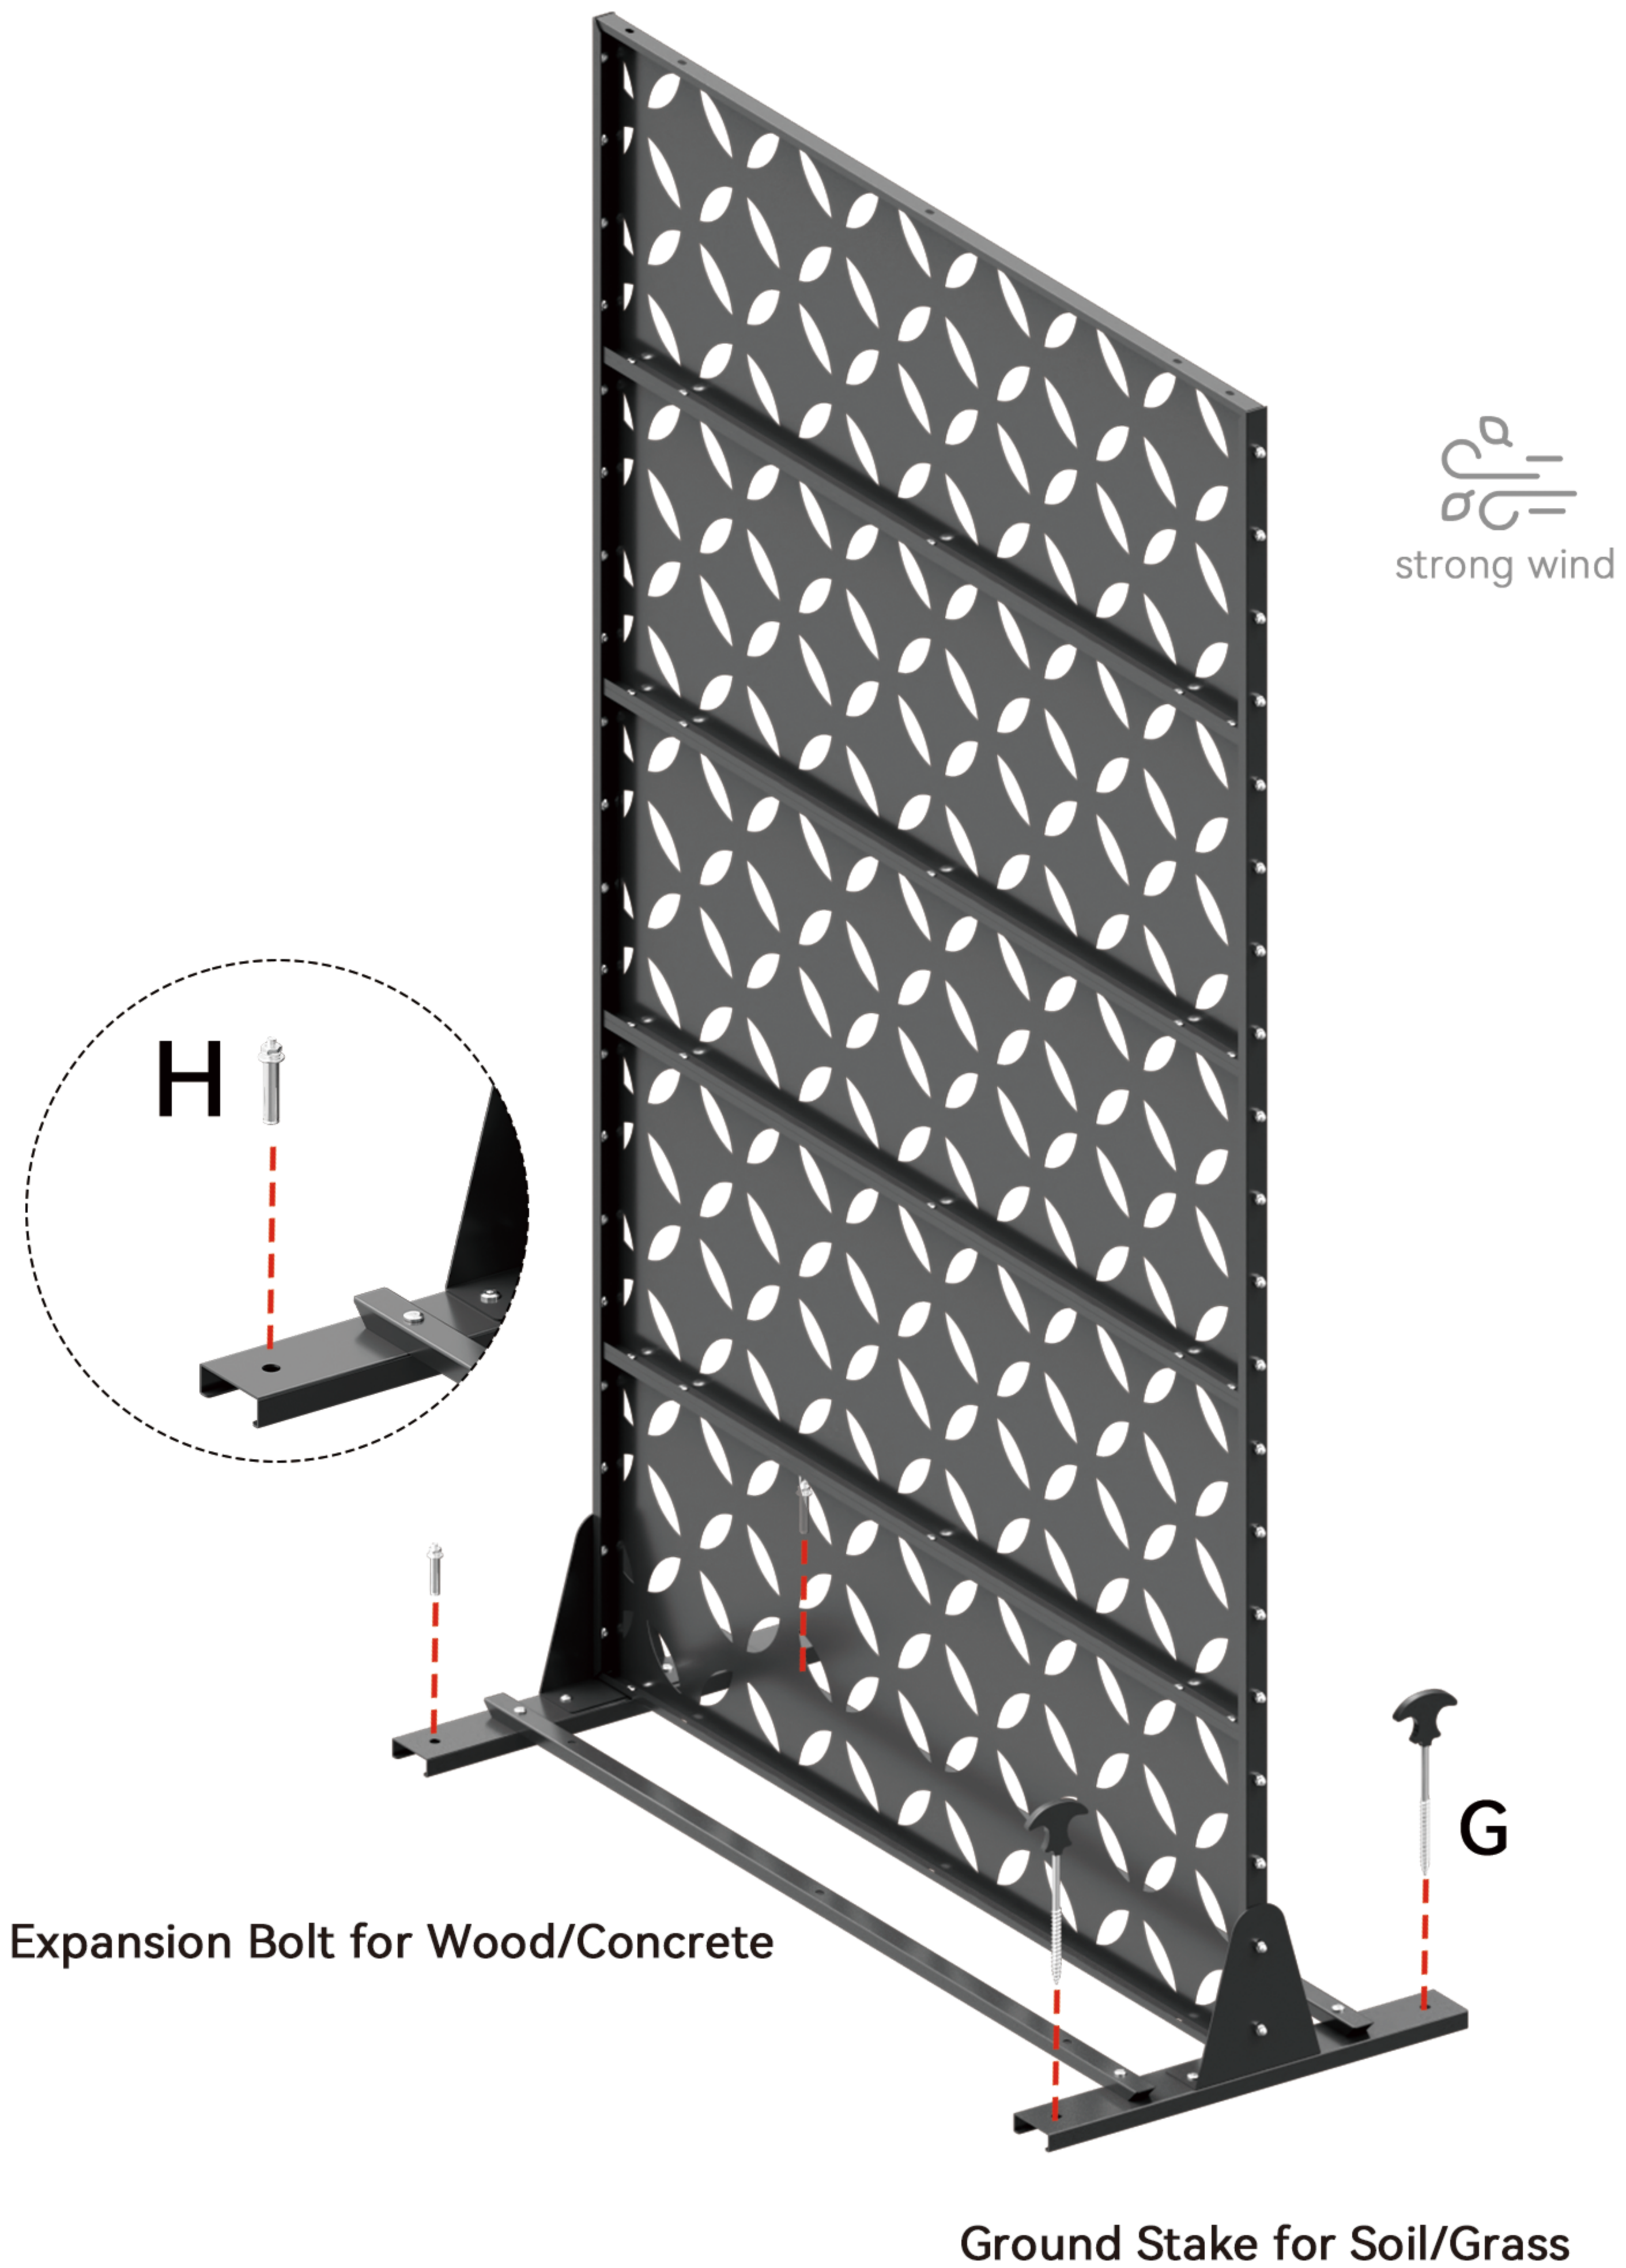

Horizontal Privacy Screen Assembly Steps

Please refer to pages 14 to pages 21.

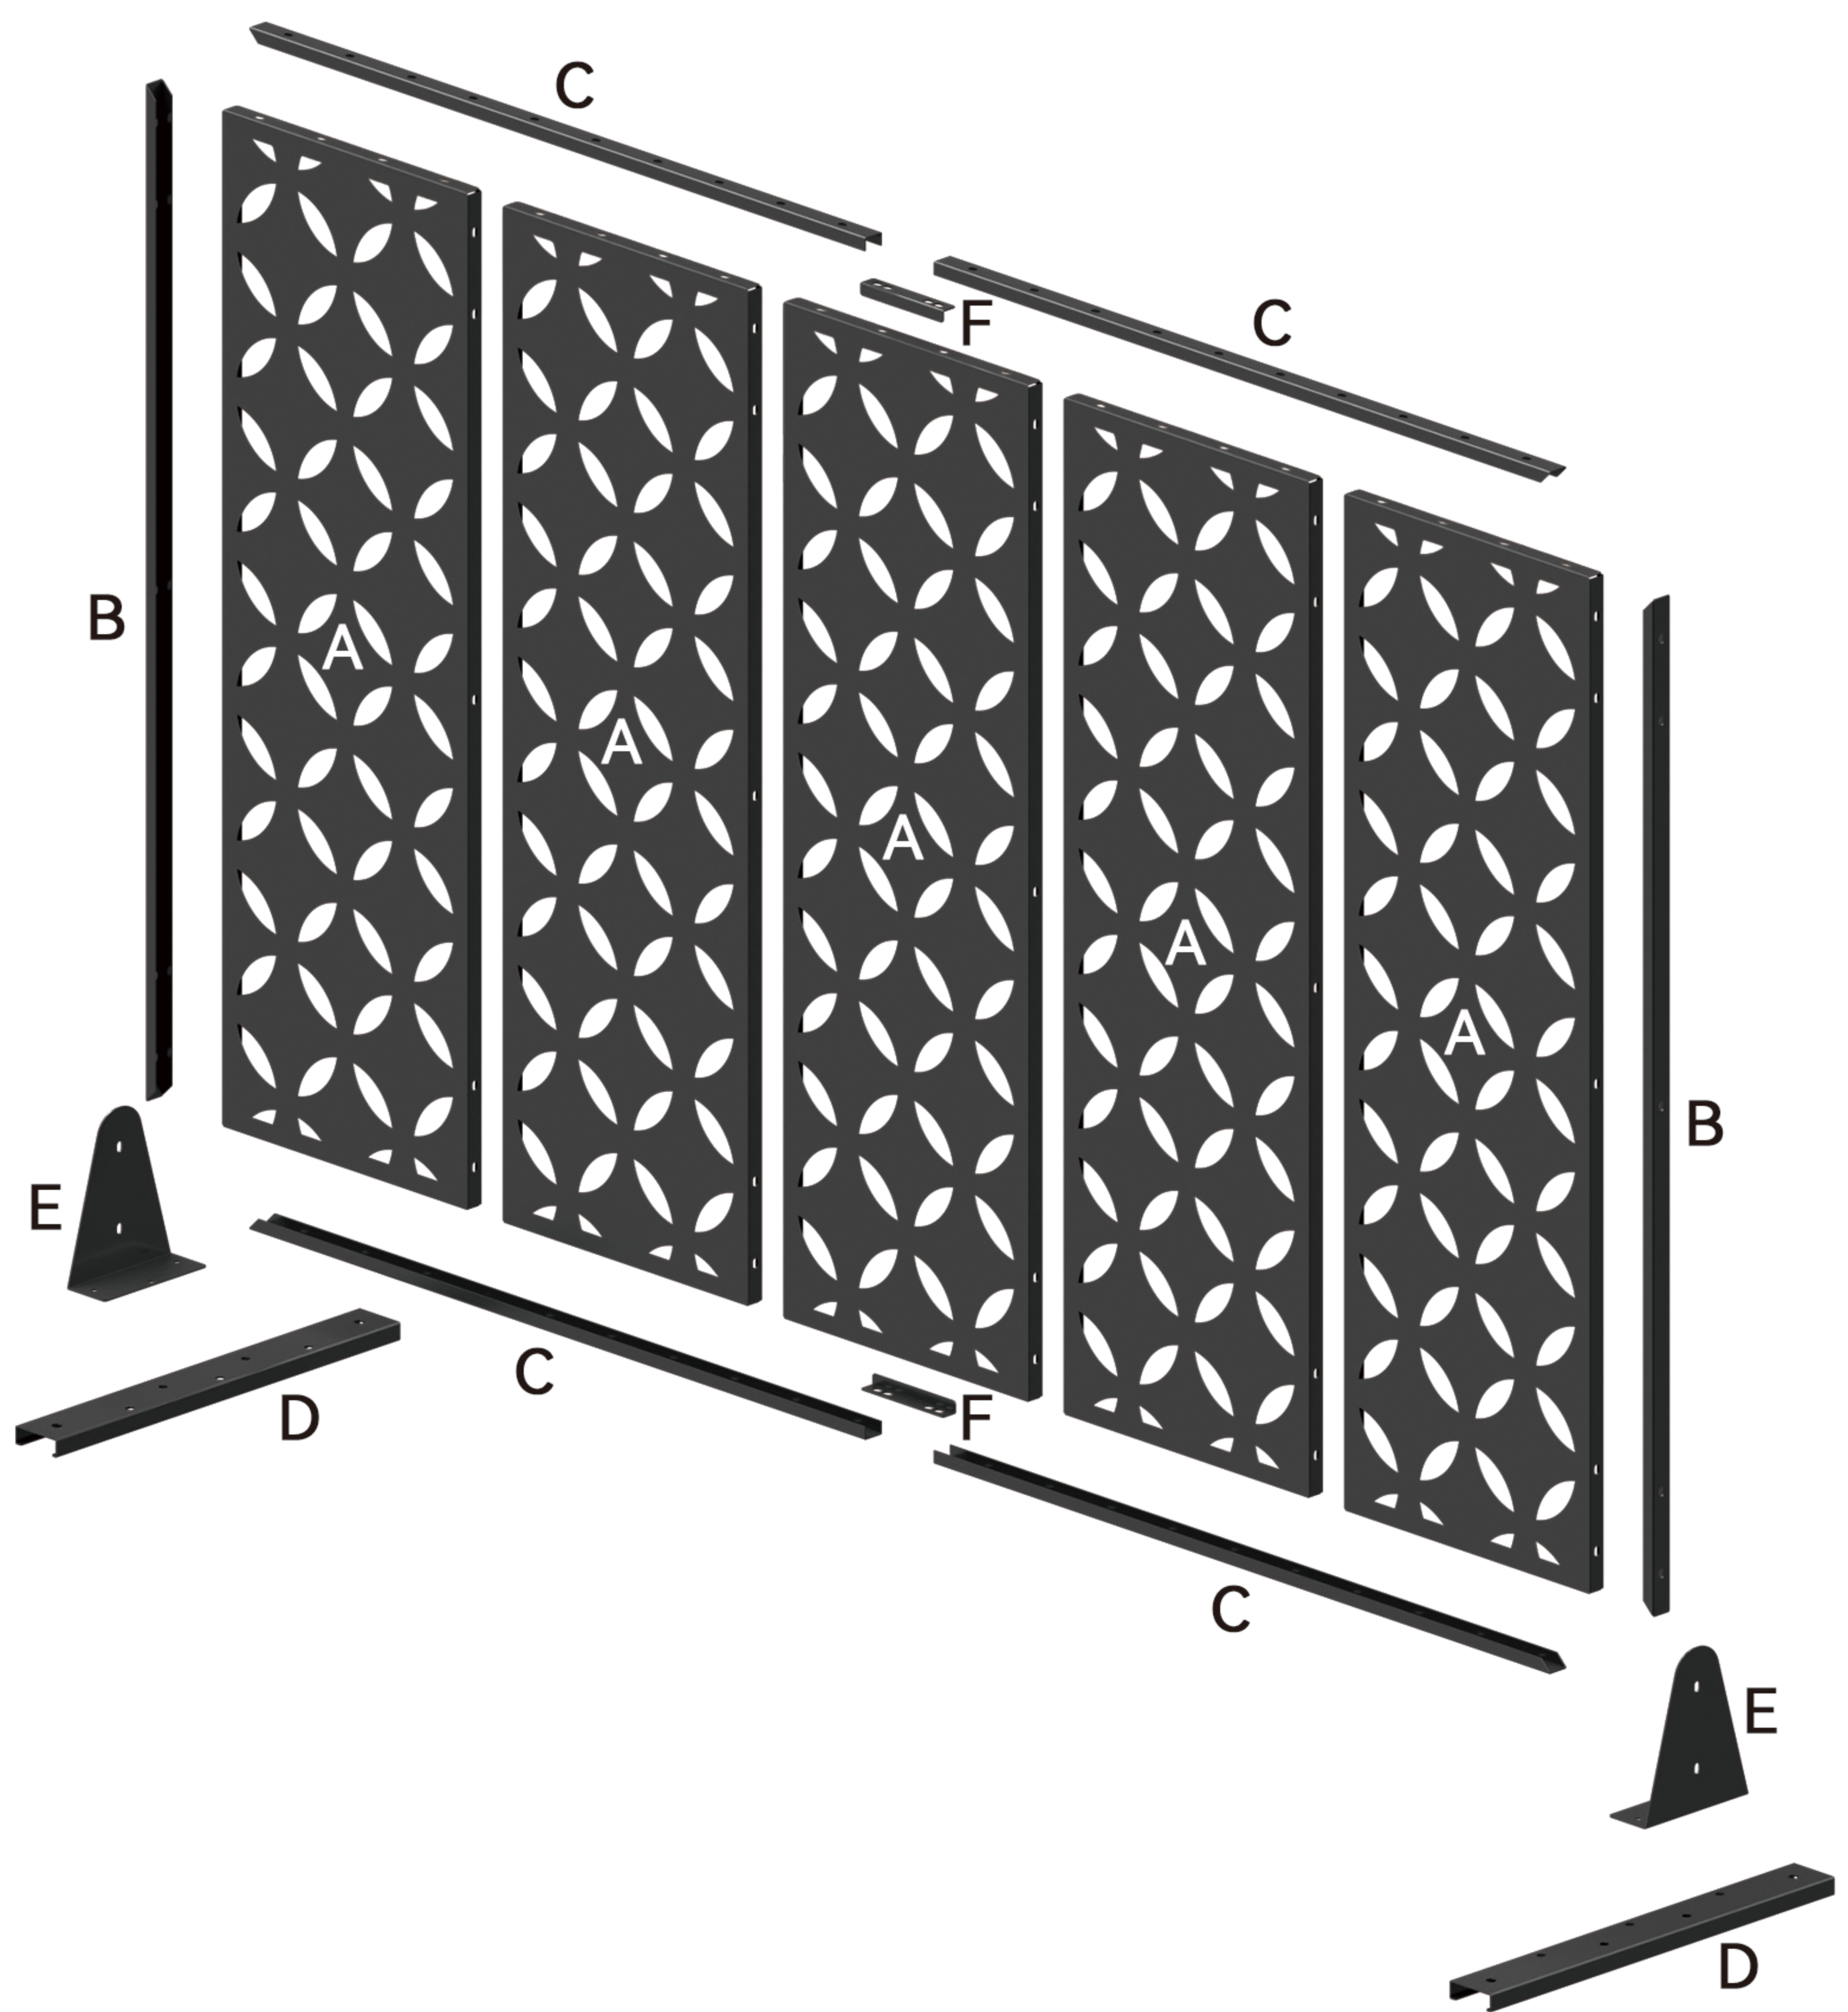

K*3




L*3



Connect Vertical Post B to Screen Panel A

Insert panel A into part B.

Secure them with screws & nuts(K*3,L*3)

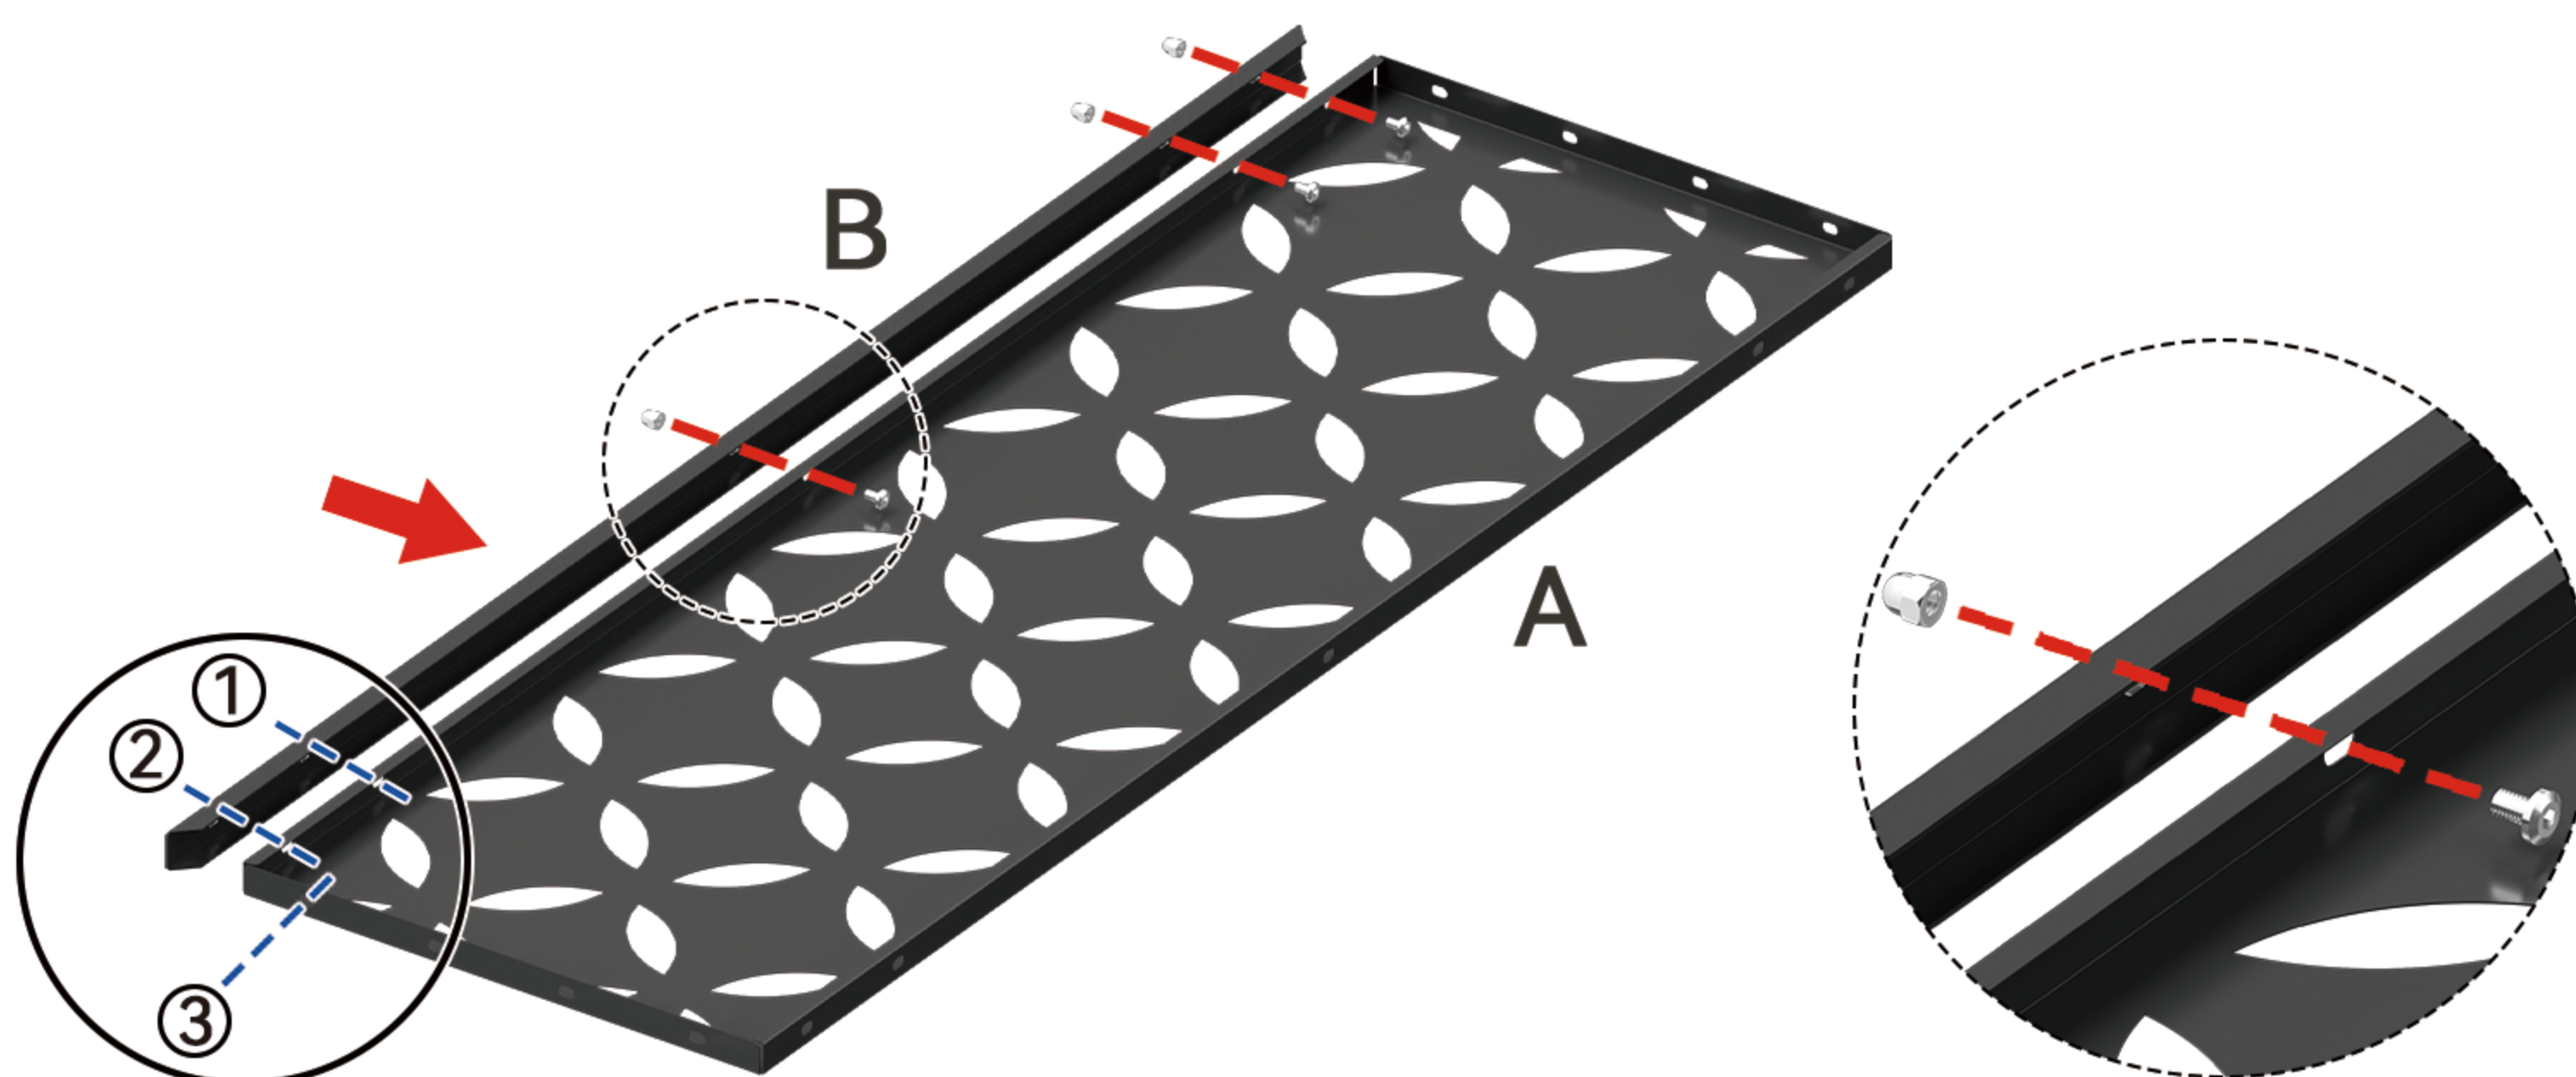

Do not install screws in holes ①, ②, ③ for now.

K*4




L*4



Install Connecting Rod C

Align with the pre-drilled holes on panel A.


Secure them with screws & nuts (K*4,L*4)

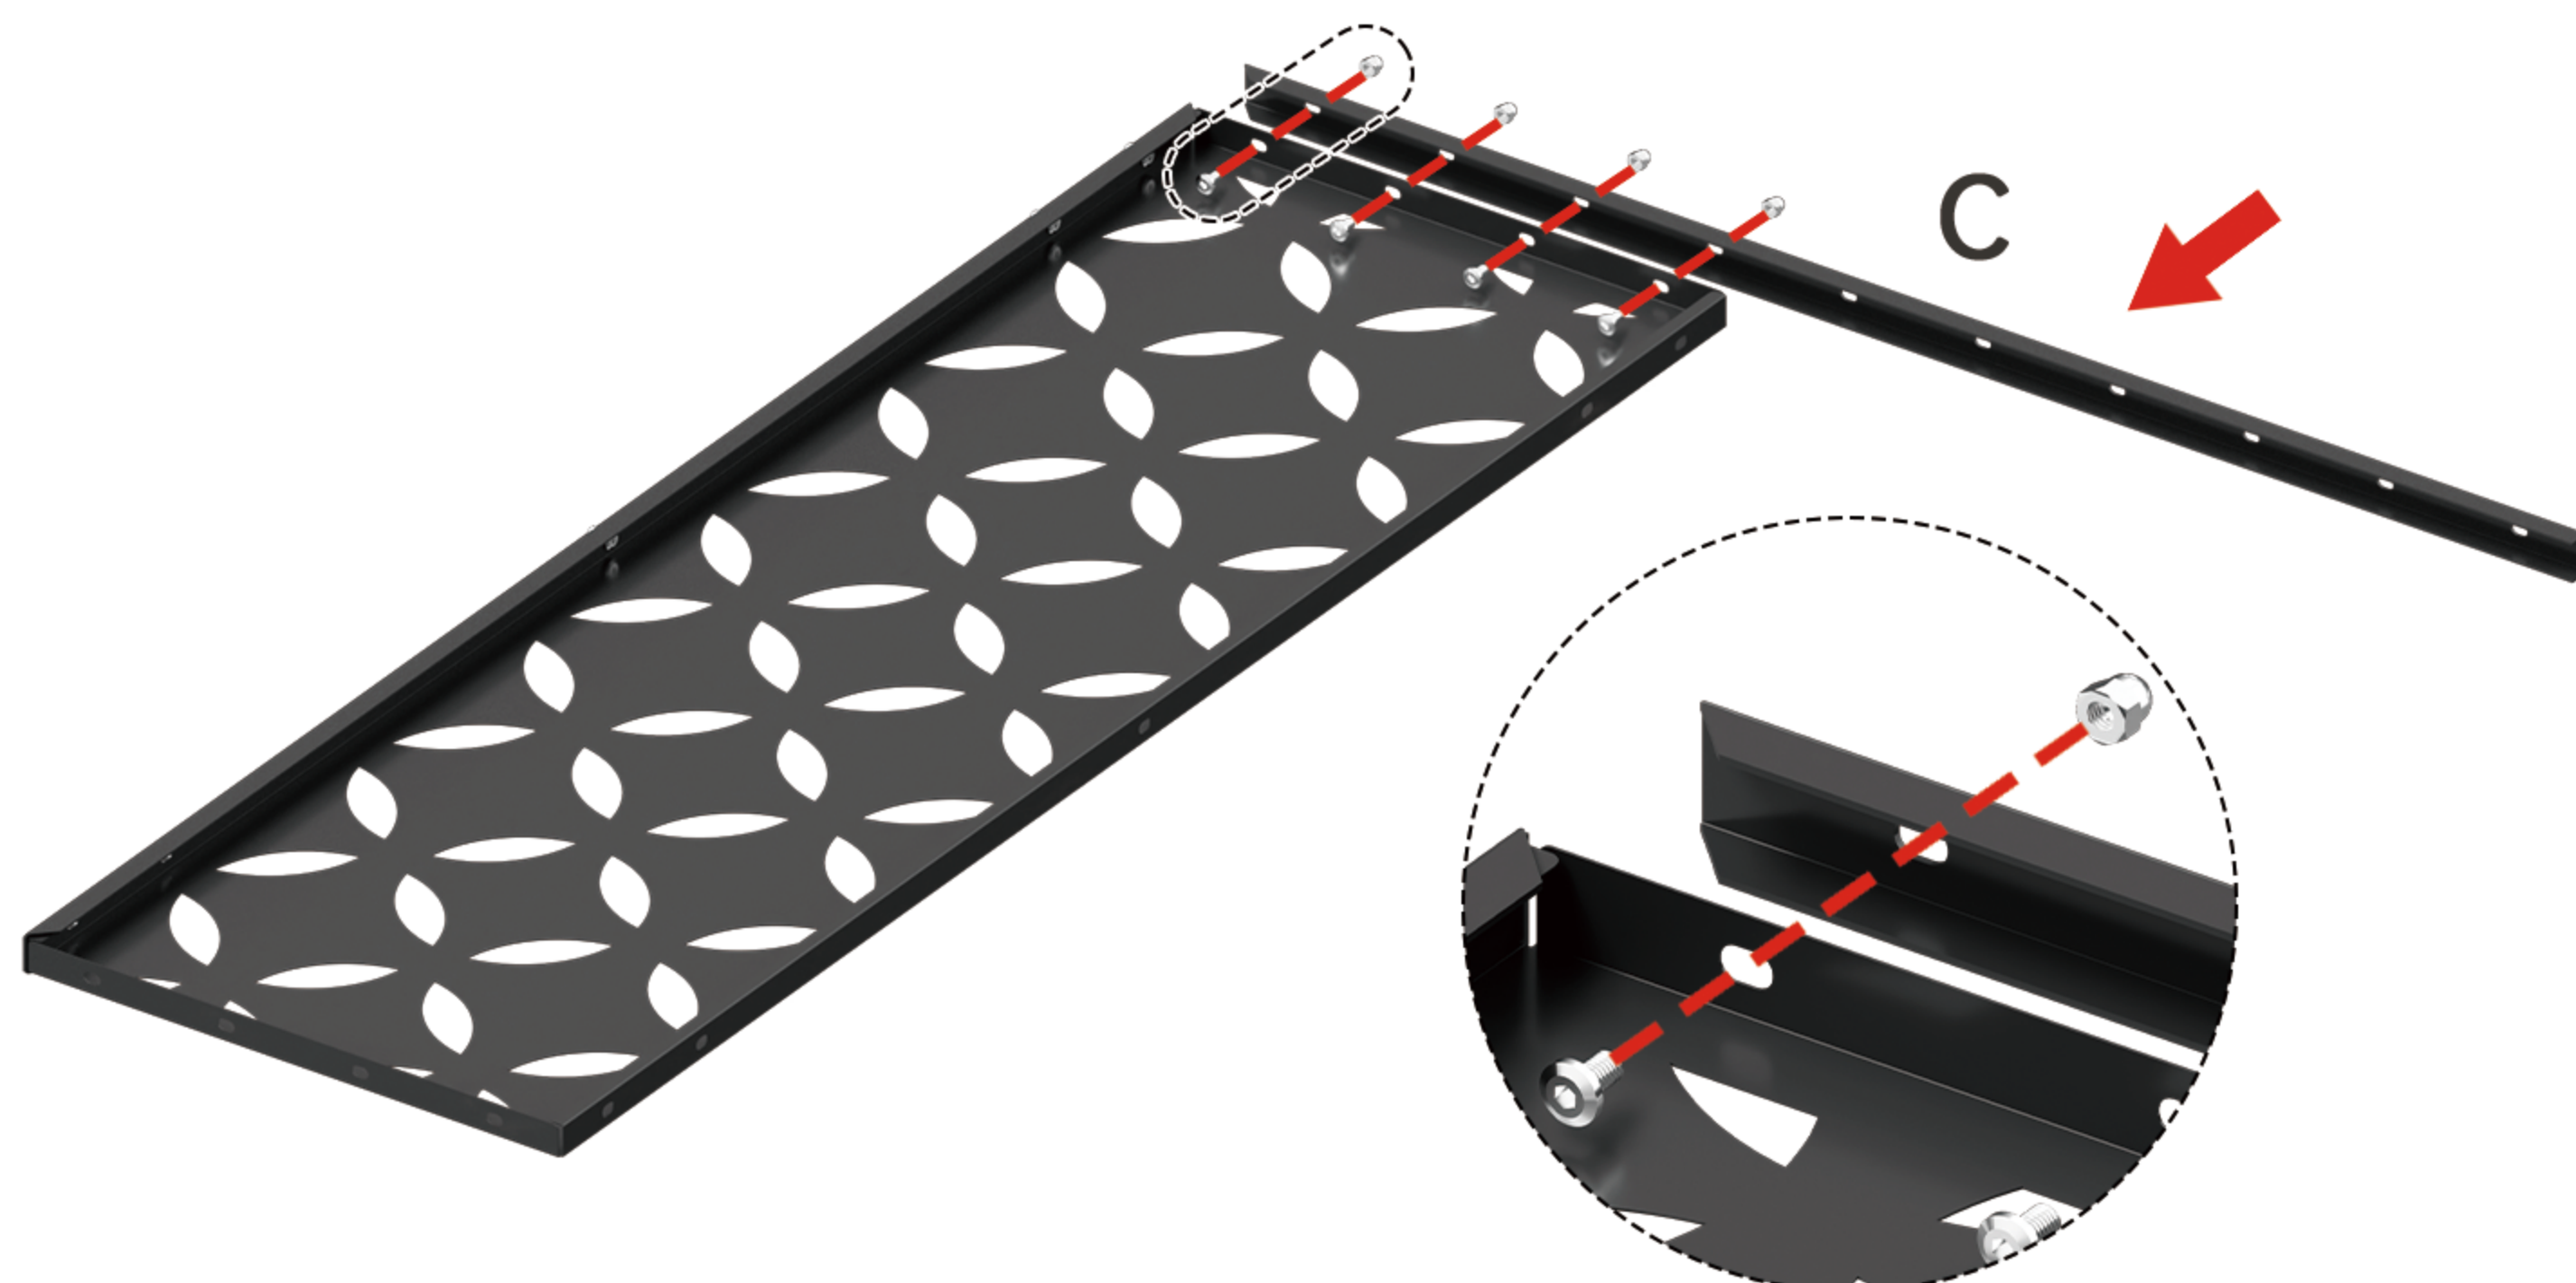

K*5 
L*5 

Install 2nd screen panel A


Secure them with screws & nuts (K*5,L*5)

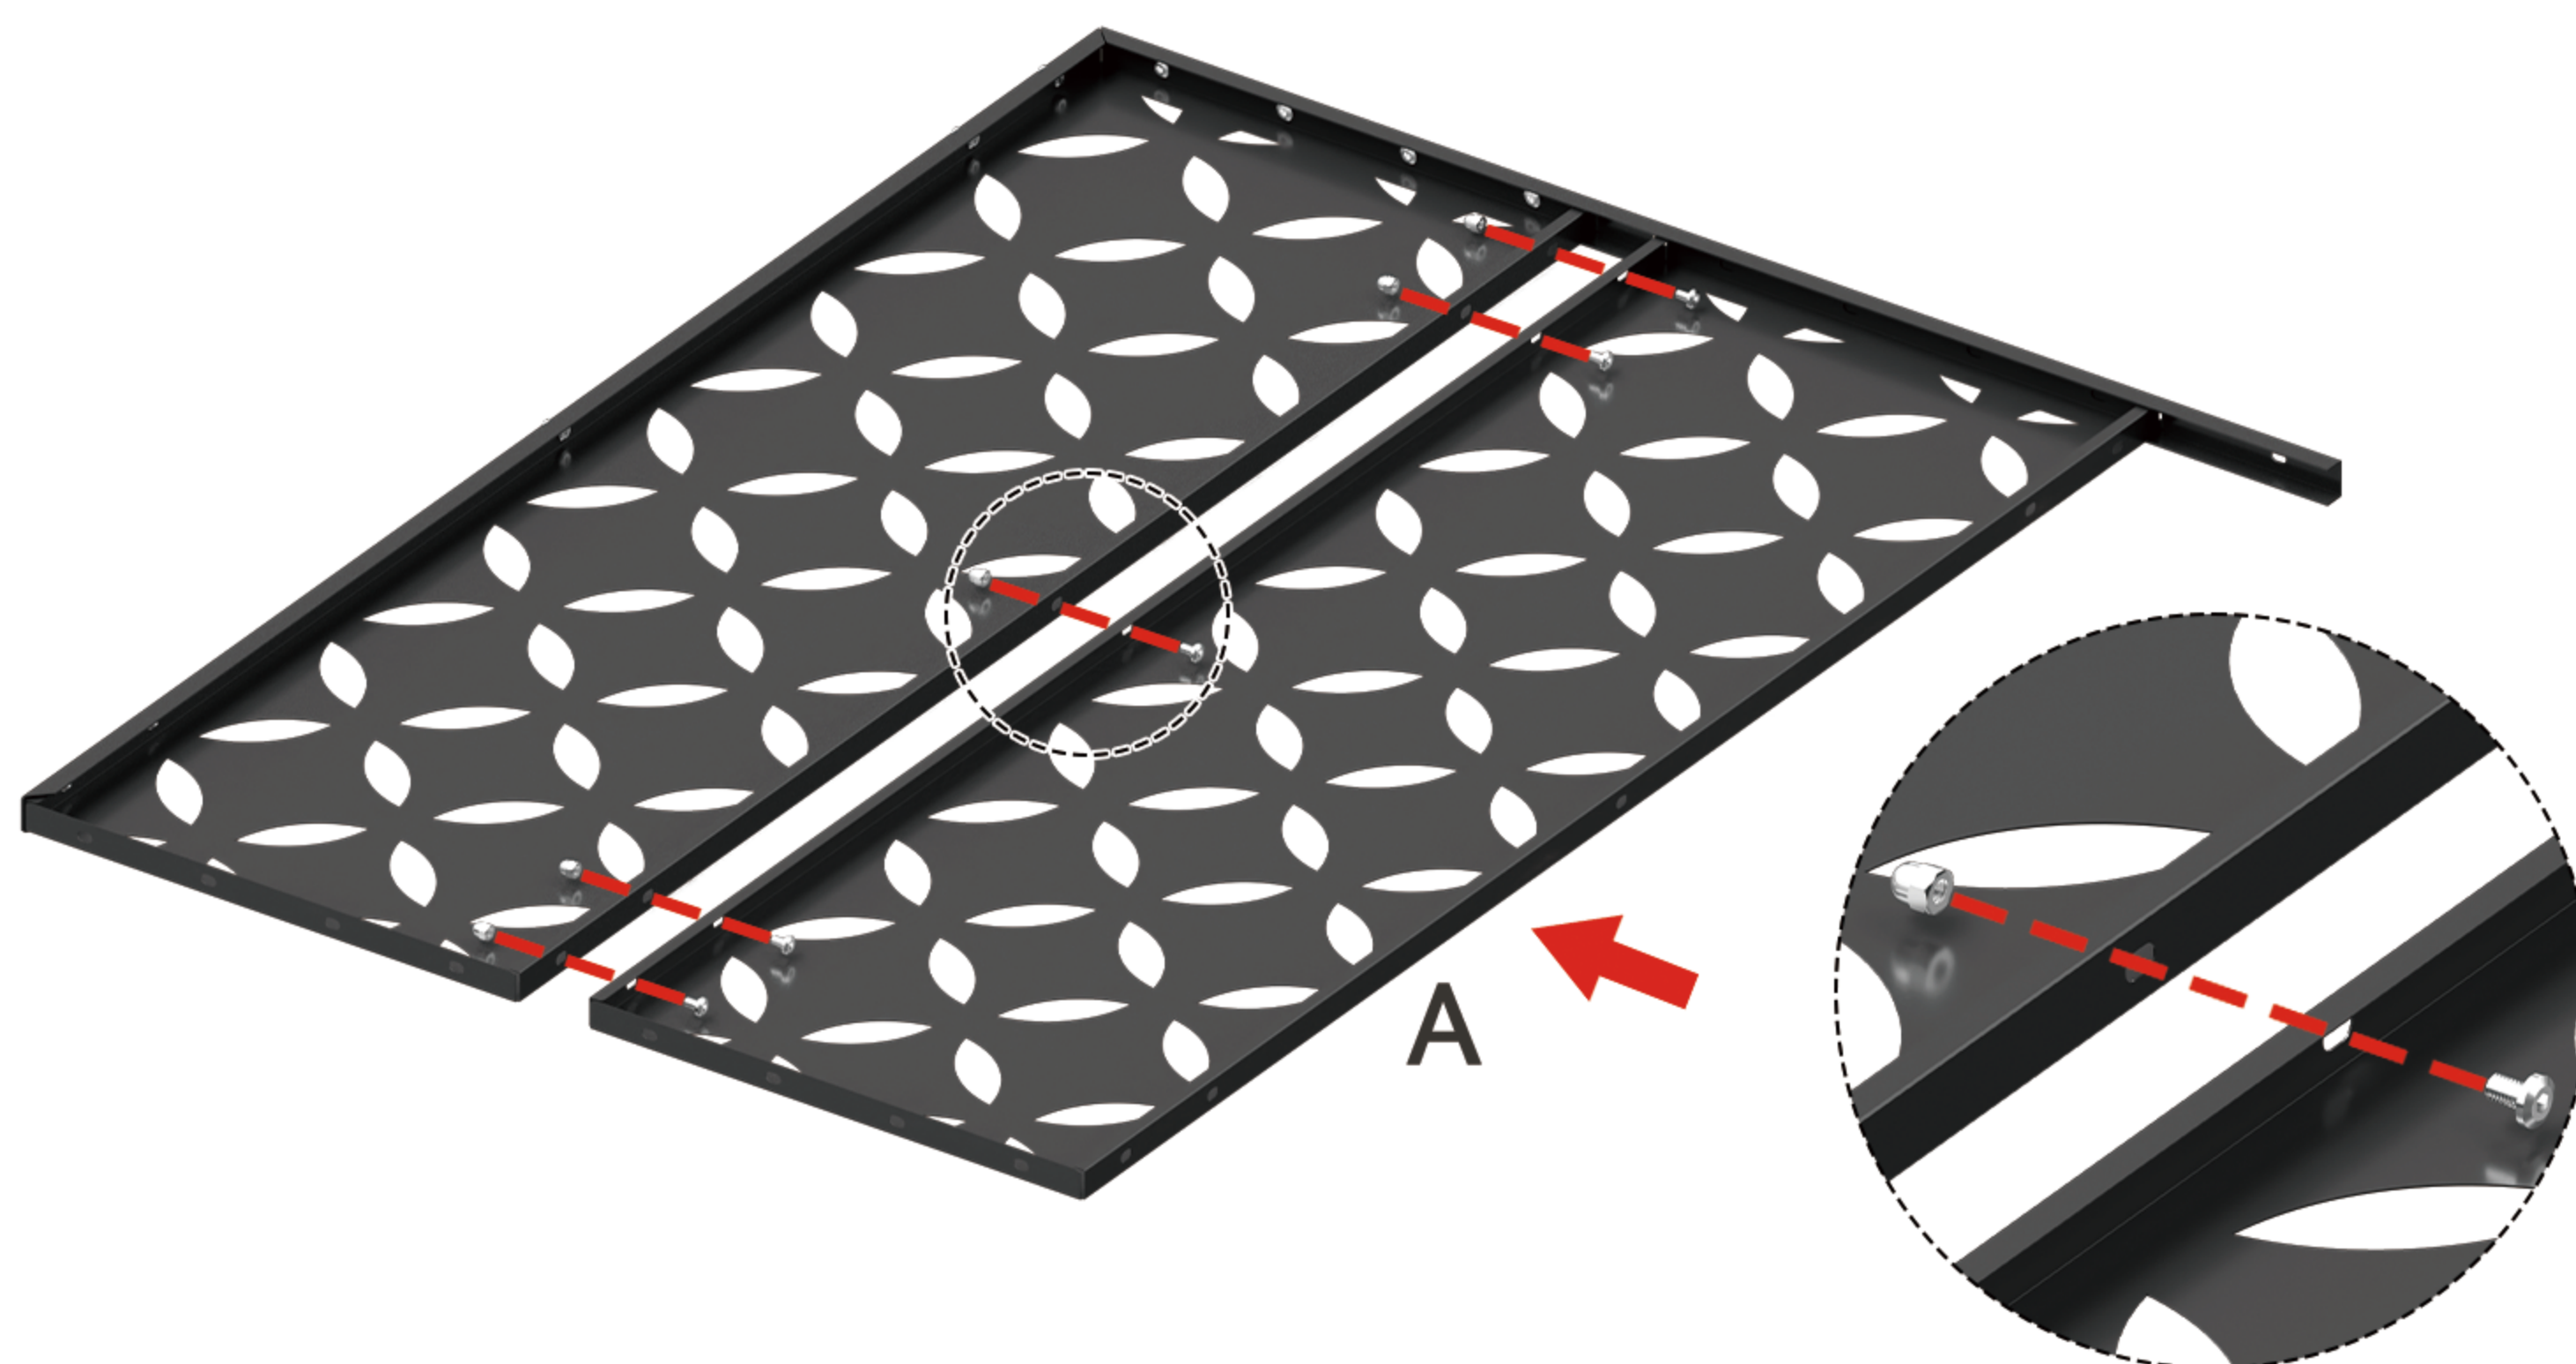

K*11 
L*11 

Install Connecting Rod C


Secure them with screws & nuts (K*11,L*11)

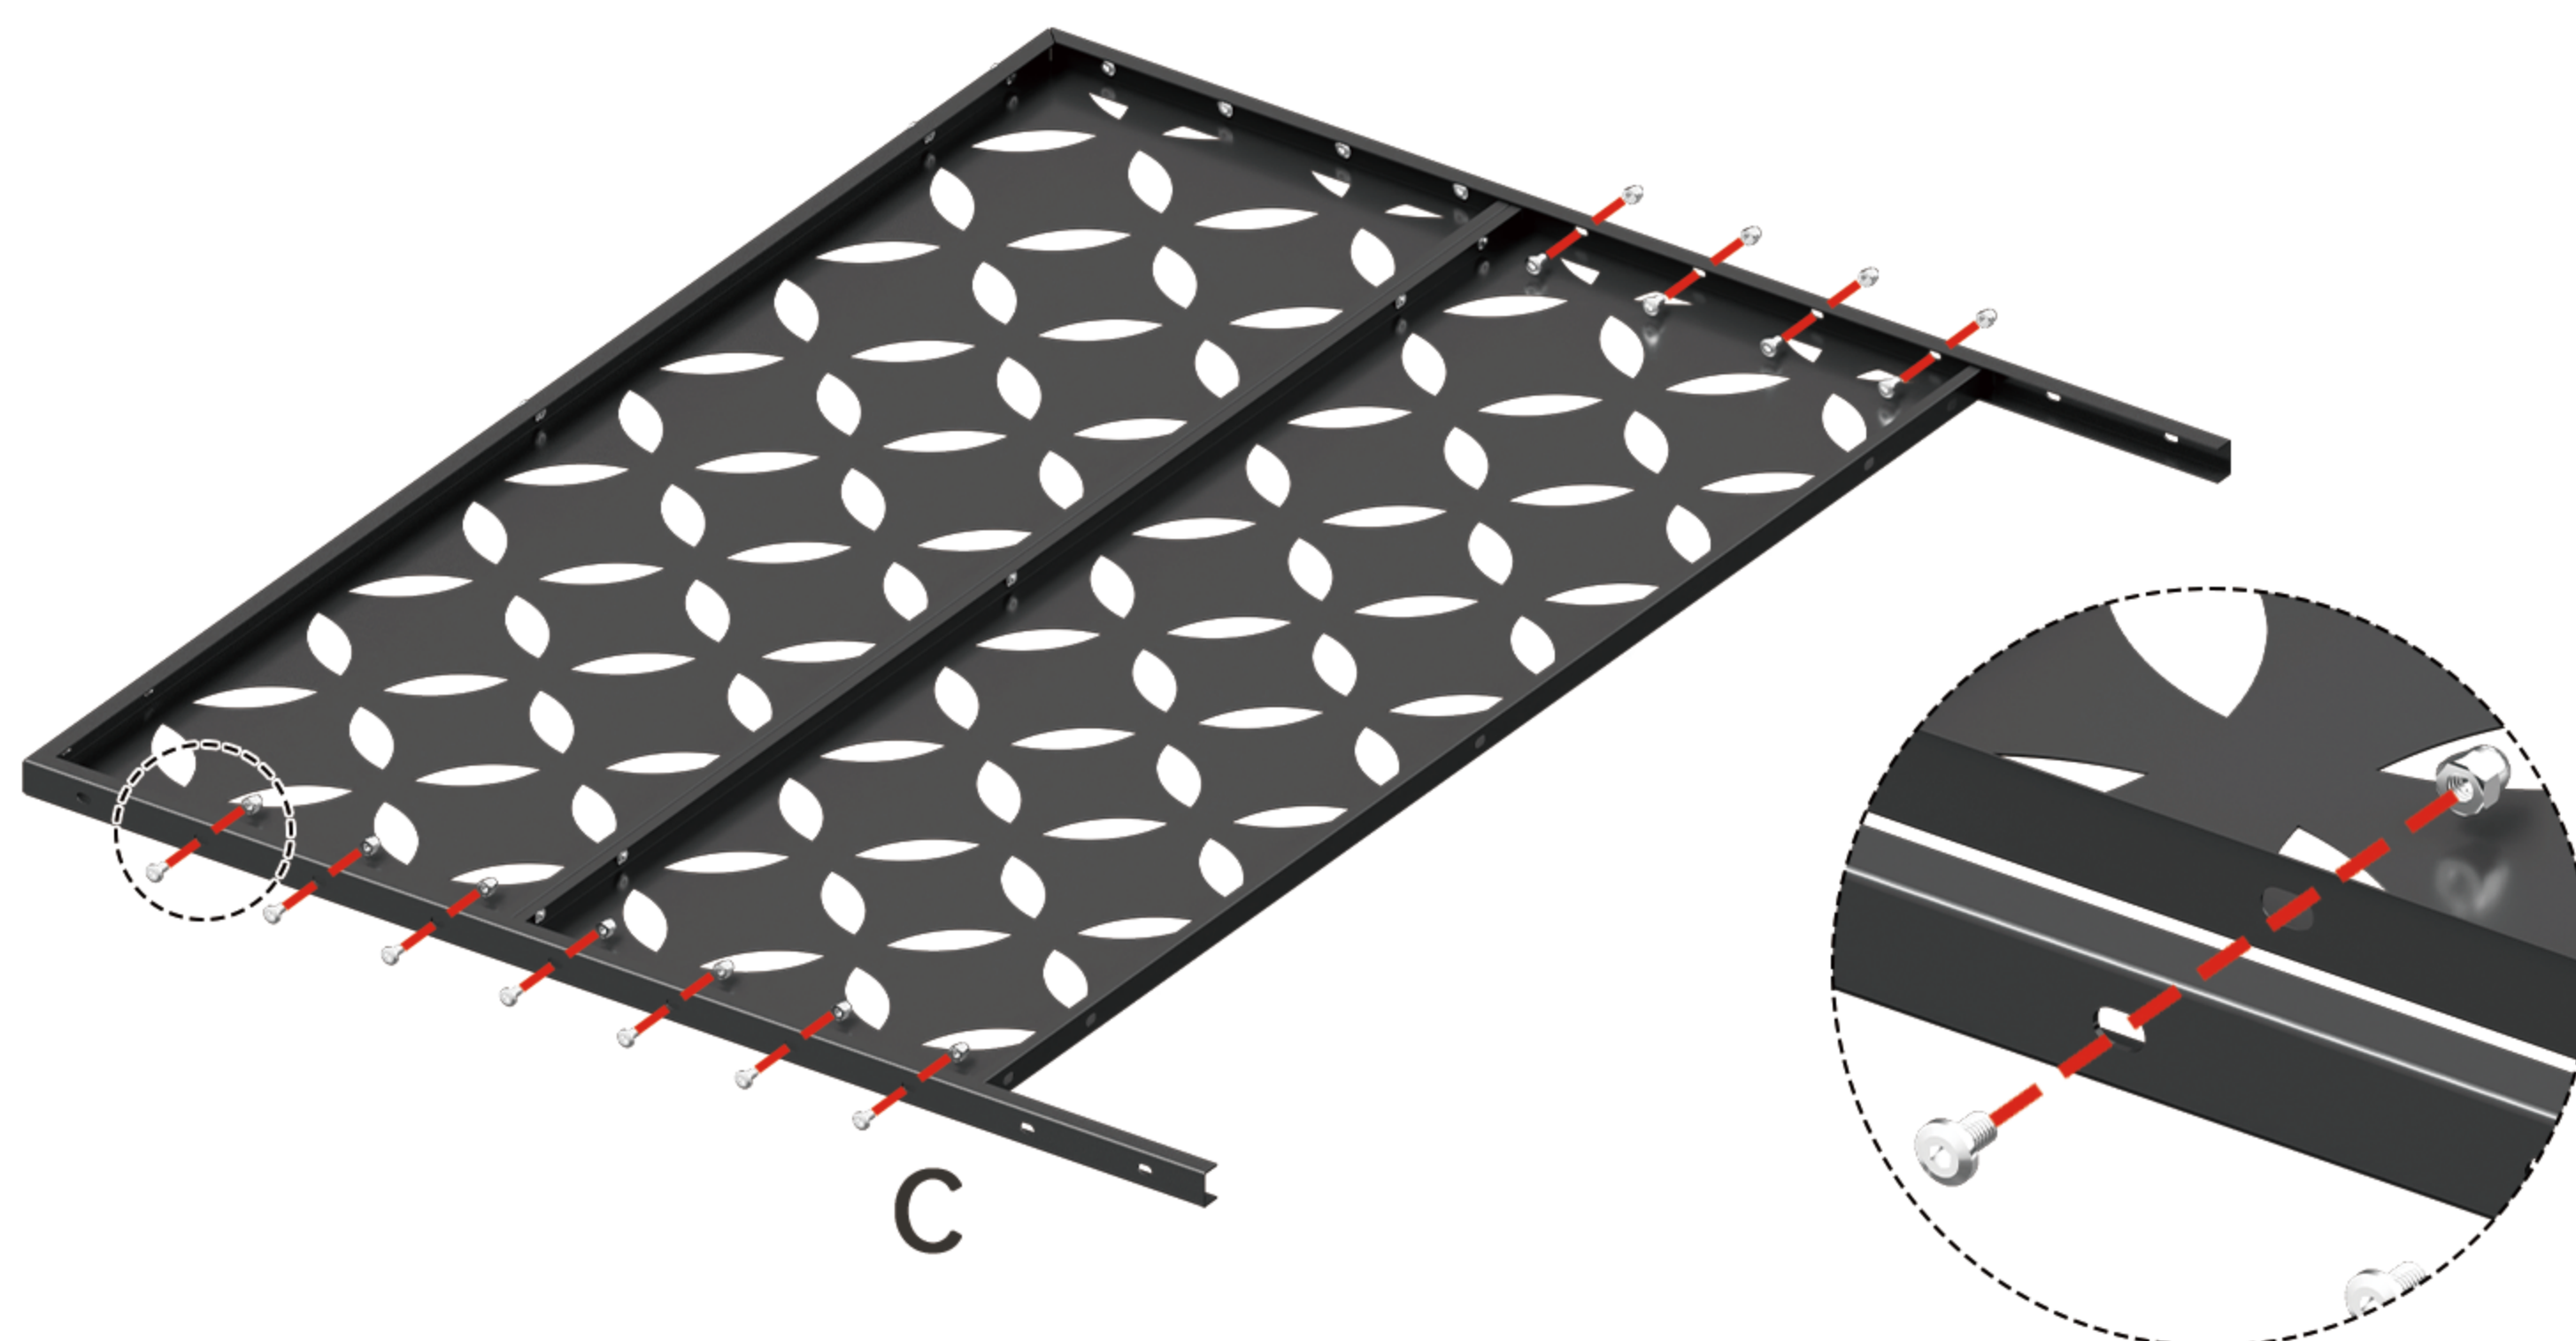

K*5 
L*5 

Install 3rd Screen Panel A

Secure them with screws & nuts (K*5,L*5)

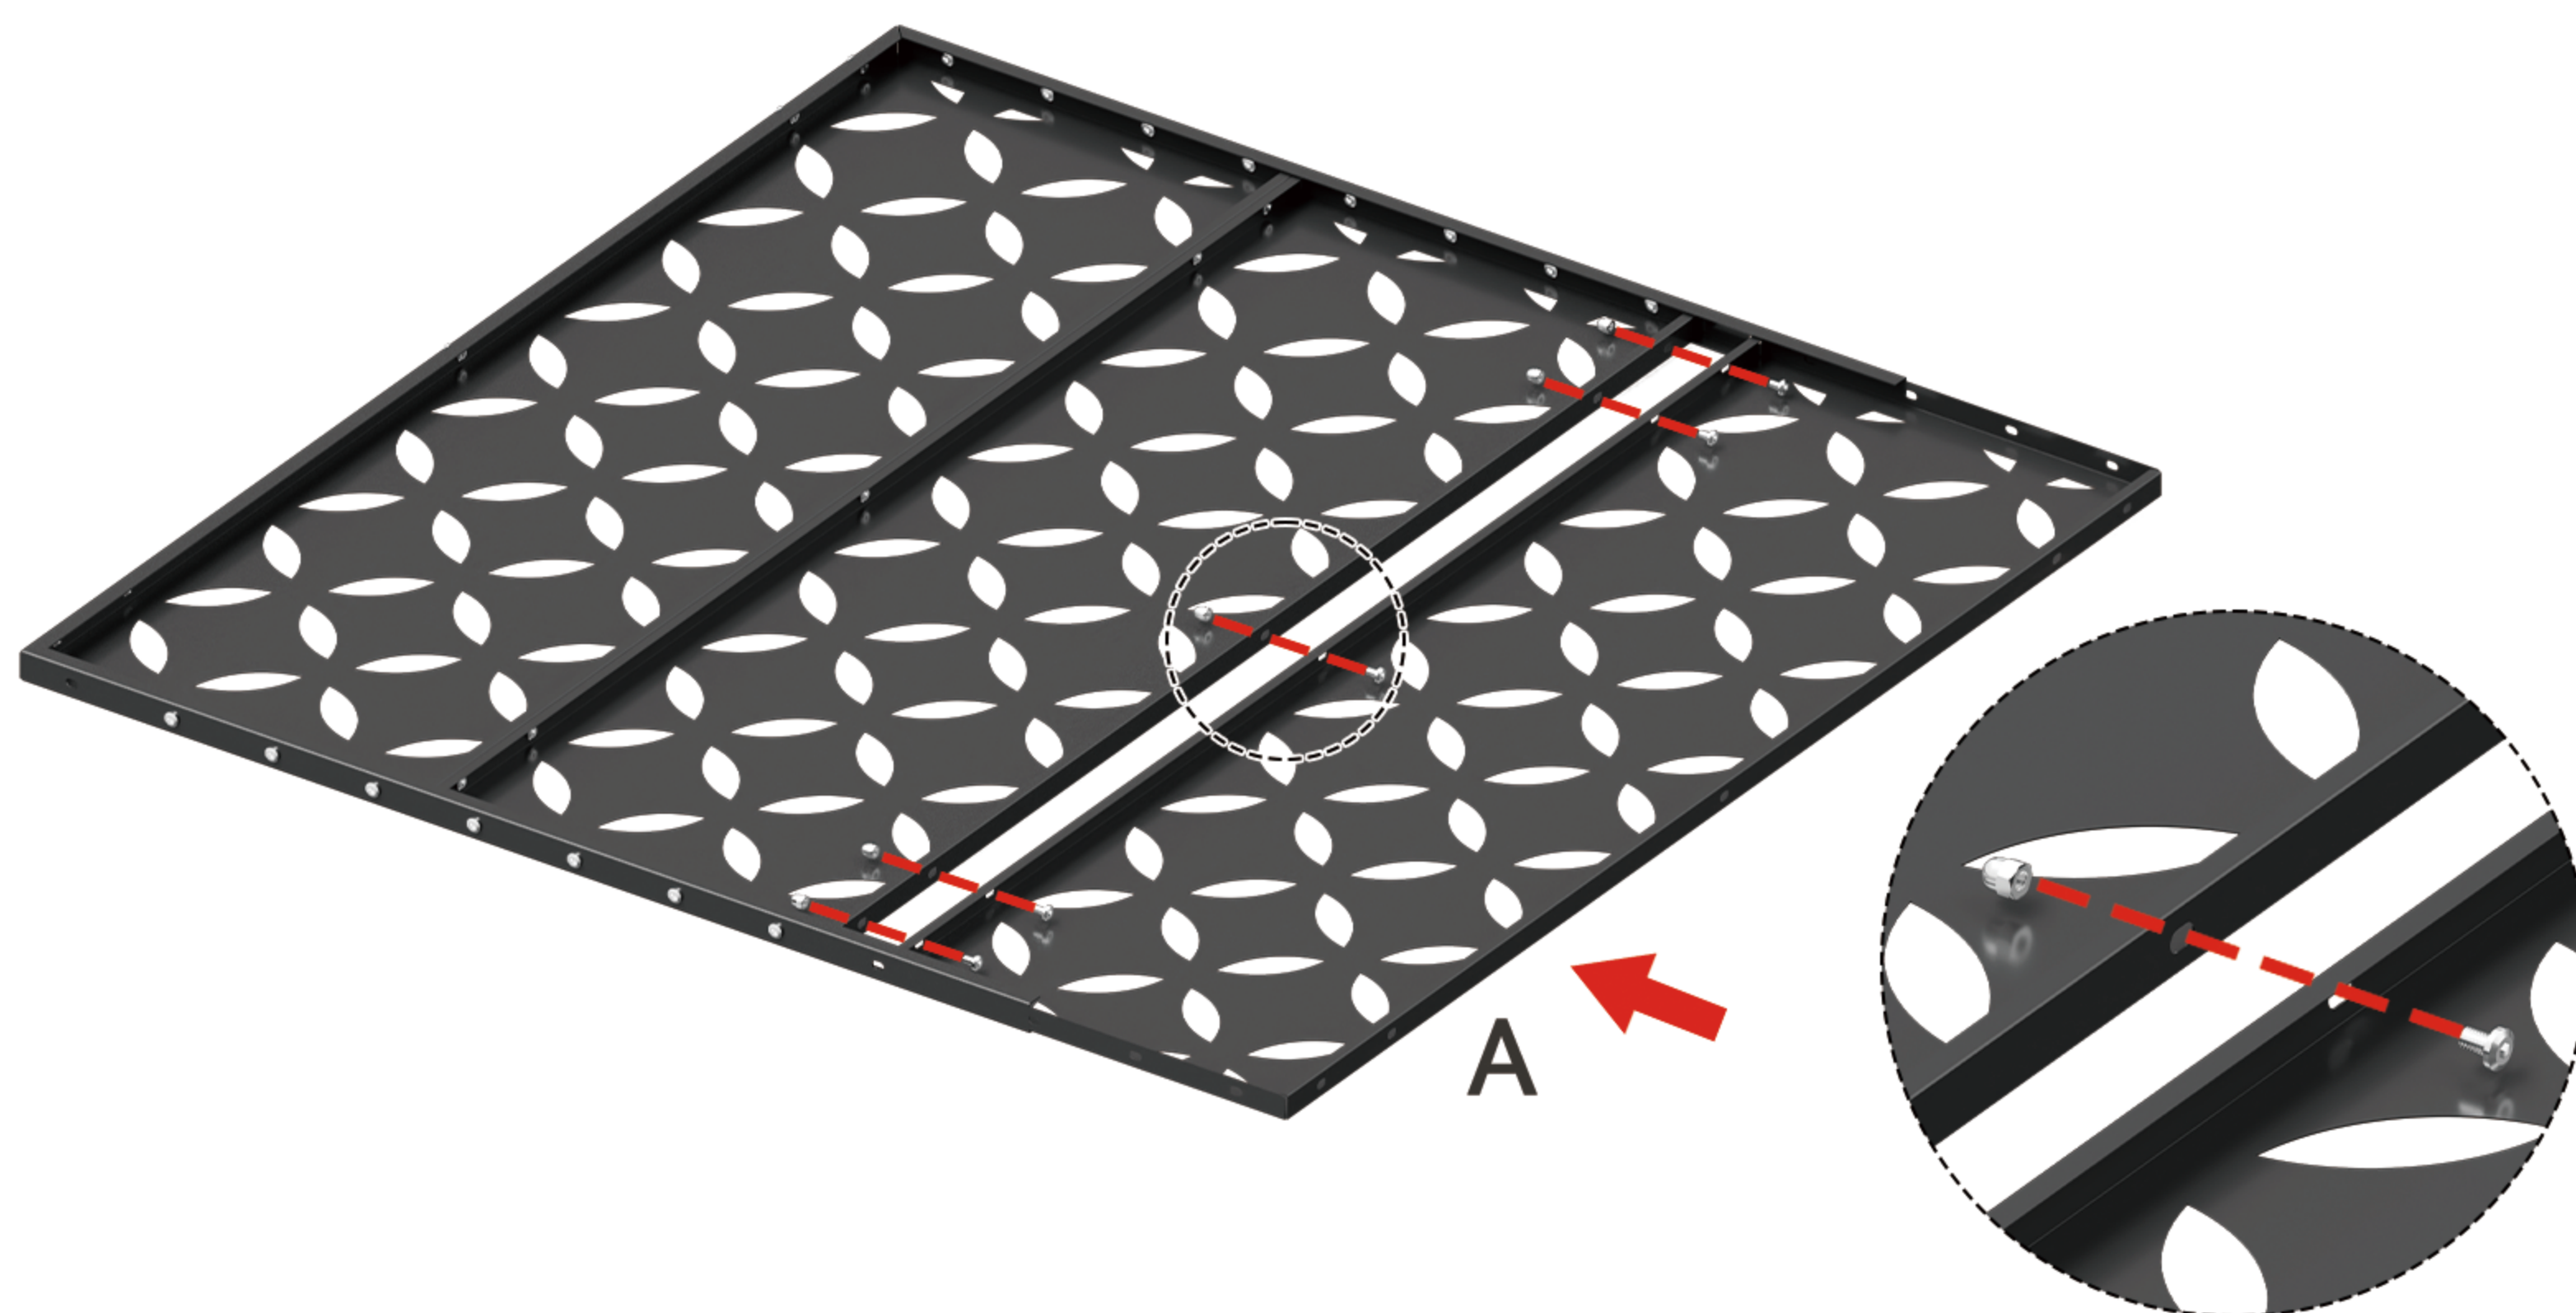


K*4 
L*4 

Install Connector F

Connect part A and C with screws & nuts(K*2,L*2)


Align the holes on part F, A and C,
then secure screws & nuts(K*2,L*2).

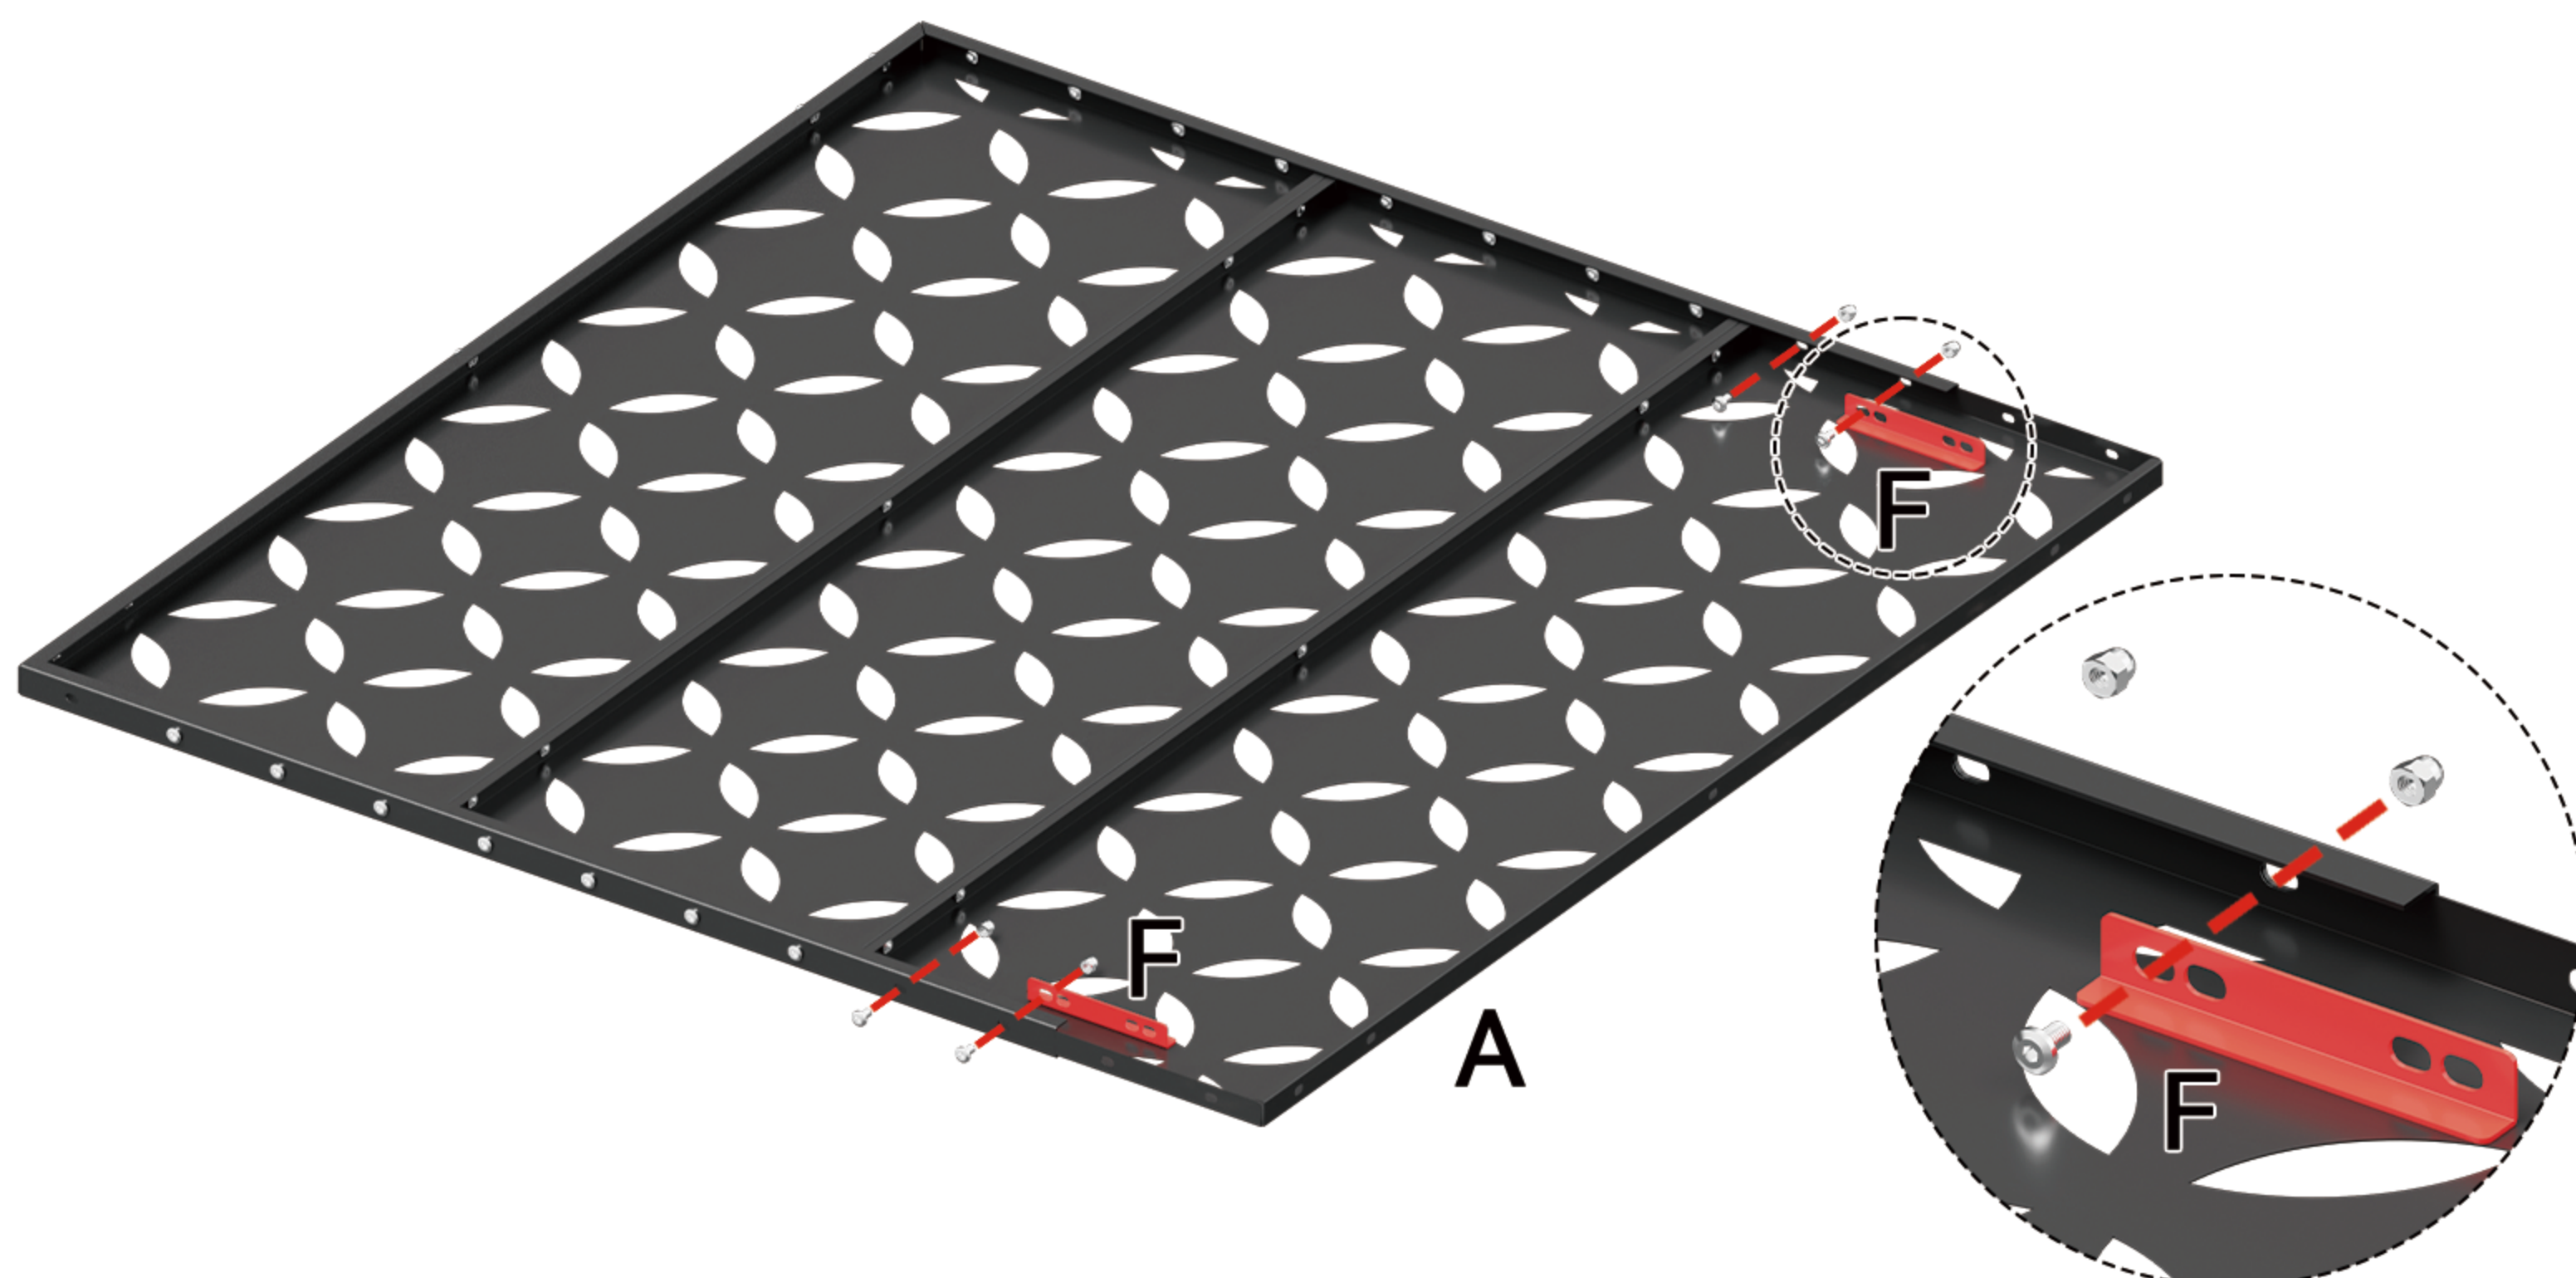

K*4 
L*4 

Install Connecting Rod C


Align the holes on part F, A and C,
Secure them with Screws & Nuts(K*4,L*4)

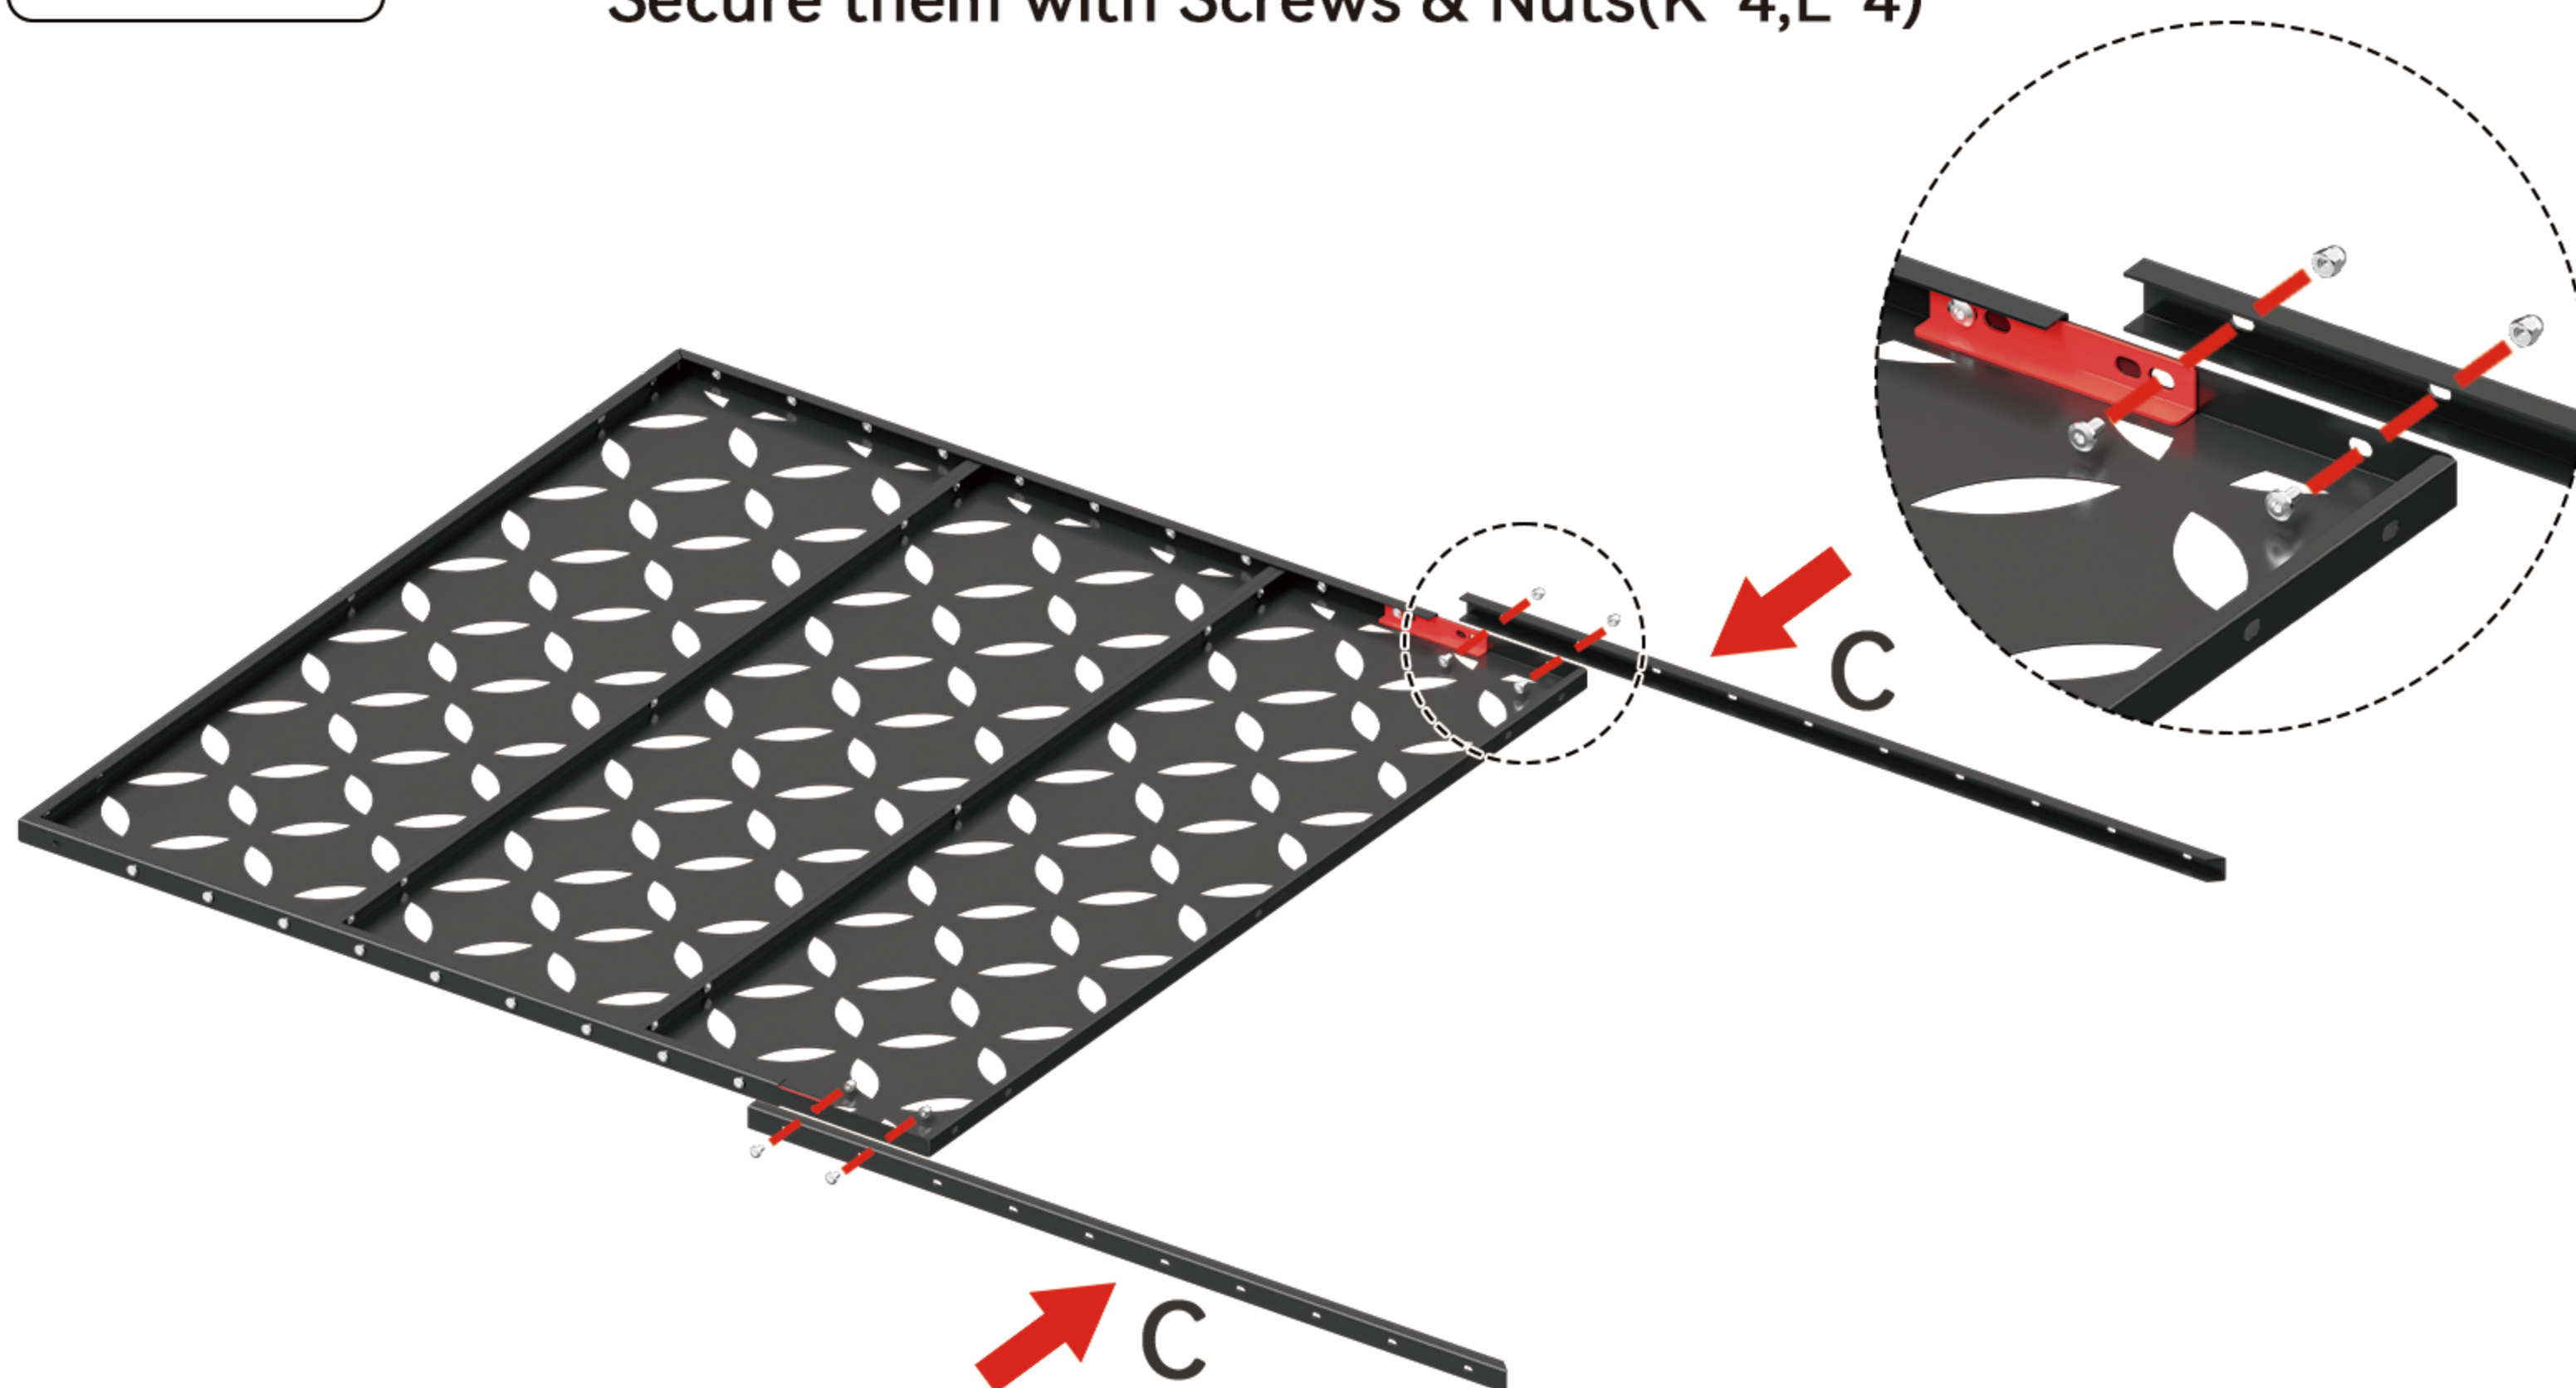

K*5 
L*5 

Install 4th Screen Panel A


Secure them with screws & nuts (K*5,L*5)

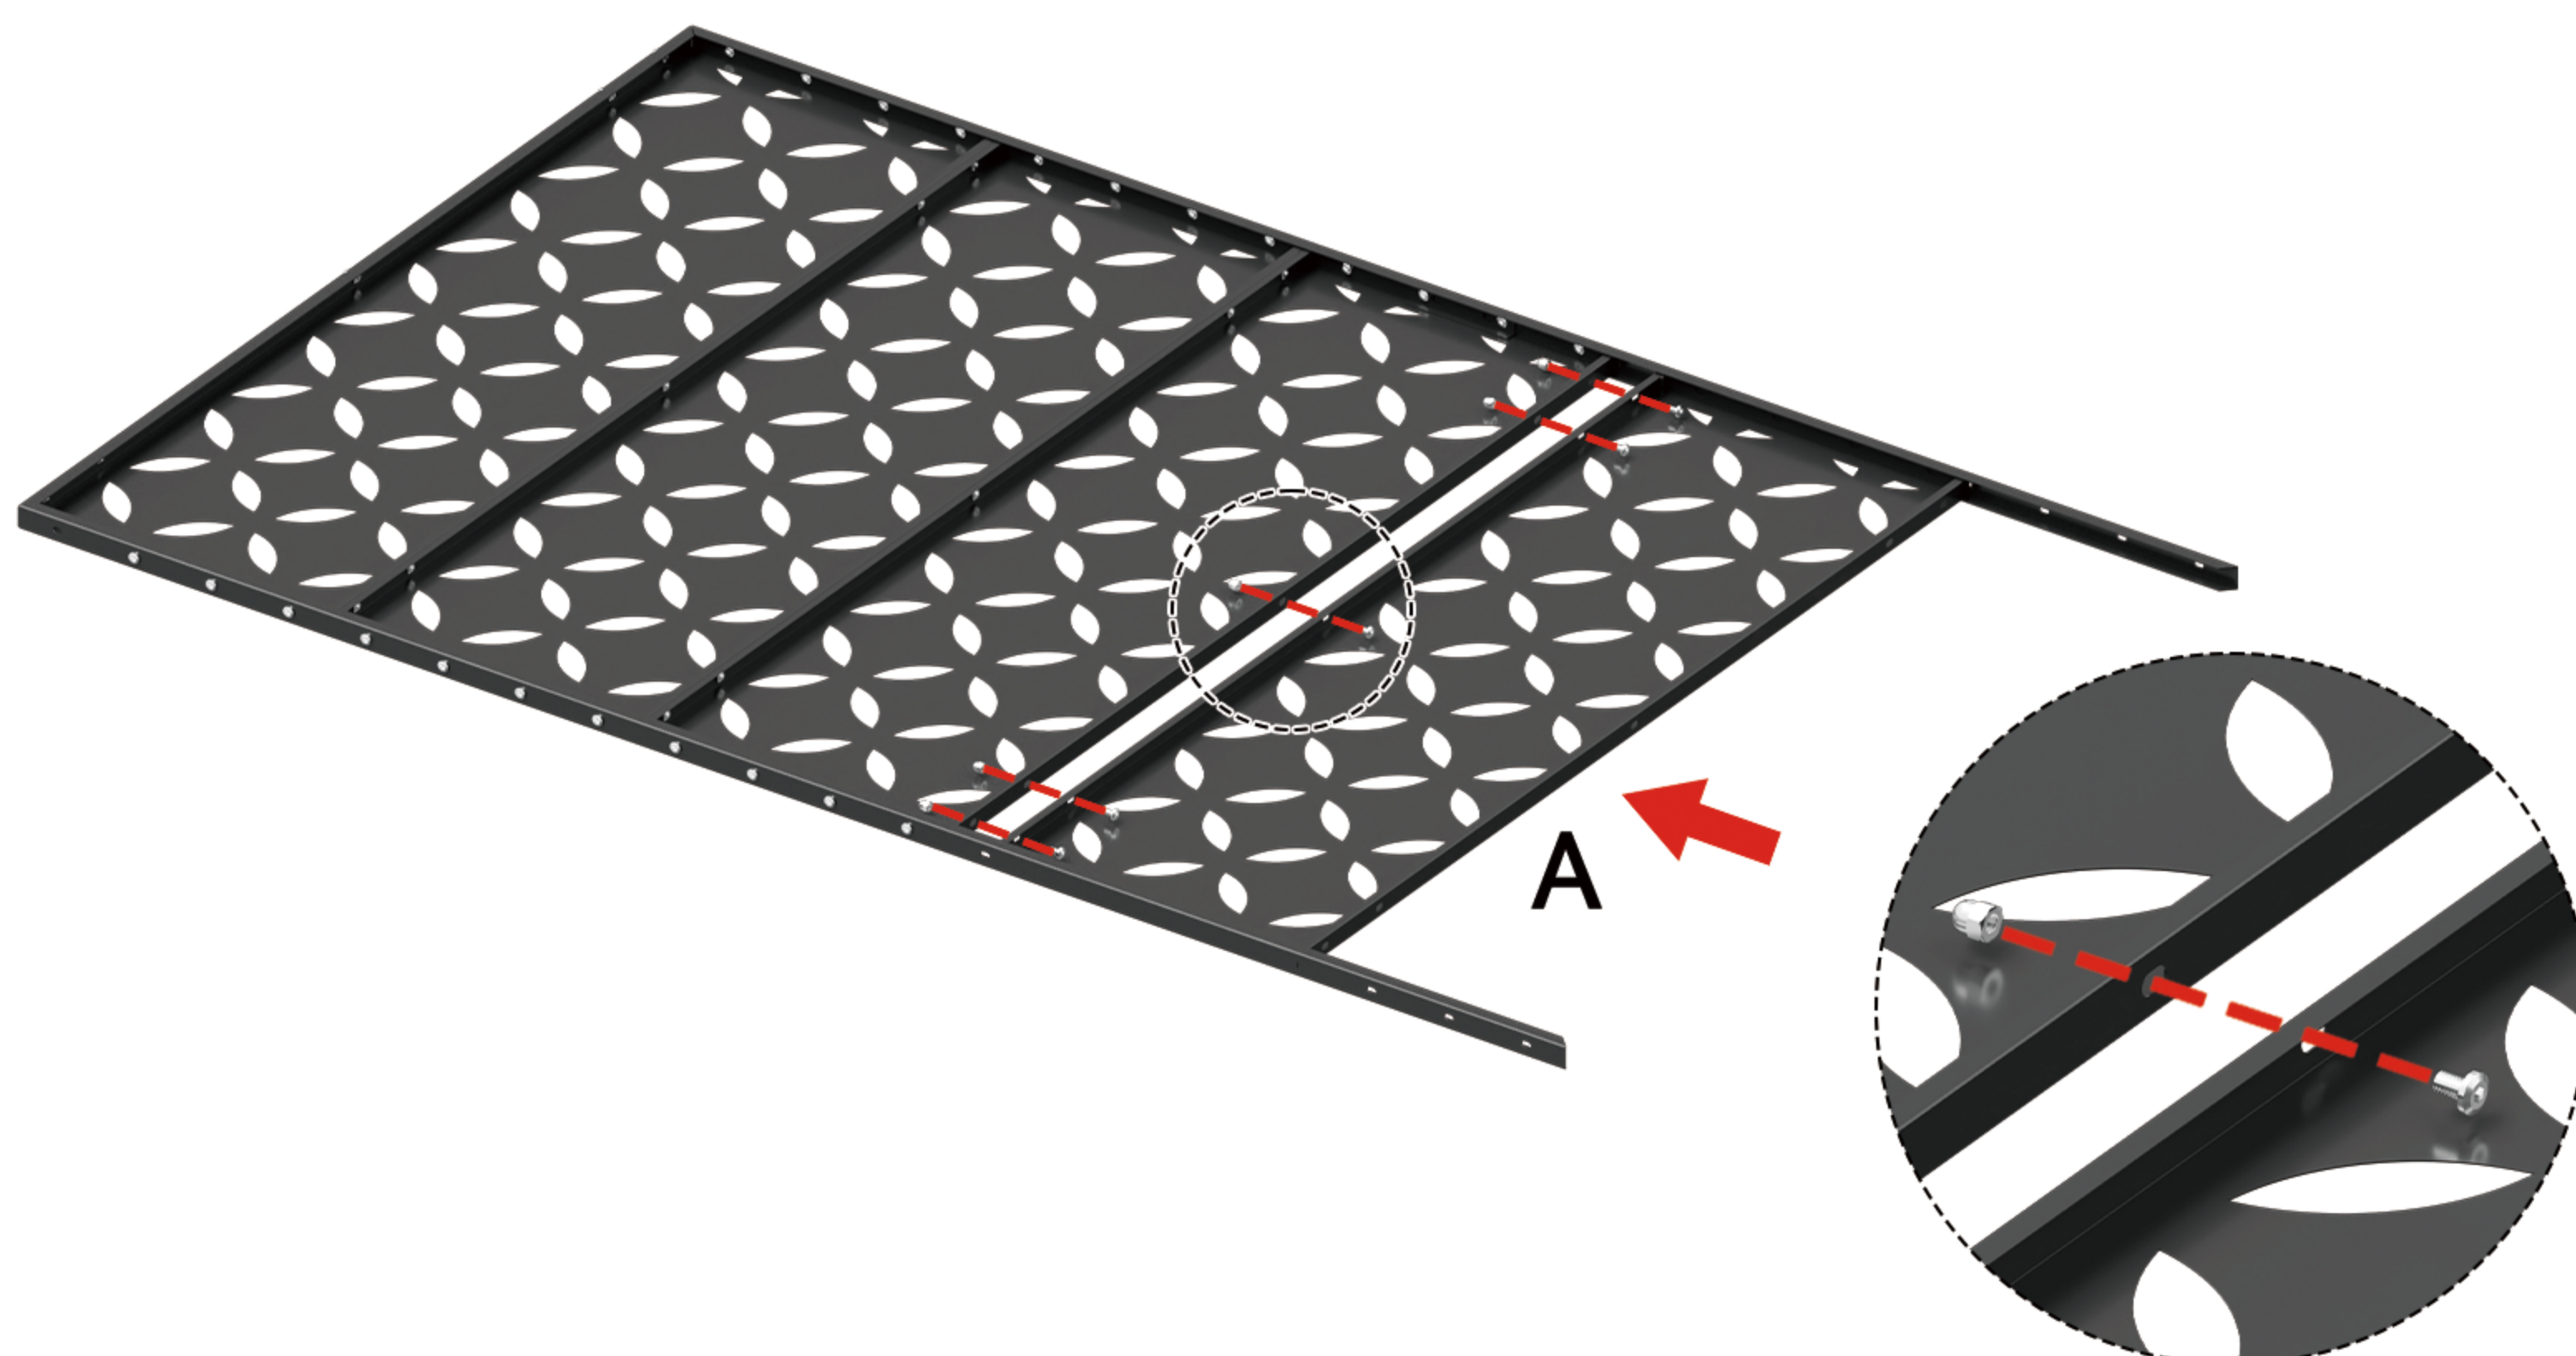

K*8 
L*8 

Connect Part C and 4th Panel A


Secure them with screws and nuts(K*8,L*8)

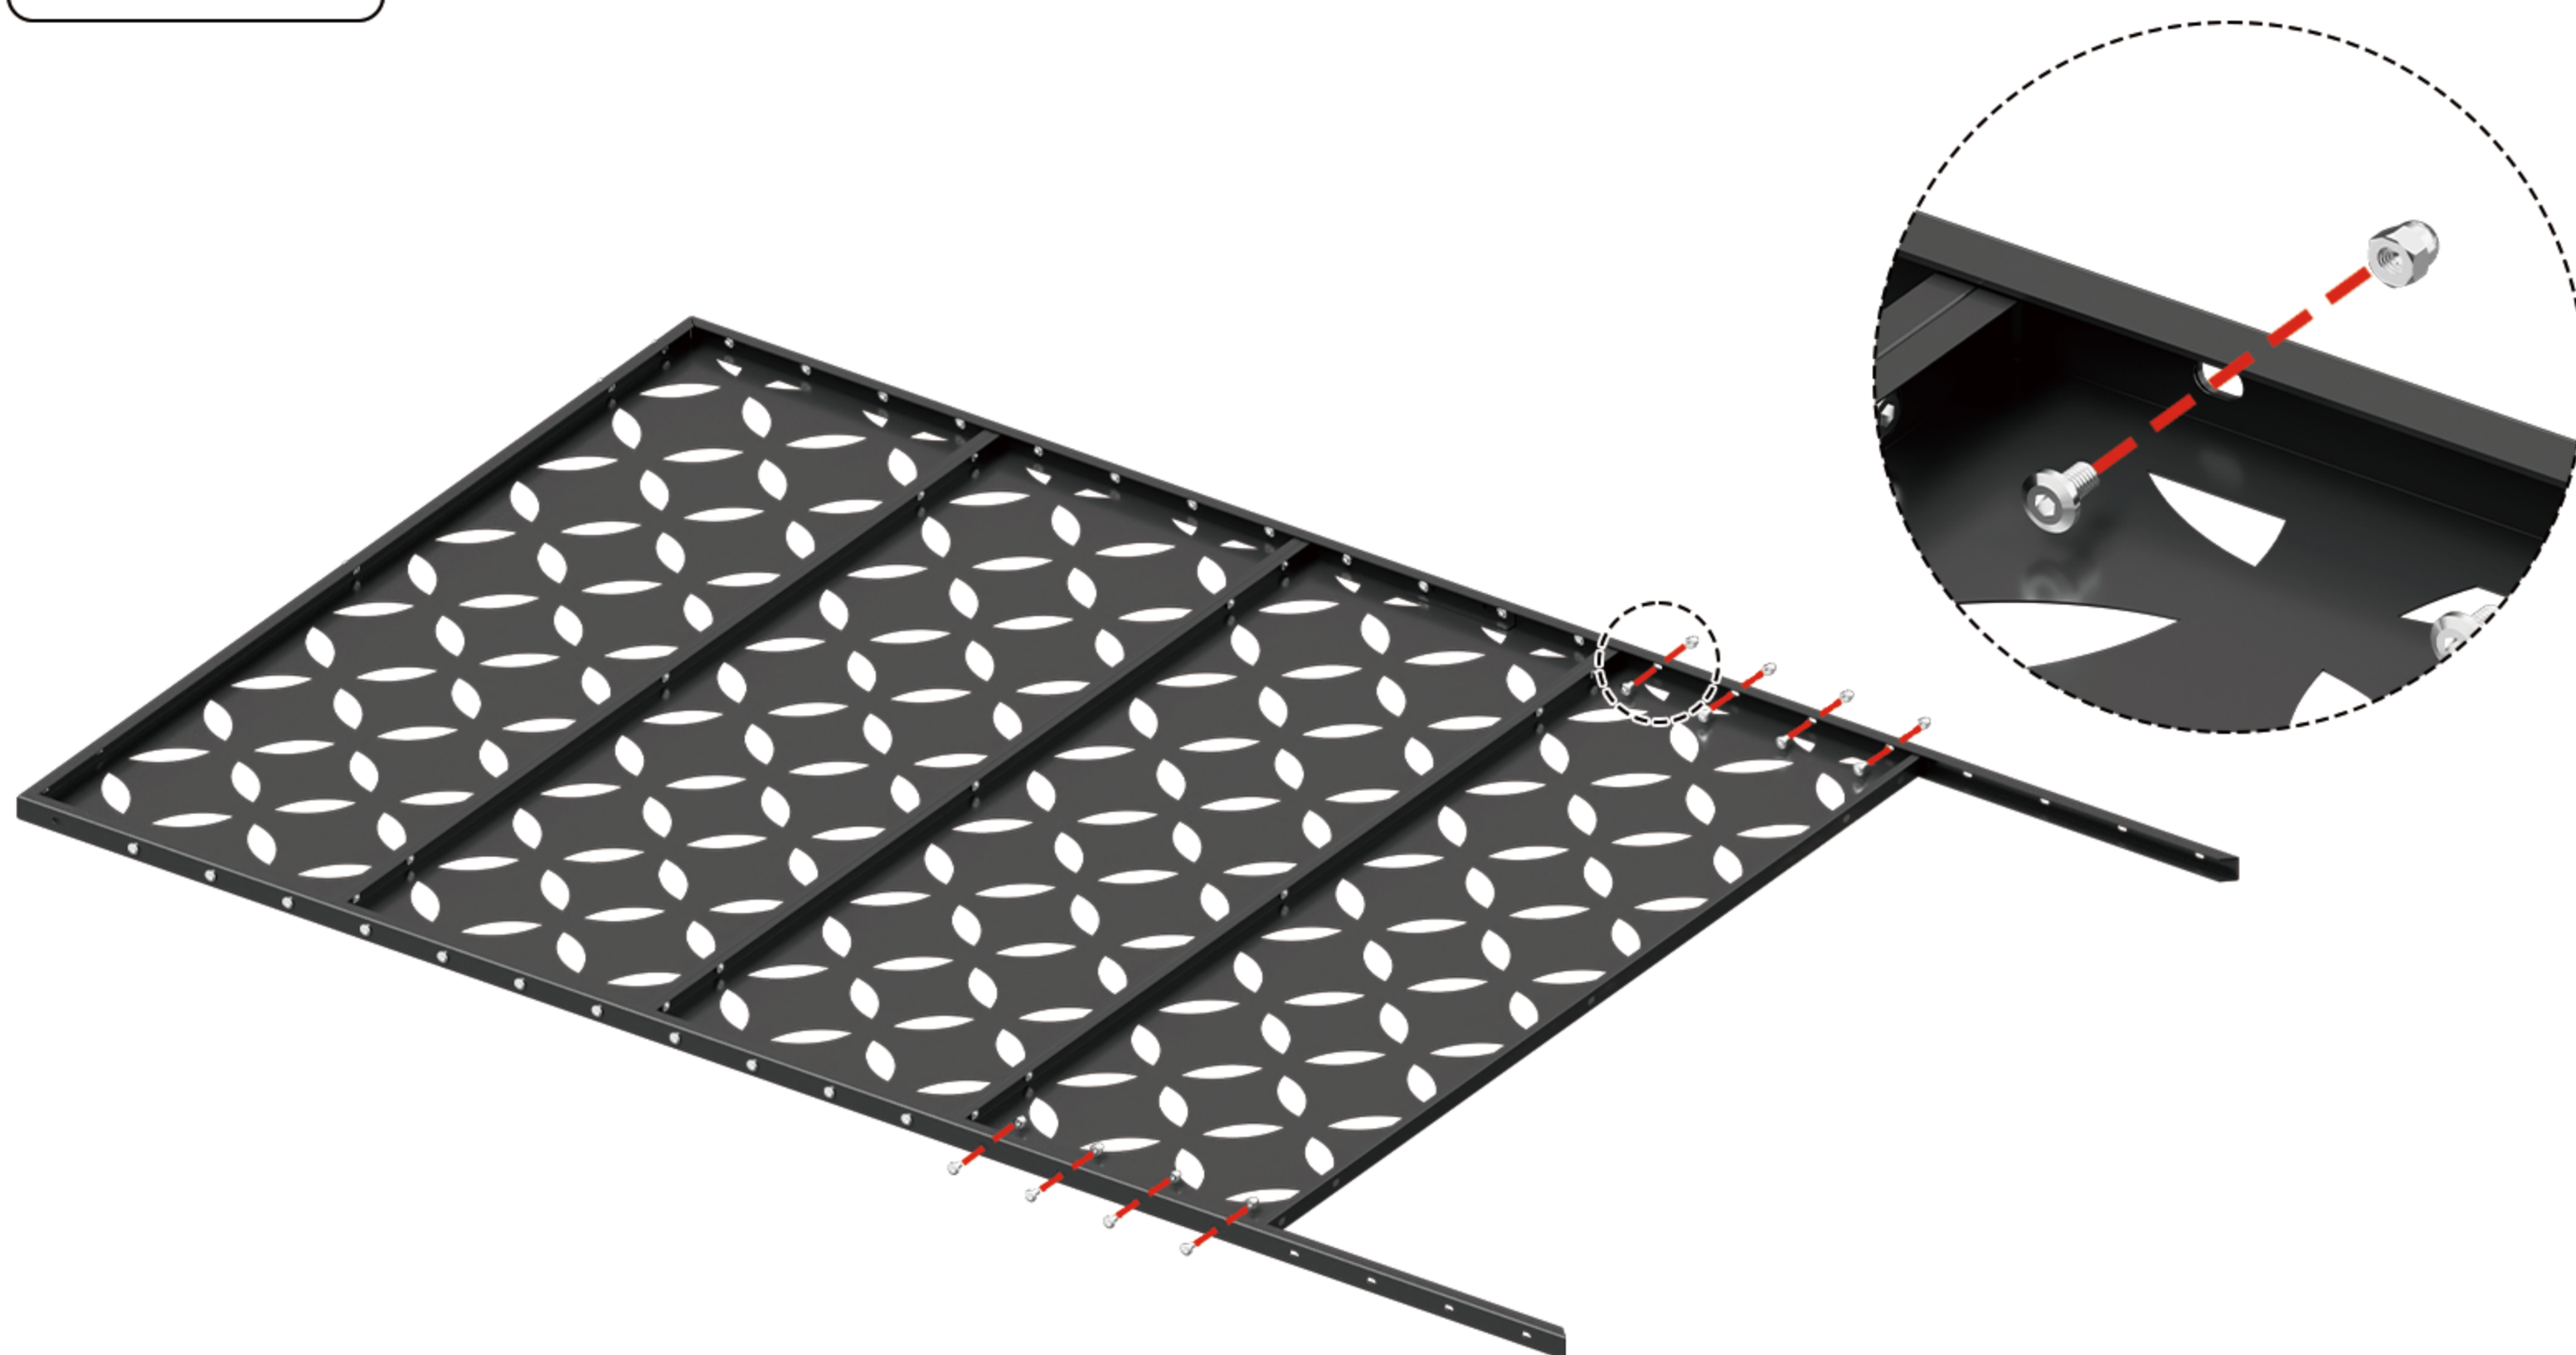

K*5 
L*5 

Install 5th Screen Panel A

Secure them with screws & nuts (K*5,L*5)

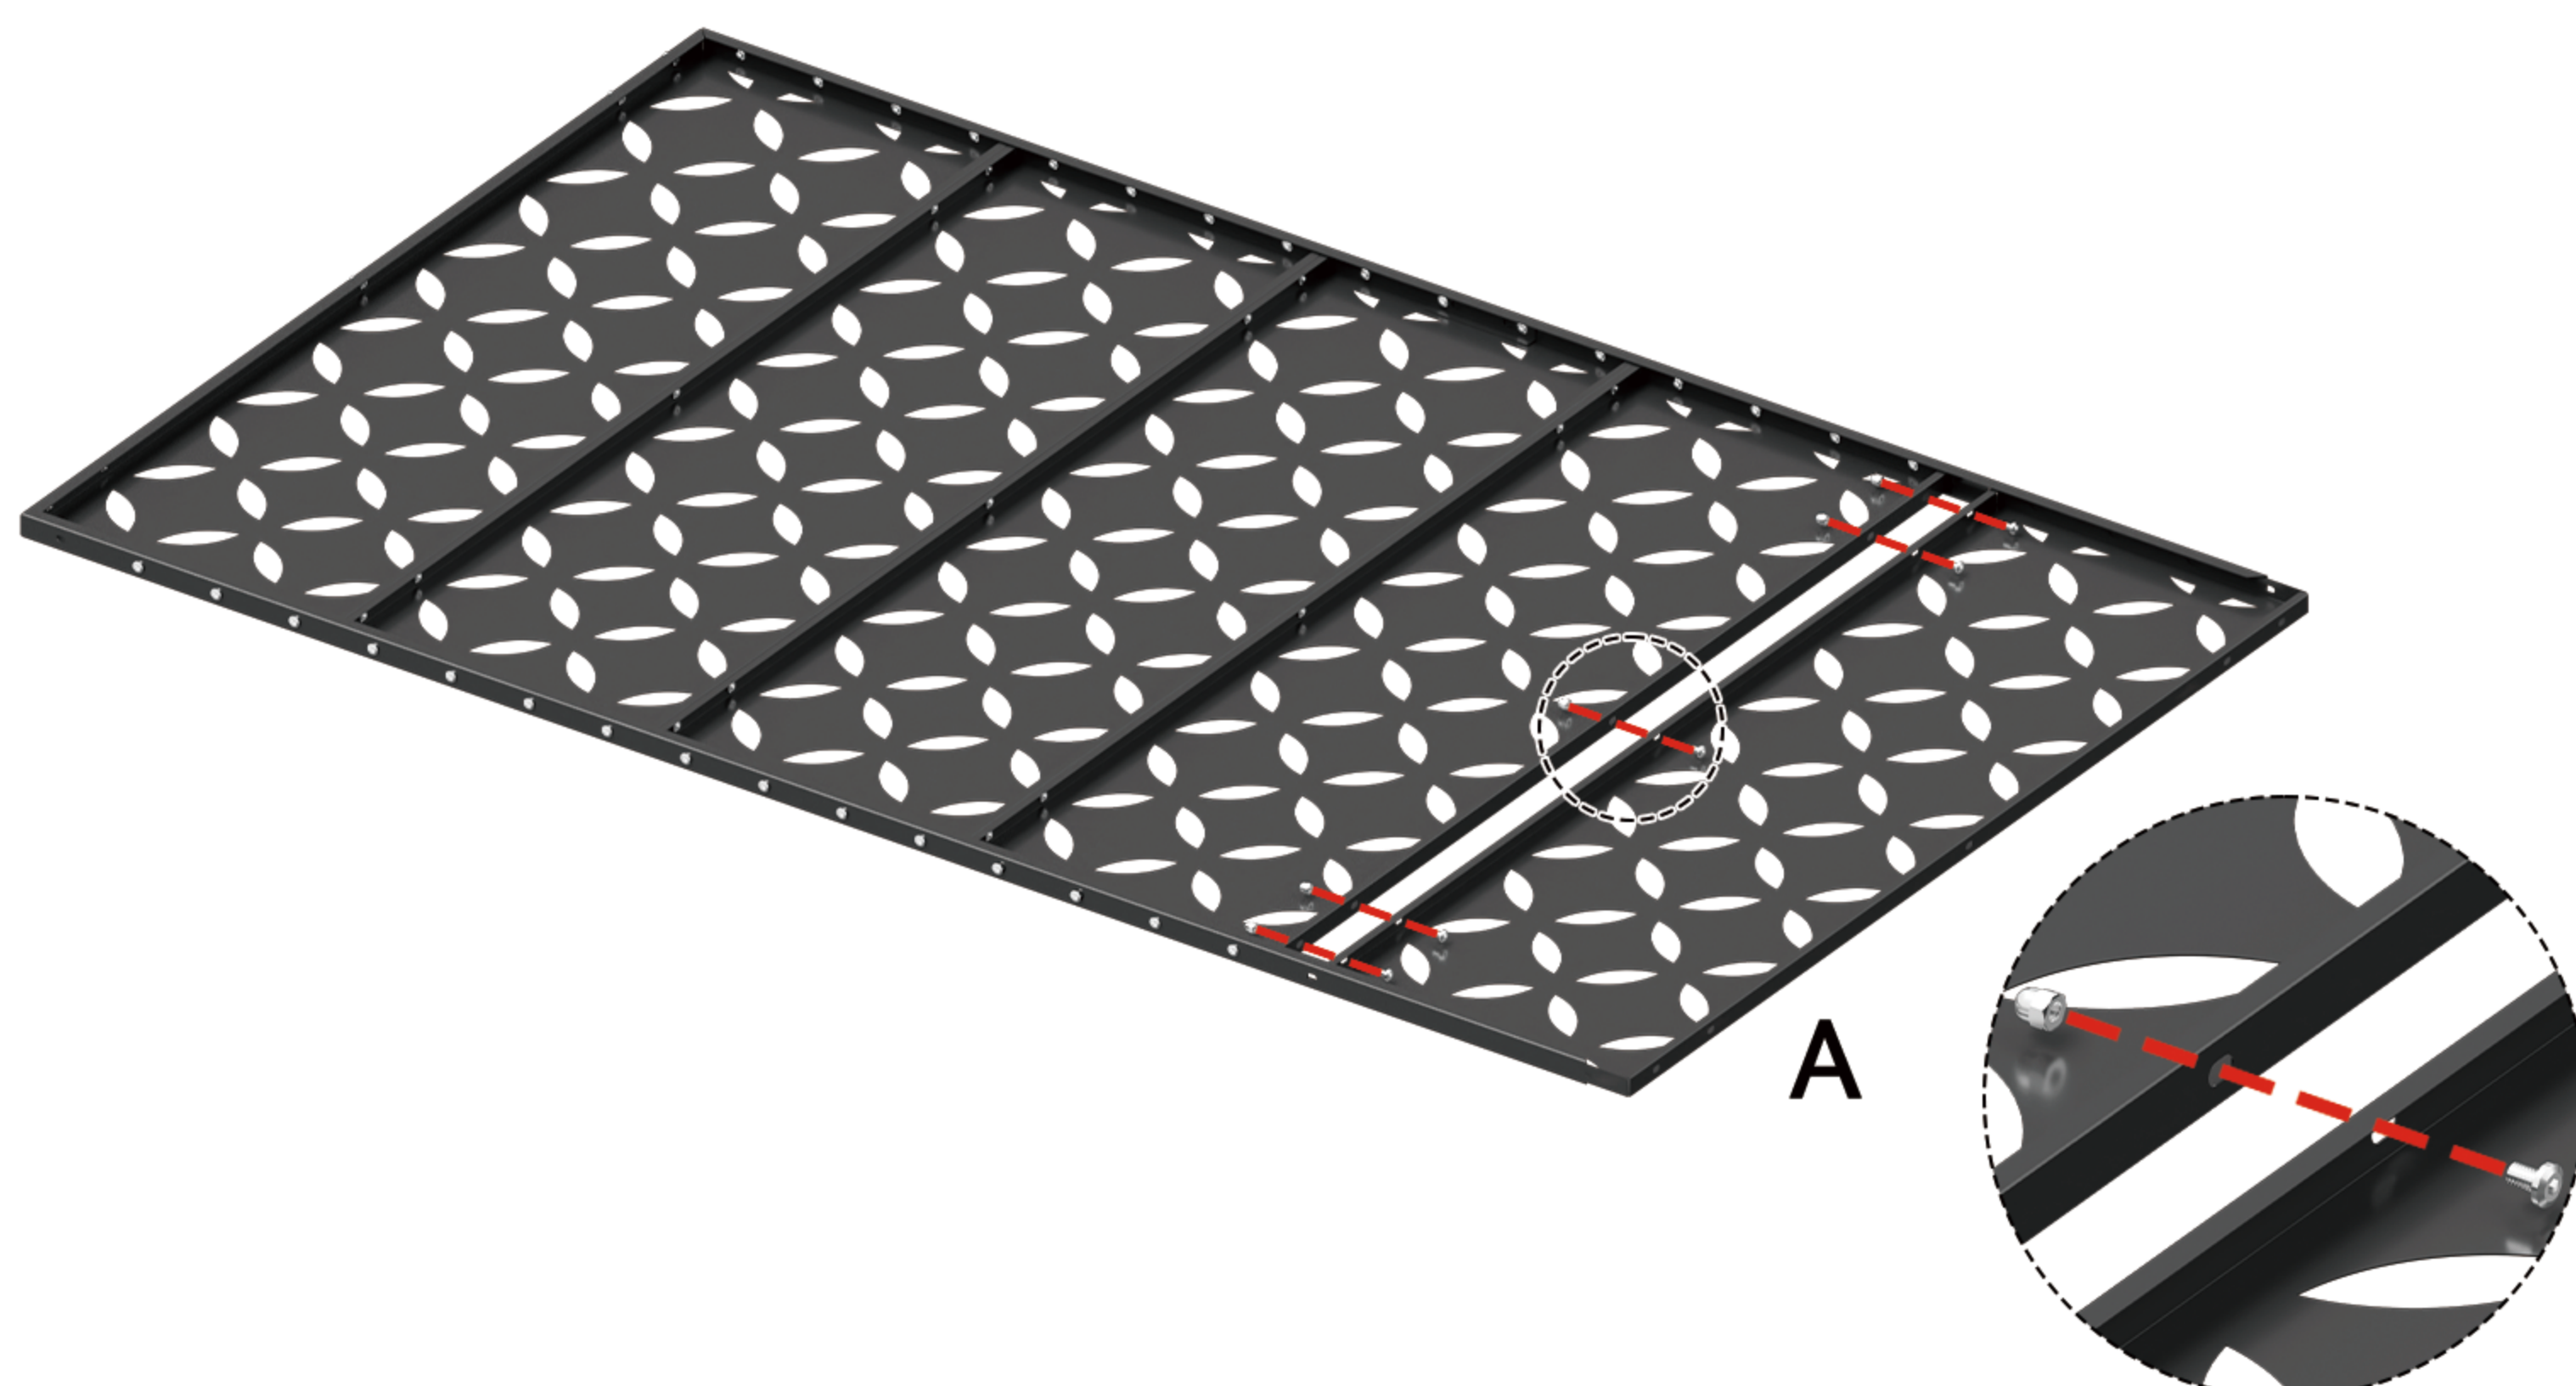

K*7




L*7



Connect Part C and 5th Panel A

Secure them with screws and nuts (K*7,L*7)

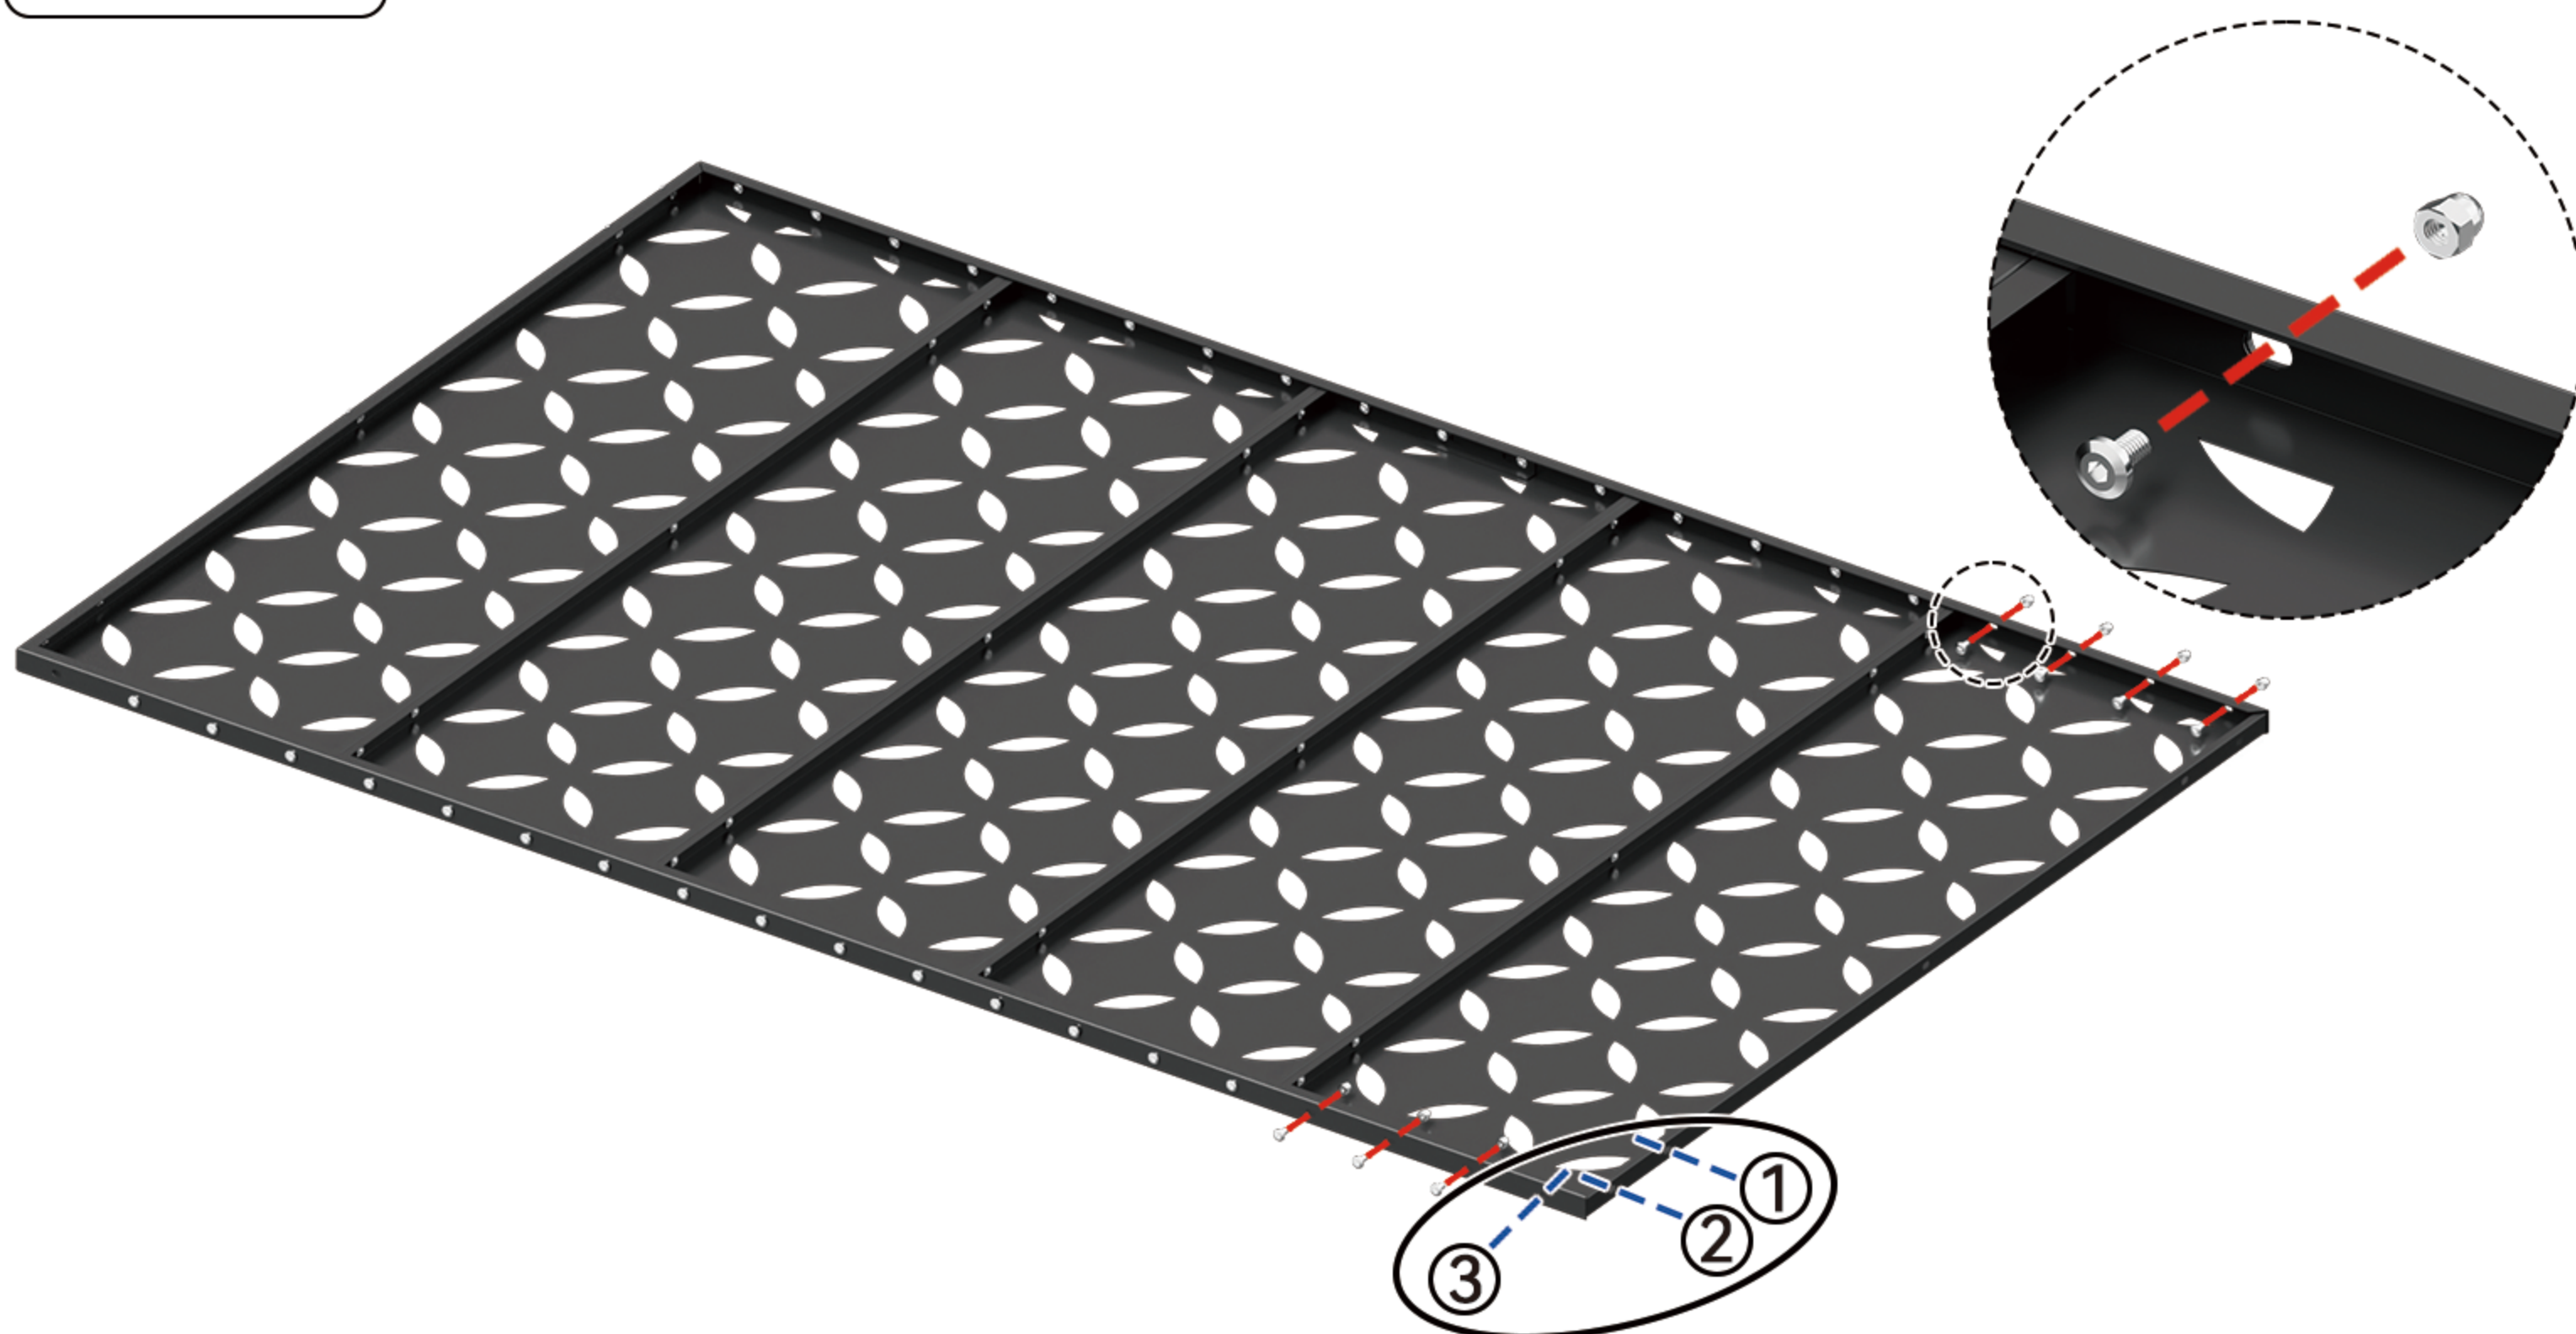

Do not install screws in holes ①, ②, ③ for now.

K*3





L*3



Connect Vertical Post B to Panel A

Secure them with screws and nuts (K*3,L*3)

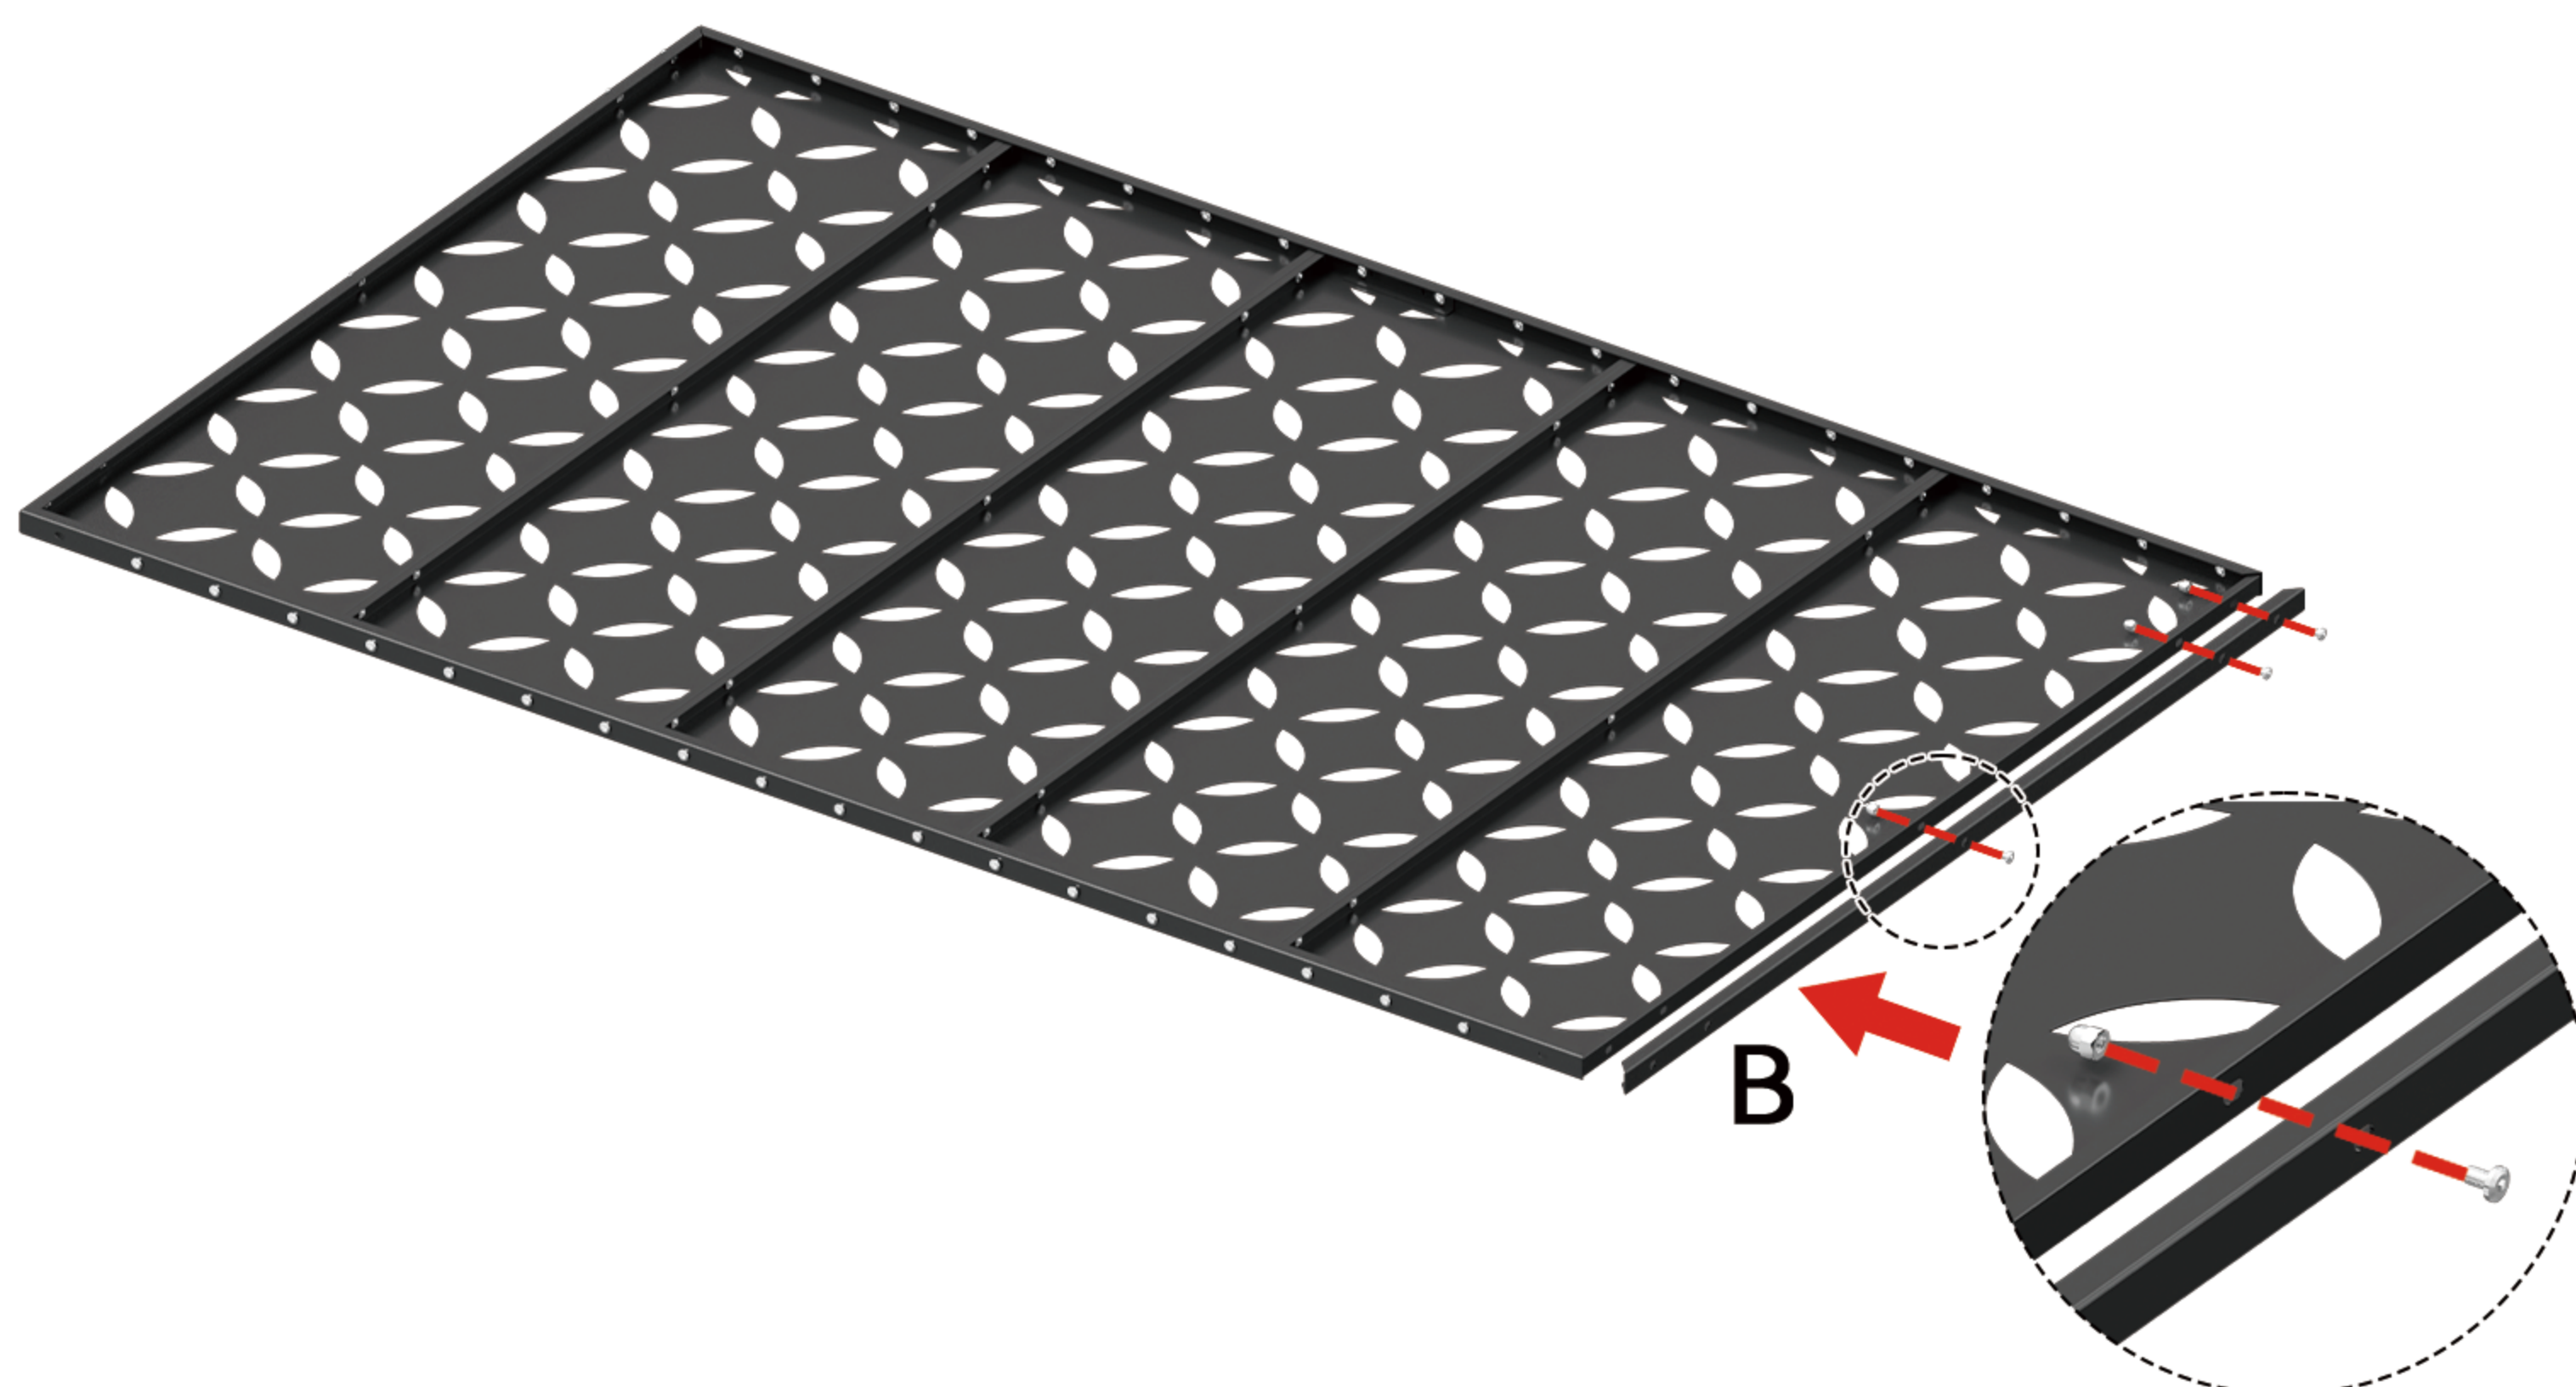


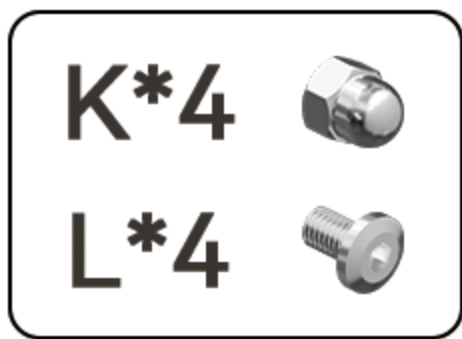

Install Part E

Connect the assembled frame to part E


Secure them with screws & nuts(K*4,L*4)

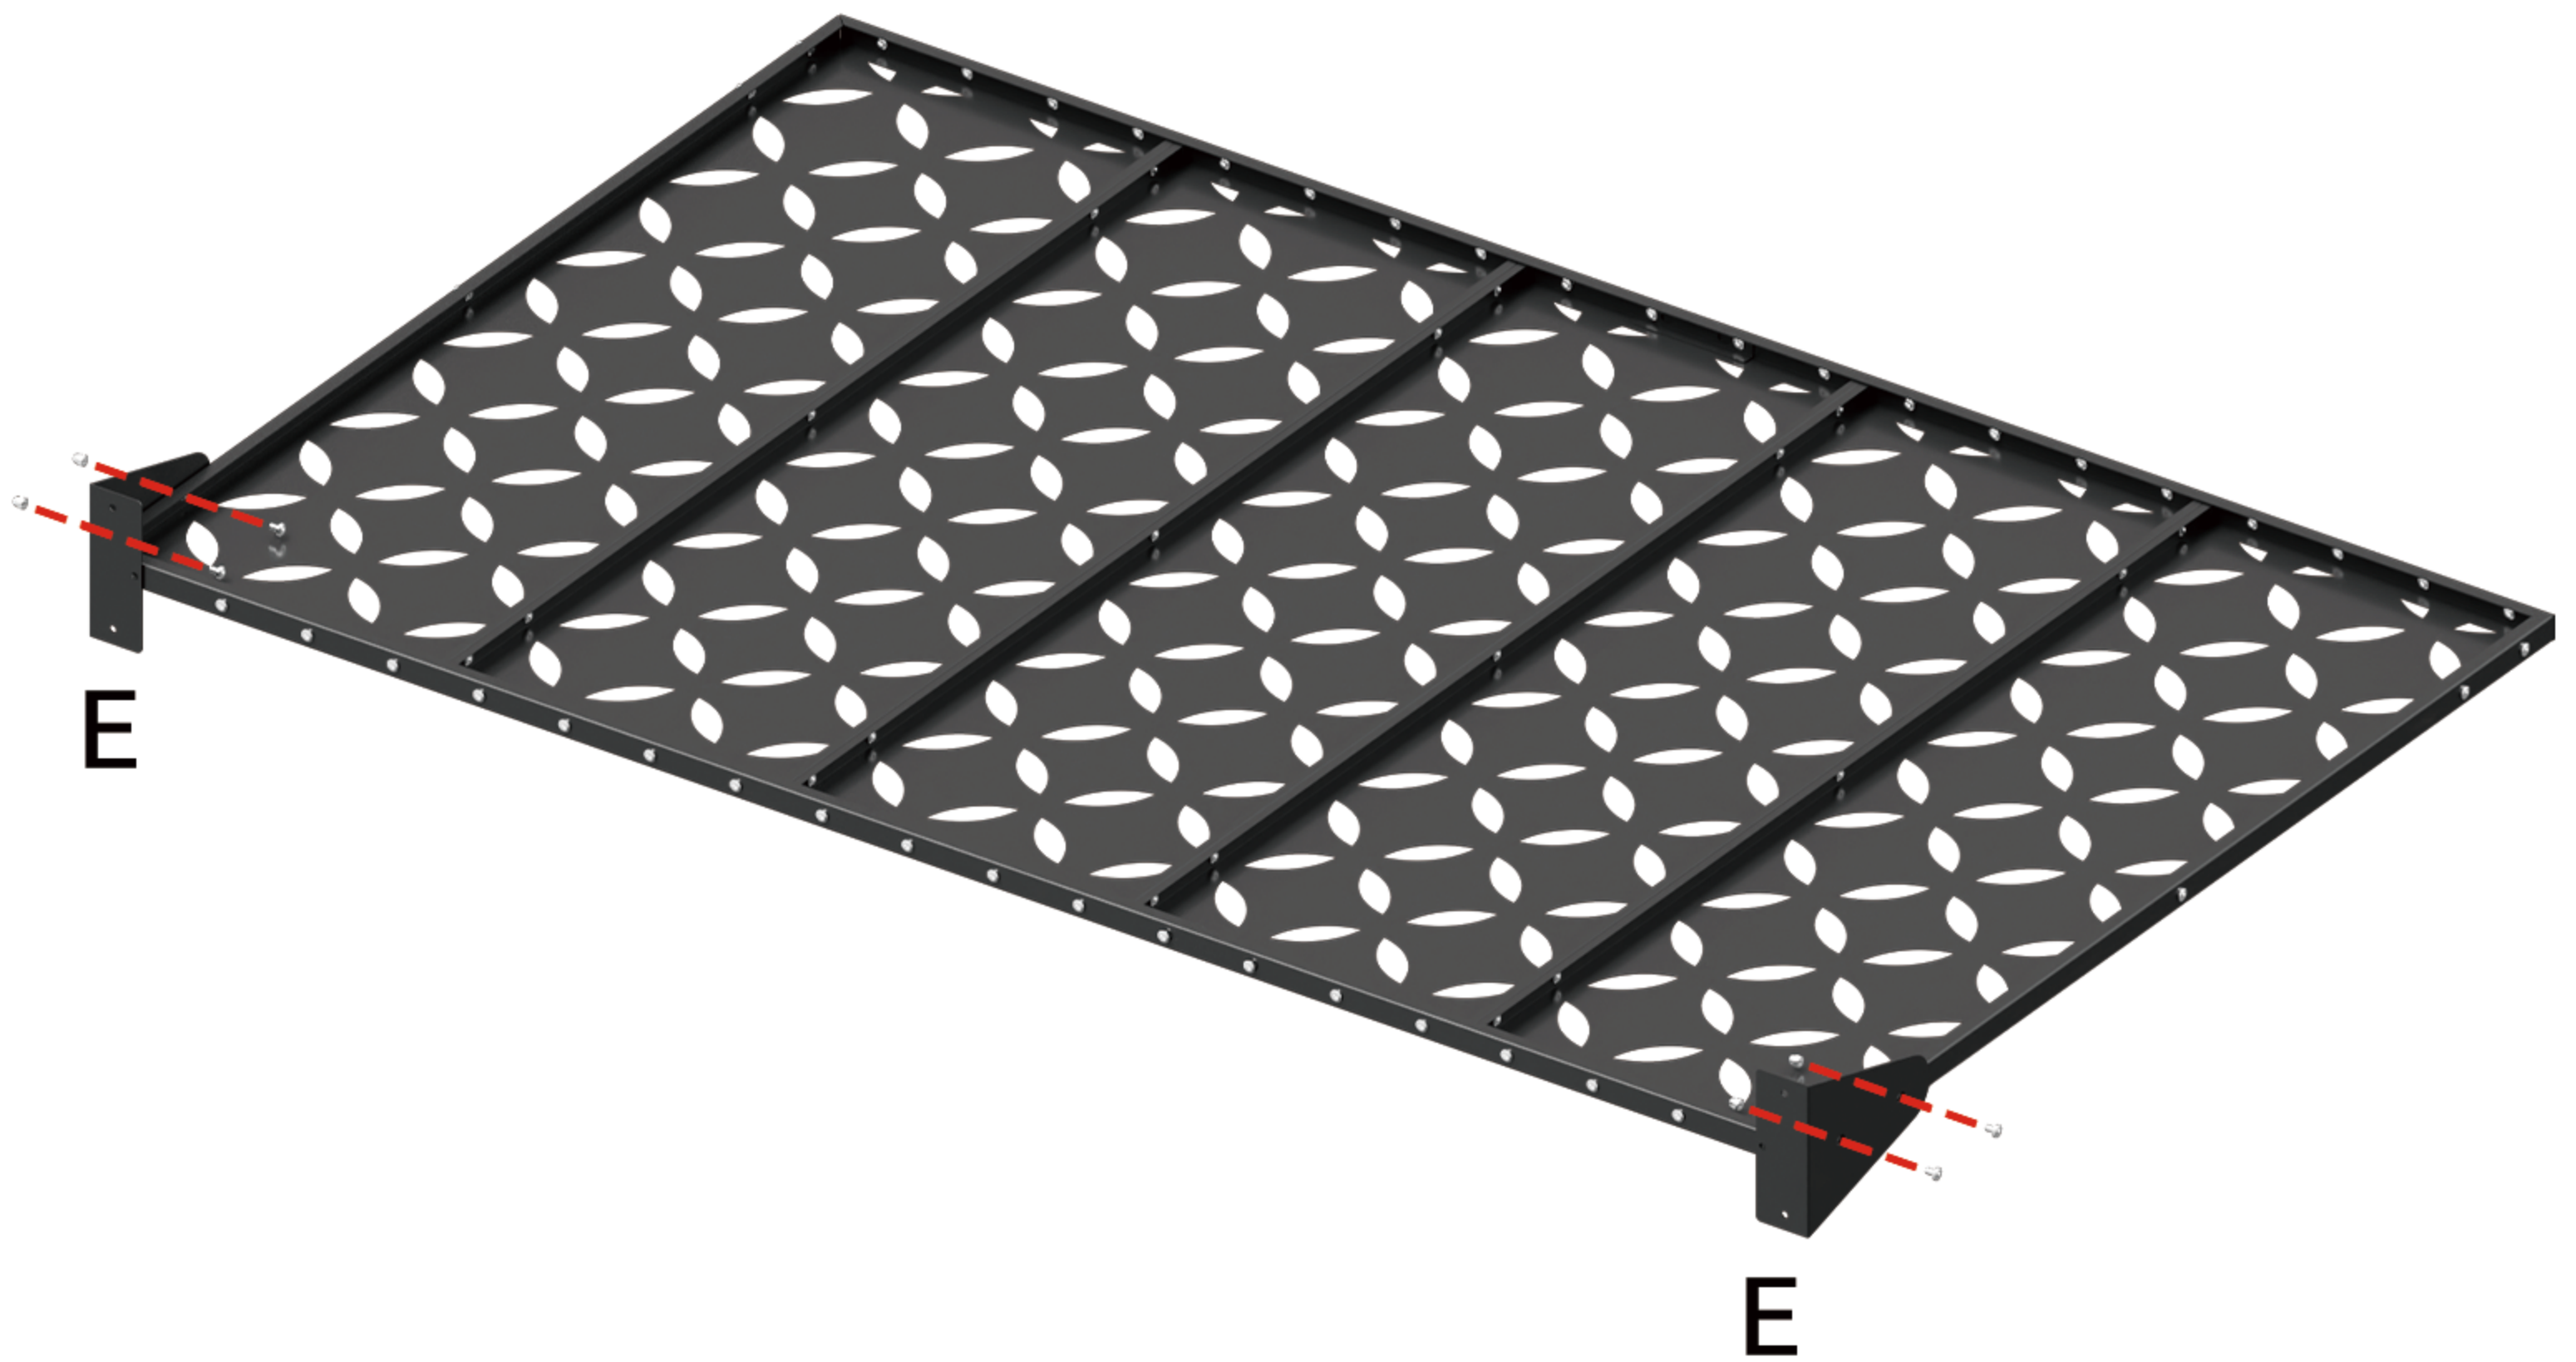


Install Support Base D


Align the holes on Part E and D,

Secure them with Screws(N*6)

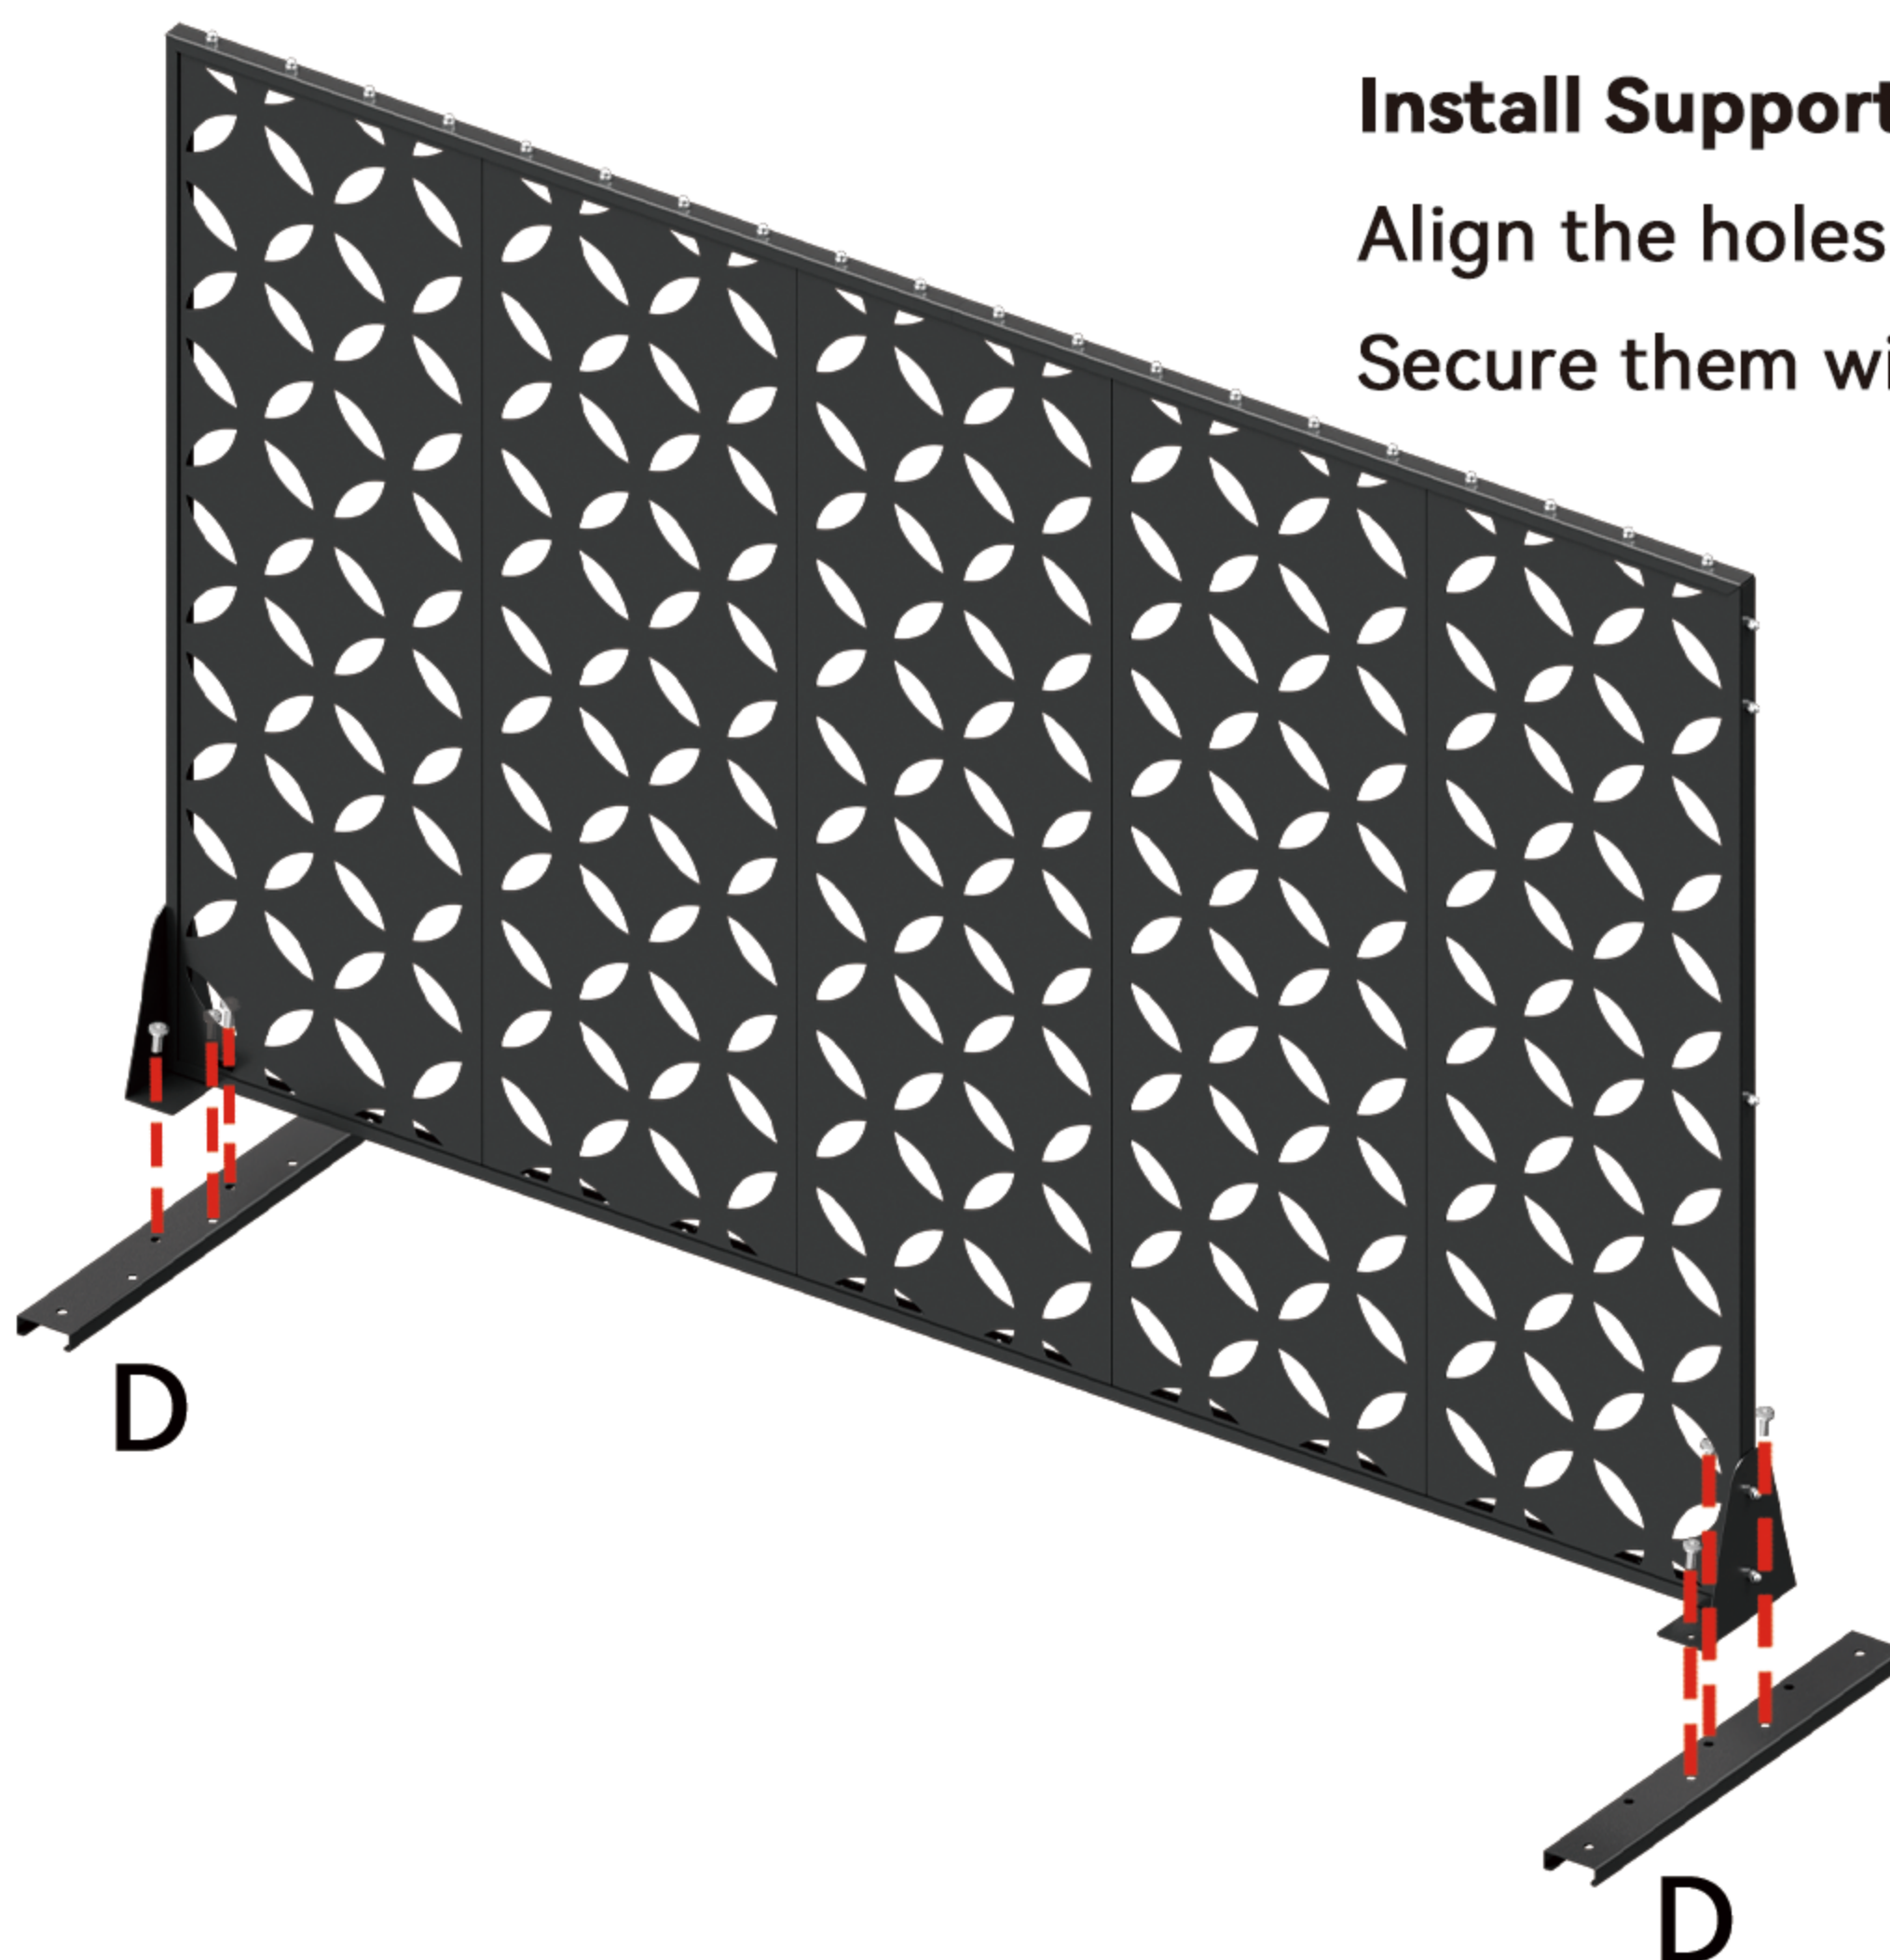

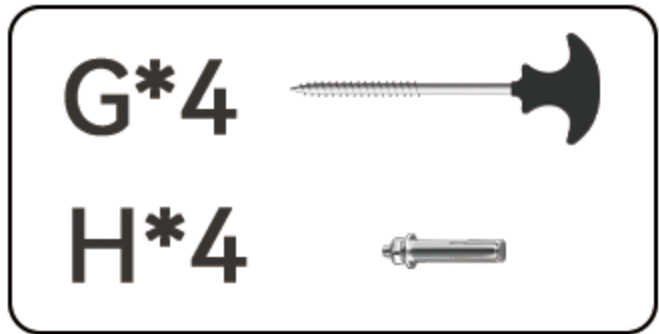

Fix Support Base D in different ground

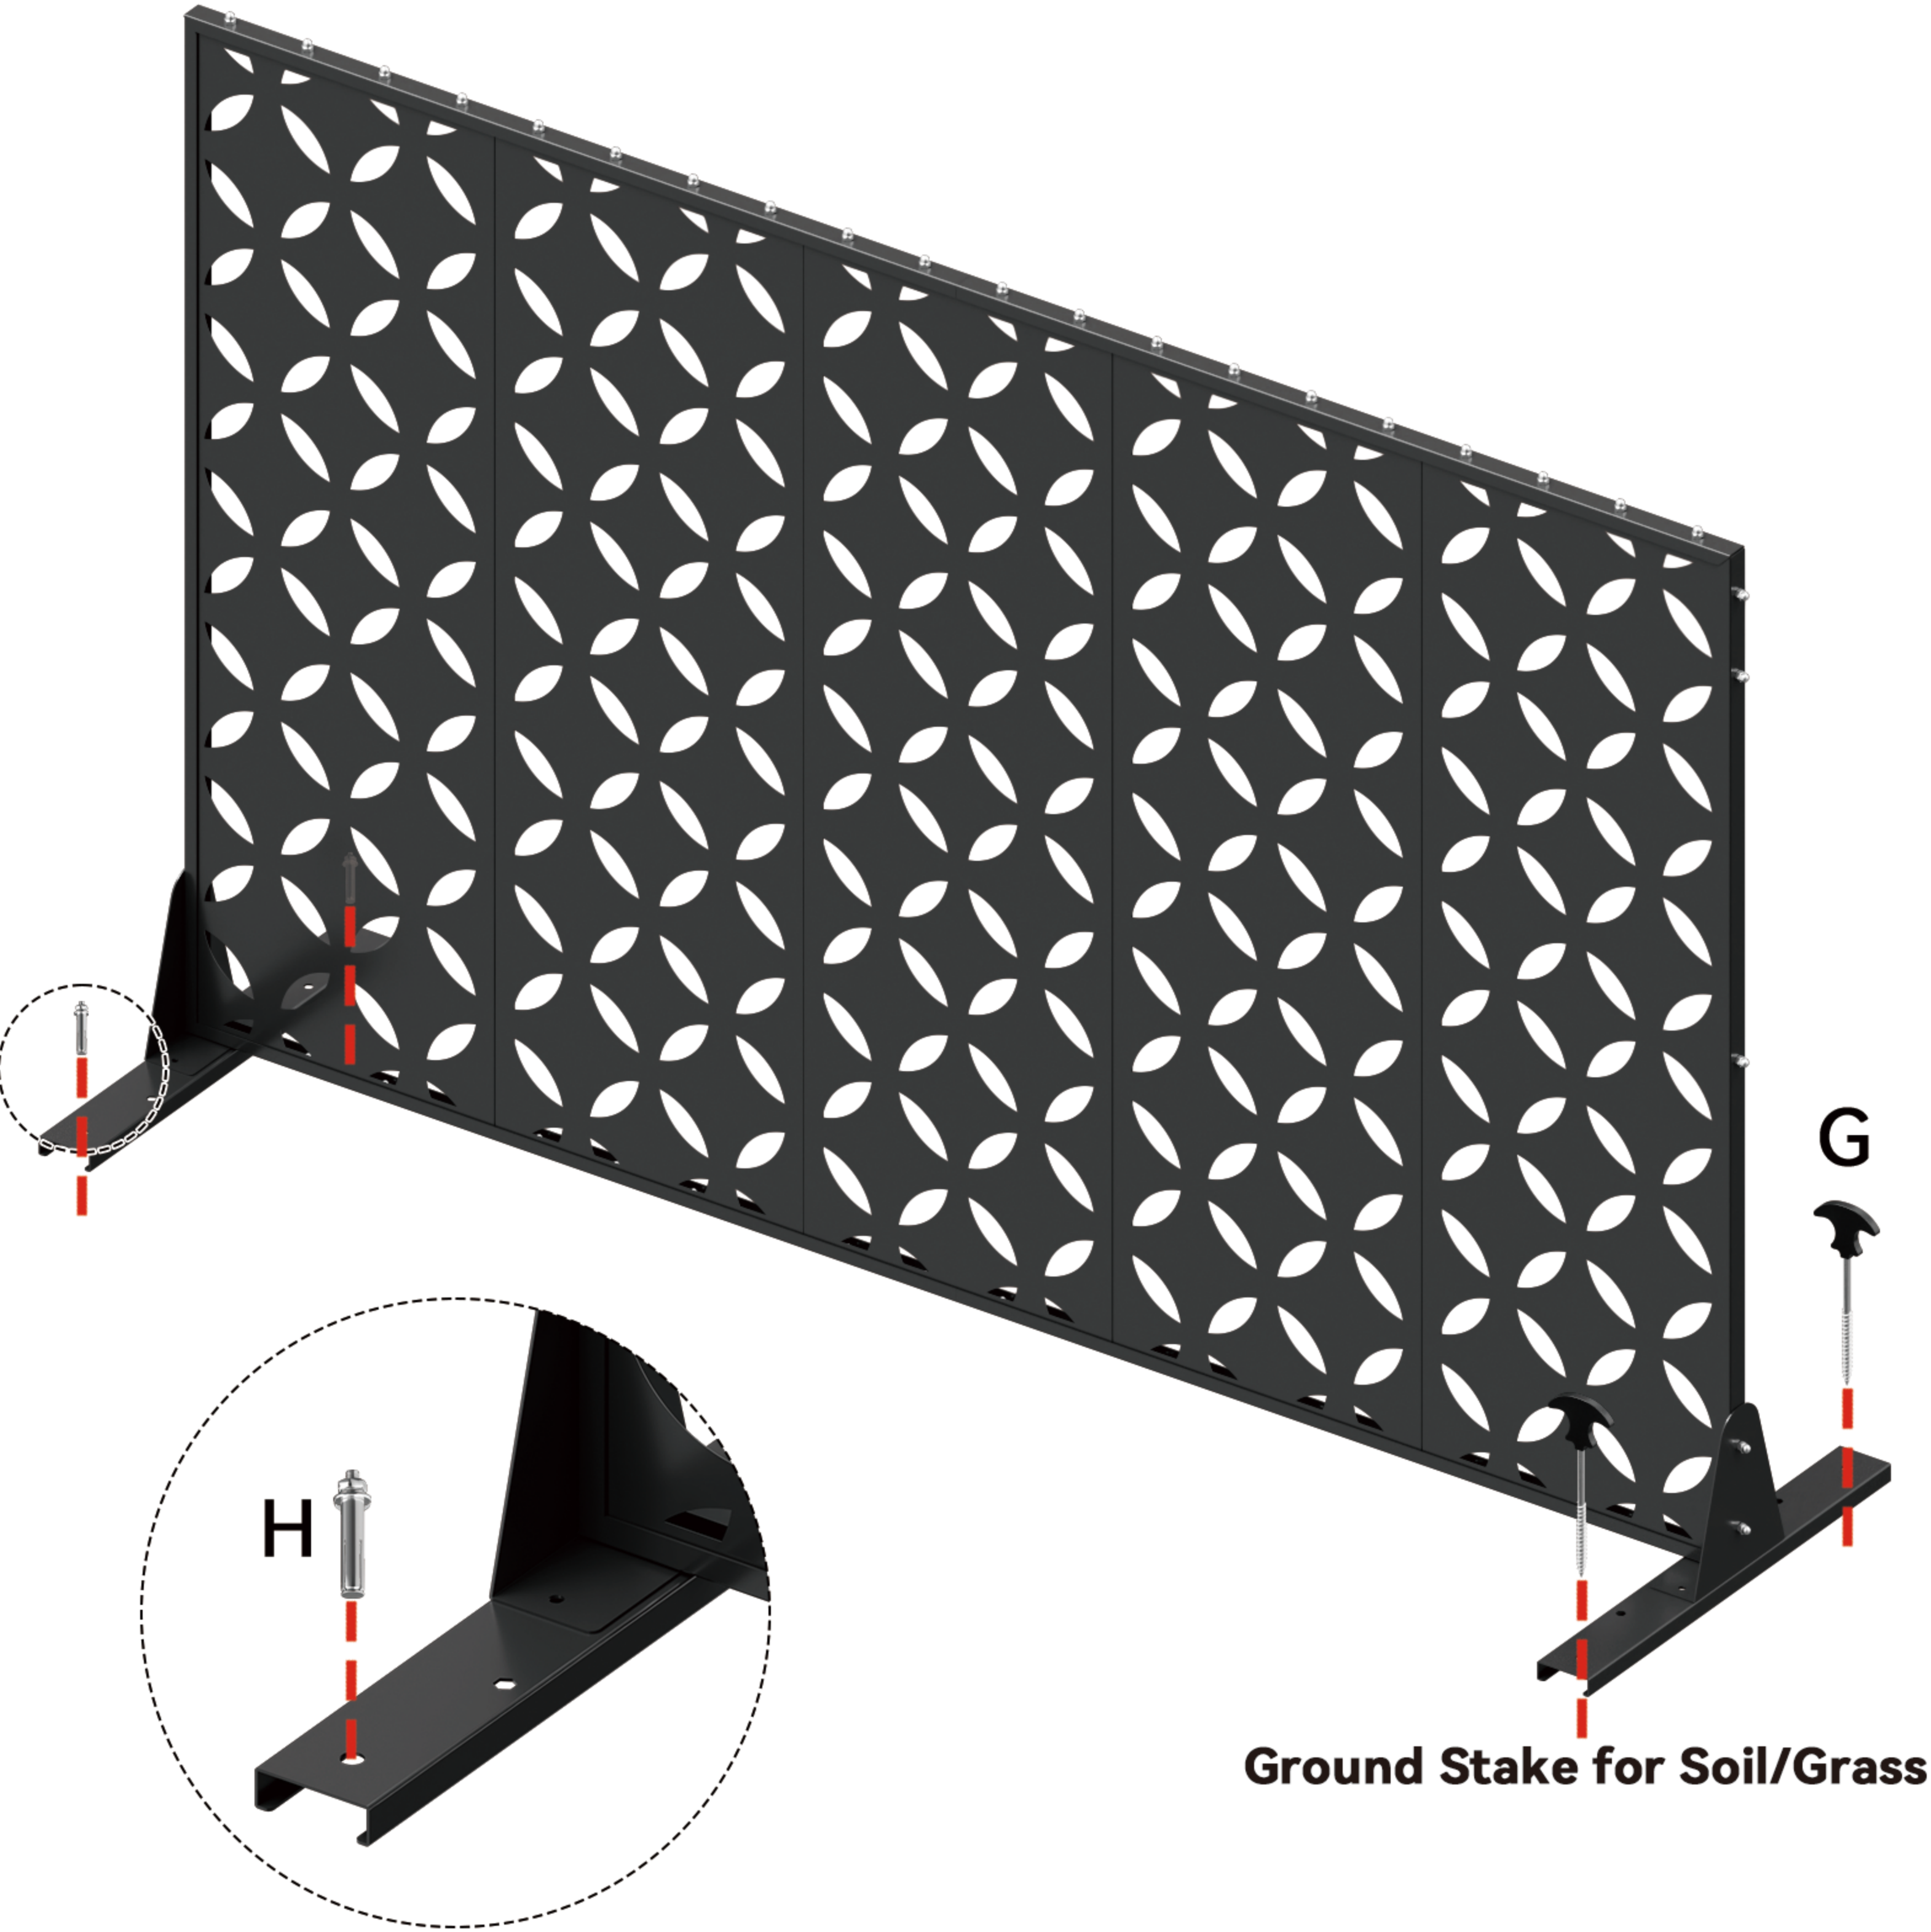

Expansion Bolt for Wood/Concret

Ground Stake for Soil/Grass