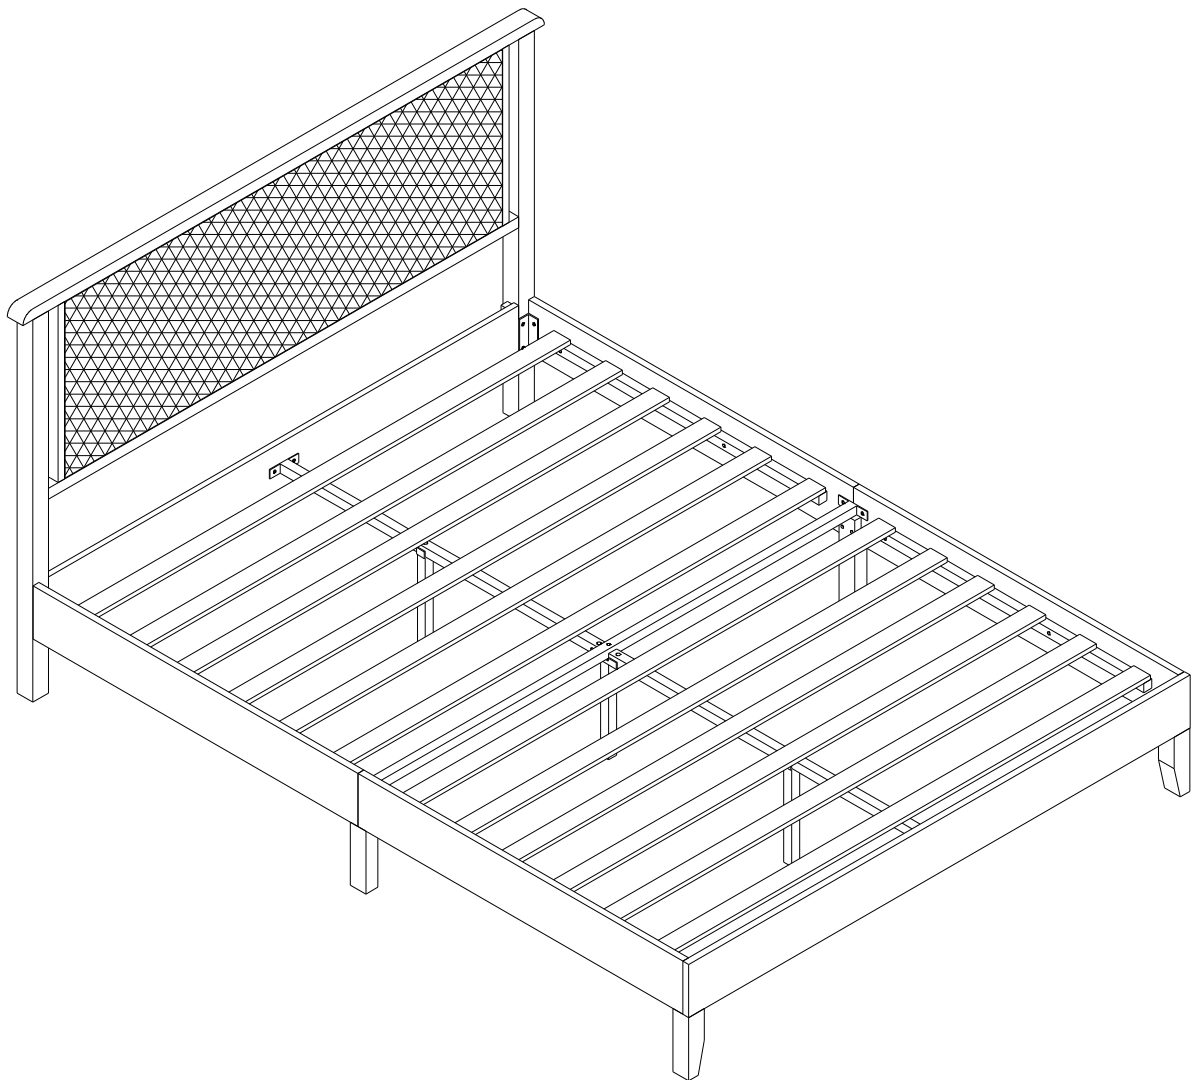


SKU:BD12-NW-FQ



Bed Frame Wood and Steel

Before Assembly

Please read the USER MANUAL thoroughly for quick assembly, and check according to Accessories.



Team Installation:

For larger product, we recommend that you install the product together with other people



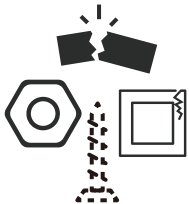
Laying Protection:

To protect the product and your flooring during installation, please lay protection before installation



No Electric Drill:

For longer use, please use the installation tools supplied with the product.



Missing Parts or Broken:

Please feel free to contact us via Amazon Orders or Customer Support Email. We promise to ship the missing or replacement parts to you free of charge.



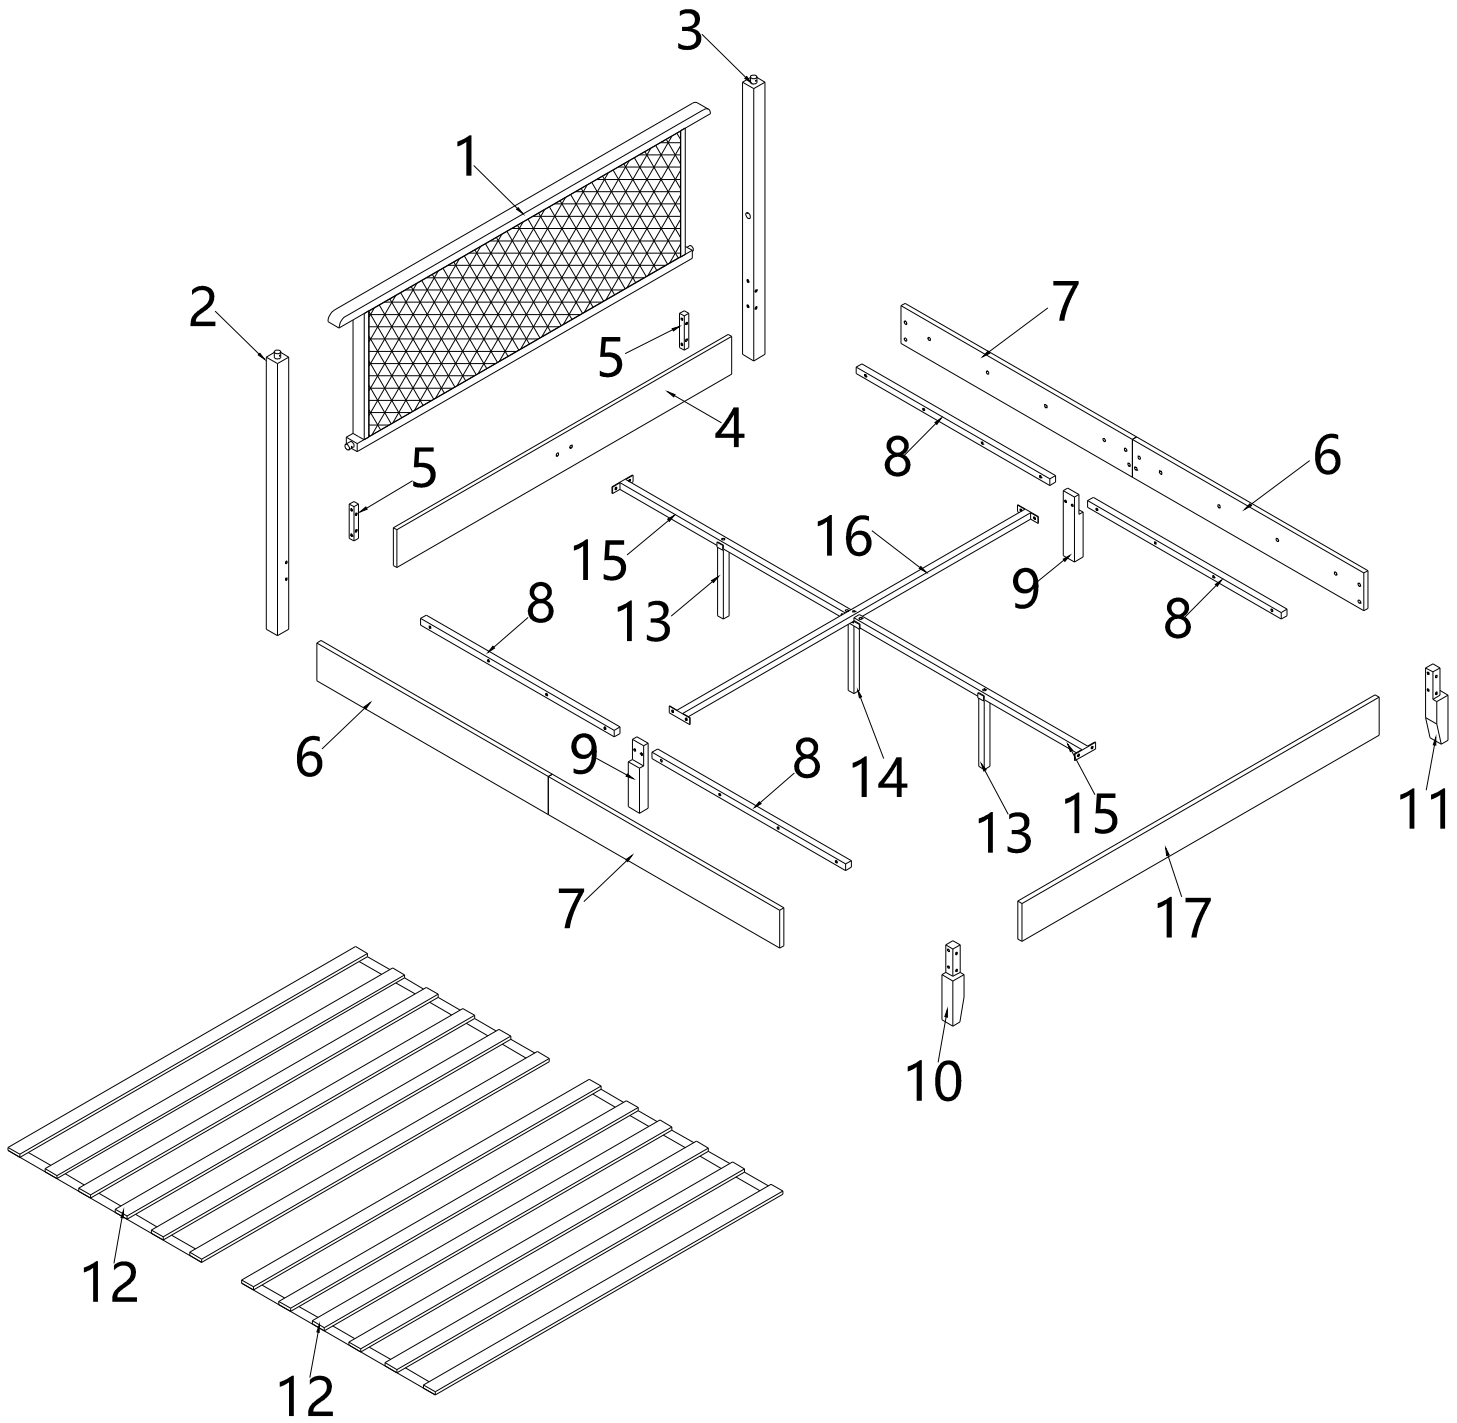
Any questions?

Please do not hesitate to contact us!

















support-cs@hkfoam.com








Disassembly Diagram



Accessories

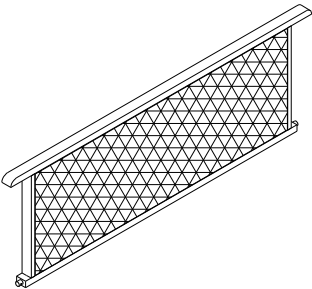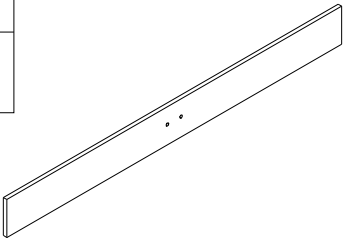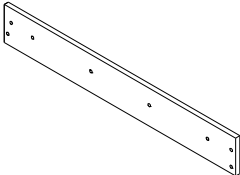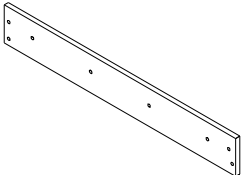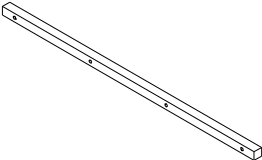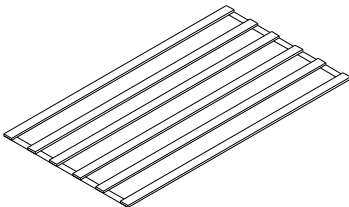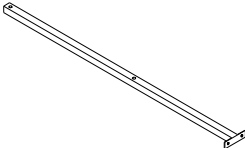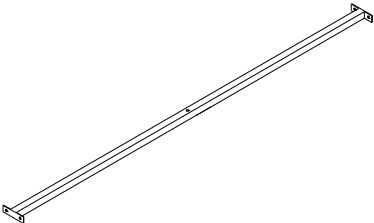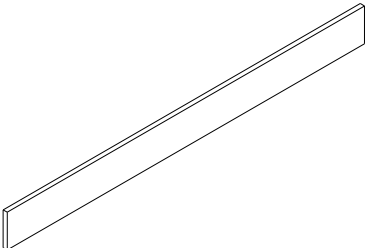① x1 	② x1 	③ x1 
④ x1 	⑤ x2 	⑥ x2 
⑦ x2 	⑧ x4 	⑨ x2 
⑩ x1 	⑪ x1 	⑫ x2 
⑬ x2 	⑭ x1 	⑮ x2 
⑯ x1 	⑰ x1 	

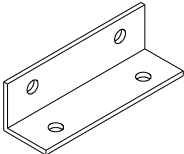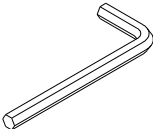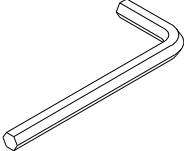
Accessories

Ⓐ x4	M5*40mm 	Ⓑ x24	M8*30mm 	Ⓒ x8	M8*35mm 
Ⓓ x16	M8*15mm 	Ⓔ x2		Ⓕ x9	M8*40mm 
Ⓖ x1	M4 	Ⓗ x1	M5 	Ⓘ x2	M8 

Assembly Instructions

Step 1: Assemble the headboard

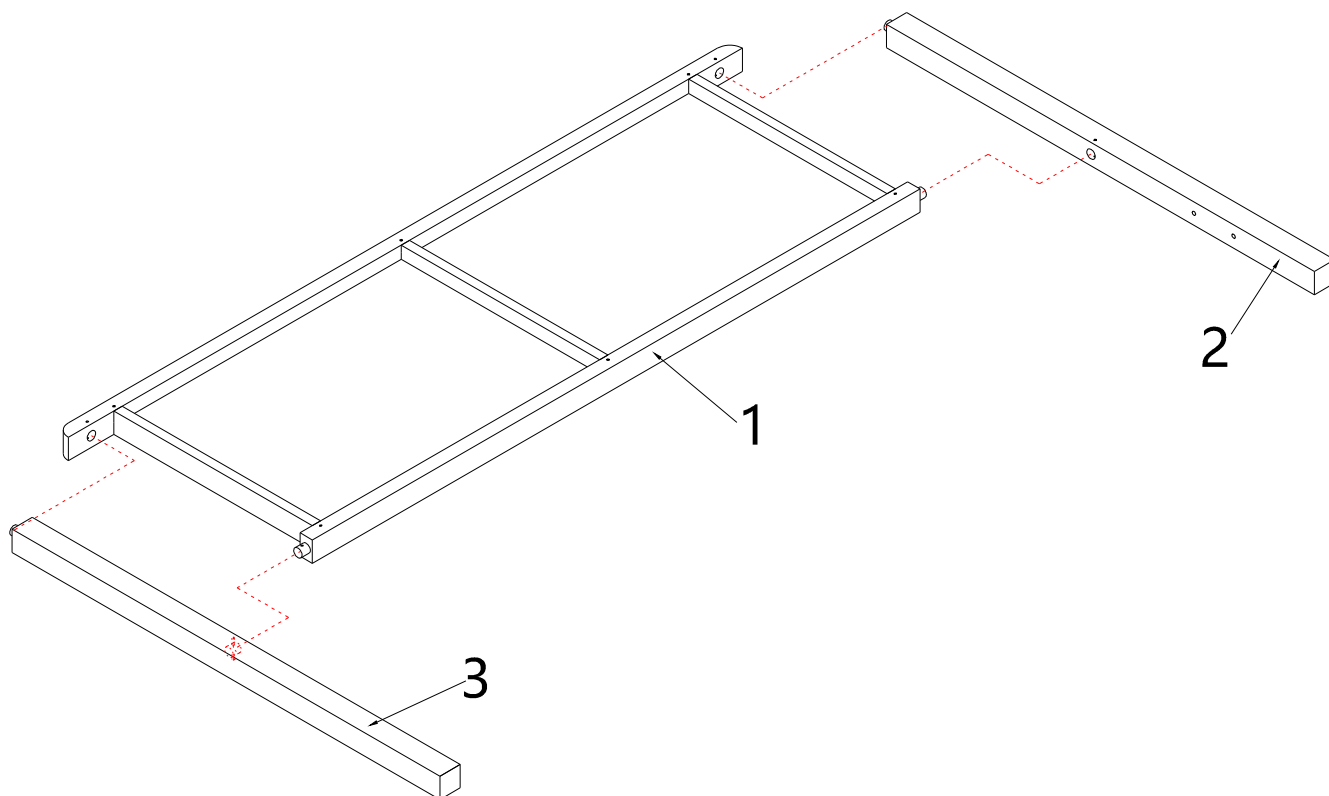Install the bed legs(2,3) onto the headboard(1) according to the holes shown in the diagram.




Assembly Instructions


Step 2: Secure the headboard

Use screws(A) to secure the installed bed legs(2,3) according to the holes shown in the diagram.

Note: Do not tighten the screws in subsequent steps.

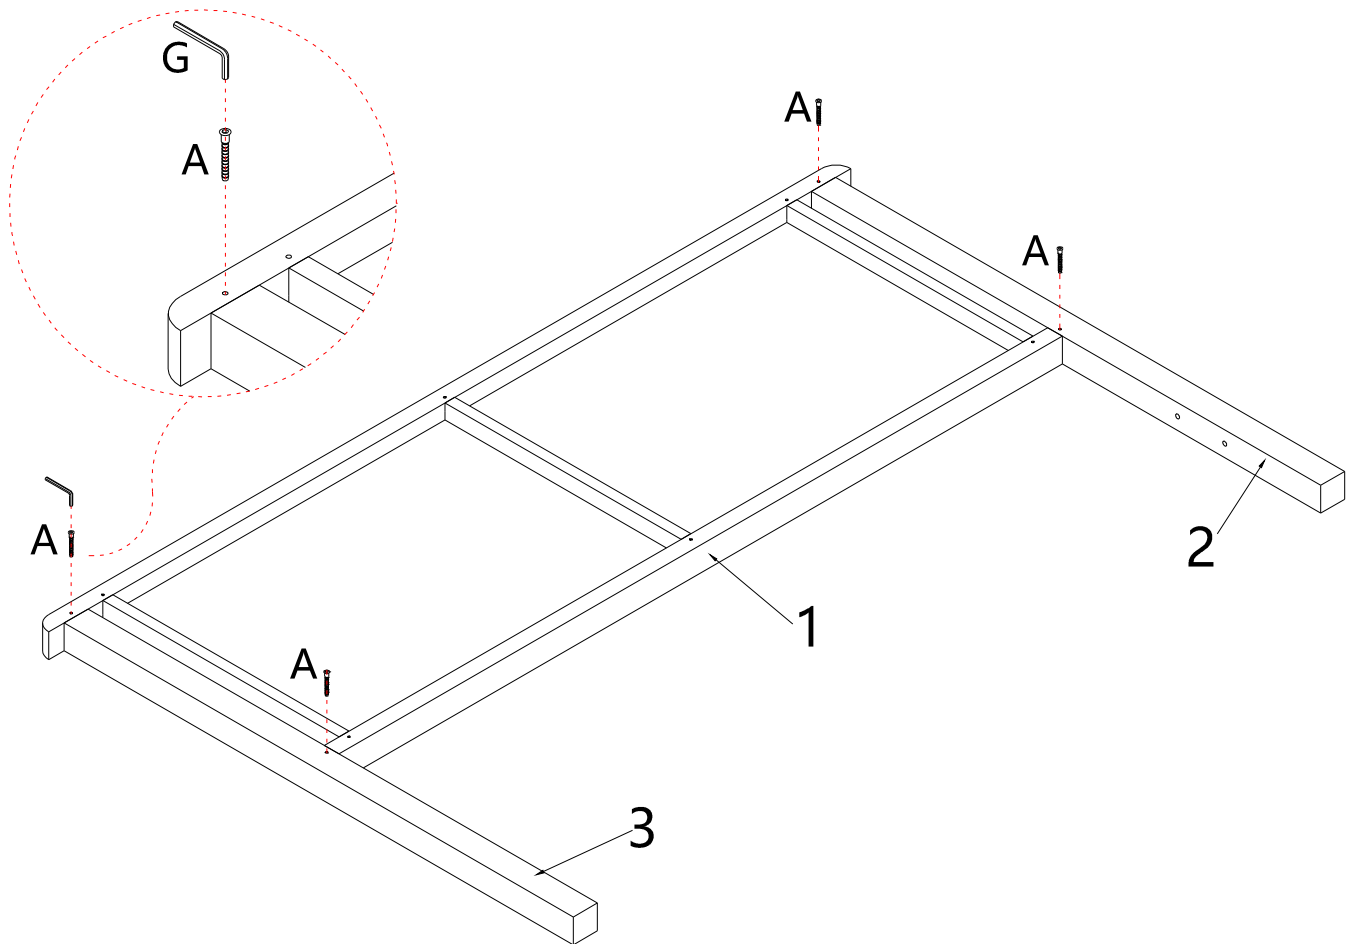
Tighten the screws only after all installation is complete.



A	M5*40	G	M4
			
	x4		x1

Assembly Instructions

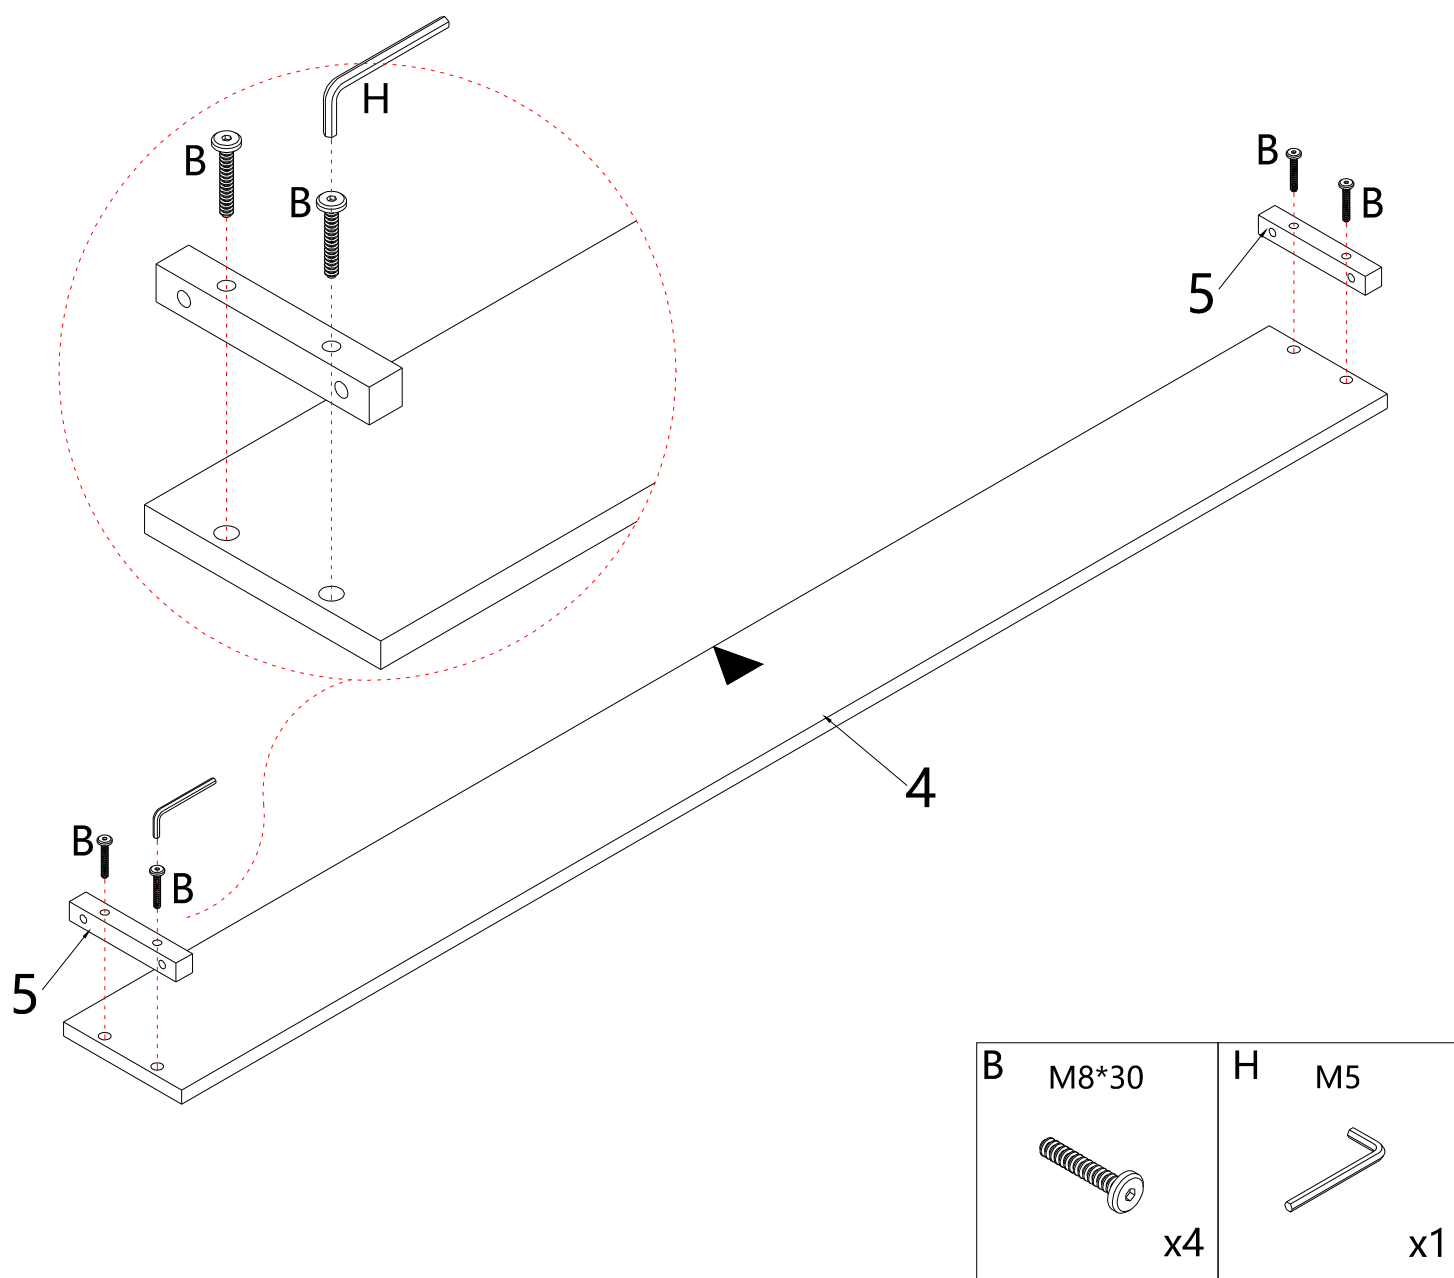Step 3: Use screws(B) to install part(5) onto the lower headboard panel(4).




Assembly Instructions

Step 4: Assemble the lower headboard

Use screws(C) to install the lower headboard panel onto the bed legs(2,3).

Note:

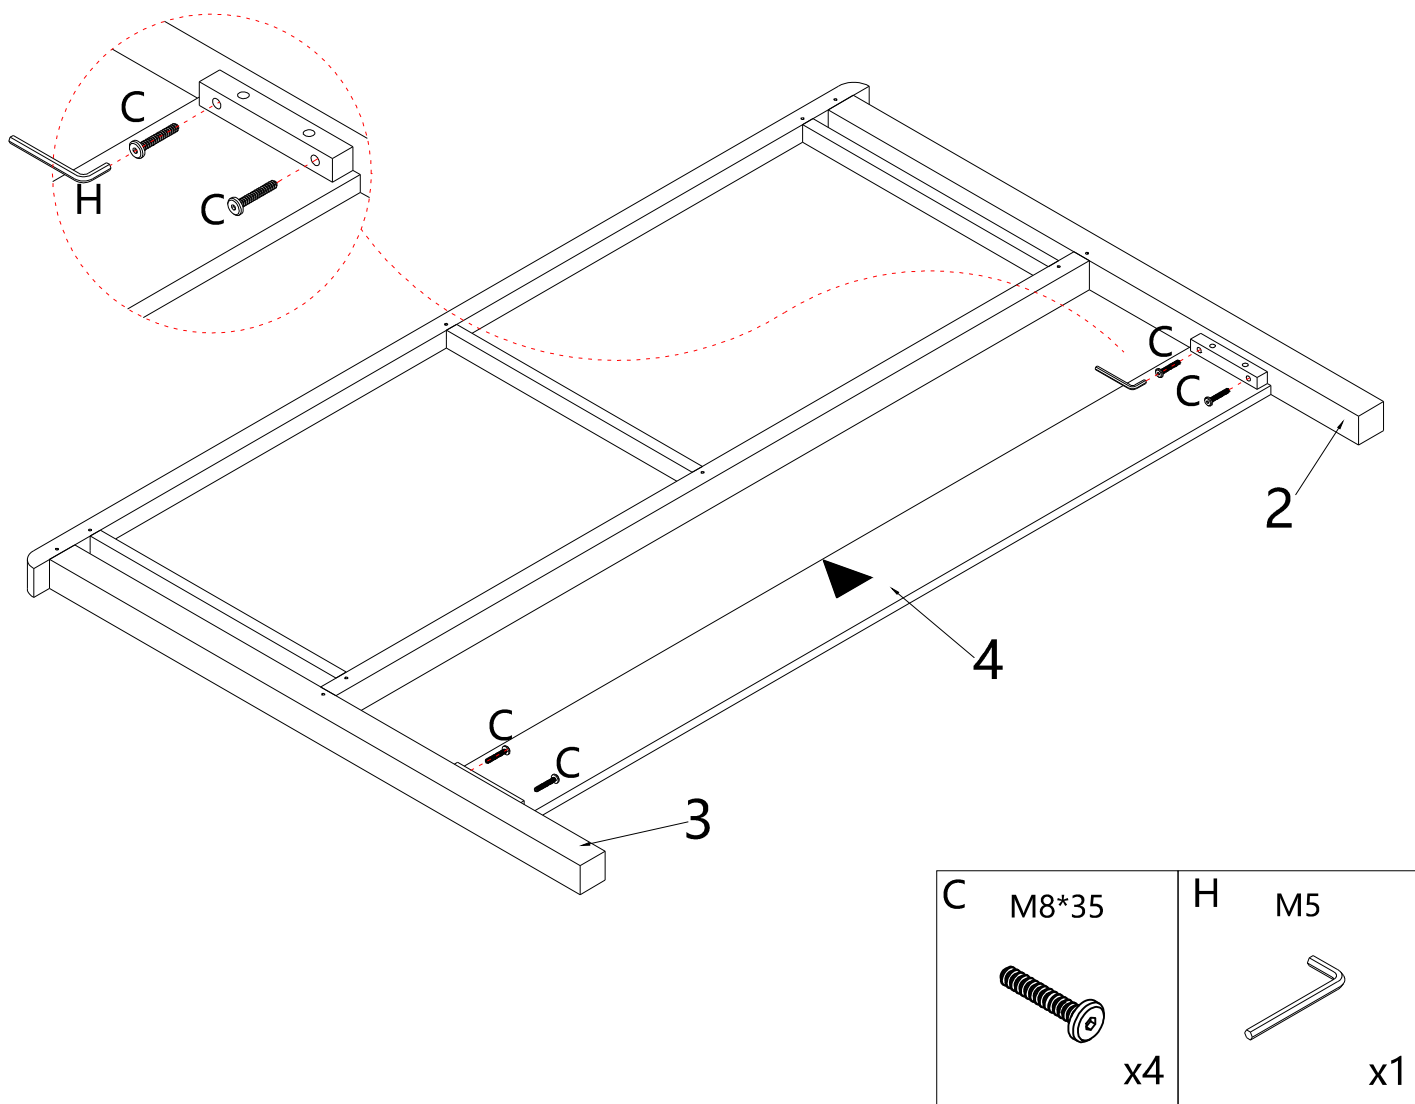The arrows on the wooden board need to point upwards.




Assembly Instructions



Step 5: Assemble the bed side panels

Install the parts(E), wooden strips(4), and support legs(9) onto the bed side panels(6,7) at the positions shown in the diagram using screws(D,B).

Note:

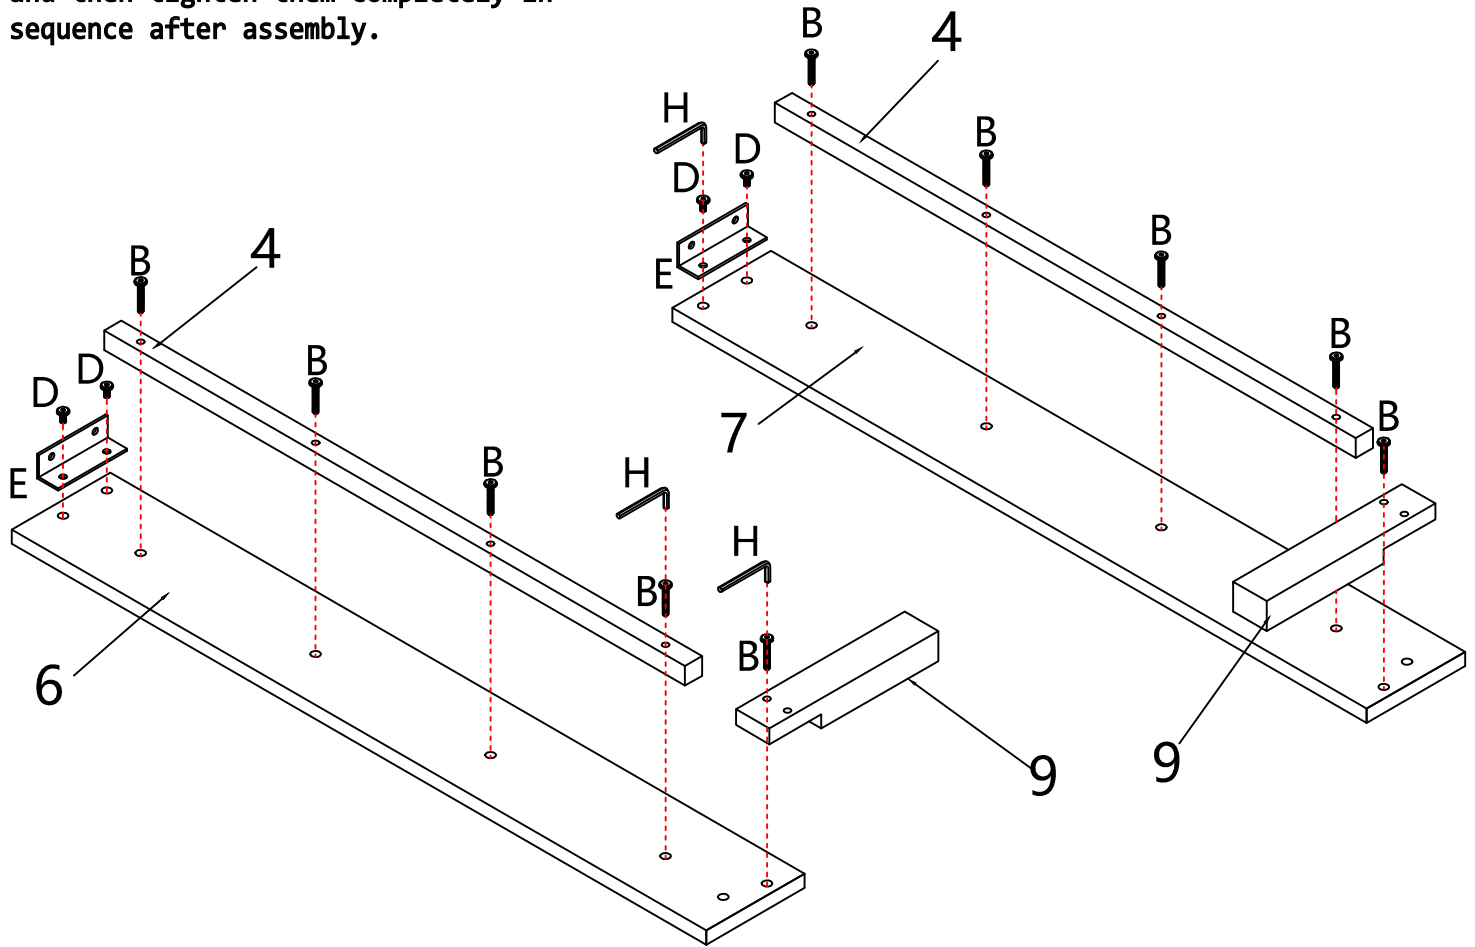1. Make sure the loop side of the Velcro is facing outwards.
2. Temporarily tighten all screws first, and then tighten them completely in sequence after assembly.




B	M8*30	D	M8*15	E		H	M5
							
x10		x4		x2		x1	

Assembly Instructions

Step 6: Assemble the bed side panels
Install the wooden slats(4) onto the side rails(6,7) using screws(B).

Note:

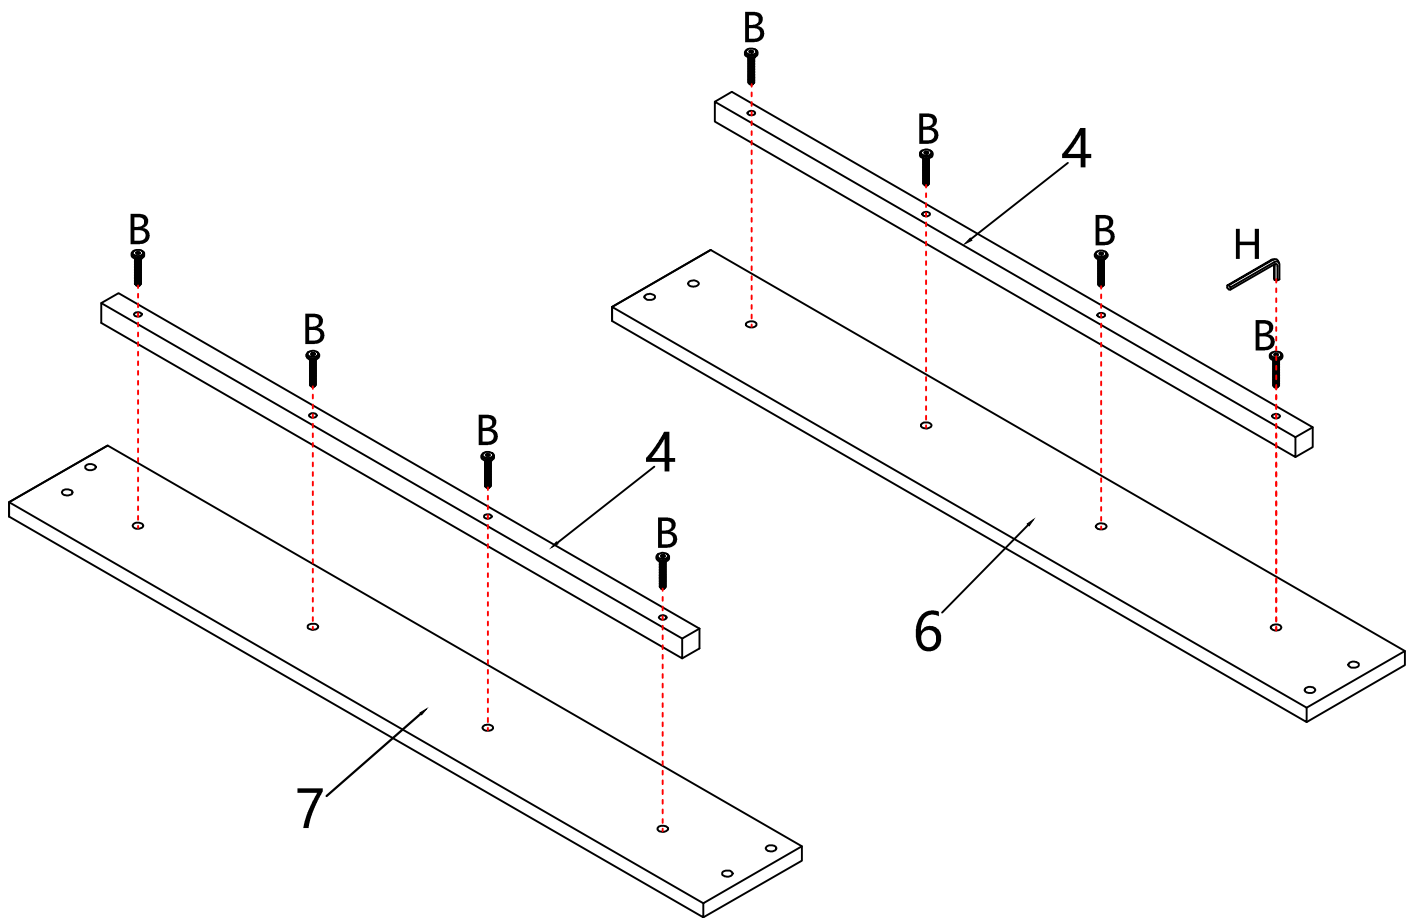Make sure the loop side of the Velcro is facing outwards.




B	M8*30	H	M5
			
	x8		x1

Assembly Instructions


Step 7: Install the Footboard

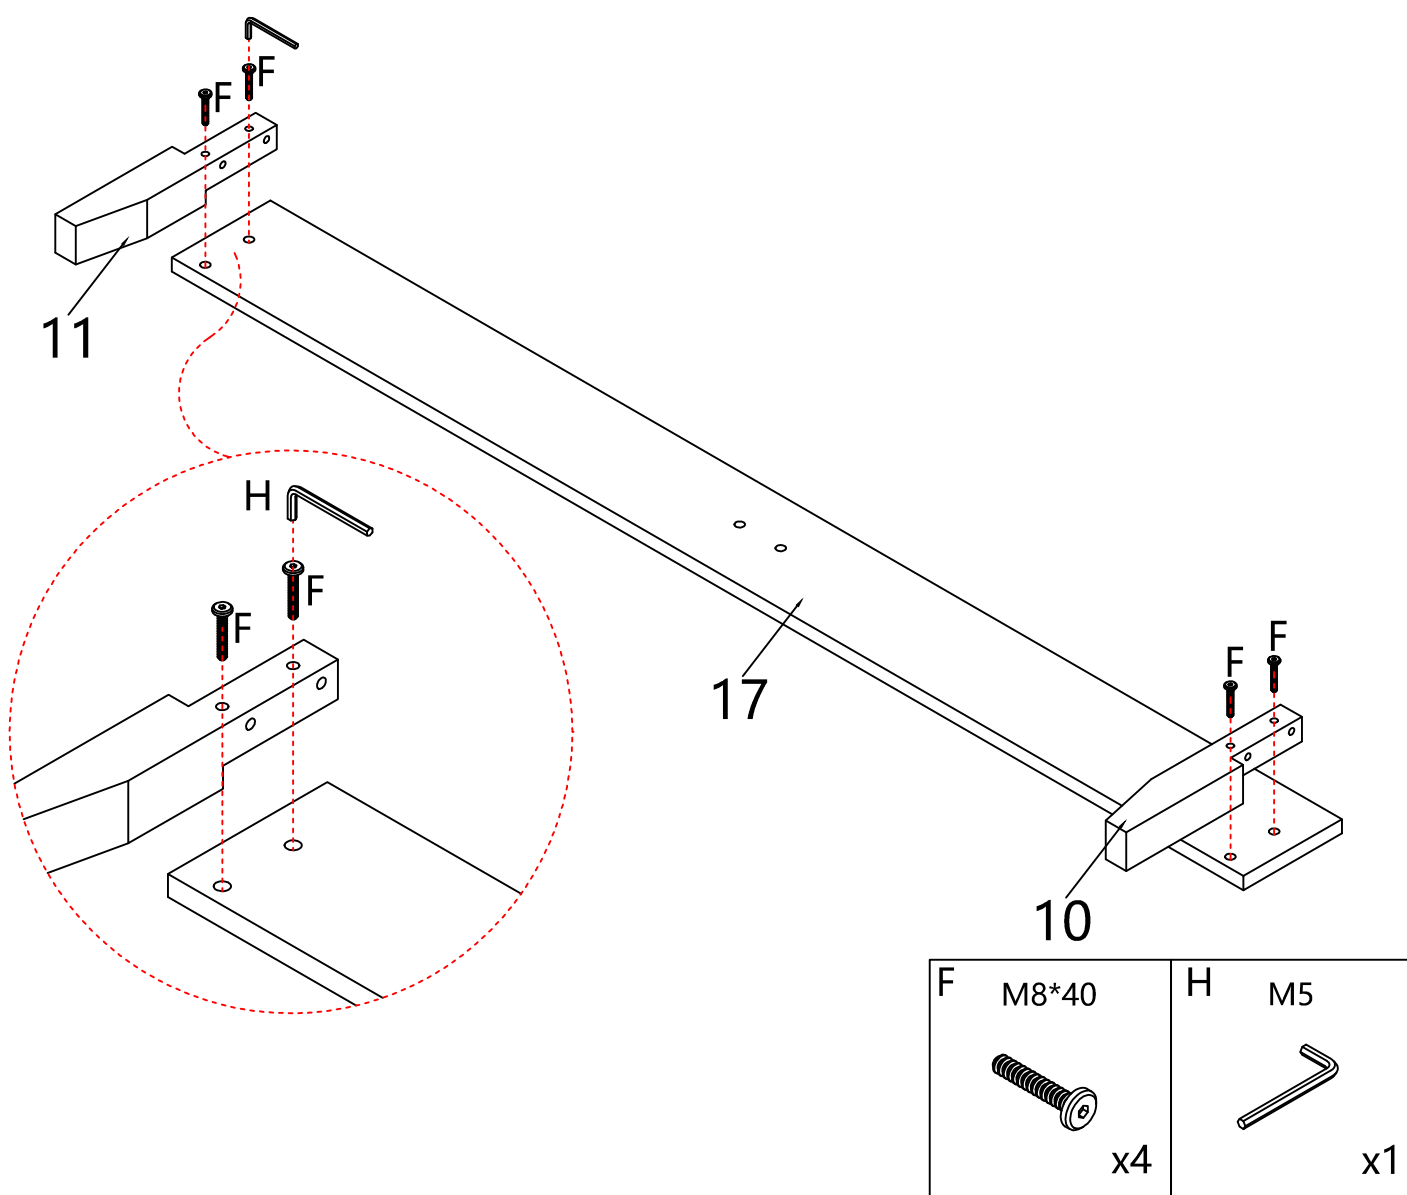
Attach the footboard legs(10,11) to the footboard(17) at the positions shown in the diagram using screws(F).



Assembly Instructions

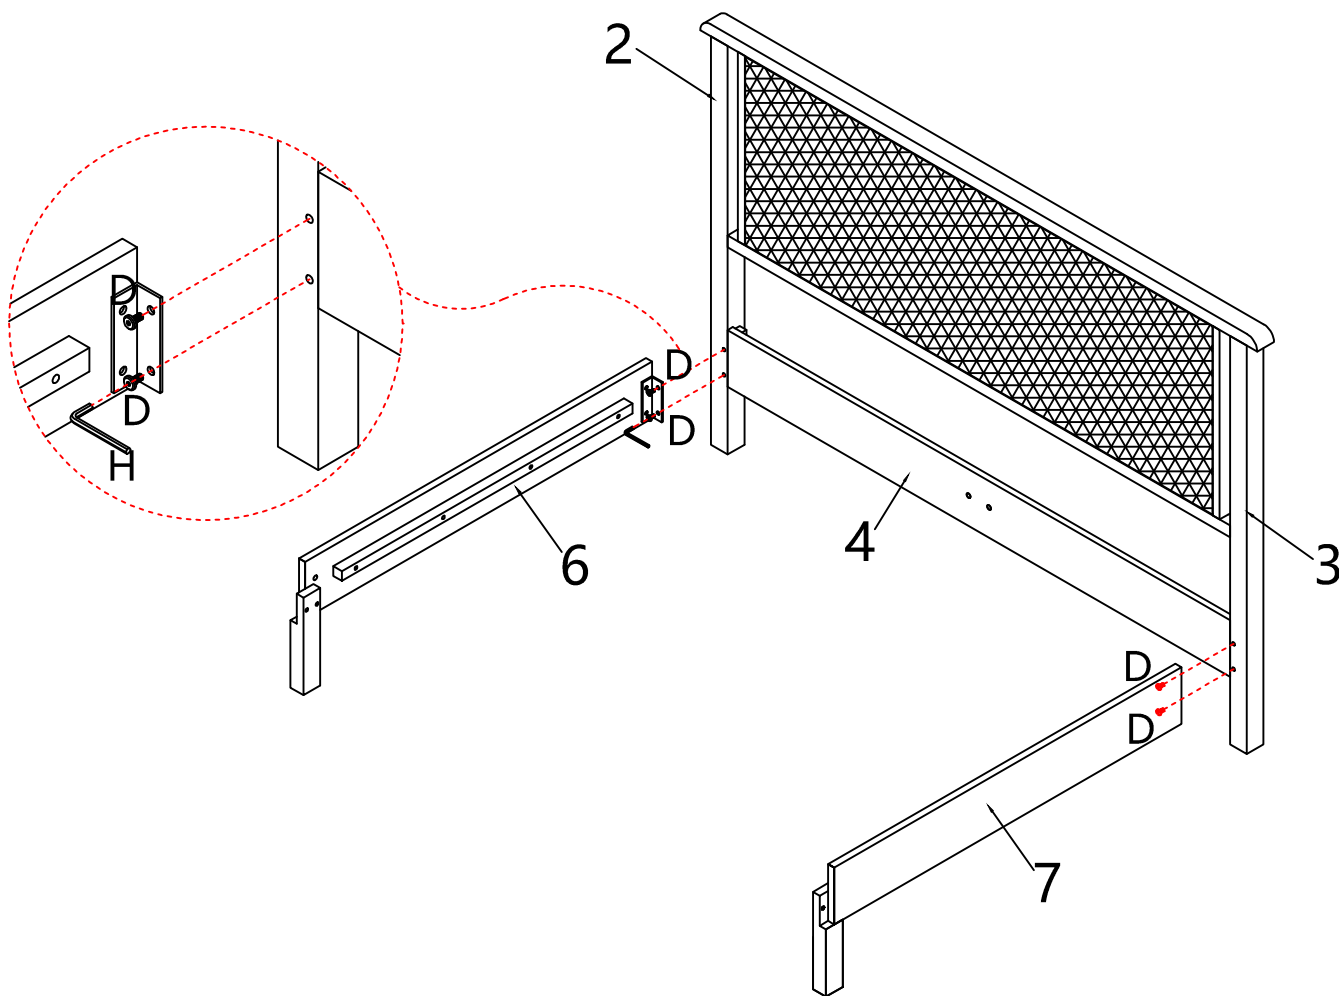Step 8: Assemble the front bed side panel
Use screws(D) to install the assembled side rails(6,7) onto the assembled headboard.




D	M8*15	H	M5
			
x4		x1	

Assembly Instructions

Step 9: Assemble the bed side panels and footboard

1. Secure the remaining bed side panels(6,7) to the support legs(9) using screws(B) to connect them to the bed side panels.

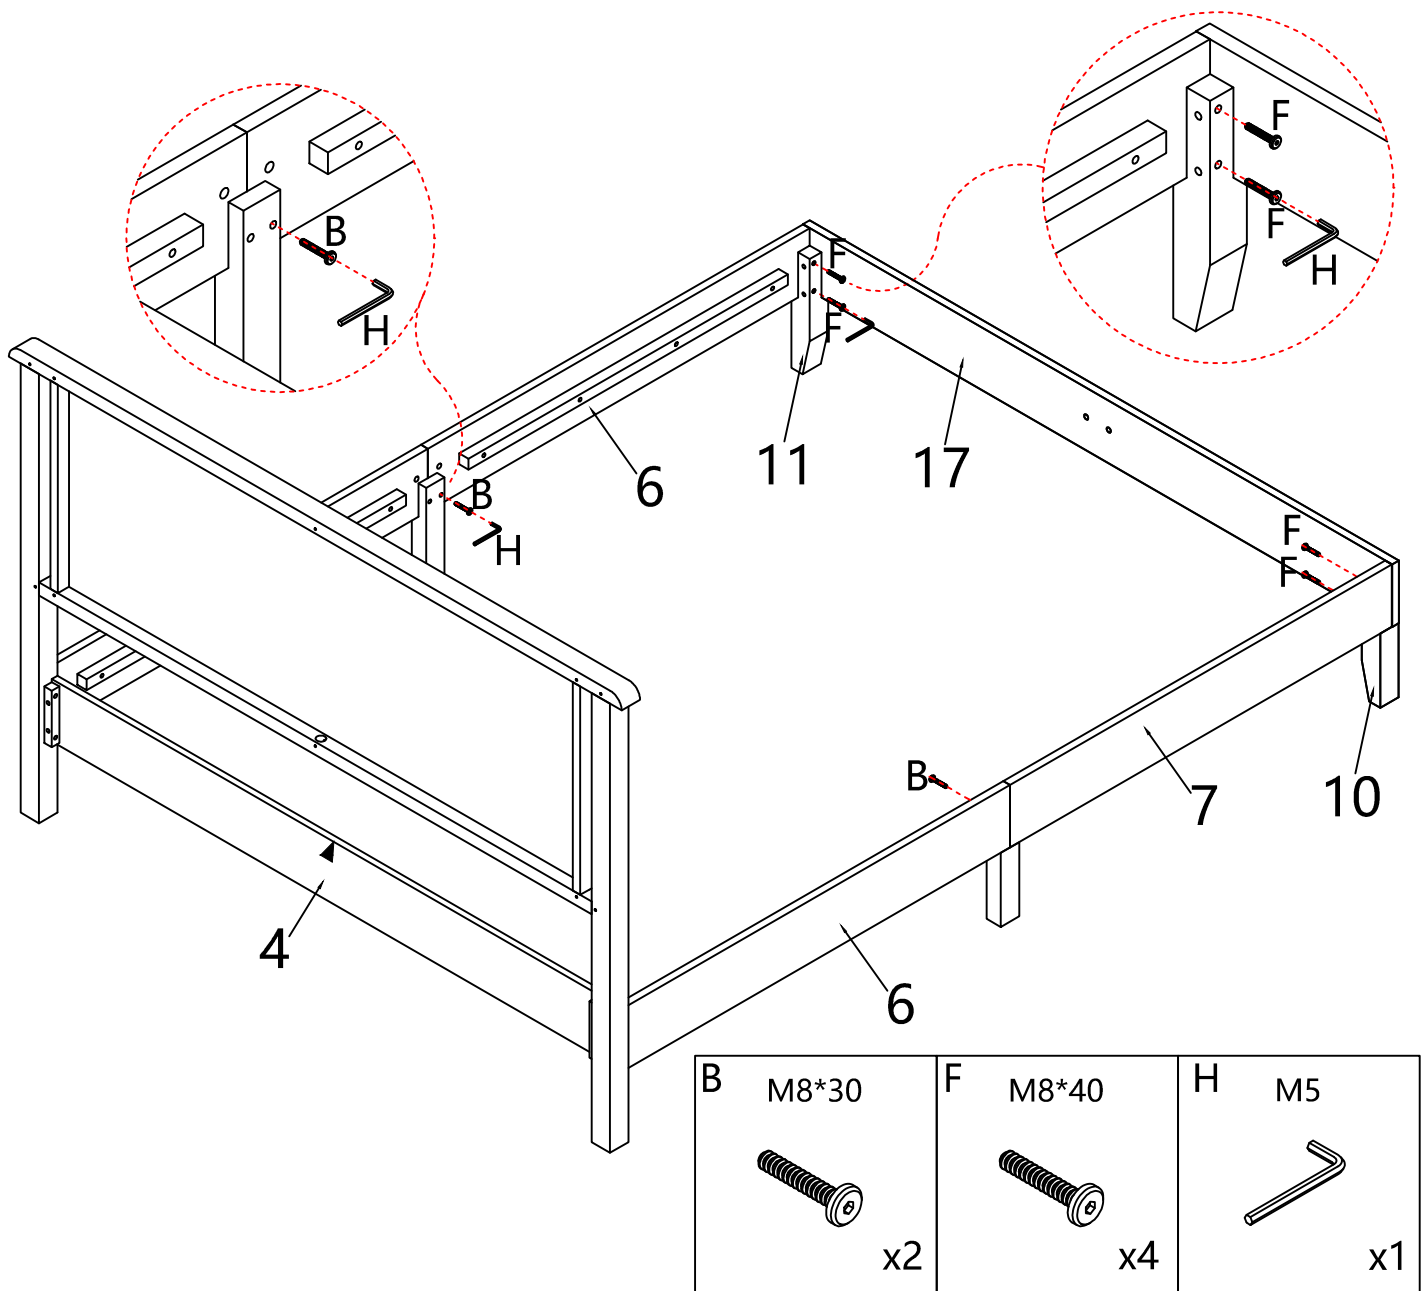
2. Use screws(F) to attach the installed footboard to the side panels(6,7) via the footboard legs.




Assembly Instructions

Step 10: Assemble the bed beam

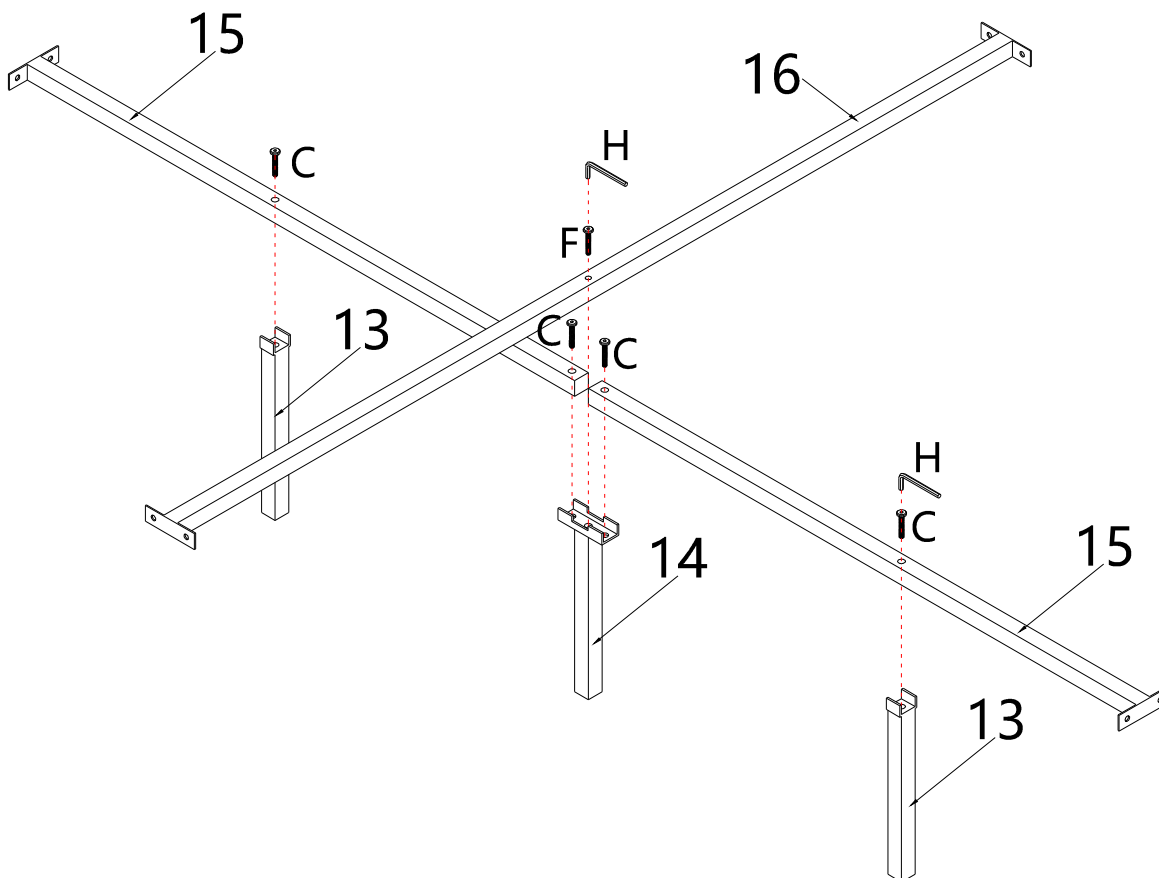1. Use screws (C) to fix the two intermediate frames (15) to the two support tubes (13) respectively, and connect the two frames (15) through the support tubes (14).
2. Secure the crossbeam (16) to the support tube (14) using screws (F).





C	M8*35	F	M8*40	H	M5
					
x4		x1		x1	

Assembly Instructions

Step 11: Install bed beams

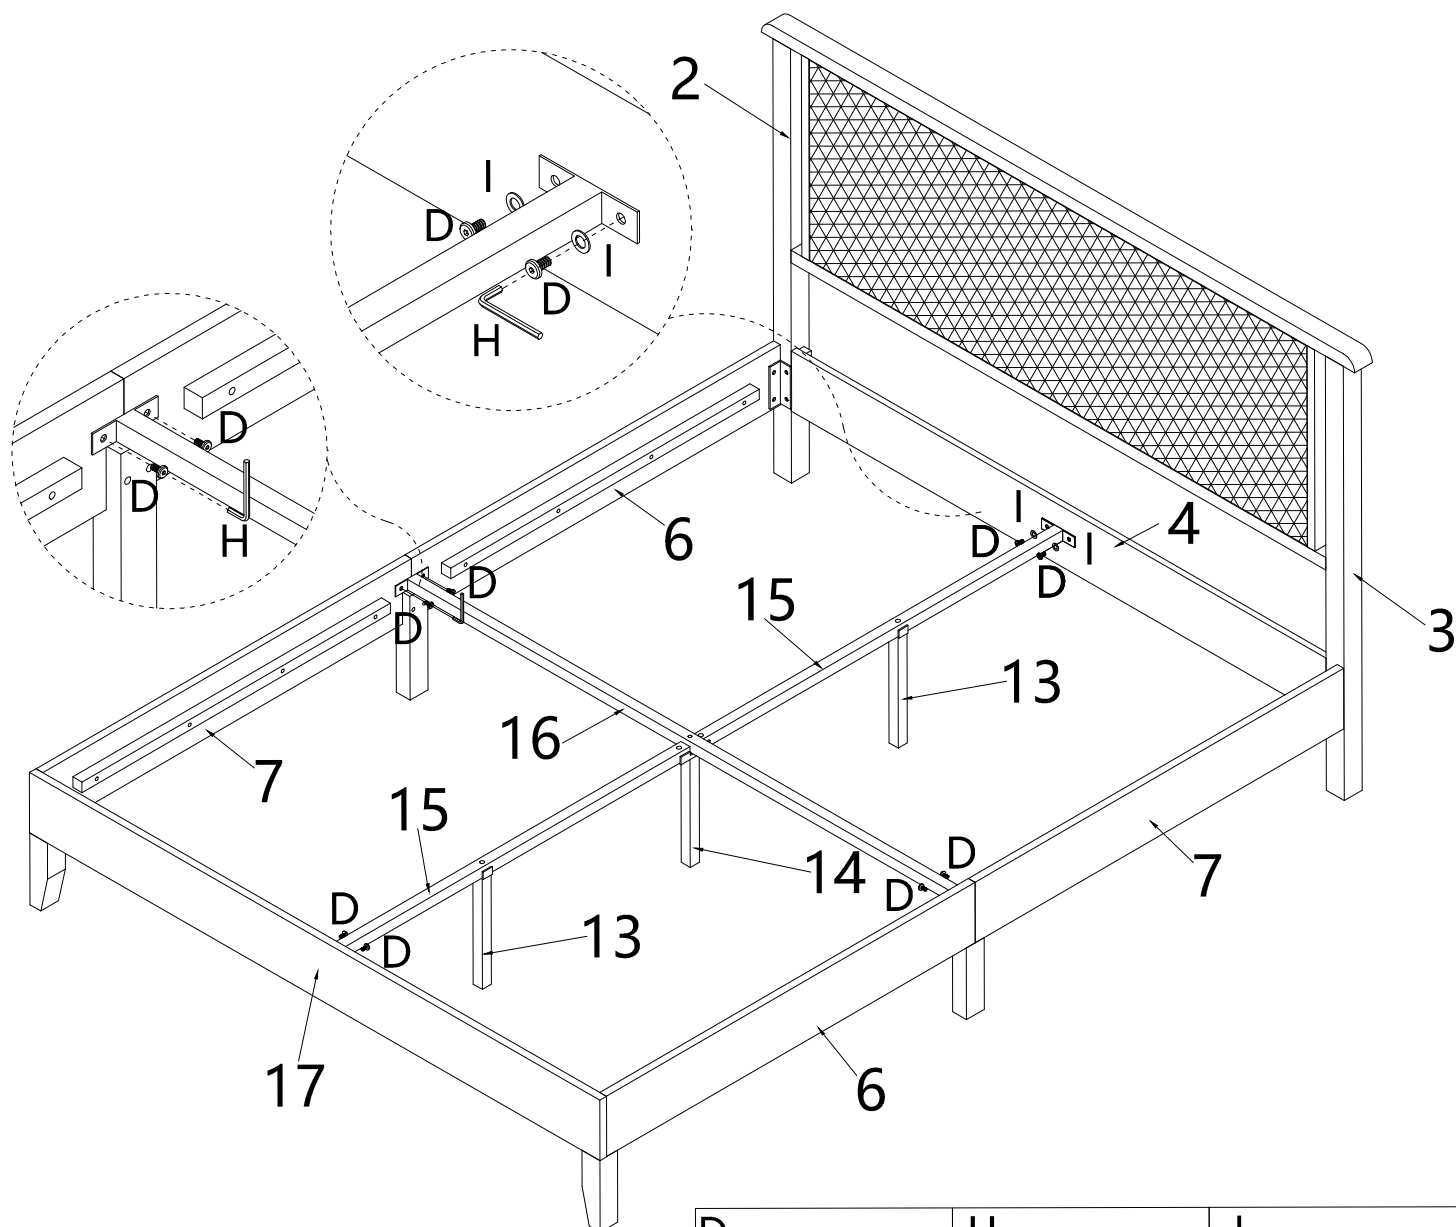Use screws(D) to fix the assembled bed beams to the headboard(4), side panels(6,7), and footboard(17).




D	M8*15	H	M5	I	M8
					
x8		x1		x2	

Assembly Instructions

Step 12: Slatted bed frame

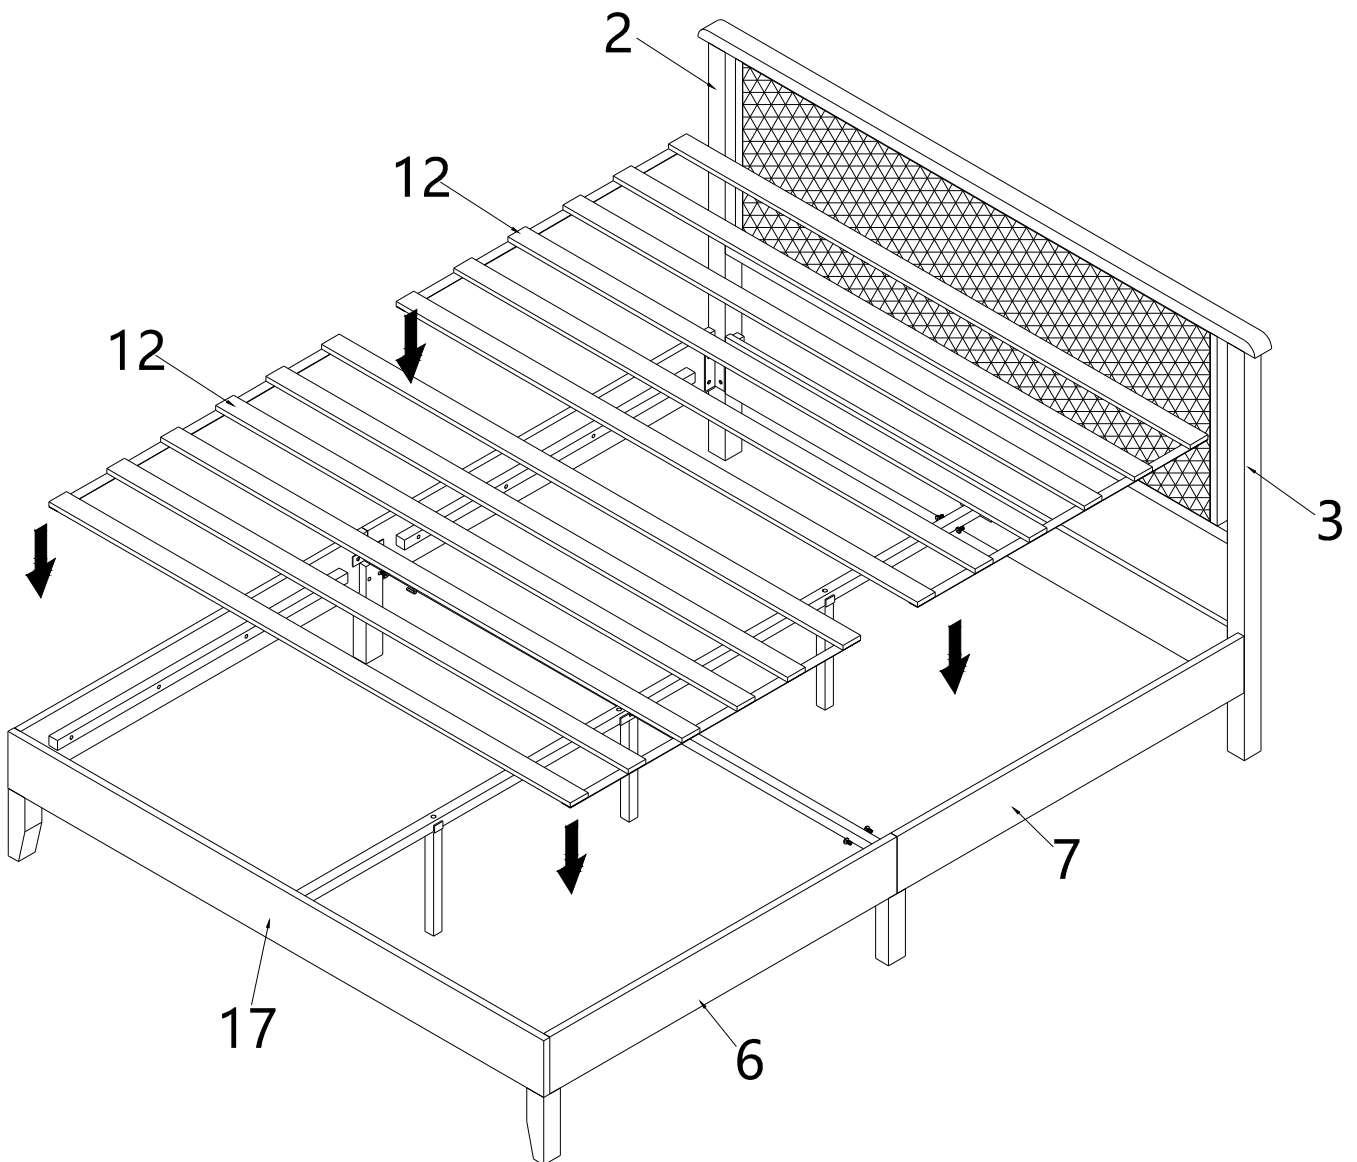Place the bed slats(12) on the installed bed frame as shown in the figure.



Problems You May Encounter

PROBLEMS	SOLUTIONS
Non-human caused damage during usage.	Please Keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide a satisfactory solution.
Mismatch of screw hole positions between components.	1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjust the direction of the component to check that the wrong hole position has not been selected.
Product is unstable after being assembled.	1. Check if the screws are tightened. 2. Read through out the manual, check are there any parts installed incorrectly or missing assembled.
Any missing or damaged components.	To solve the problem. We are committed to providing you with Free component shipping and replacement
More problems or the above problems could not be solved.	 Contact us, We will support you!  support-cs@hkfoam.com