






Assembly Instructions

Tips!

Check all the components & screws before assembly. **Do not install in case part is missing, contact us to get.** Send email with your question. We will resend within 24 hours.





A	 PVC PIPE+ LINK BUCKLE	2+1
B	 FIXED IRON SHEET	1+1
C	 FLOWERPOT	5
D	 TRAY	1
E		4

Return Policy

We believe you will absolutely love your new item. But if for some reason you want to return, please contact us directly before you decide to return your product. Our customer service organization can answer most concerns and assist you with any questions you may have about your new item, please email us first.

The item must be return within 30 days of delivery for a full refund. The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories.

Trouble shooting:

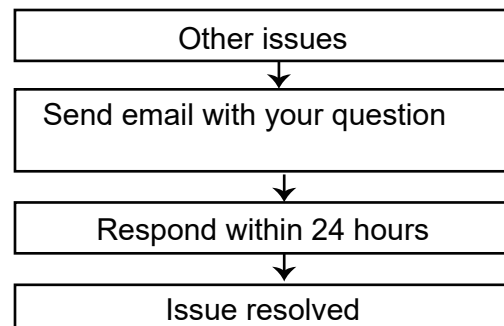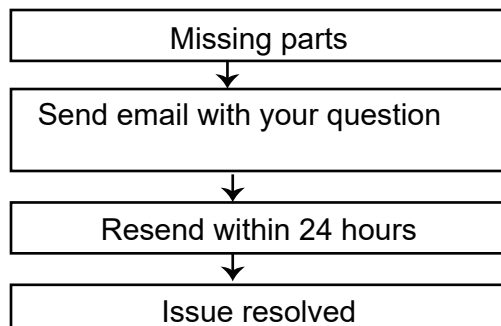

We control manufacturing and distribution ourselves, ensure the quality.



1. Place the flower pot on the tray.




2. Insert the pvc pipe into the middle hole of the flower pot.



3. If the flower pot has more than 3 layers, use an interface to connect the upper and lower 2 pvc pipes.



4. Place the hanging chain into the pvc pipe and slide it to the bottom of the tray.

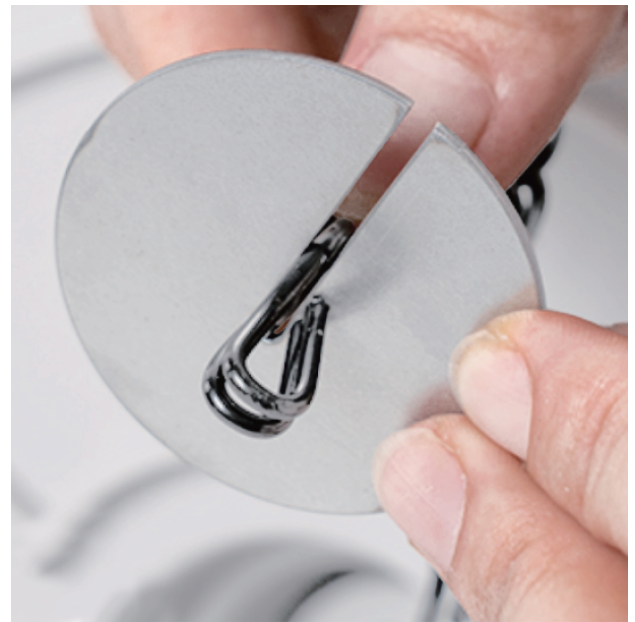

5. Clip the hanging chain into the opening of the iron sheet.



6. Place the iron sheet in the middle hole at the bottom of the tray.



7. Install the wheels one by one.