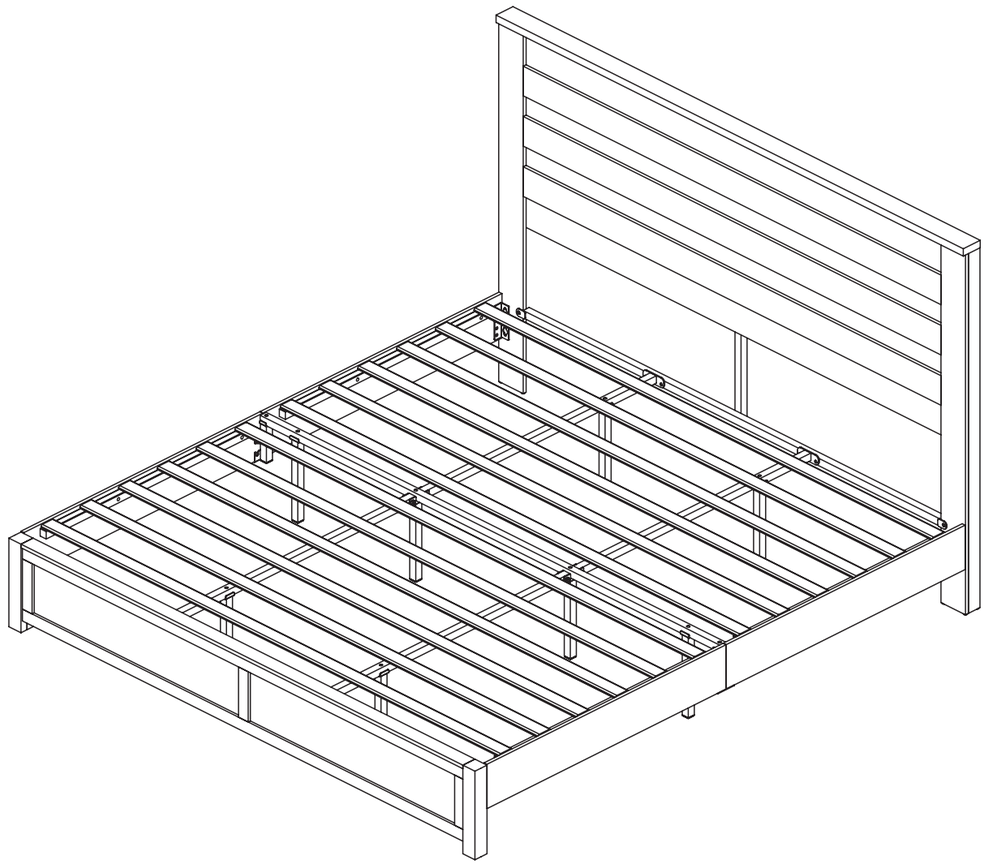
Panel Bed
Assembly Instructions



Friendly Customer Service

Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.

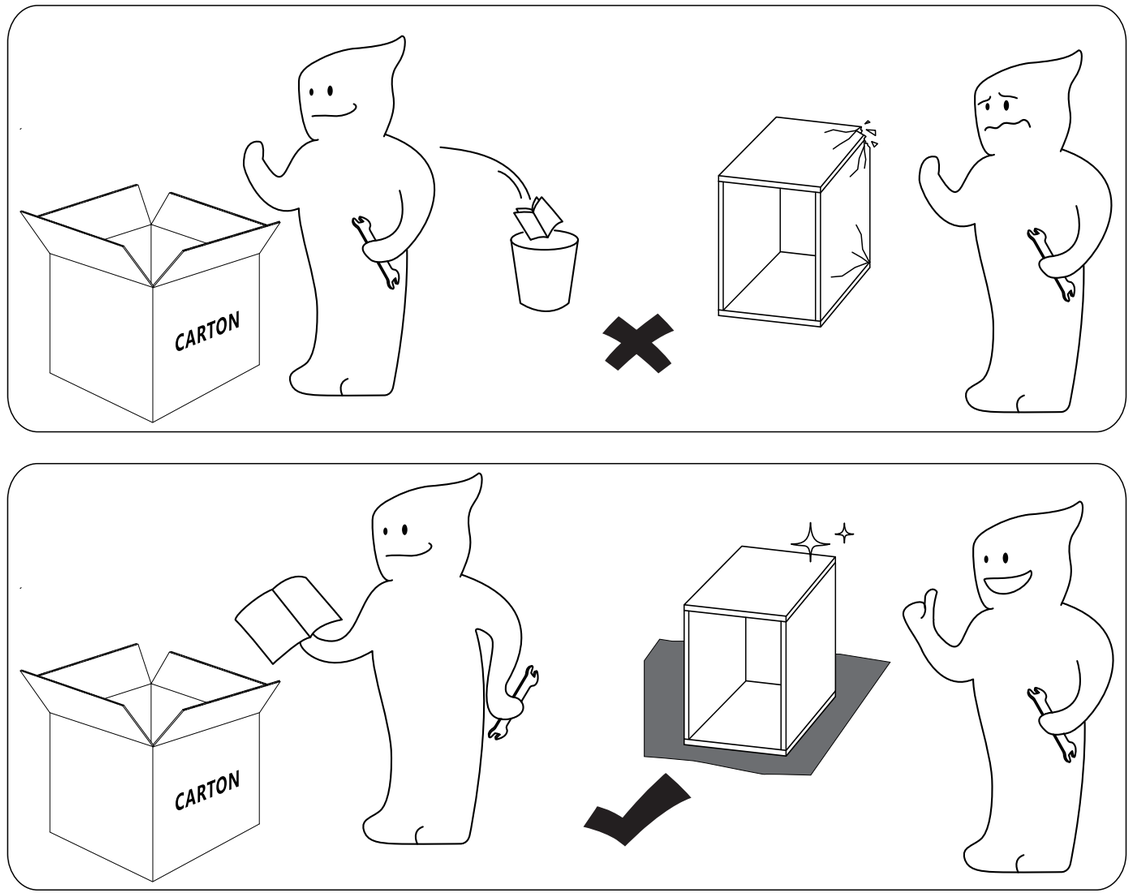
Contact us

Phone: +1 (901) 347-2181 (US) Mon-Fri 9am - 5pm (PST)
E-Mail: support@jocisland.com （Get efficienct answer within 12 hours）

ASSEMBLY INSTRUCTIONS


! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.



































Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

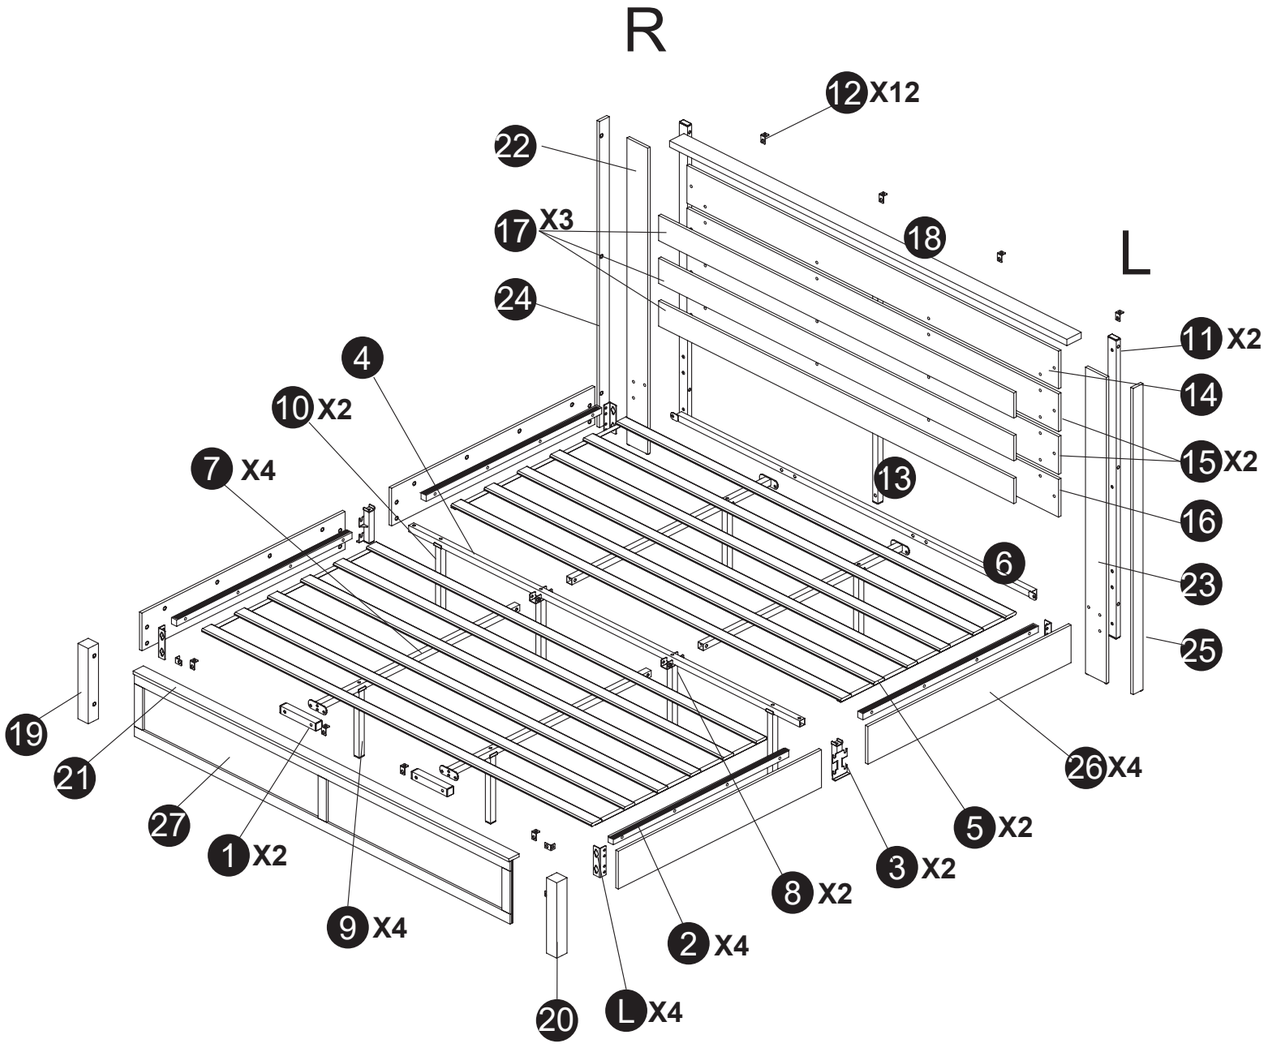For easier and better assembly, **2** or more adults are required.




PARTS LIST

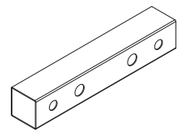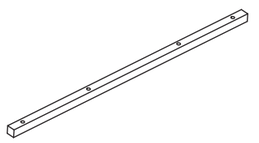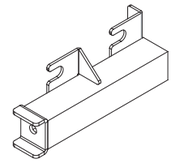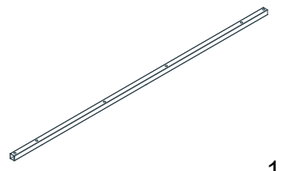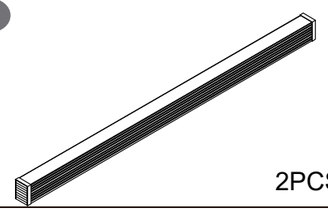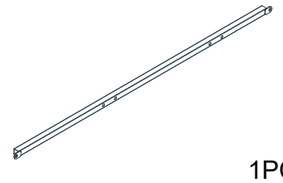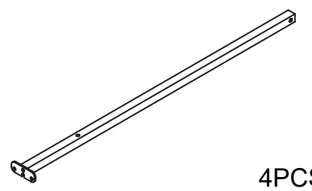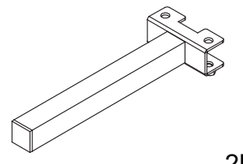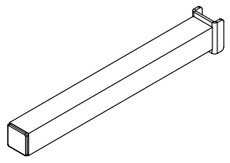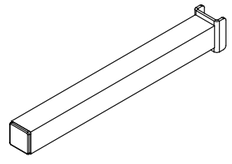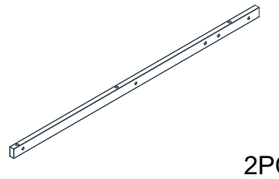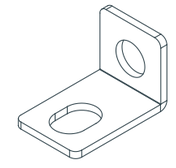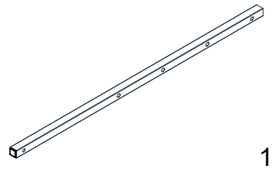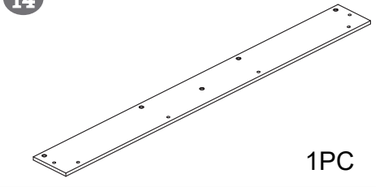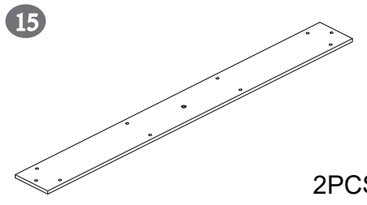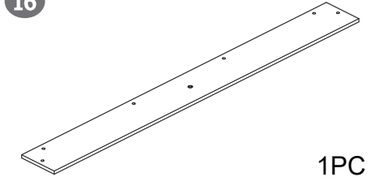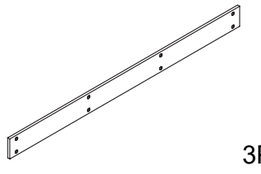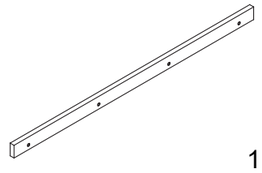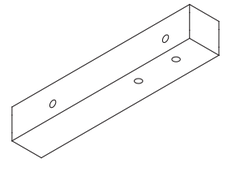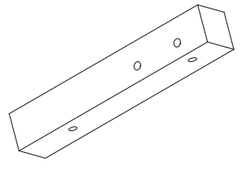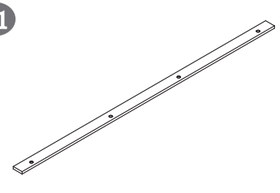1  2PCS	2  4PCS	3  2PCS
4  1PC	5  2PCS	6  1PC
7  4PCS	8  2PCS	9  4PCS
10  2PCS	11  2PCS	12  12PCS
13  1PC	14  1PC	15  2PCS
16  1PC	17  3PCS	18  1PC
19  1PC	20  1PC	21  1PC

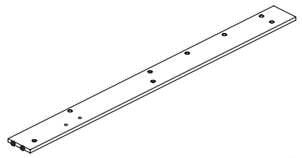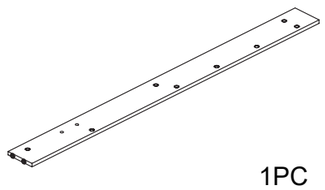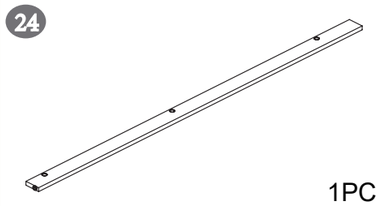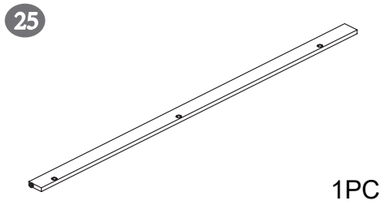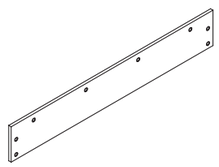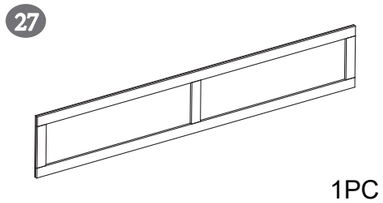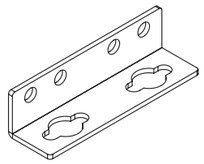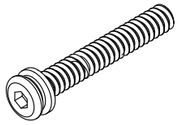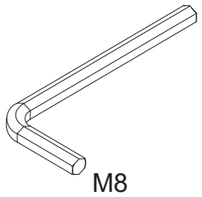
22  1PC	23  1PC	24  1PC
25  1PC	26  4PCS	27  1PC
L  4PCS		
A  M8*12 42PCS	B  M8*20 40PCS	C  M8*30 6PCS
D  M8*35 Color Zinc 25PCS	E  M8*40 18PCS	F  M8*50 6PCS
G  M8*18 Color Zinc 4PCS	H  M8 1PC	

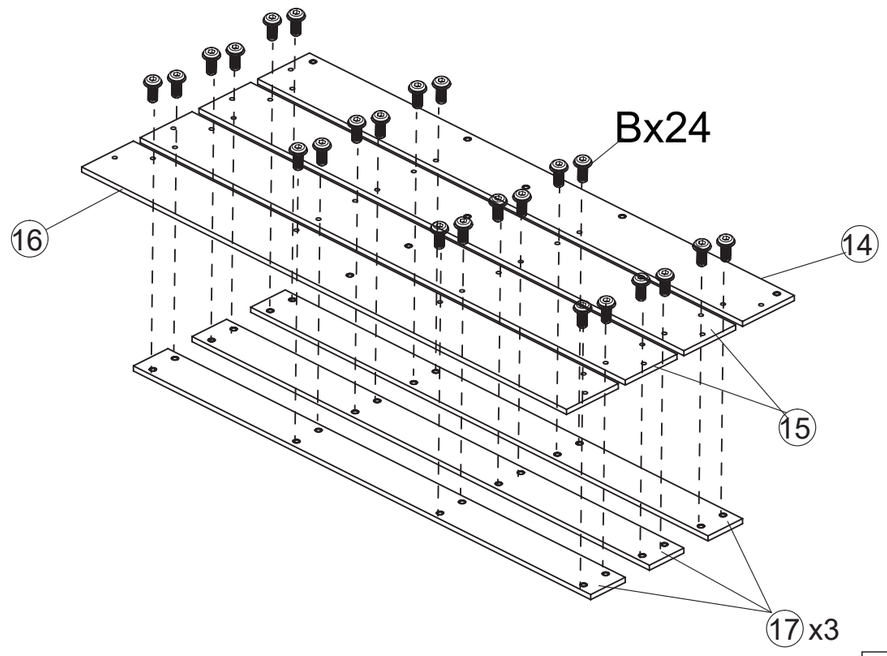1




B	M8*20	24PCS

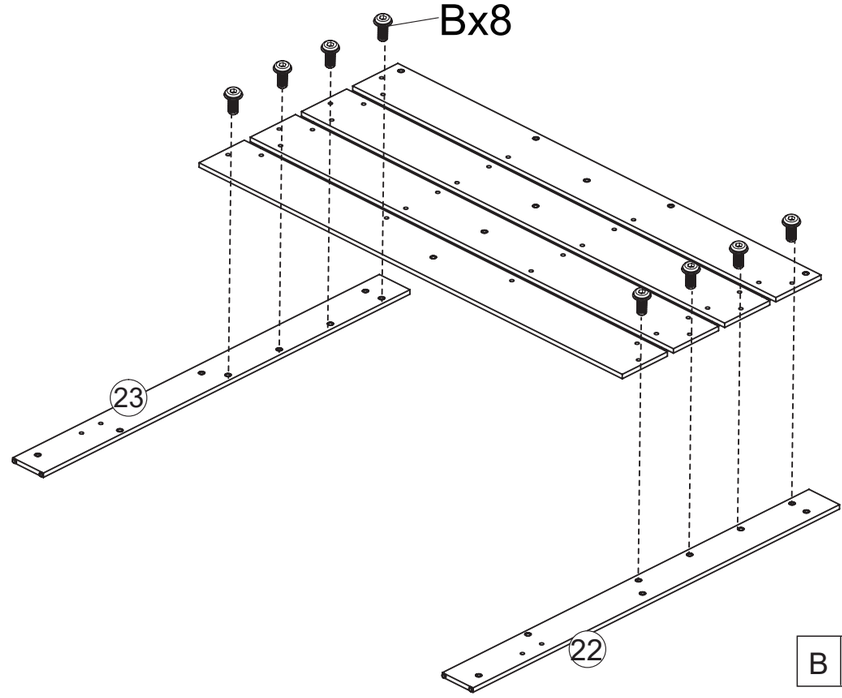2




B	M8*20	8PCS

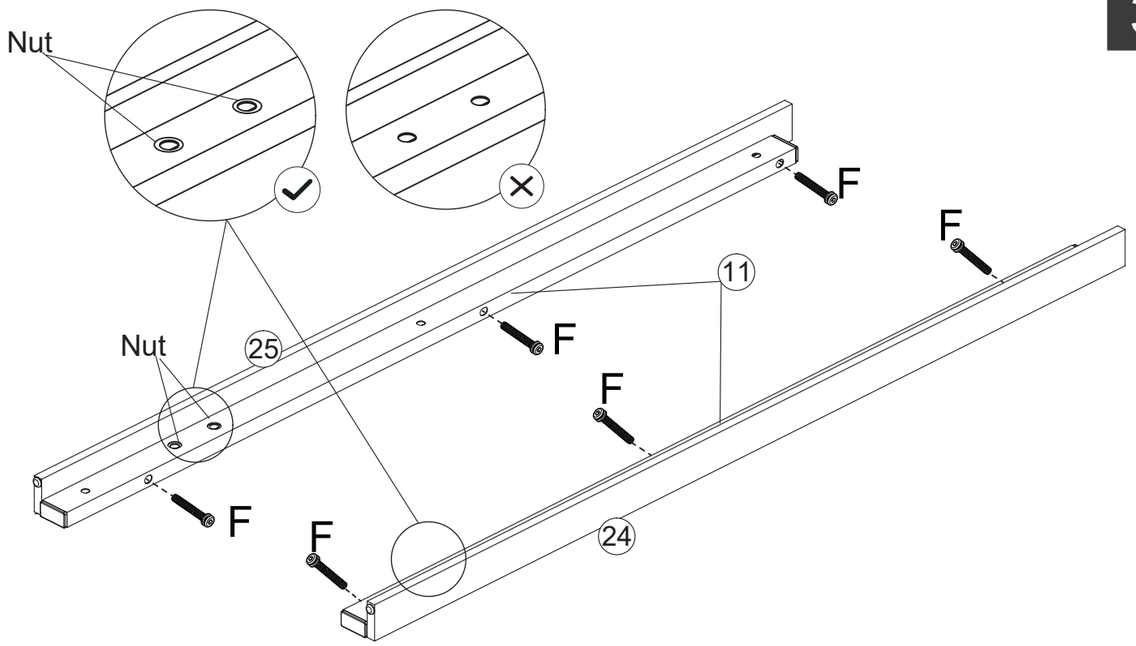3




F	M8*50	6PCS

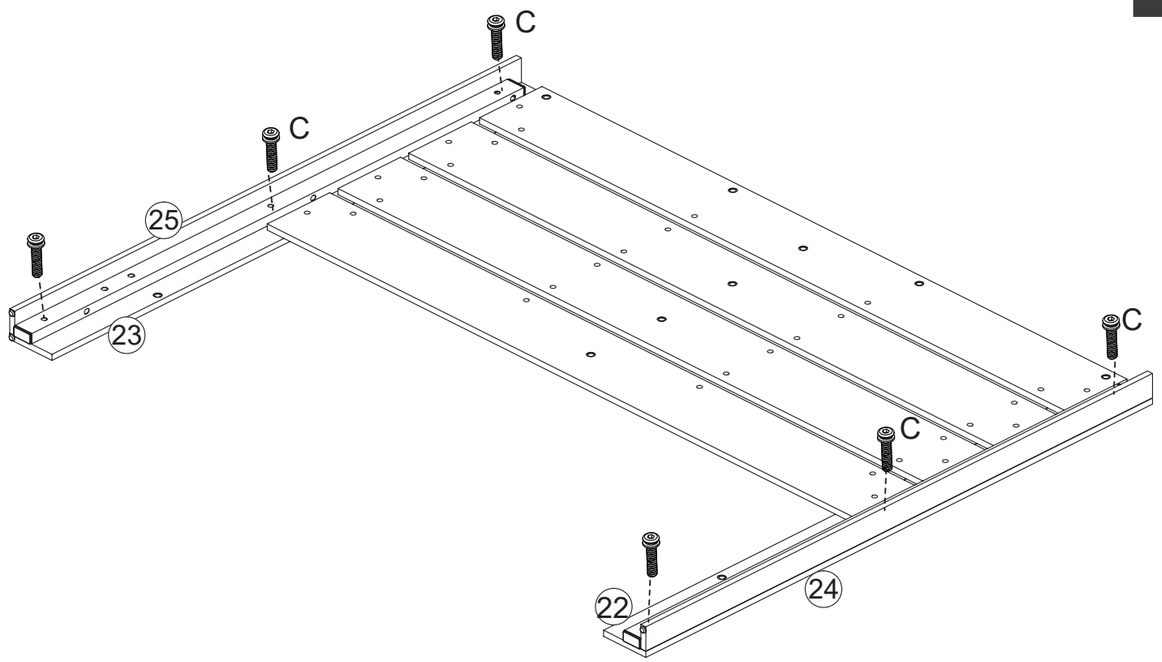4




C	M8*30	6PCS

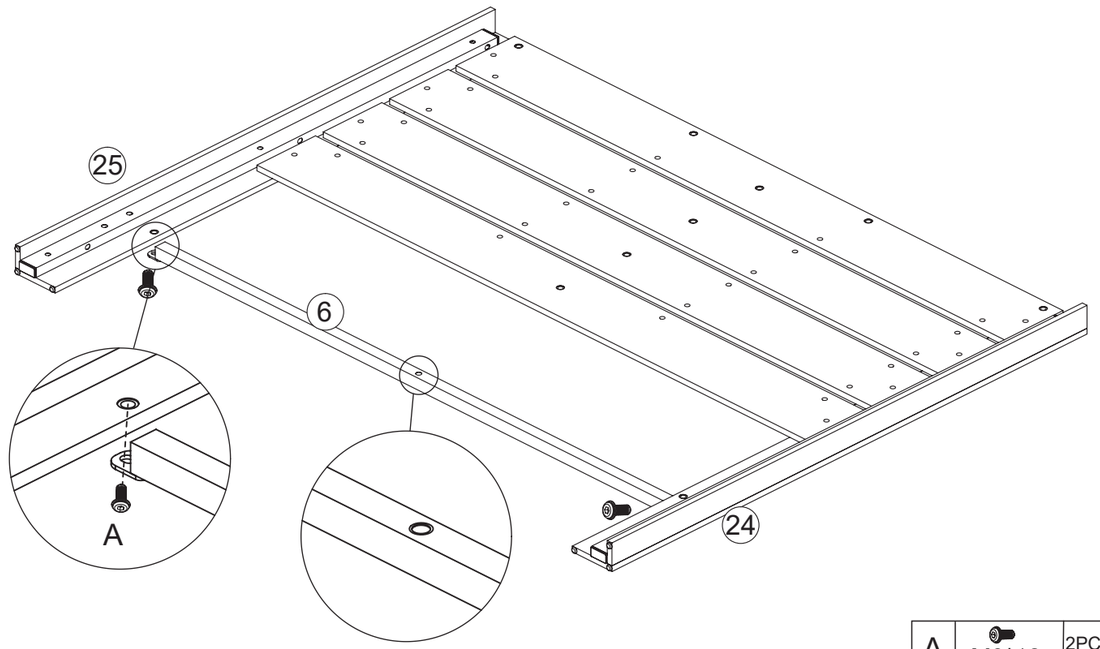5



A	M8*12	2PCS

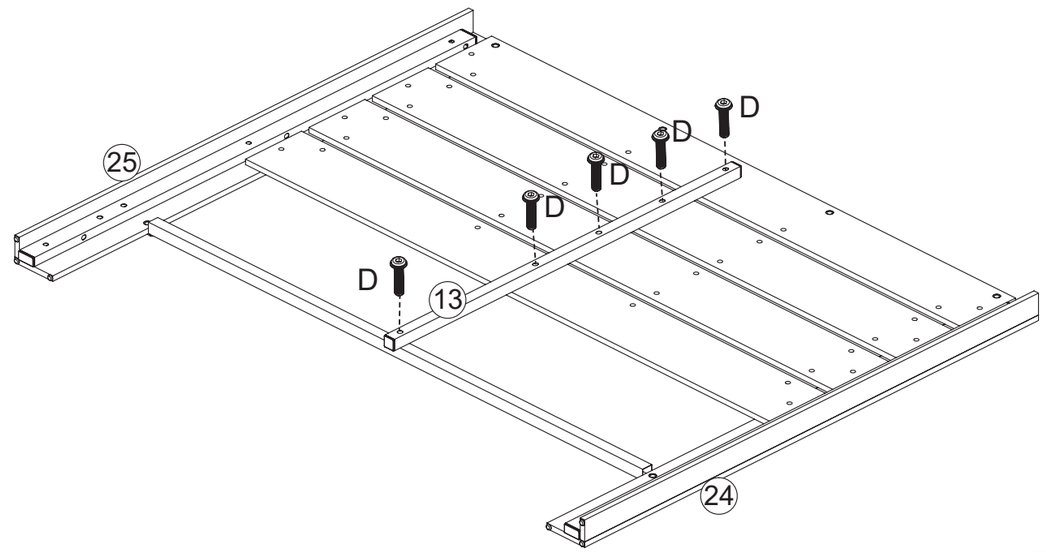
6



Color Zinc


D	M8*35	5PCS

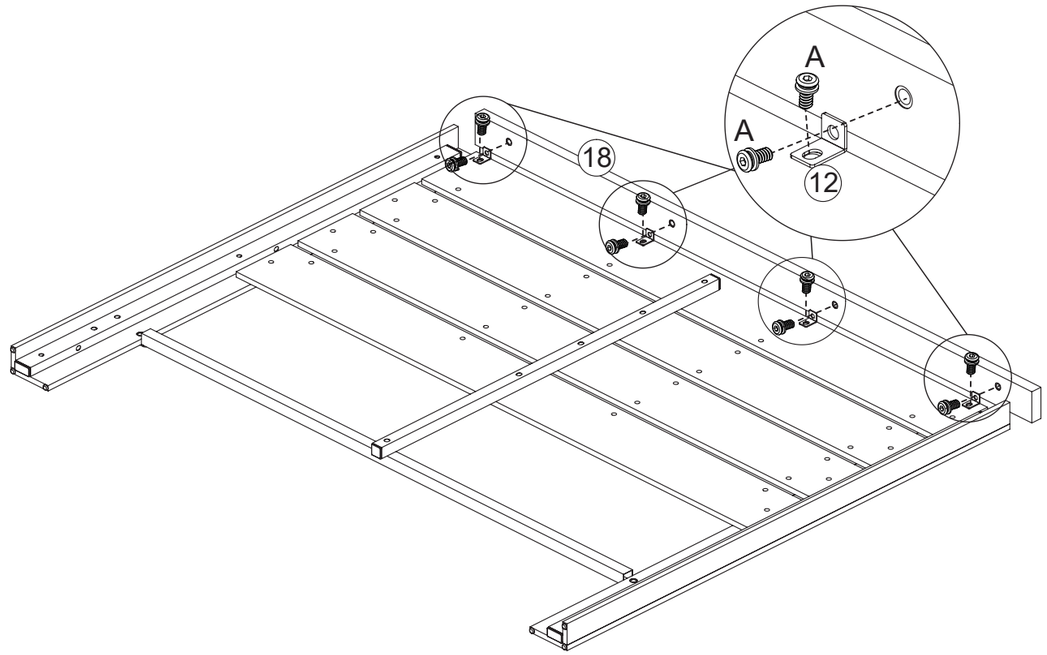7




A	M8*12	8PCS

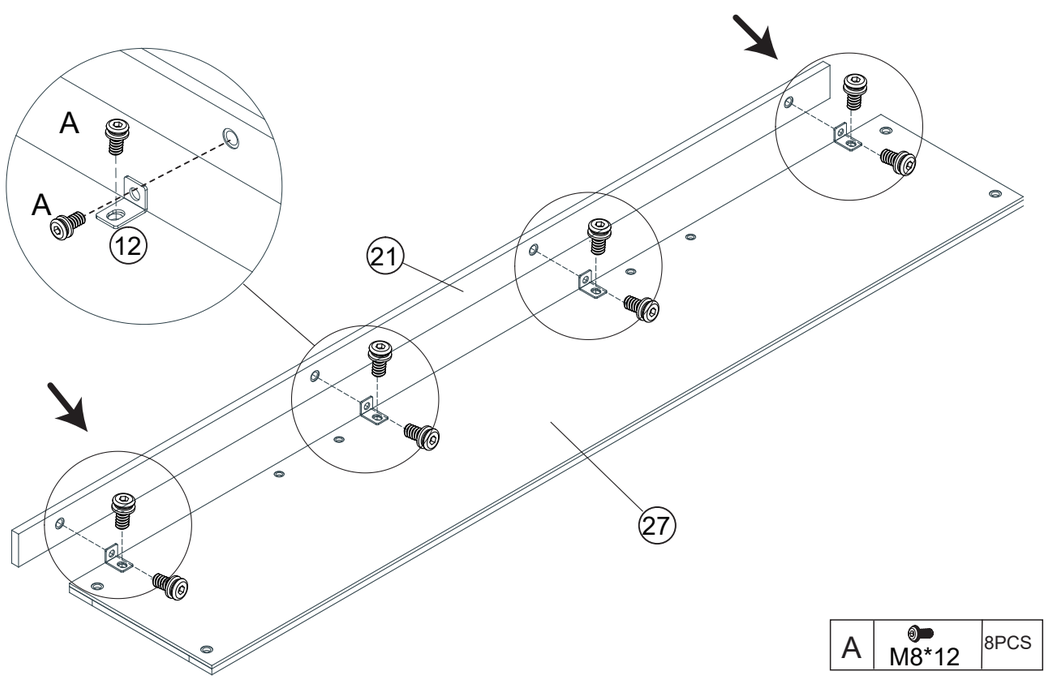8




A	M8*12	8PCS

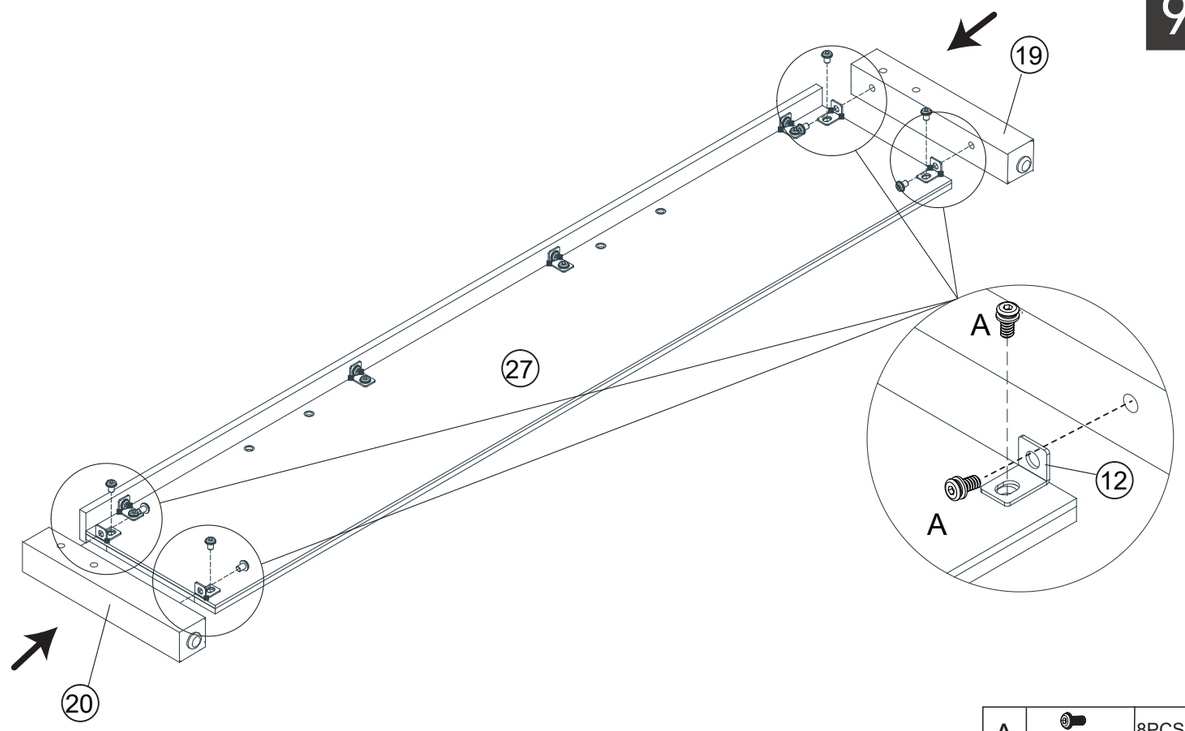9




A	M8*12	8PCS

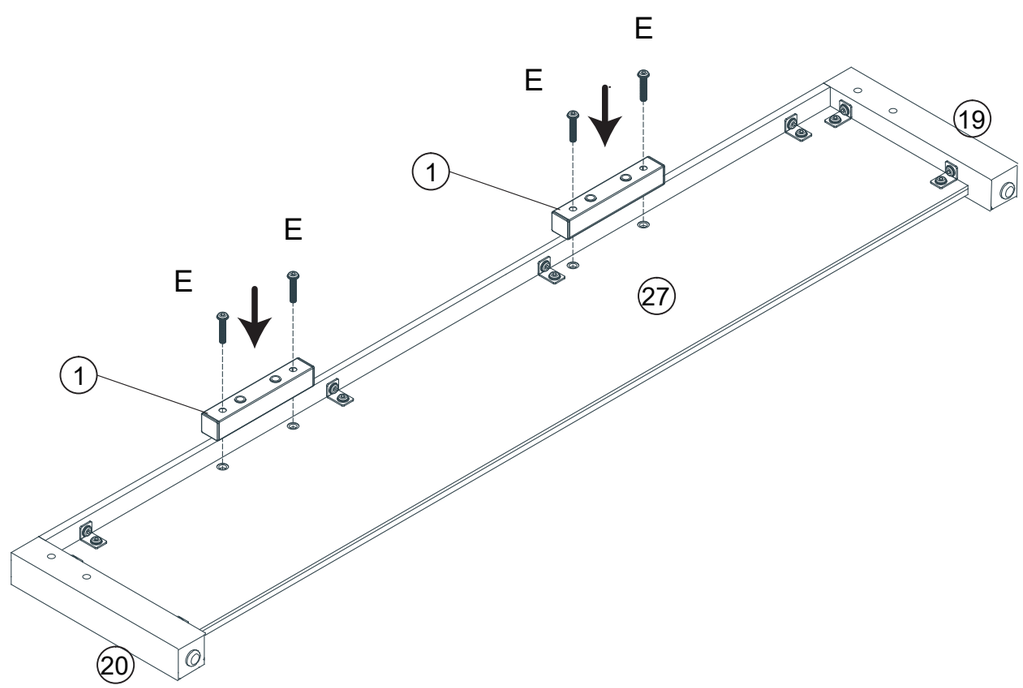10




E	M8*40	4PCS

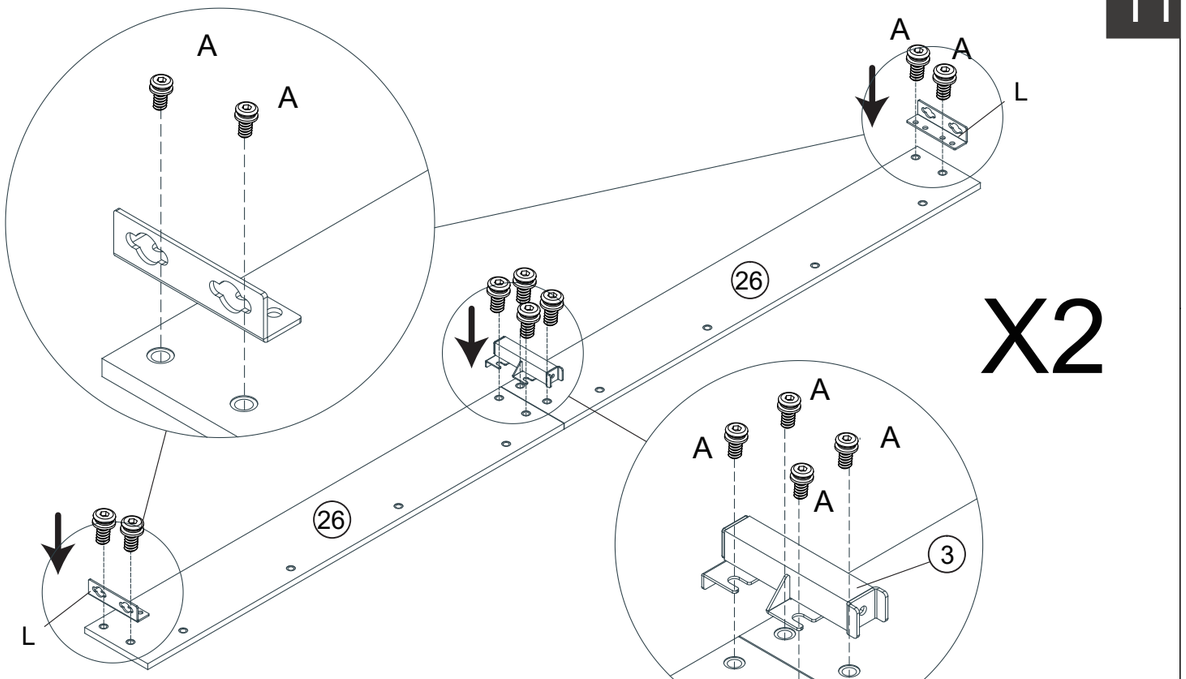11



A	M8*12	16PCS

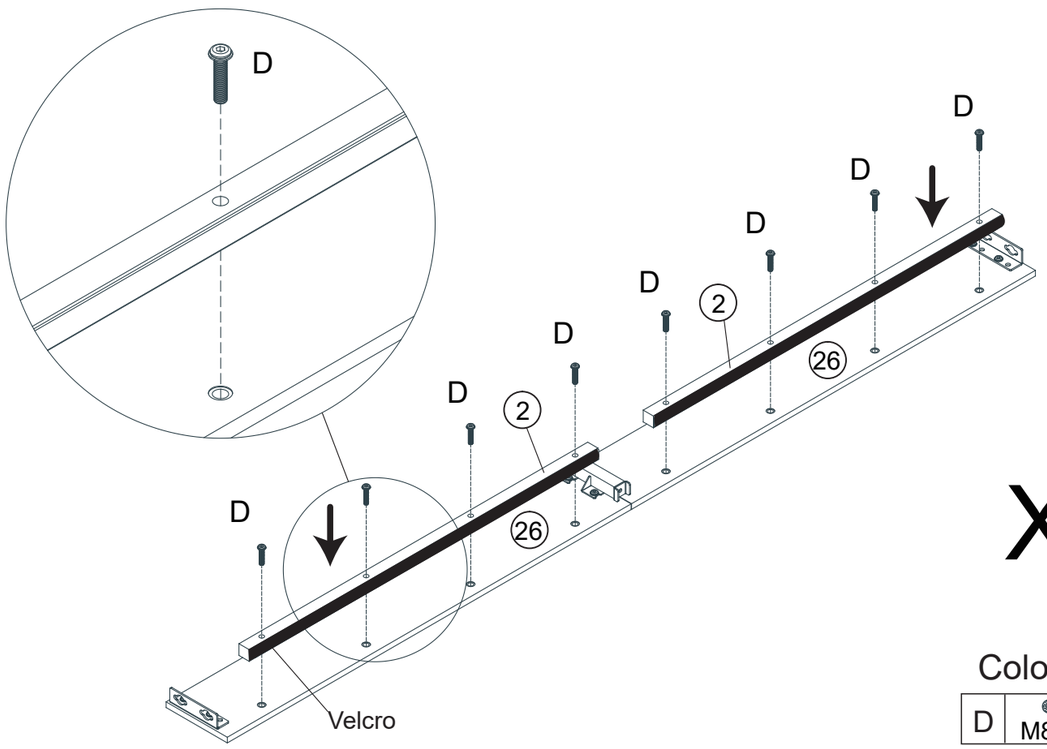12




Color Zinc

D	M8*35	16PCS

13

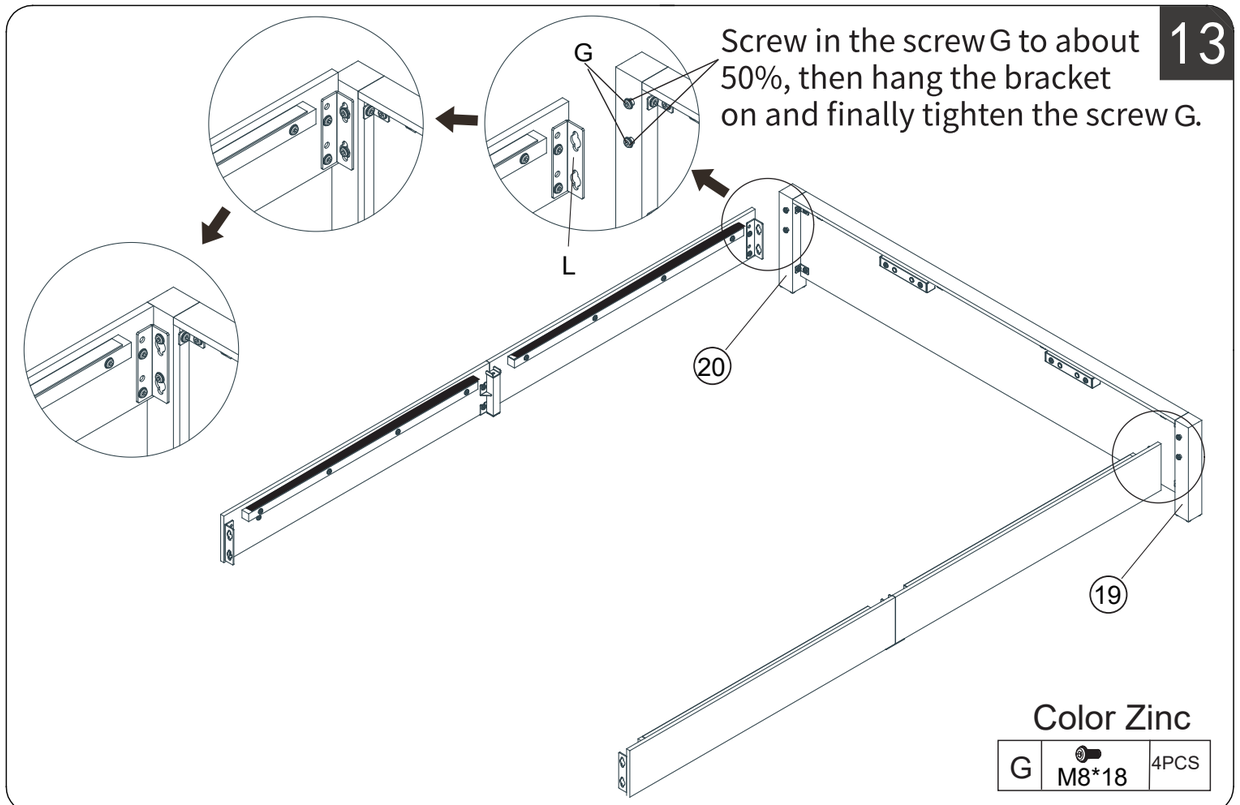Screw in the screw G to about 50%, then hang the bracket on and finally tighten the screw G.




Color Zinc

G	M8*18	4PCS

14

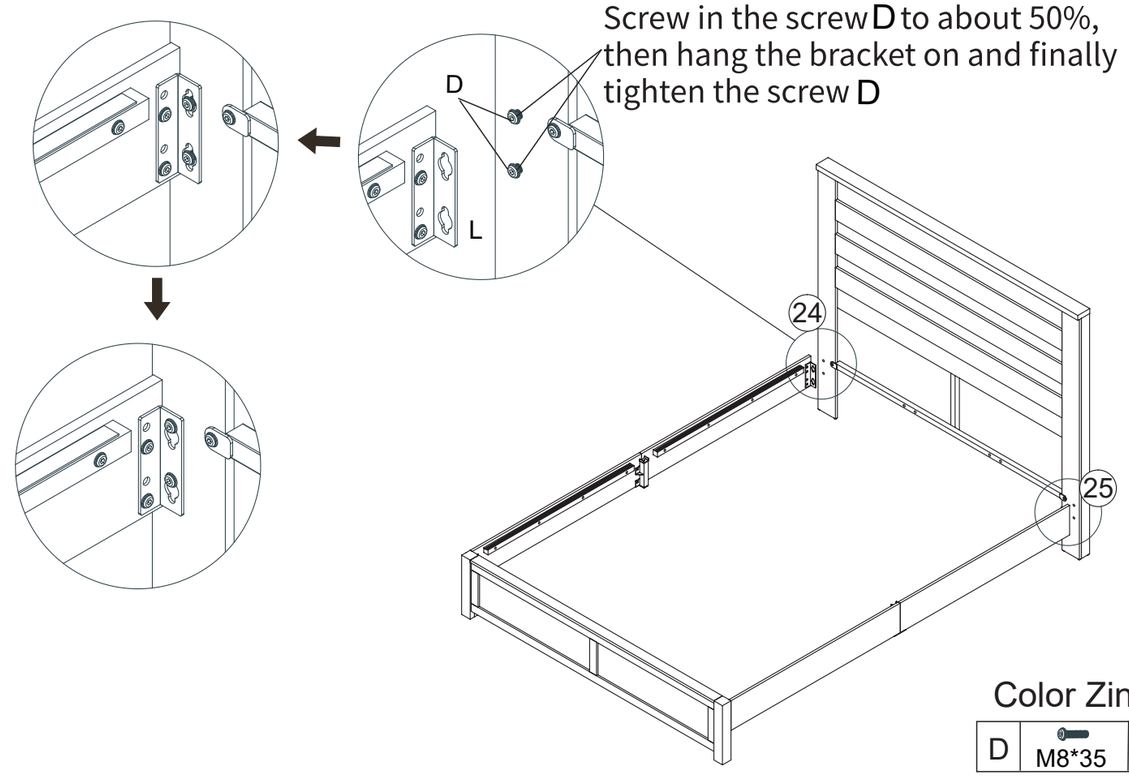
Screw in the screw D to about 50%, then hang the bracket on and finally tighten the screw D



Color Zinc

D	M8*35	4PCS

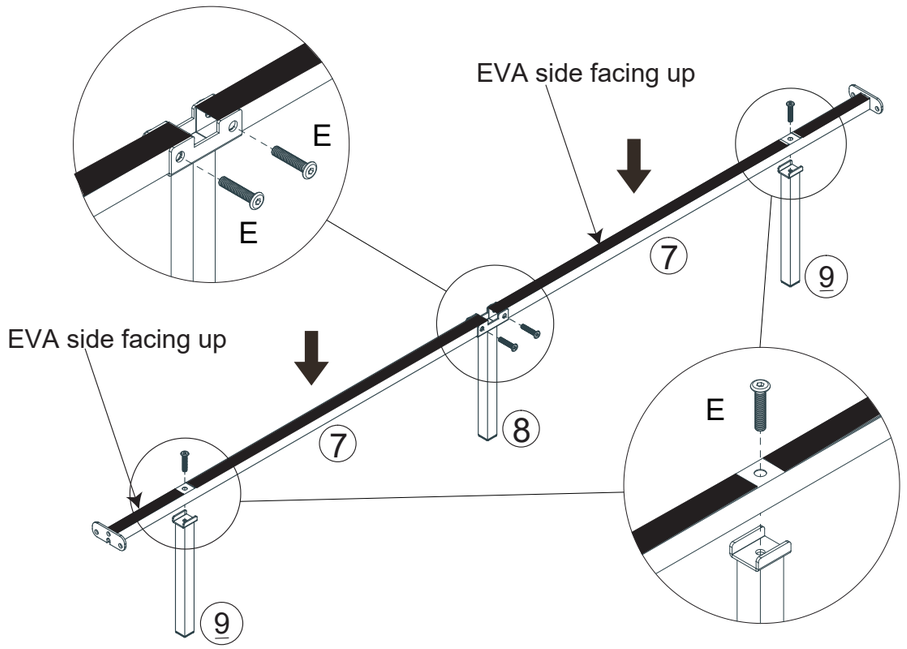
15



X2


E	M8*40	8PCS

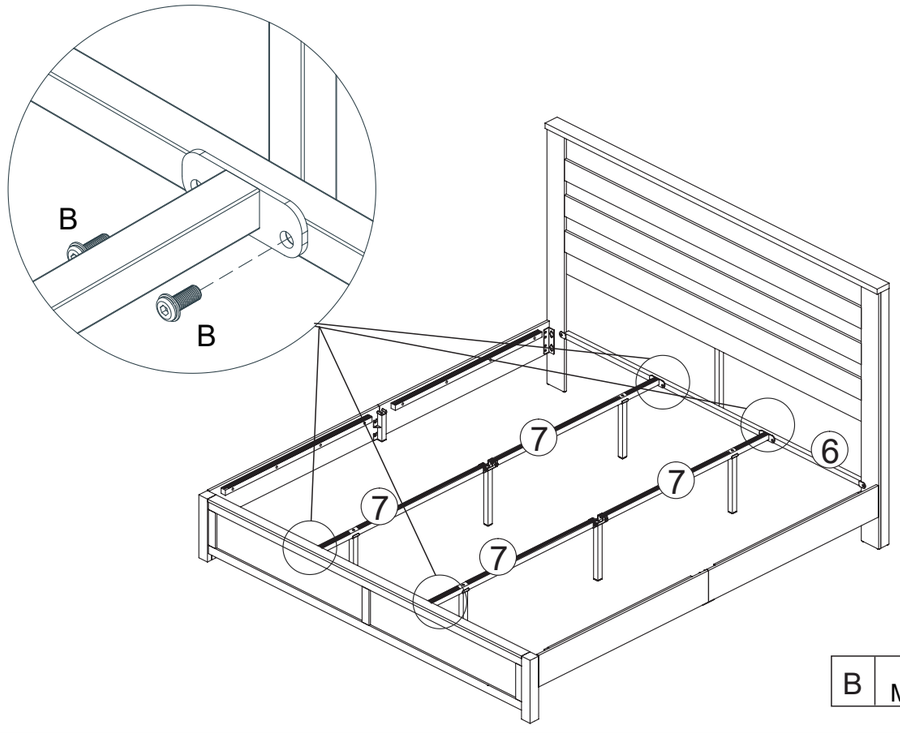16




B	M8*20	8PCS

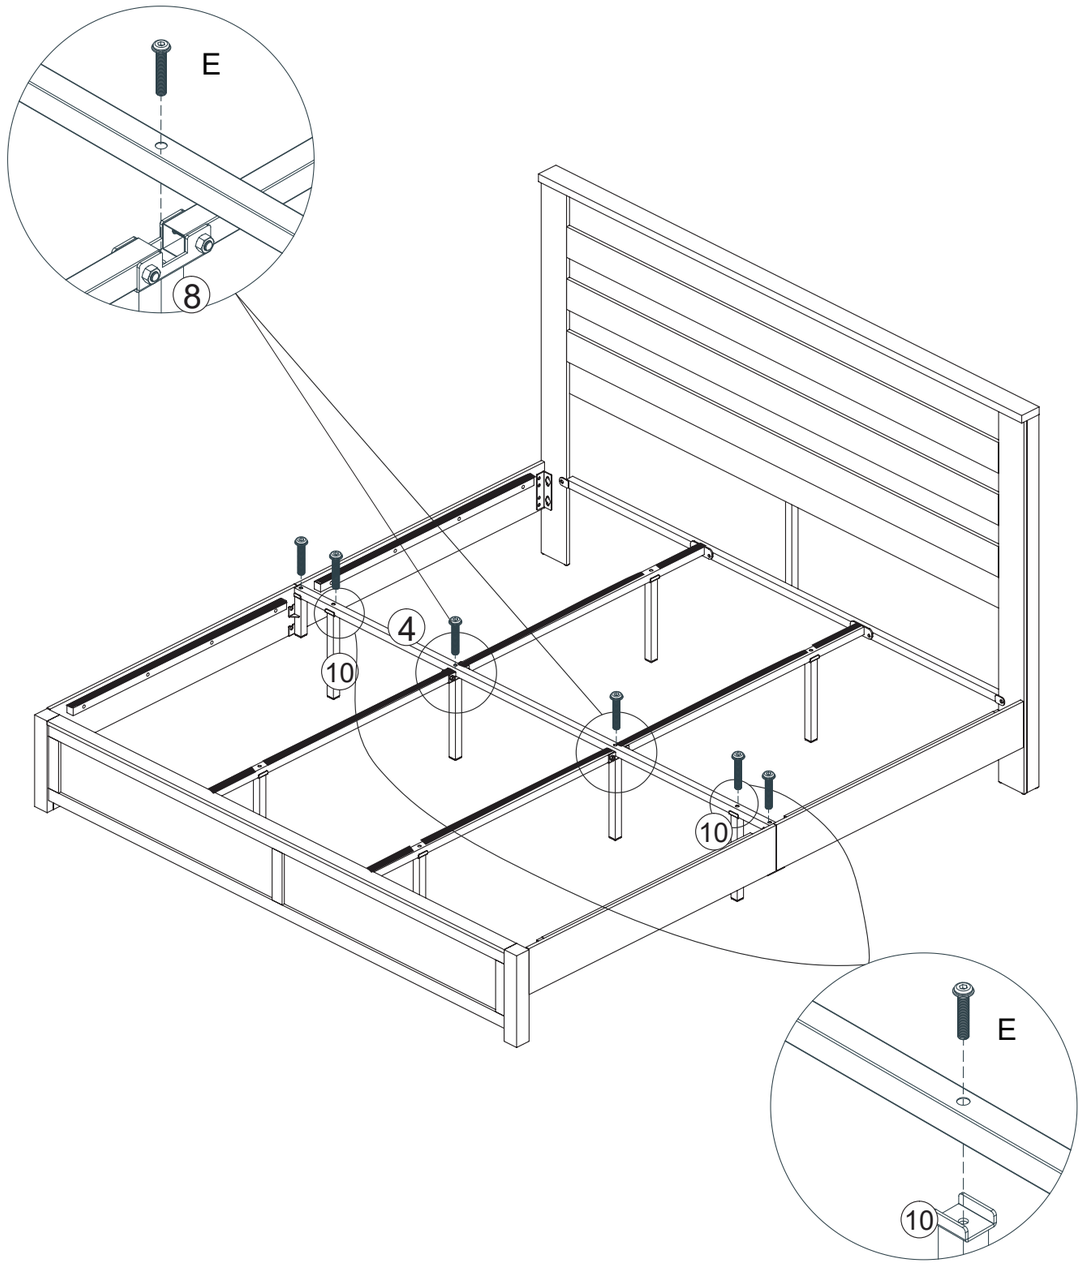17




E	M8*40	6PCS

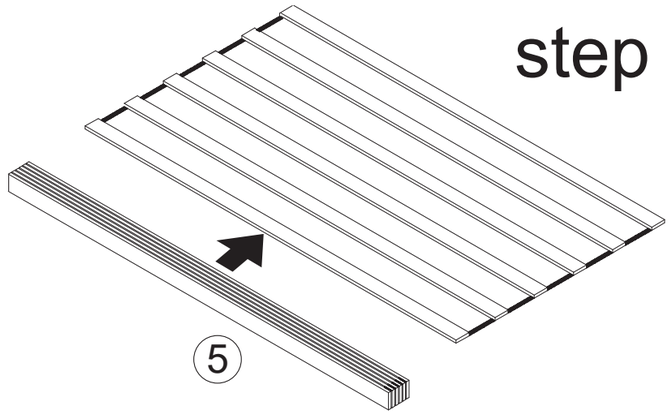
step 1



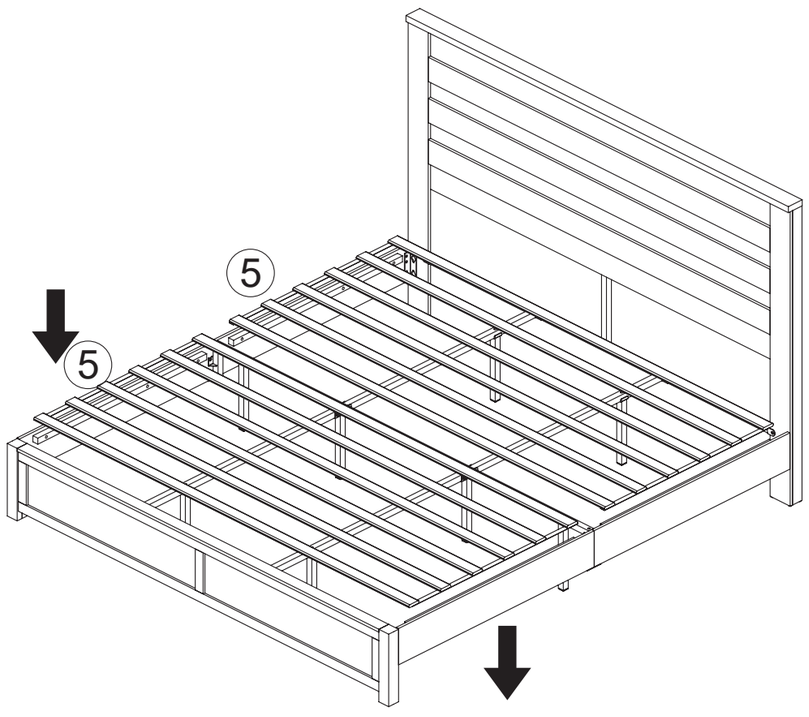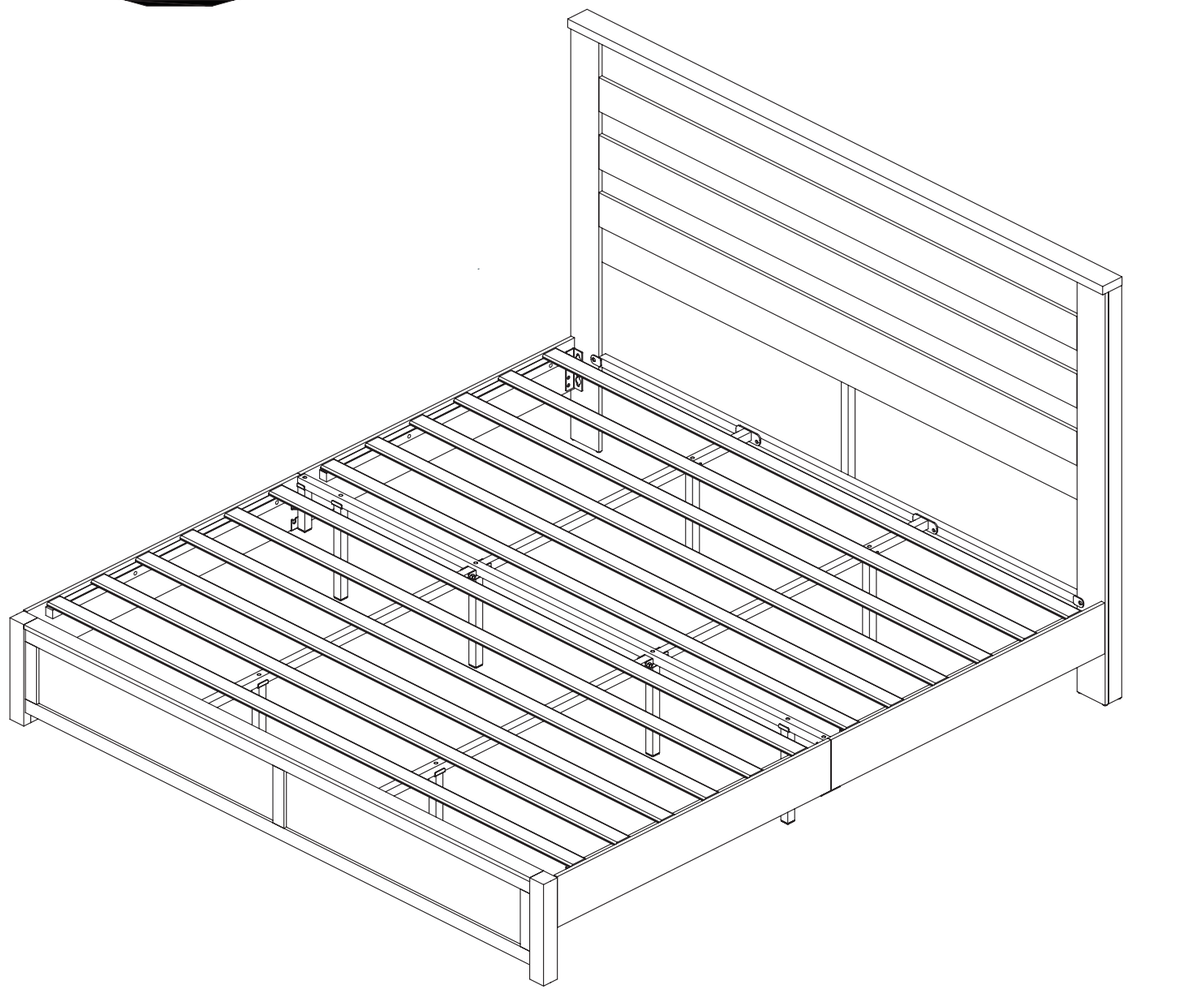step 2







Installation Complete