


Mounting Instructions



STEP1

Confirm the installation location and mark the wall with a pencil.

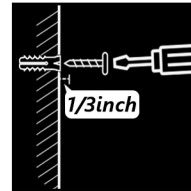

STEP4

Insert the screw into the expansion screw and make sure there is 1/3 of an inch between a screw and the wall.




STEP2

Point on the wall with a power drill, and drill a pilot hole for the anchor.



STEP5

Attach the mirror to the wall with the screw. Make sure the mirror is securely mounted.

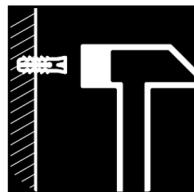

STEP3

Insert the expansion screws into the holes until they are all flush with the wall.



STEP6

Please wipe clean with a soft cloth. Note: Do not use harsh or abrasive cleaners or scouring pads.