



INSTALLATION AND CARE INSTRUCTIONS

Insulated Cordless Roman Shade

PACKAGE CONTENTS

- One cordless roman shade on headrail.
- One mounting bracket kit.

Mounting bracket kit includes:

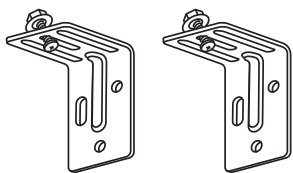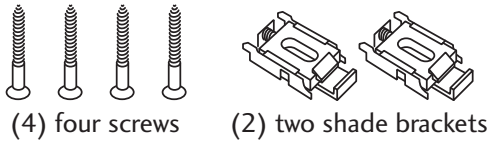

OPERATION

Your Cordless Roman Shade operates with a deluxe spring loaded retracting mechanism. The height or length of the shade is controlled by the center control handle on the back of the bottom most panel.

To lengthen the shade, pull the handle towards the floor. When you have pulled the shade down to the desired length, stop, then pull again slightly to lock into place.

To raise the shade, pull the handle down slightly and release.

IMPORTANT: Always use the handle to raise and lower the shade. Pulling on the bottom cross members of the shade to raise and lower, will cause premature deterioration of the product and will soil the fabric.

CLEANING

Use feather duster or lightly vacuum with a soft brush attachment.

INSTALLATION

Bracket Location & Installation


Decide whether your shade will be mounted *outside* or *inside* the window frame.

When brackets are securely mounted, proceed to "Securing the Headrail to the Brackets."

Inside Mount

Place shade bracket with spring loaded plastic tooth facing outward as shown. Bracket should be secured 3" inside the outer edge of where the end of the shade head rail will lie. Repeat this step to install the second bracket at the other side of the window frame.

When turning the screw, do not over tighten. Overtightening can put pressure on the inner bracket and constrict movement, preventing the inner part of the bracket from latching to the headrail. If you find the headrail will not latch to the bracket, try slightly loosening the screw.

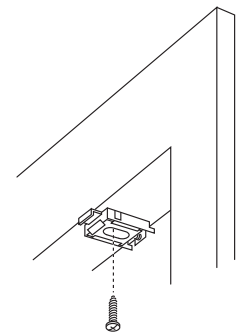


Outside Mount

1. Screw "L" bracket to the window molding as shown. "L" bracket should be secured 3" inside the outer edge of where the end of the shade head rail will lie. Repeat this step to install the second bracket at the other side of the window frame.

2. Attach the shade brackets snugly to the "L" brackets as shown. The spring loaded plastic tooth should be facing outward.

When attaching bracket to outside mount L bracket adapter, do not overtighten the nut and bolt. Overtightening can put pressure on the inner bracket and constrict movement, preventing the inner part of the bracket from latching to the headrail. If you find the headrail will not latch to the bracket, try slightly loosening the nut.

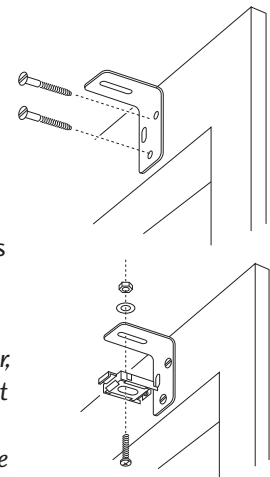

Securing the Headrail to the Brackets:

1. Hook the back of the inside of the headrail onto the metal teeth at the rear of the brackets.

2. Press the front of the headrail against the spring-loaded plastic tooth on the front of the bracket while simultaneously pressing the plastic tooth towards the window. When headrail is flush with the brackets release the pressure from the spring loaded plastic tooth and headrail should be firmly in place and ready for use.

