

ITEM NO . NSXY1914

Scan for manual ,
video & advice

If you have any questions or concerns,
don't hesitate to reach out to us.

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)
Email: customerservice@hulalahome.com


MAINTENANCE AND WARNINGS


Thank You For Choosing Our Furniture.
Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :
This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
80 LBS

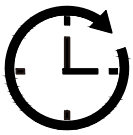
Installation:
40 minutes.

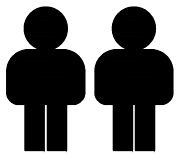
Two Person



Before You Start

Please follow the steps below:

- Unbox the package and check if all parts and accessories are complete.
- If you find something missing, stop assembly and contact your supplier immediately.
- Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
- NOTE:Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty

We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having dificulty with assembly? Missing parts? Please send email with your order number to **customerservice@hulalahome.com**


For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis,or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all the parts in the box and start the installation.

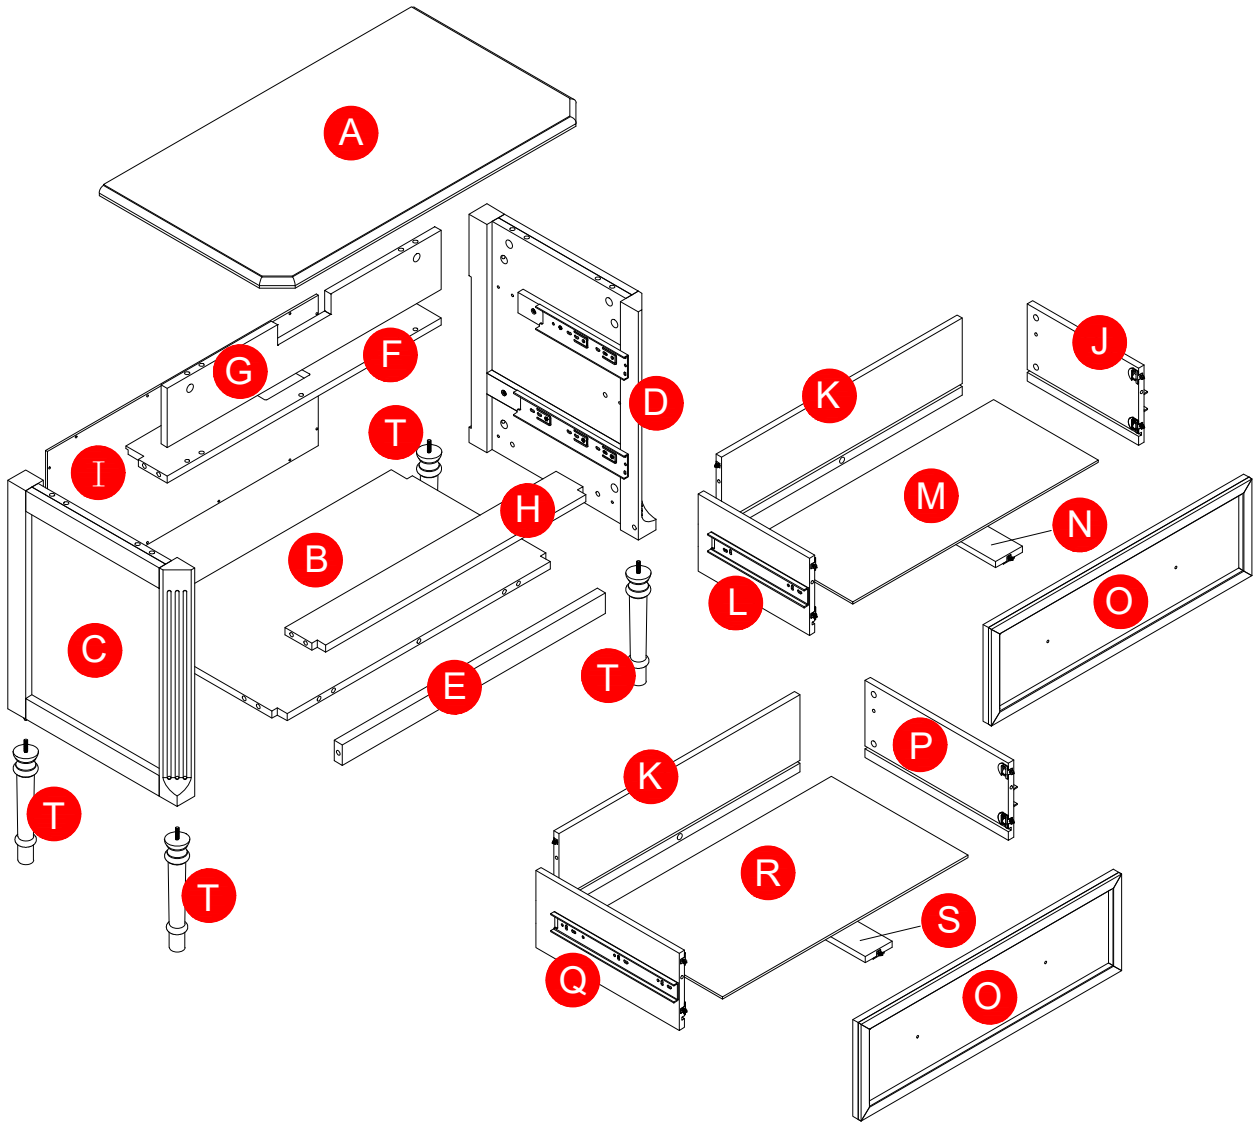


Parts List

A x1

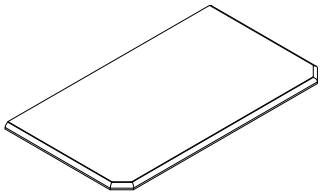


Top panel

B x1

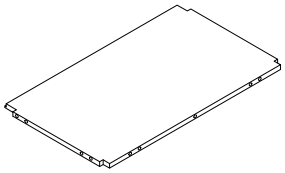


Baseplate

C x1

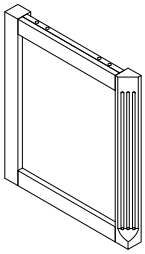


Left side panel

D x1

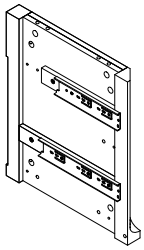


Right side panel

E x1

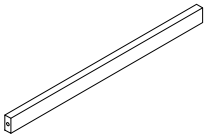


Link bar

F x1

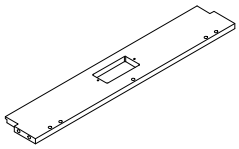


Rear connecting plate

G x1

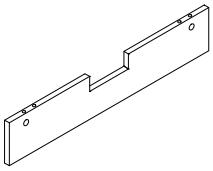


Inner back panel

H x1

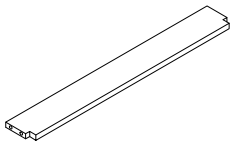


Middle link bar

I x1

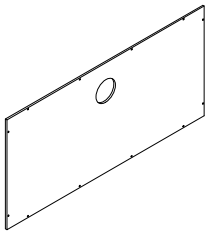


Back panel

J x1




Small drawer right side panel

K x2

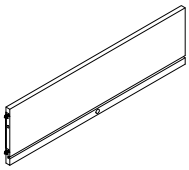


Drawer back panel

L x1




Small drawer left side panel

M x1

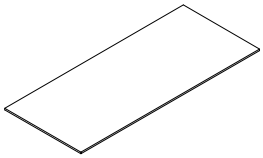


Small drawer bottom panel

N x1




Small drawer support

O x2

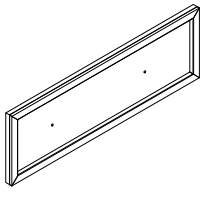

Drawer Front Panel


P x1

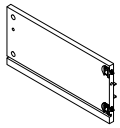

Drawer right side panel


Parts List

Q x1




Drawer left side panel

R x1

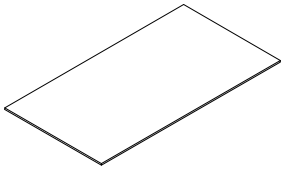

Drawer bottom panel

S x1



Drawer support


T x4



Legs

Hardware List

1 x19+2



Bolt
Ø6*35mm

2 x19+2




Eccentric wheel
Ø15*9.5mm

3 x4




Knobs
Ø32*23mm

4 x12+2




Screw
Ø3*15mm

5 x2




Screw
Ø3.5*12mm

6 x3




Direct repair screw
Ø6*50mm

7 x26+2



Wood plug
Ø8*30mm

8 x1

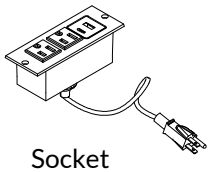


Socket

9 x4



Bolt
M4*16mm

10 x1




Allen Key

11 x2




Wall anchor

12 x1




Screwdriver
(Not Included)

13 x2



Screw
Ø3.5*30mm

14 x2




Screw
Ø3.5*20mm

15 x2



Anti-tip
component

16 x1





Tie


ASSEMBLY INSTRUCTIONS

Step 1

Properly insert Cam Bolts (1) to Left side panel,Right side panel (C,D) and fully tighten With Screwdriver (12).

1	 x 10	Cam Bolts Ø6*35mm
12		Screwdriver

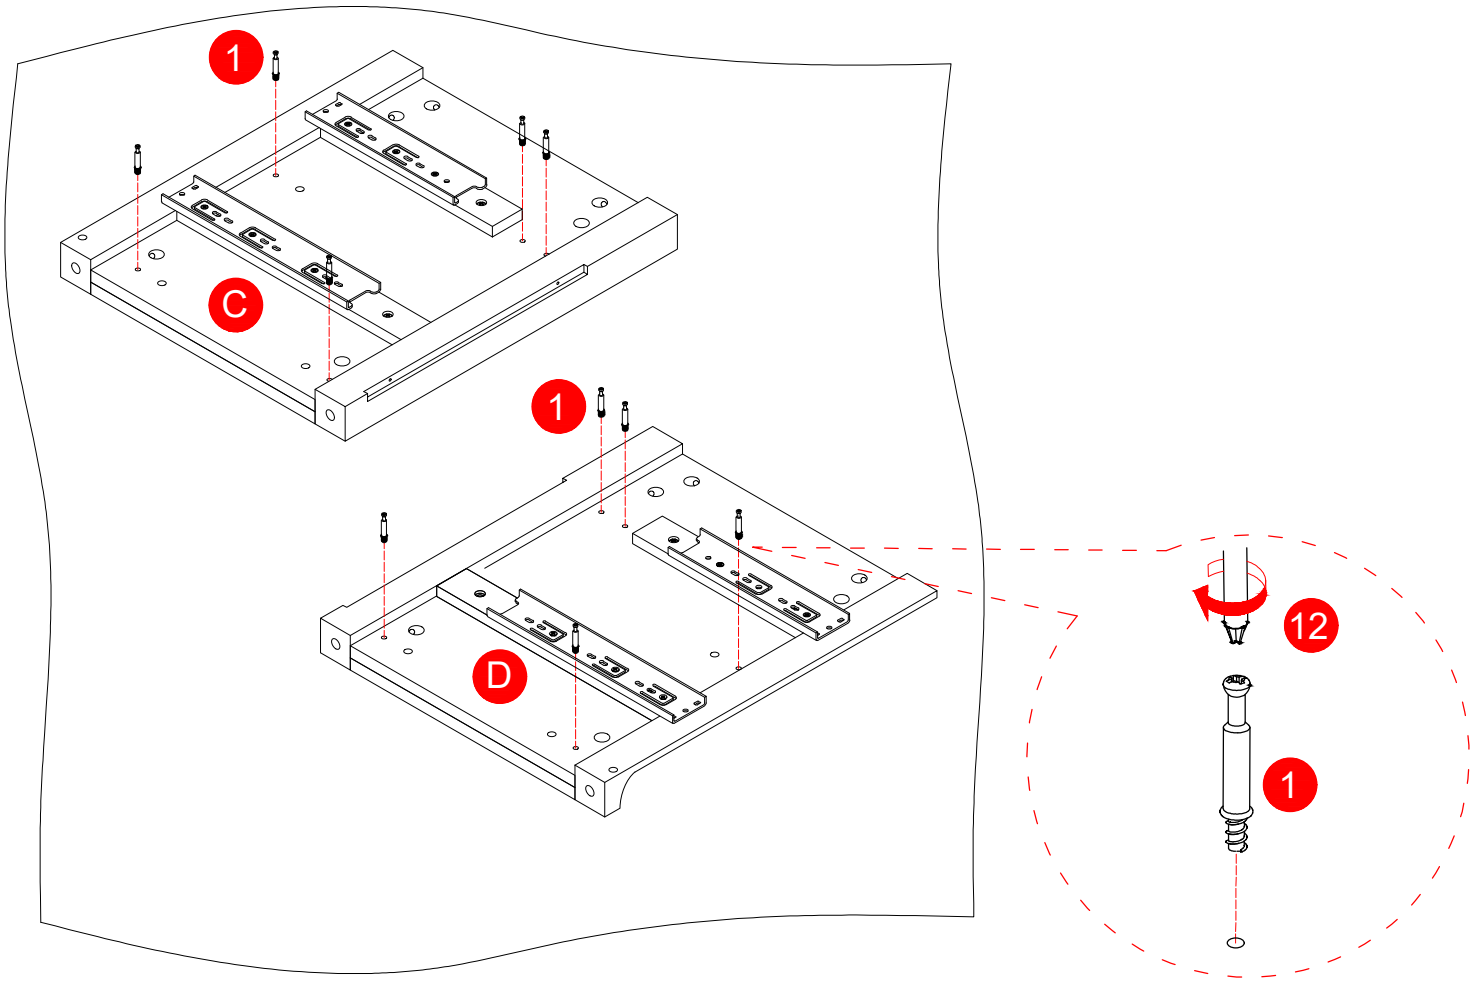


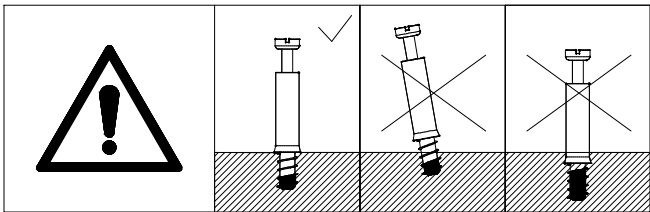

Step 2

Attach Part (G) To part (F) insert Wood plug (7) Tighten by turning Direct repair screw(6) clockwise With Allen key (10).


6		x 3	Direct repair screw Ø6*50mm
7		x 2	Wood plug Ø8*30mm
10		x 1	Allen key

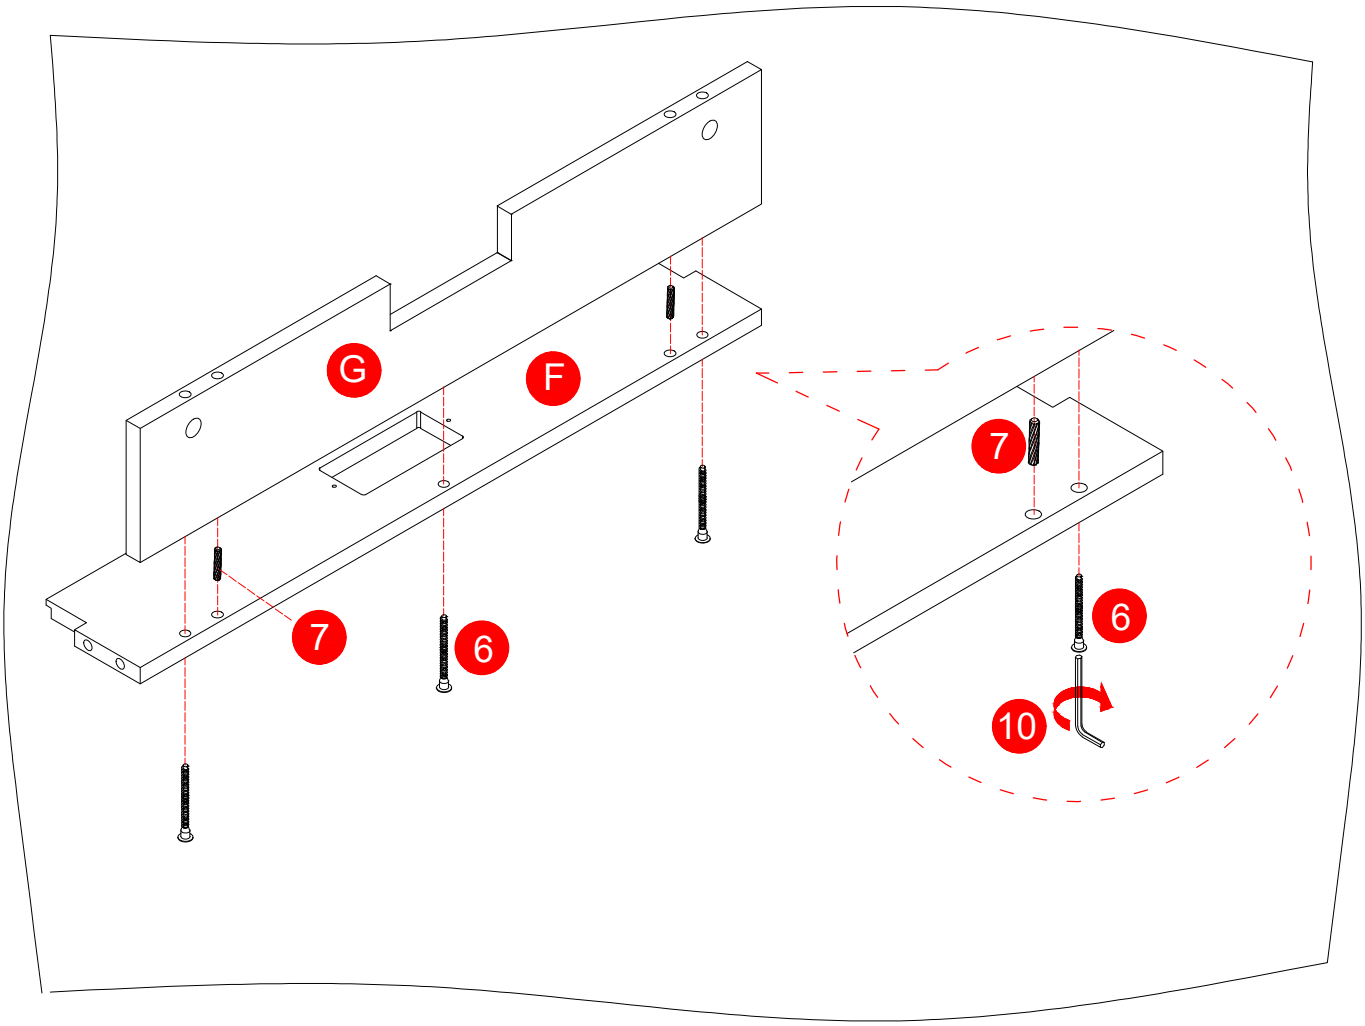



Step 3

1.Properly insert Cam Bolts (1) to Part (E) and fully tighten With Screwdriver (12).

2.Attach Part (B) To Part (E) insert Wood plug (7) Tighten by Eccentric wheel (2)clockwise With Screwdriver(12).

1		x 3	Cam Bolts Ø6*35mm
2		x 3	Eccentric wheel Ø15*9.5mm
7		x 2	Wood plug Ø8*30mm
12		x 1	Screwdriver

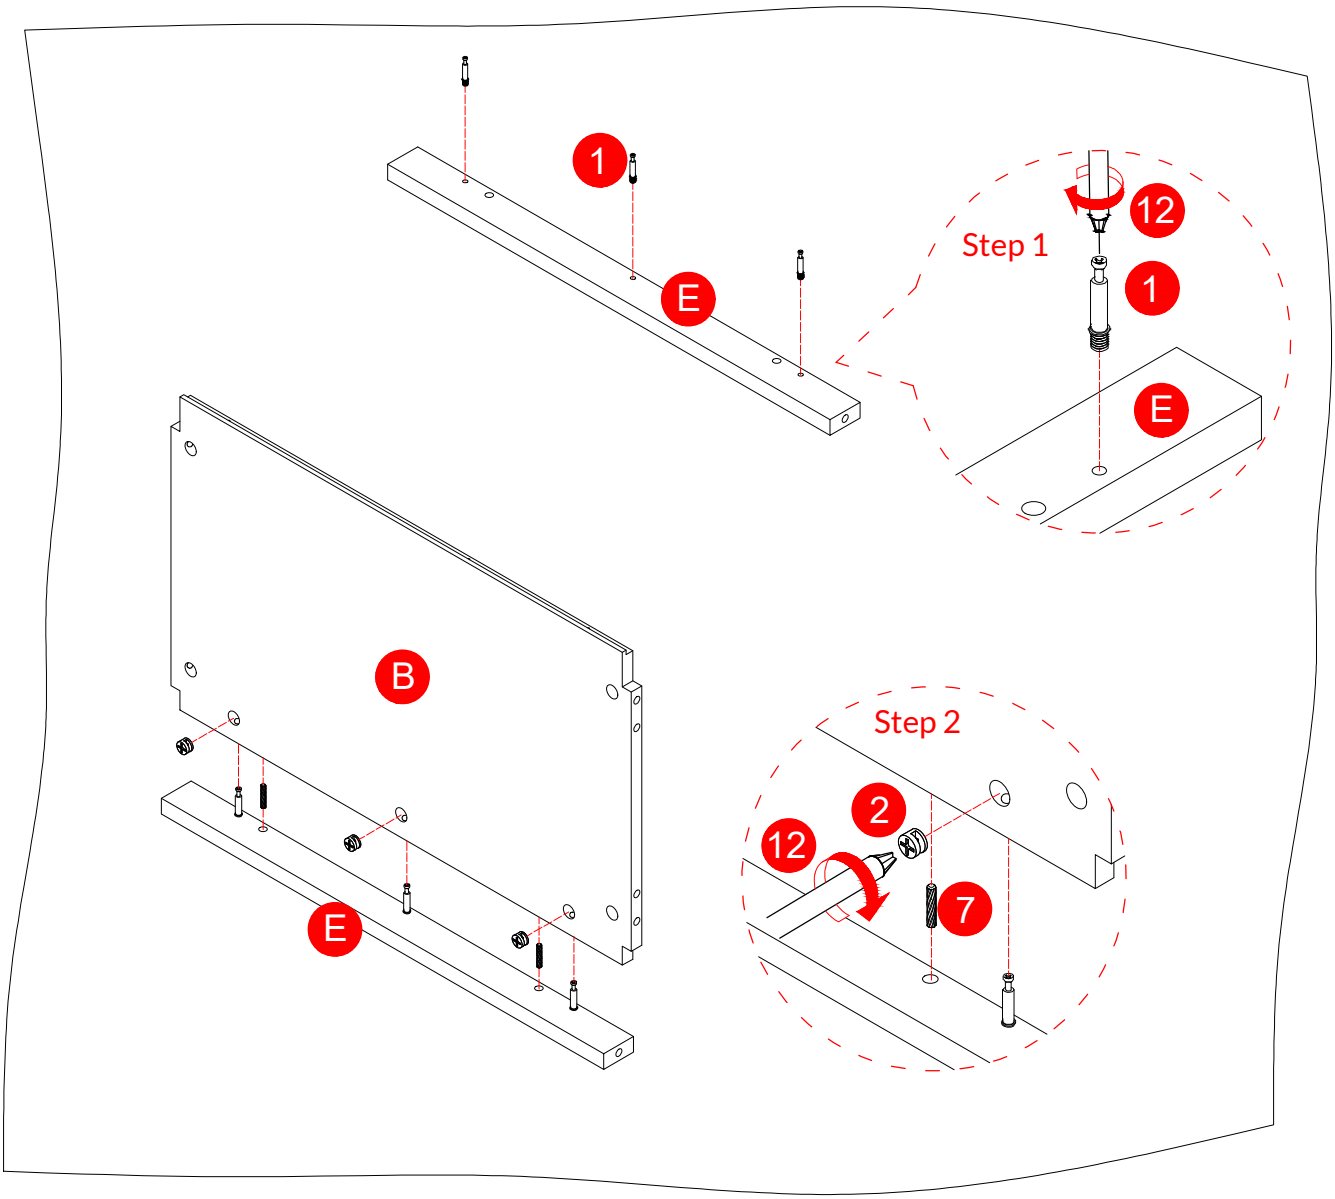

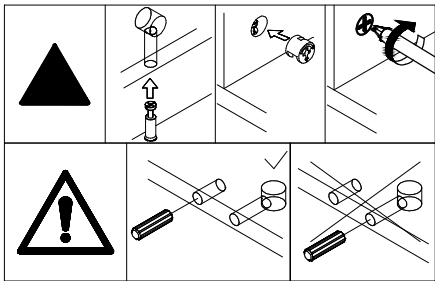



Step 4

1.Attach Part (F,G) To Part (D) ,Tighten by Eccentric wheel (2)clockwise With Screwdriver (12).

2.Attach Part (H) To Part (D) insert Wood plug (7) ,Tighten by Eccentric wheel (2) clockwise With Screwdriver (12).

2	x 3	Eccentric wheel Ø15*9.5mm
7	x 1	Wood plug Ø8*30mm
12	x 1	Screwdriver

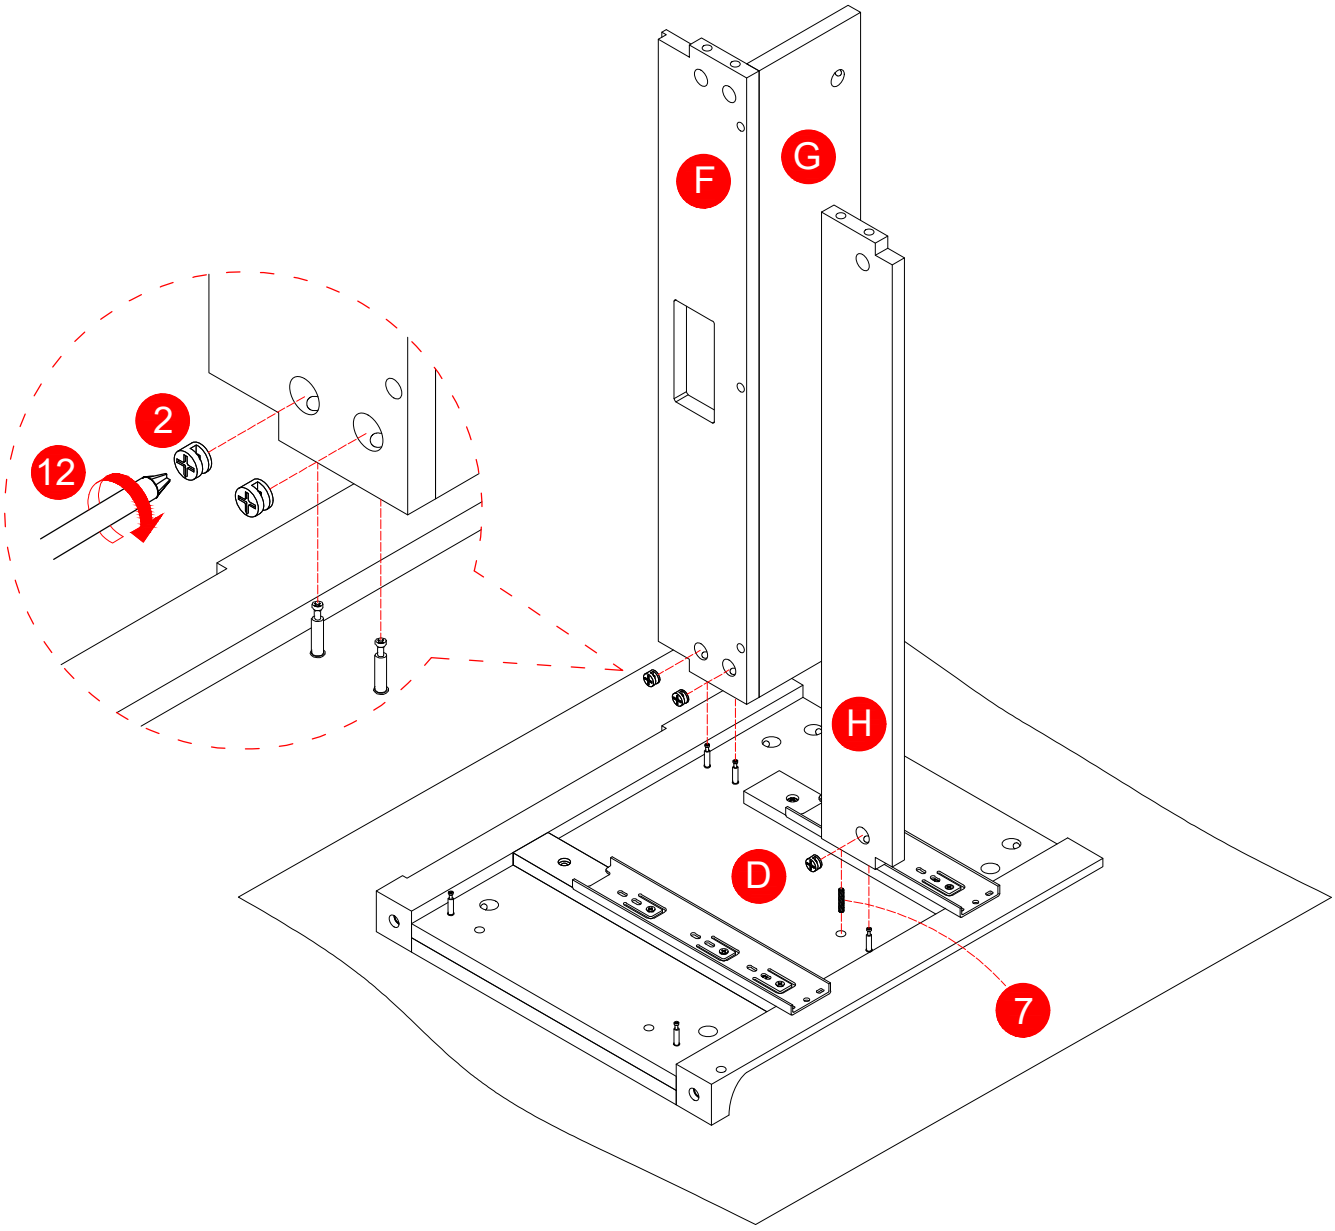


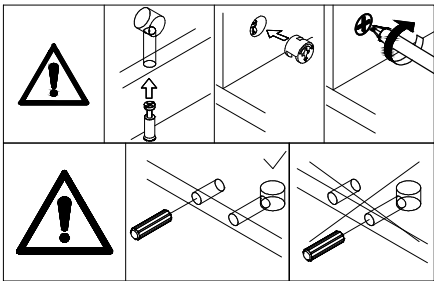


Step 5

Attach Part (B,E) To Part (D) insert Wood plug (7) Tighten by Eccentric wheel (2) clockwise With Screwdriver (12).

2	x 2	Eccentric wheel Ø15*9.5mm
7	x 3	Wood plug Ø8*30mm
12	x 1	Screwdriver

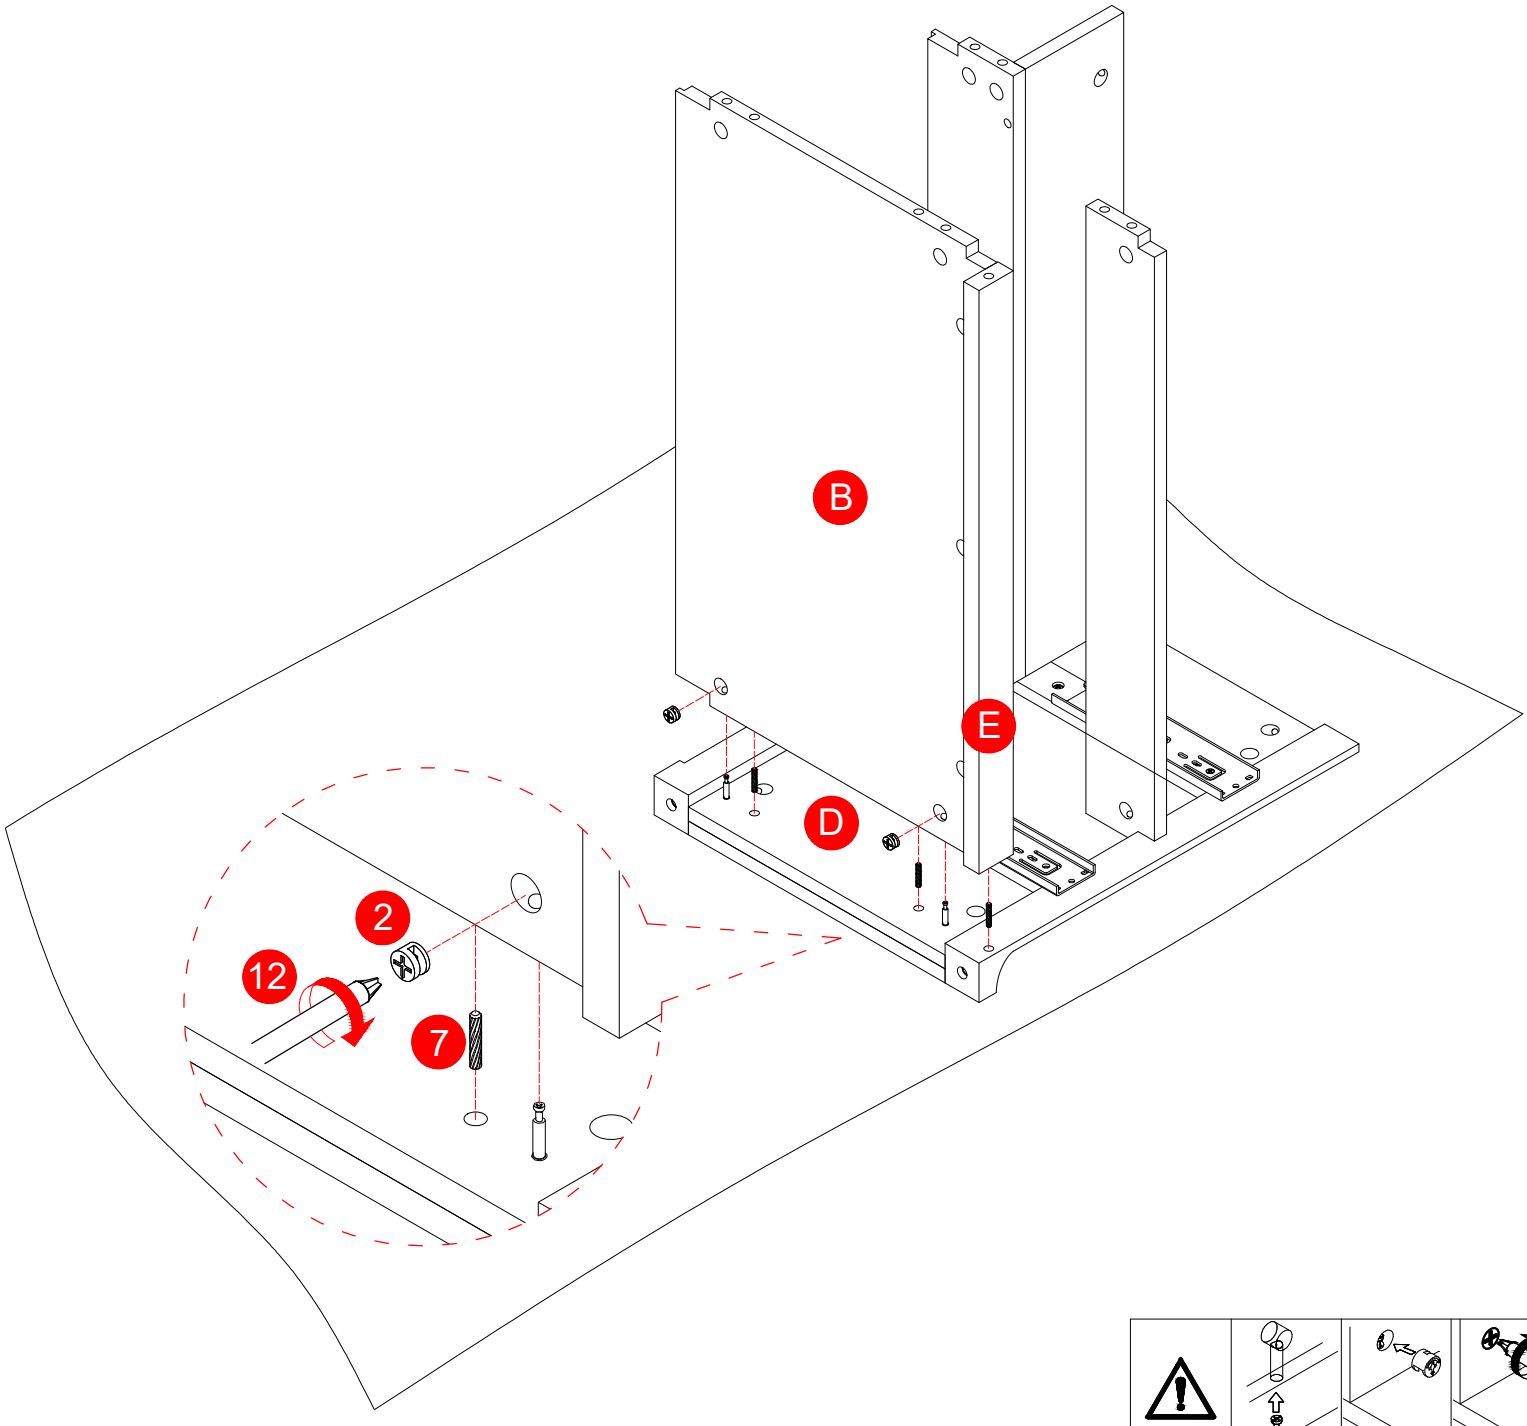


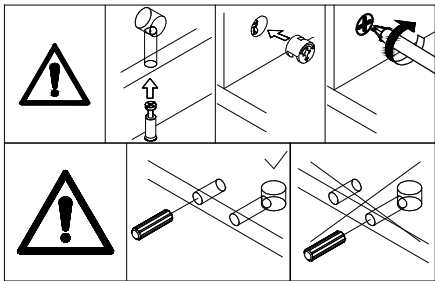


Step 6

Attach Part (C)To part (B,E,F,G,H) insert Wood plug (7) Tighten by Eccentric wheel (2)clockwise With Screwdriver (12).


2	x 5	Eccentric wheel Ø15*9.5mm
7	x 4	Wood plug Ø8*30mm
12	x 1	Screwdriver

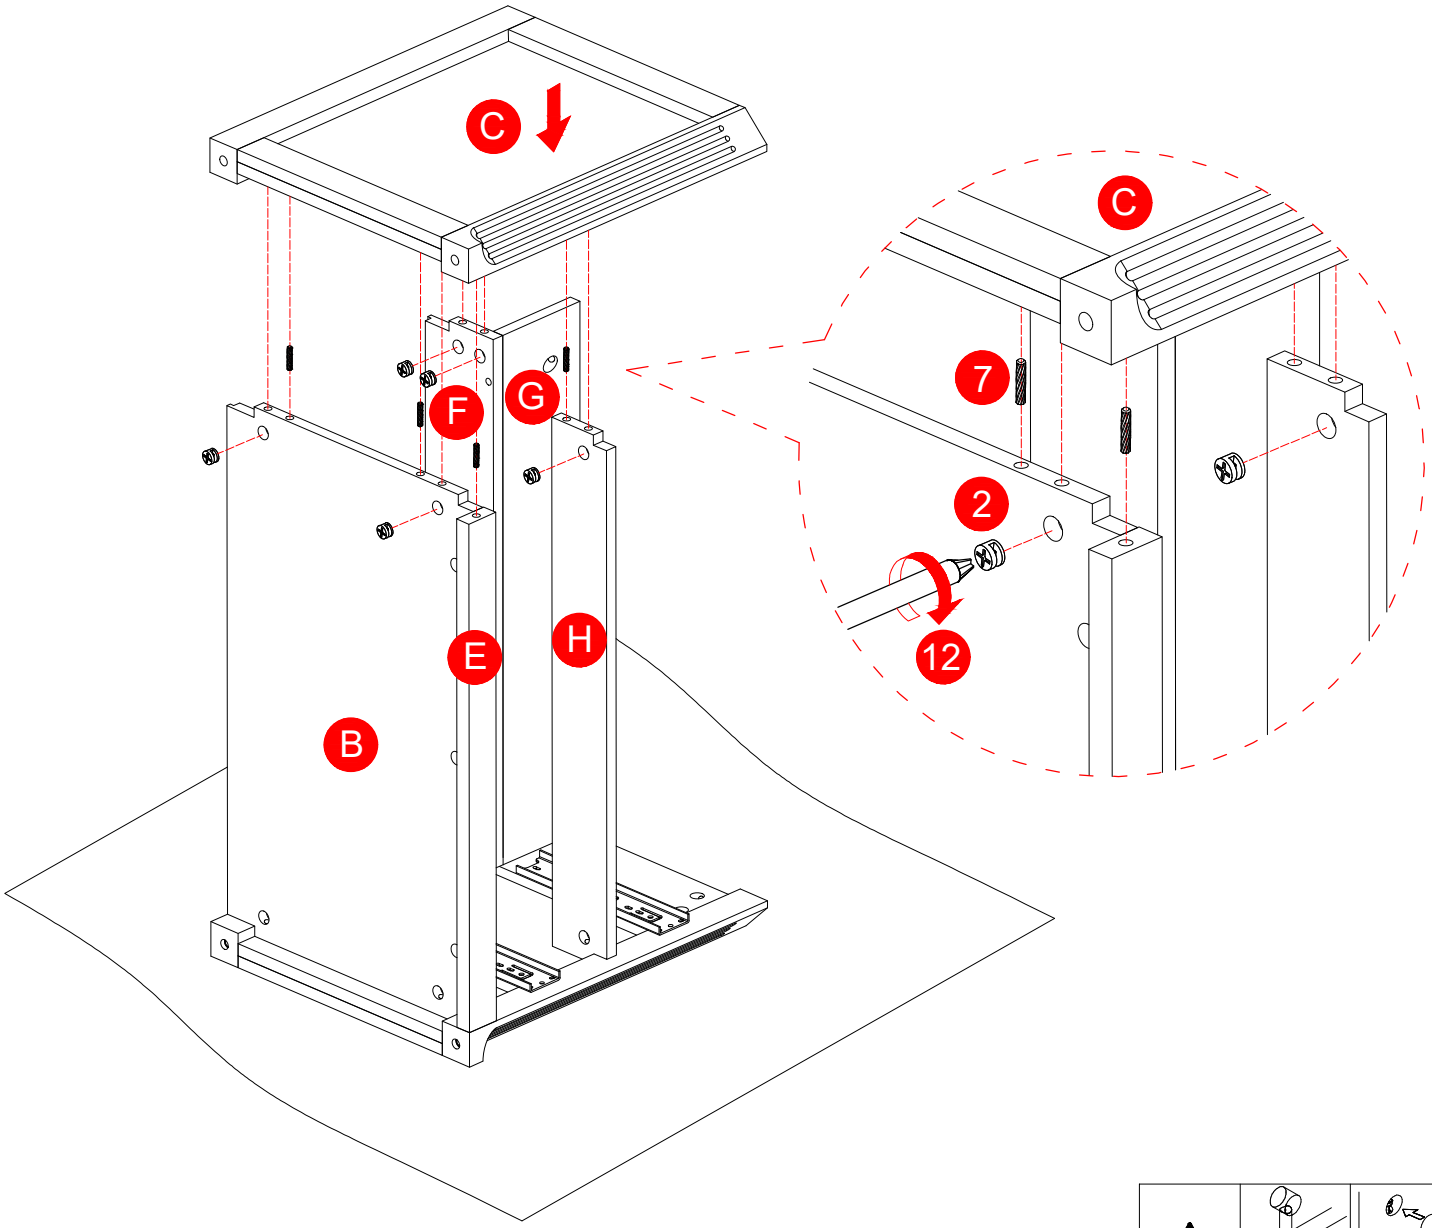

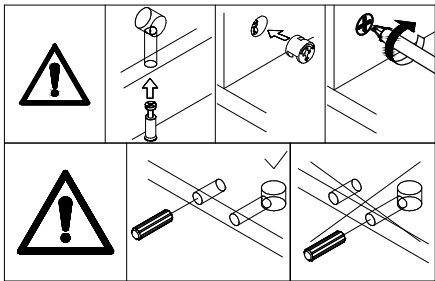


Step 7


Use your hand to screw the base foot (T) clockwise onto the bottom plate (C,D).

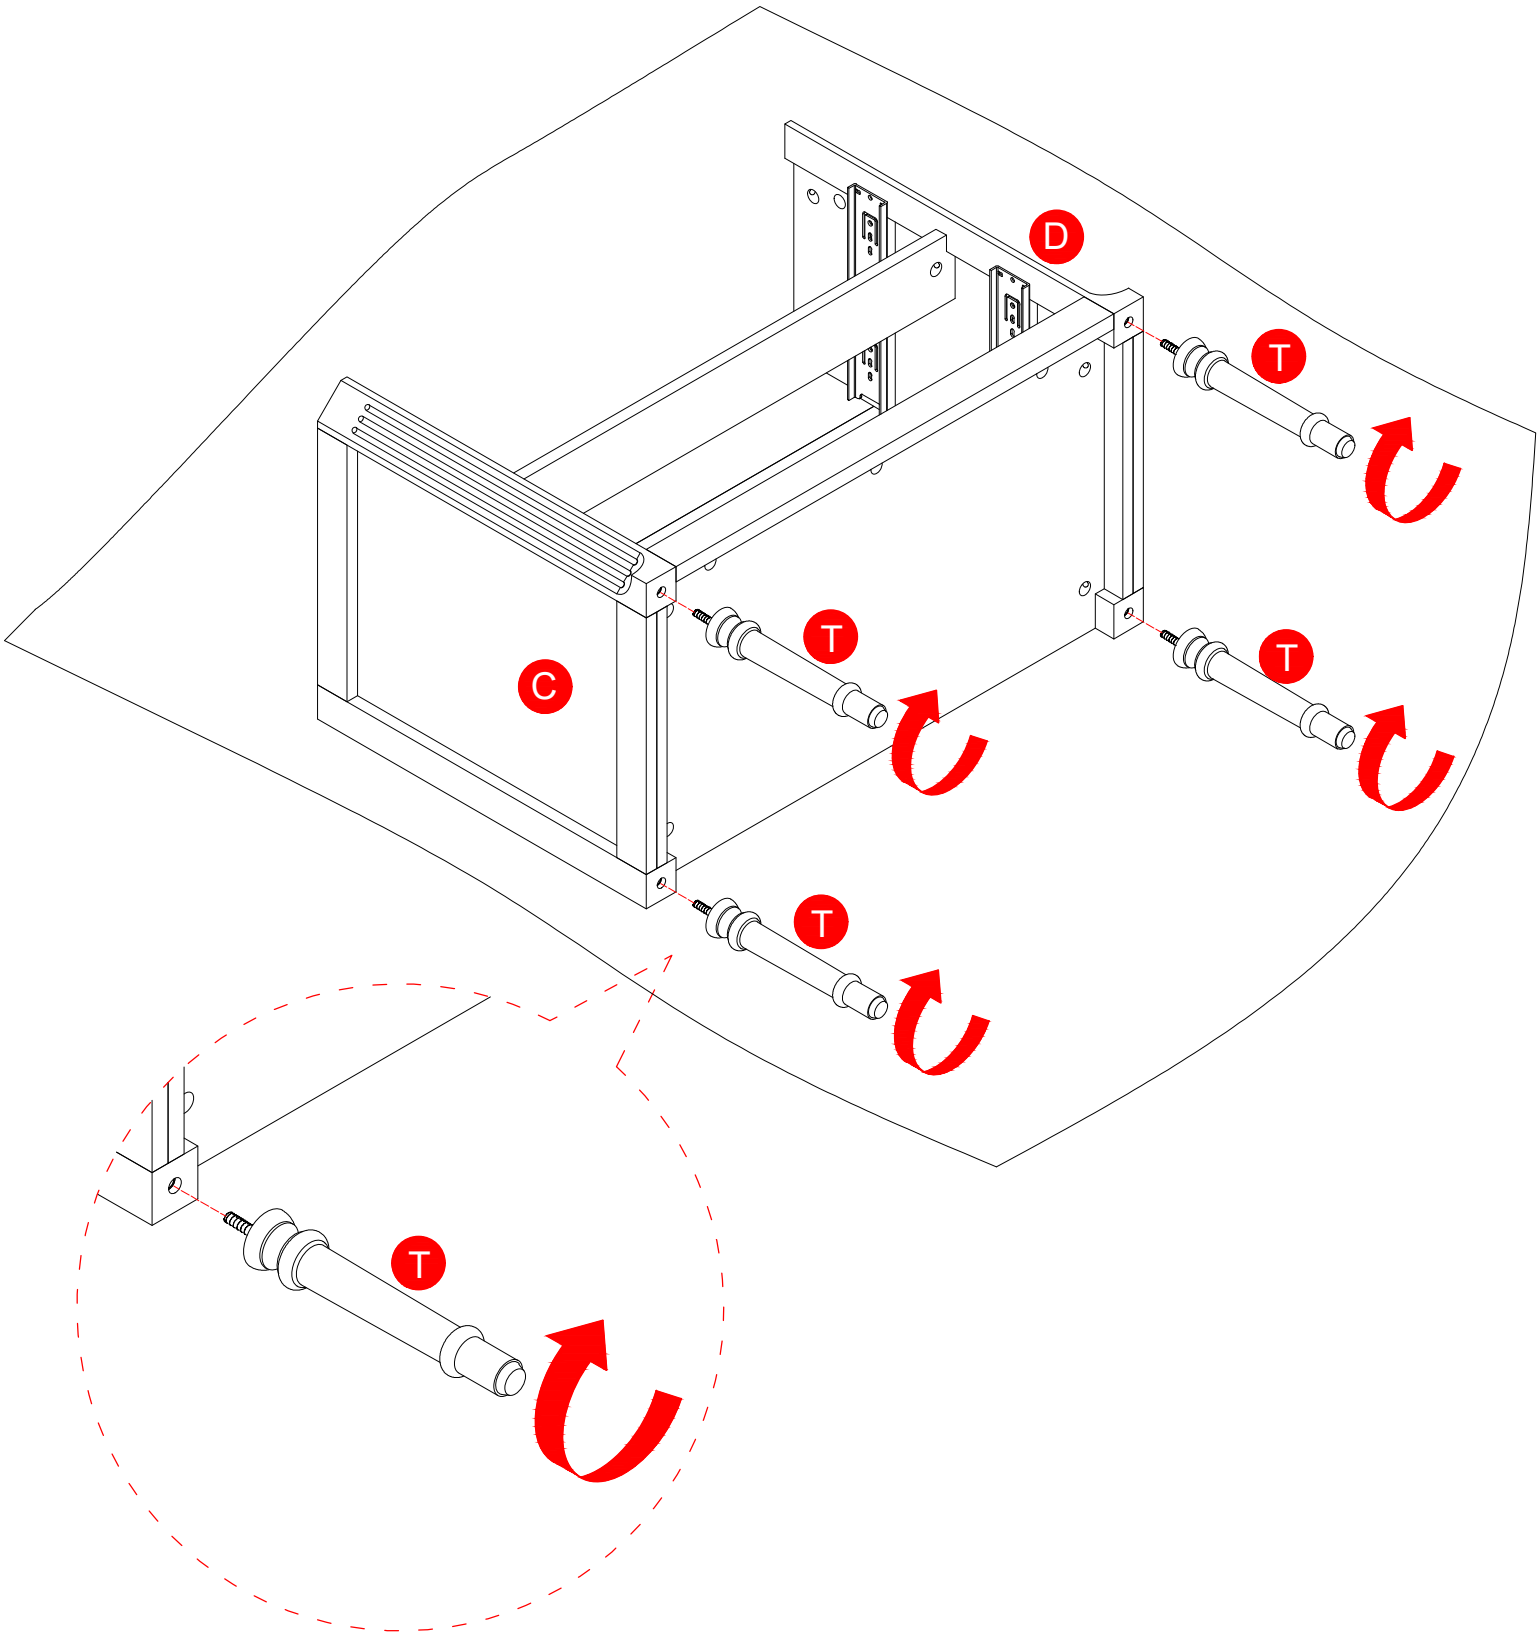

Step 8

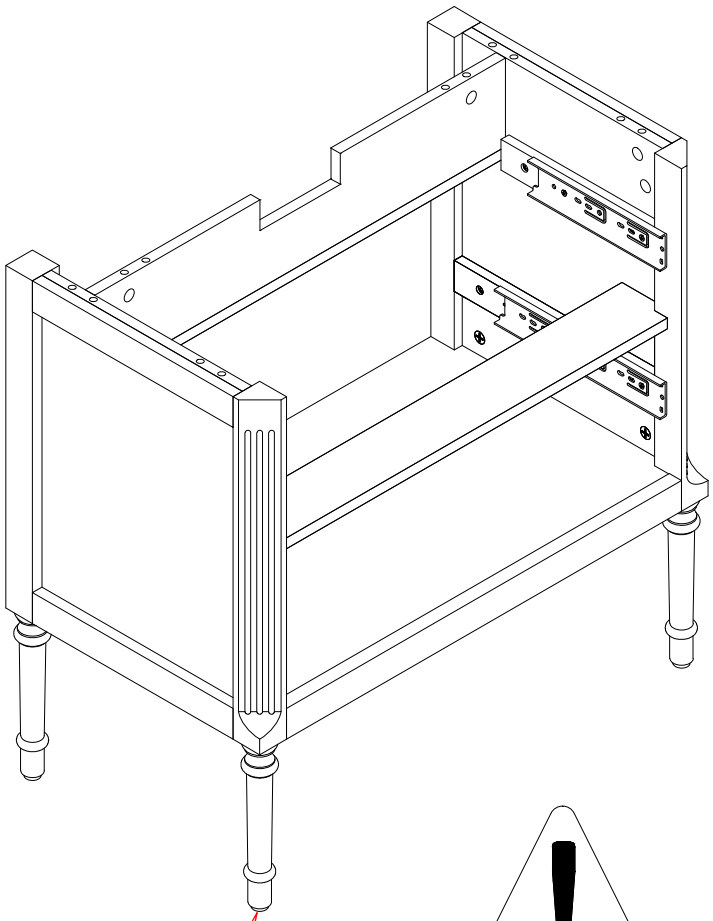


Attention:
Before the next step,
adjust the feet of the
locker to keep it level.

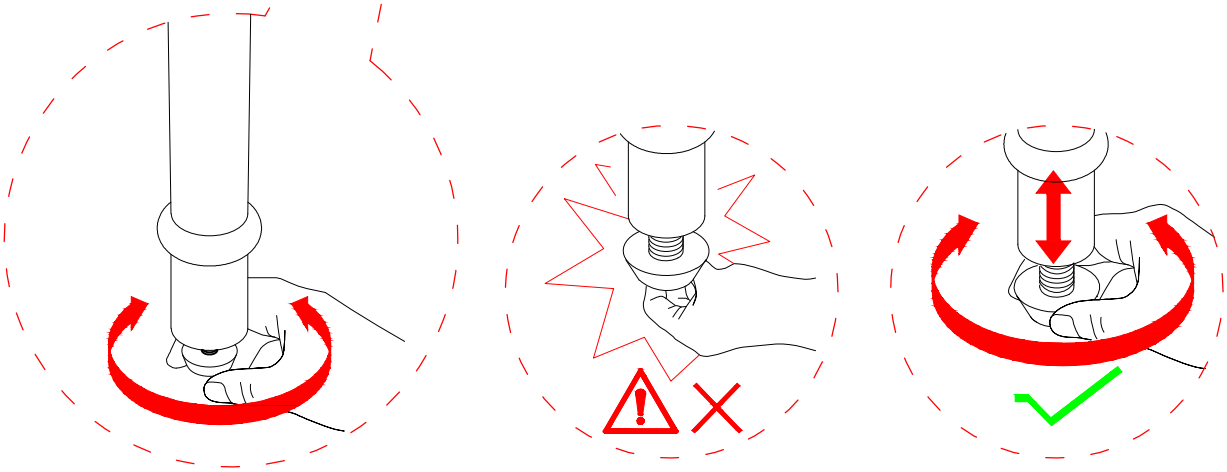



Step 9

1.Properly insert Cam Bolts (1) to Part (A) and fully tighten With Screwdriver (12).

2.Install Anti-tip component (15) to Part (A) and tighten By screw (14) with screwdriver (12) .

1		x 6	Cam Bolts Ø6*35mm
15		x 1	Anti-tip component
14		x 2	Screw Ø3.5 x 20mm
12		x 1	Screwdriver


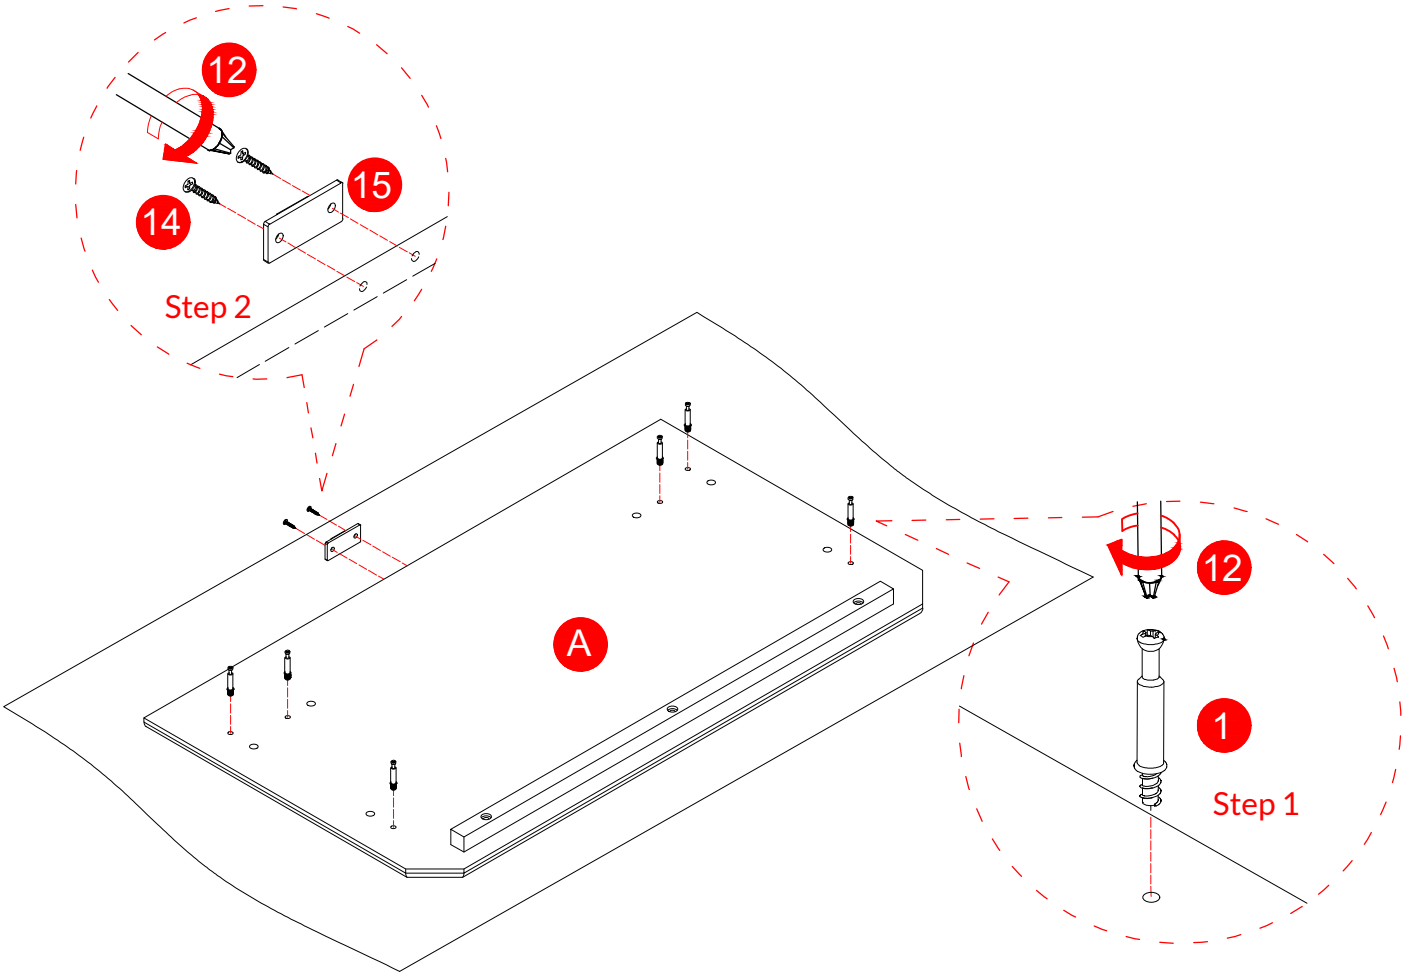


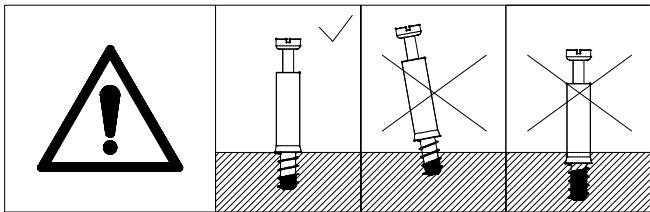


Step 10

1.Install Socket (8) to Part (F) and tighten By screw (5) with screwdriver (12) .


2.Install back panel (I) into the groove , make sure all holes aligned and use screw (4) to attach them, tighten screw (4) with screwdriver (12).


8		x 1	Socket
5		x 2	Screw Ø3.5*12mm
4		x 12	Screw Ø3*15mm
12		x 1	Screwdriver

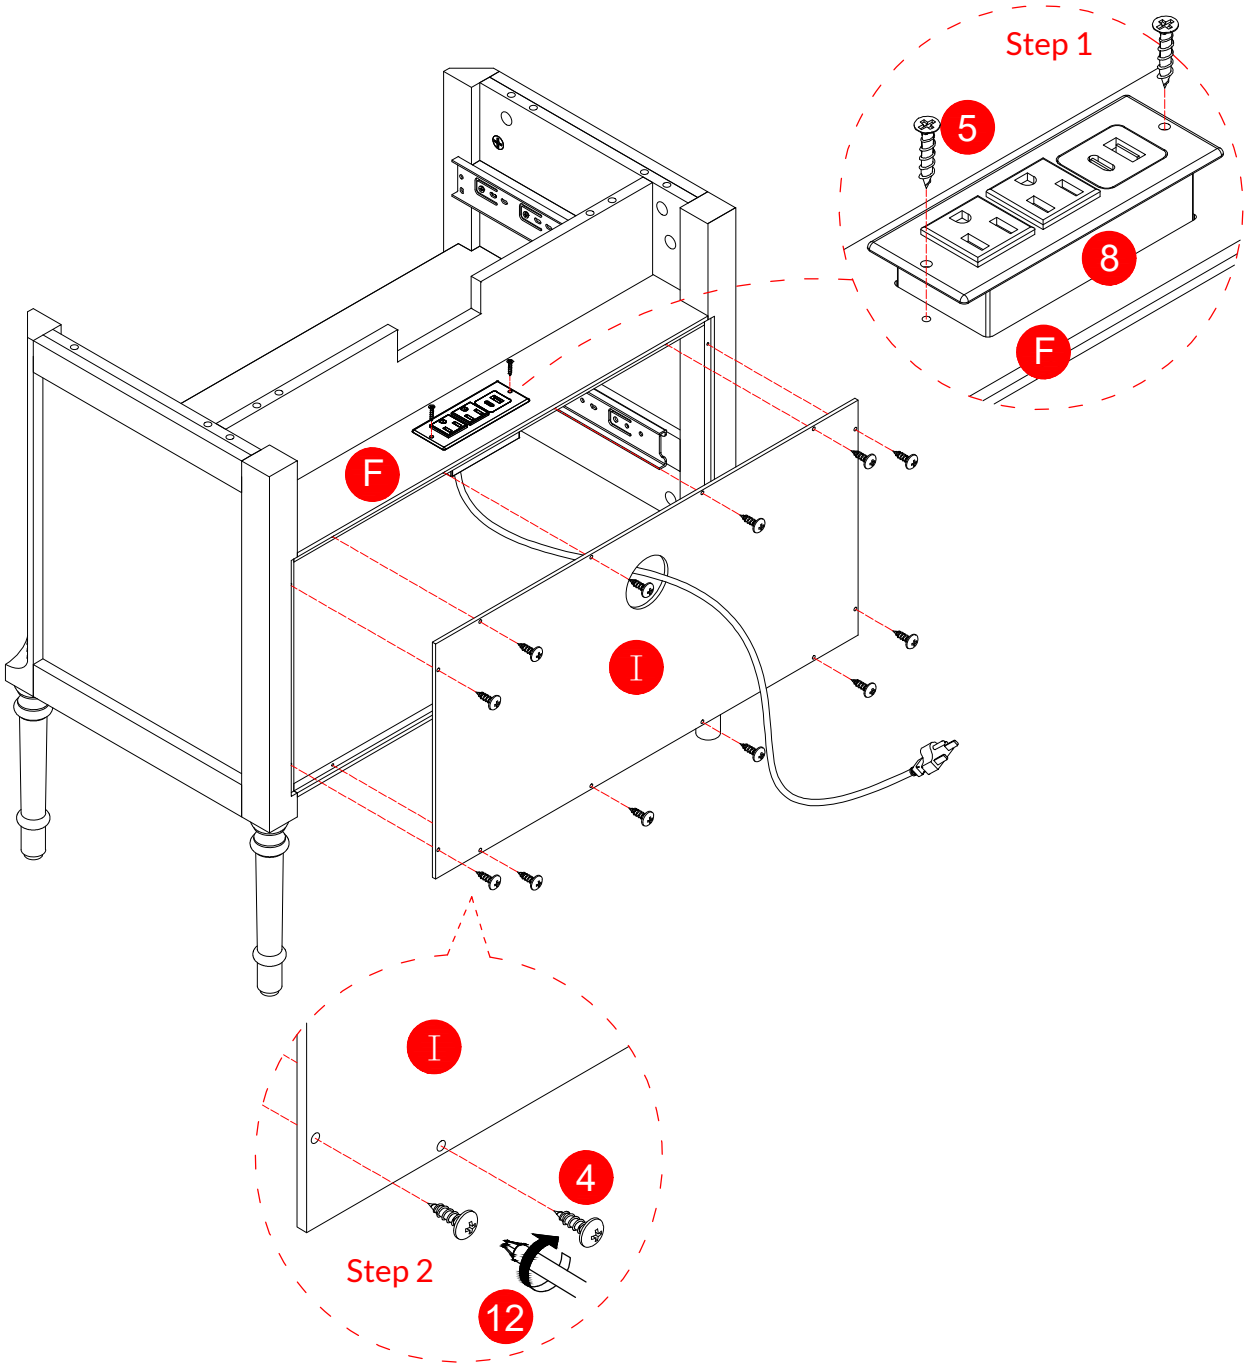


Step 11

1.Attach Part (A)To part(C,D,G) insert Wood plug (7) Tighten by Eccentric wheel (2)clockwise With Screwdriver (12).

2	 x 6	Eccentric wheel Ø15*9.5mm
7	 x 6	Wood plug Ø8*30mm
12	 x 1	Screwdriver

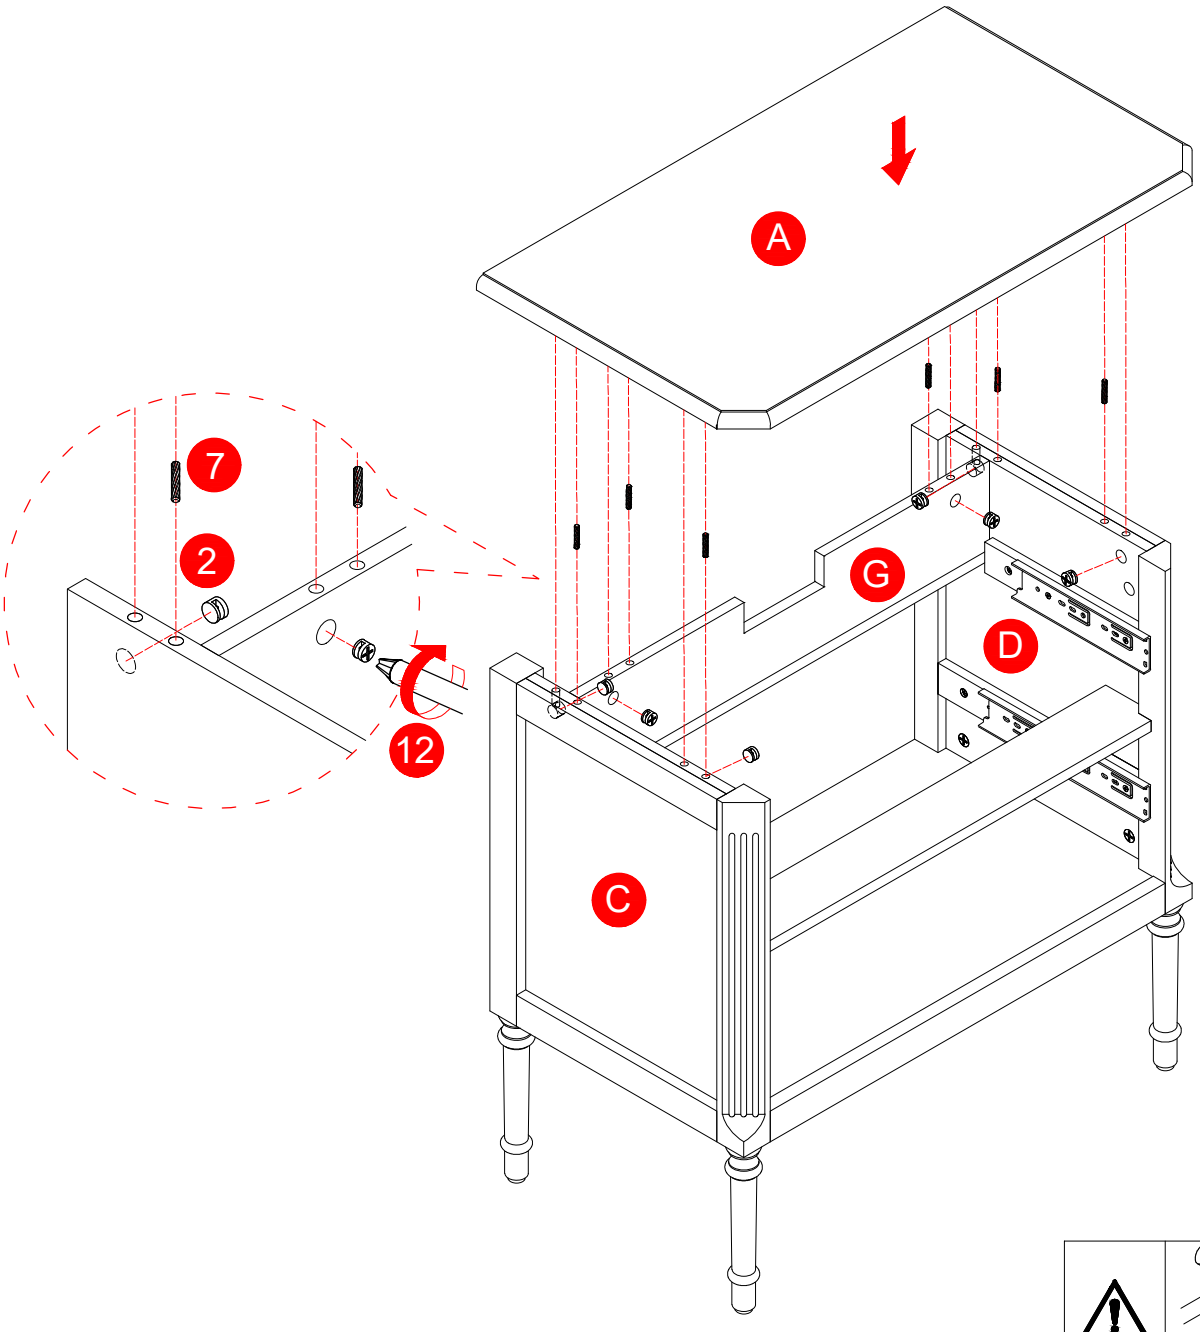


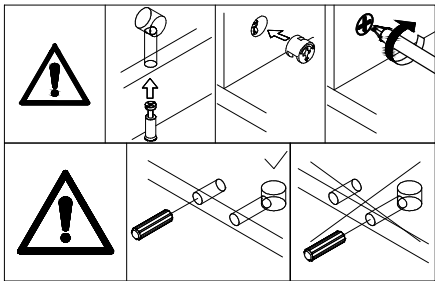

Step 12


Install panel (J,L) into panel (K) insert Wood plug (7), make sure all holes aligned, then flip the tabs on the back of the Drawer Back Panels (K) to lock them in place.

7		x 2	Wood plug Ø8*30mm

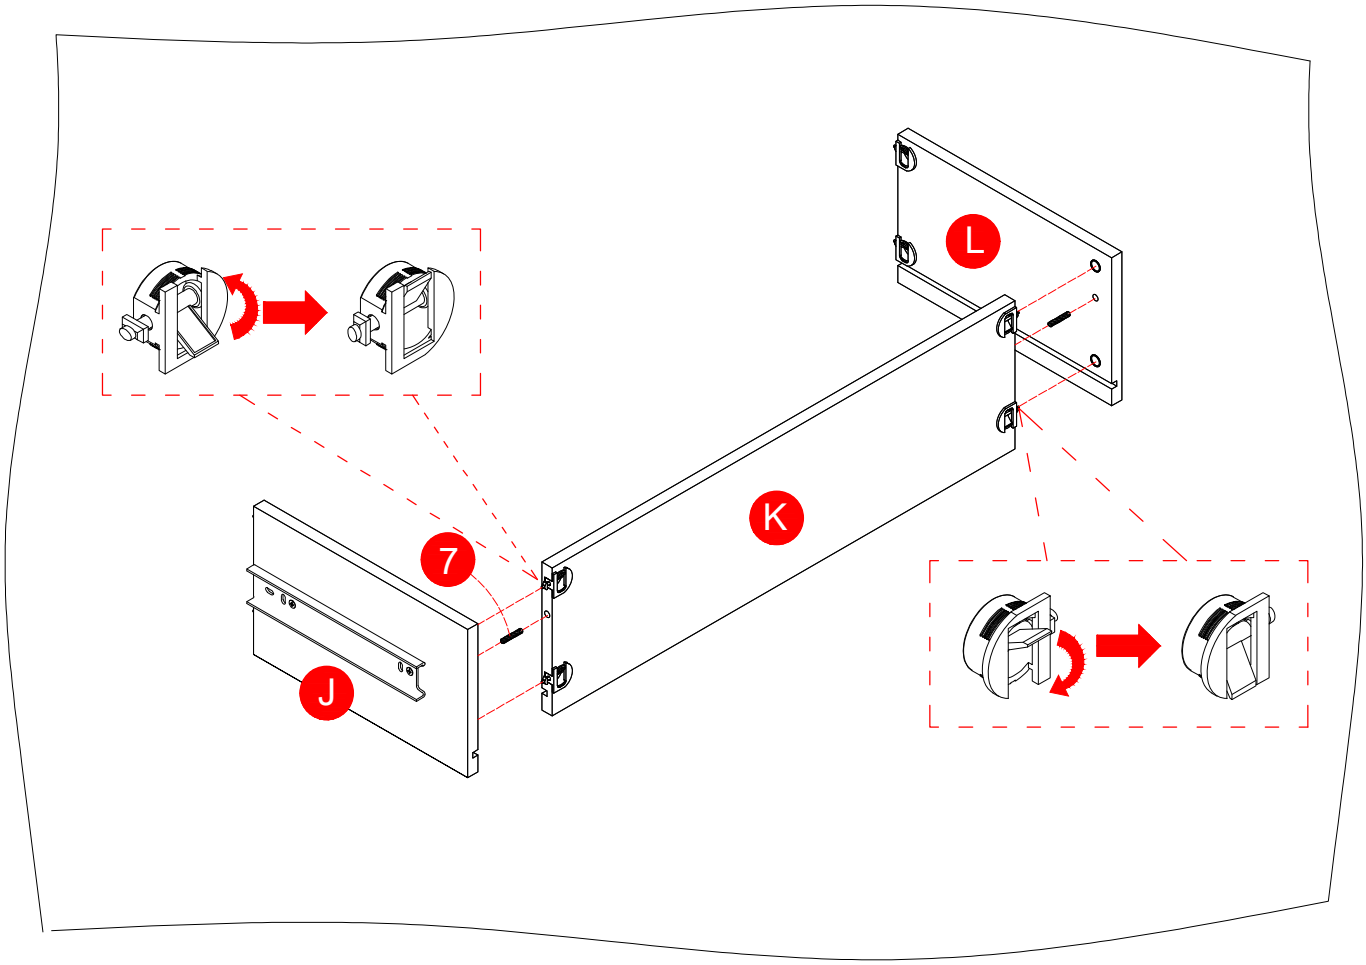


Tip

Quick Assembly Drawers

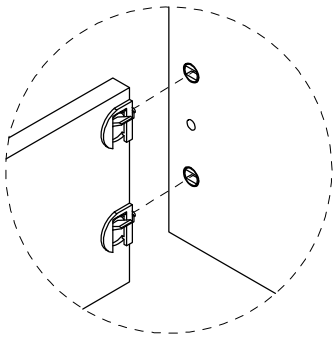

1. Make quick assembly drawer pin is aligned with corresponding hole.

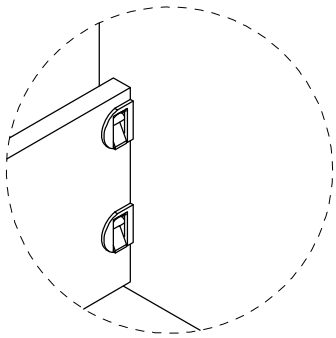


2. Once pin is inserted correctly flip metal lever in opposite direction to ensure panels are firmly locked together.

Step 13


Install panel (P,Q) into panel (K) insert Wood plug (7), make sure all holes aligned, then flip the tabs on the back of the Drawer Back Panels (K) to lock them in place.

7		x 2	Wood plug Ø8*30mm

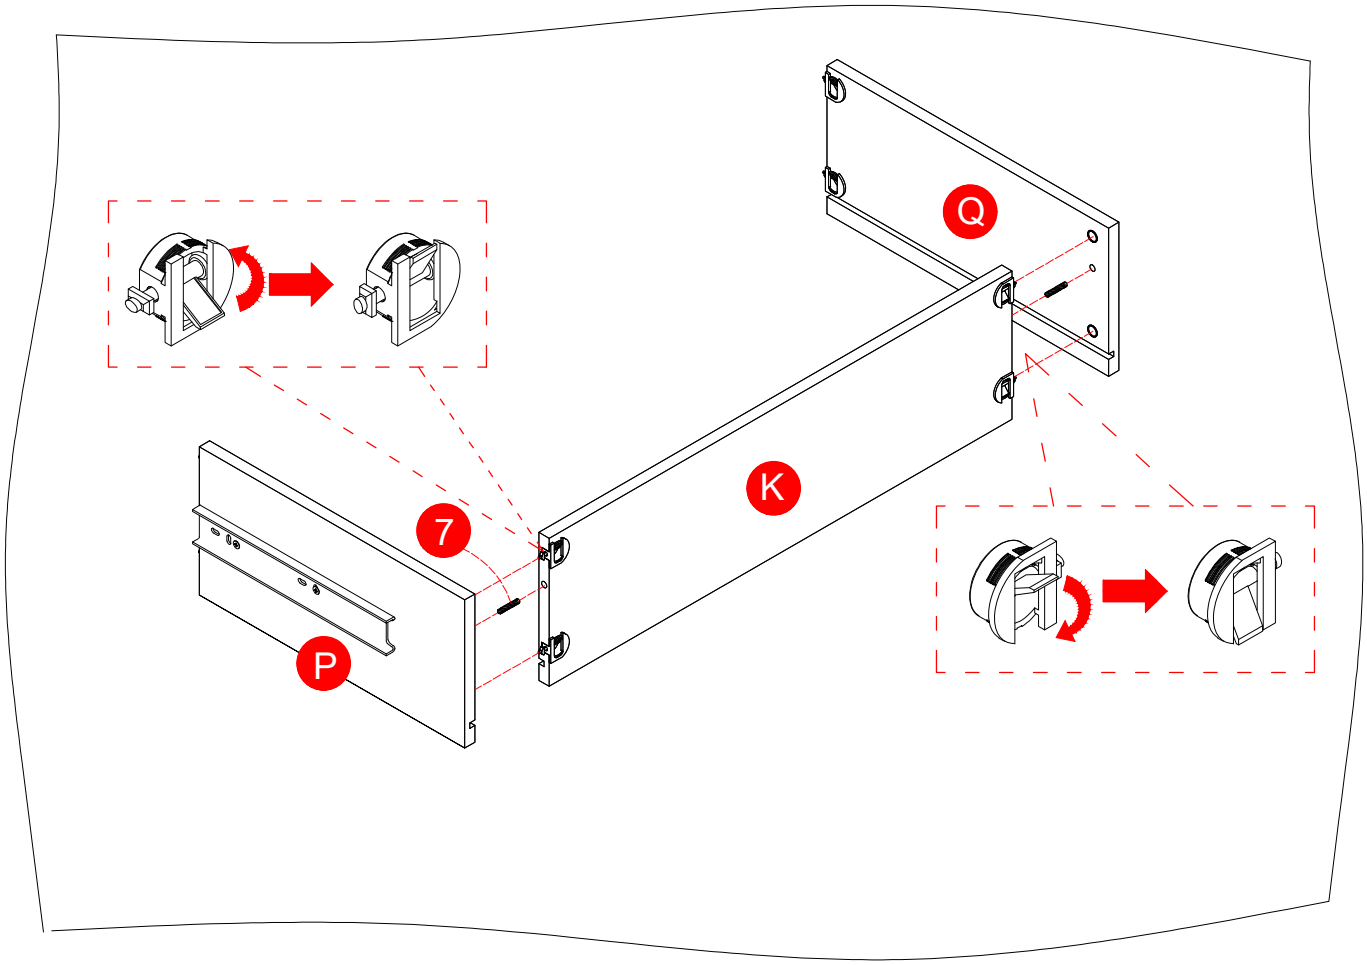


Tip

Quick Assembly Drawers

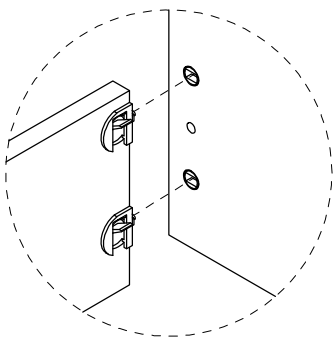

1. Make quick assembly drawer pin is aligned with corresponding hole.

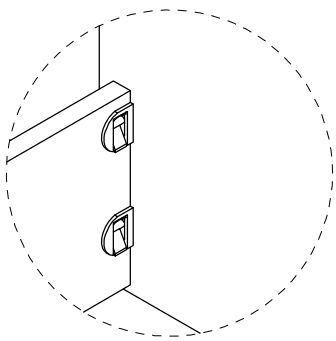



2. Once pin is inserted correctly flip metal lever in opposite direction to ensure panels are firmly locked together.

Step 14

1.Attach Drawer Support Panels (N) and slide in the drawer bottom panels (M) in to back drawer panel(k).

2.Attach Drawer Support Panels (S) and slide in the drawer bottom panels (R) in to back drawer panel(k).

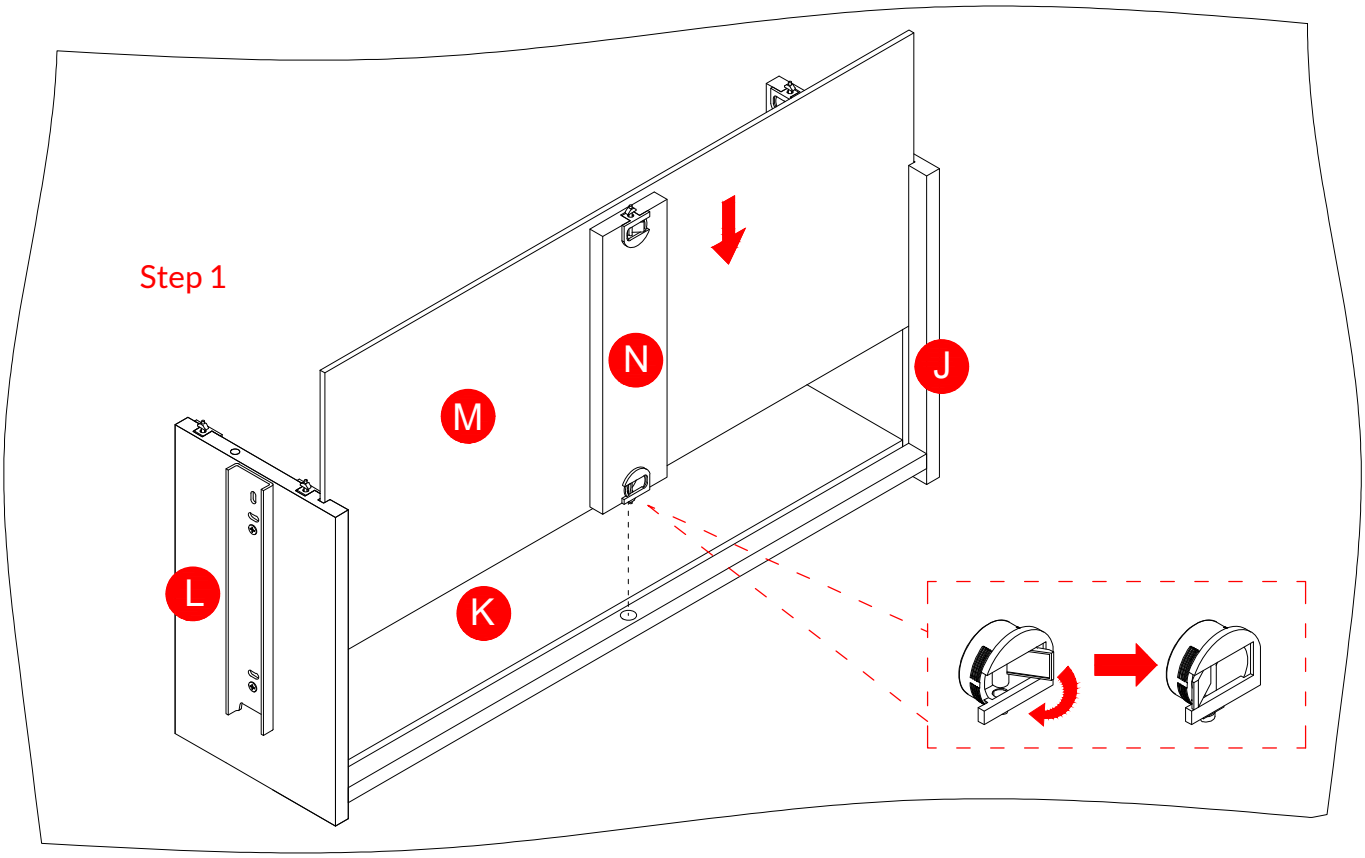

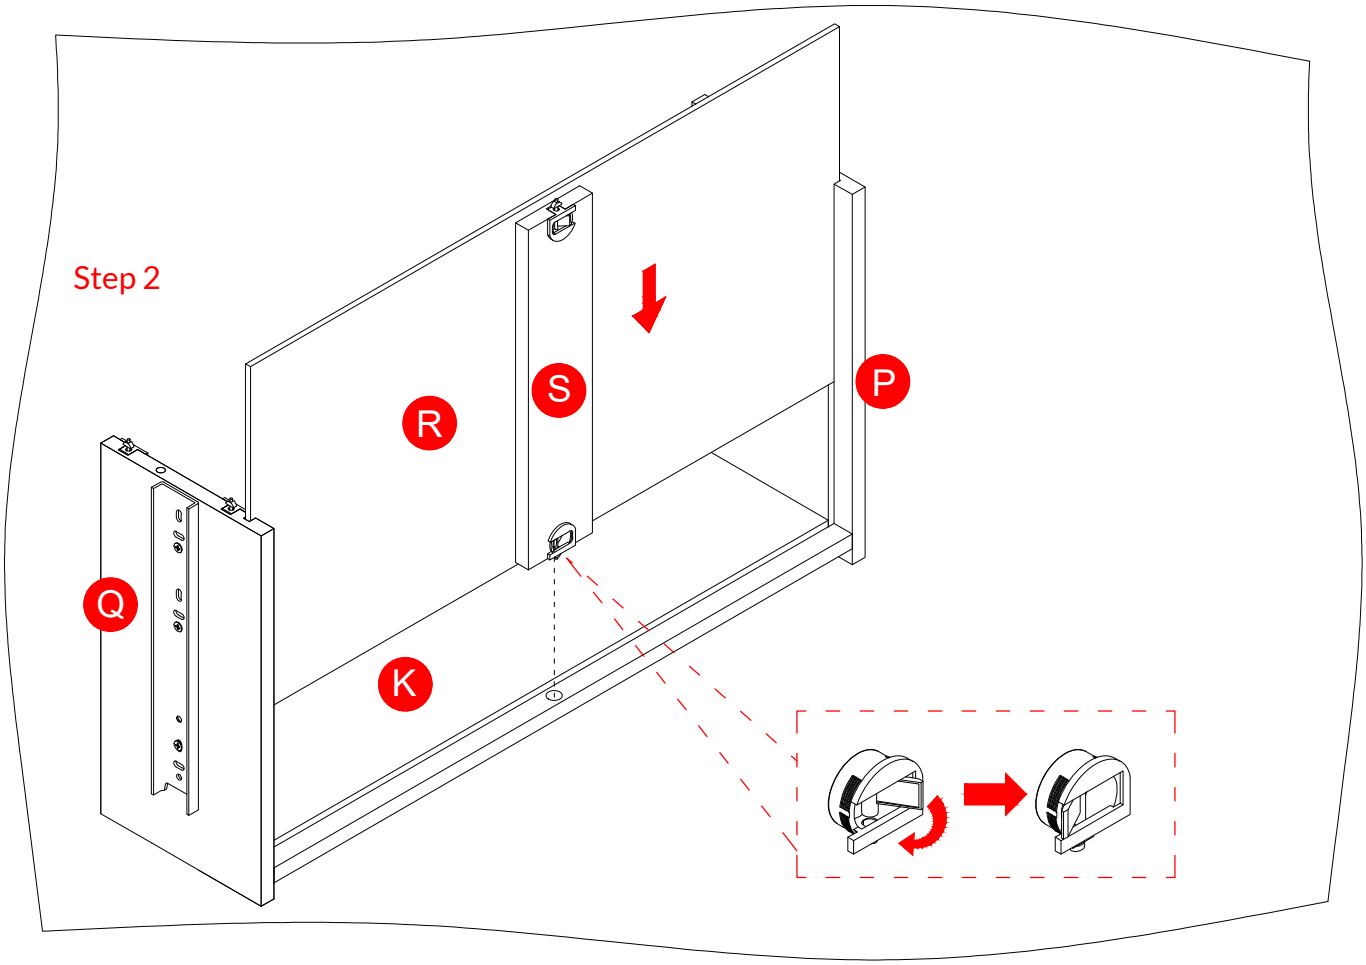


Step 15

1.Attach the Front Drawer Panels (O) to the drawer sides(L,J,N) insert Wood plug (7), making sure the lock are aligned,to lock them in place.

2.Attach the Front Drawer Panels (O) to the drawer sides(Q,P,S) insert Wood plug (7), making sure the lock are aligned,to lock them in place.


7		x 4	Wood plug Ø8*30mm

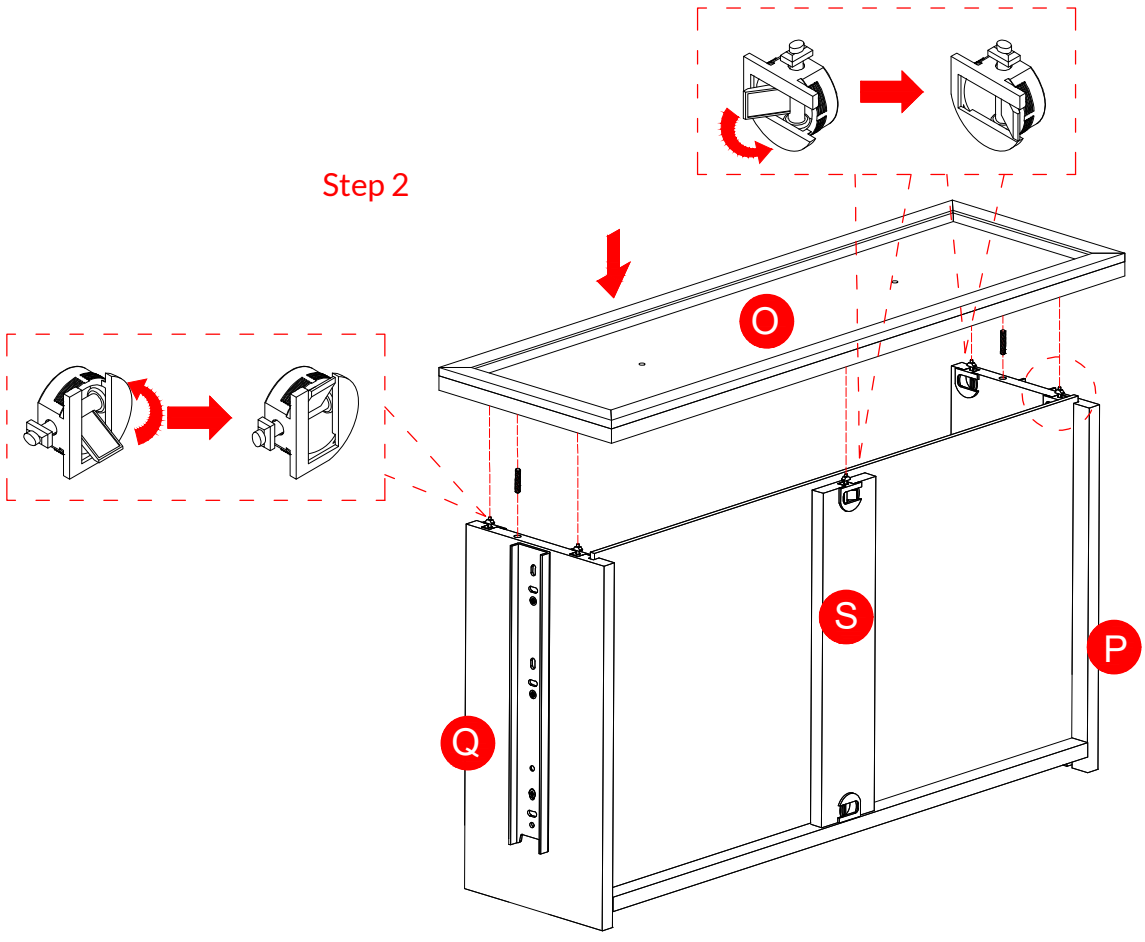


Step 16

Install Knobs (3) to Part (O) and tighten By Bolt (9) with screwdriver (12) .


9		x 4	Bolt M4*16mm
3		x 4	Knobs
12		x 1	Screwdriver

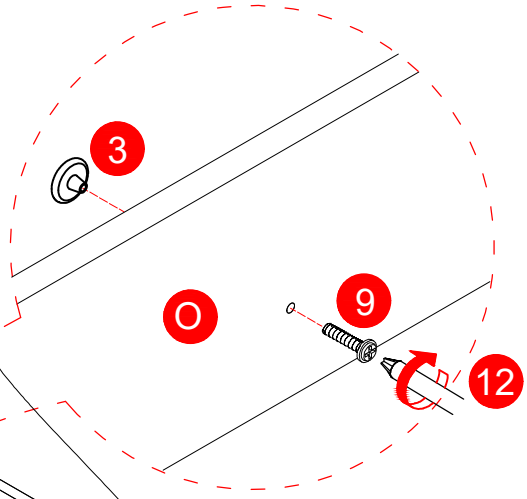


Step 1

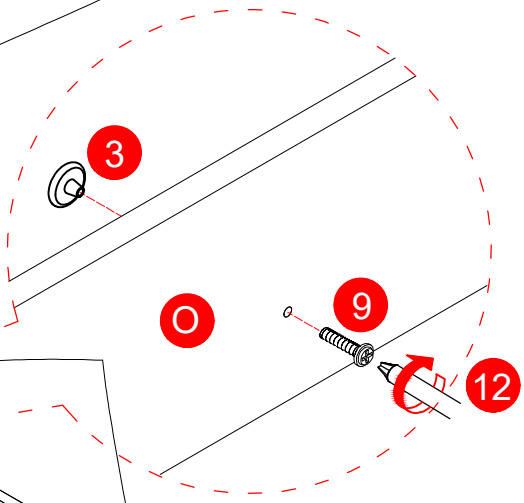


Step 2

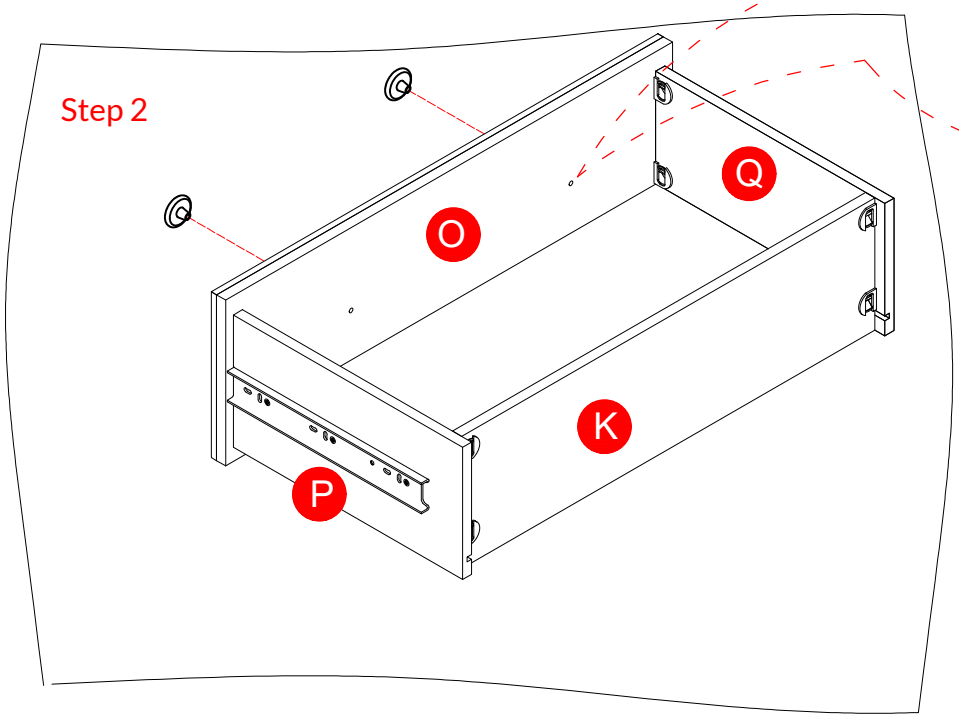


Step 17

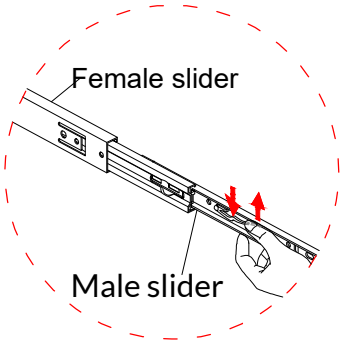

Schematic diagram of slide rail disassembly

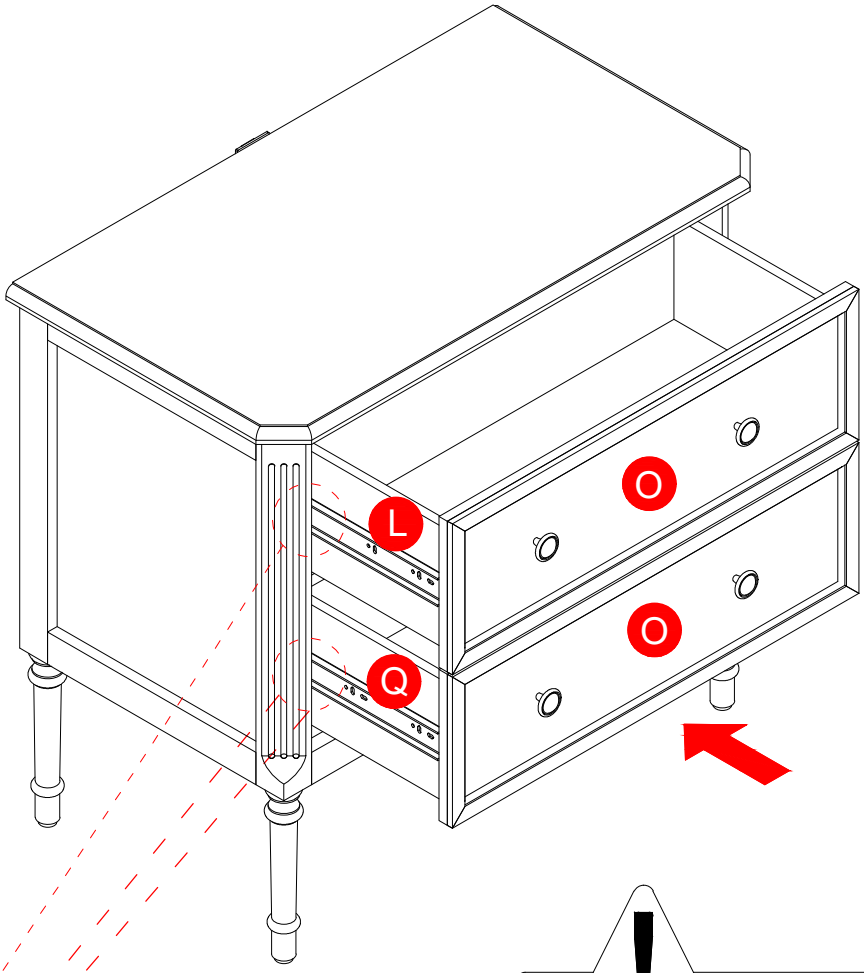



Attention：When installing the drawer,slide the steel ball slide rail of side panel to the most front as picture show.

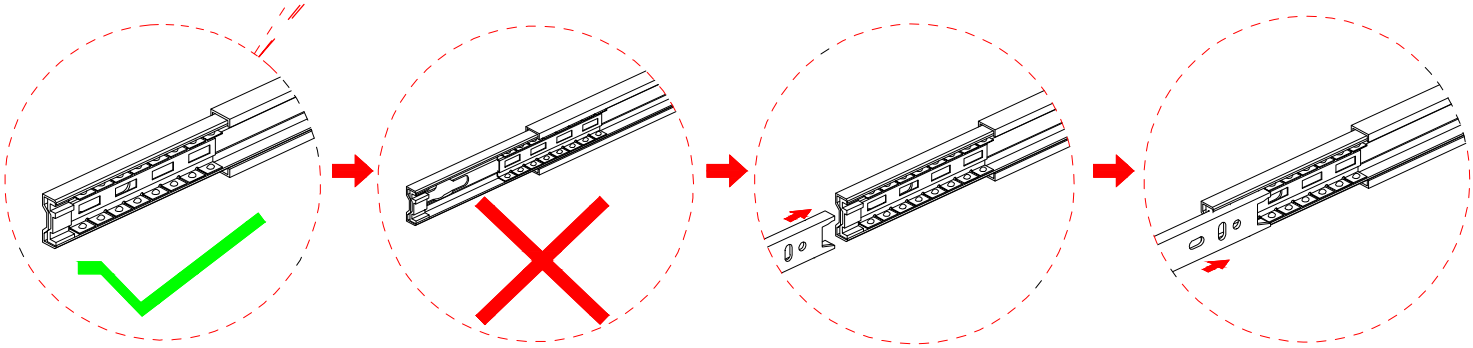


Step 18


Install Anti-tip device (11, 13,15) to the wall in this step.

15		x 1	Anti-tip component
13		x 2	Ø3.5 x 30mm
11		x 2	Wall anchor
12		x 1	Screwdriver

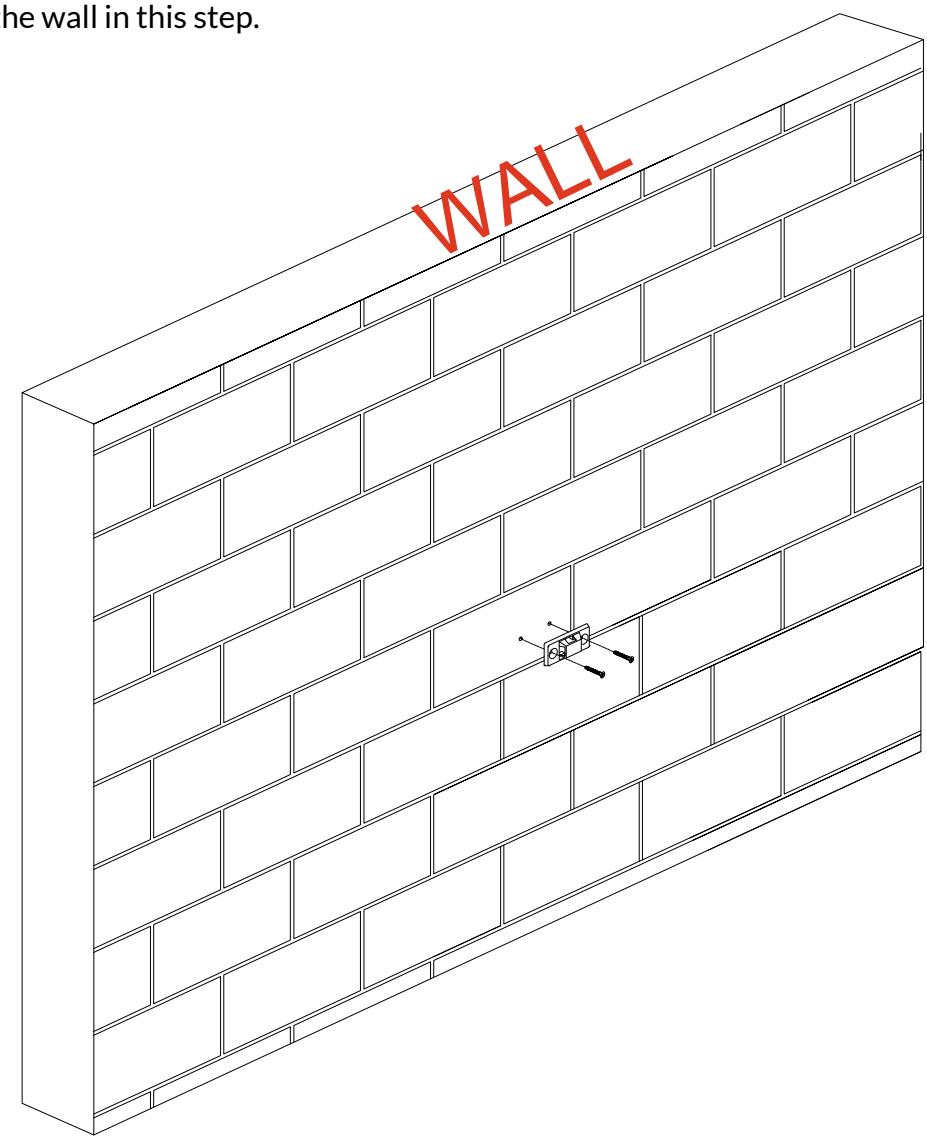


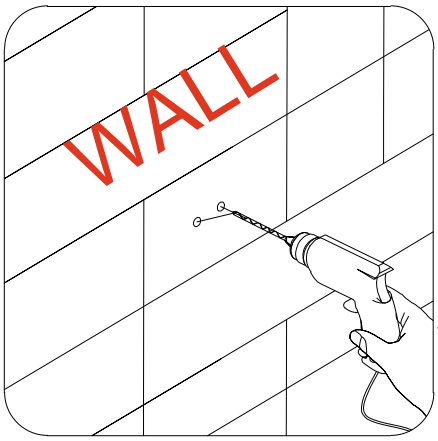

1.Drill a hole in the wall with an electric drill.

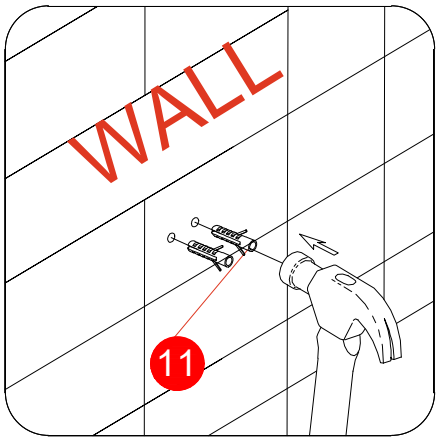

2.Tap the plastic wall anchor into the hole with a hammer.

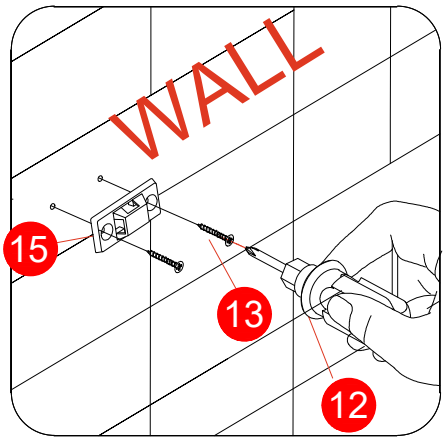

3.Secure the Anti-tip device (15) to the wall with screws (13).

Step 19

WARNING



Children have died from furniture tipover.To reduce the risk of furniture tipover:

-ALWAYS install anti-tip device provided.
-NEVER put a TV on this product.
-NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
-NEVER open more than one drawer at a time.
-Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!

16	 x 1	Tie

WWW.HULALAHOME.COM
Email: customerservice@hulalahome.com
Call us: +1(833)324-2464(8 AM to 5 PM PST Monday-Friday)