


# AI-ASC7DRSC


## Assembly Instructions

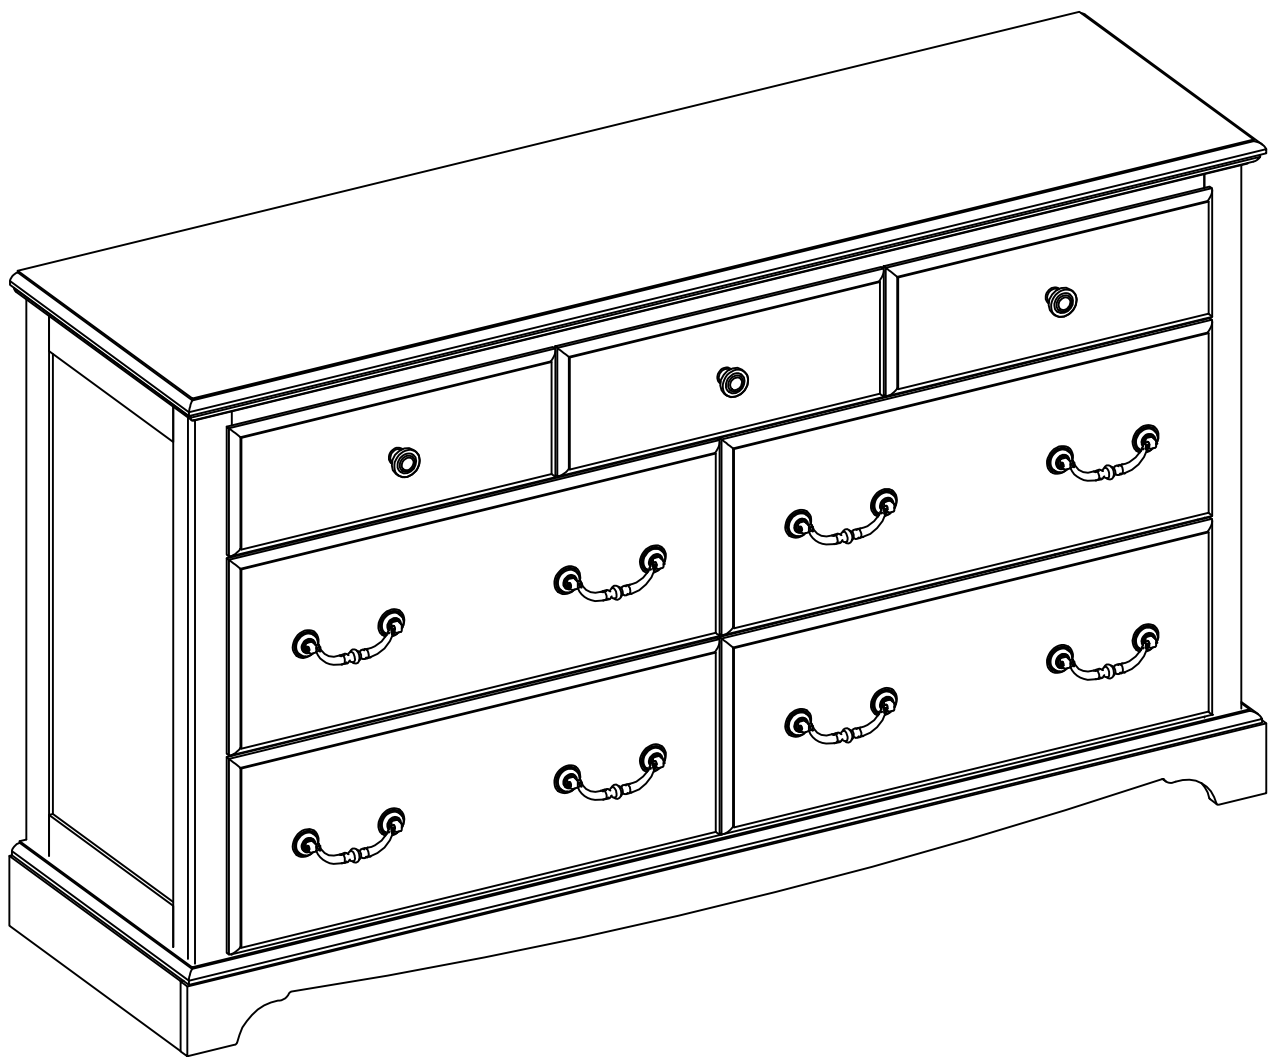


Customer Service E-mail Address : [xiuxiumaoyius@163.com](mailto:xiuxiumaoyius@163.com)

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

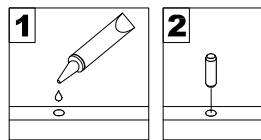


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

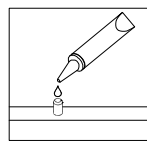


- VI. A Phillips head screwdriver is required for the assembly of this product .

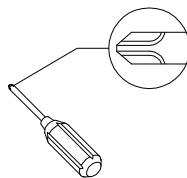






- VII. Power tools should not be used to assemble this product .

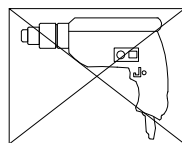


# Parts List

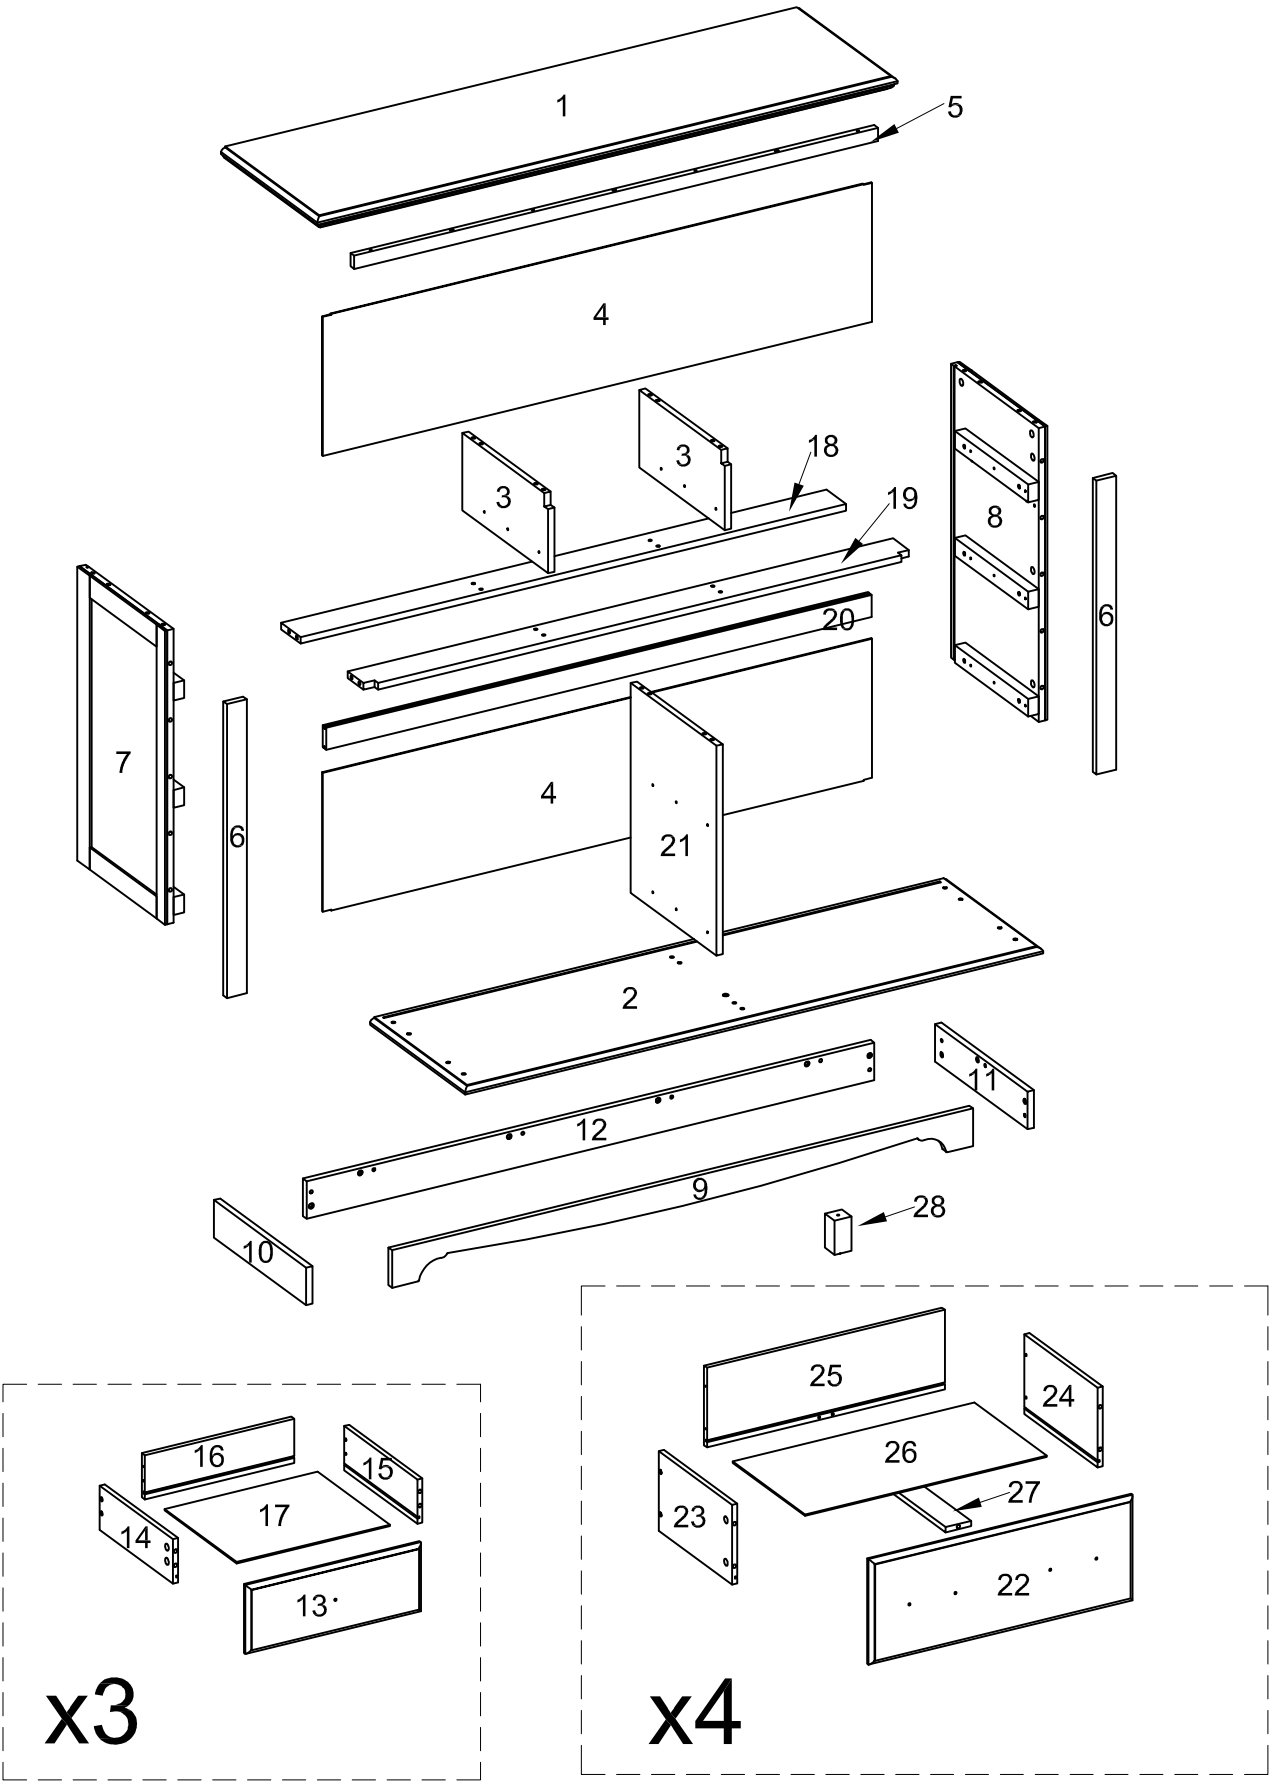




# Hardware List


|   |                                                                                     |           |                 |        |
|---|-------------------------------------------------------------------------------------|-----------|-----------------|--------|
| A |    | Ø8x30mm   | Wooden dowel    | 31 pcs |
| B |    | Ø6x35mm   | Cam bolt        | 52 pcs |
| C |    | Ø15x11mm  | Cam lock        | 20 pcs |
| D |    | Ø30mm     | Sticker         | 52 pcs |
| E |    |           | Glue tube       | 1 pc   |
| F |    |           | Plastic wedge   | 16 pcs |
| G |    | Ø3x17mm   | Flat-head screw | 16 pcs |
| H |    | Ø4x22mm   | Handle bolt     | 19 pcs |
| J |   |           | Handle          | 3 pcs  |
| K |  |           | Handle          | 8 pcs  |
| L |  | Ø15x9.5mm | Cam lock        | 32 pcs |
| M |  | Ø4x32mm   | Screw           | 40 pcs |
| N |  | Ø6x50mm   | Screw           | 11 pcs |
| P |  | M 4       | Hex key         | 1 pc   |
| Q |  | Ø6x12mm   | Bolt            | 28 pcs |
| R |  |           | Connector       | 14 pcs |

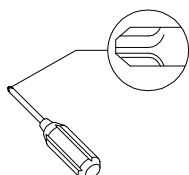

Philips head screwdriver required for assembly  
(not included)


# Hardware List

|   |                                                                                   |                            |                      |        |
|---|-----------------------------------------------------------------------------------|----------------------------|----------------------|--------|
| S |  | Ø3.5x12mm                  | Screw                | 84 pcs |
| T |  | 12"                        | Left cabinet member  | 7 pcs  |
| U |  | 12"                        | Right cabinet member | 7 pcs  |
| V |  | 12"                        | Left drawer runner   | 7 pcs  |
| W |  | 12"                        | Right drawer runner  | 7 pcs  |
| X |  | Tipping Restraint Hardware |                      | 2 set  |

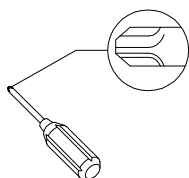


Philips head screwdriver required for assembly  
(not included)



## Step 1

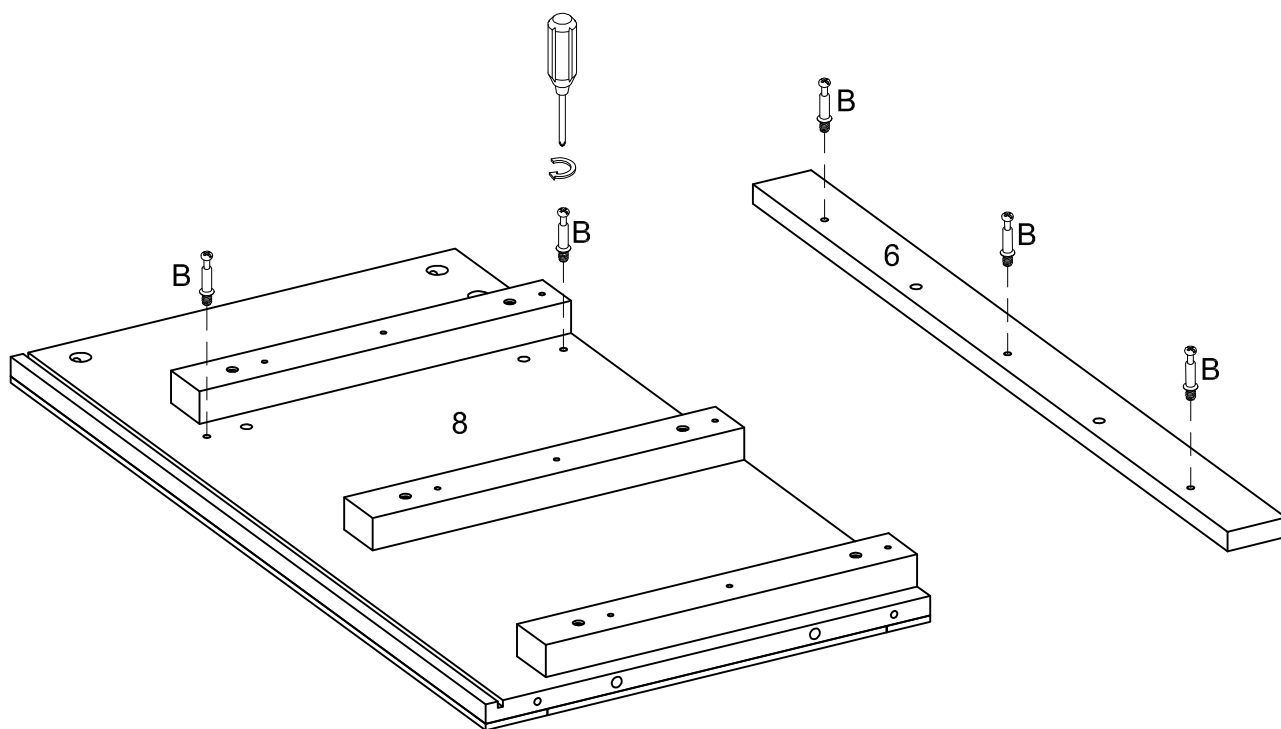



## Step 2

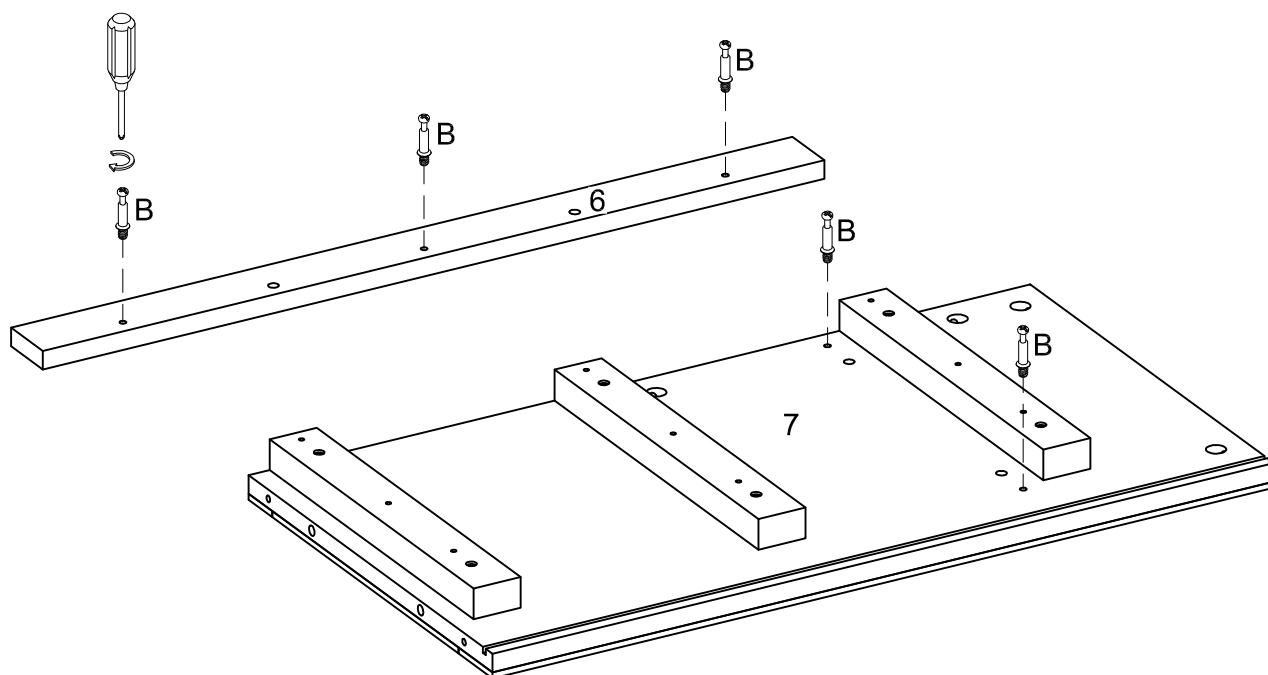


## Step 3

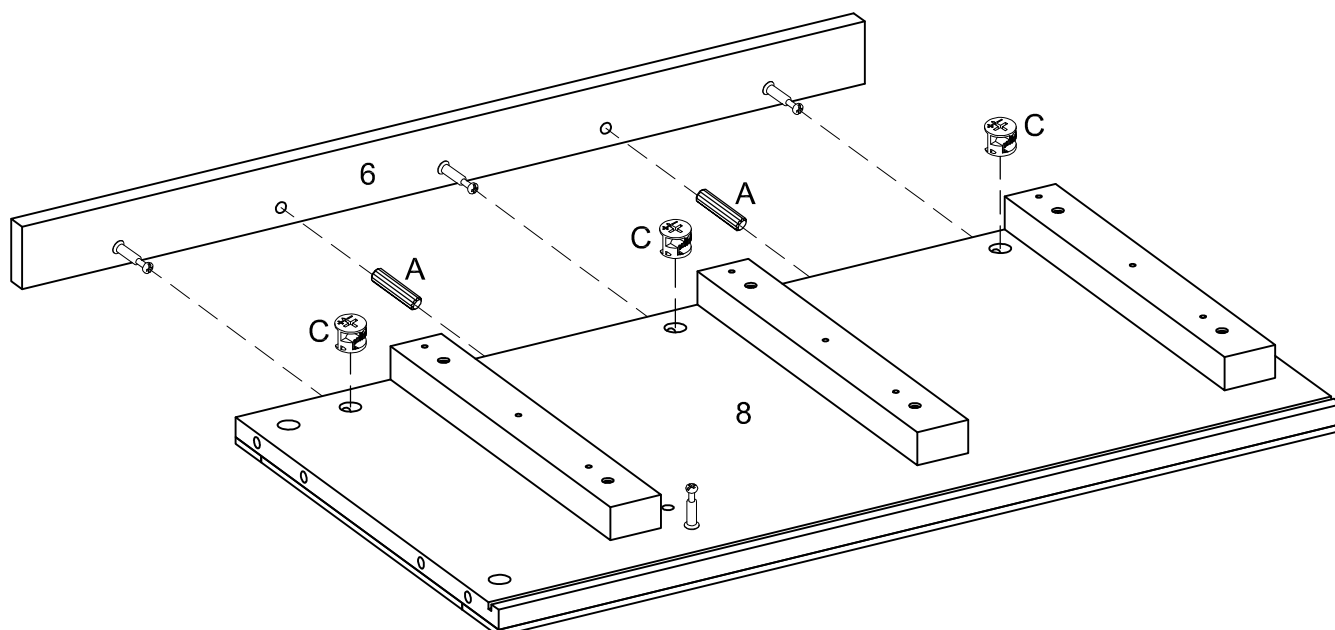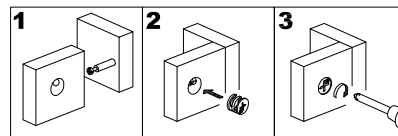


## Step 4

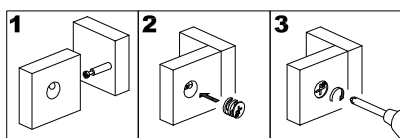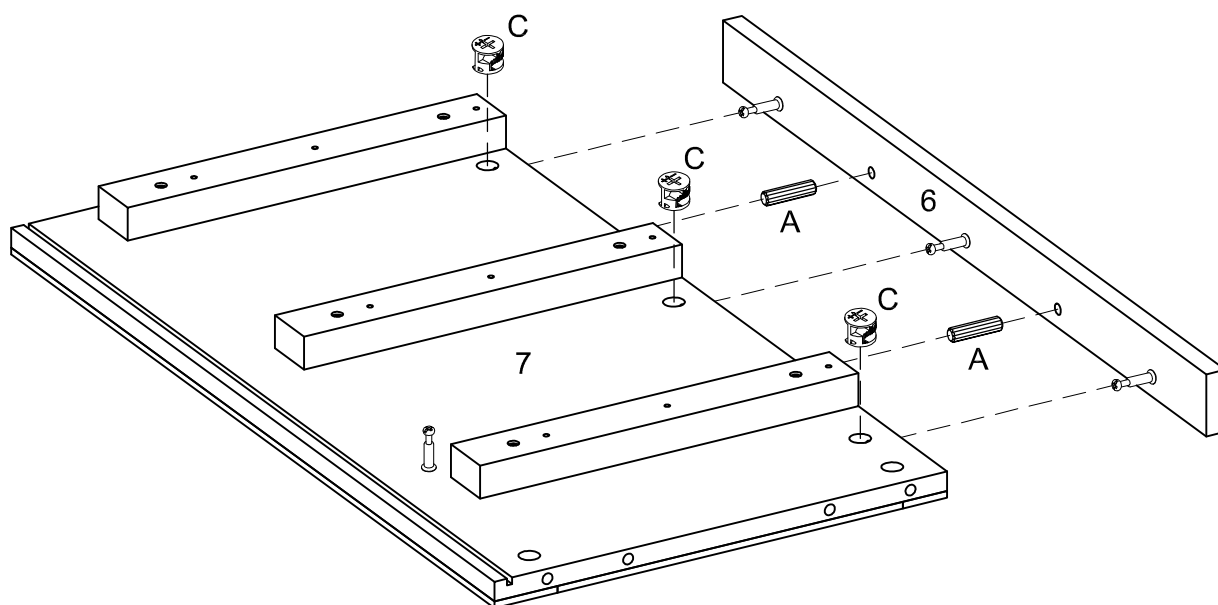


## Step 5

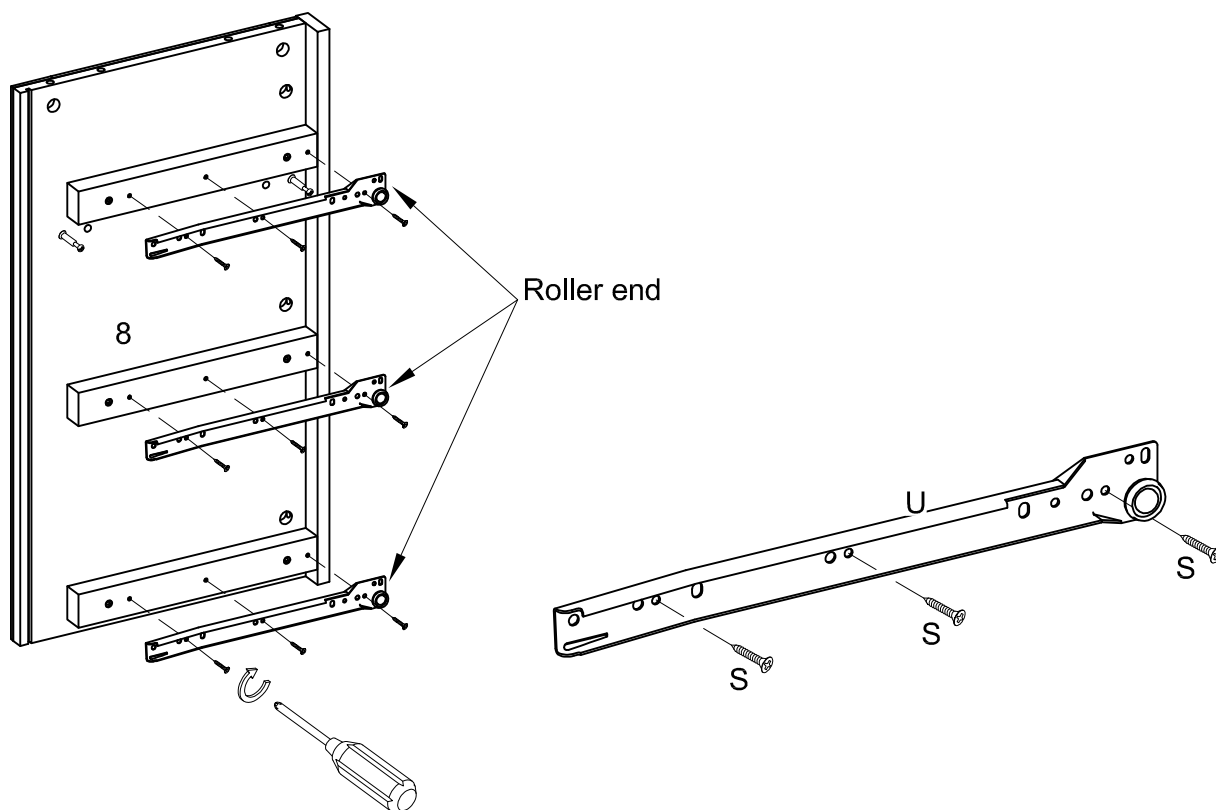


## Step 6

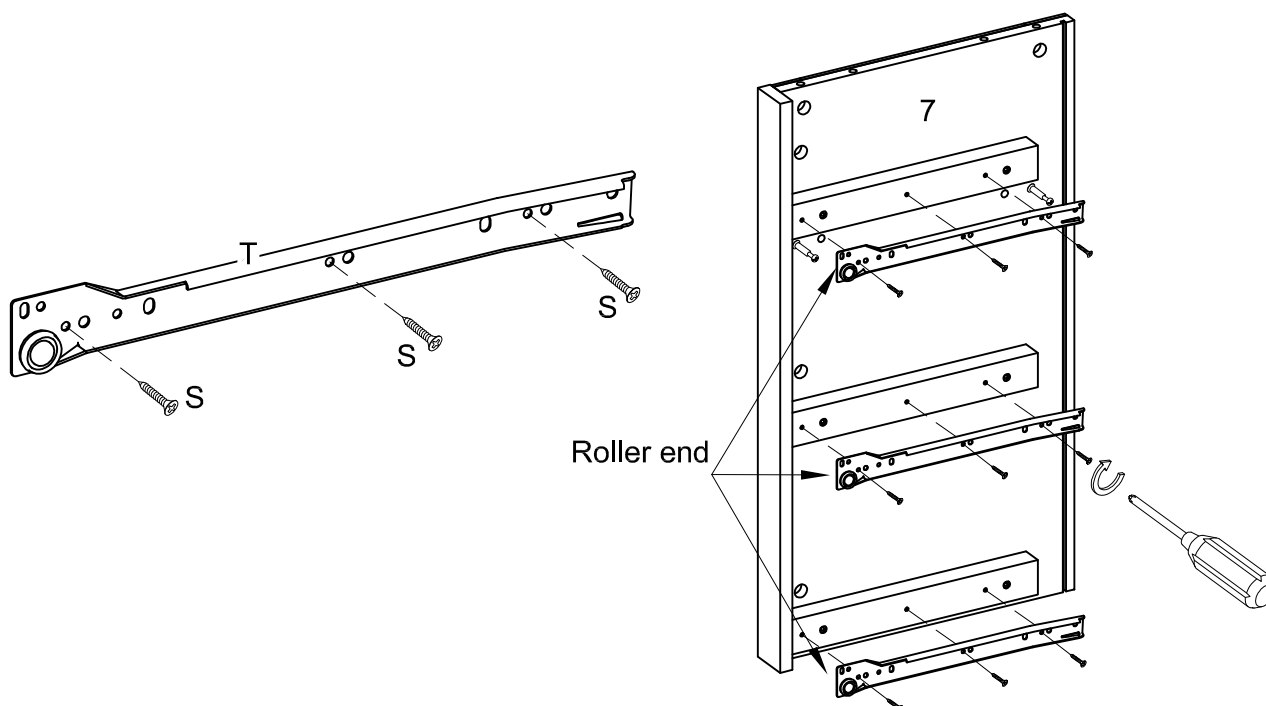


## Step 7

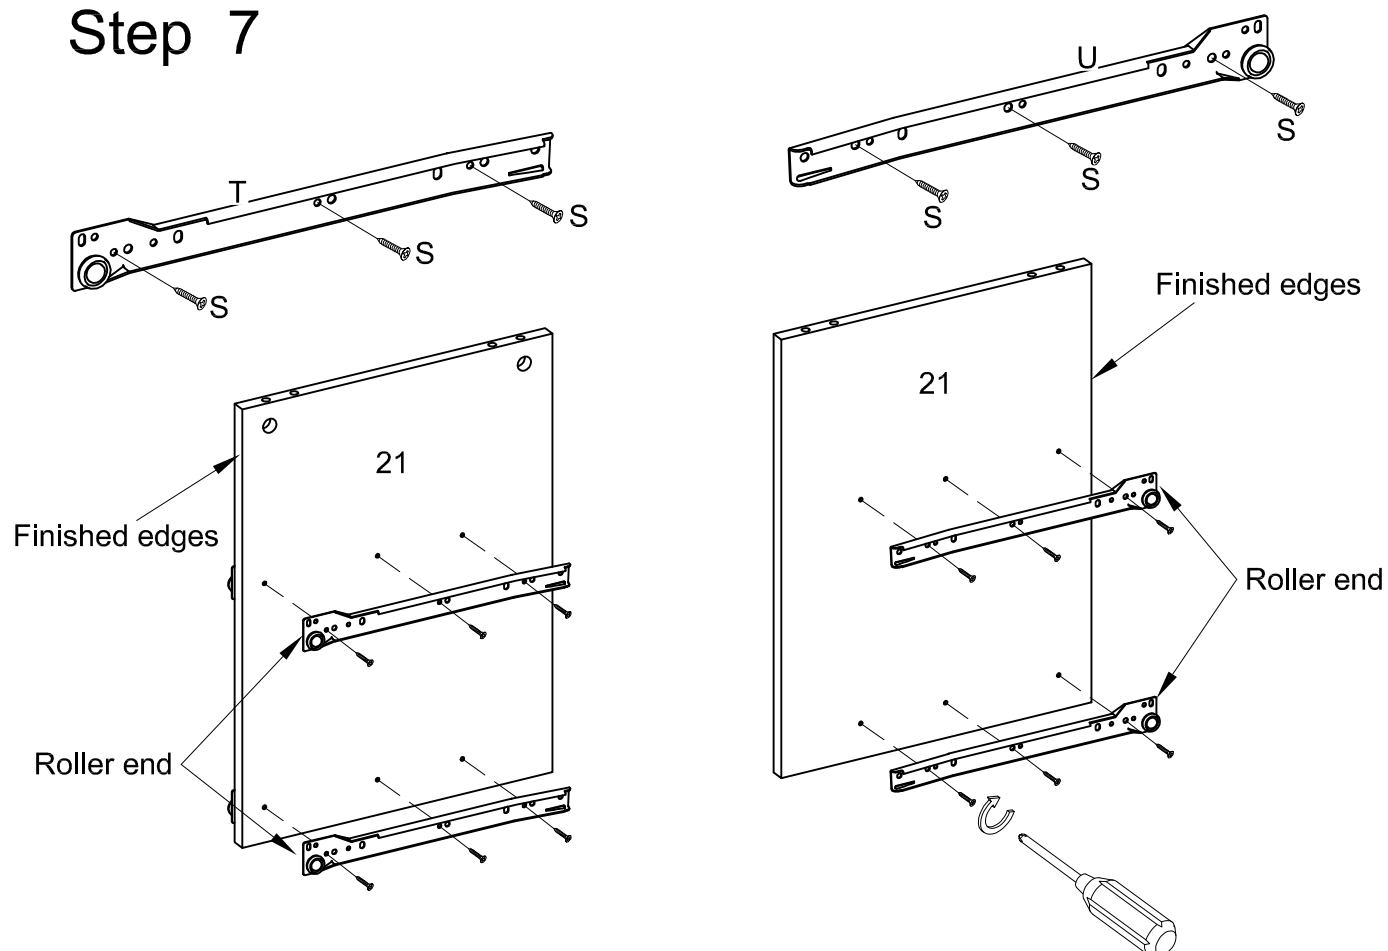


## Step 8

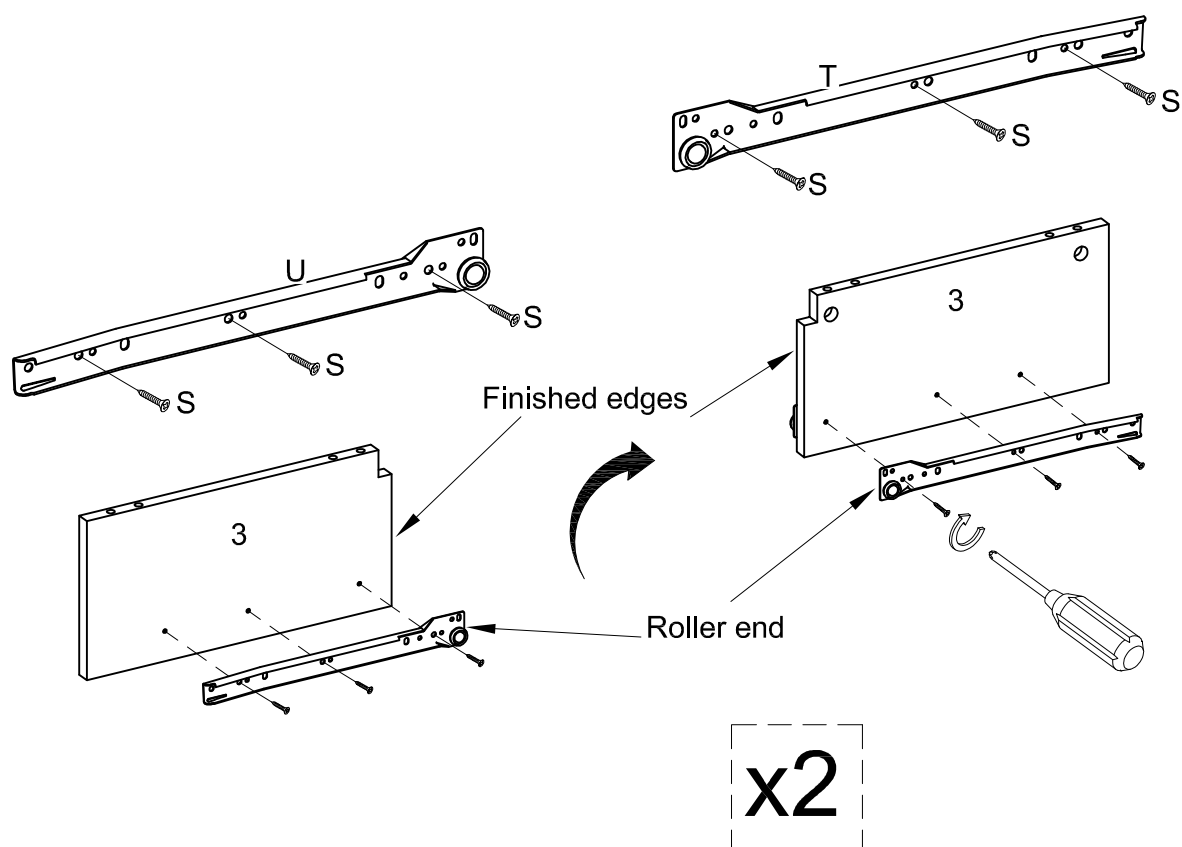


## Step 9

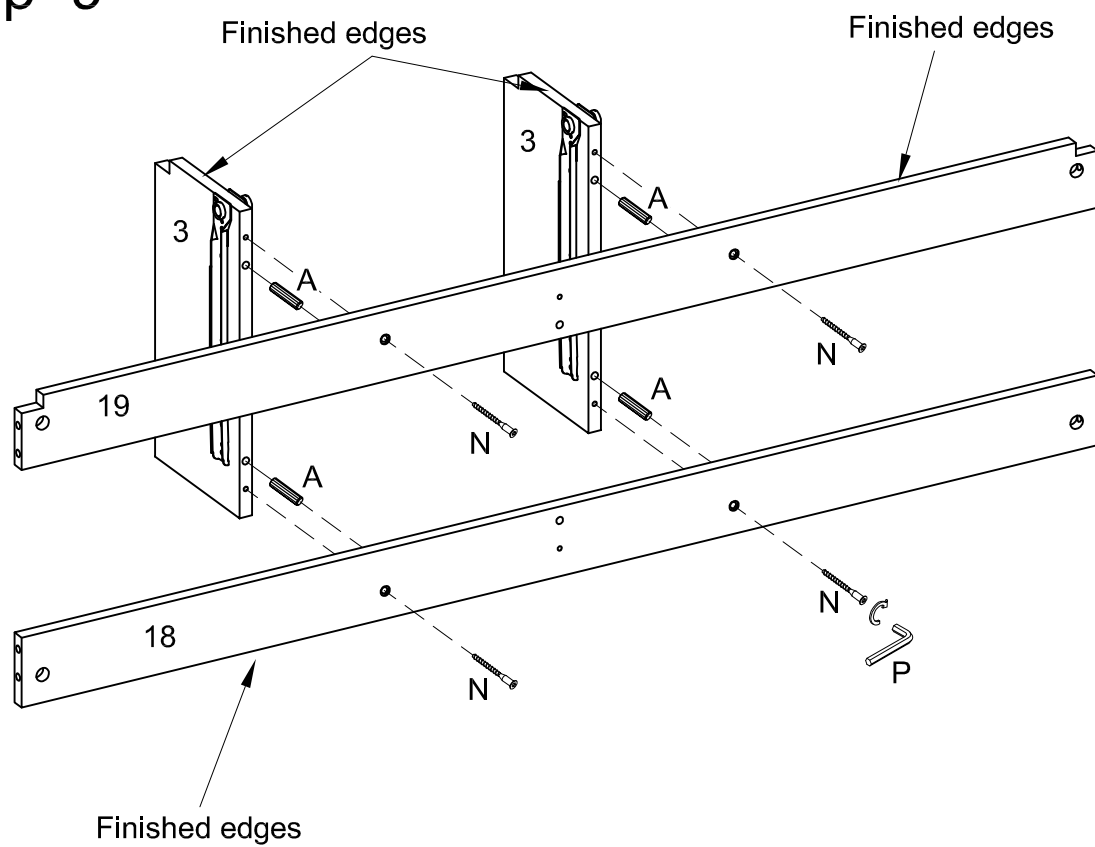


## Step 10

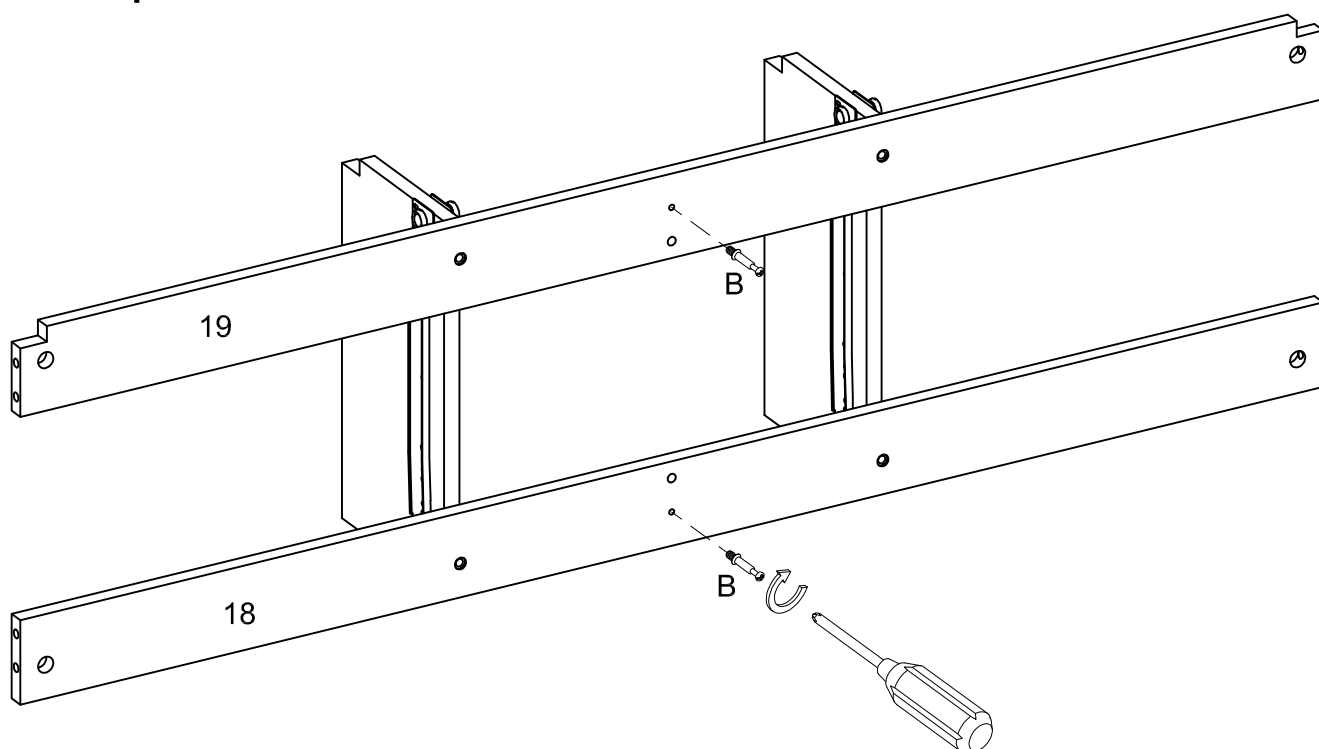


## Step 11

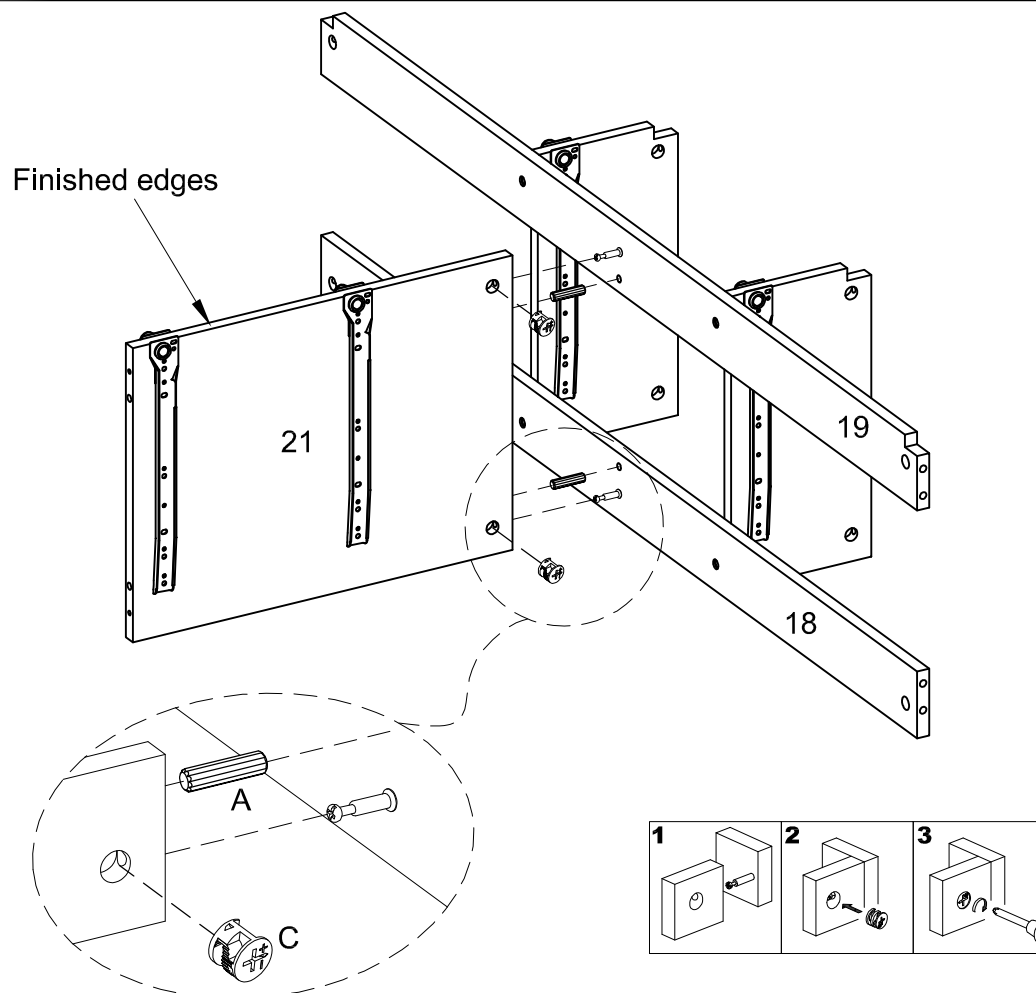


## Step 12

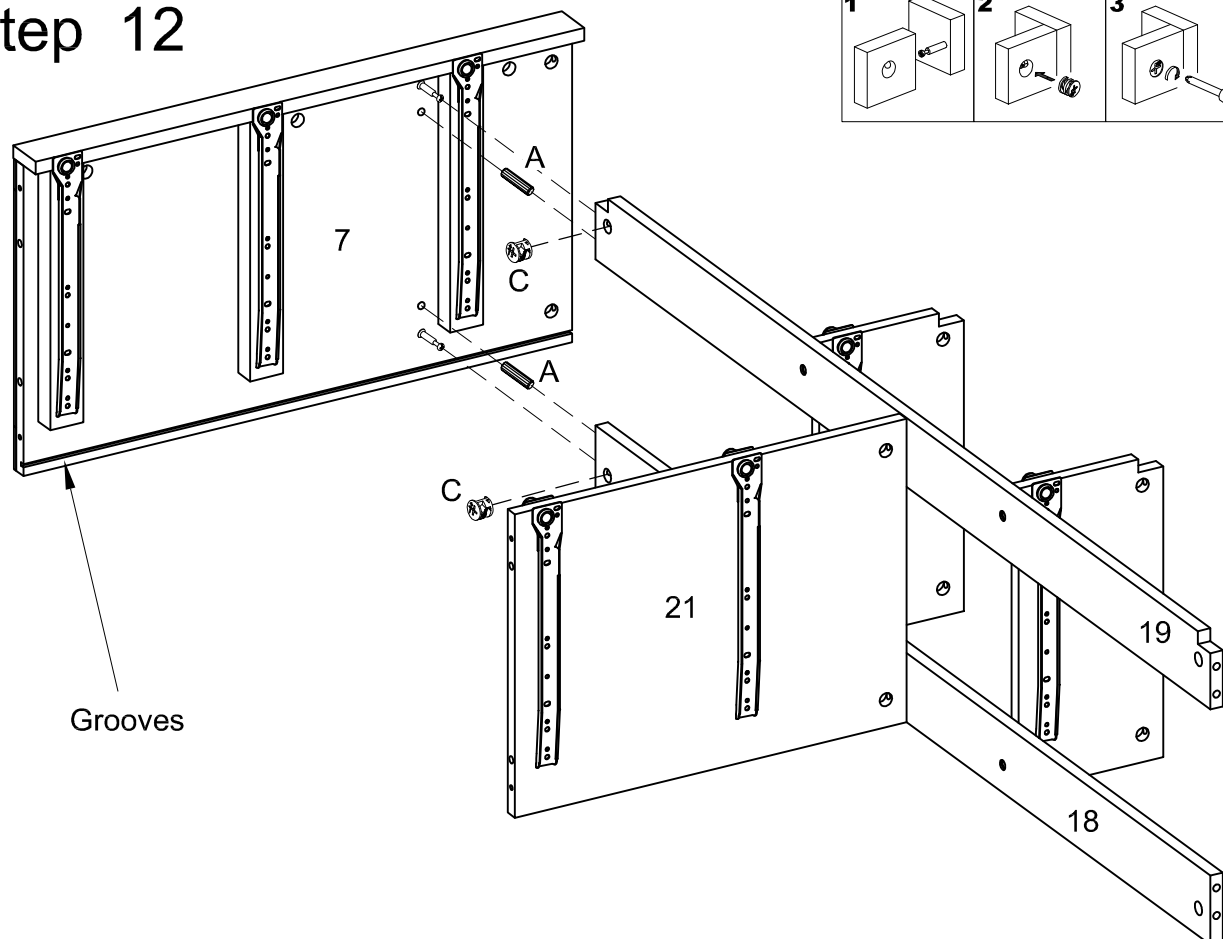


## Step 13

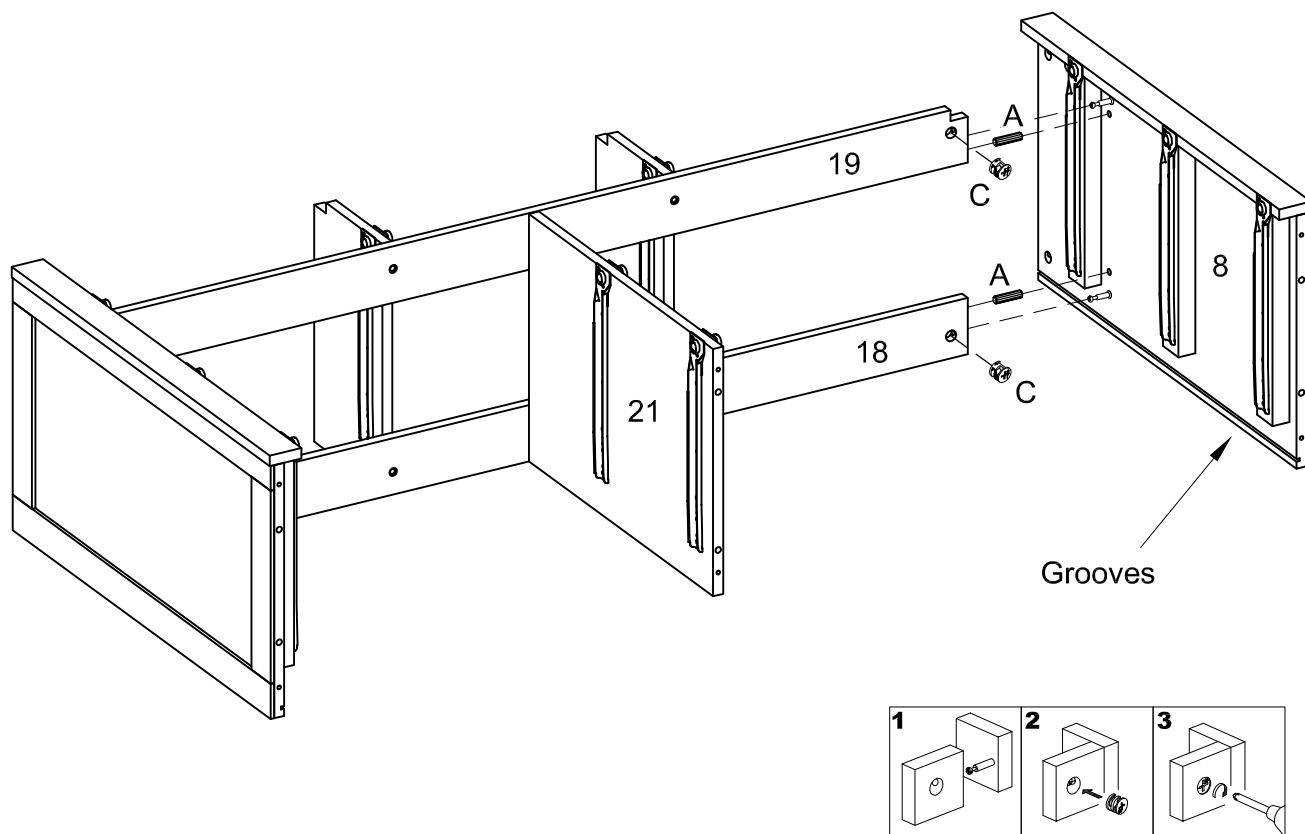


## Step 14

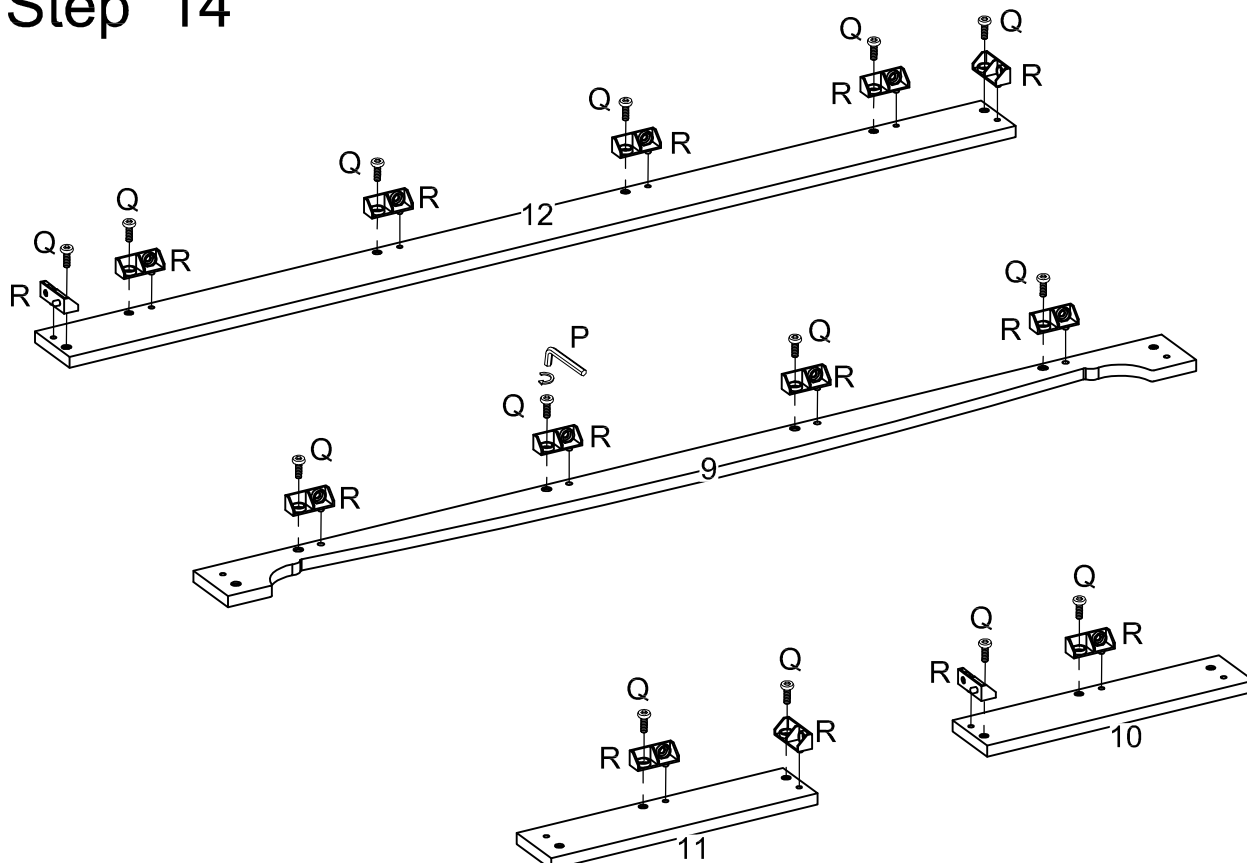


## Step 15

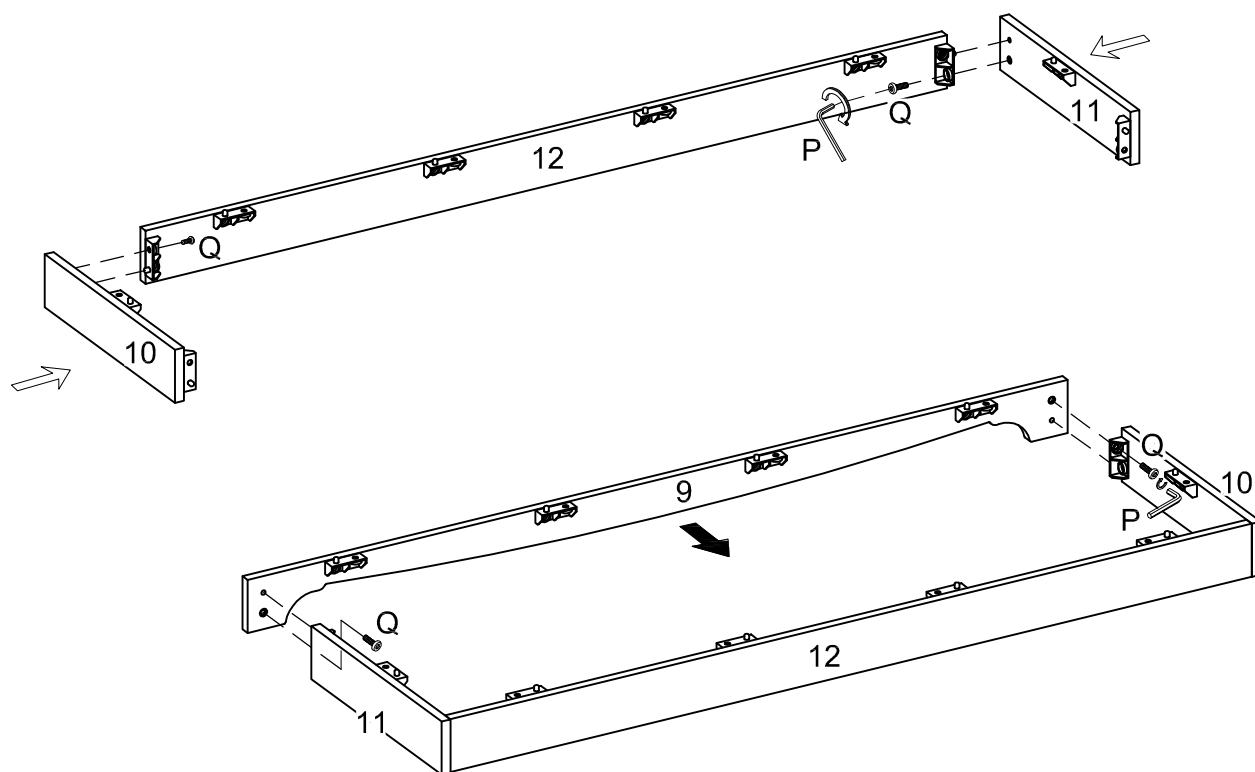


## Step 16

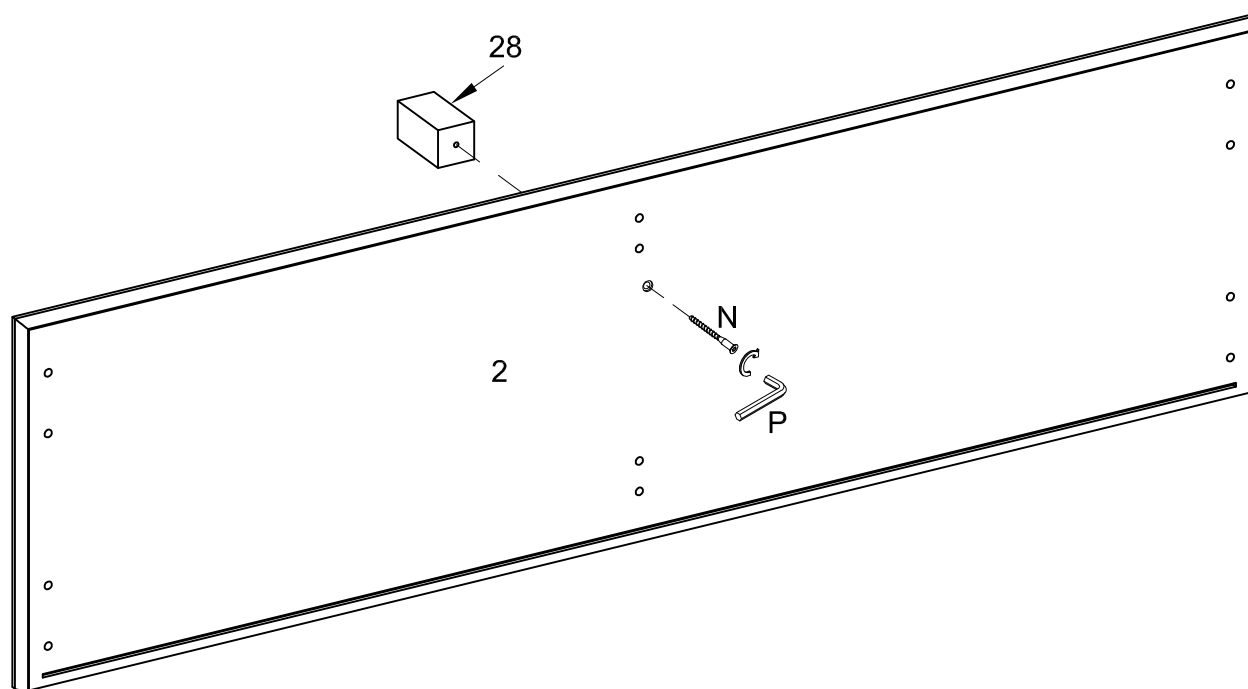


## Step 17

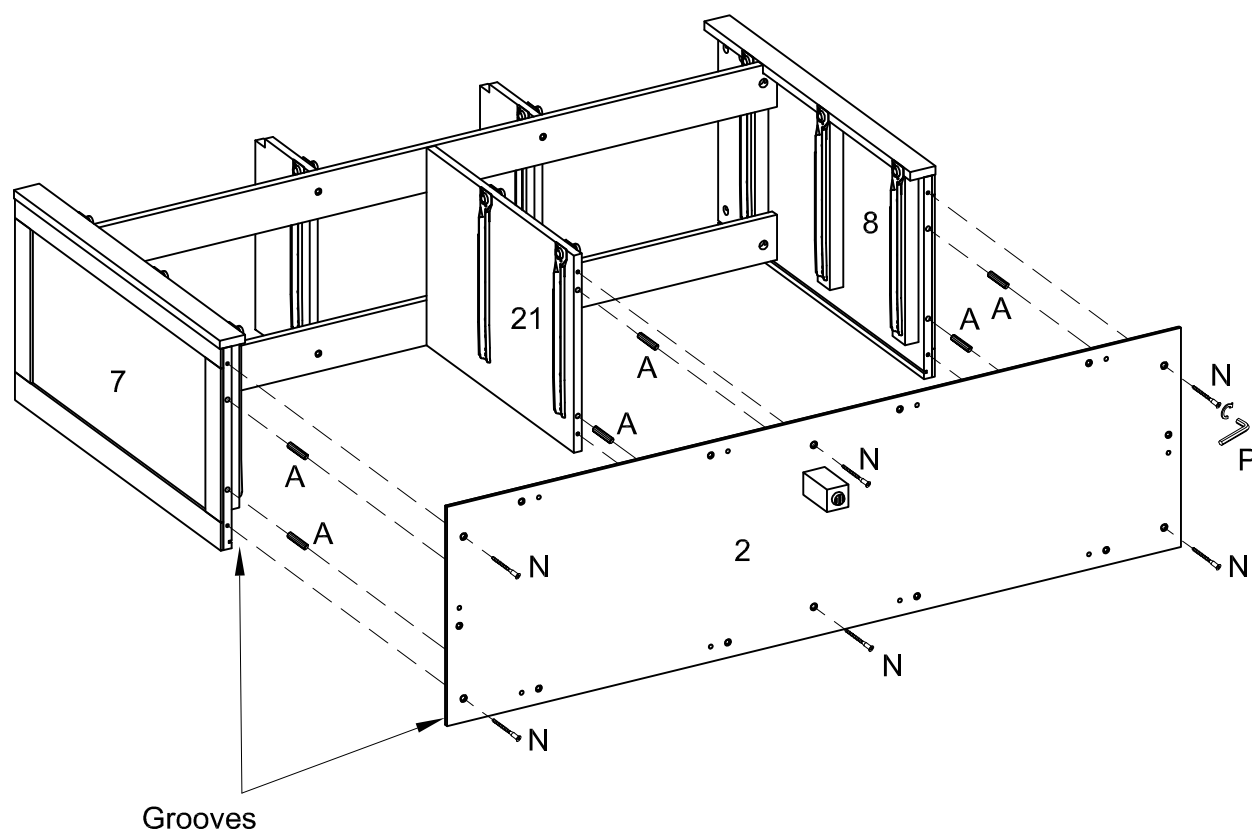


## Step 18

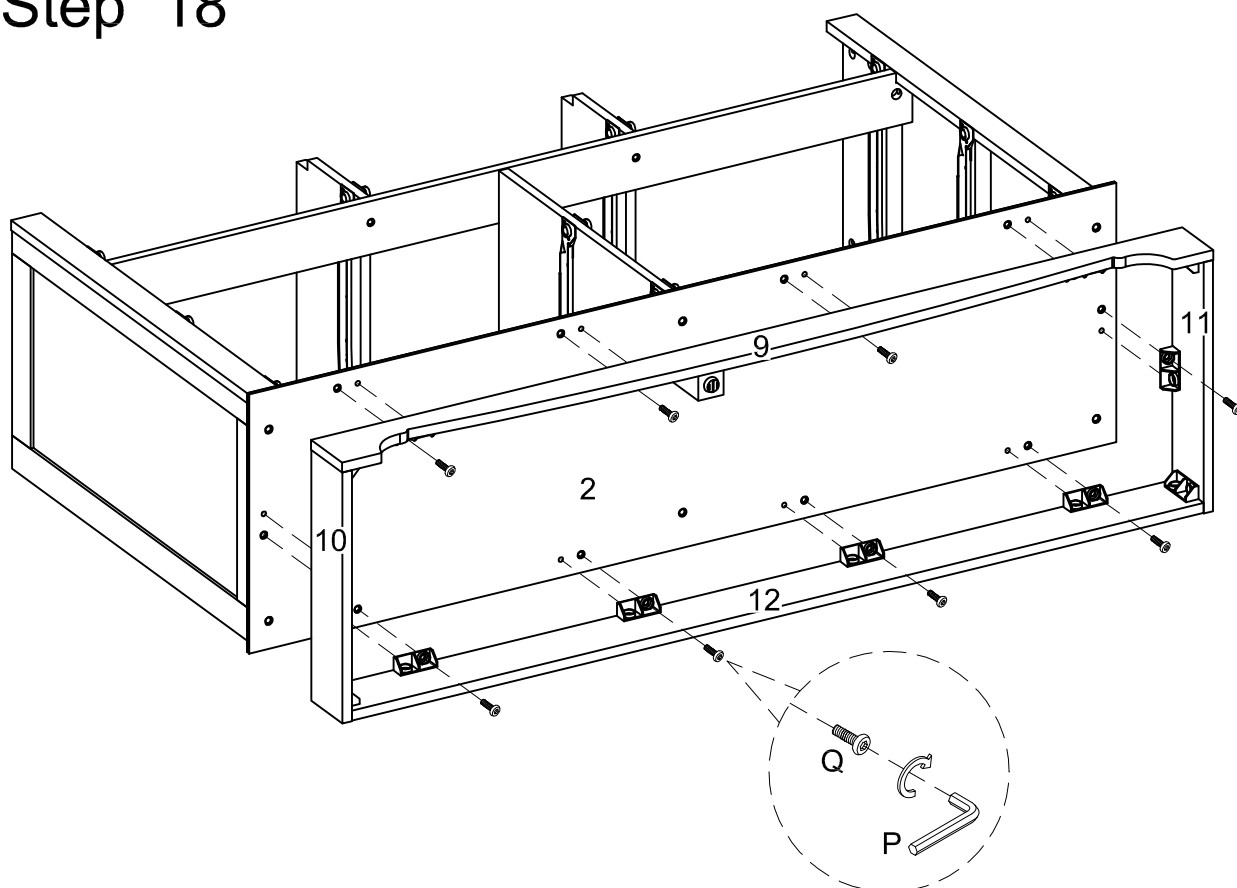


## Step 19

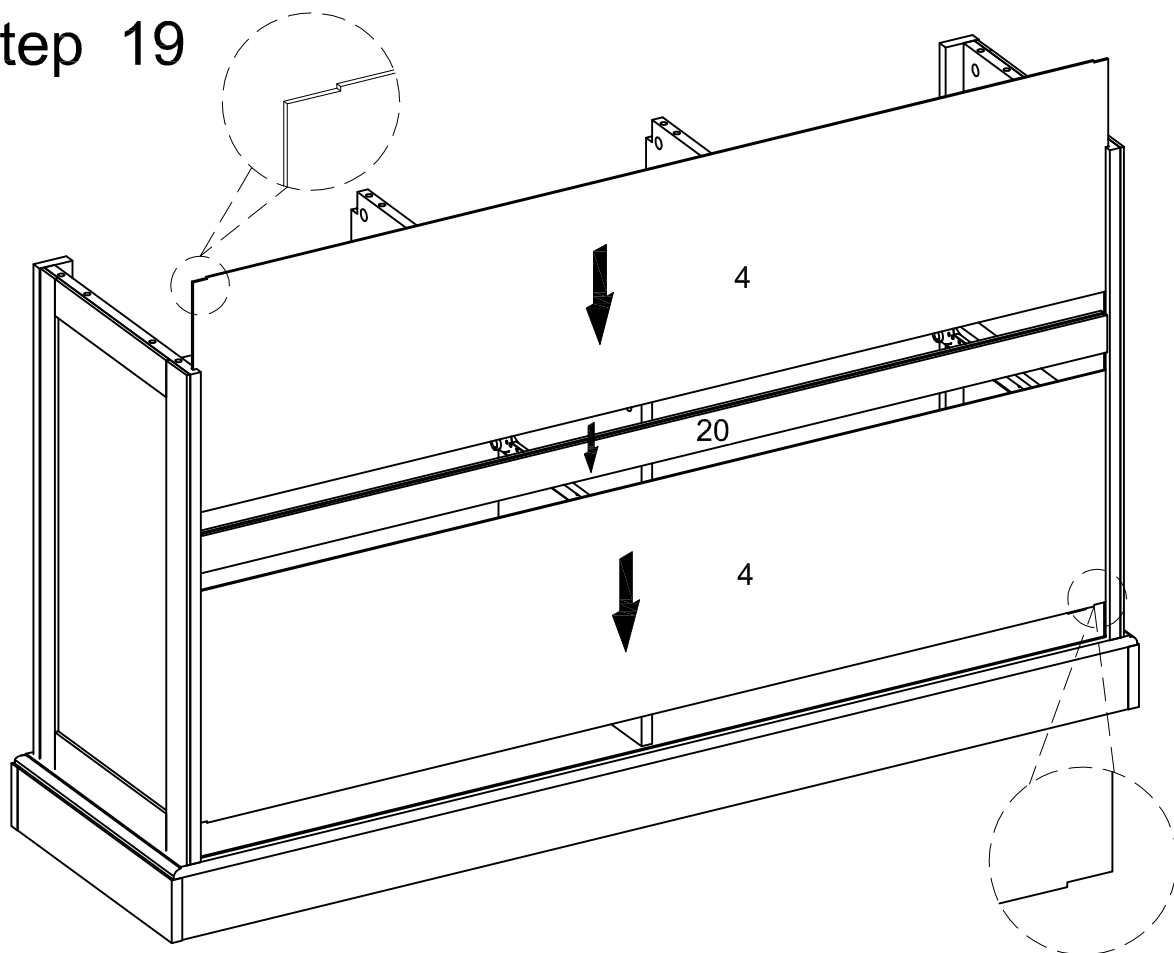



## Step 20

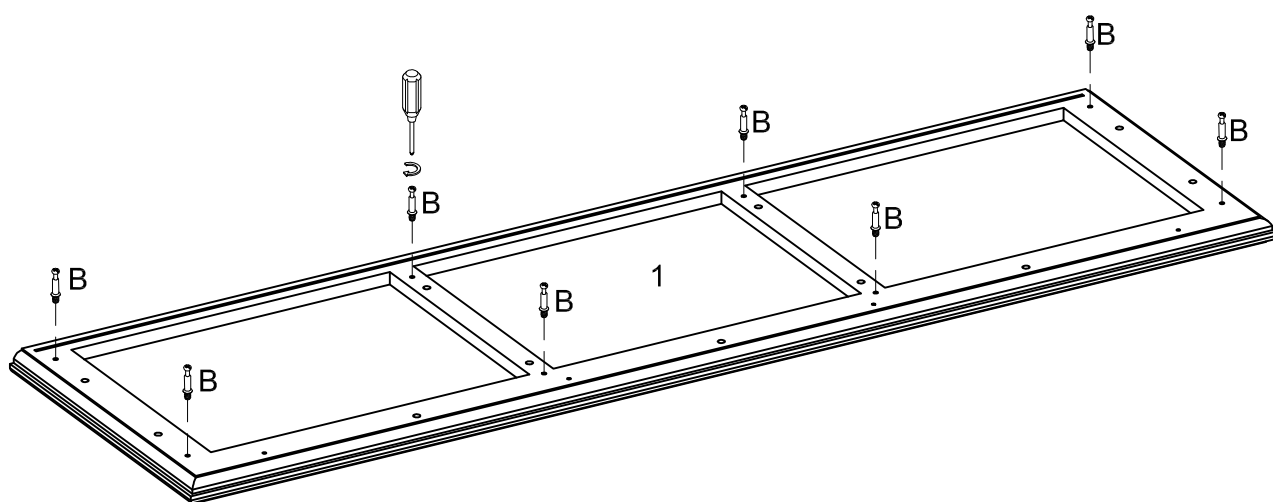


## Step 21

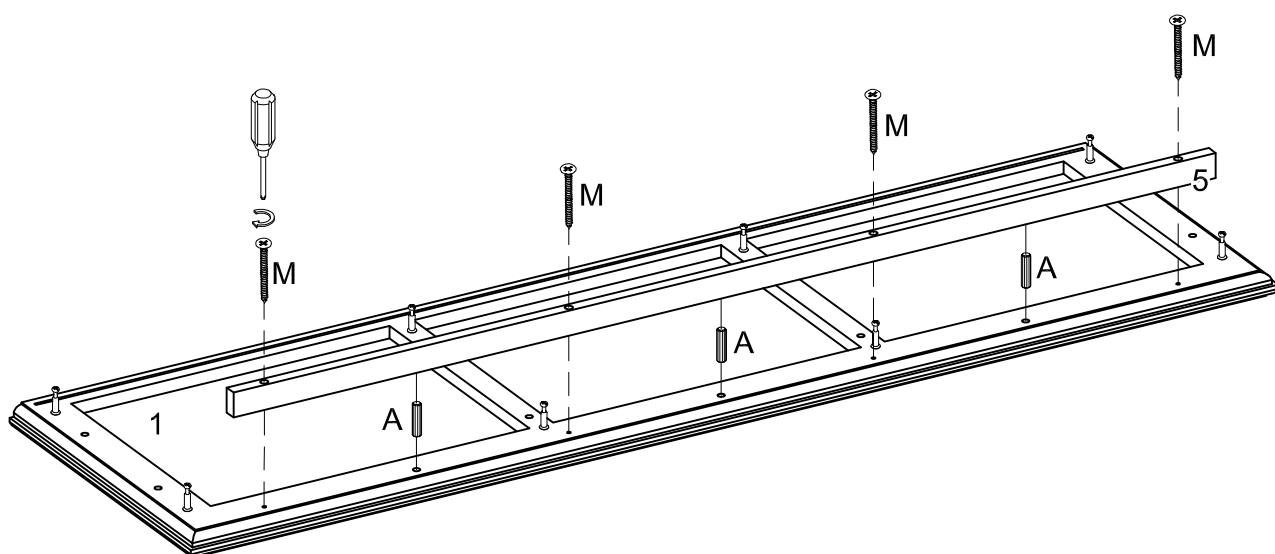


## Step 22

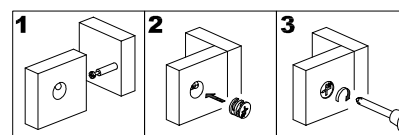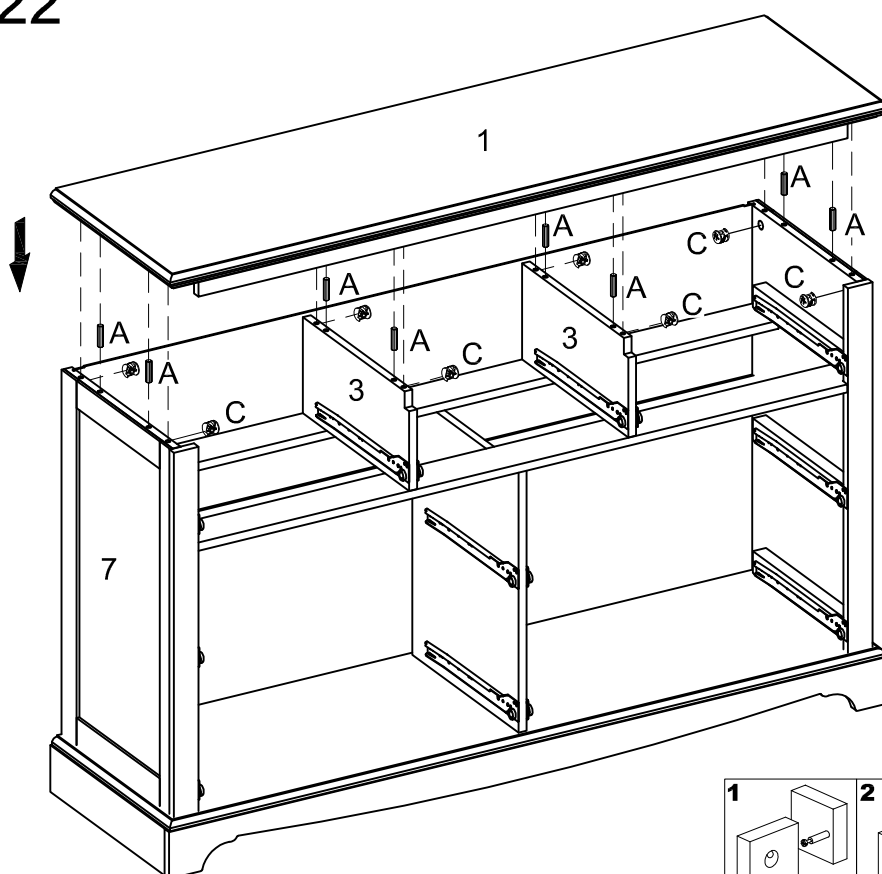


## Step 23

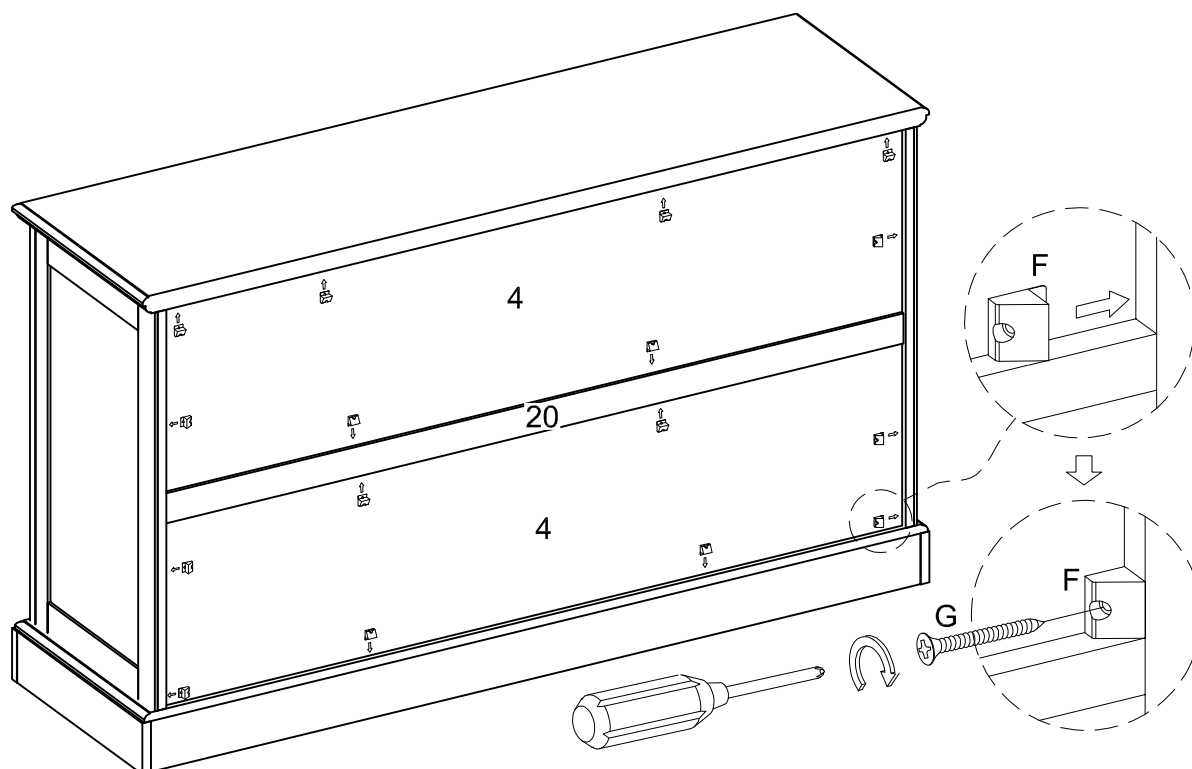


## Step 24

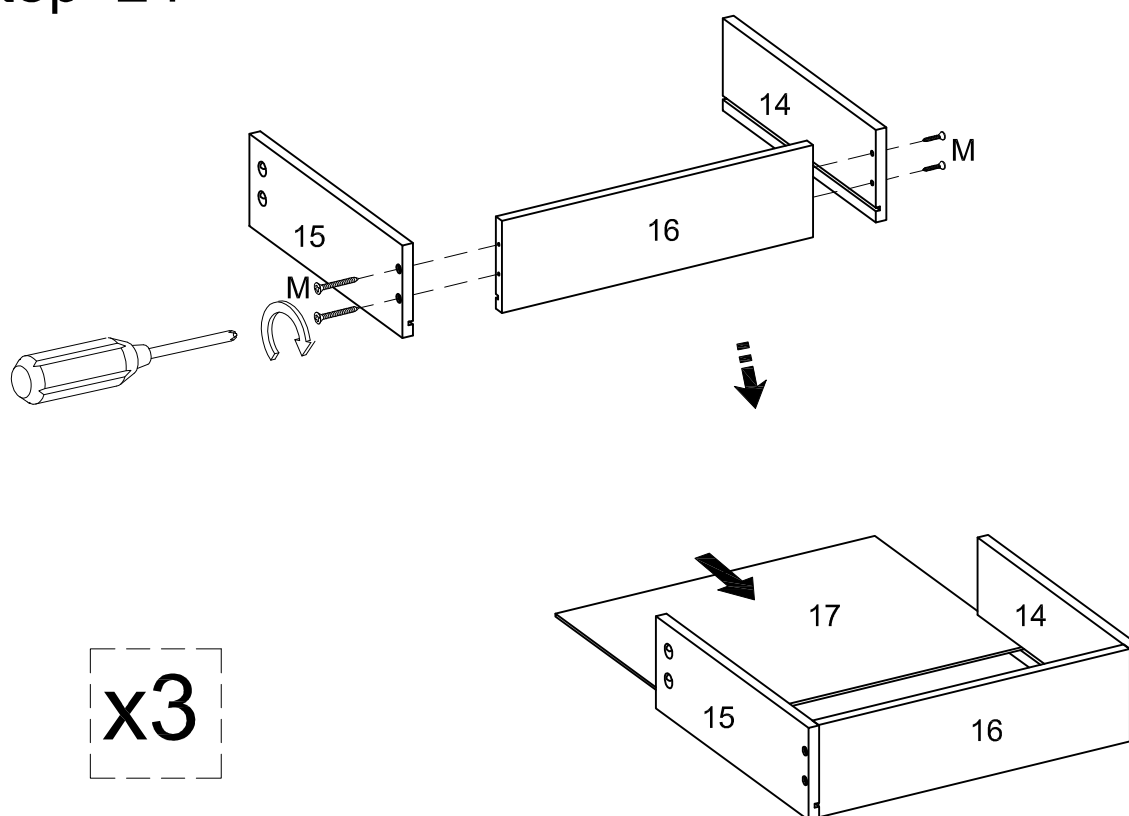


## Step 25

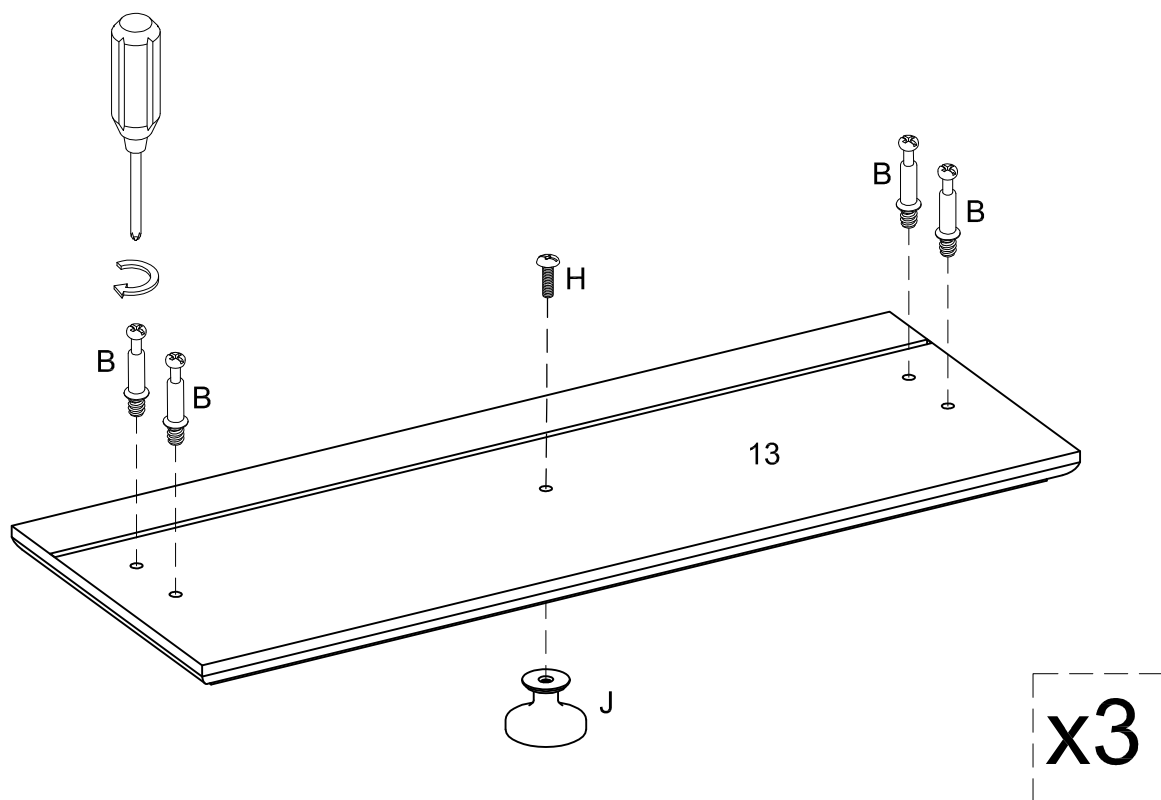


## Step 26

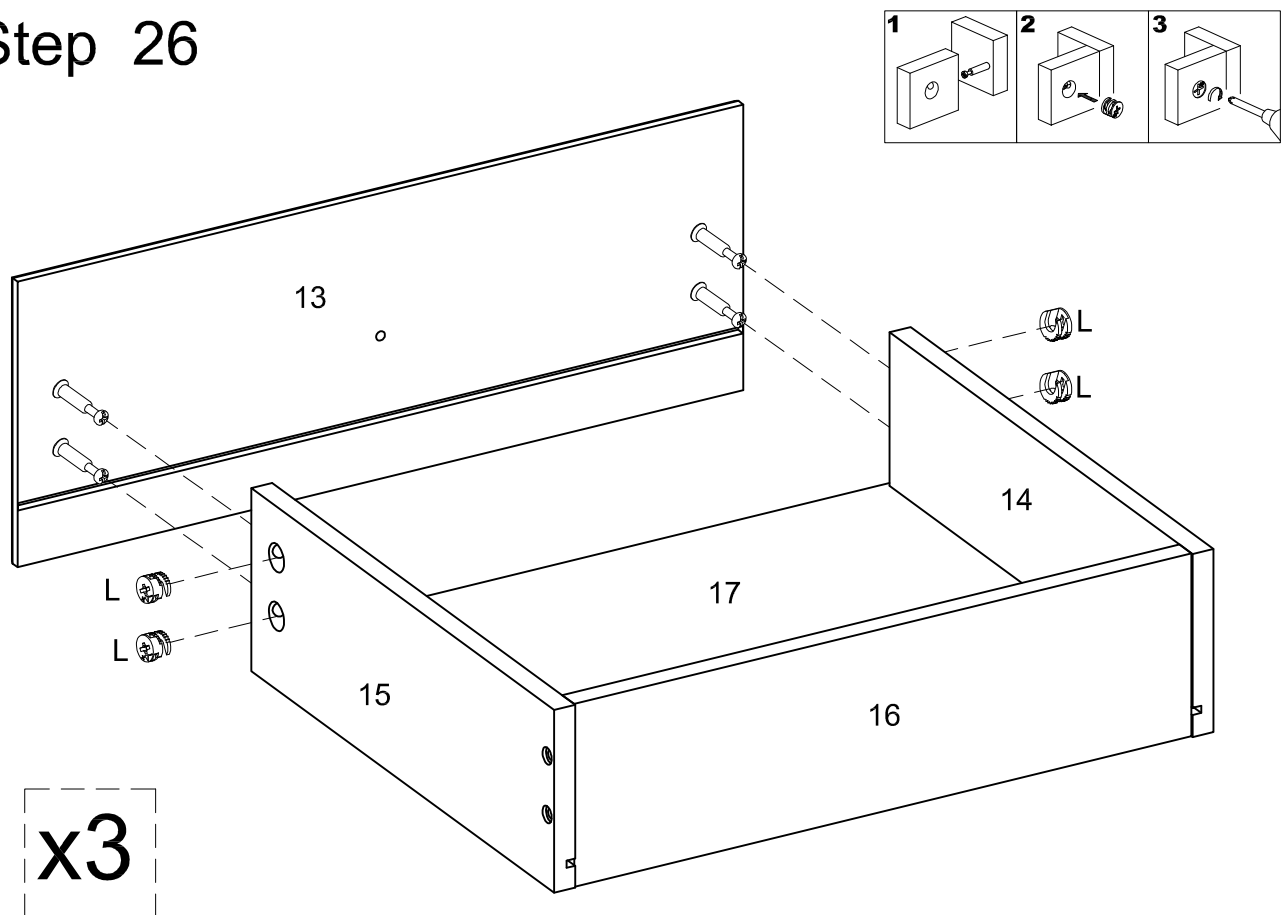


## Step 27

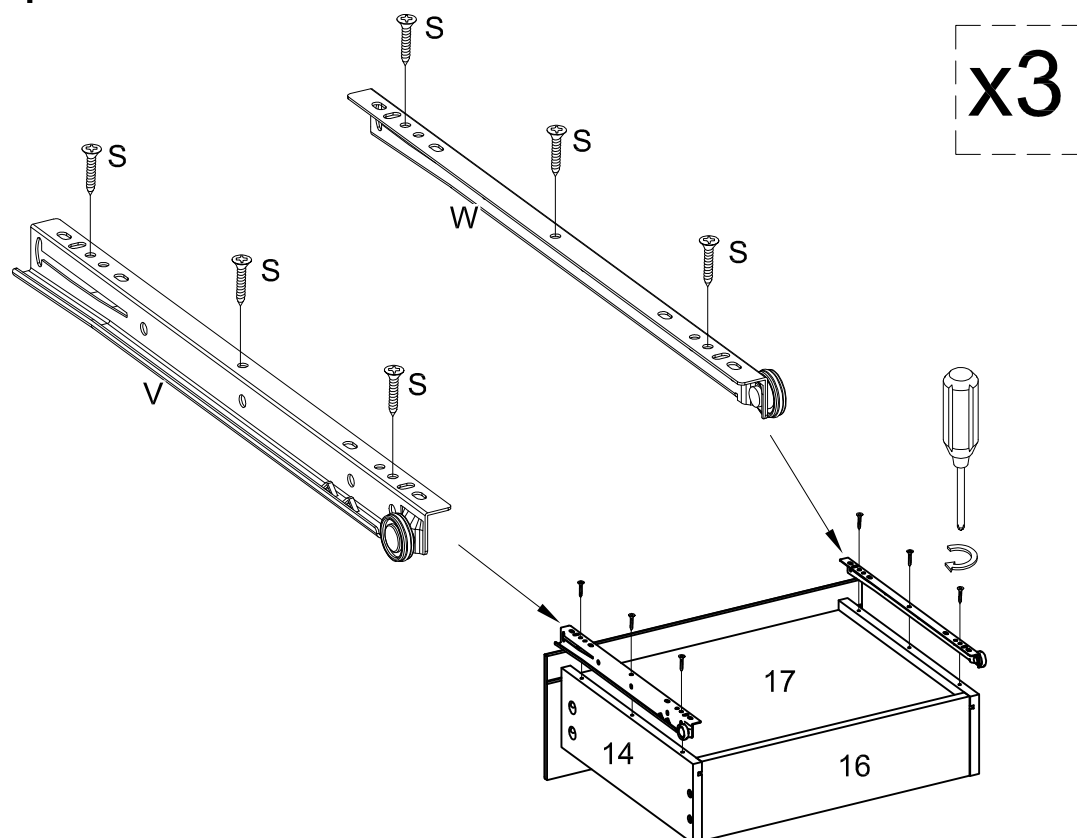


## Step 28

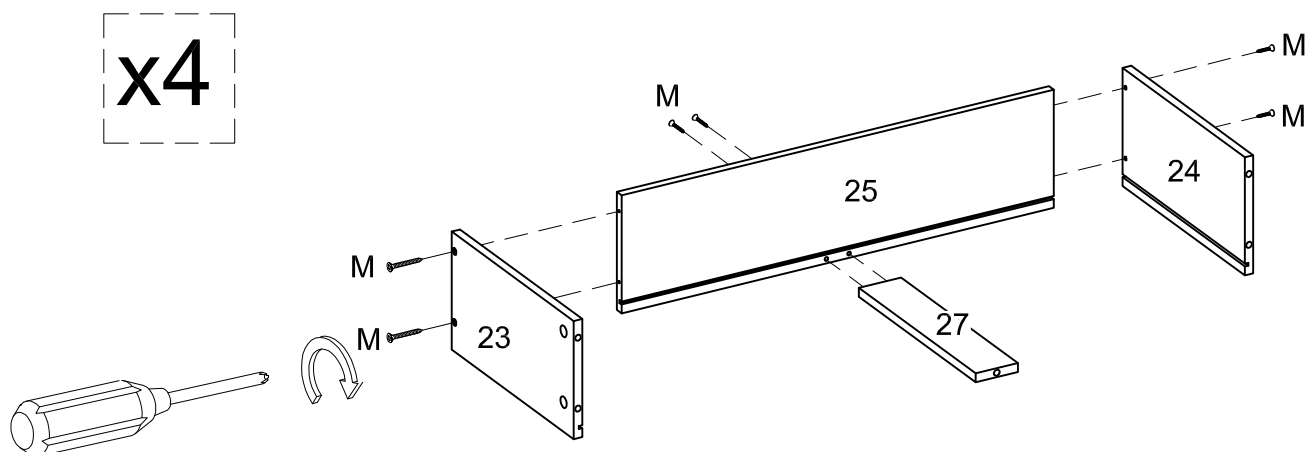


## Step 29

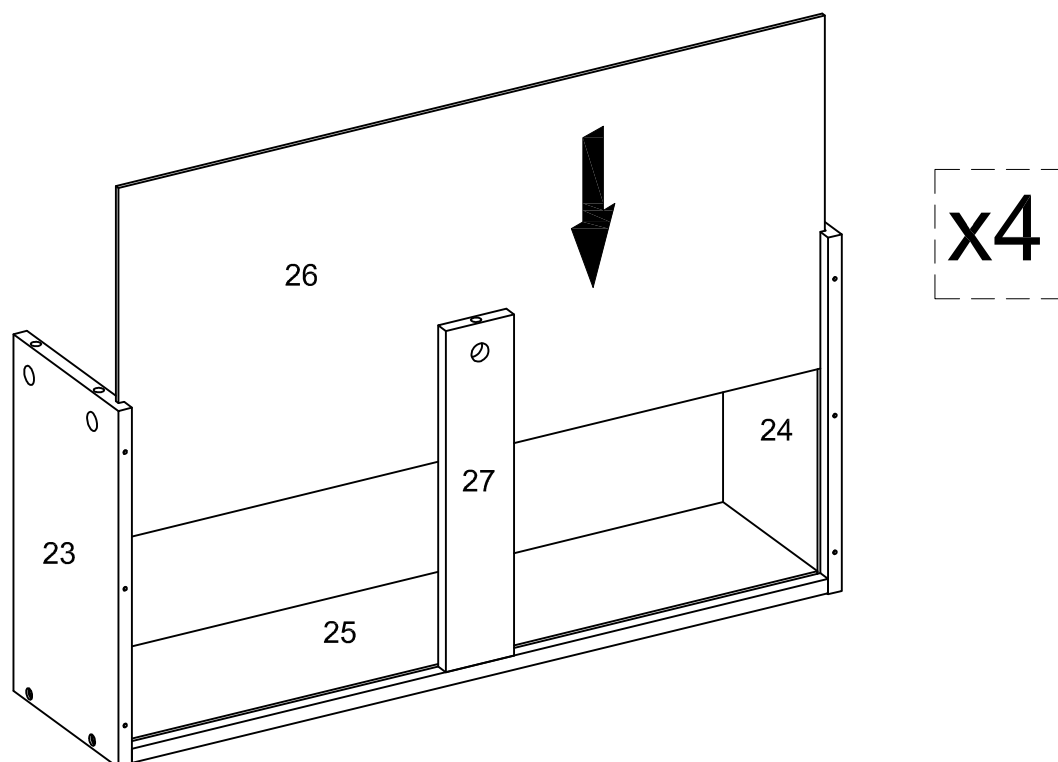


## Step 30

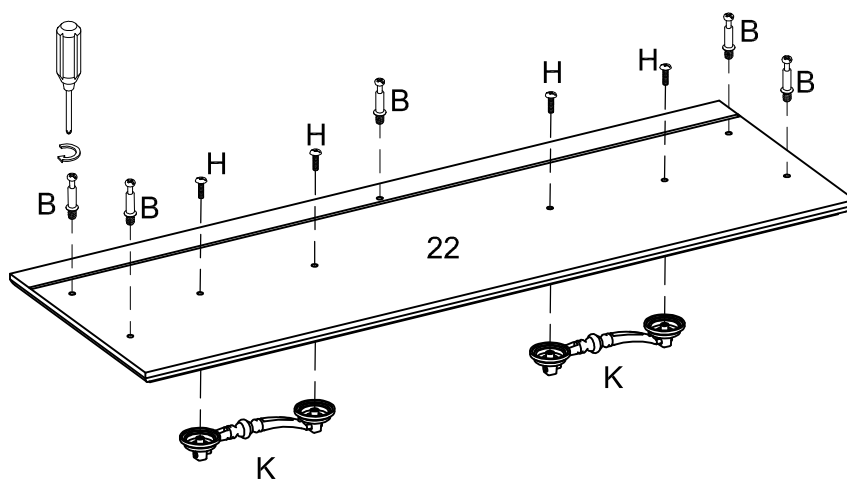


x4

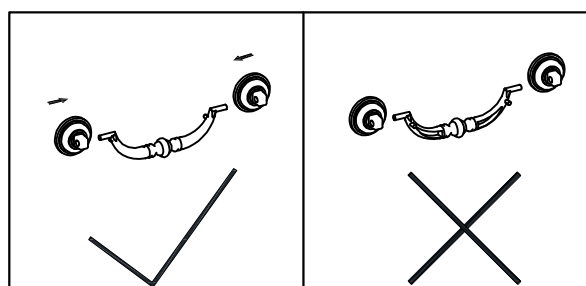




## Step 31

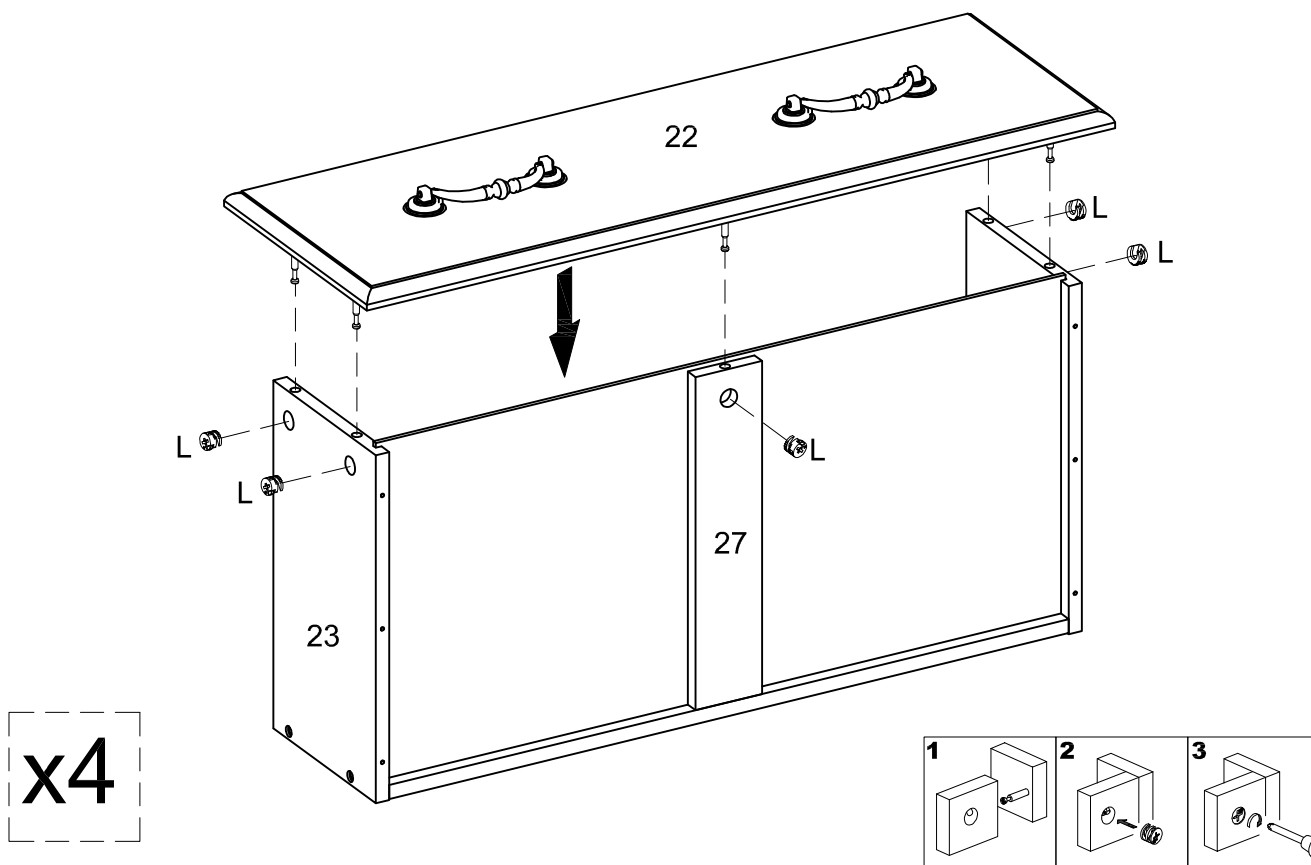


## Step 32

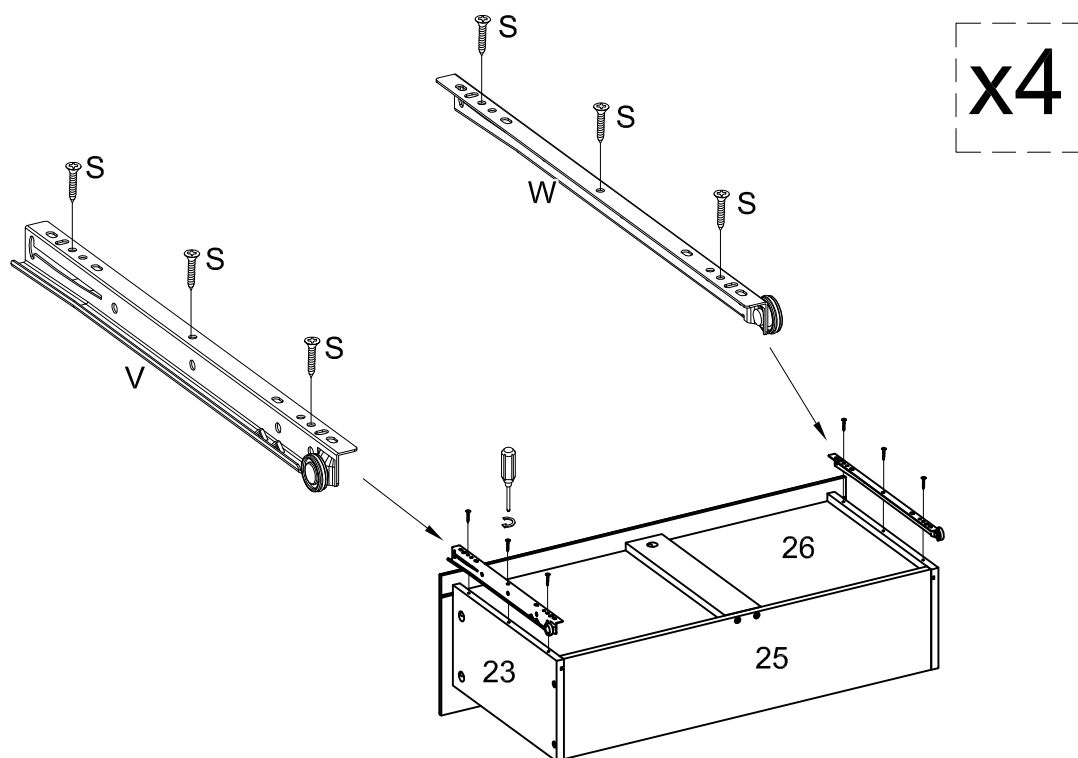


## Step 33

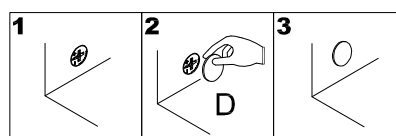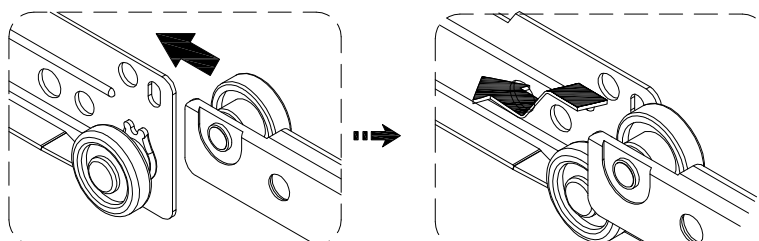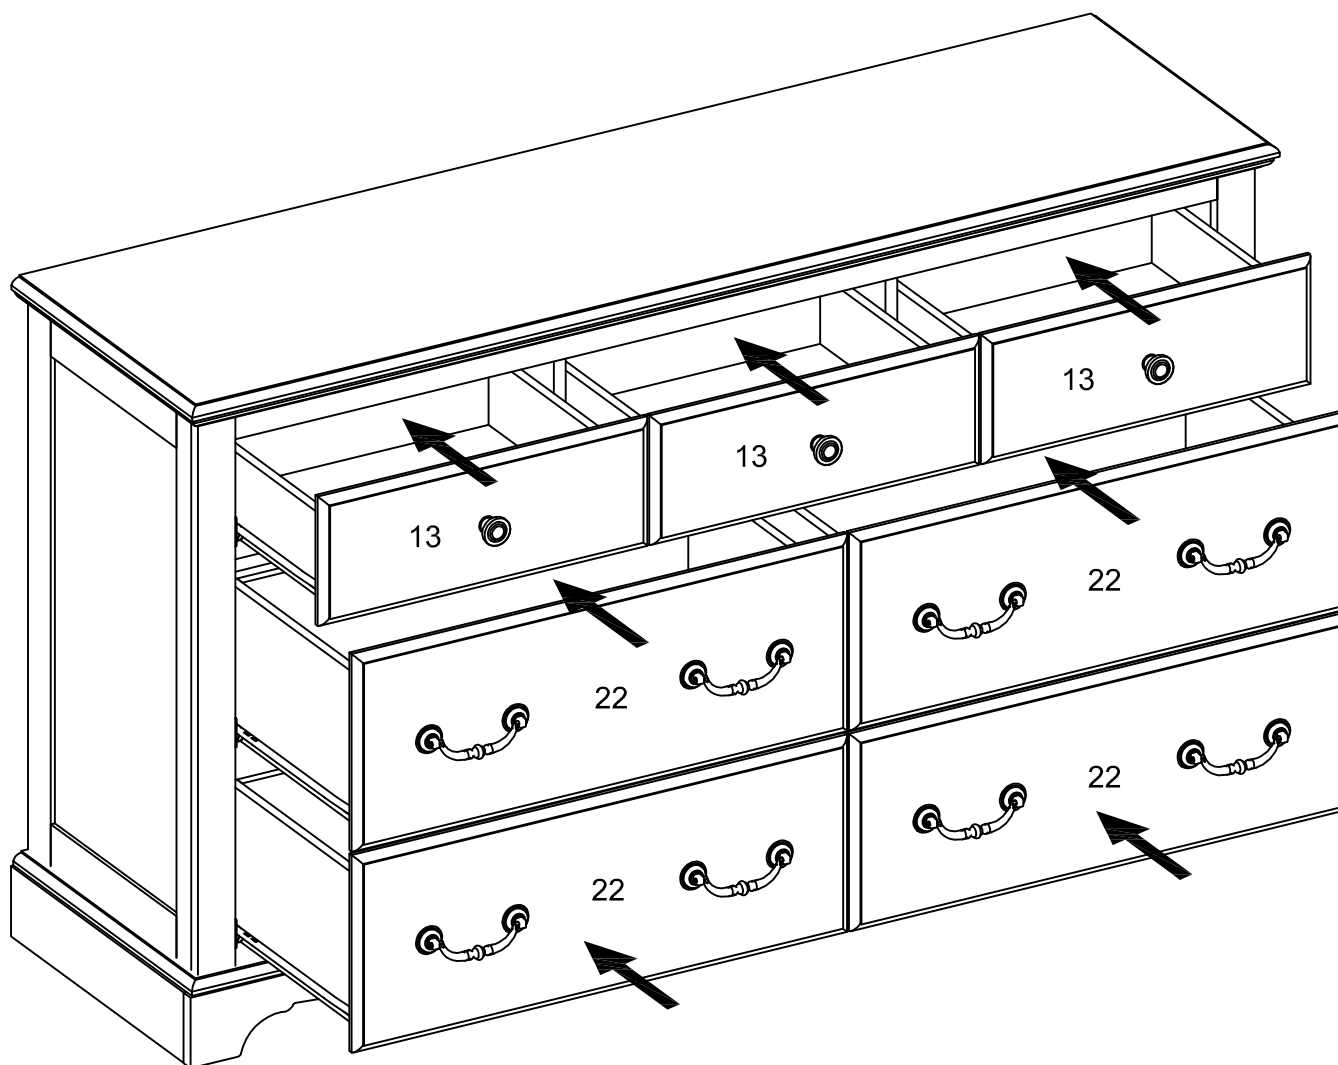



## Step 34

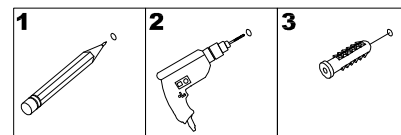

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

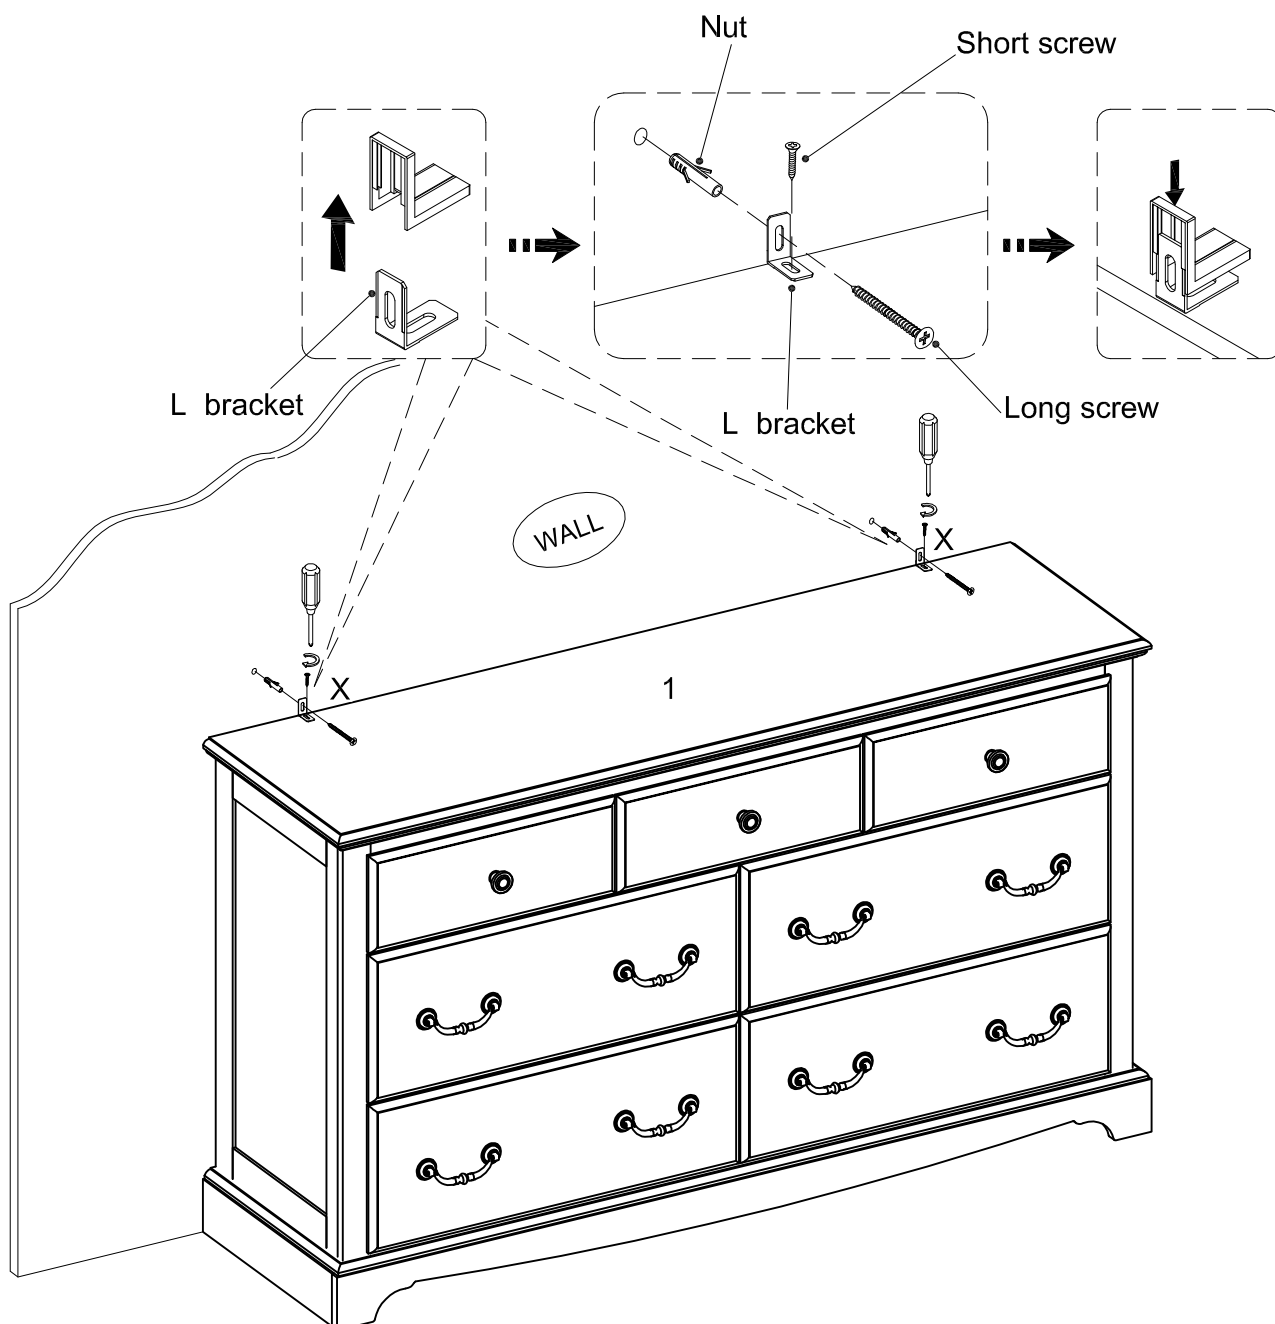

## Step 35

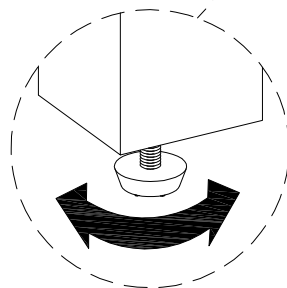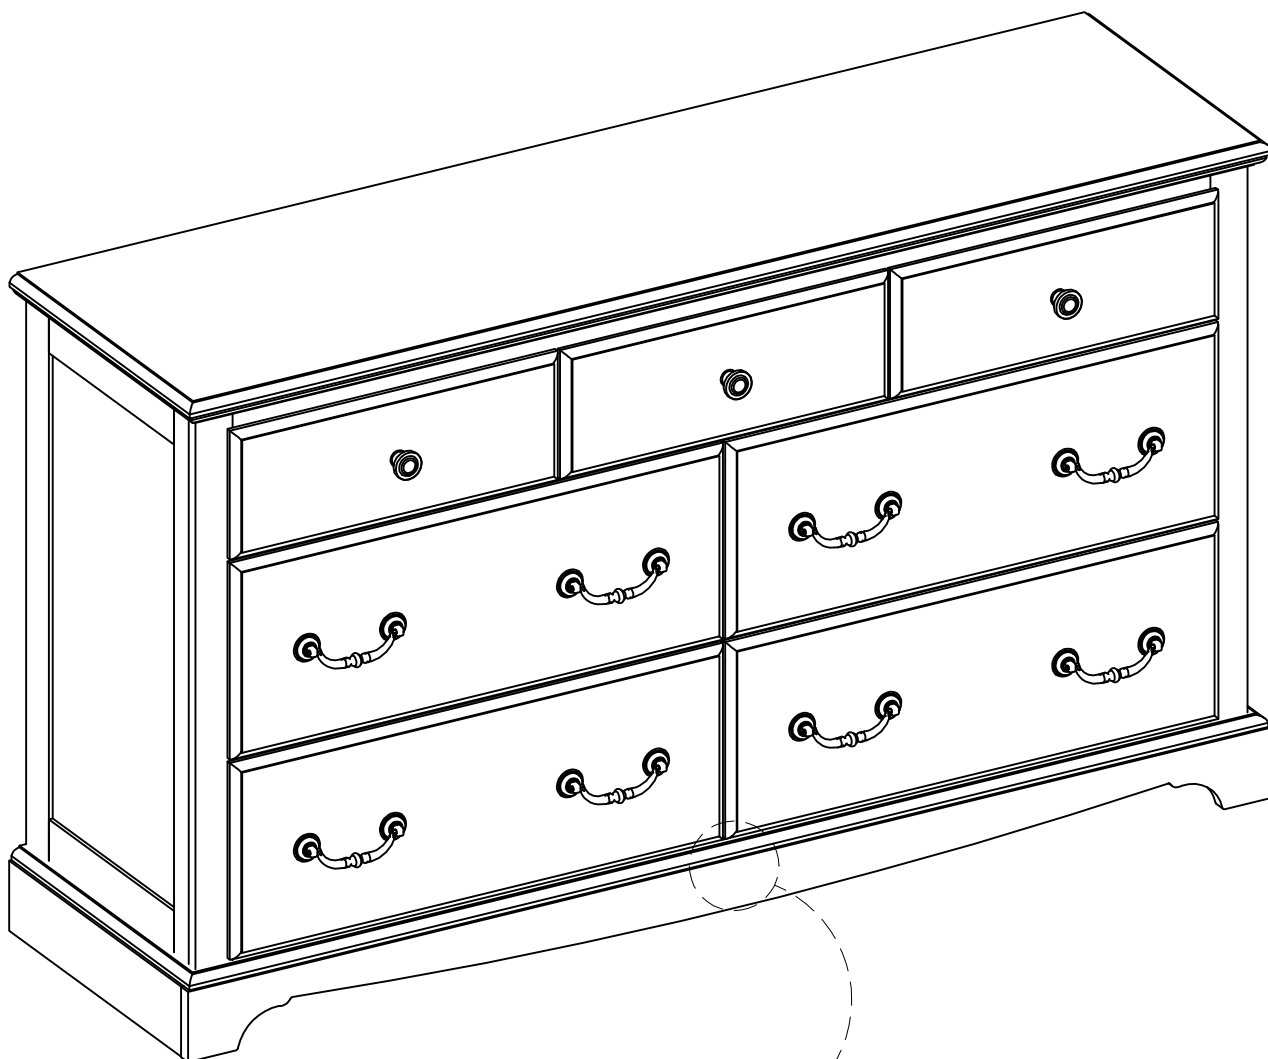

Final Assembly