



INSTALLATION INSTRUCTIONS FOR 13/16" DOUBLE CORNER ROD

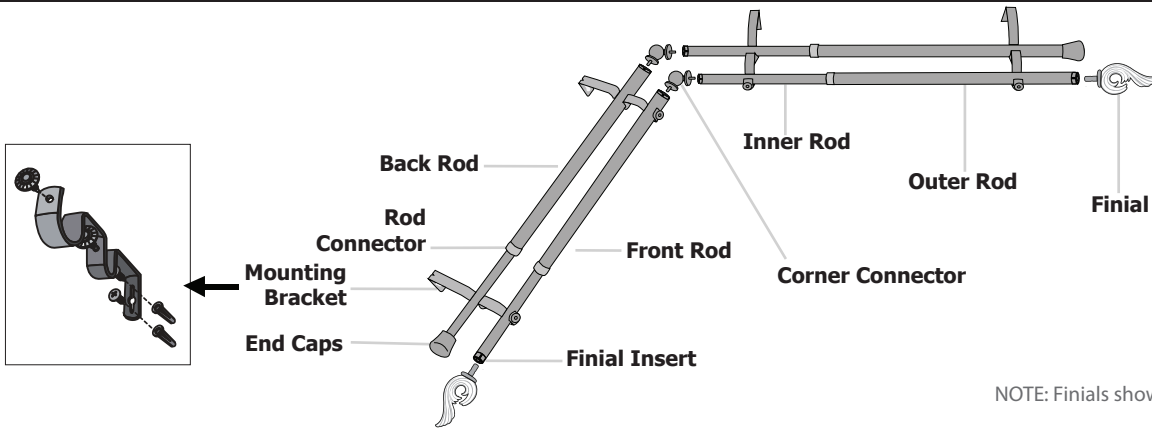


NOTE: Finials shown are for illustration purposes only.

- 1** Place brackets against wall at desired locations. Mark screw holes with pencil. Be sure marks are level across opening. Mount at least one bracket on each inner rod and outer rod to prevent rod movement when sliding curtain.

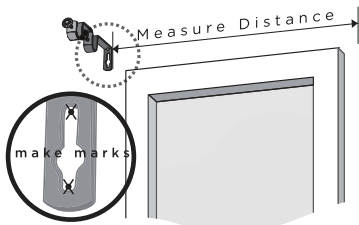

- 2** If screws are going directly into wood trim or wall studs, drill a 1/8" pilot hole at pencil marks. If screwing into drywall, follow drywall anchor instruction at the bottom of the page.

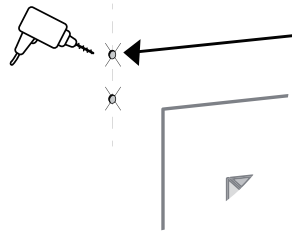


- 3 ASSEMBLE ROD**
Assemble the rod by inserting and sliding the smaller diameter rod into the larger diameter rod. Ensure that finials inserts are exposed on each open end after rod assembly.


2Rods: (28-48, 48-84, 66-120)

3Rods: (120-170)


- 4 ATTACHING DRAPERY**
Slide the drapery onto the pole.

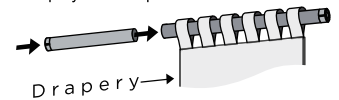


- 5 PULL MIDDLE END CAP OUT (Back Rods)**
Arrange the rod according to assemble rod (no. 3 instruction) side by side, front and back rod just like this diagram

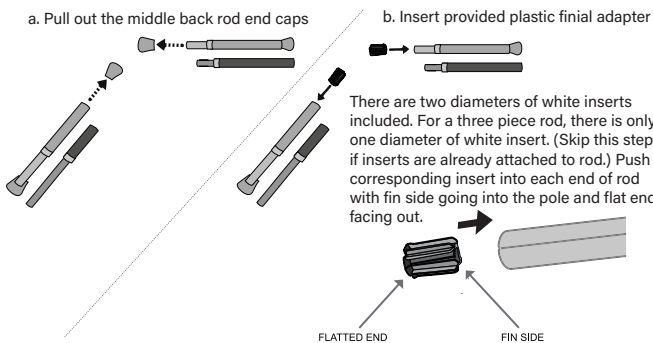


- 6 CORNER CONNECTOR**
Place corner connector in between the rods, insert the rod connector to one rod and loosen the connector tightening screw. Adjust connector to desired angle. Tighten screw on the connector to lock angle in place. Slide the other rod onto the open end of rod connector. Do the same for the other rod.

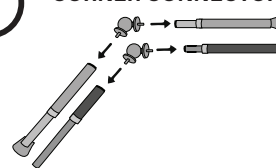


- 7 ATTACHING FINIALS**
- Attach finials by pushing and turning the end of the finial post into the end of the finial insert until completely snug. Rotational finial on rod for proper alignment if required.
 - For hollow type finials with no post, slide finials onto each end. Finials inserts are not necessary for this type.

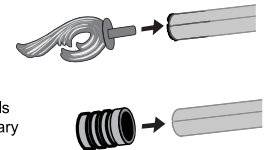

- 8** Extend rod to desired width. Lift rod with drapery and drop into brackets. Ensure to mount at least one bracket on each inner rod and outer rod to prevent rod movement when sliding curtain. Adjust draperies to desired position.

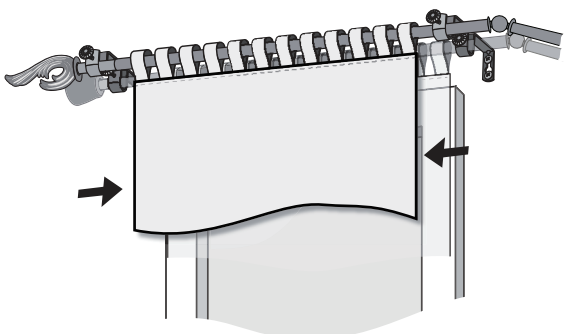

- 9** Lock rods into position by tightening leveling screw by hand until finger tight. This will prevent the rod from moving.

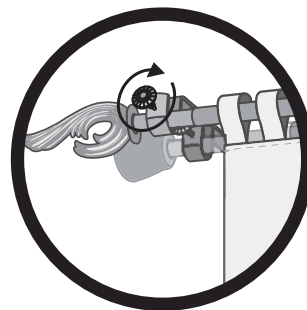

DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.