



acme®/MD



Systems and Hardware / Systèmes et ferrures / Sistemas y herrajes

63040


Series BF30 / 2 Panel

Serie BF30 / 2 Panele

Série BF30 / 2 Panneaux

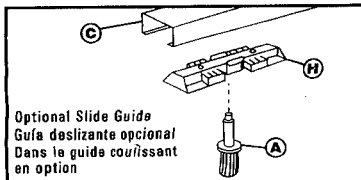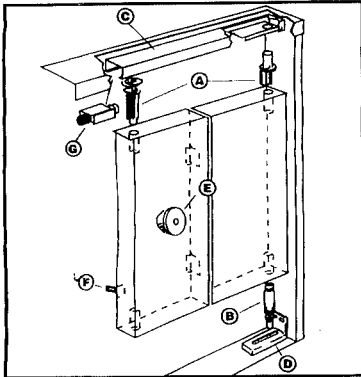

Optional Slide Guide
Guía deslizante opcional
Dans le guide couissant
en option

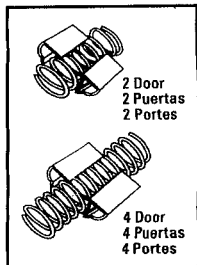

2 Door
2 Puertas
2 Portes

4 Door
4 Puertas
4 Portes

Extra parts and screws may be packaged in bag.
Piezas adicionales y tornillos podrán estar
empacados en la bolsa.

Il se peut que des pièces et des vis supplémentaires
soient emballées dans le sac.

INSTALLATION INSTRUCTIONS

Series BF30

Step 1 – Insert top pivots (A) into predrilled holes in top of door panels. Insert bottom pivot (B) into predrilled hole at bottom edge of pivot door panel at the jamb side of the opening.

Step 2 – Fasten track (C) at top of opening on header using long screws provided. Fasten jamb bracket (D) in line with track on jamb side of opening using 1 1/2" screws making sure that base of bracket rests firmly on the floor.

If optional slide guide is used, snap slide guide (H) into middle of track.

Step 3 – Install door panels by inserting the top pivot at the pivoting side of door into track bracket. With top pivot inserted, lift upward on panels and position bottom pivot into jamb bracket on floor. Let bottom pivot sit onto jamb bracket firmly with knurled teeth engaged.

Depress guide pivot and position under track and release so guide pivot is securely positioned in track (or optional slide guide).

Step 4 – Adjust door height by slightly lifting panels and turning threaded stem of bottom pivot. Seat pivot into jamb bracket at desired height.

Step 5 – Adjust door horizontally by altering position of bottom pivot in jamb bracket. Lift door slightly and move bottom pivot in either direction as necessary to bring door plumb with opening. Check to ensure guide pivot does not disengage during door operation, and door edge does not rub jamb. If necessary, adjust track bracket by loosening bracket screw and slide bracket within the track. Tighten at desired location.

Step 6 – Mount knobs (E) in predrilled holes or at center of guide door; approximately 36 inches from floor.

Step 7 – (For 4 Panel Sets Only) - Mount aligners (F) on back side of guide door approximately 12" from floor.

Step 8 – Insert Snagger (G) into track at guide door side of opening.

®/MD denotes registered trade marks of / désignent des marques de commerce déposées de / El símbolo® indica marcas registradas de Renin Corp.

Part No. 90-7155-2 rev 1

Renin Corp.
110 Walker Dr.
Brampton, ON
L6T 4H6

Made in China
Fabriqué au chine
Fabricado en Chine

www.acmesystemsandhardware.com