


# Assembly Instructions

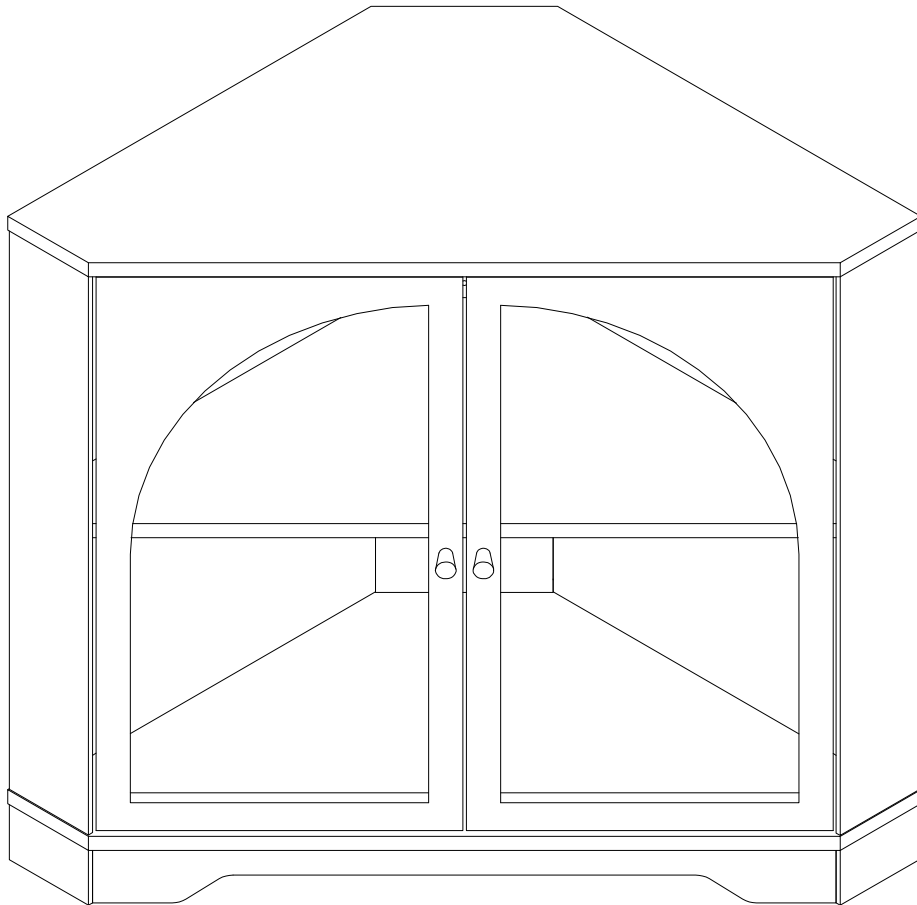


# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

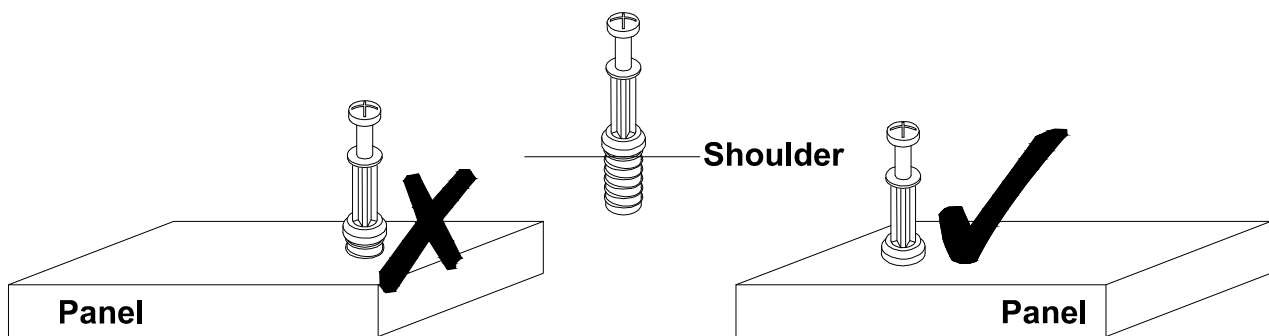

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

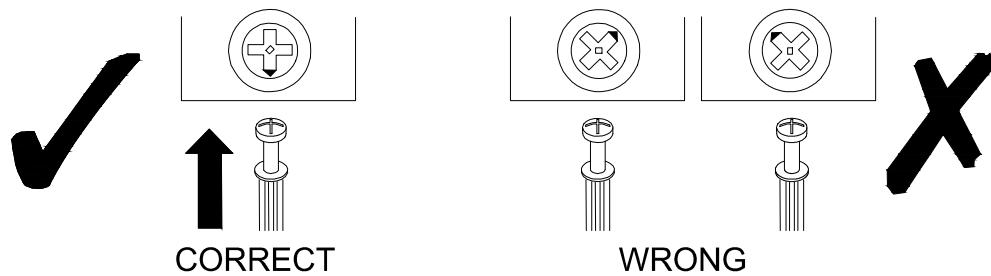

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT













Quickfit head should be in the centre of the cam lock when the two panels are joined.

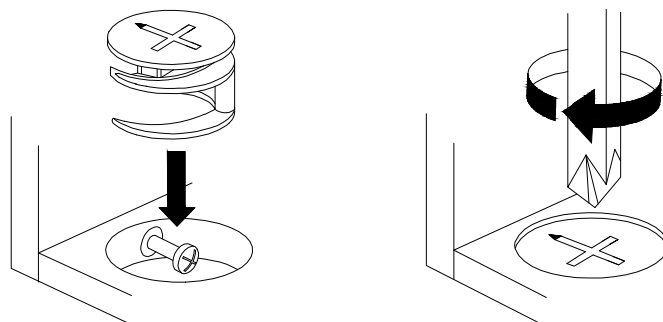Cam lock should be inserted before quickfit.




Turn cam lock clockwise to tighten.


# Part List

<b>No. A</b> Quantity:32 Pcs Cam Lock Dowel 8*28mm 	<b>No. B</b> Quantity:32 Pcs Cam φ15 	<b>No. C</b> Quantity:32 Pcs Sticker Ø20 	<b>No. D</b> Quantity:13 Pcs Dowel 8*30mm 
<b>No. E</b> Quantity:20 Pcs Screw 3.5*14mm 	<b>No. F</b> Quantity:2 Pcs Screw M4*20mm 	<b>No. G</b> Quantity:2 Pcs Handle 	<b>No. H</b> Quantity:5 Pcs Shelf Support M5*15mm 
<b>No. I</b> Quantity:2 Sets Magnetic Door Catcher 	<b>No. J</b> Quantity:2 Sets Door hinge 	<b>No. K</b> Quantity:6 Pcs Foot Pad Ø15 	<b>No. L</b> Quantity:1 Sets Anti-falling Parts 

# Product structure

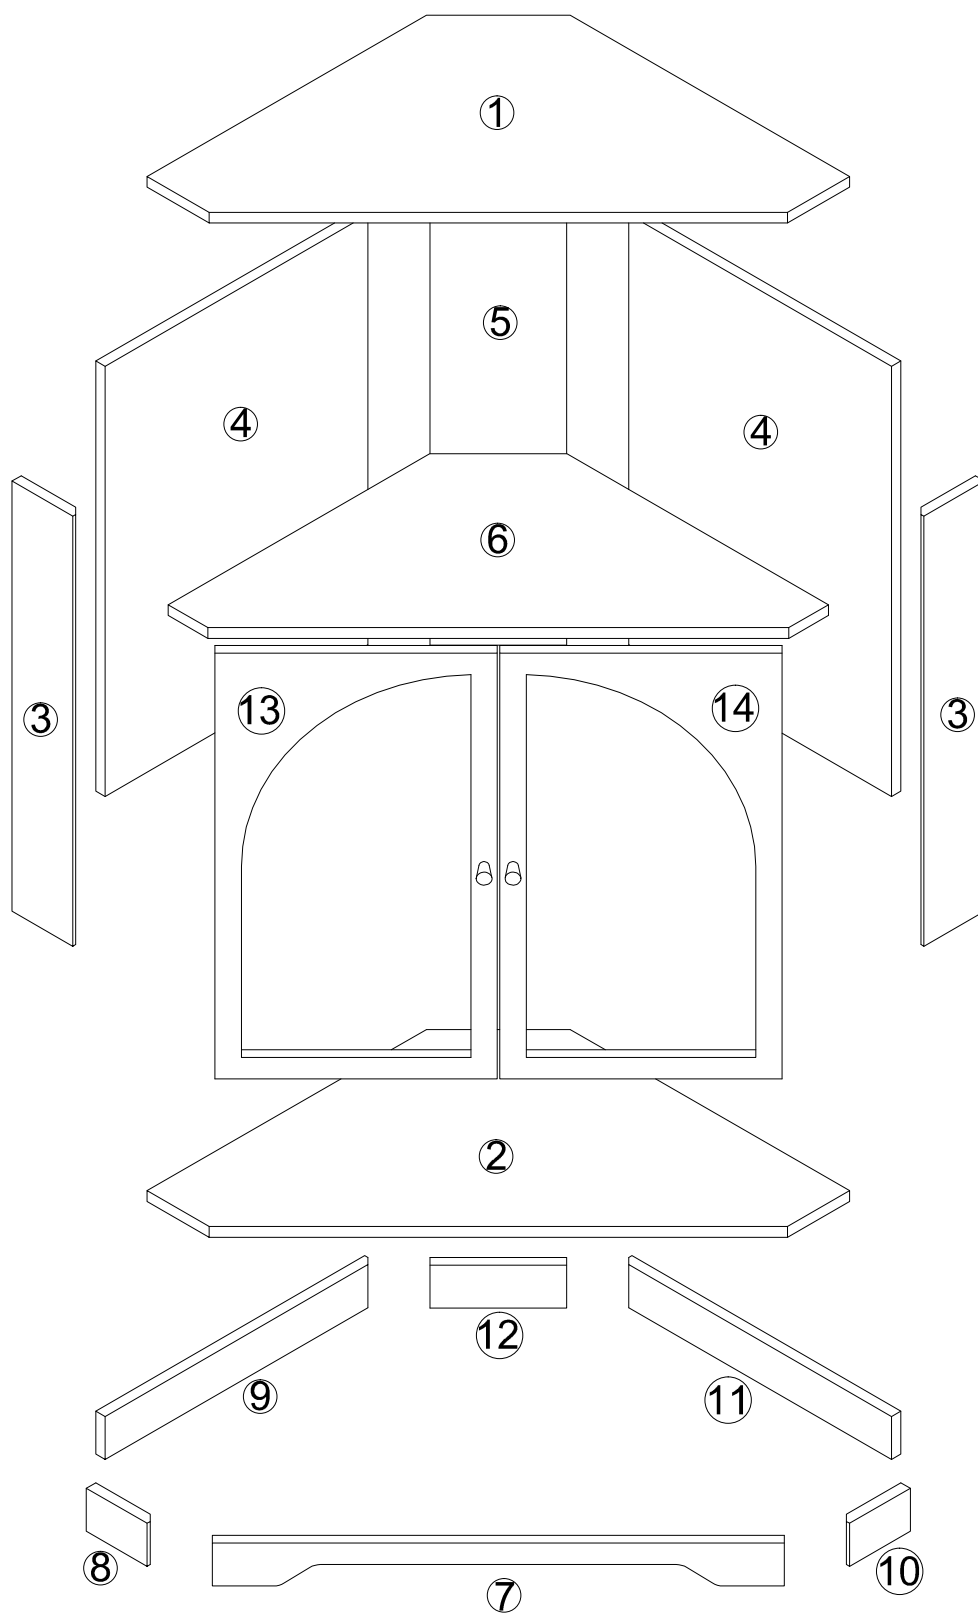

## STEP 1

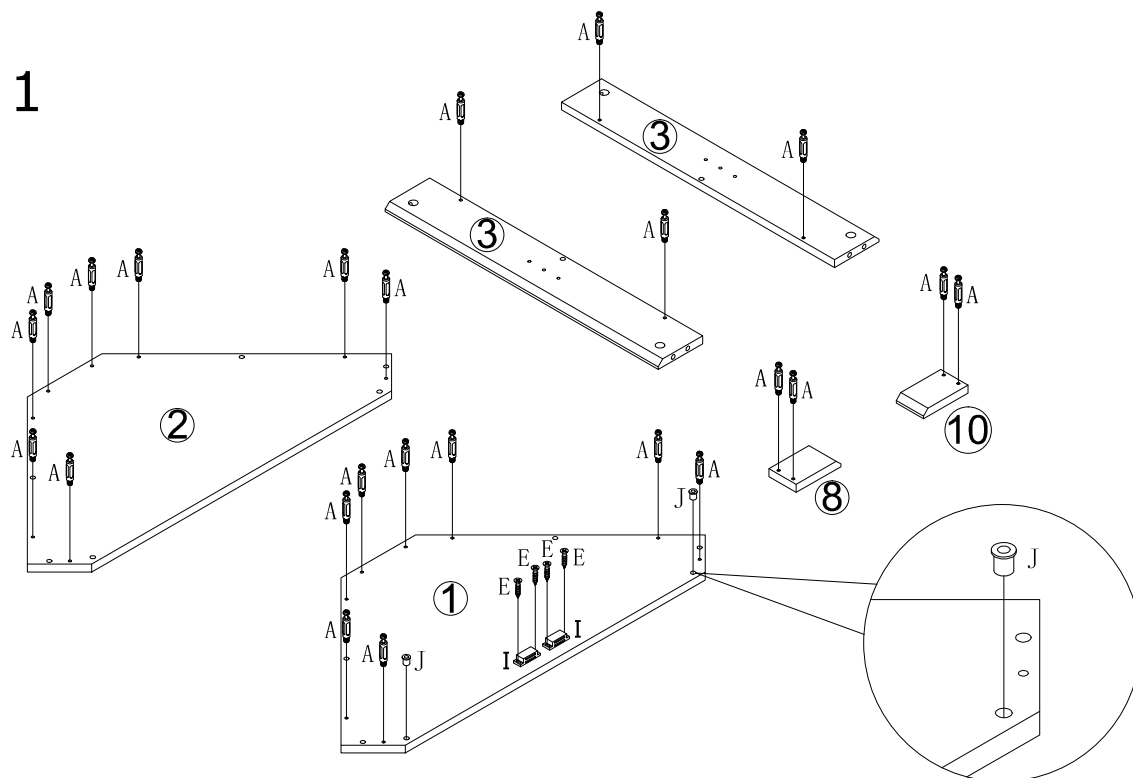


No. A  
Quantity: 24 Pcs  
8\*28 mm




No. E  
Quantity: 4 Pcs  
3.5\*14mm




No. I  
Quantity: 2 Pcs



No. J  
Quantity: 1 Sets




## STEP 2

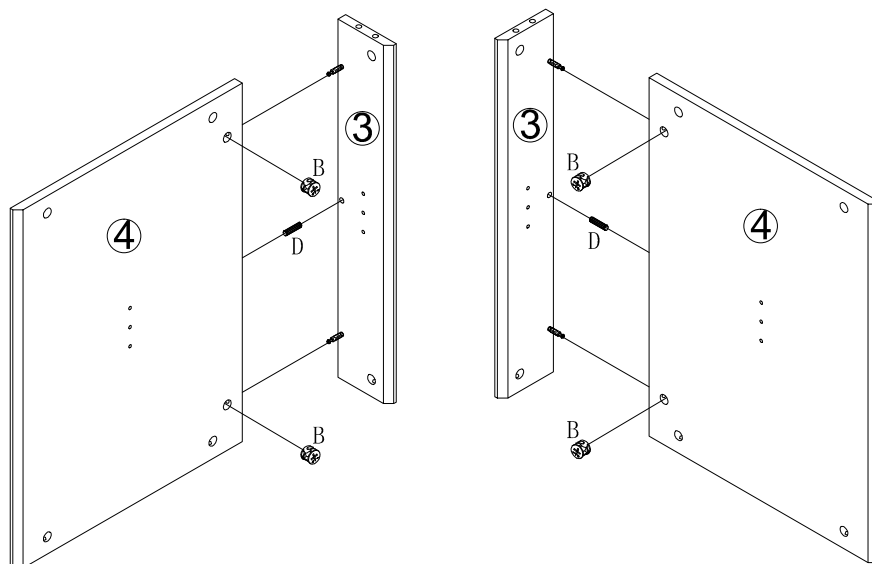


No. B  
Quantity: 4 Pcs  
Ø15



No. D  
Quantity: 2 Pcs  
8\*30mm




## STEP 3

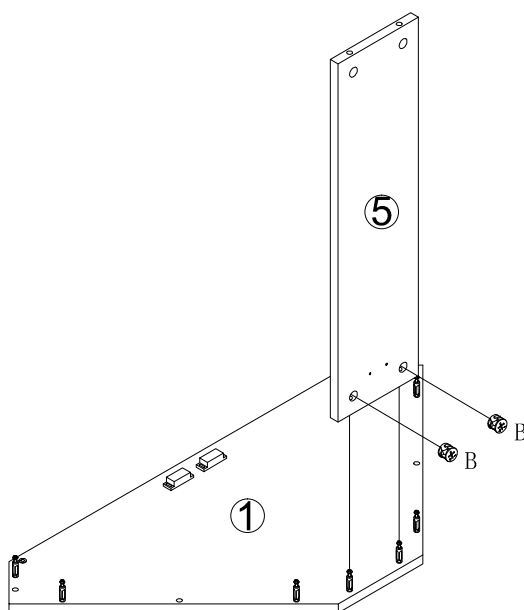

No. B  
Quantity: 2 Pcs  
Ø15




## STEP 4

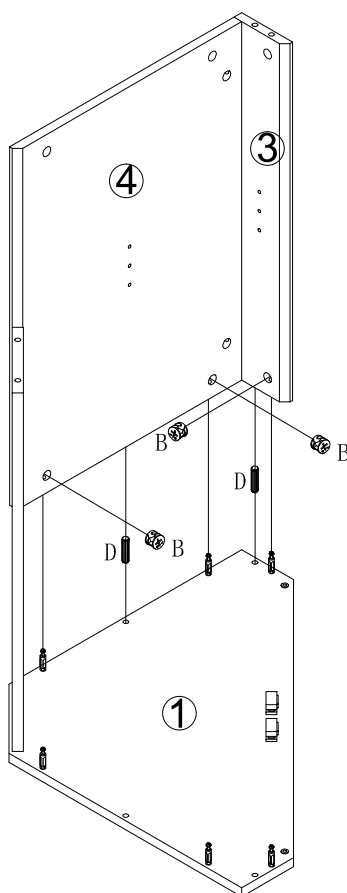


No. B  
Quantity: 3 Pcs  
Ø15



No. D  
Quantity: 2 Pcs  
8\*30mm




## STEP 5

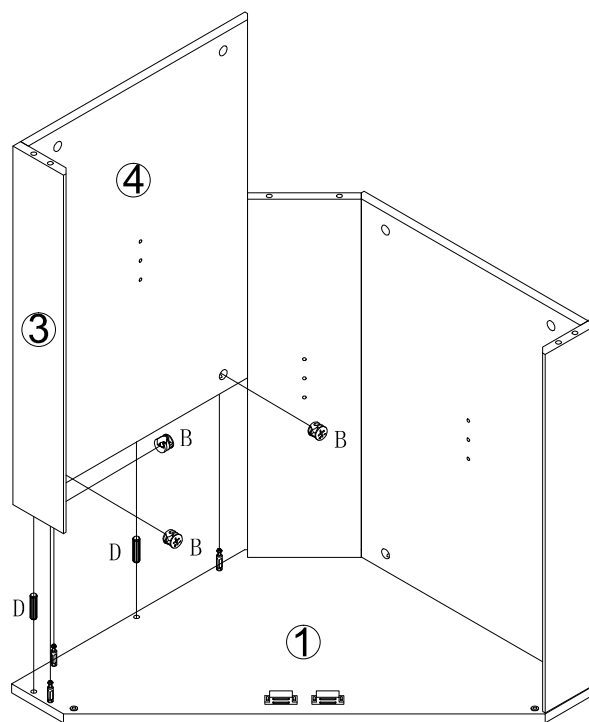

No. B  
Quantity: 3 Pcs  
Ø15




No. D  
Quantity: 2 Pcs  
8\*30mm



## STEP 6

**Note that the part with the marking "J" needs to be installed in pairs, and pay attention to the direction.**

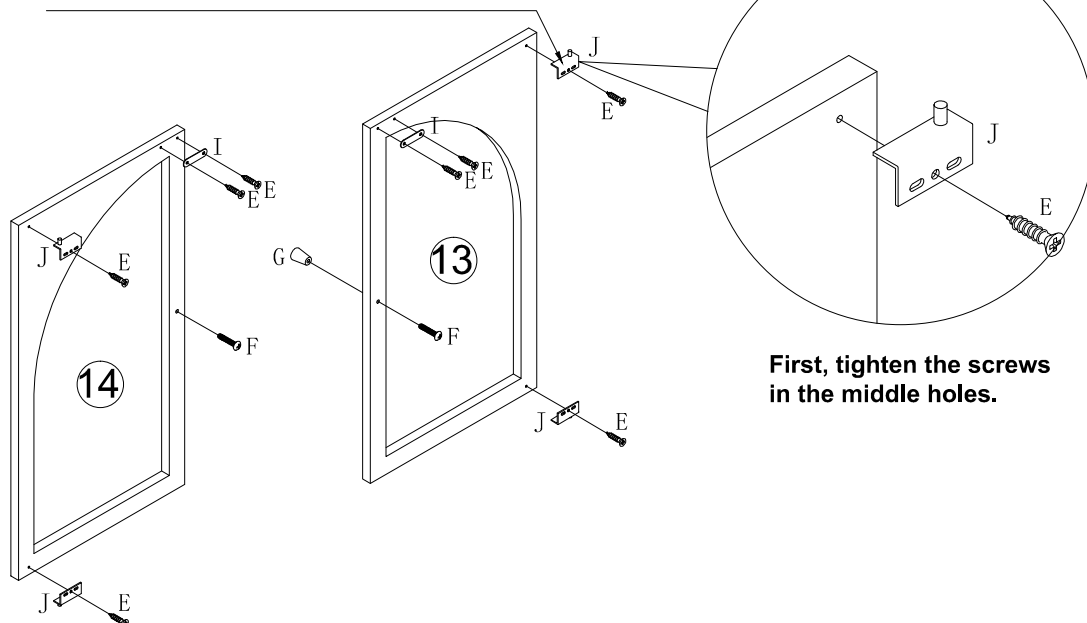

**First, tighten the screws in the middle holes.**

No. E  
Quantity: 8 Pcs  
3.5\*14mm



No. F  
Quantity: 2 Pcs  
M4\*20mm




No. G  
Quantity: 2 Pcs





No. I  
Quantity: 2 Pcs



No. J  
Quantity: 2 Sets



## STEP 7

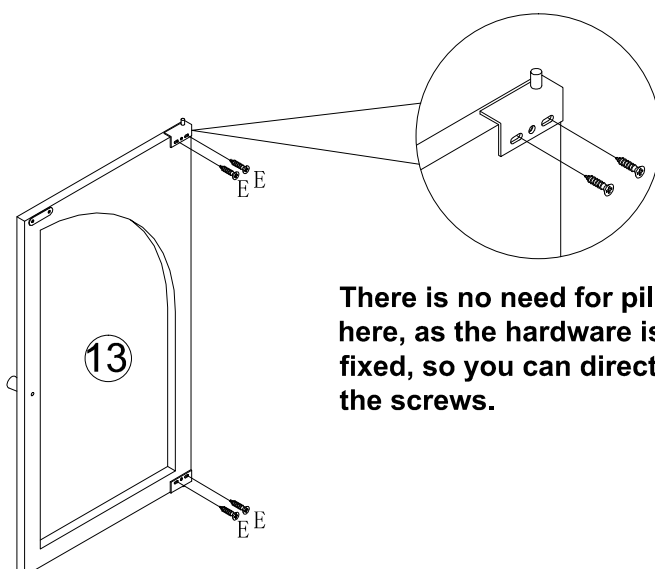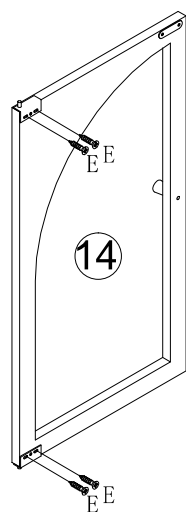


**There is no need for pilot holes here, as the hardware is already fixed, so you can directly tighten the screws.**

No. E  
Quantity: 8 Pcs  
3.5\*14mm



## STEP 8

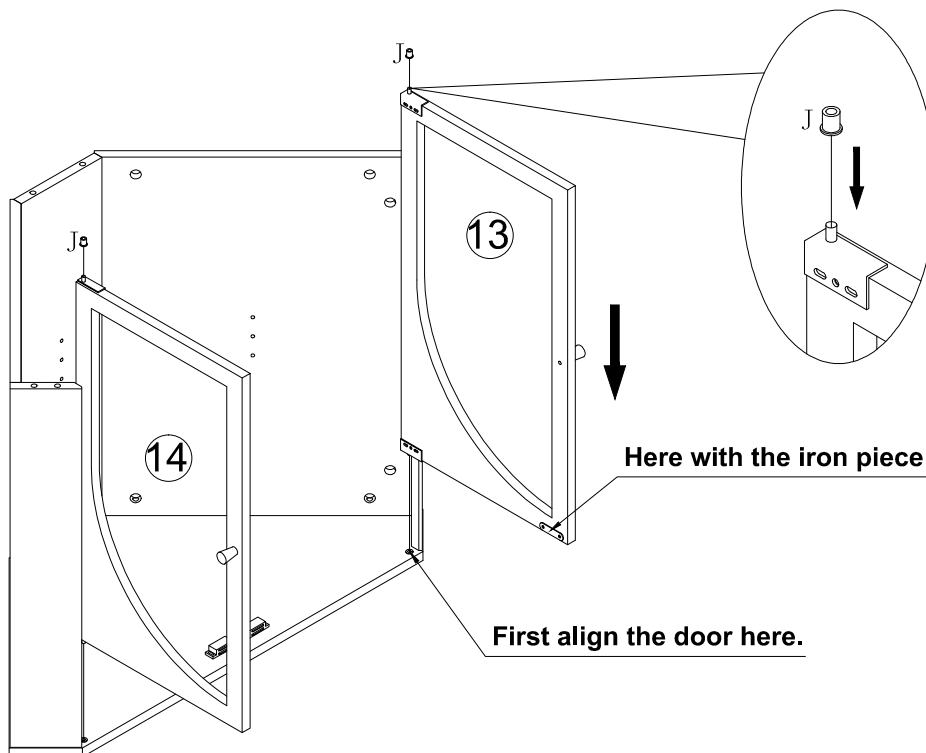


**Here with the iron piece facing down.**

**First align the door here.**

No. J  
Quantity: 1 Sets




## STEP 9

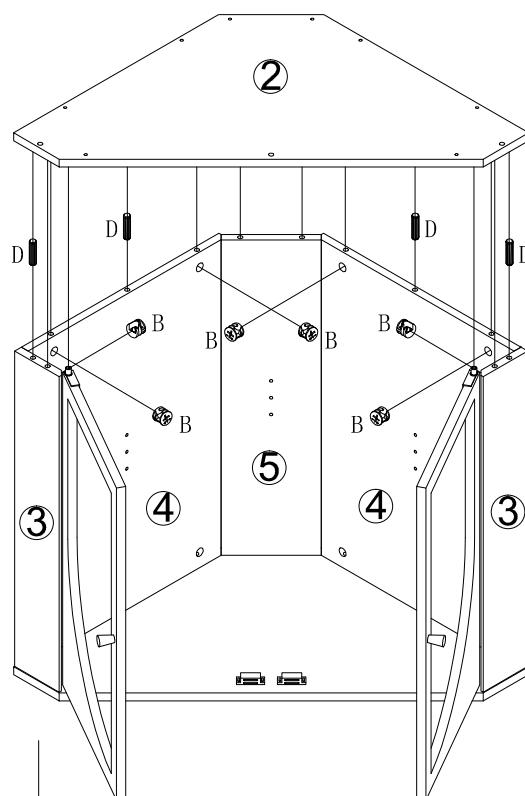


No. B  
Quantity: 8 Pcs  
Ø15



No. D  
Quantity: 4 Pcs  
8\*30mm




## STEP 10

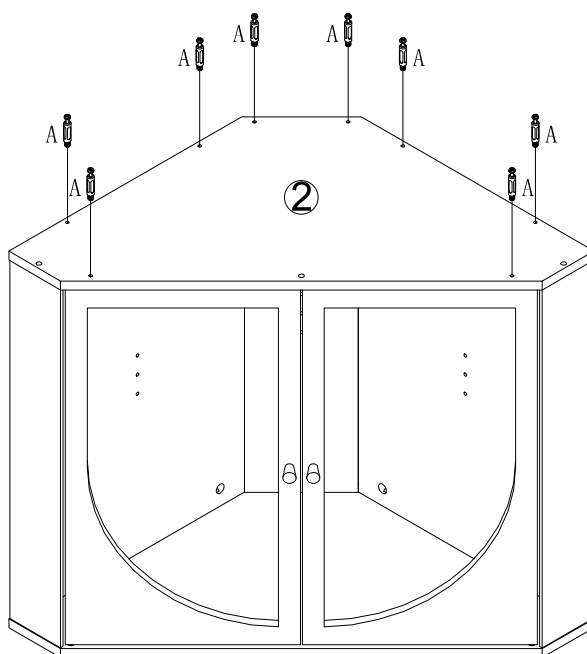

No. A  
Quantity: 8 Pcs  
8\*28 mm




## STEP 11

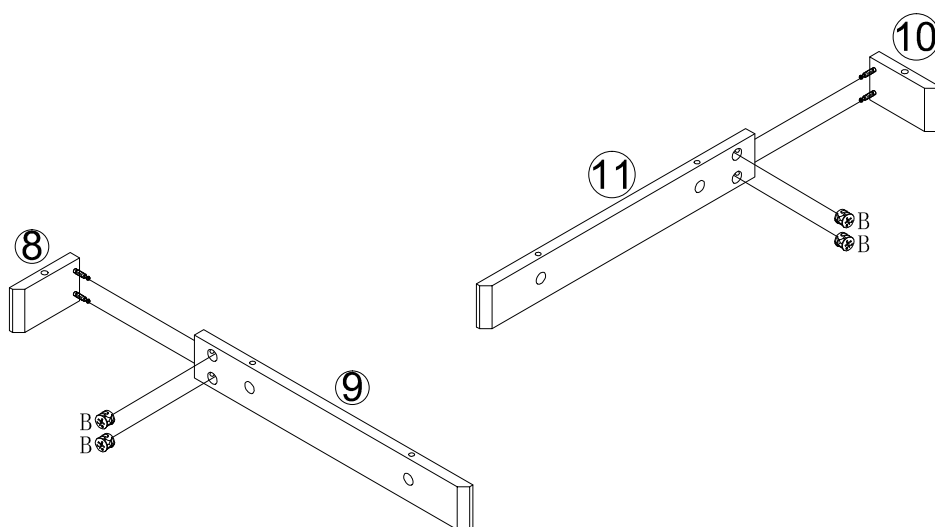

No. B  
Quantity: 4 Pcs  
Ø15




## STEP 12

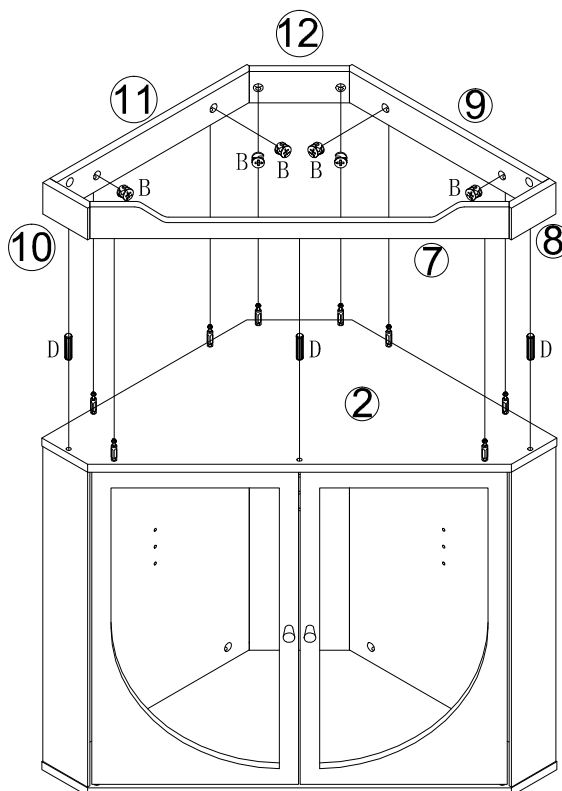


No. B  
Quantity: 8 Pcs  
Ø15



No. D  
Quantity: 3 Pcs  
8\*30mm




## STEP 13

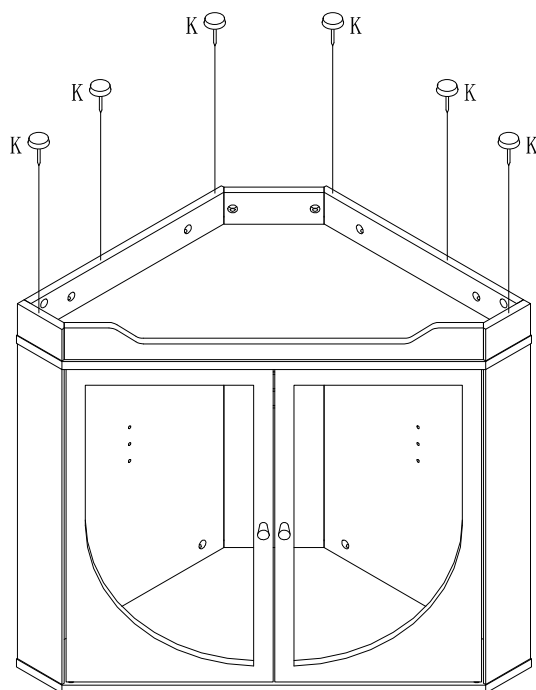

No. K  
Quantity: 6 Pcs  
Ø15




## STEP 14

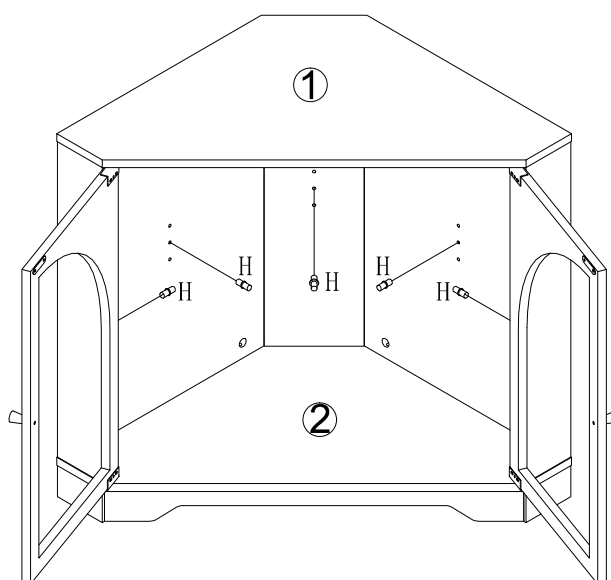


No. H  
Quantity: 5 Pcs  
M5\*15mm




## STEP 15

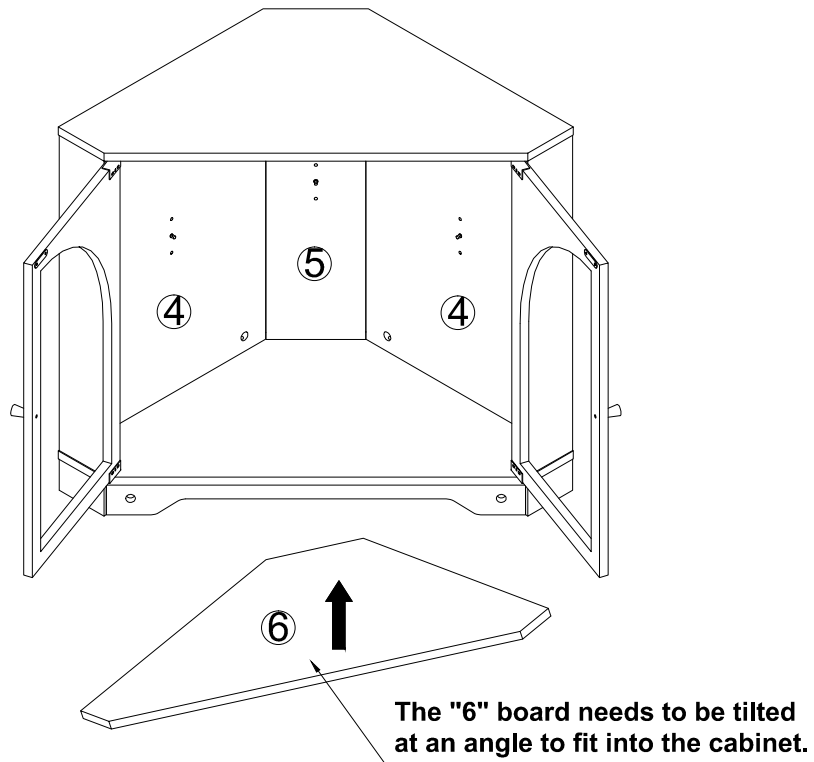


## STEP 16

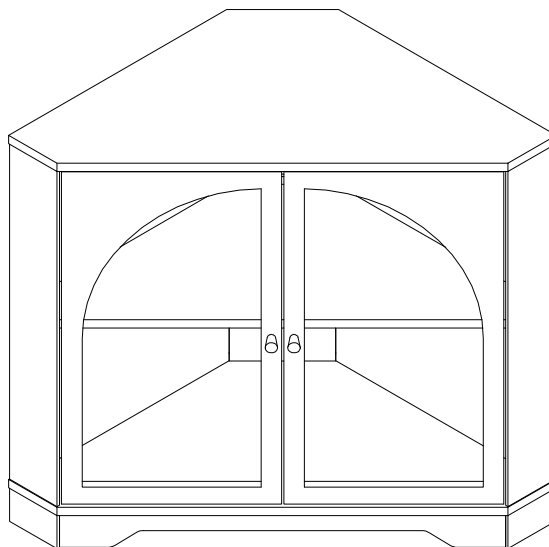

# STEP 17

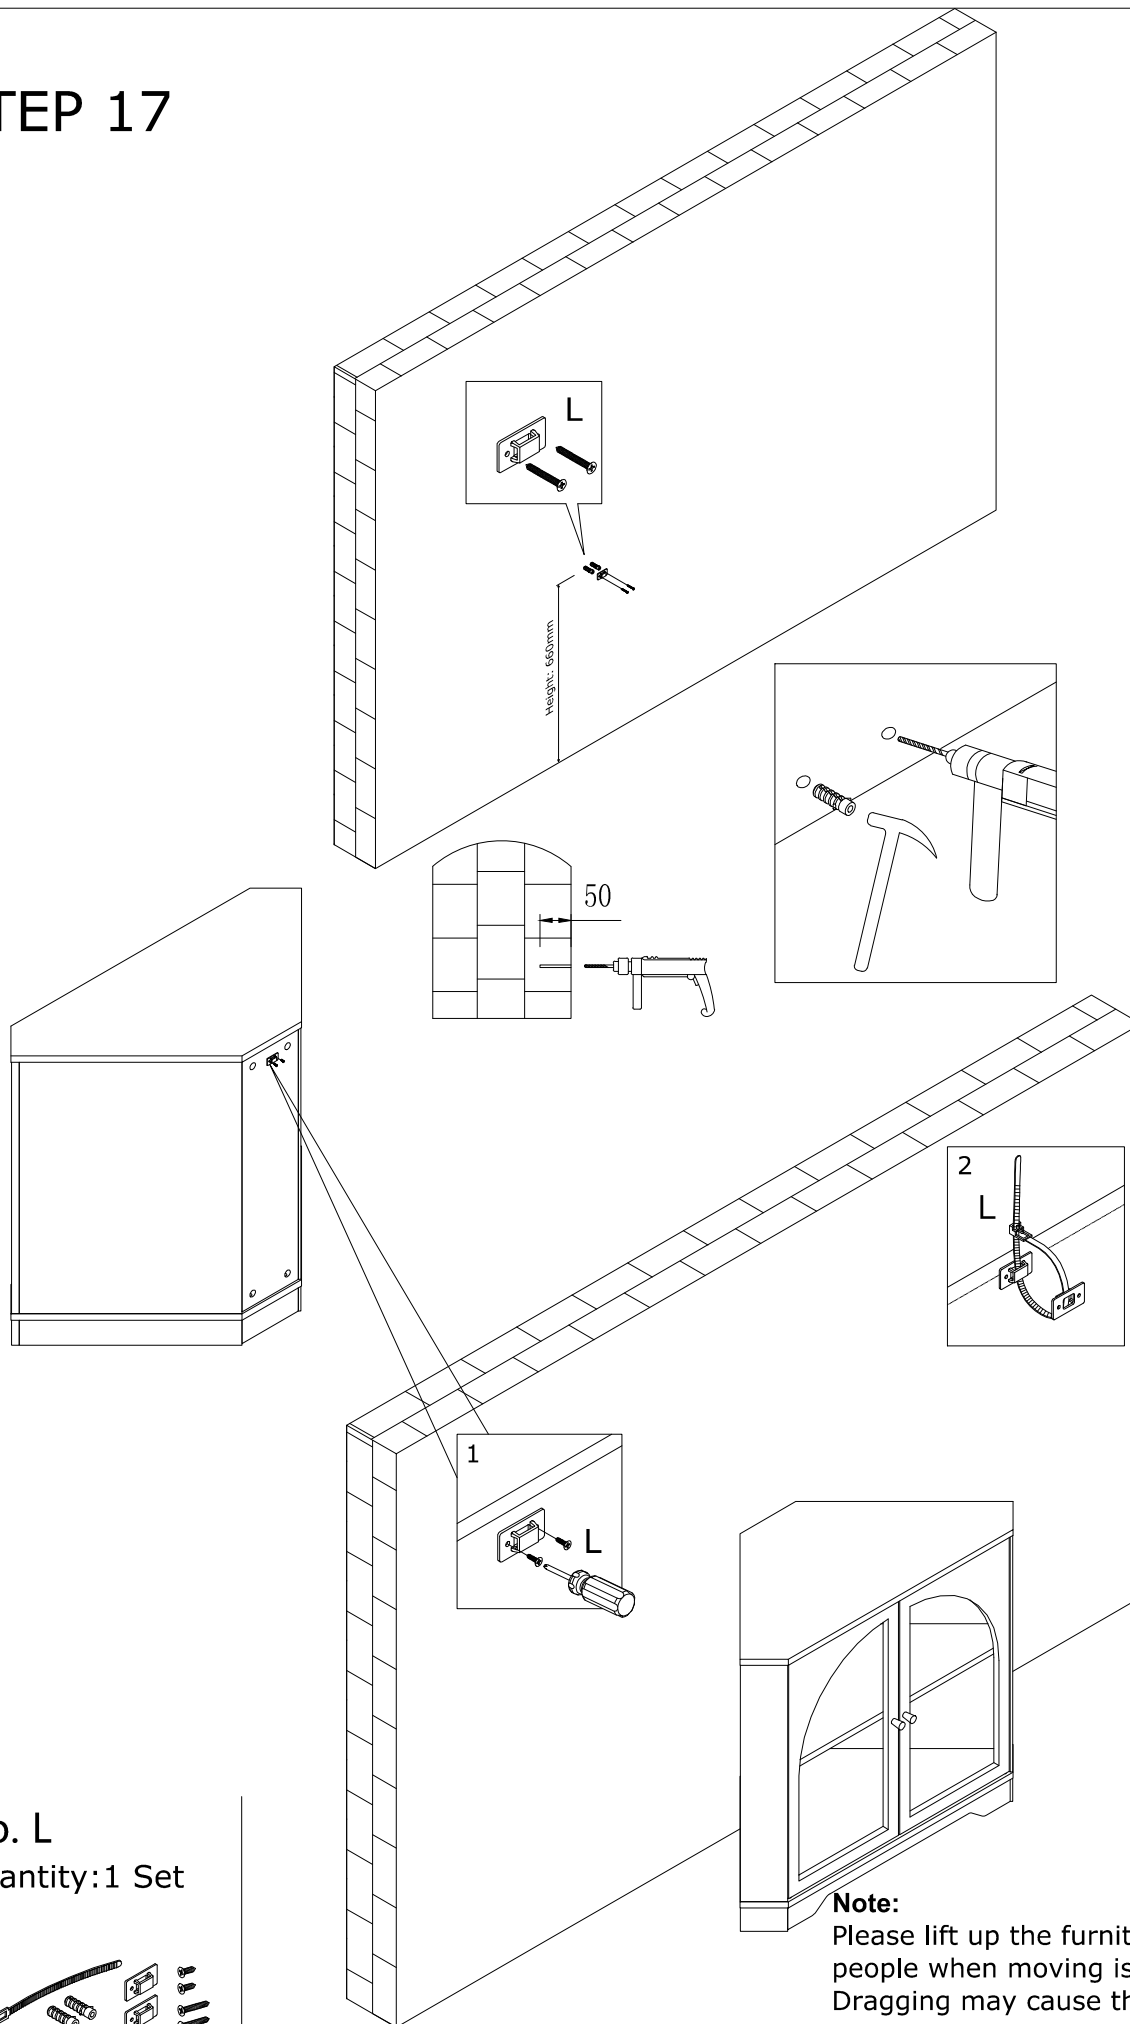

No. L  
Quantity: 1 Set



**Note:**  
Please lift up the furniture by two people when moving is needed.  
Dragging may cause the legs failure.