



BGY010






Office Chair Assembly Instructions

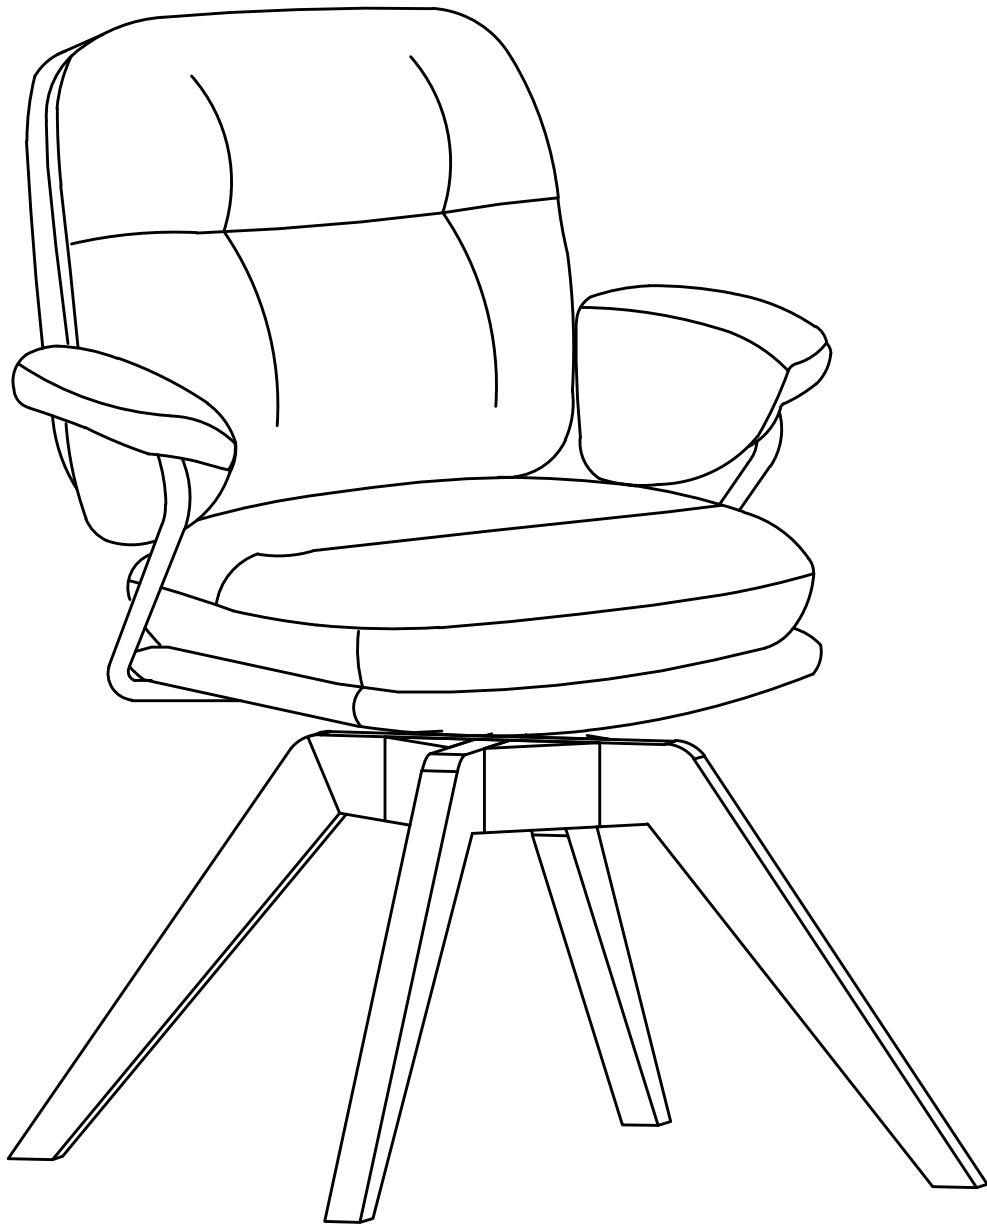


Assembly Overview

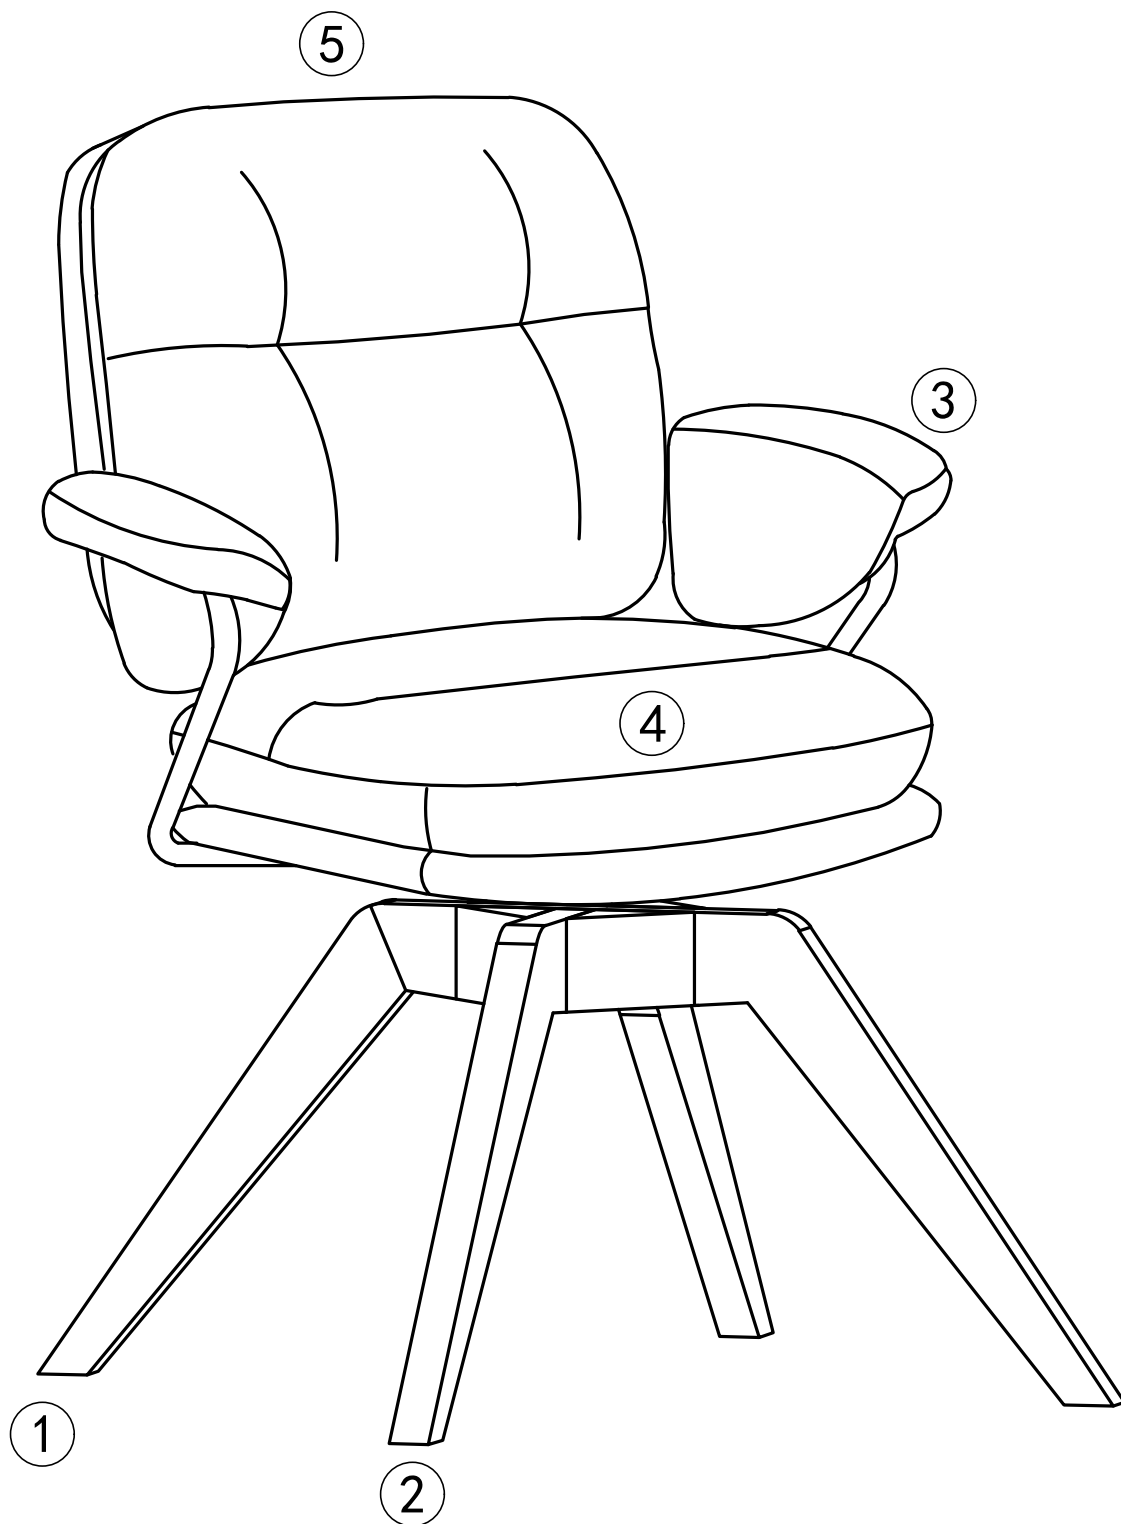

Parts List

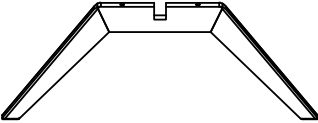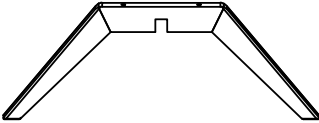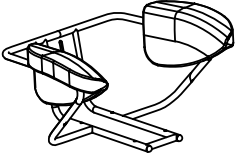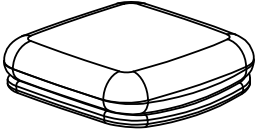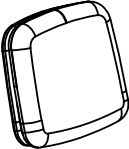
① Lower leg frame  1PC	② Upper leg frame  1PC	③ Metal frame + armrests  1PC
④ Seat cushion  1PC	⑤ Back cushion  1PC	

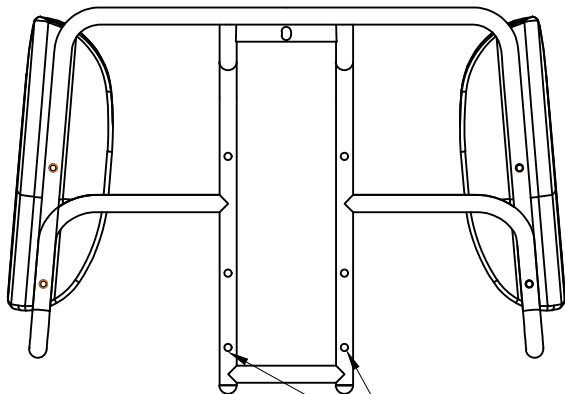

Note: Do not install hardware in these two holes when assembling part 3.

Hardware and Tools


A Button-head hex socket bolt



M6*40MM

4+1 PCS

B Hex socket bolt



M6*15MM

8+1 PCS


C Flat washer



M6*16MM

8+1 PCS

D Full-ball swivel plate



162*162*25MM

1 PC


E Nonwoven pad



Ø25*3MM

4+1 PCS


F Star knob



M8*25MM

1 PC


G Cross plate



116*116*3MM

1 PC


H Hex key

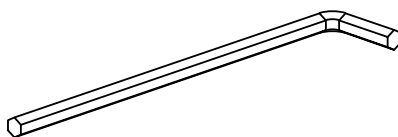

M5*100MM

1 PC

I Hex key



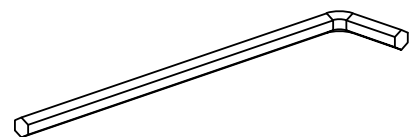


M4*100MM

1 PC

Caution

Use screws of the correct size to prevent damage to these components.

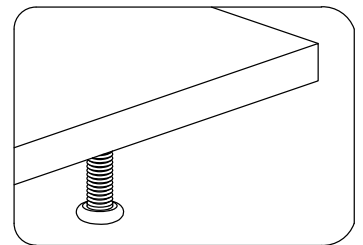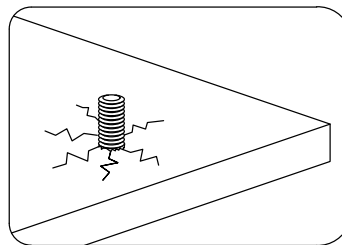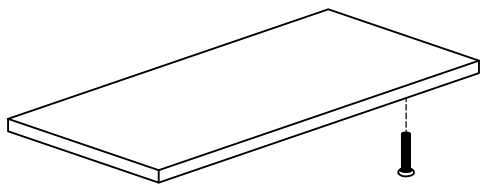

Example


Incorrect: The screw can split the wood panel.

Correct: The screw is the correct size.

Step 1


Attach pads E to the four feet on parts 1 and 2, as shown.

Hardware: E x4

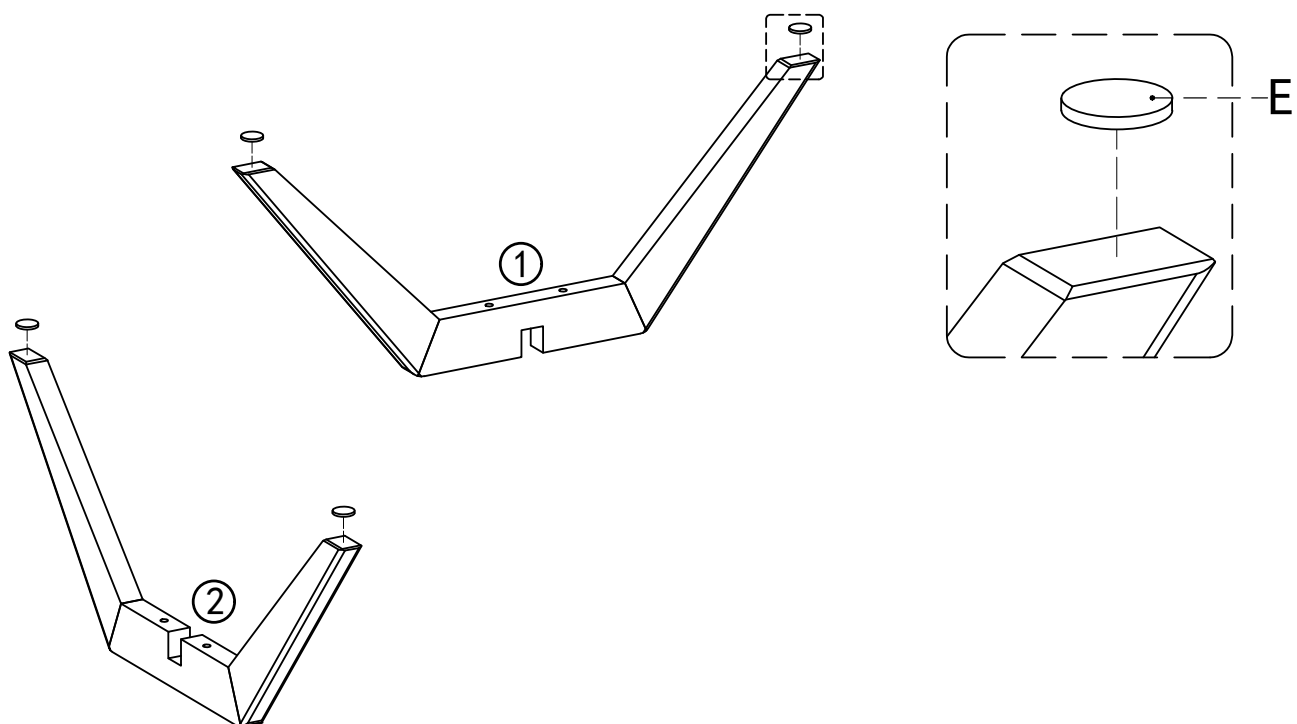

Step 2

Align the matching slots on parts 1 and 2 from Step 1. Push downward to interlock them, as shown.

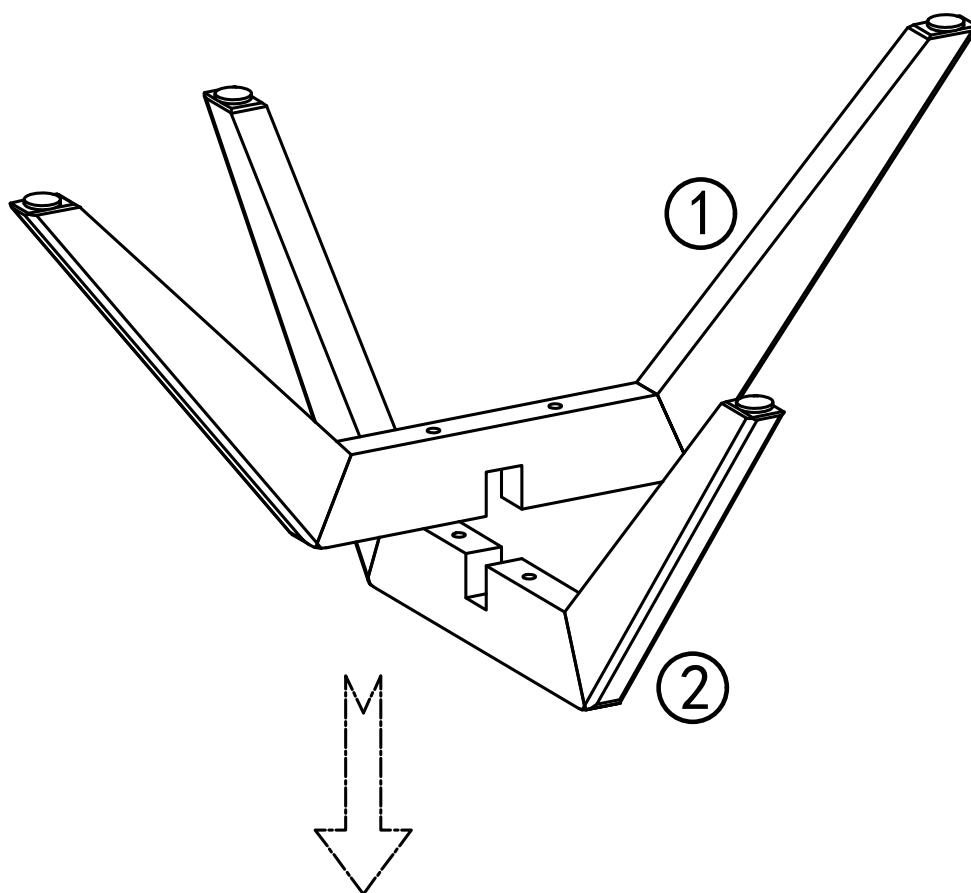


Step 3

Attach cross plate G to the assembly from Step 2 using bolts B and hex key I.

Hardware: B x4 | G x1

Tool: I x1

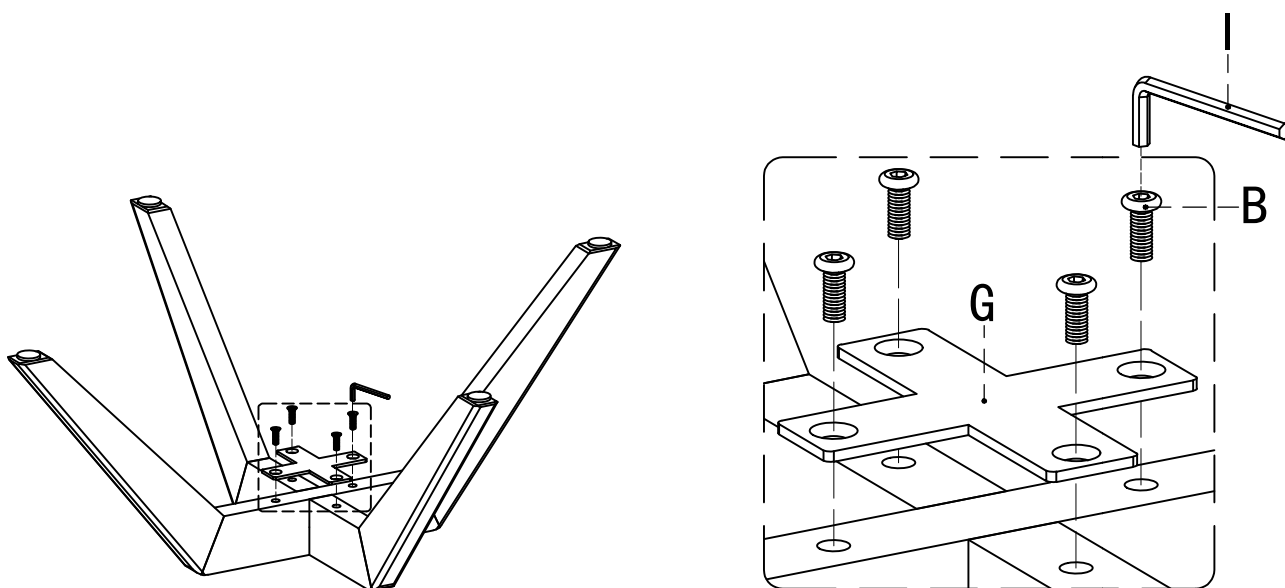


Step 4

Attach swivel plate D to the assembly from Step 3 using bolts B, washers C and hex key I.

Hardware: B x4 | C x4 | D x1

Tool: I x1

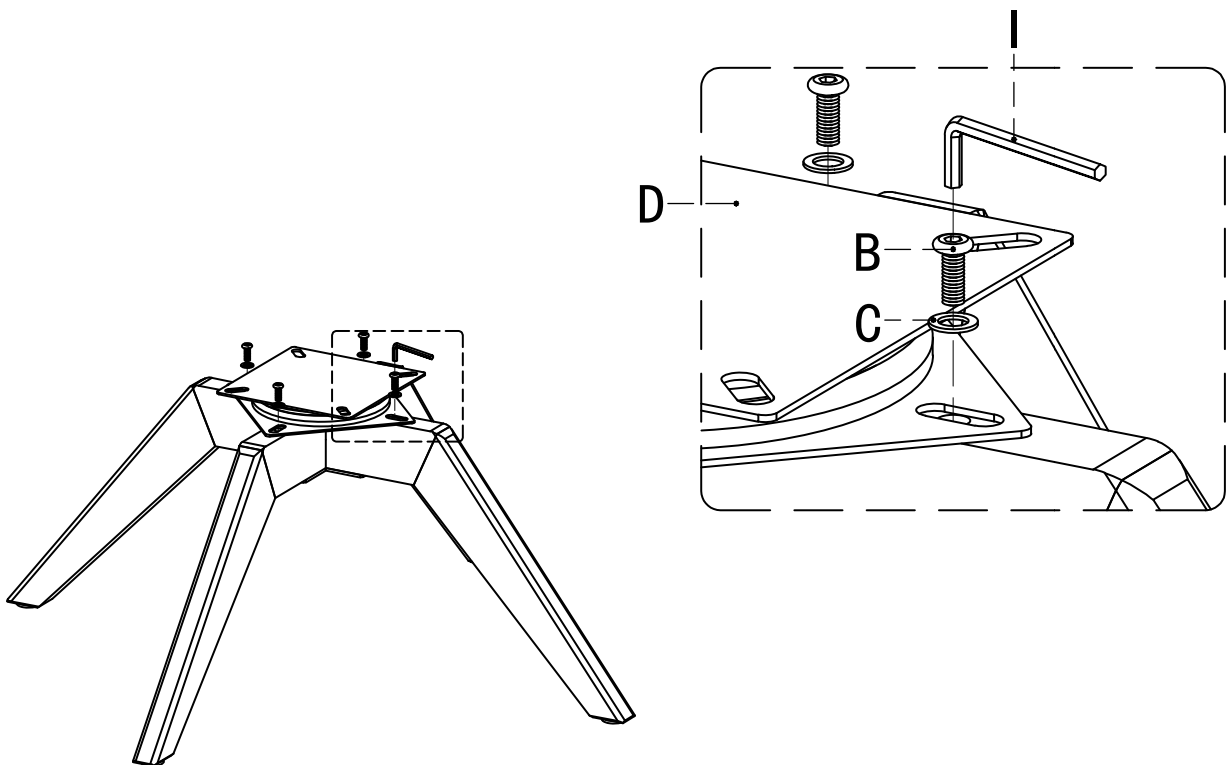


Step 5

Attach parts 3 and 4 to the assembly from Step 4 using bolts A, washers C and hex key H. Pass each bolt A through washer C, then through swivel plate D and the middle hole in the metal tube of part 3. Tighten it into the corresponding hole in the underside of part 4.

Hardware: A x2 | C x2

Tool: H x1

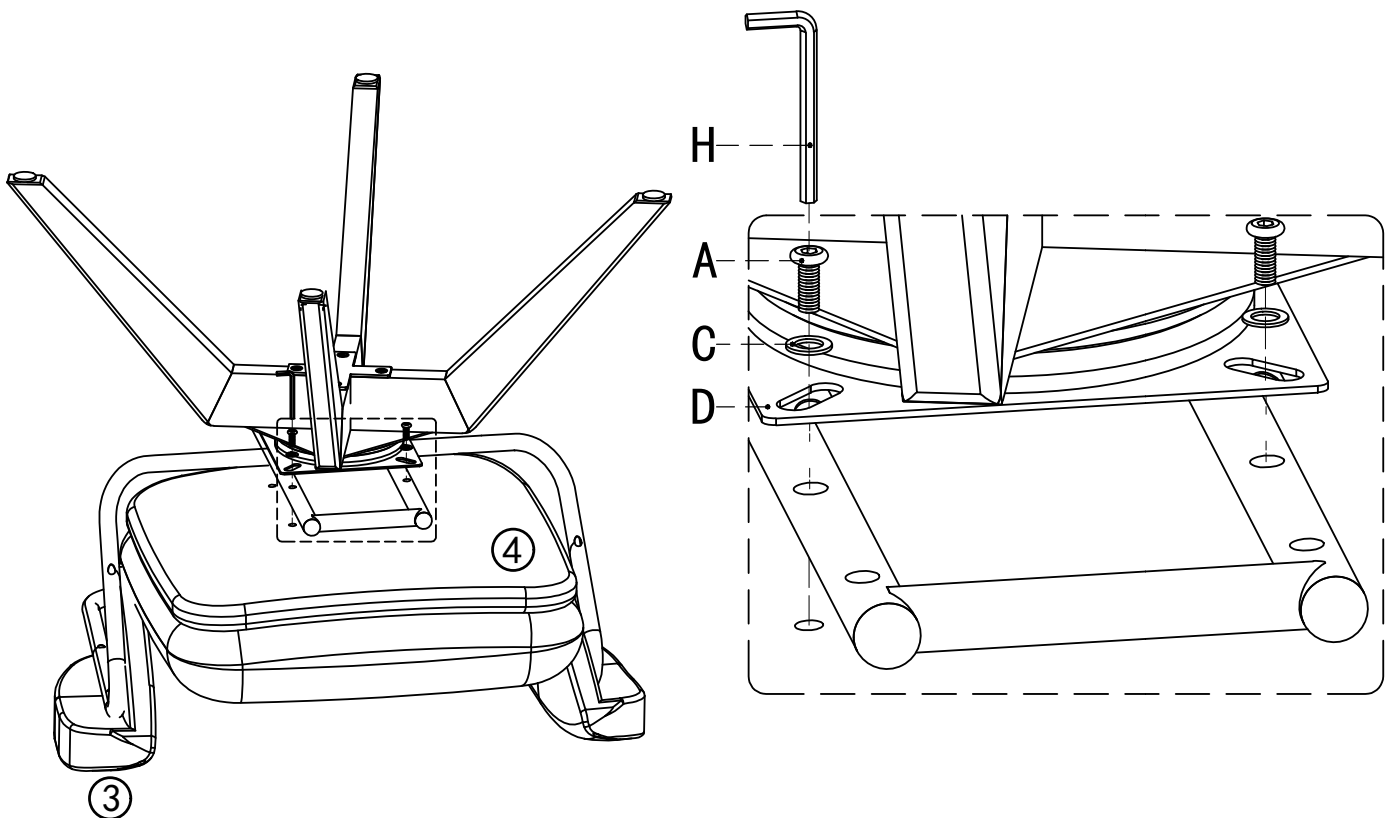


Step 6

Install bolts A and washers C in the rear holes on the underside of the assembly from Step 5, using hex key H.

Hardware: A x2 | C x2


Tool: H x1

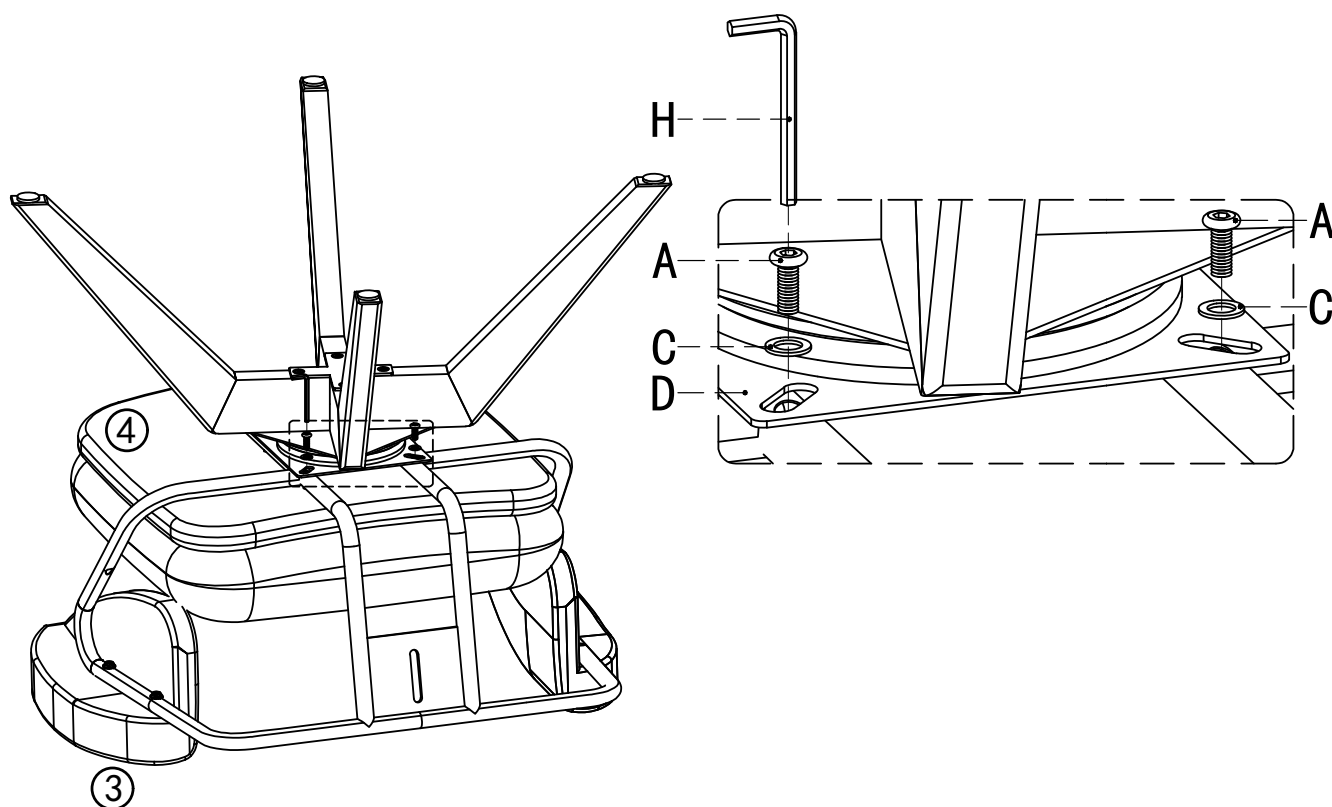

Step 7

Attach back cushion 5 to the assembly from Step 6 using star knob F.

Hardware: F x1

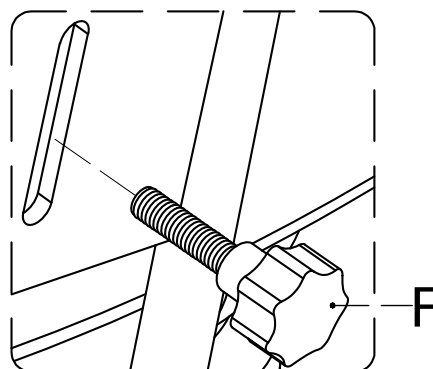

Step 8

Assembly is complete.

