
ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

BAR CABINET
MEUBLE BAR

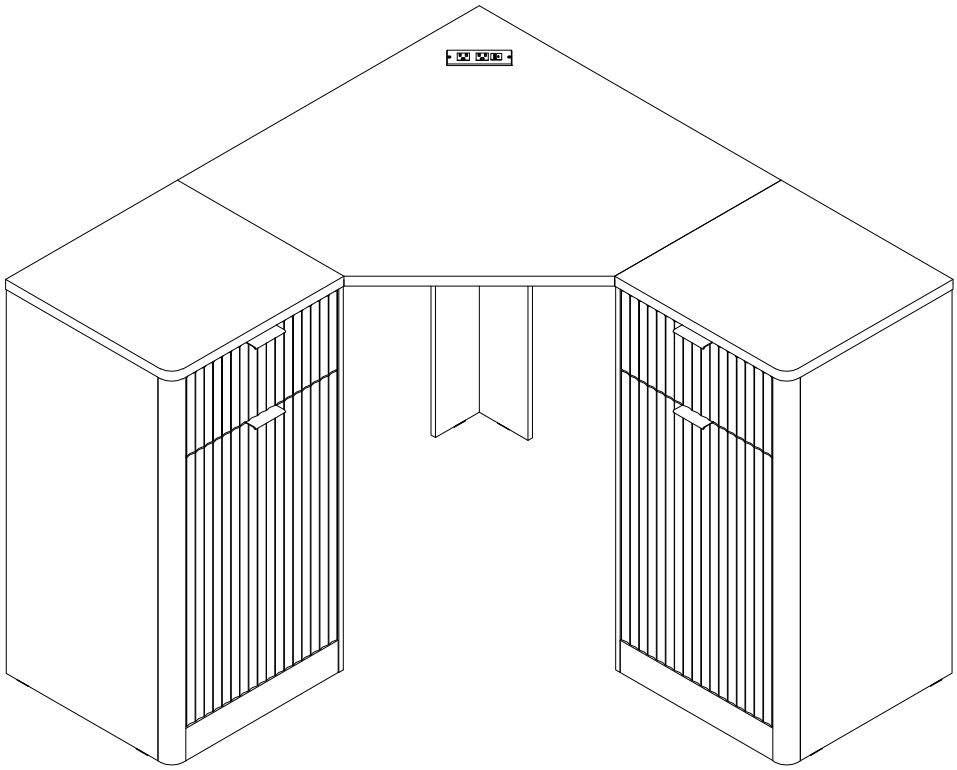

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.


AVERTISSEMENT



Ce produit N'EST PAS une unité derangement pour vêtements (CSU).
NE l'utilisez PAS pour le rangement de vêtements.
Une utilisation impropre peut entraîner un basculement des meubles.




























N707P542031
N707P542032

Detail View/ Vue détaillée

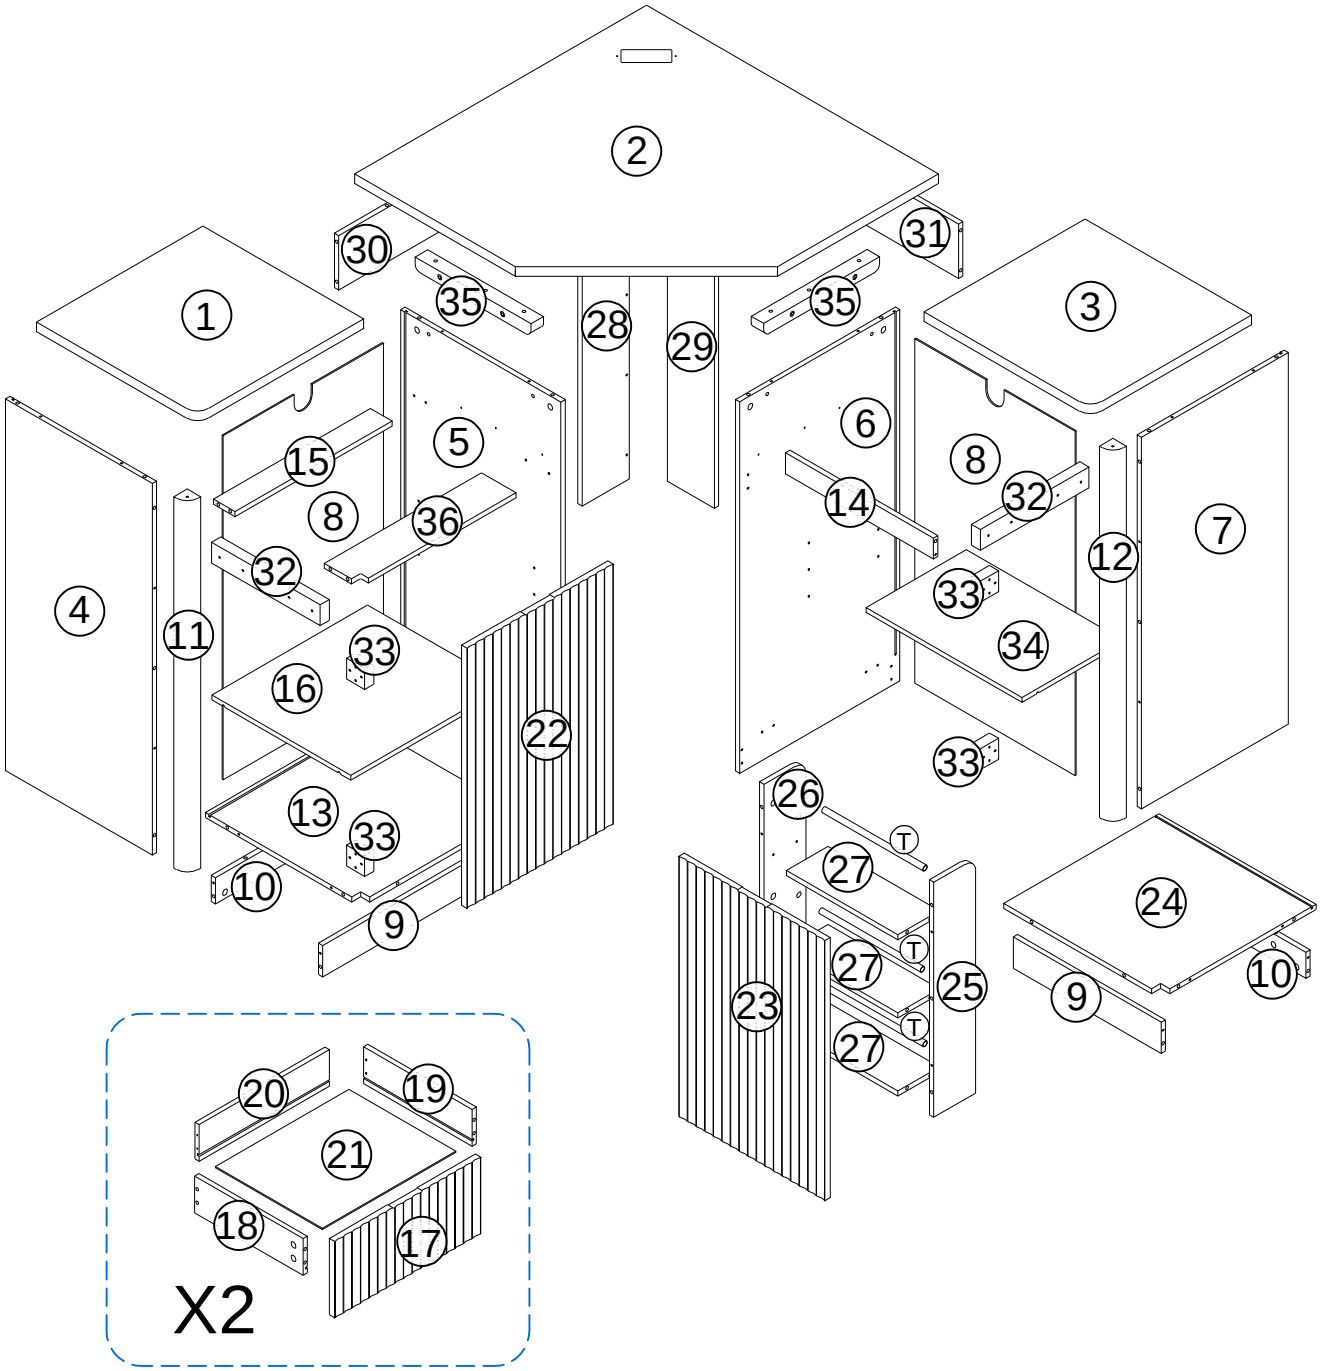












Part List/ Liste des pièces

N707P542031

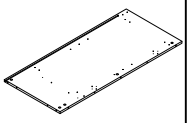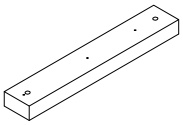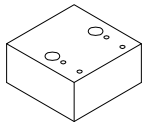 2: 1pc	 4: 1pc	 5: 1pc	 6: 1pc	 7: 1pc	 8: 2pcs
 9: 2pcs	 10: 2pcs	 11: 1pc	 12: 1pc	 14: 1pc	 15: 1pc
 18: 2pcs	 19: 2pcs	 20: 2pcs	 25: 1pc	 26: 1pc	 27: 1pc
 28: 1pc	 29: 1pc	 30: 1pc	 31: 1pc	 32: 2pcs	 33: 4pcs
 34: 1pc	 35: 2pcs	 36: 1pc			












Part List/ Liste des pièces

N707P542032


 1: 1pc	 3: 1pc	 13: 1pc	 16: 1pc	 17: 2pcs	 21: 2pcs
 22: 1pc	 23: 1pc	 24: 1pc	 27: 2pcs	 Hardware box Liste du matériel	

Hardware List/Liste du

N707P542032

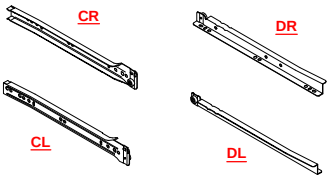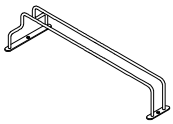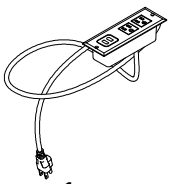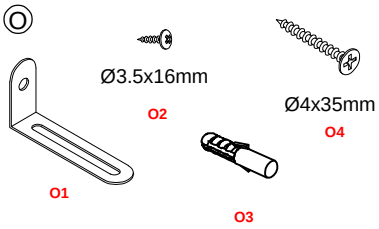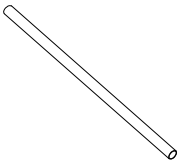
Ⓐ  Ø6x33mm 90+5pcs	Ⓑ  90+5pcs	Ⓒ  Ø6x30mm 52+4pcs	Ⓓ  Ø4x30mm 20+3pcs	Ⓔ  Ø4x40mm 3+1pcs	Ⓕ  Ø3.5x12mm 60+4pcs
Ⓖ  10pcs	Ⓗ  8pcs	Ⓘ  4pcs	Ⓙ  4pcs	Ⓚ  300mm 2sets	
Ⓛ  3pcs	Ⓜ  1pc	Ⓝ1  12+2pcs	Ⓝ2  Ø3x16mm 12+2pcs	Ⓞ  2sets	
Ⓟ  10pcs	Ⓠ  40pcs	Ⓡ  1pc	Ⓢ  1pc	Ⓣ  3pcs	

ASSEMBLY TOOLS REQUIRED (INCLUDED)
OUTILS D'ASSEMBLAGE REQUIS (INCLUS)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !
FAITES ATTENTION À NE PAS ENDOMMAGER LA POSITION DE MAINTIEN LORSQUE VOUS UTILISEZ DES OUTILS ÉLECTRIQUES !

Step 1/ Etape 1

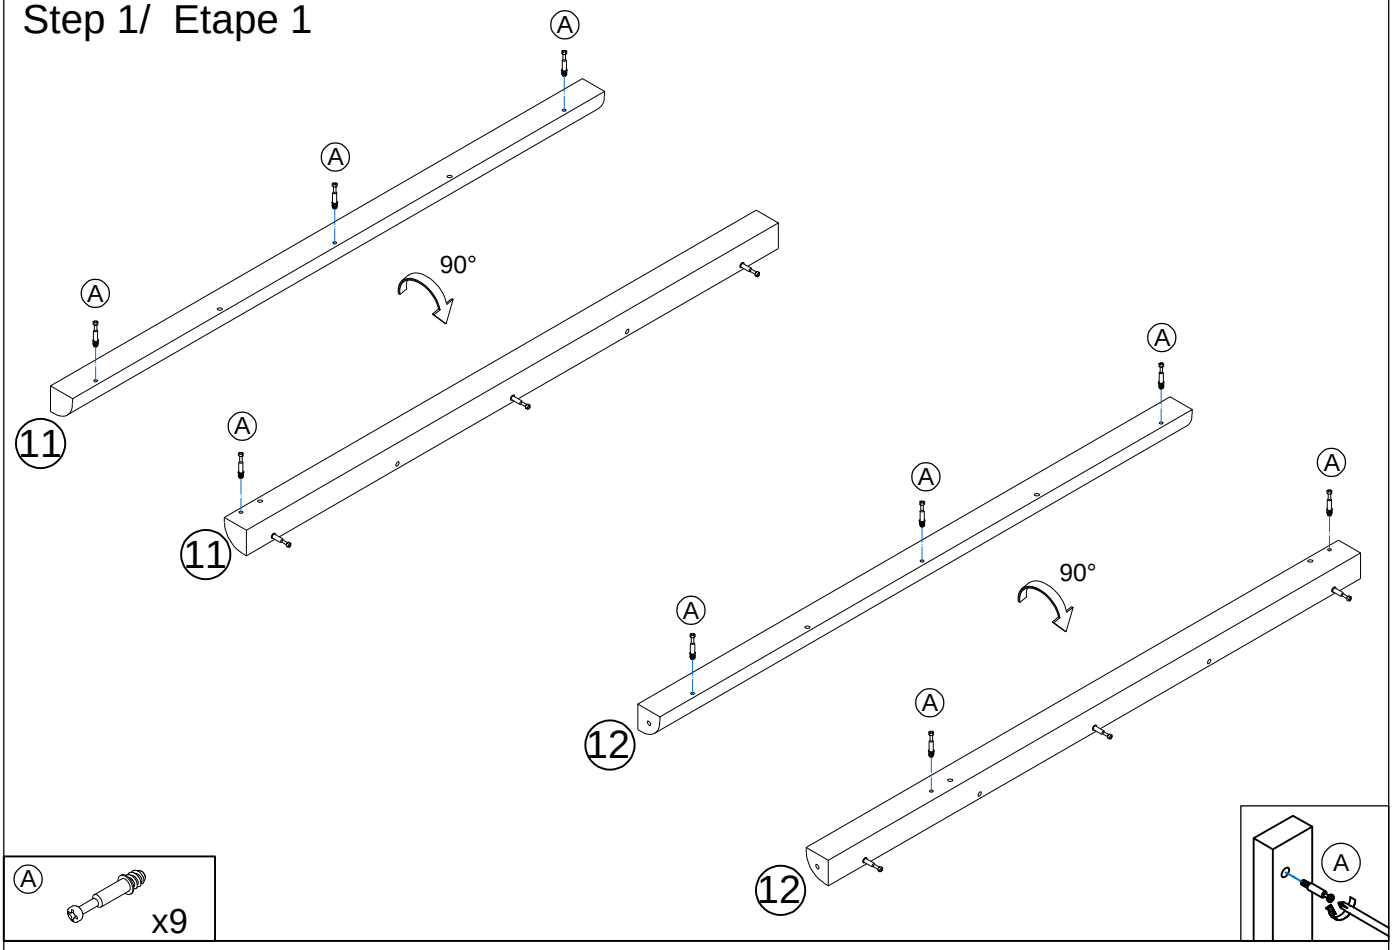

A x9


Step 2/ Etape 2

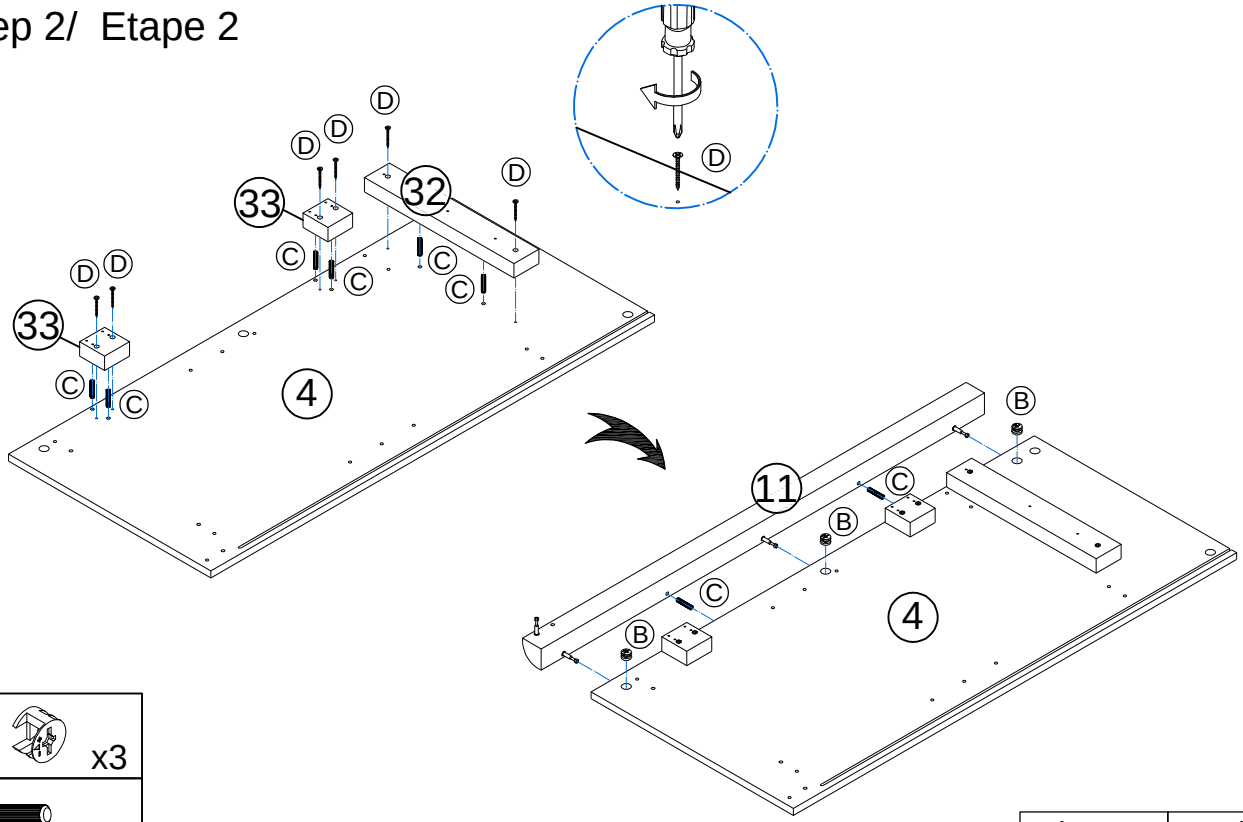


B x3

C Ø6x30mm x8

D Ø4x30mm x6

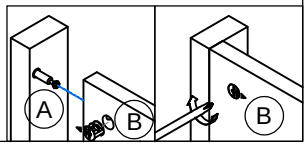


Step 3/ Etape 3

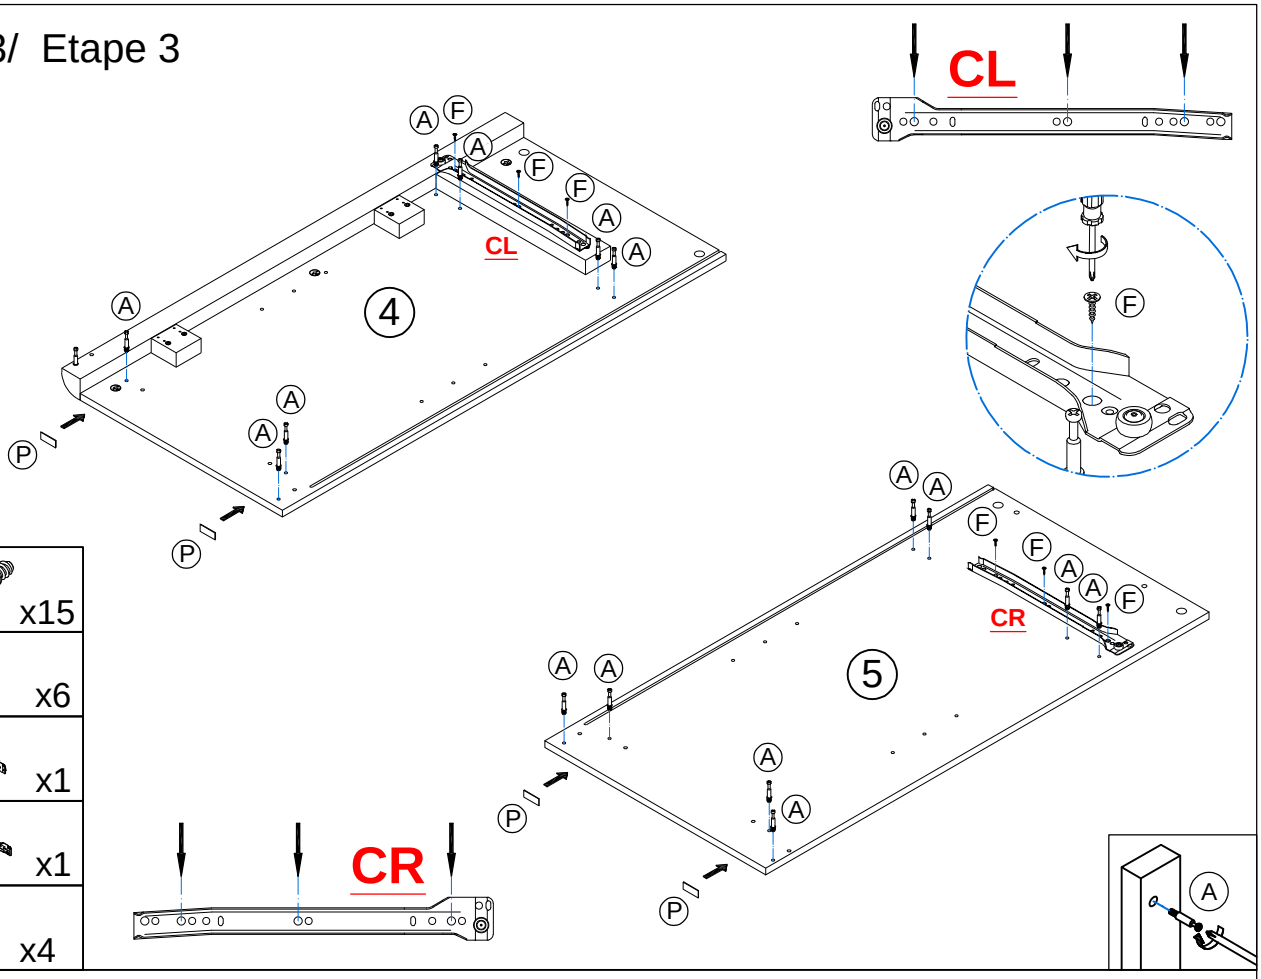


A	x15
F	Ø3.5x12mm x6
CL	300mm x1
CR	300mm x1
P	x4


Step 4/ Etape 4

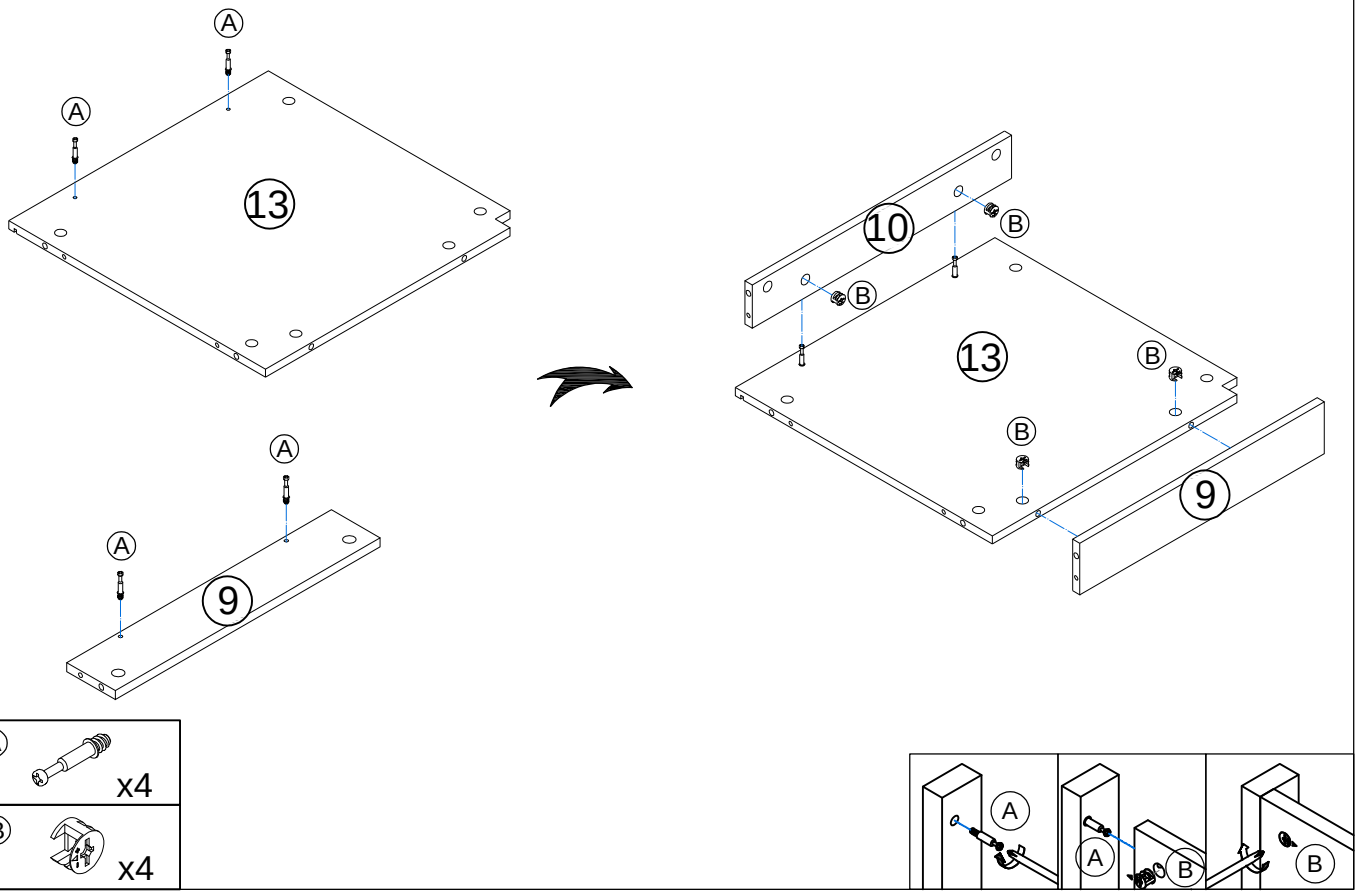


A	x4
B	x4

Step 5/ Etape 5

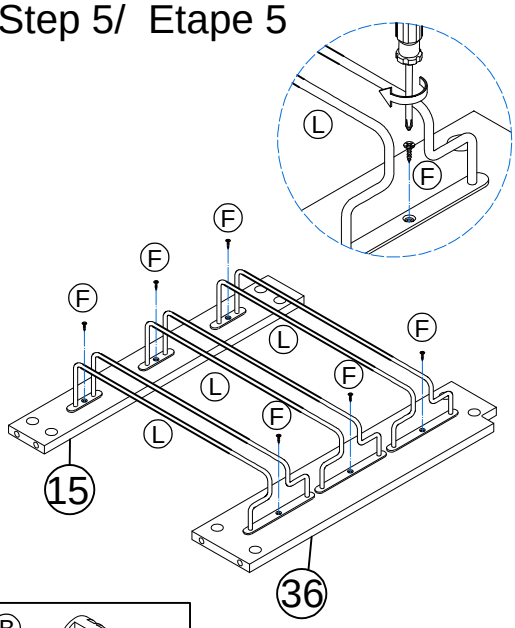


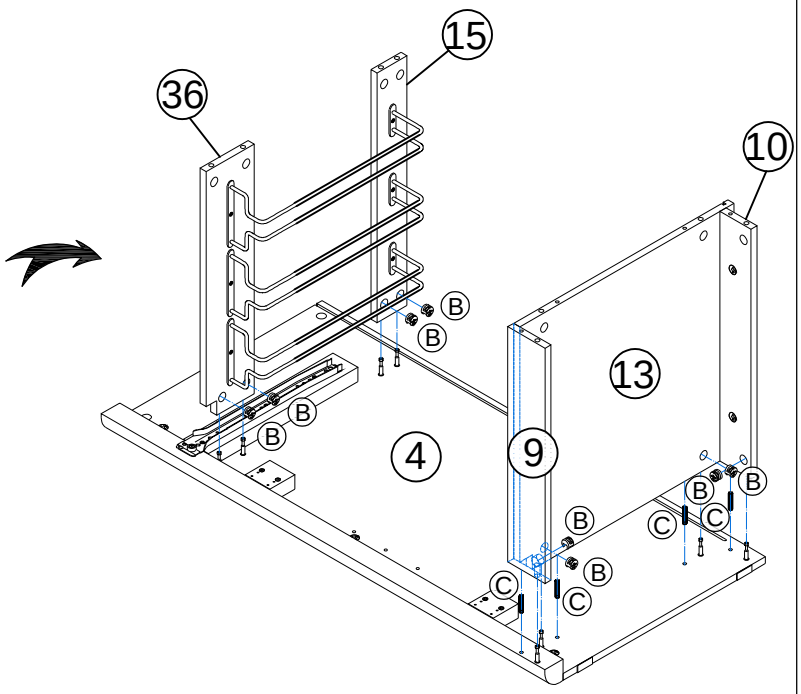


B		x8
C	 Ø6x30mm	x4
F	 Ø3.5x12mm	x6
L		x3

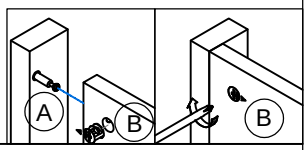

Step 6/ Etape 6

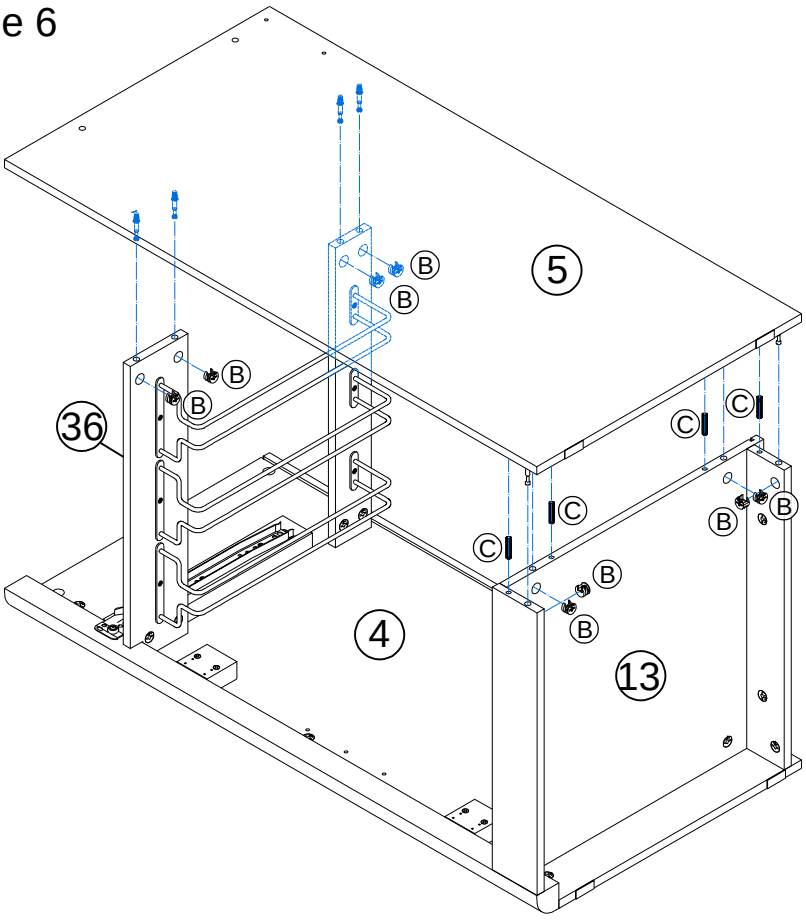



B		x8
C	 Ø6x30mm	x4

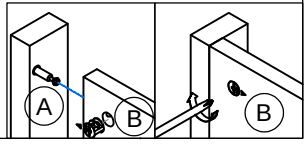


Step 7/ Etape 7

Stand the cabinet up/ Mettez l'armoire debout.

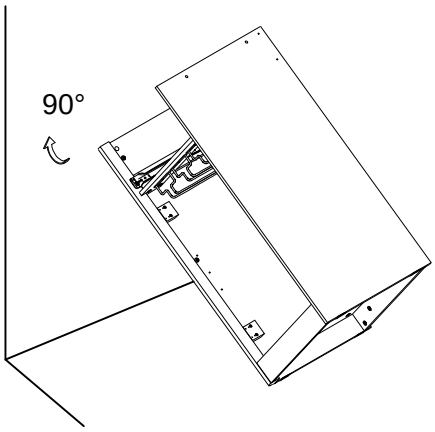

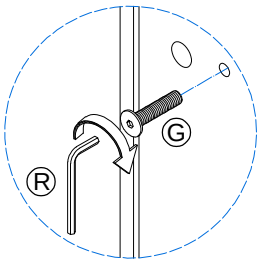

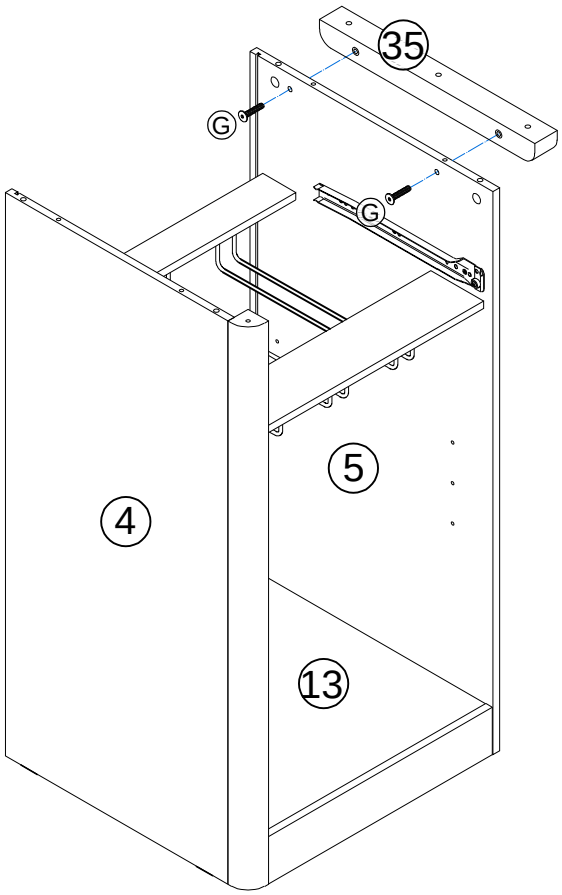


G  x2

Step 8/ Etape 8


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

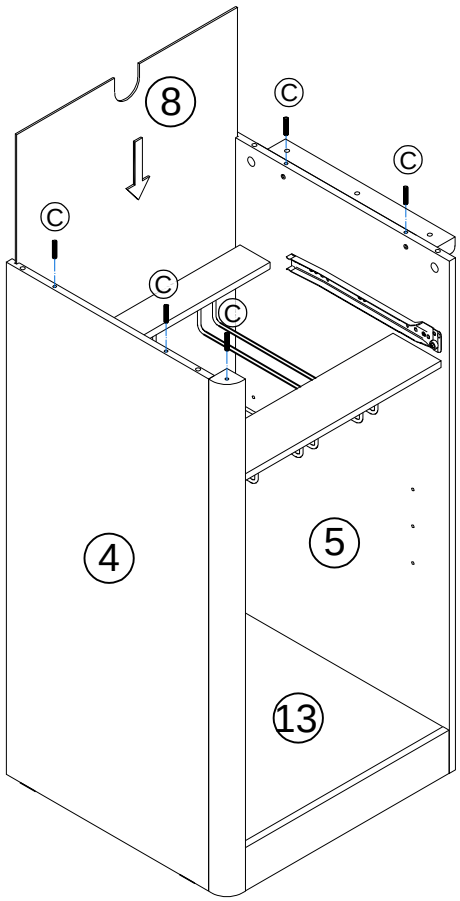


C 
Ø6x30mm x5


Step 9/ Etape 9

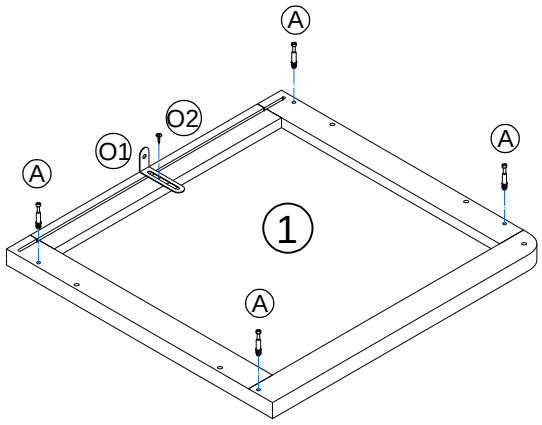

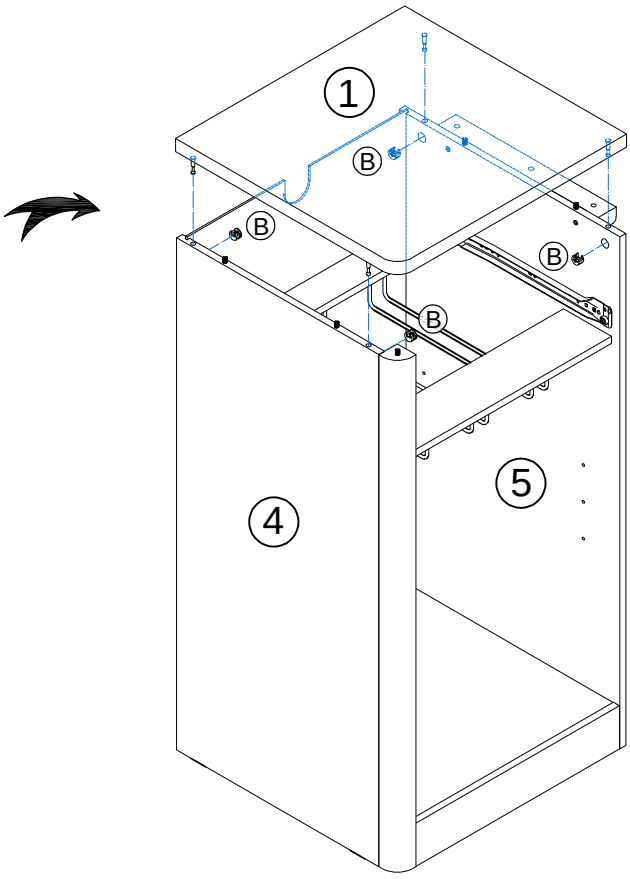


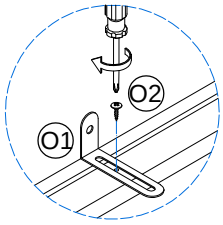


A		x4
B		x4
O1		x1
O2	 Ø3.5x16mm	x1

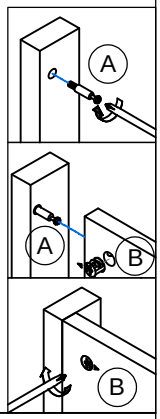


Step 10/ Etape 10

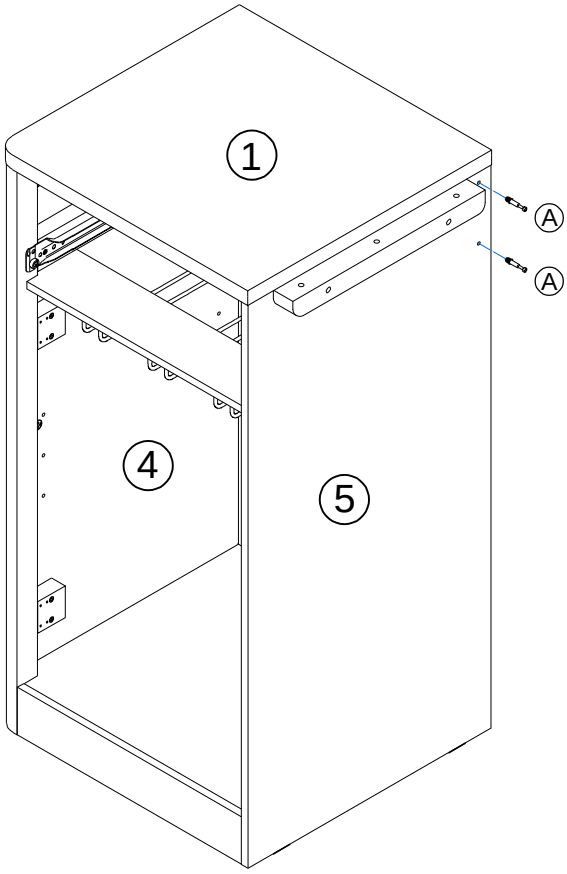


A		x2

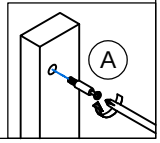


Step 11/ Etape 11

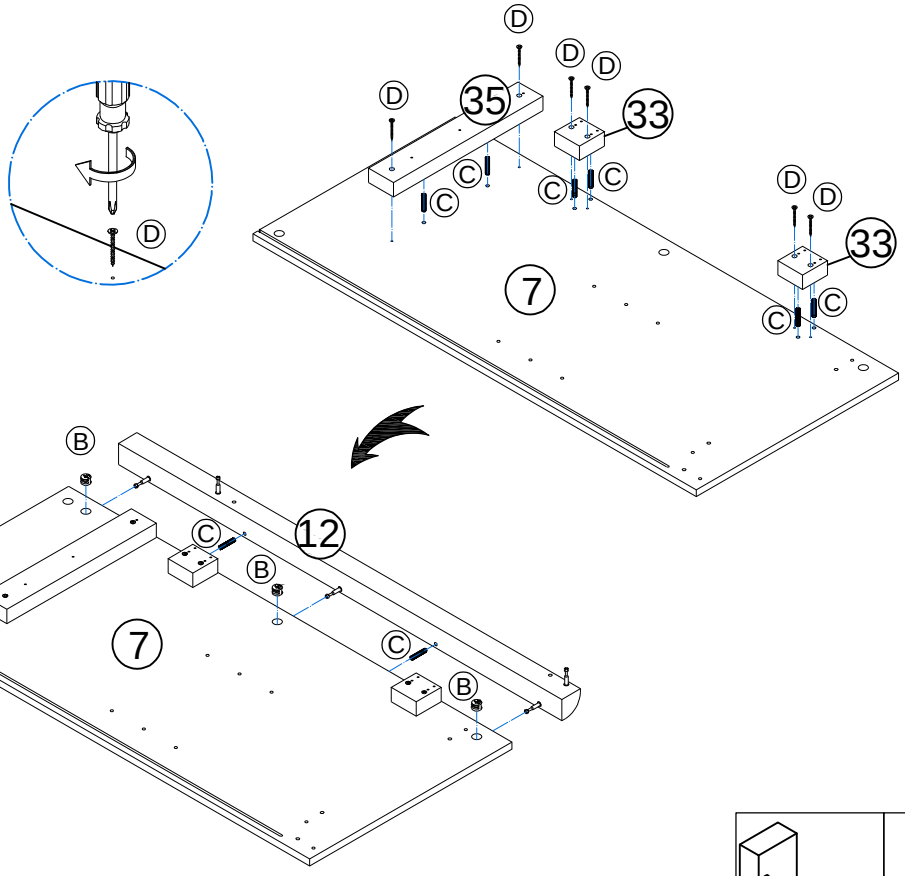

B		x3
C	Ø6x30mm	x8
D	Ø4x30mm	x6

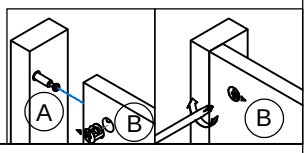


Step 12/ Etape 12

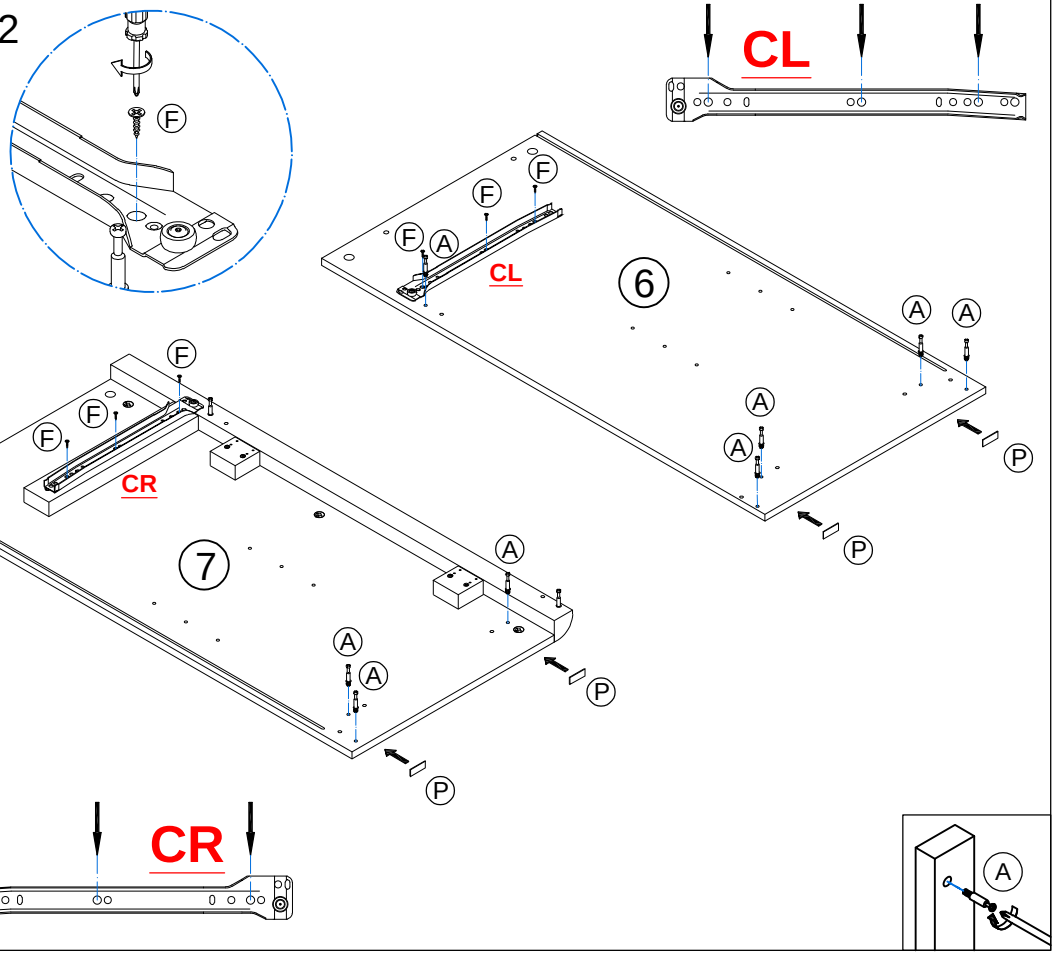


A		x8
F	Ø3.5x12mm	x6
CL	300mm	x1
CR	300mm	x1
P		x4


Step 13/ Etape 13

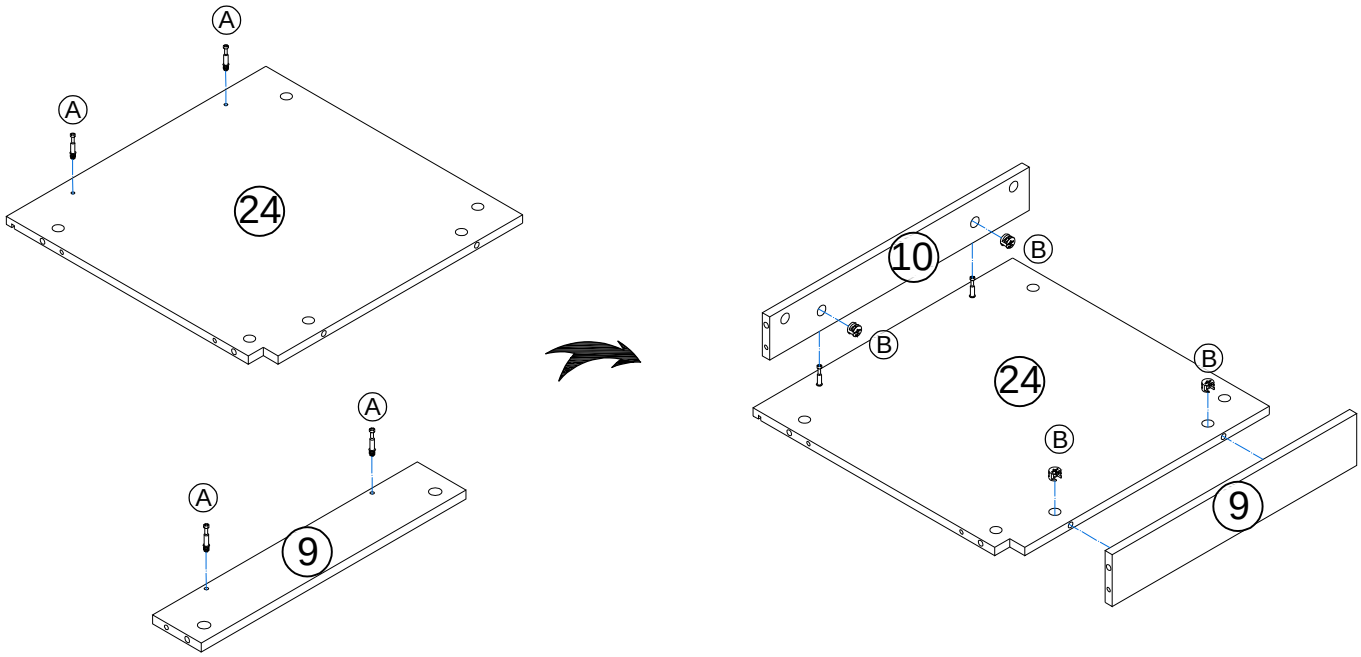


A	x4
B	x4

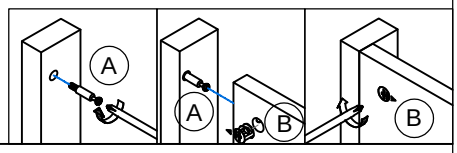


Step 14/ Etape 14

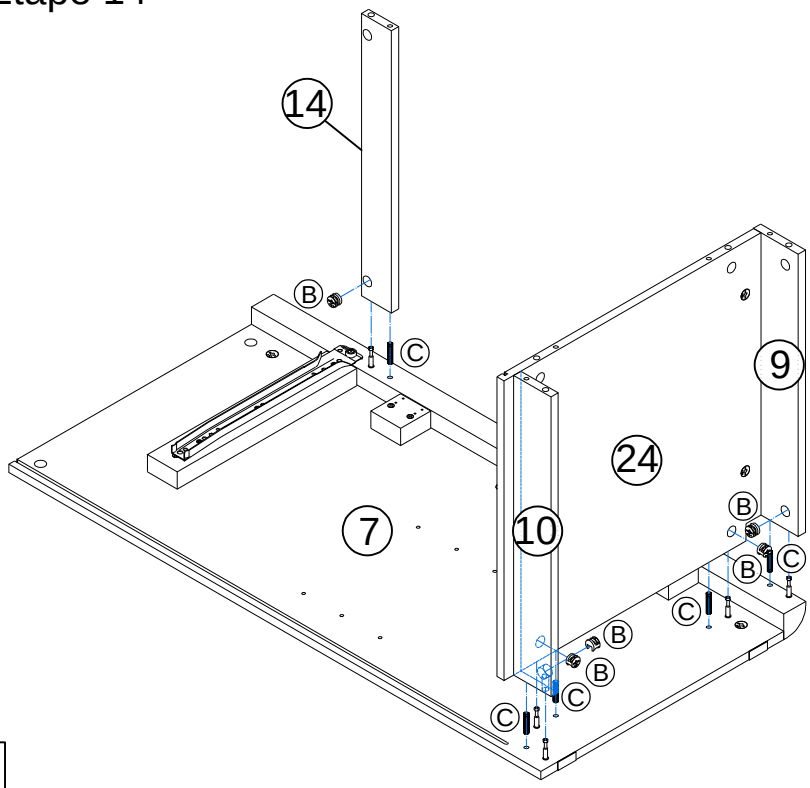

B	x5
C Ø6x30mm	x5

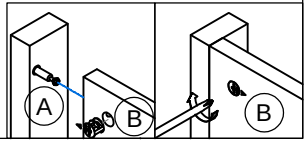


Step 15/ Etape 15

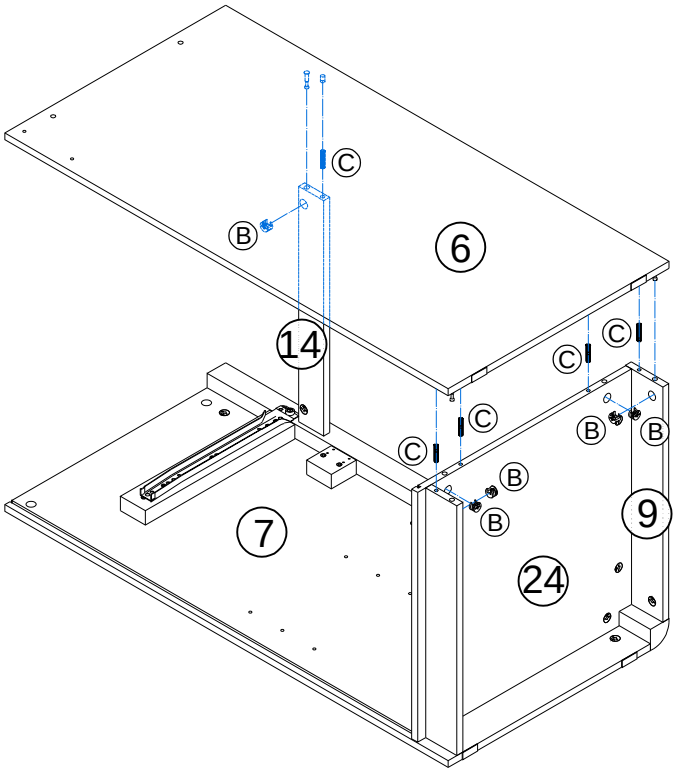


B x5


C Ø6x30mm x5

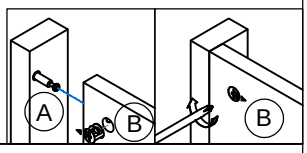

Step 16/ Etape 16

Stand the cabinet up/ Mettez l'armoire debout.

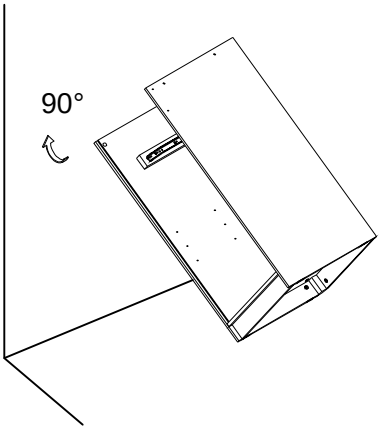

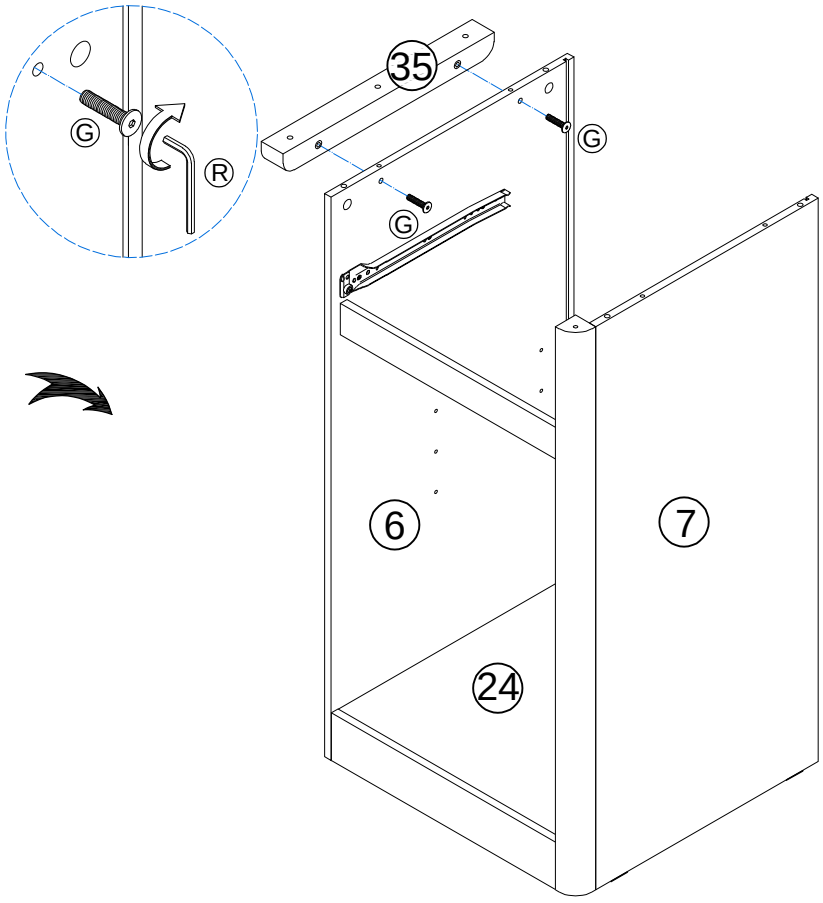


G x2

Step 17/ Etape 17


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

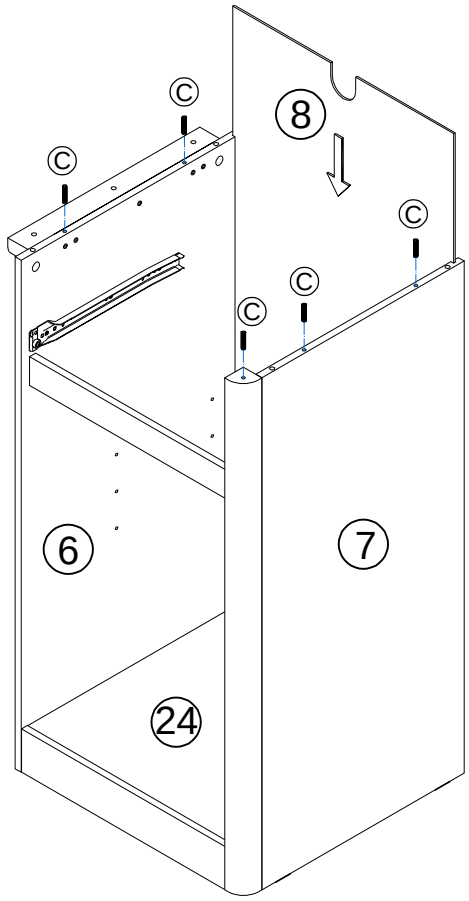



C Ø6x30mm x5

Step 18/ Etape 18

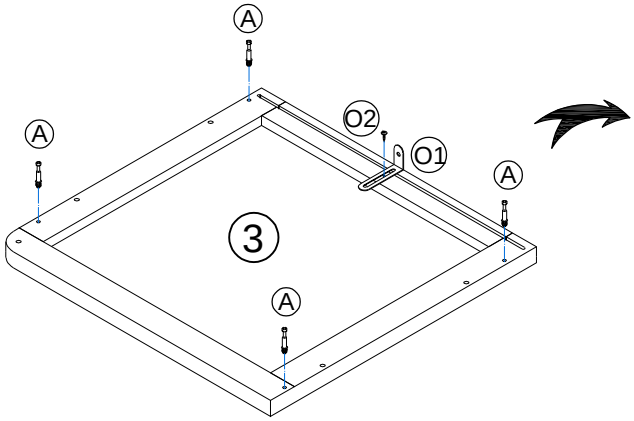

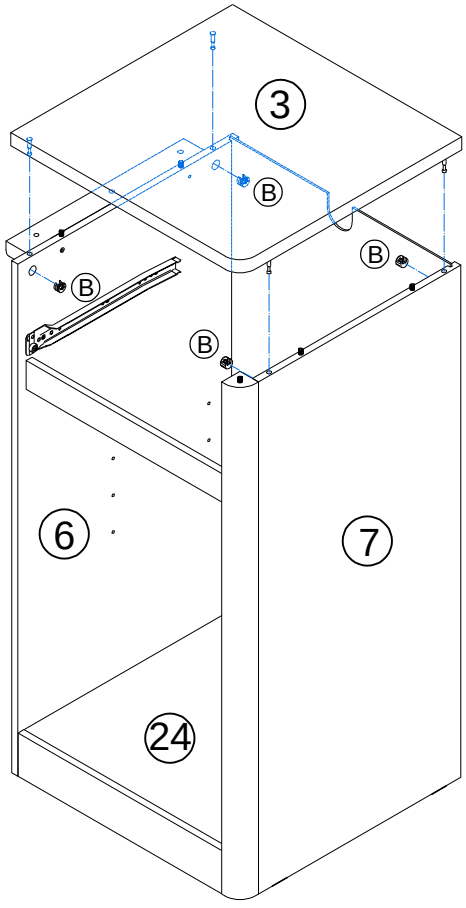

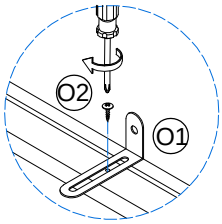

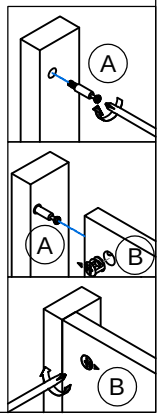


A x4


B x4

O1 x1

O2 Ø3.5x16mm x1


Step 19/ Etape 19

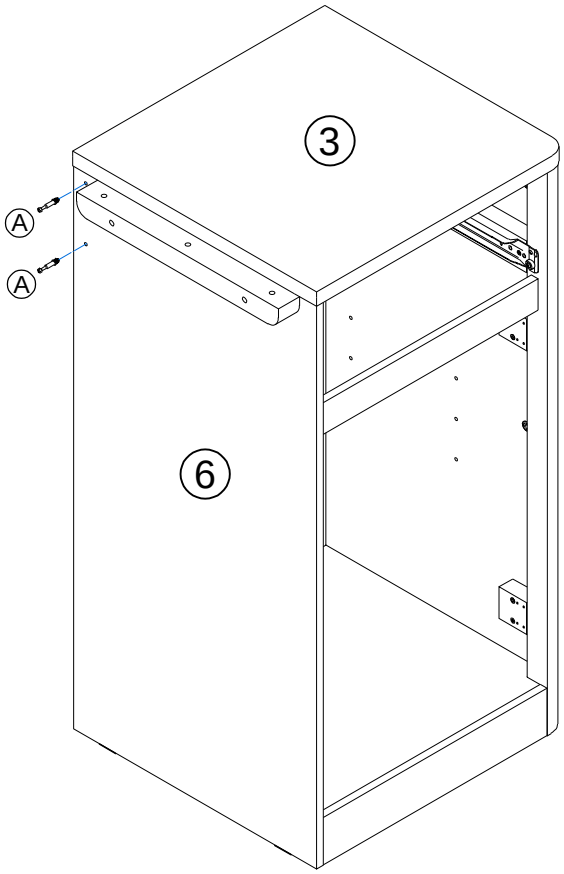


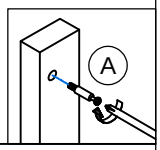

A x2

Step 20/ Etape 20

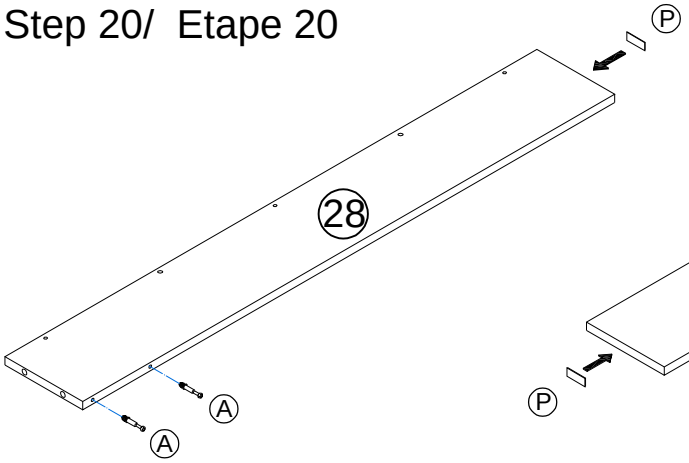

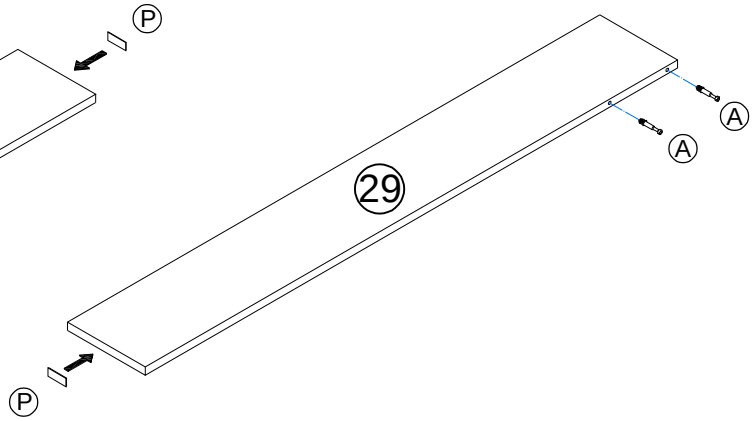



A x4


C Ø6x30mm x2

E Ø4x40mm x3


P x2

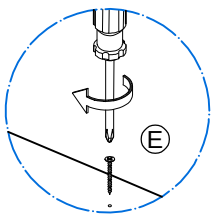


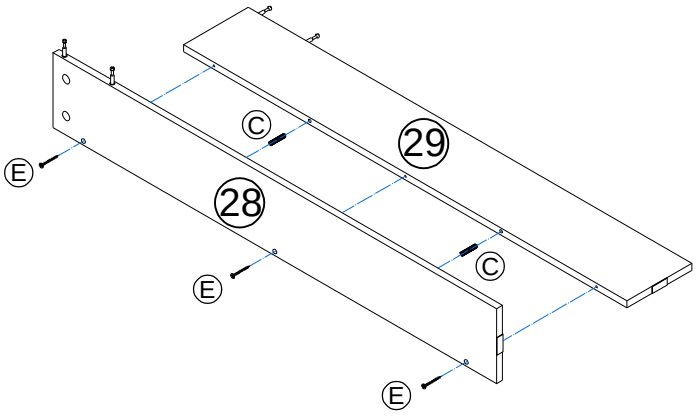


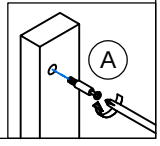

Step 21/ Etape 21

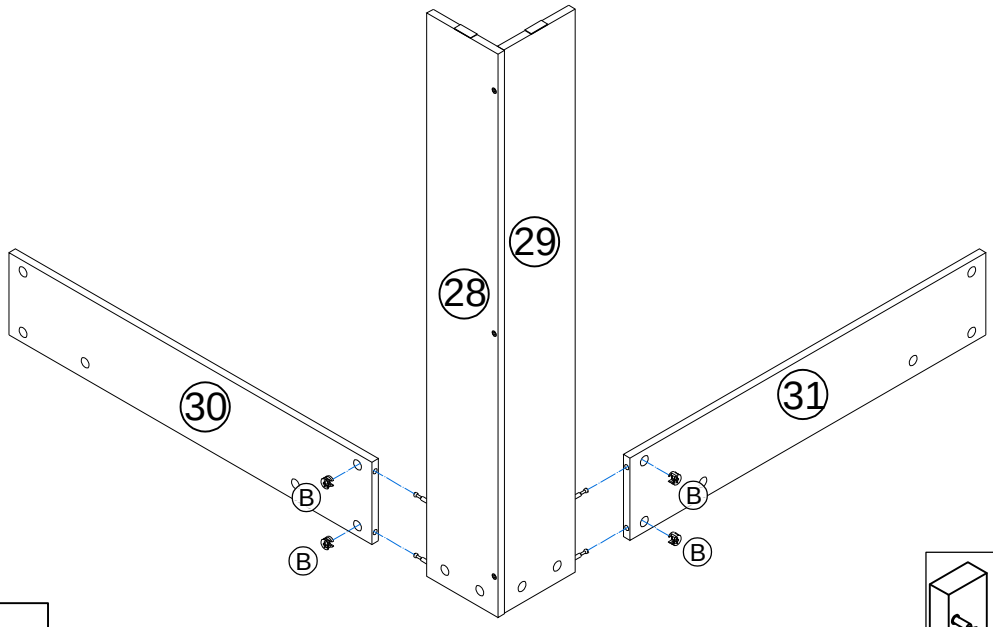





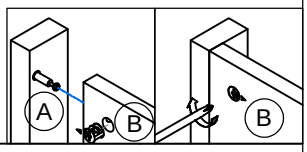


Step 22/ Etape 22


Note: This assembly step requires two peoples to perform it simultaneously !
Remarque : Cette étape d'assemblage nécessite deux personnes pour être réalisée simultanément !

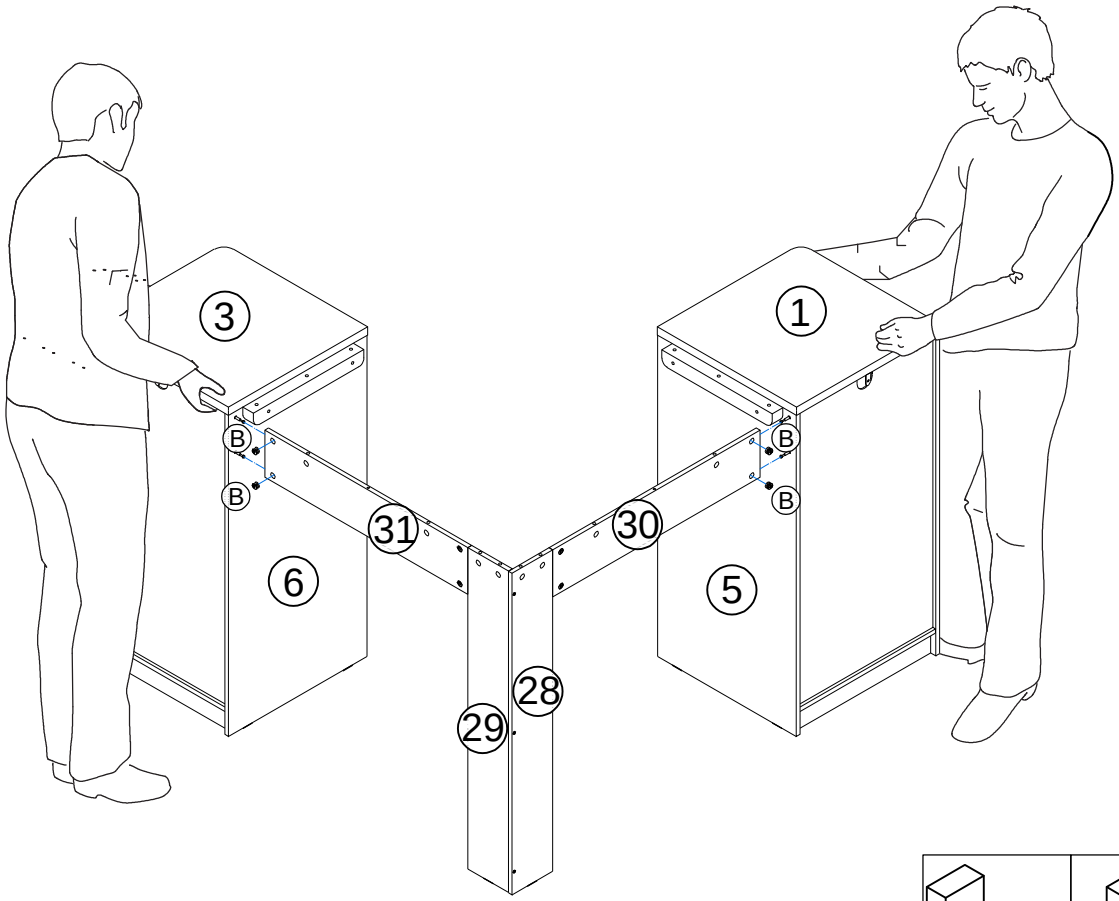





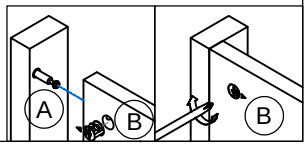


Step 23/ Etape 23

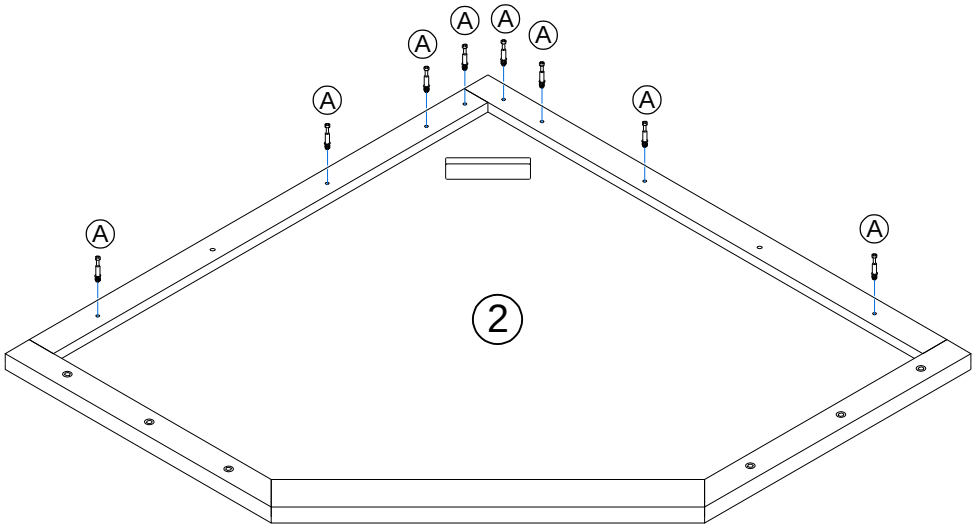




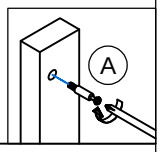



Step 24/ Etape 24

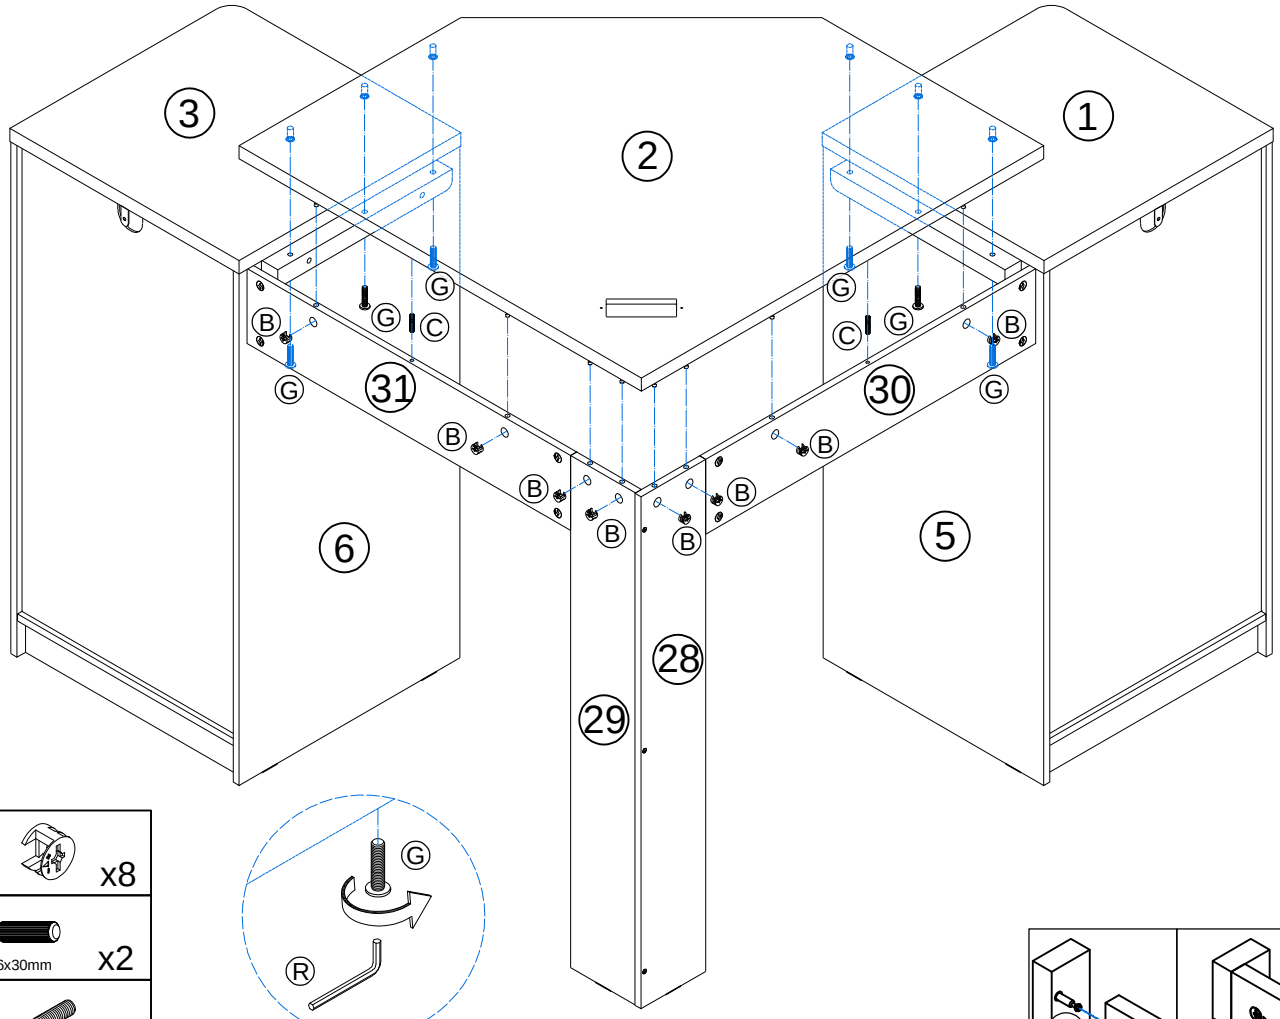


Step 25/ Etape 25

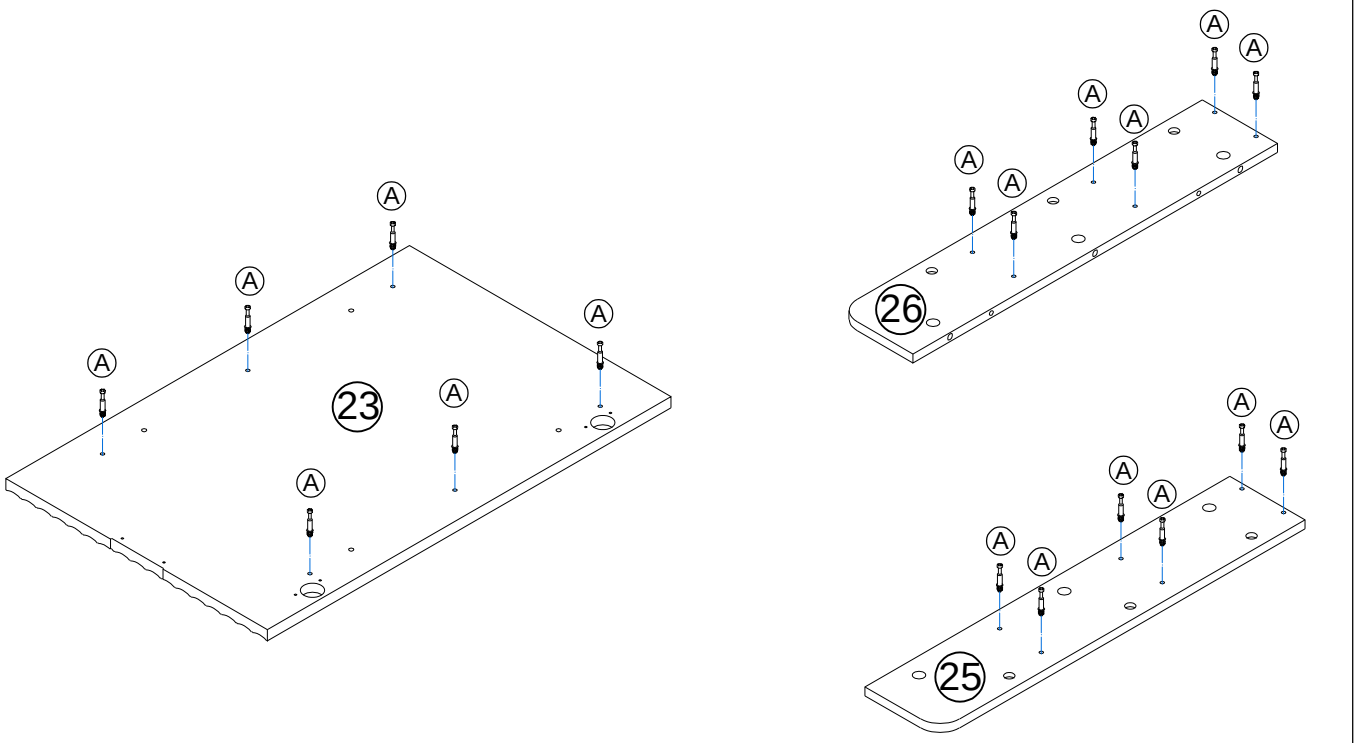





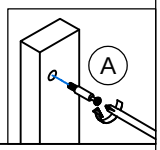


Step 26/ Etape 26

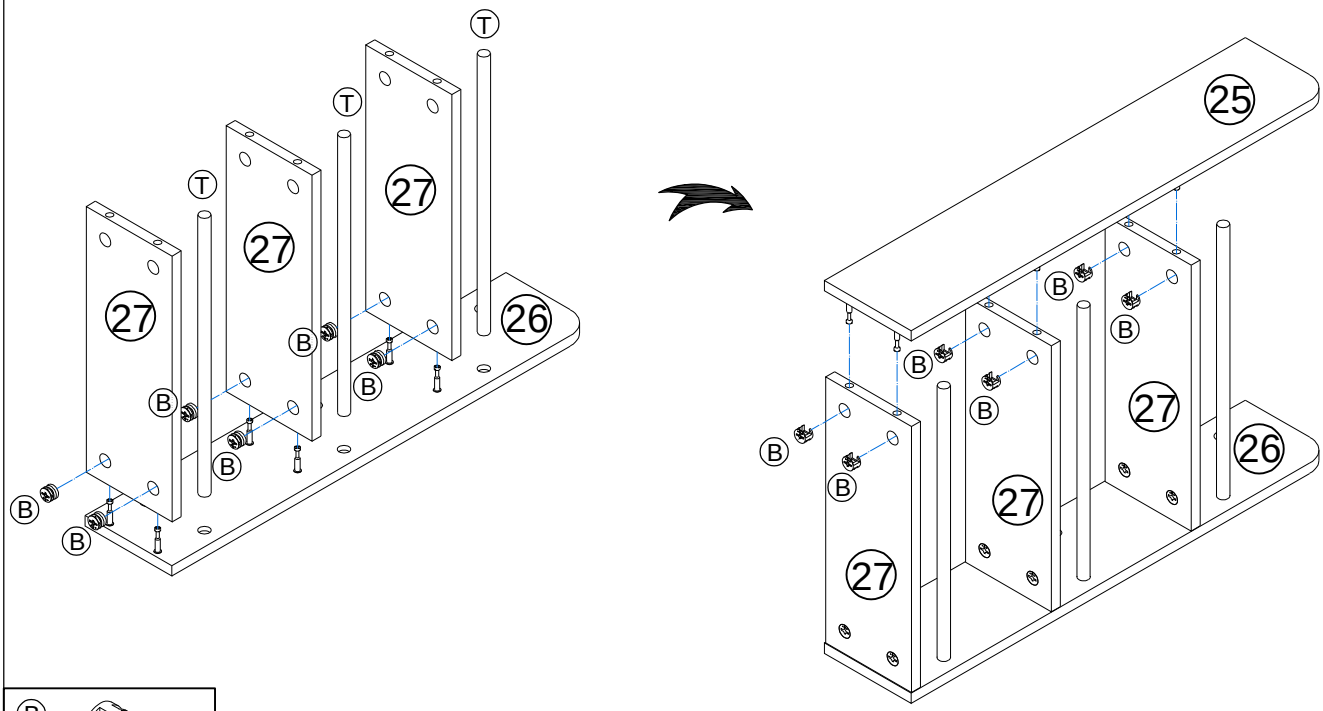







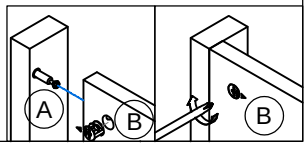


Step 27/ Etape 27

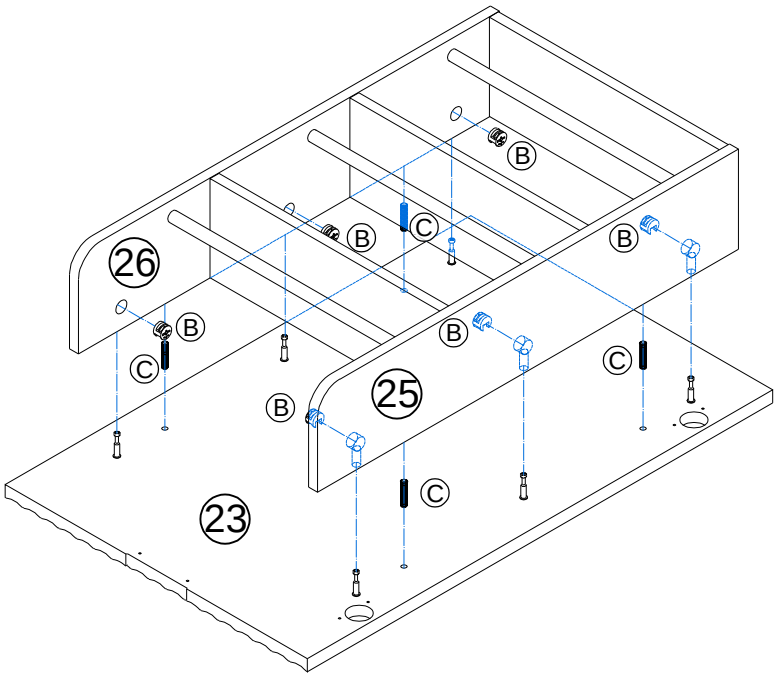



B		x6
C	 Ø6x30mm	x4

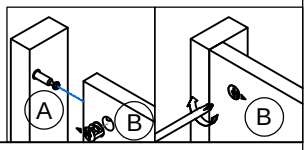

Step 28/ Etape 28

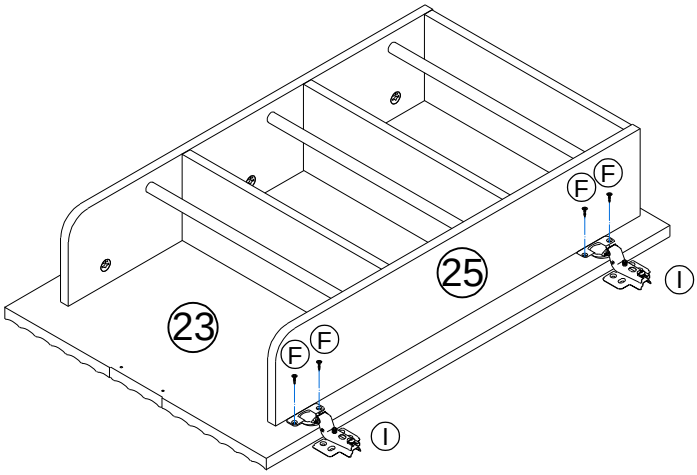


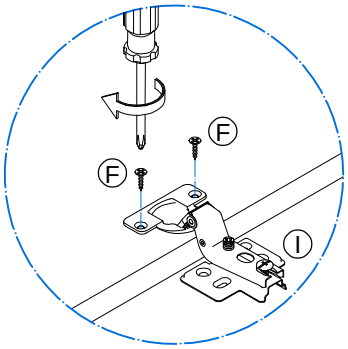


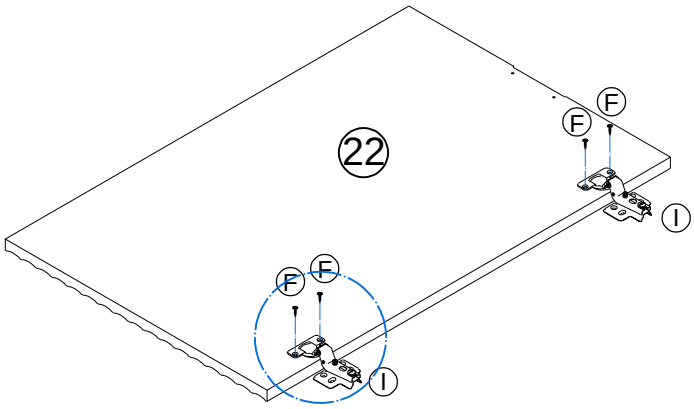

F	Ø3.5x12mm	x8
I		x4


Step 29/ Etape 29

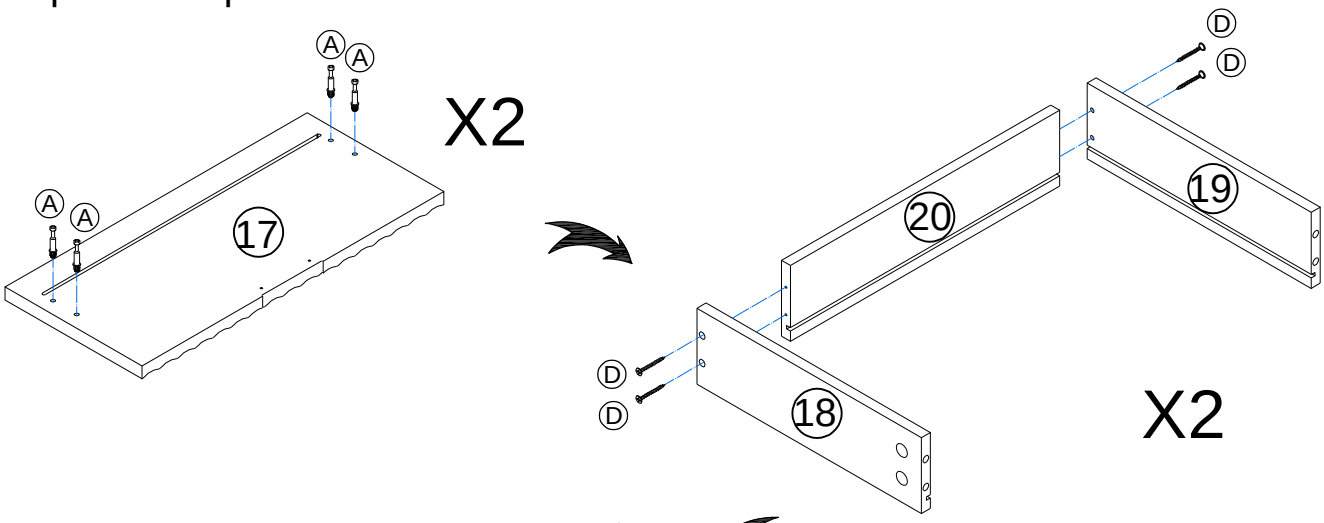


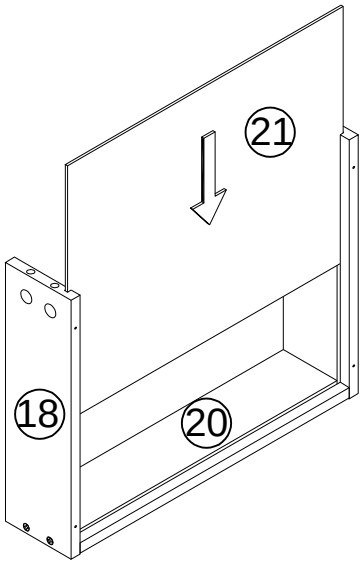


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


La plaque mince doit être complètement insérée dans la rainure. Si l'insertion n'est pas facile, vous pouvez essayer d'appuyer par l'avant ou par l'arrière pour ajuster la position jusqu'à ce que la plaque mince soit complètement insérée dans la rainure.

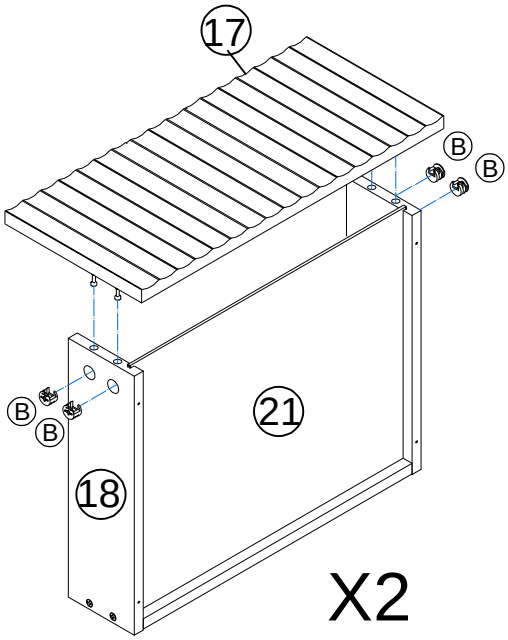

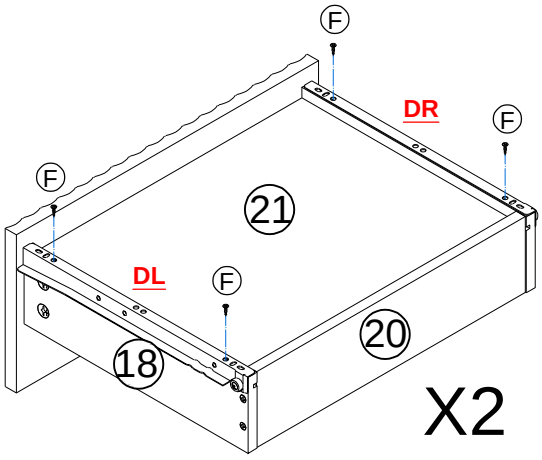


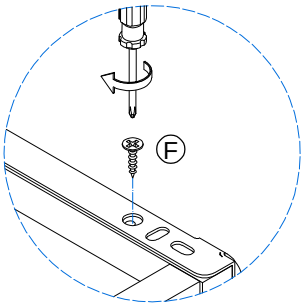



A	x8
B	x8
D Ø4x30mm	x8
F Ø3.5x12mm	x8
DL 300mm	x2
DR 300mm	x2

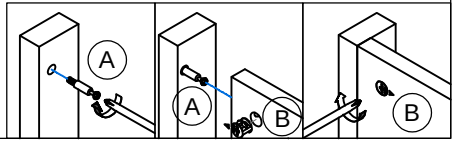


Step 30/ Etape 30

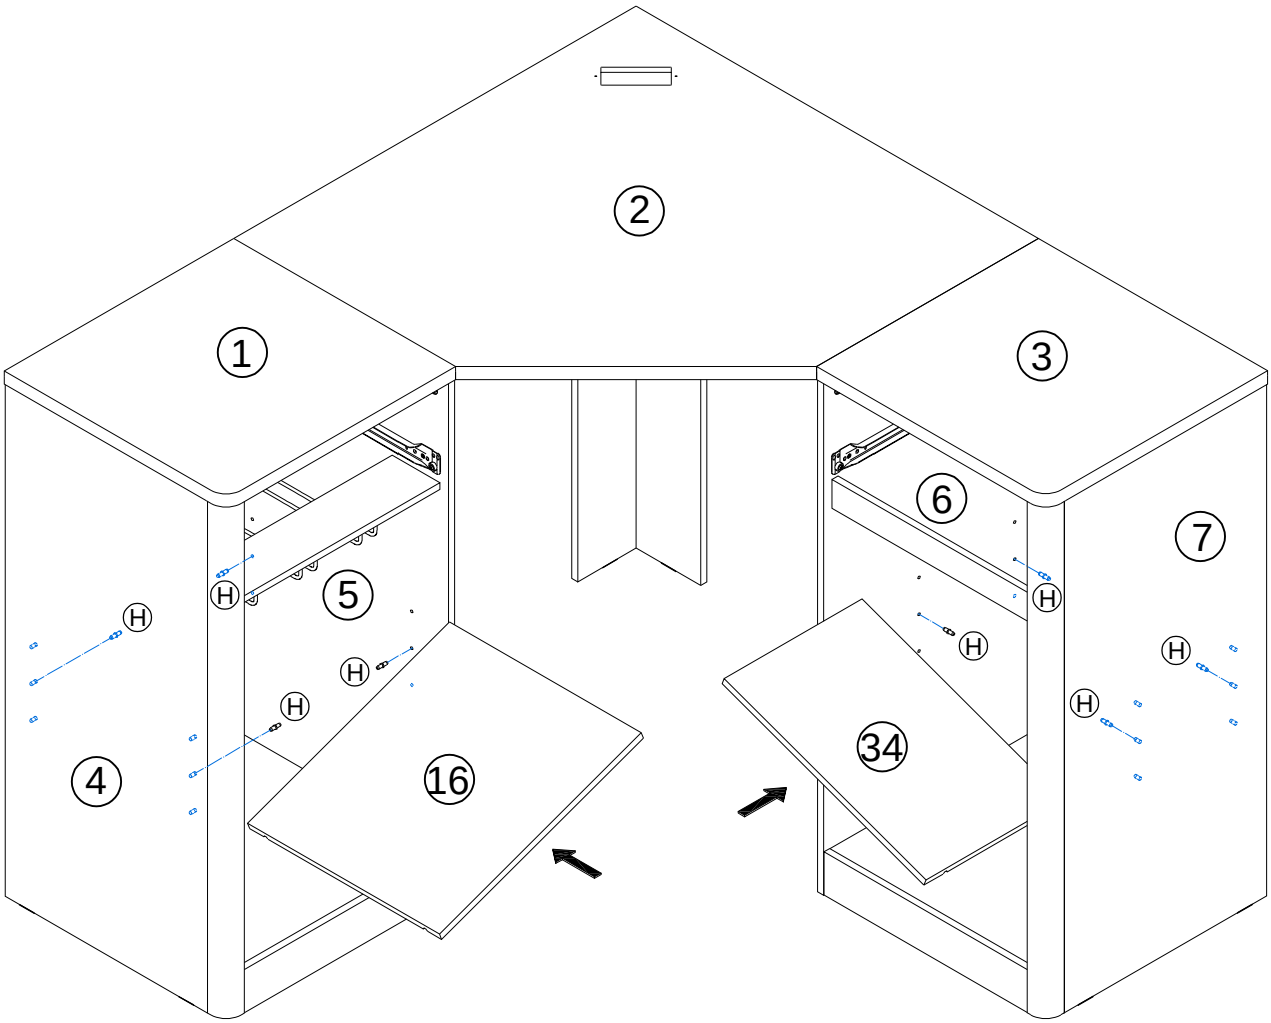

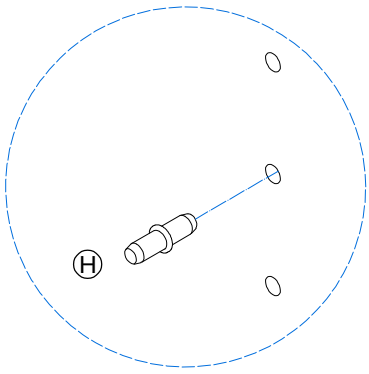





Step 31/ Etape 31

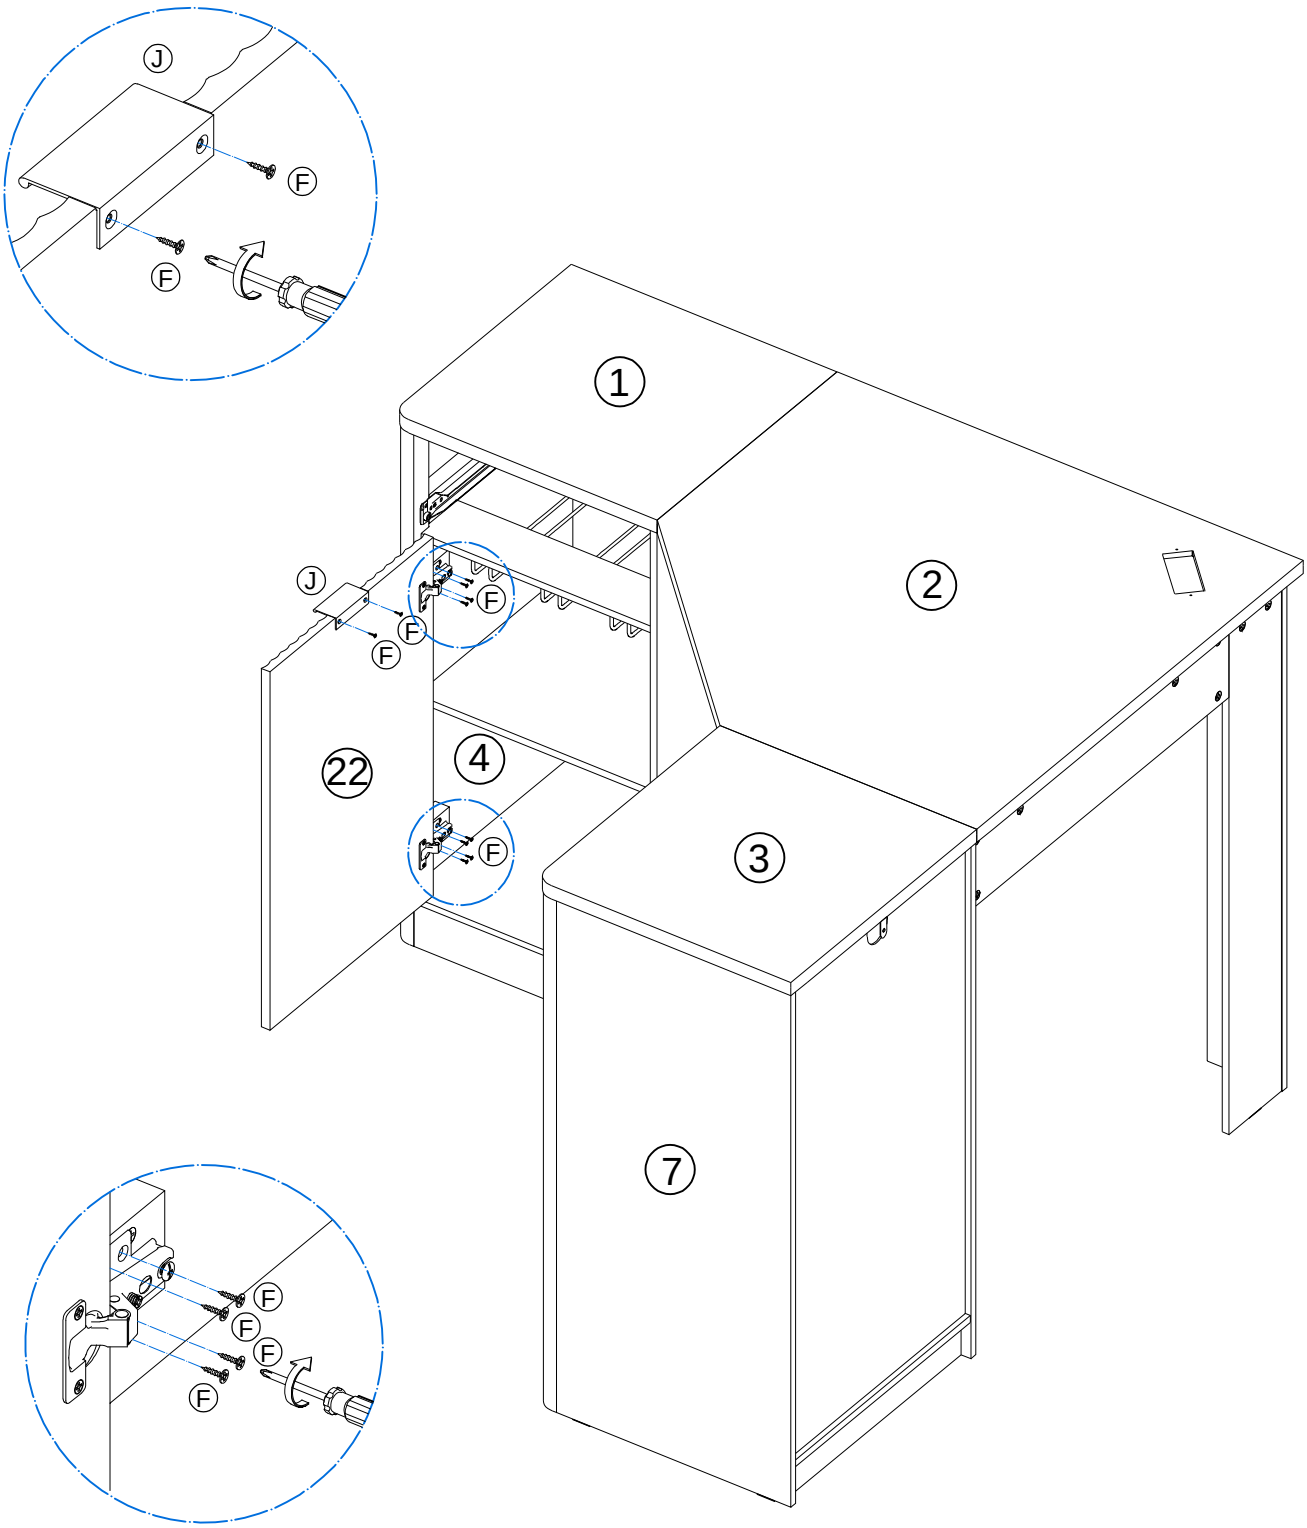


F	Ø3.5x12mm	x10
J		x1

Step 32/ Etape 32

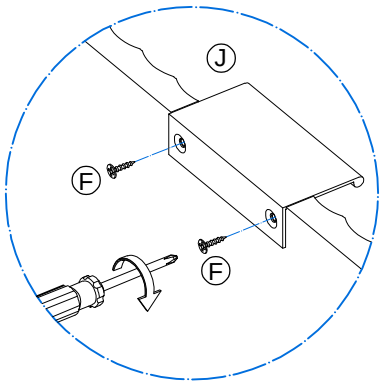


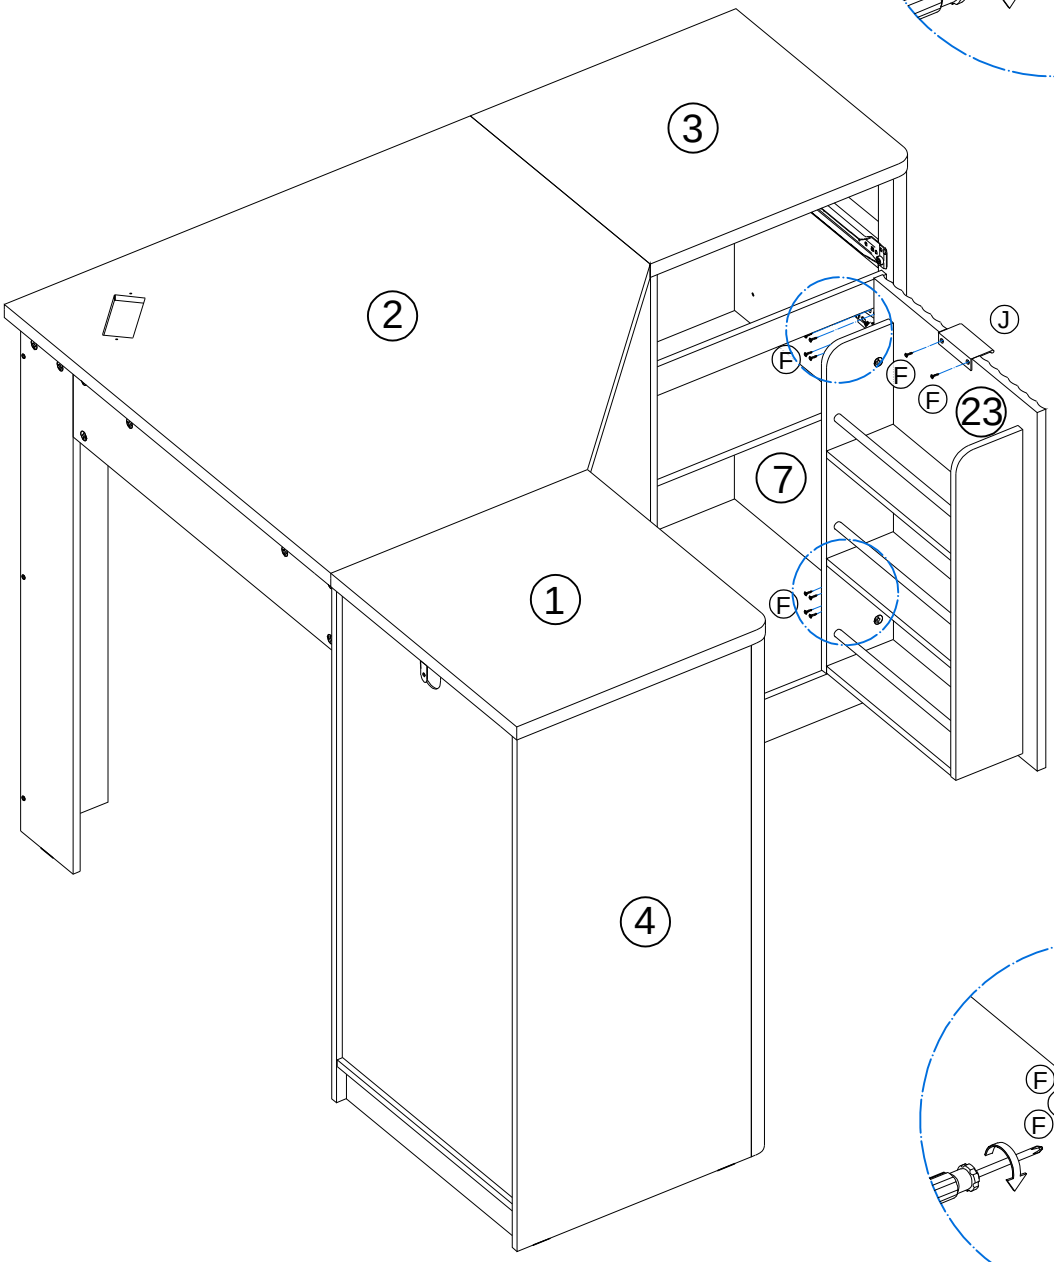


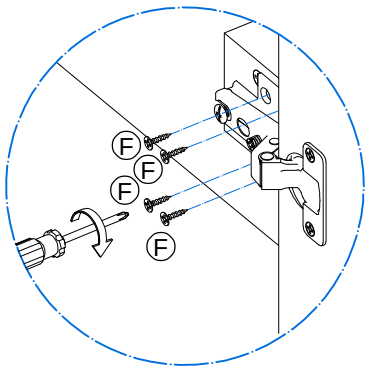



F  Ø3.5x12mm	x10
J 	x1

Step 33/ Etape 33

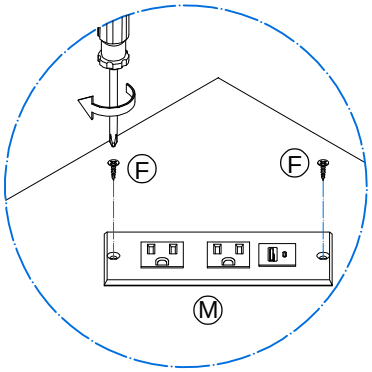

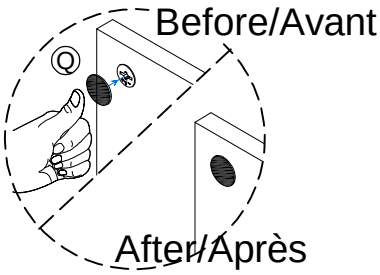


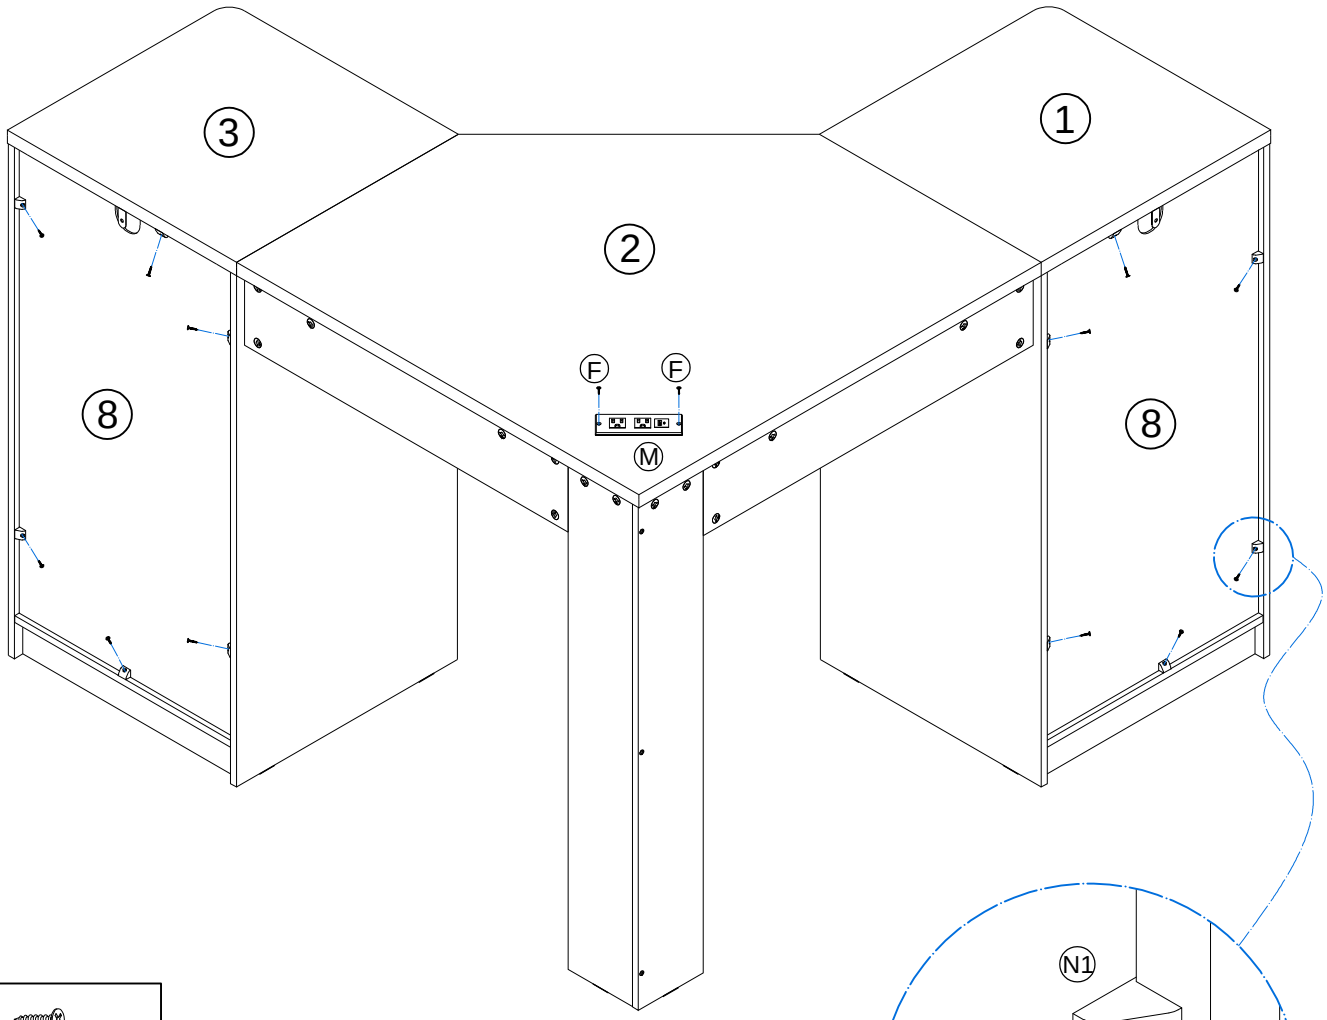

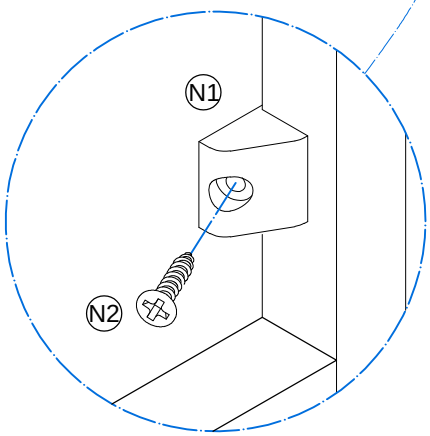

F	Ø3.5x12mm	x2
M		x1
N1		x12
N2	Ø3x16mm	x12
Q		x38+

Step 34/ Etape 34

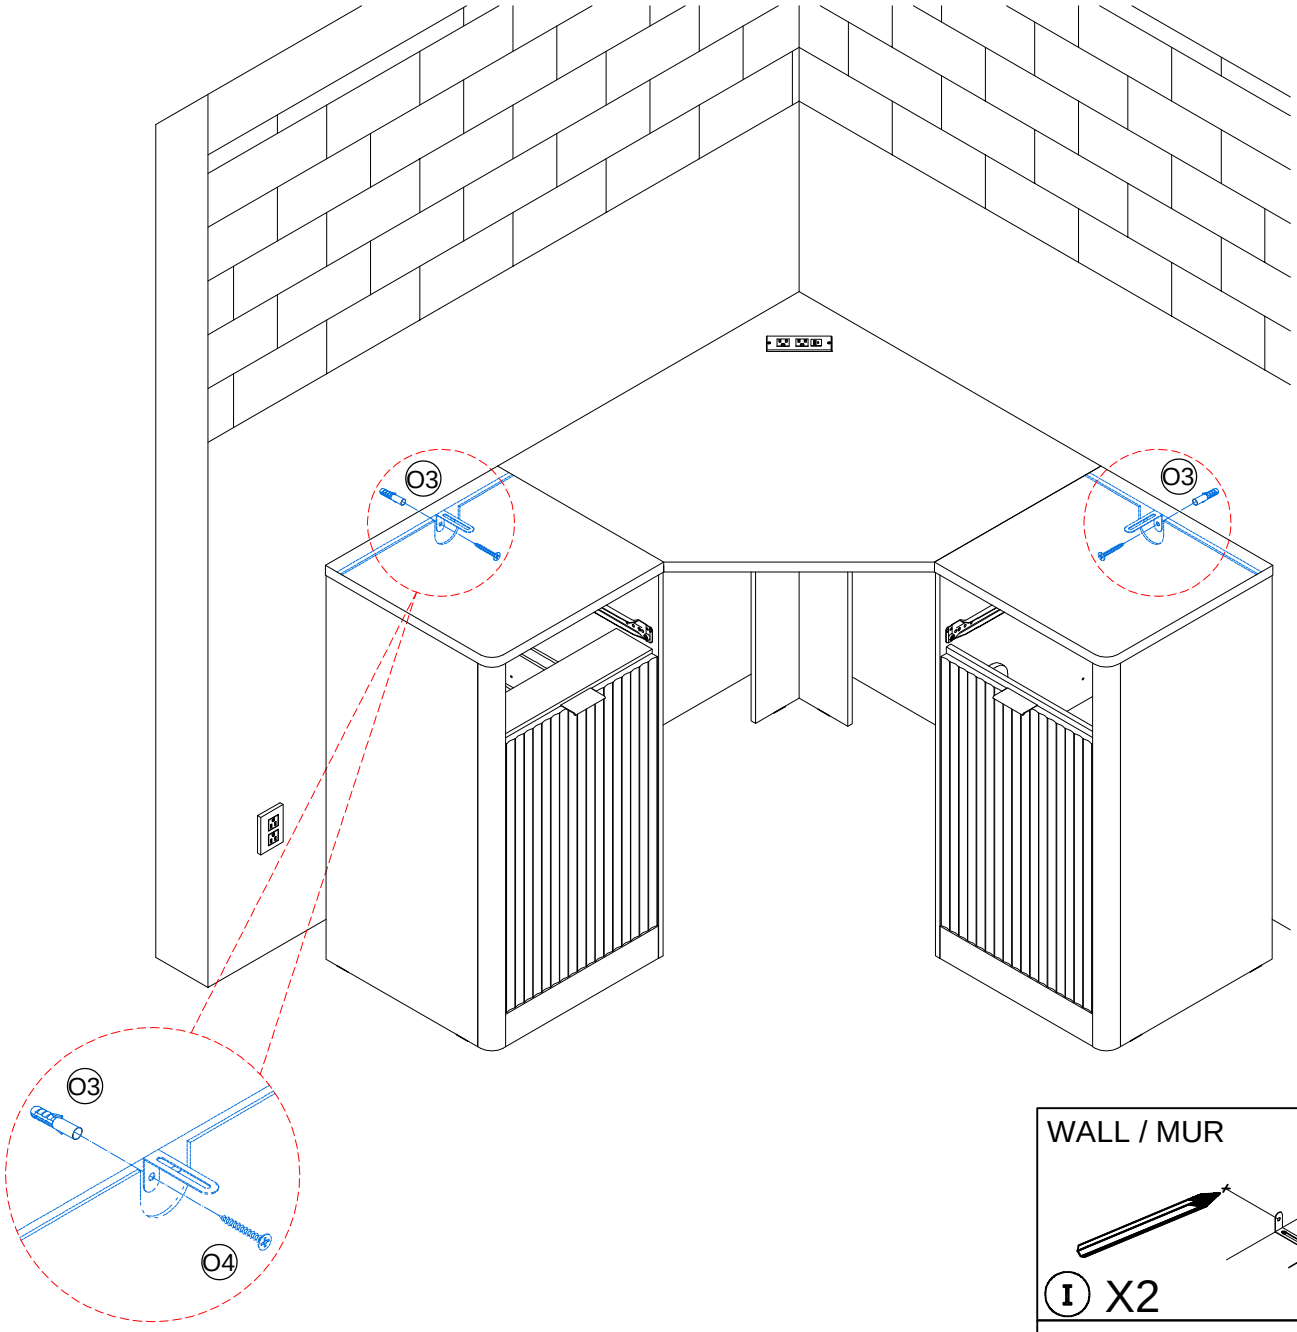

Step1: Determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: Drill the hole and then fixed the Anchor (O3) on the wall.
Step 3: Use screw (O4) to fix the L-shaped iron pat (O1) on the wall

Étape 1 : Déterminez l'emplacement du dispositif anti-basculement sur le mur,
puis marquez la position après avoir confirmé que le produit est bien équilibré.
Étape 2 : Percez le trou, puis fixez l'ancrage (O3) sur le mur.
Étape 3 : Utilisez la vis (O4) pour fixer la sangle (O1) sur le mur.

O3 x2


O4 x2

WALL / MUR

I X2


WALL / MUR

drilling hole /
trou de perçage

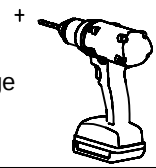

II X2


WALL

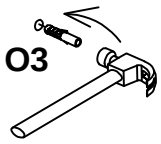


Use a hammer to close Anchor (O3)
Utilisez un marteau pour fermer l'ancrage (O3)

III

Step 35/ Etape 35

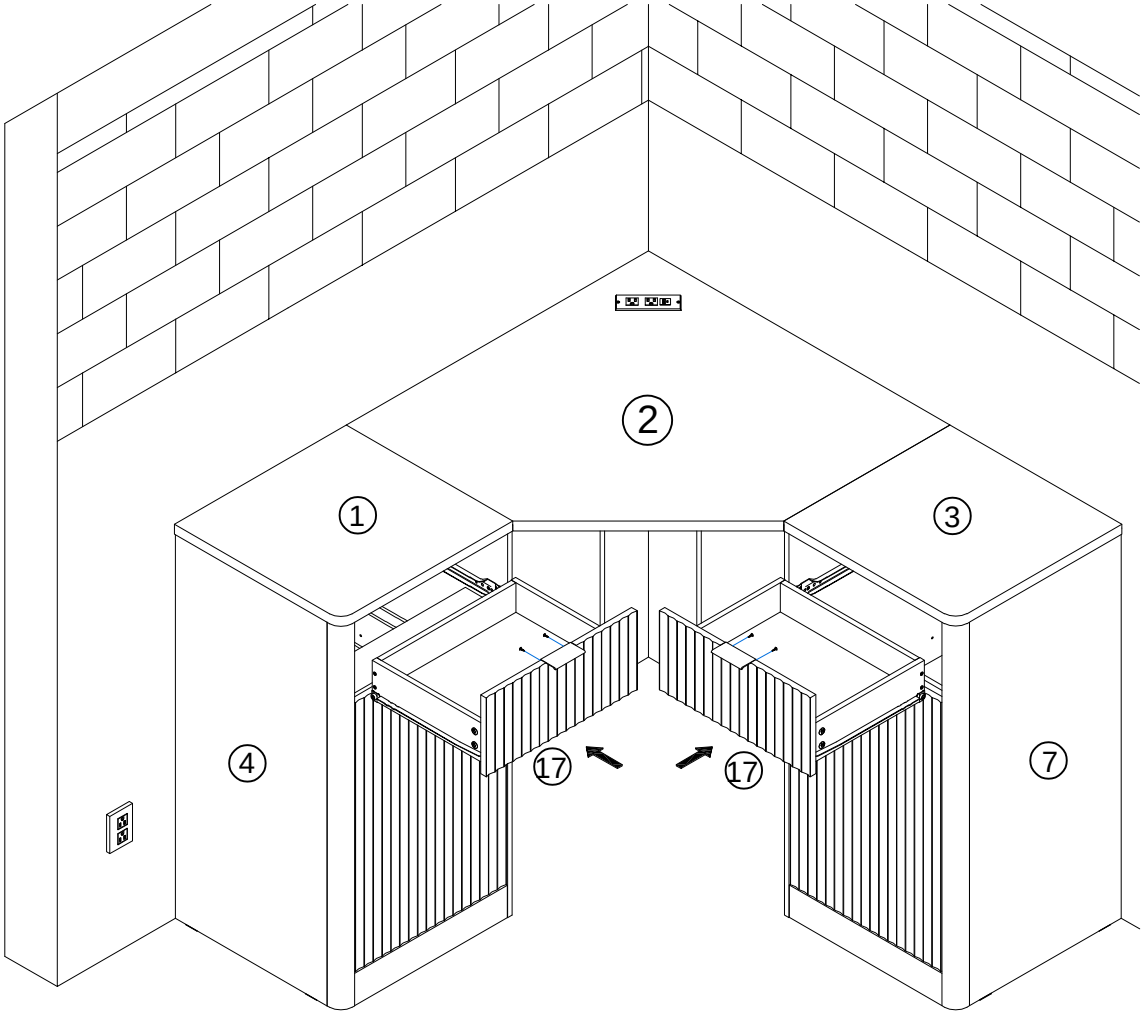

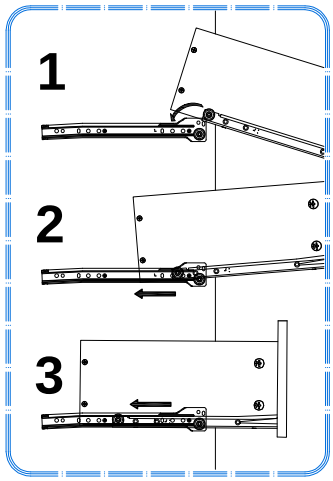


F	Ø3.5x12mm	x4
J		x2


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be epaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.


Components Name

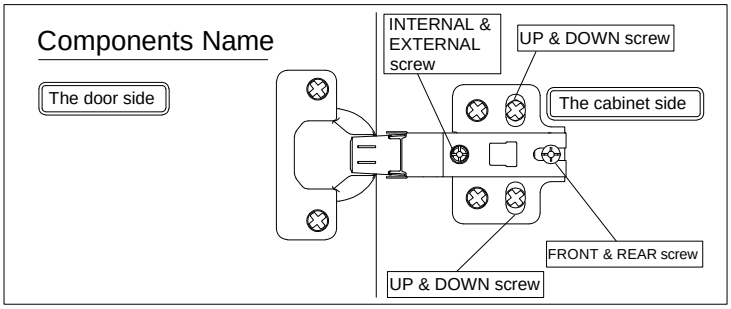

Obvious gaps between doors or Doors don't look closed

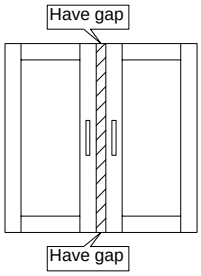


1 Turn"internal & external screw" fo the right can make the door approach inside. Please adjust the doors little by little..

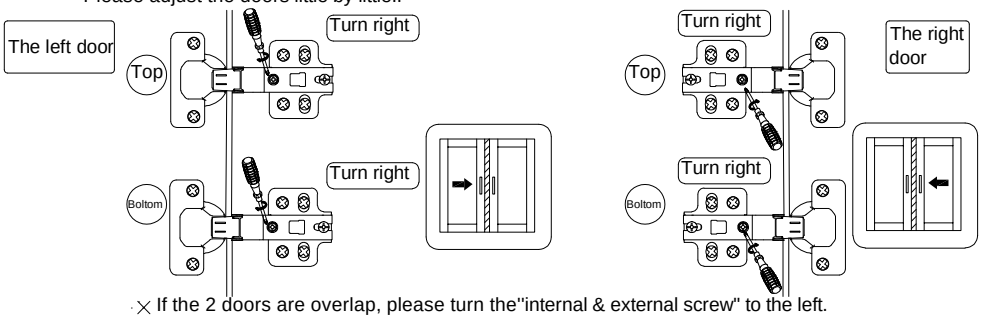


× If the 2 doors are overlap, please turn the"internal & external screw" to the left.

When door is crooked

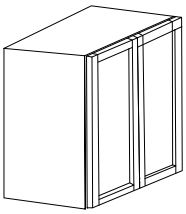


Please take the following steps to adjust first.

1 Rotate the "font and rear screws to the left

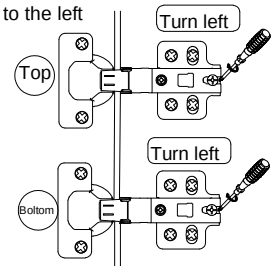


× After adjusting the "front and rear screw", the door still does not change, please turn the" internal & external screw" to the right Slightly.


2 Push the door to the cabinet

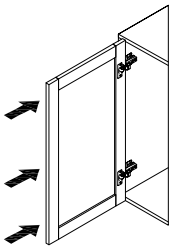


3 Rotate the "font and rear screws to the right

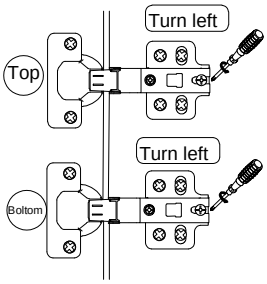


When door is leaning

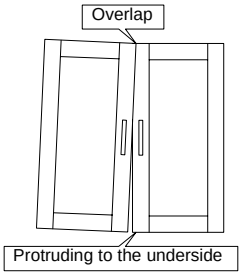


1 Turn "intemal & external screw" to the left can make the top of the door tilted outward.

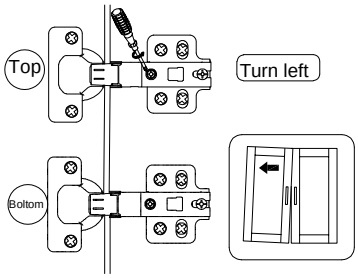


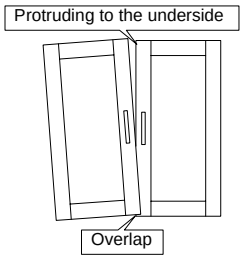


1 Turn "intemal & external screw" to the left can make the top of the door tilted outward.

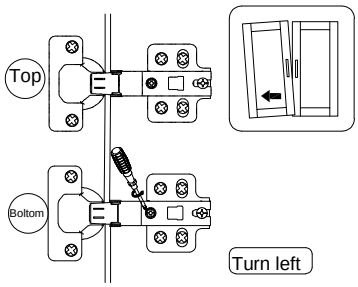


When door is higher on top

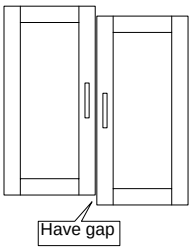


1 Turn "up & down screw" to the left

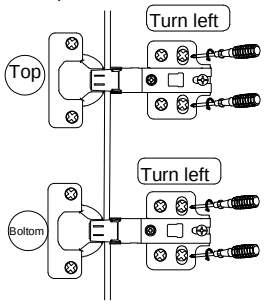

2 Lower the door's height so that 2 doors are of thesame height.

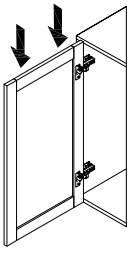

3 Turn "up & down screw" to the right

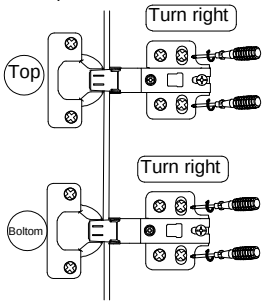

× if the door is lower on bottom, piease lift up the left door slightly on step 2

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied wich your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.

Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

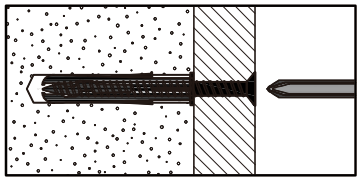


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.For light loads,general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

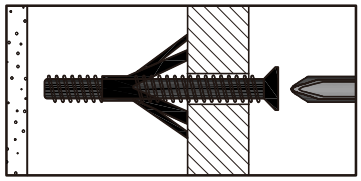


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

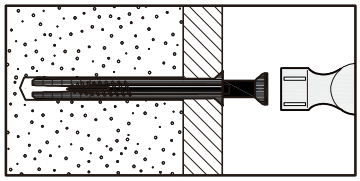


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

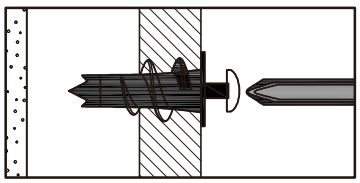


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing - Heavy Duty" wall plug

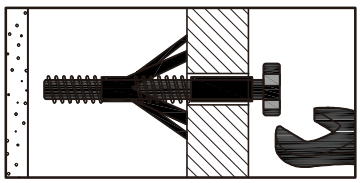

For use when fitting or supporting heavy loads such as shelving,wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug - heavy loads

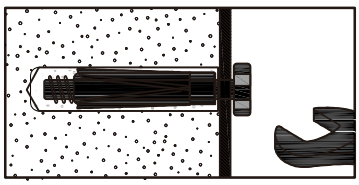


For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.

Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

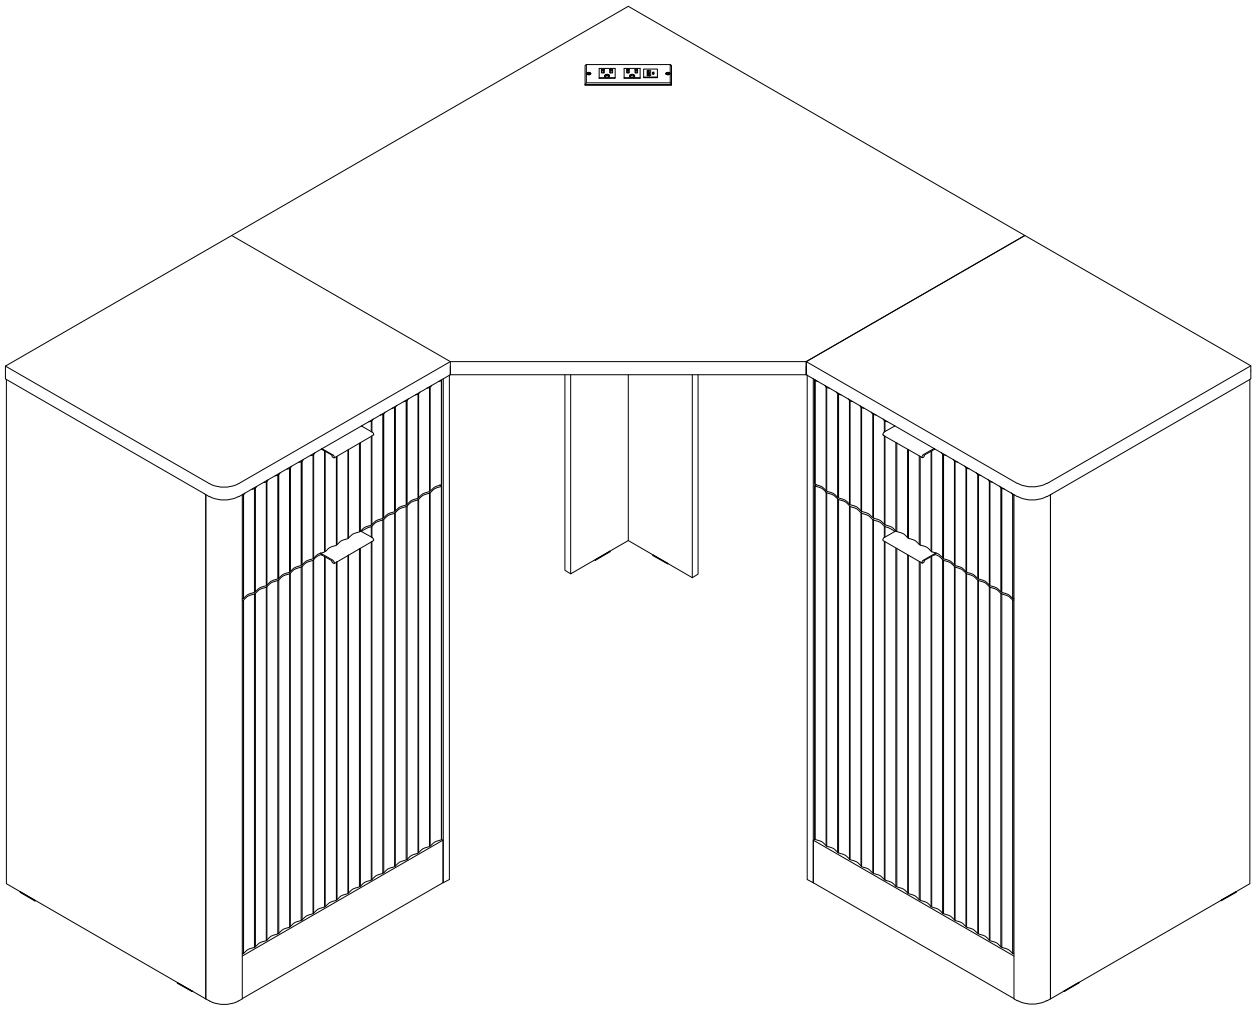

FINISH/ TERMINÉ

Made in Vietnam

Date of manufacture : 2026/08