




Installation Instructions

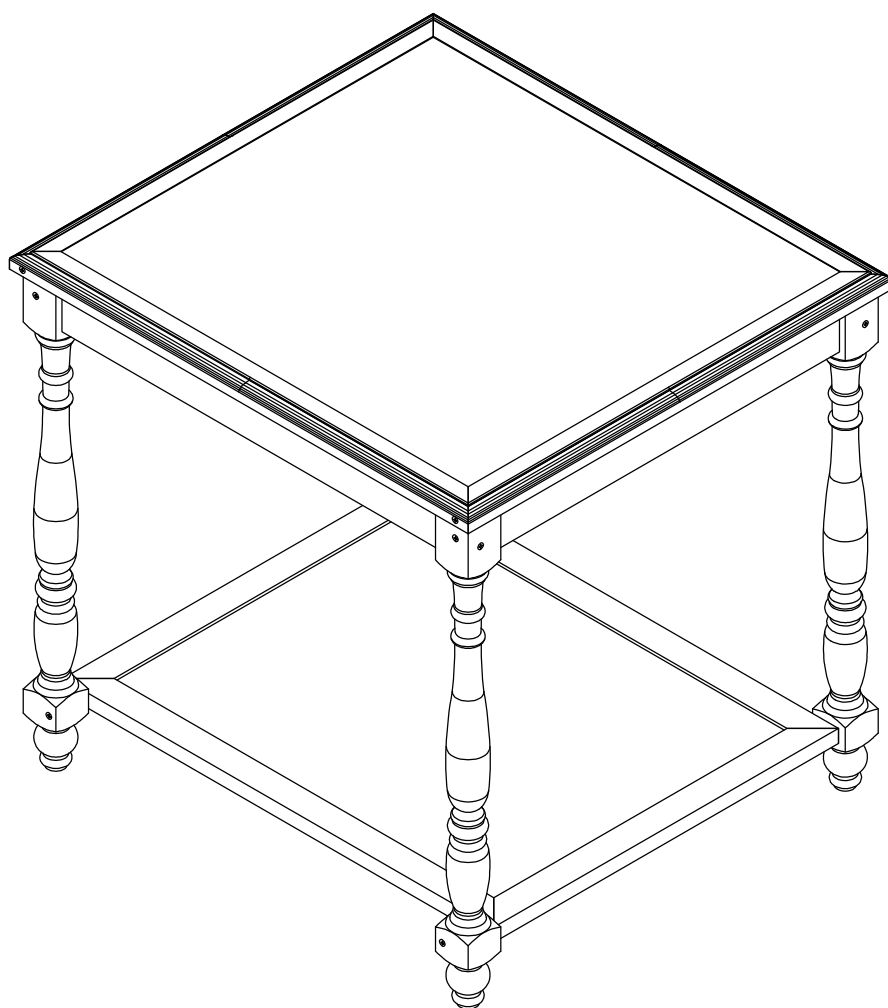


Board Identification

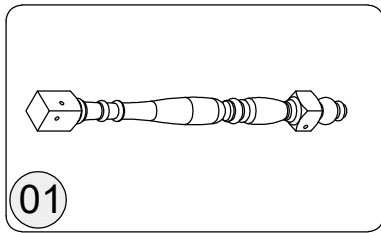


left foot
Qty:2

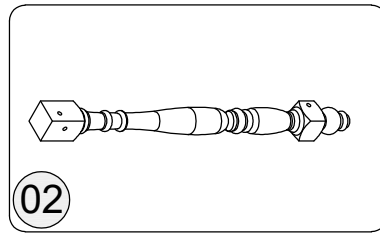


right foot
Qty:2

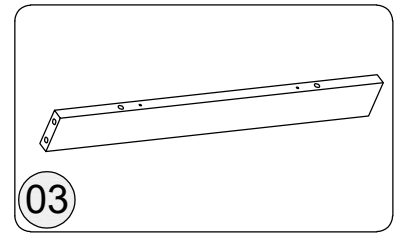


Long pull board
Qty:2

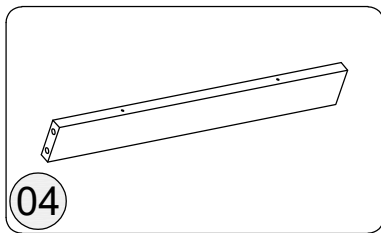

Short pull board
Qty:2

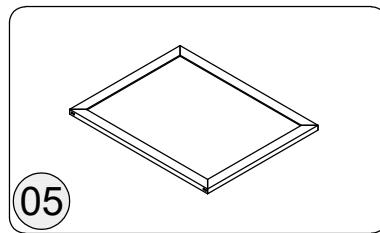


base
Qty:1

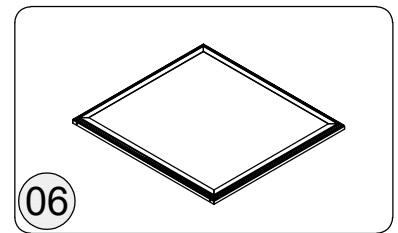


panel
Qty:1


Hardware Identification

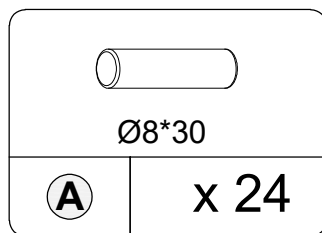


Wooden tenons

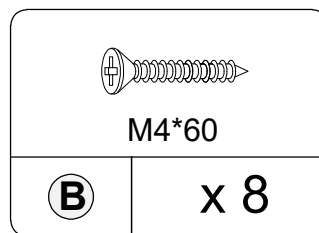

Screw

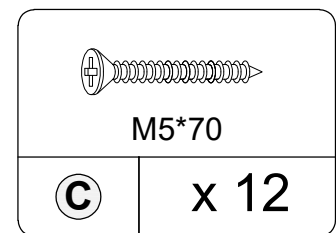


Screw

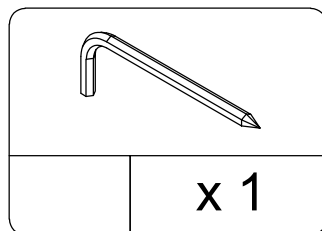


Hex key


Step 1

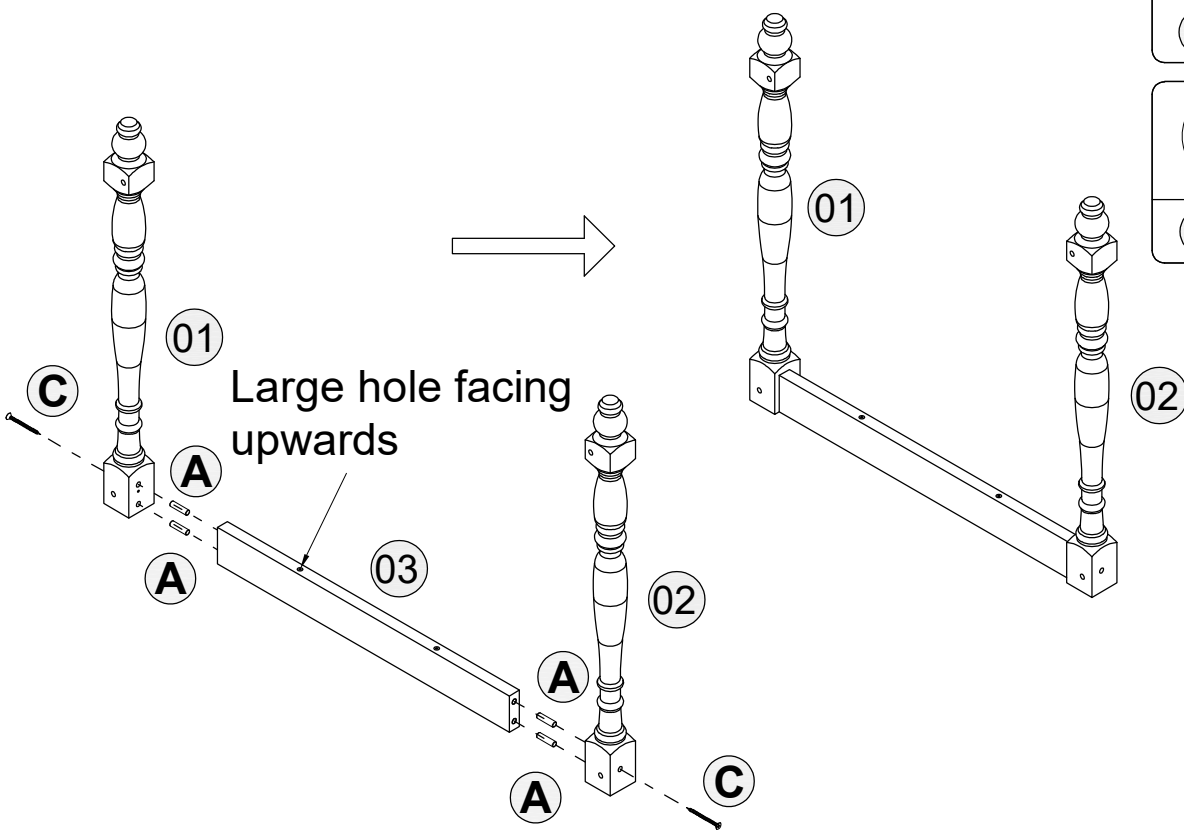



Step 2

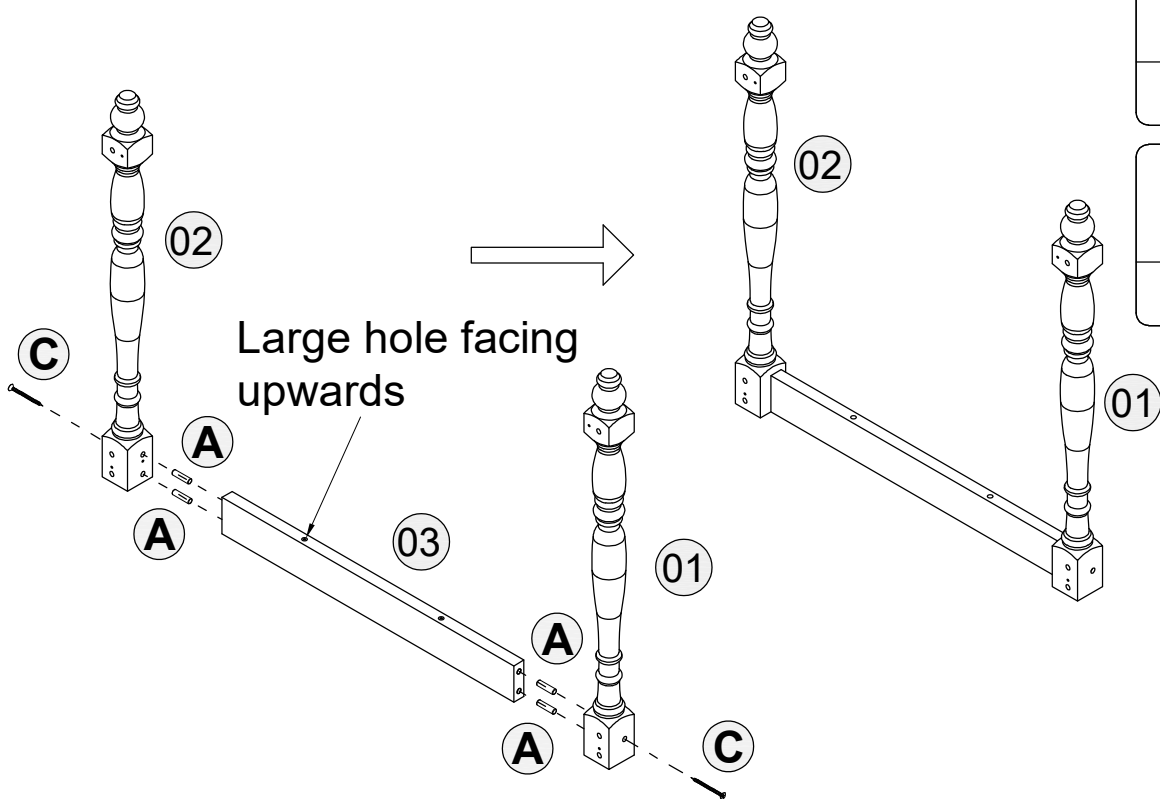


Step 3

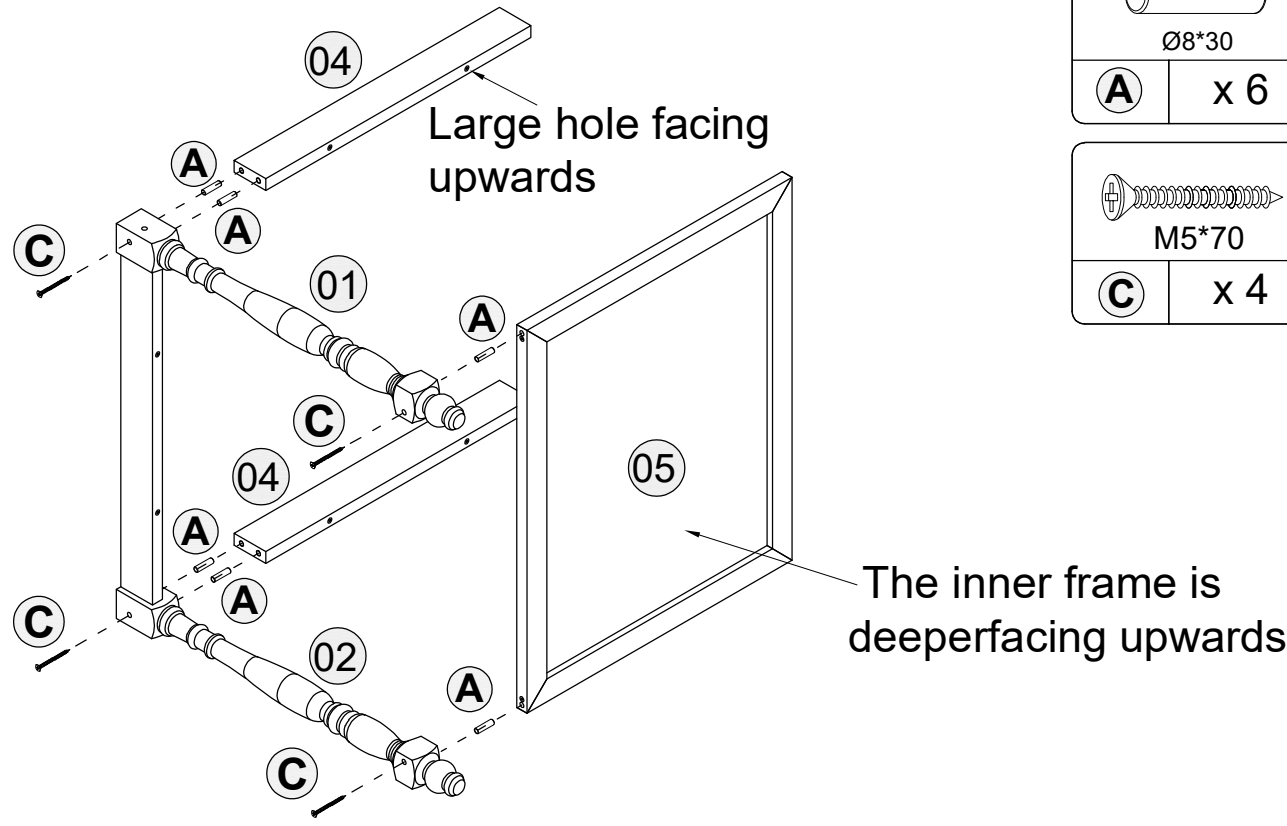


 Ø8*30	
A	x 6

 M5*70	
C	x 4



Step 4

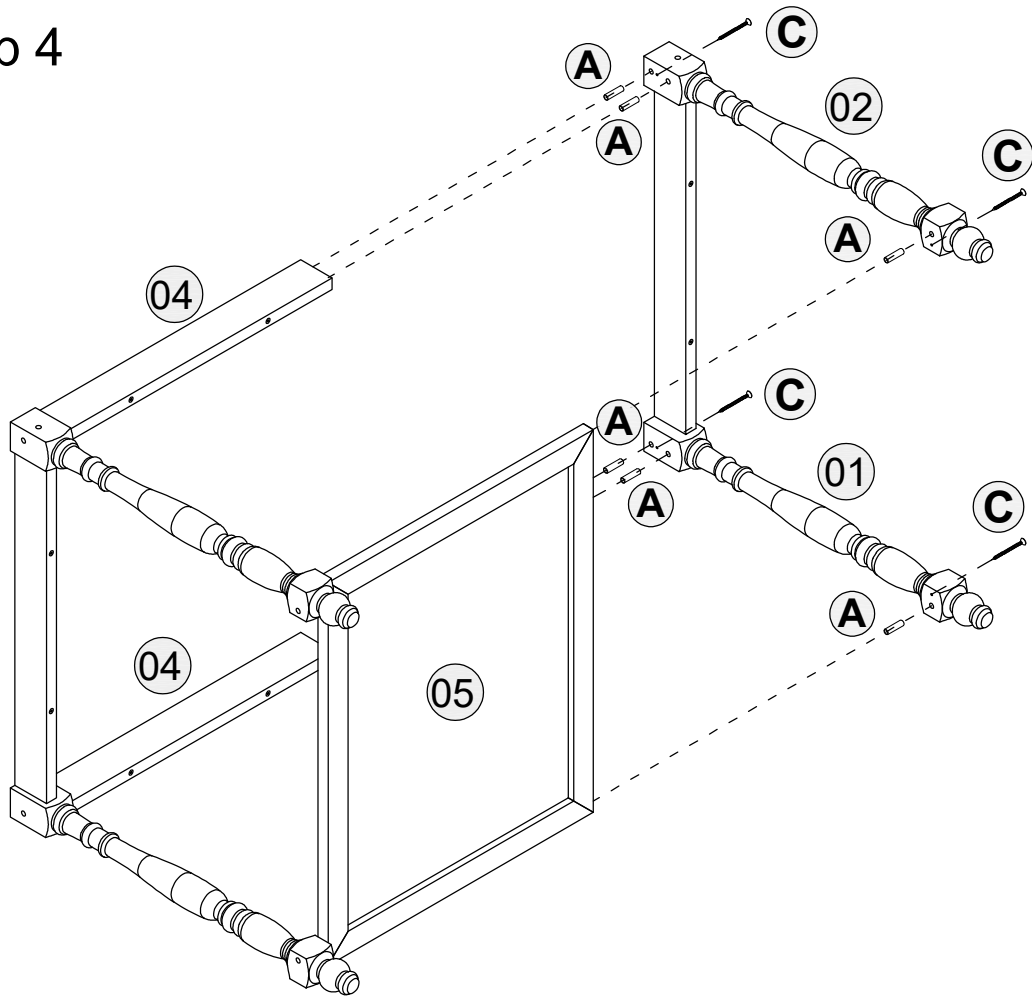

 Ø8*30	
A	x 6

 M5*70	
C	x 4

Step 5

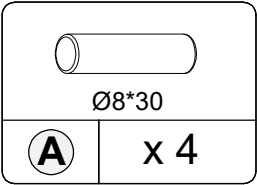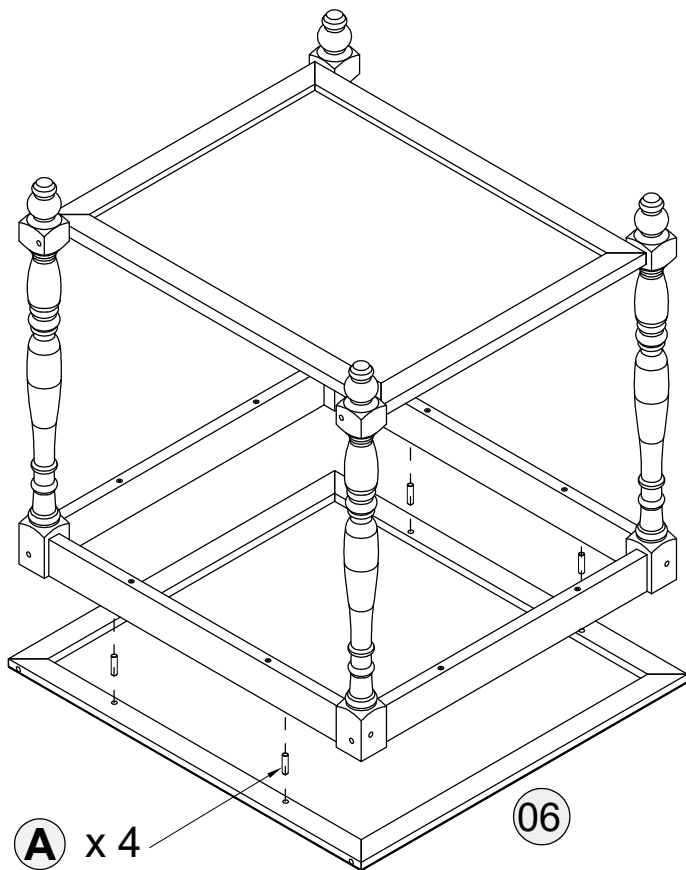

Step 6

