



Assembly Manual

Cabinet

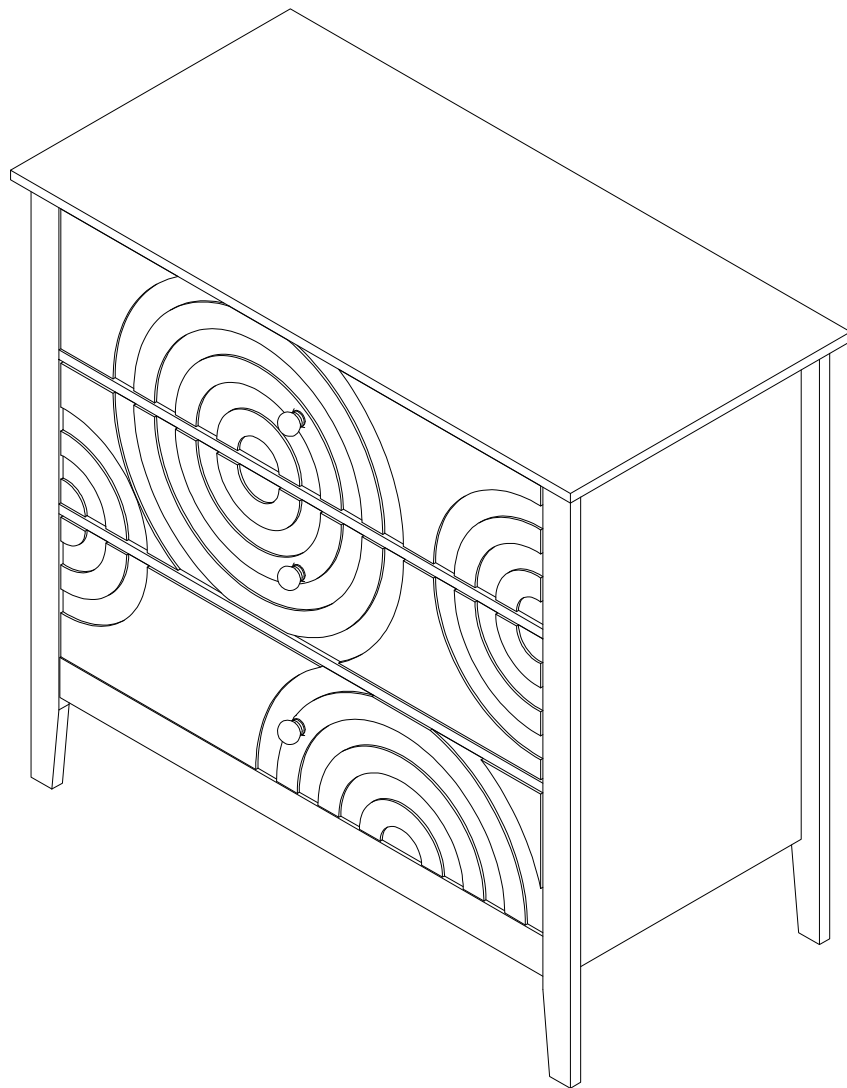


Please read this manual carefully before any operation and keep it properly for future use.

Exploded View

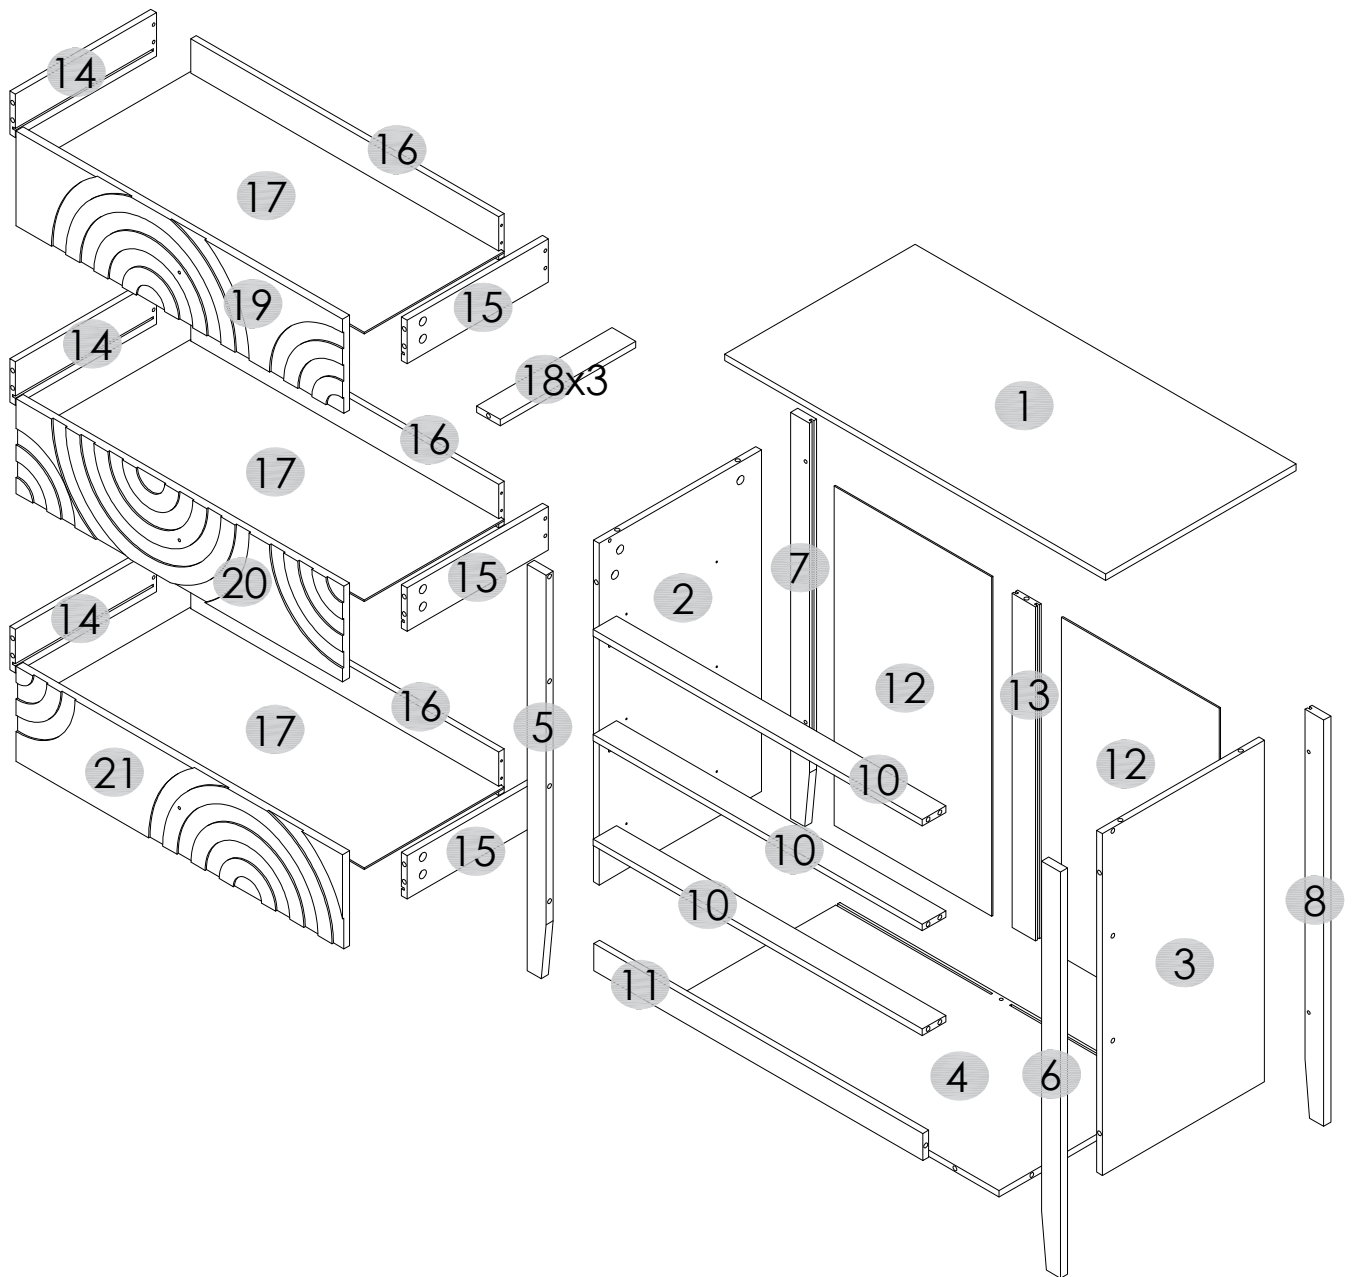


Warnings

ATTENTION:

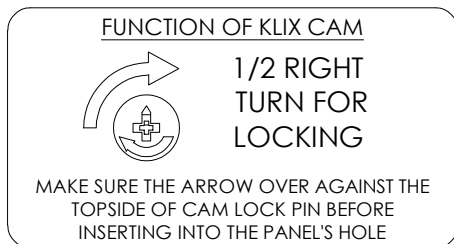

IMPORTANT!

After 180° right turn, if there is a gap between the boards, please check whether the cam lock pin is tightened enough.

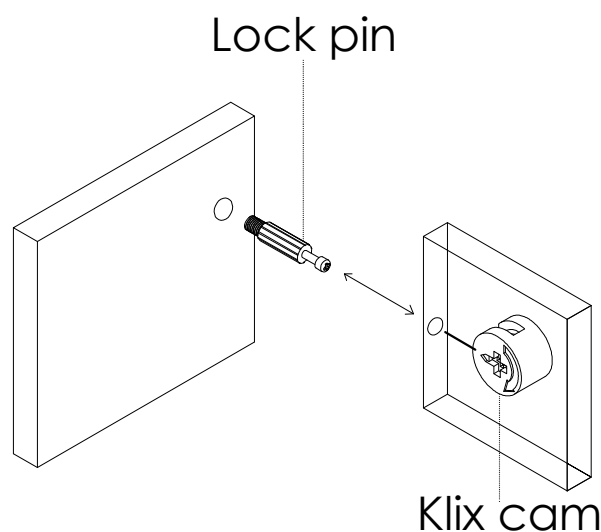


Components List

A Cam lock pin (M6*40(*30+2))	B Klix cam (ø15*9.5(*30+2))	C Screw (M5*40(*29+2))	D Screw (M4*12(*12+2))
E Slide rail(*3)	F Knob(*3)	G Screw (M4*12(*12+2))	H Backboard fastener (*8)
I wood chip (*8+2)	J Decorative sticker(*11+2)	X Screwdriver (*1)	Z Anti-tip kit *1

Components List


45^{min}

Assembly Time




Two People

1

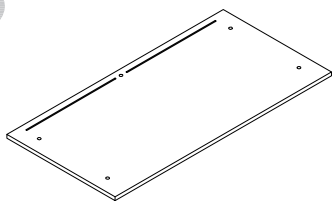


1PC

2

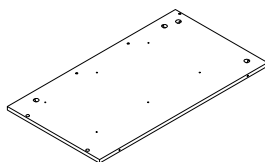


1PC

3

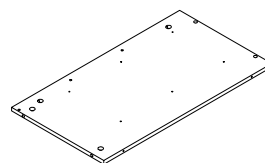


1PC

4

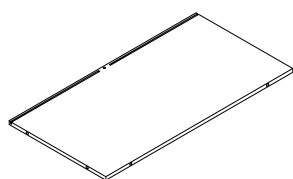


1PC

5

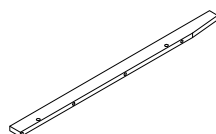

1PC

6

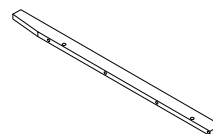


1PC

7




1PC

8

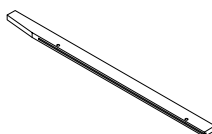


1PC

10

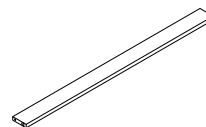


3PCS

11

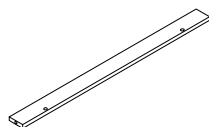


1PC

12

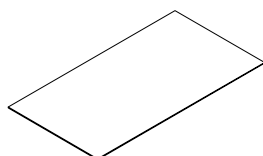


2PCS

13




1PC

14




3PCS

15




3PCS

16

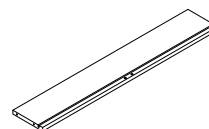

3PCS

17

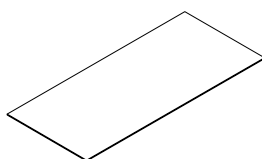


3PCS

18




3PCS

19

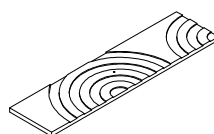


1PC

20

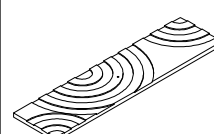

1PC

21

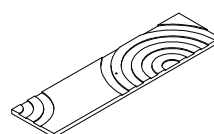


1PC

Assembly Instruction

STEP 1

Screw cam lock pins(A) into holes on boards(5&6).

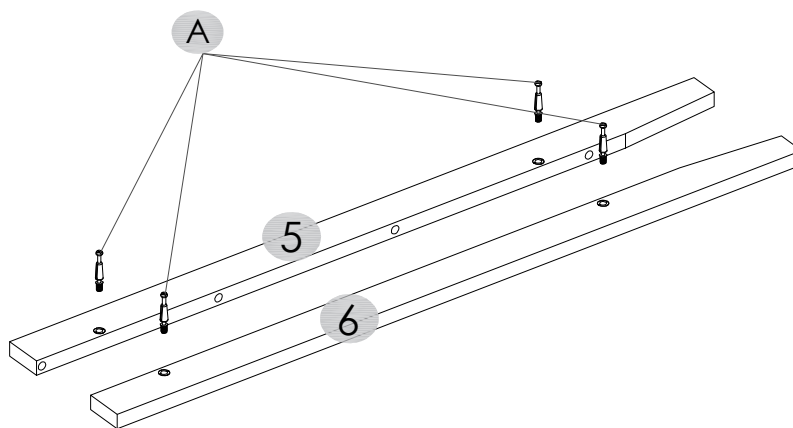


A



X 4

STEP 2

Attach board(2) to board(7) and attach board(3) to board(8) using screws(C), then attach board(5) to board(2) and attach board(6) to board(3), then lock them using klix cams(B). Regarding the usage of Klix cam, please refer to warning on Page 2.

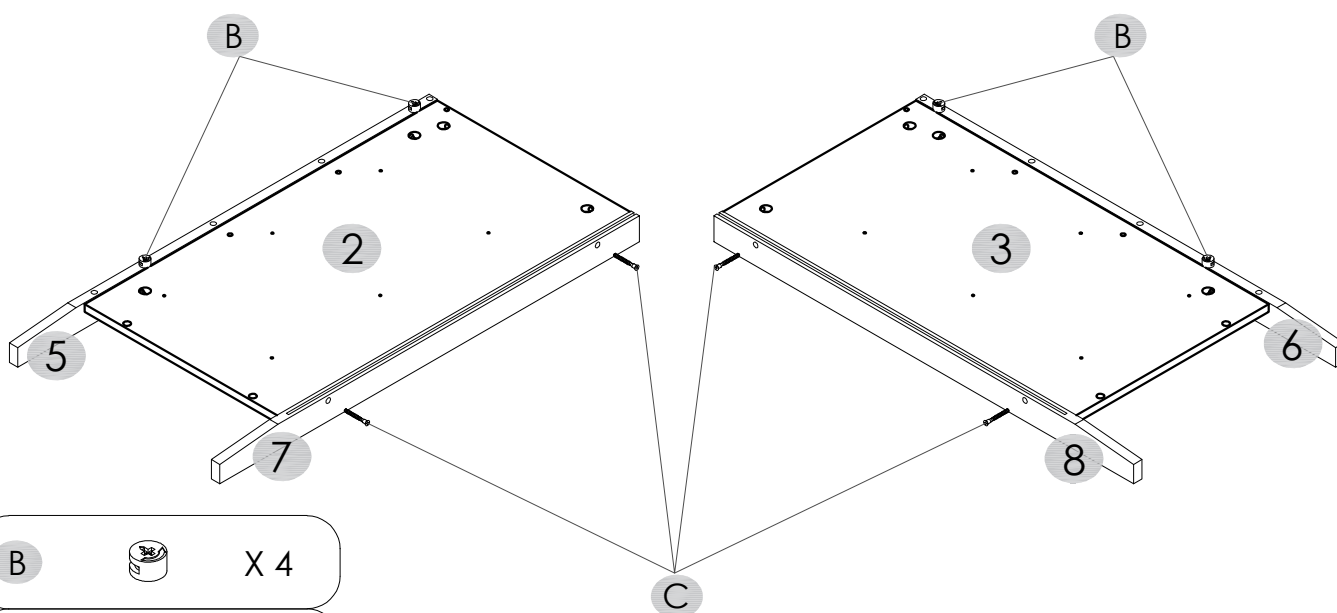

B



X 4

C




X 4

Assembly Instruction


STEP 3

Install the slide rail(E) on the boards(2&3) using screws(D), then screw lock pins(A) into boards(2&3) using screwdriver(X).

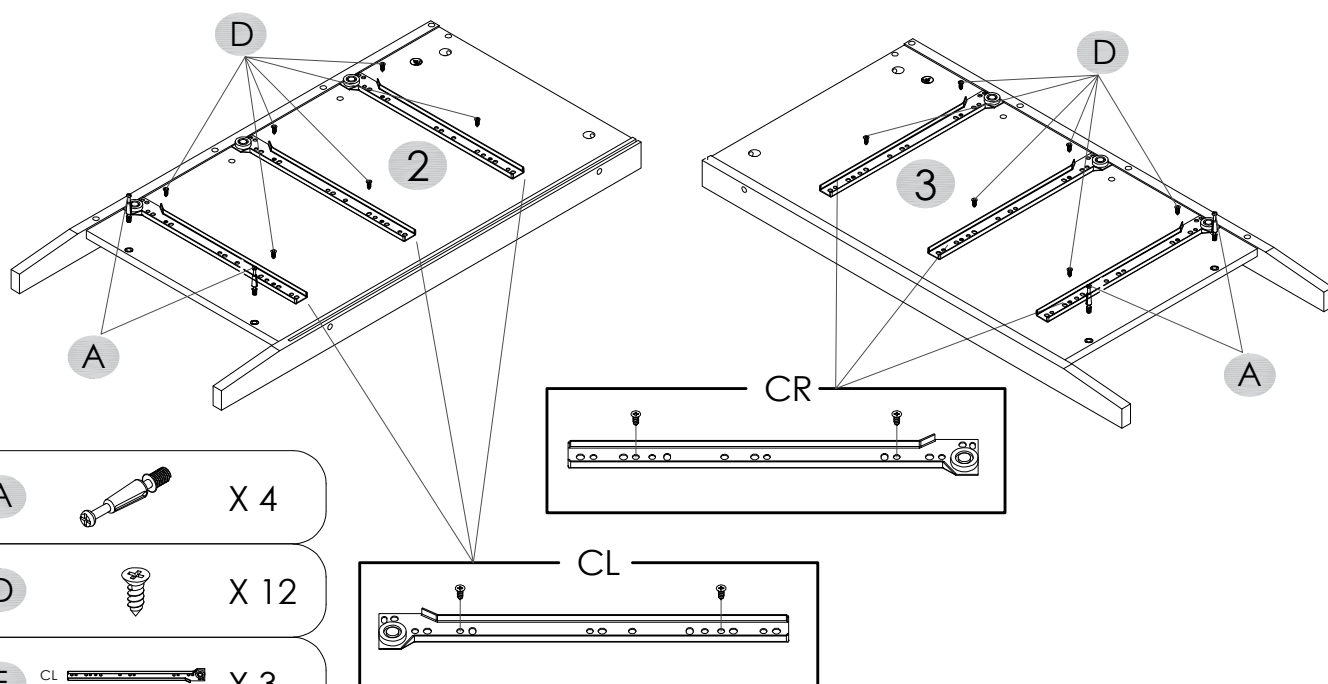

STEP 4


Insert the wood chips(I) into the board(11). Then screw lock pins(A) into board(11) using screwdriver(X). And then attach board(4) to board(11), lock them using klix cams(B). Regarding the usage of Klix cam, please refer to warning on Page 2.

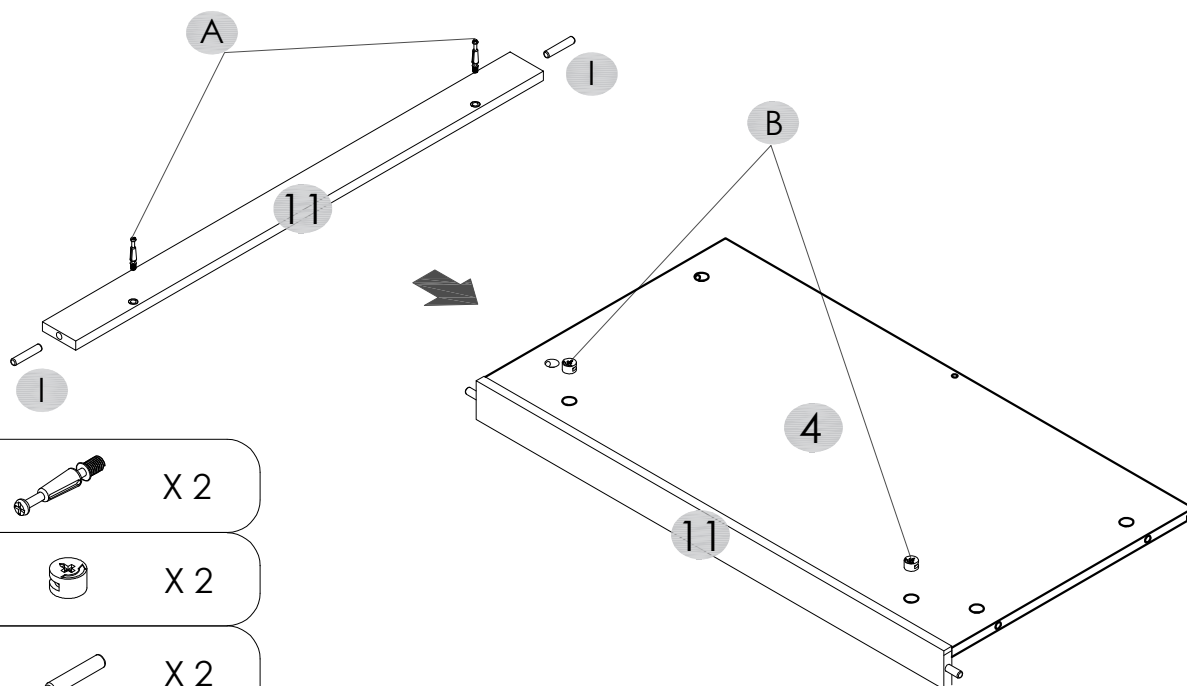

Assembly Instruction

STEP 5

Attach board(13) to board(4) using screws(C) and screwdriver(X).

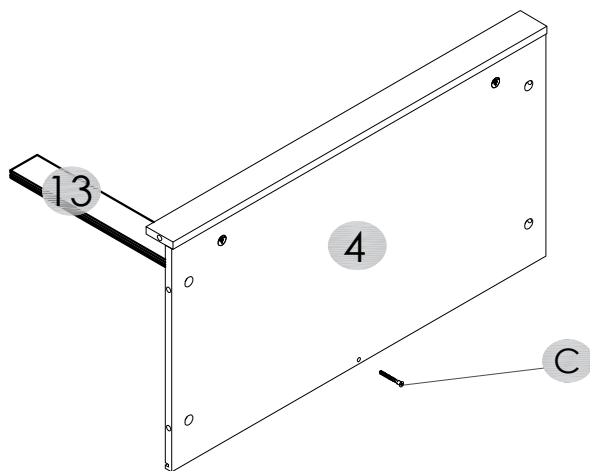


C



X 1

STEP 6

Insert the wood chips(I) into the boards(10).

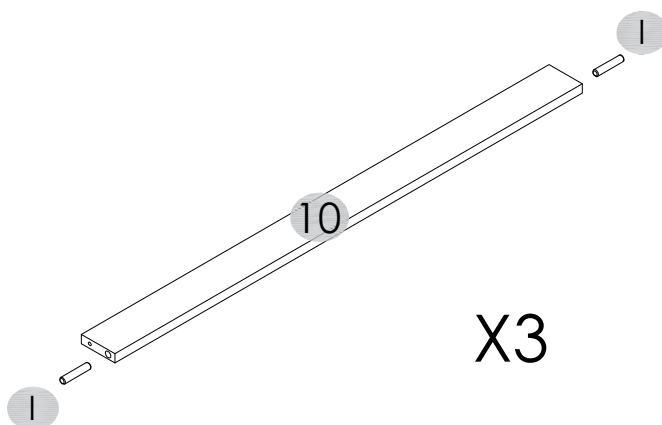

I




X 6

Assembly Instruction

STEP 7

Attach boards(10&11) to boards(2&3) as shown below, then attach them using screws(C). And then lock board(4) and boards(2&3) using klix cams(B). Regarding the usage of Klix cam, please refer to warning on Page 2.

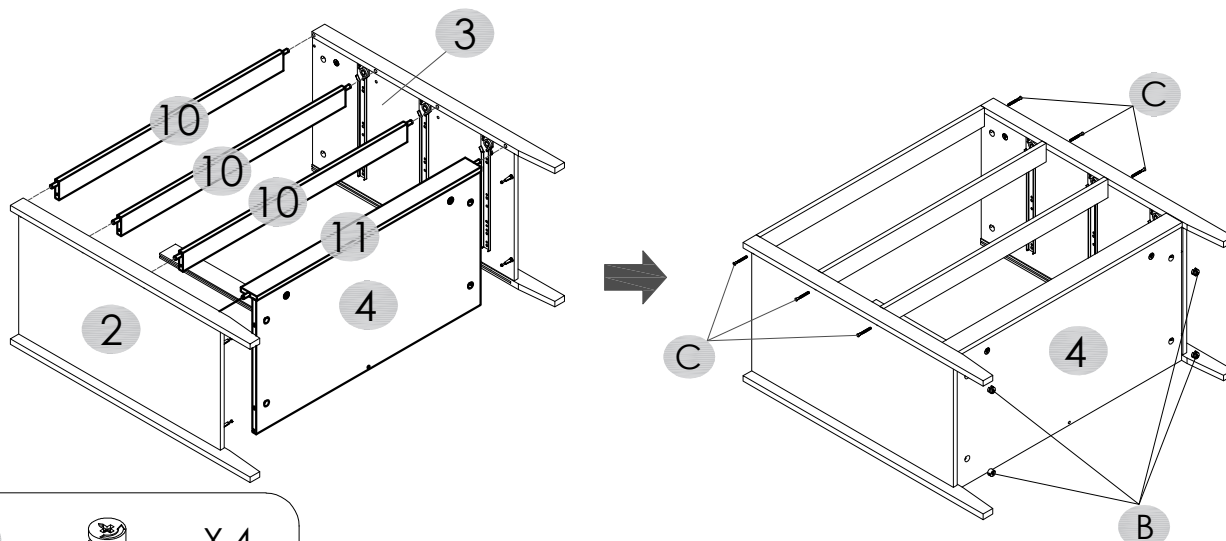

B



X 4


C



X 6

STEP 8


Insert boards(12) into slots on boards(2,3&13).

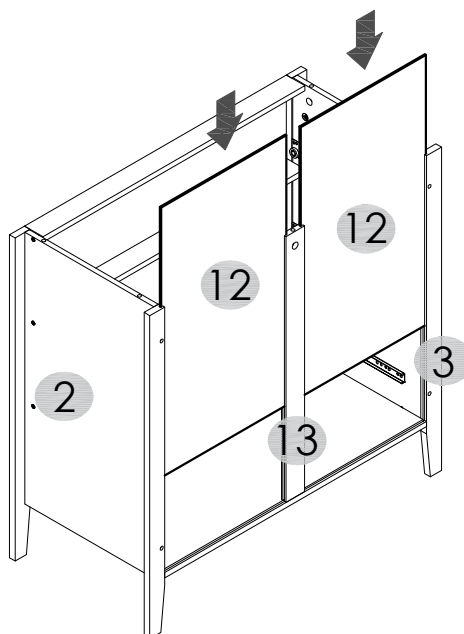

Assembly Instruction

STEP 9

Screw cam lock pins(A) into holes on board(1).

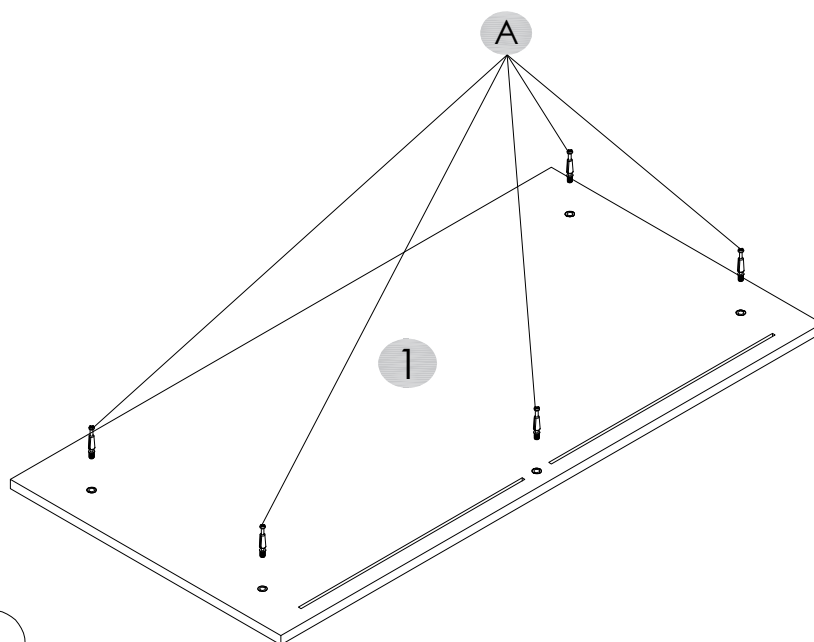


A



X 5

STEP 10

Attach board(1) to boards(2&3), then lock them using klix cams (B). Regarding the usage of Klix cam, please refer to warning on Page 2.

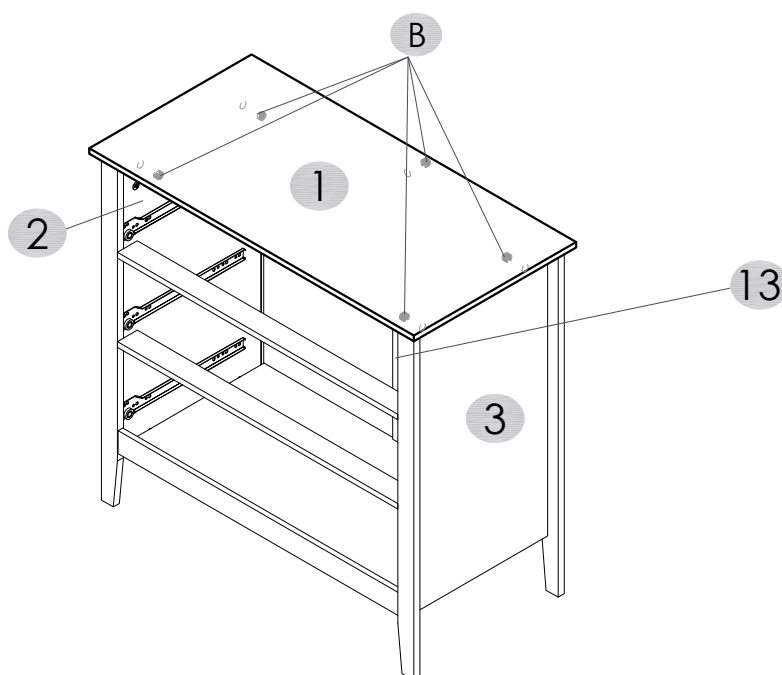

B




X 5

Assembly Instruction

STEP 11

Screw cam lock pins(A) into holes on boards(19&20&21).

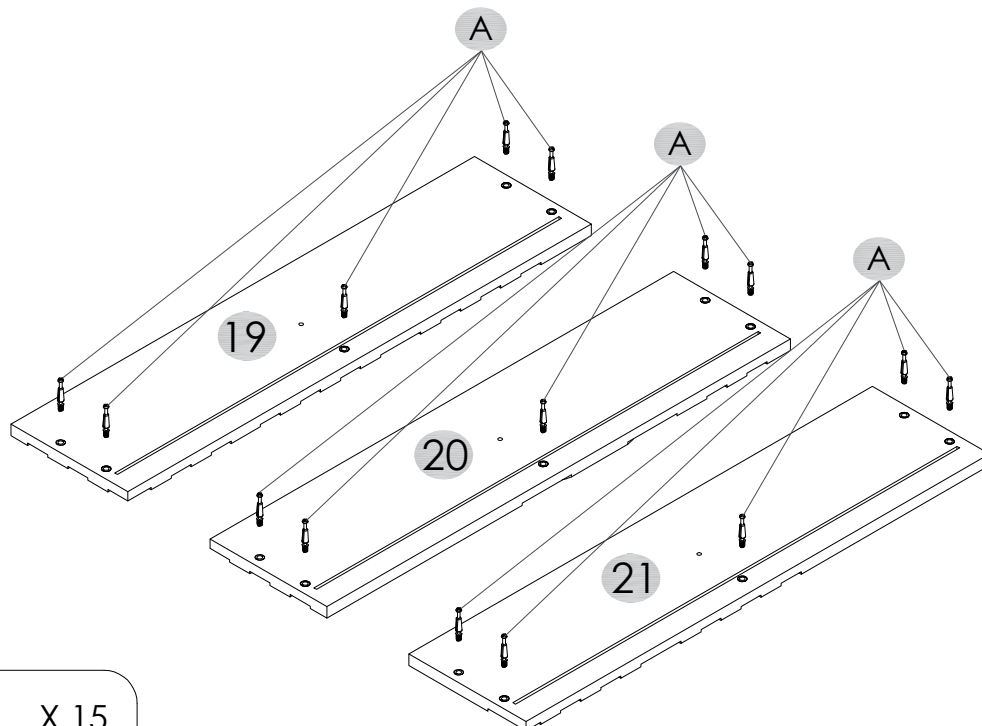

A




X 15

STEP 12

Attach boards(16) to boards(14,15&18) using screws(C) and screwdriver(X).

Note: When installing the board(18), first check that the cam lock pin hole positions **face downward**. Align the holes with the corresponding connectors to avoid reverse installation.

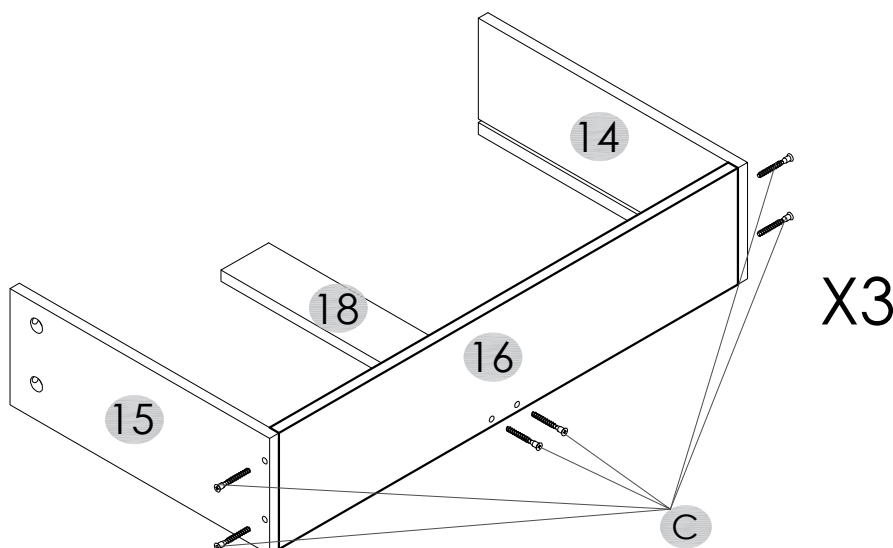

X3

C




X 18

Assembly Instruction


STEP 13

Insert boards(17) into slots on boards(14,15&16).

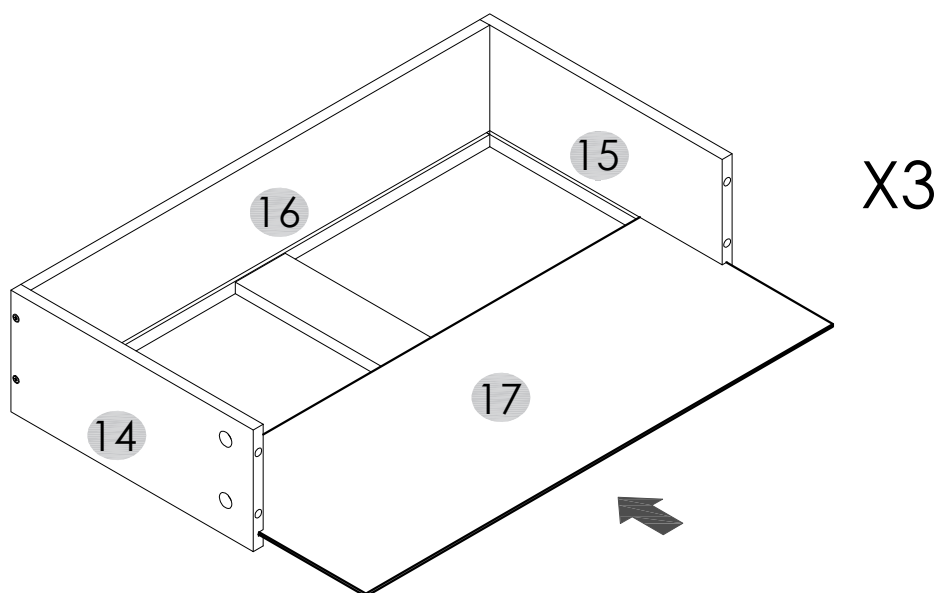

STEP 14


Attach boards(19,20&21) to boards(14&15) and lock them in place by turning the Klix cams(B).

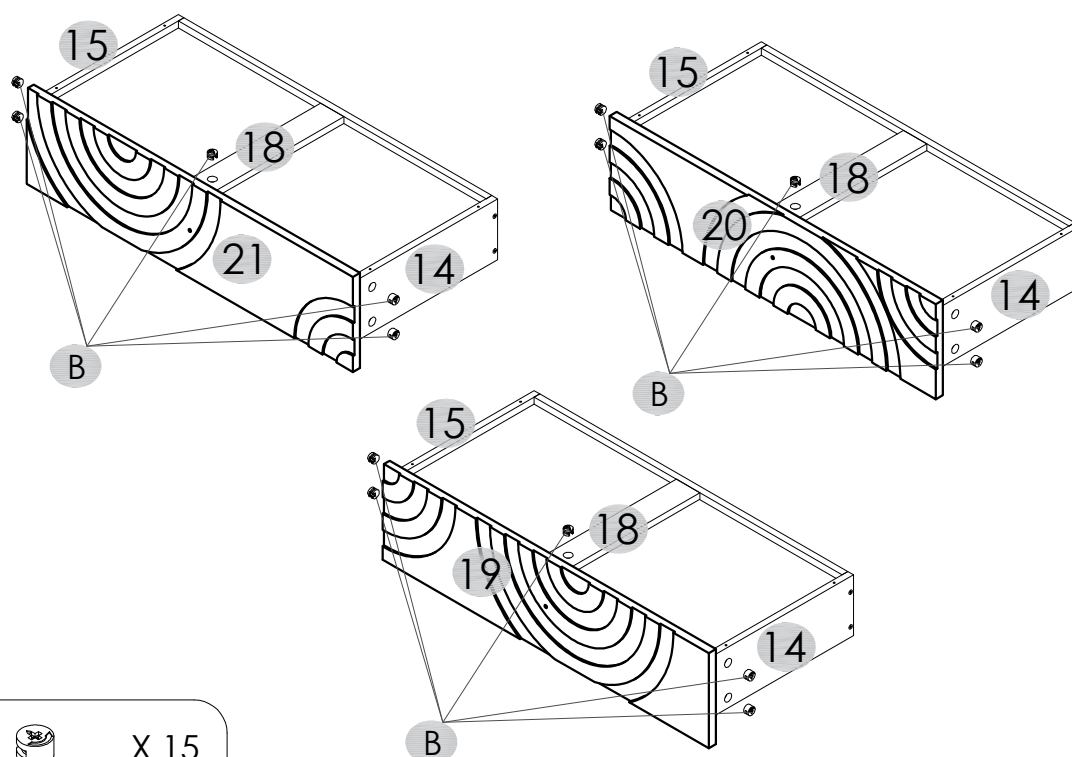

Assembly Instruction


STEP 15

Attach rails(E) to the boards(14&15) using screws(G) and screwdriver(X).

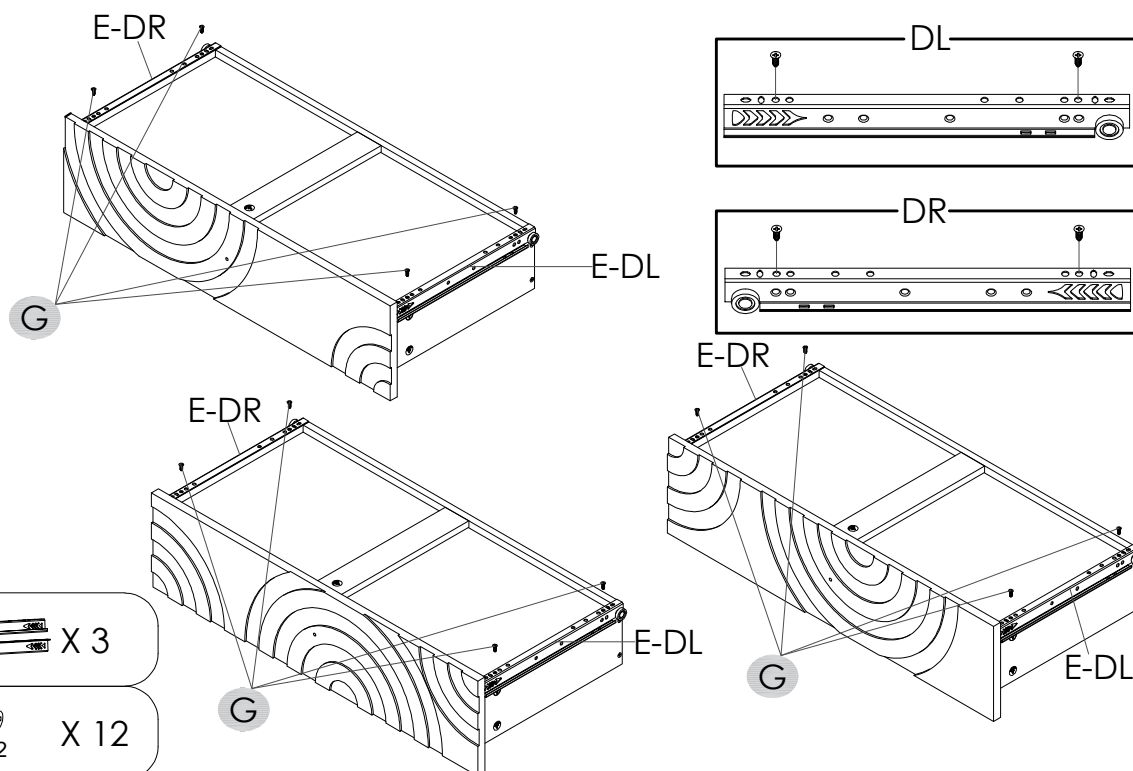


STEP 16

Attach handles(F) to the boards(19,20&21) using screw of handle.


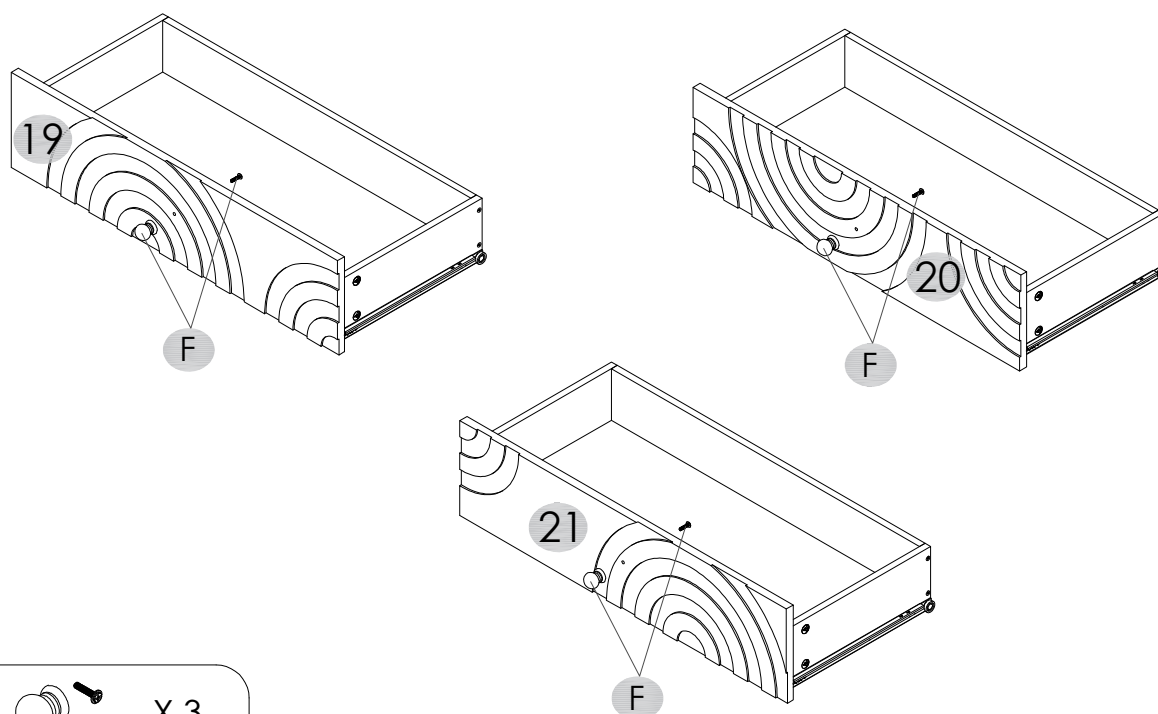


Assembly Instruction

STEP 17 Insert the drawers into the cabinet as shown below.

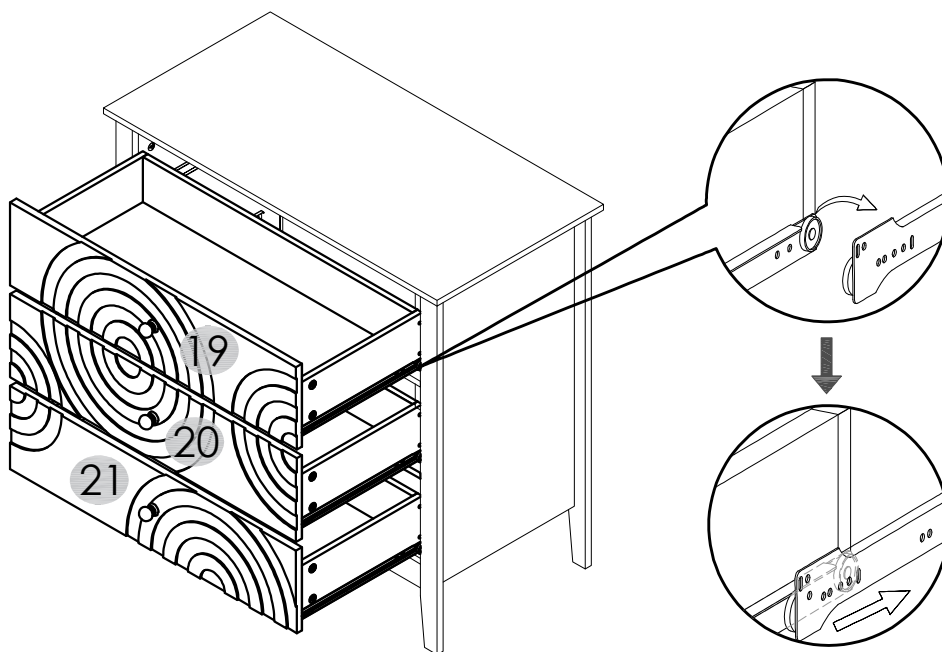

STEP 18 Install the backboard fasteners(H) onto the backboard as shown below.

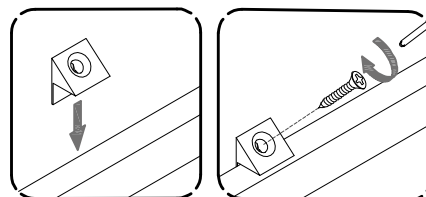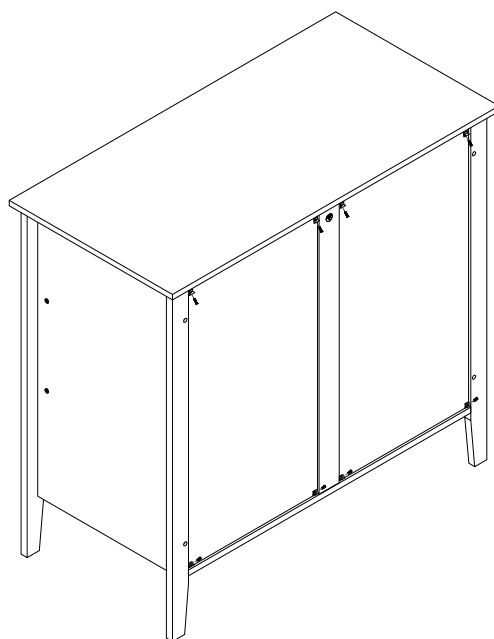

H





X 8


Assembly Instruction

STEP 19

Choose a mounting location on the wall and drill a pilot hole using an electric drill (not included - you will need to supply your own). Insert the anchor sleeve(Z3) from the anti-tip kit into the hole in the wall. Then attach the angle iron(Z1) to the wall using screws(Z4).



WALL

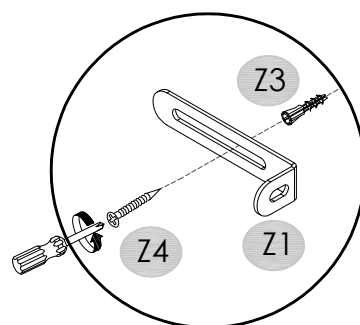

Z





Z3

ST4*35

X 1

STEP 20

Fix the other end of the angle irons(Z1) to the left and right side panels as shown in the figure and lock them with screws (Z2).

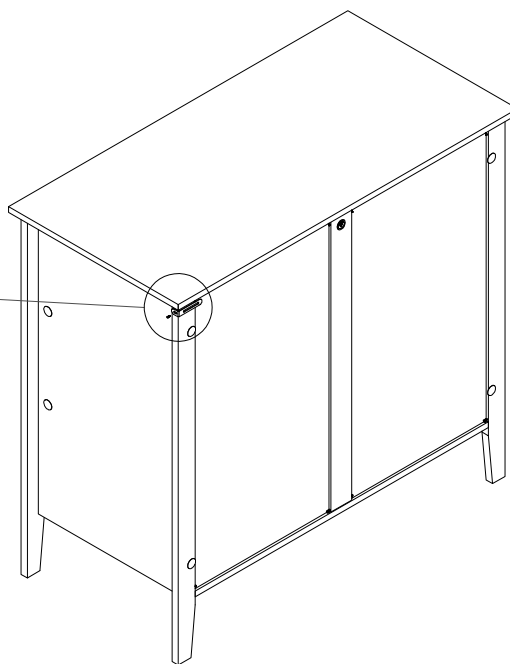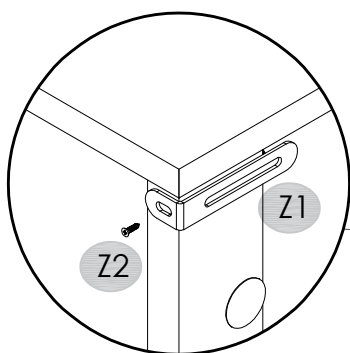

L



X 11

Z



ST4*16

X 1