

ASSEMBLY INSTRUCTION


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





















Warning !








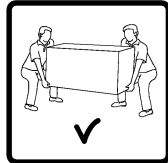








- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

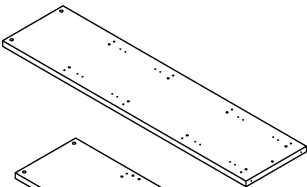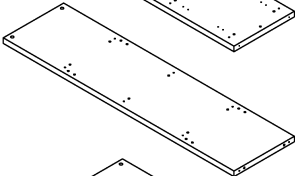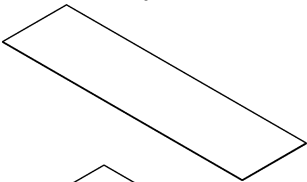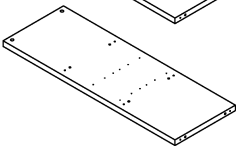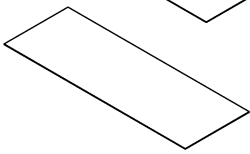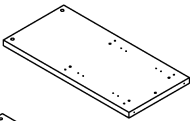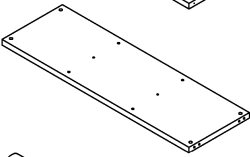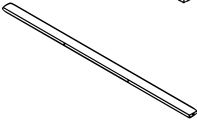





ASSEMBLY TIME PER UNIT: 120 MINUTES

PARTS IDENTIFICATION:

(A) LEFT SIDE PANEL		1PC	(J) DOOR		3PCS
(B) LEFT DIVIDER PANEL		1PC	(K) LEFT BACK PANEL		1PC
(C) RIGHT DIVIDER PANEL		1PC	(L) MIDDLE BACK PANEL		1PC
(D) RIGHT SIDE PANEL		1PC	(M) RIGHT BACK PANEL		1PC
(E) BOTTOM PANEL		1PC	(N) DRAWER FRONT PANEL		2PCS
(F) CROSS BRACE		1PC	(O) DRAWER BACK PANEL		2PCS
(G) CROSS PANEL		6PCS	(P) LEFT DRAWER SIDE PANEL		2PCS
(H) LEFT TOP PANEL		1PC	(Q) RIGHT DRAWER SIDE PANEL		2PCS
(I) RIGHT TOP PANEL		2PCS	(R) DRAWER BOTTOM PANEL		2PCS

Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1PC	9	PLASTIC FEET ϕ 15mm		6PCS
2	WOODEN DOWEL ϕ 8x30mm		56PCS	10	HANDLE		5PCS
3	CAM BOLT ϕ 7x35.5mm		44PCS	11	SHORT BOLT ϕ 4x23mm		5PCS
4	CAM LOCK ϕ 15x12mm		44PCS	12	HINGE		6PCS
5	LONG BOLT ϕ 9.5x55mm		4PCS	13	SCREW ϕ 4x15mm FOR HINGE		24PCS
6	LONG SCREW ϕ 4.3x35mm		8PCS	14	DOOR CATCH		3PCS
7	RAIL L = 350mm		2SET	15	NAIL		64PCS
8	SHORT SCREW ϕ 3x10mm		24PCS	16	STICKER ϕ 20mm		8PCS

Z7,Z10,Z12 not included in blister packaging.


Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
17	ANTI-TIP STRAP 170x15mm		2PCS	19	WALL SCREW ϕ 4x25mm		2PCS
18	WALL PLUG 6x30mm		2PCS	20	SCREW ϕ 4x16mm		2PCS

STEP 1 :

②
x 8

③
x 12

⑨
x 6

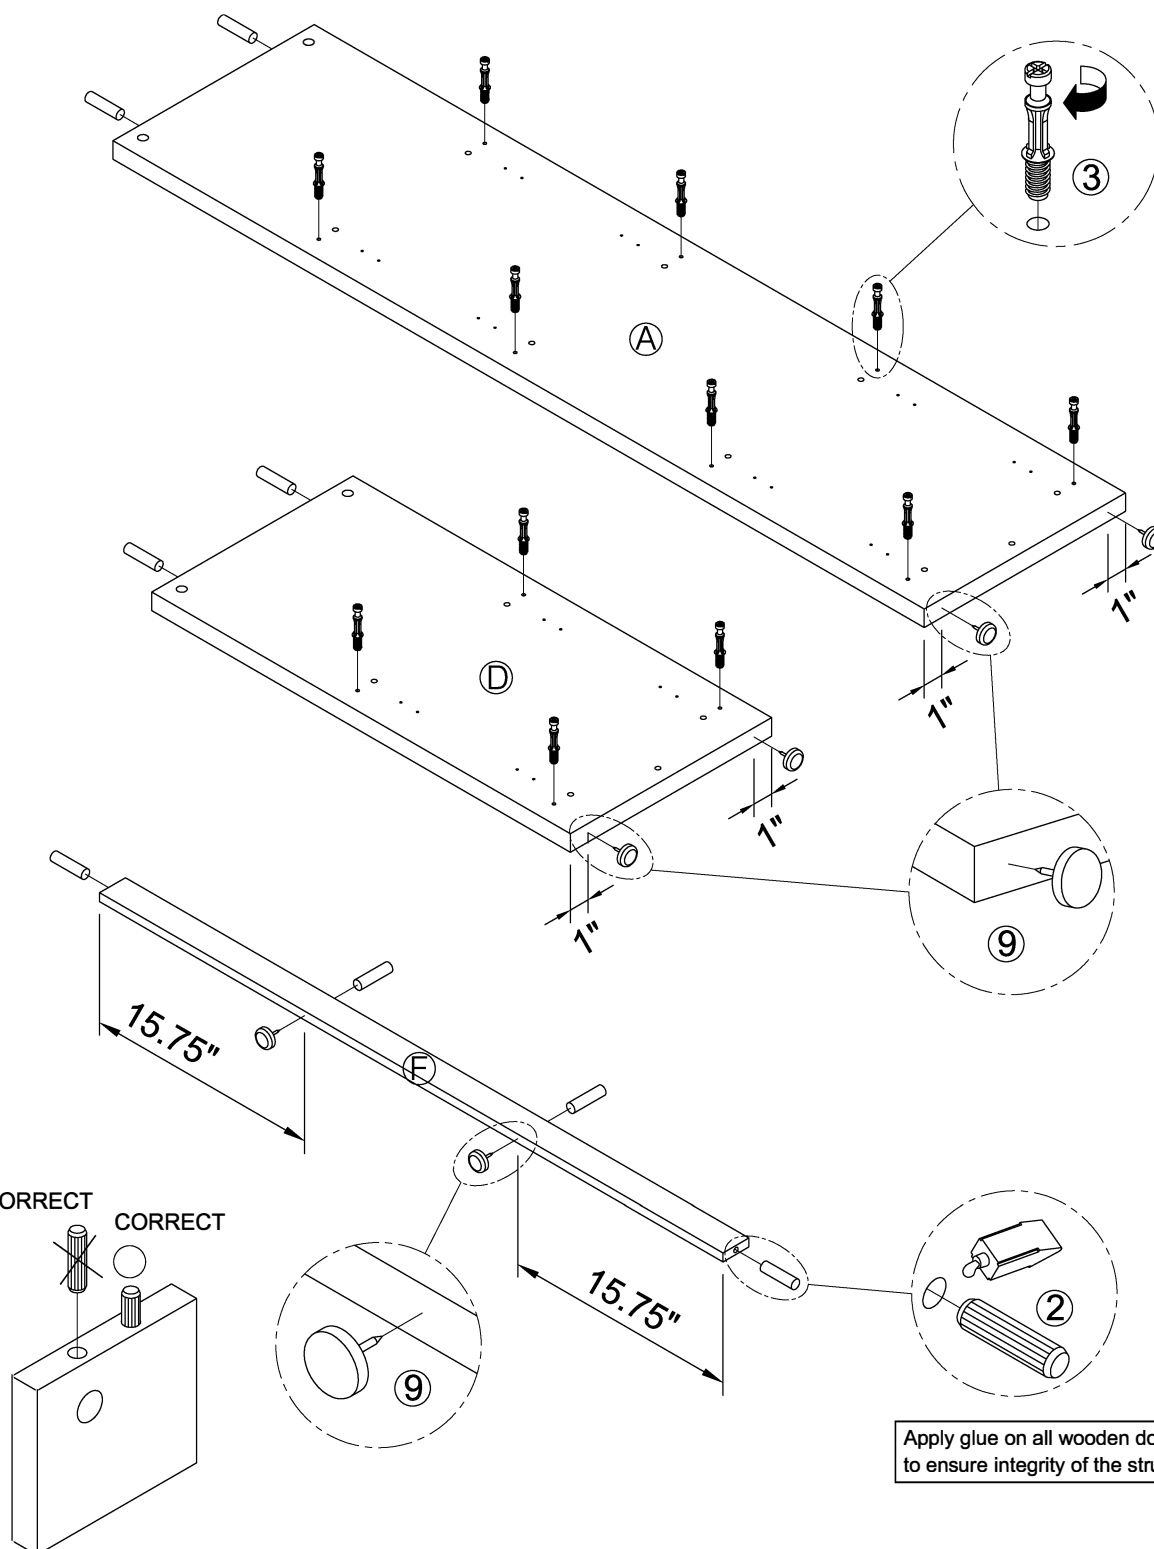



INCORRECT
CORRECT

Apply glue on all wooden dowels
to ensure integrity of the structure.




STEP 2 :

②
x 32



③
x 8

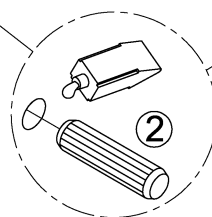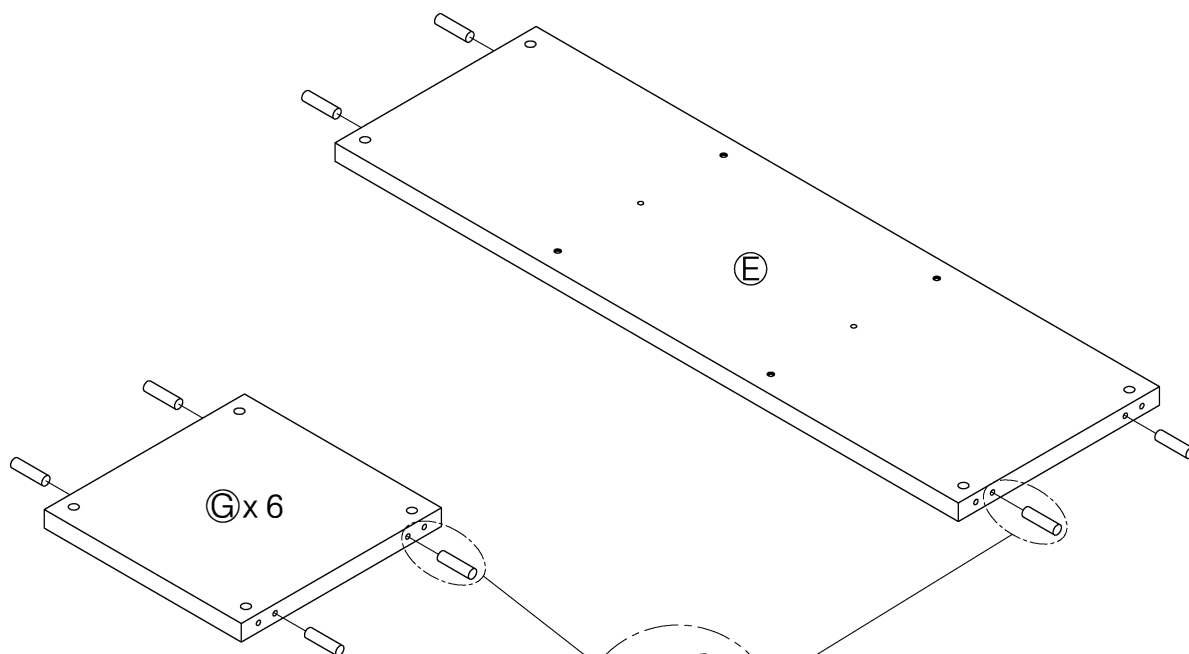




Apply glue on all wooden dowels
to ensure integrity of the structure.

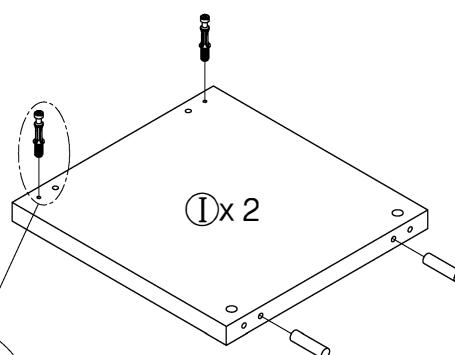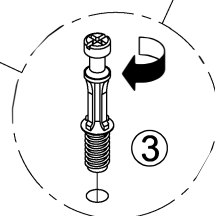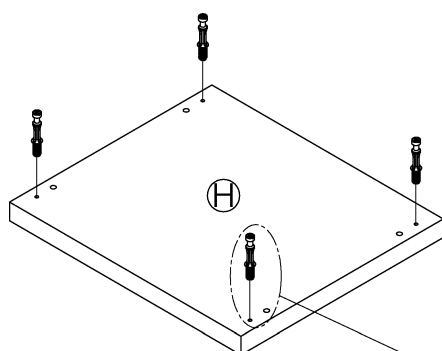




STEP 3 :

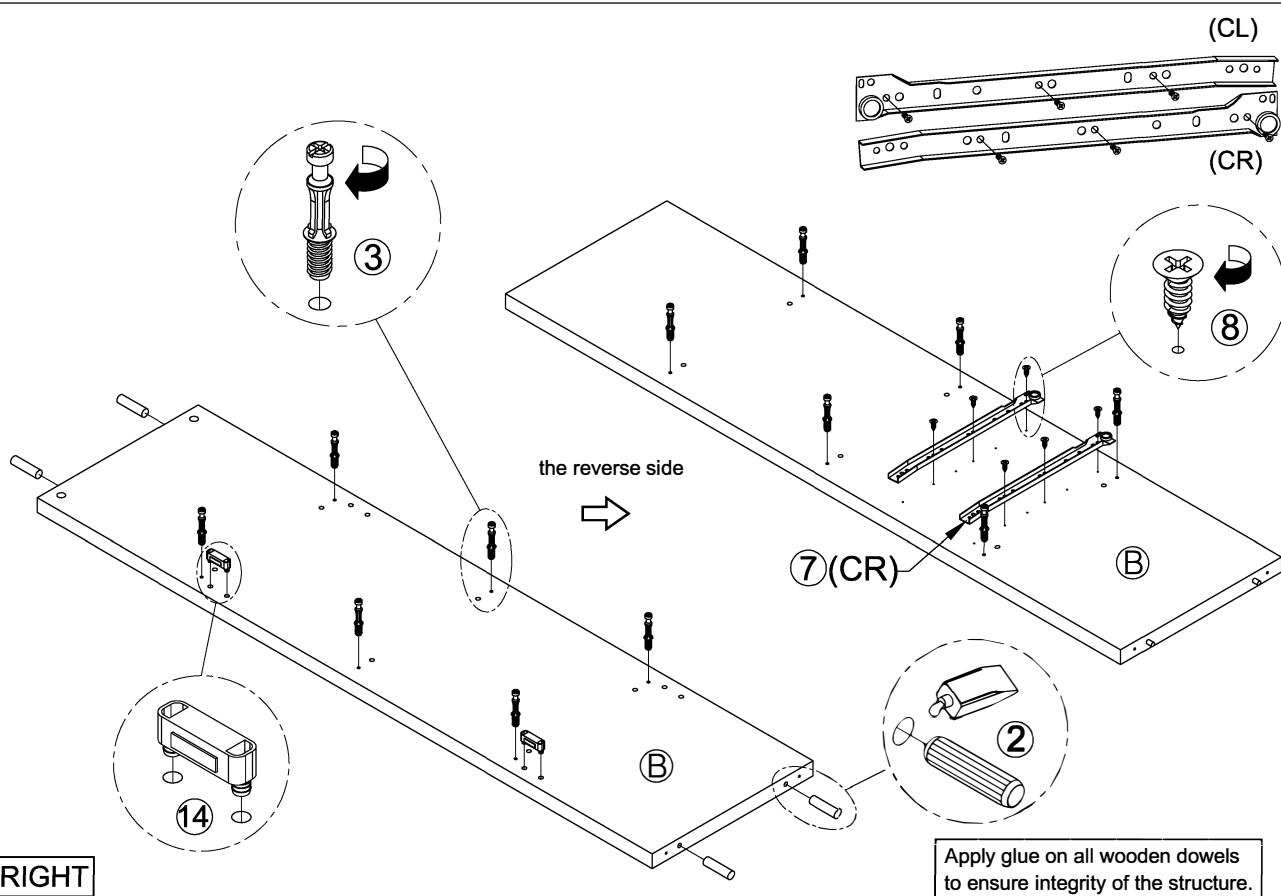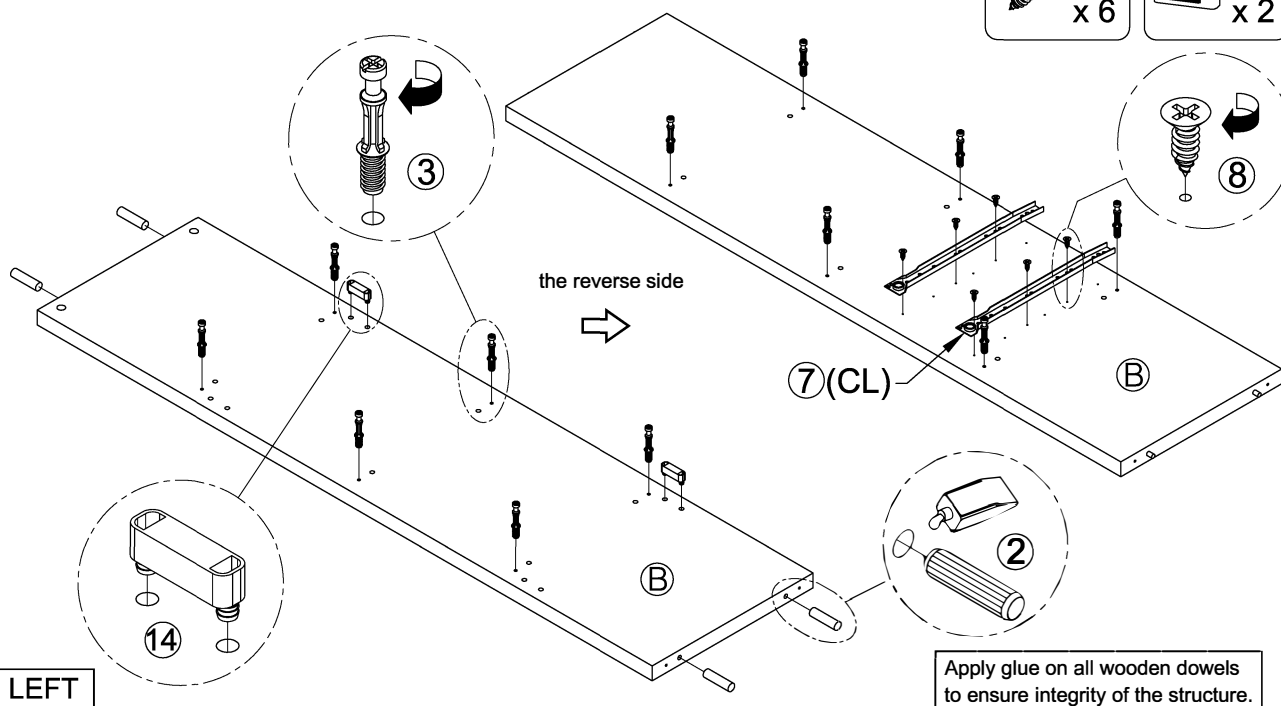


STEP 4 :

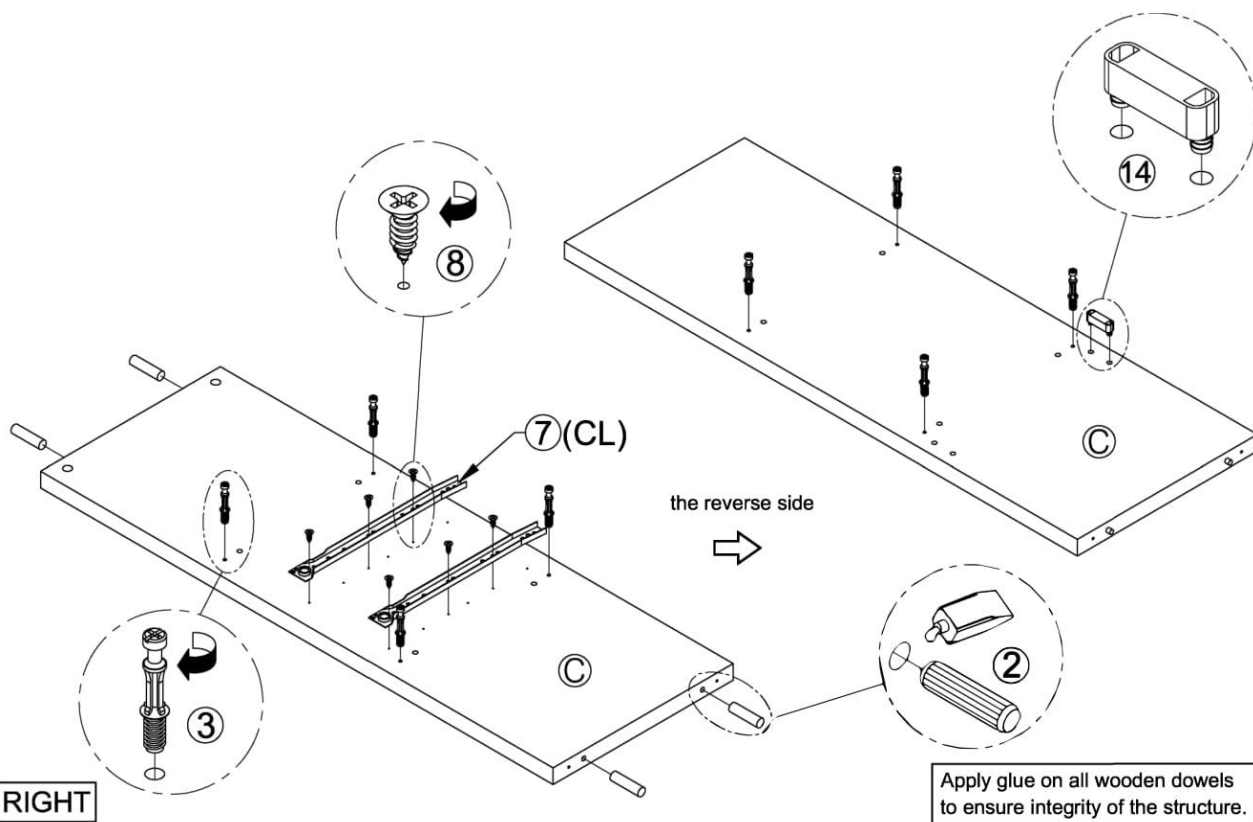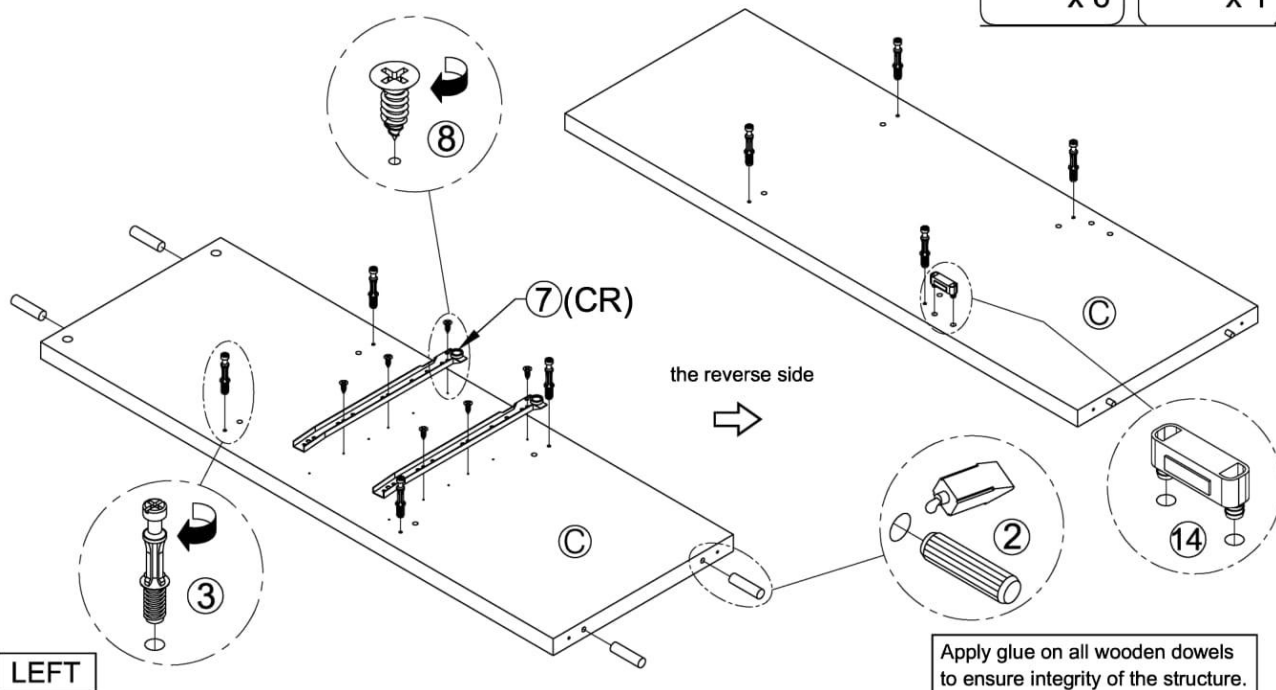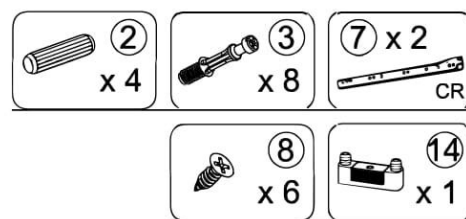


STEP 5 :

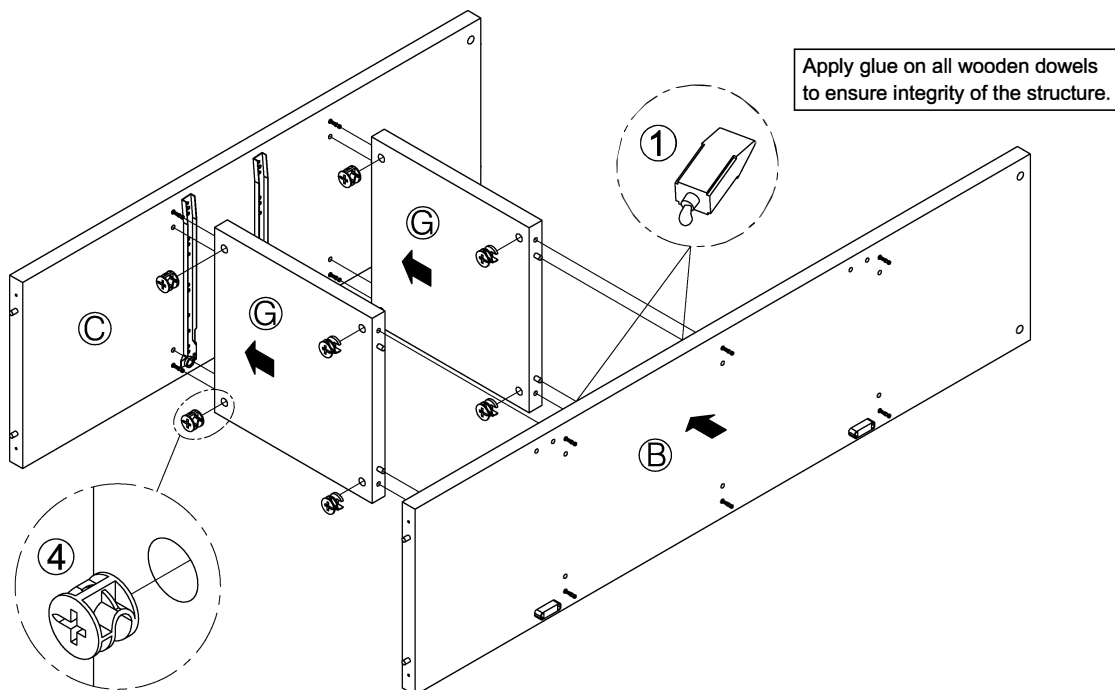


LEFT

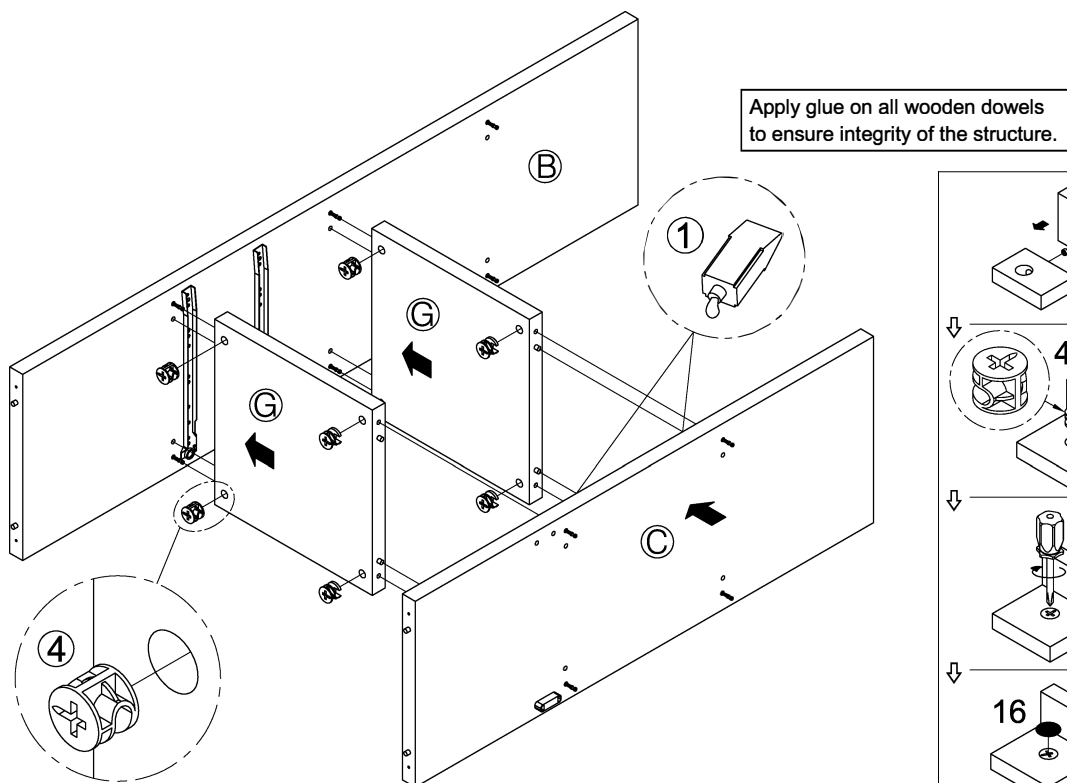


RIGHT

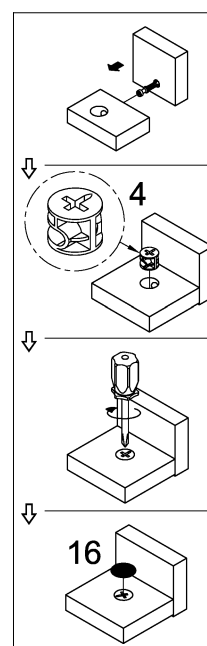

STEP 6 :




Apply glue on all wooden dowels to ensure integrity of the structure.

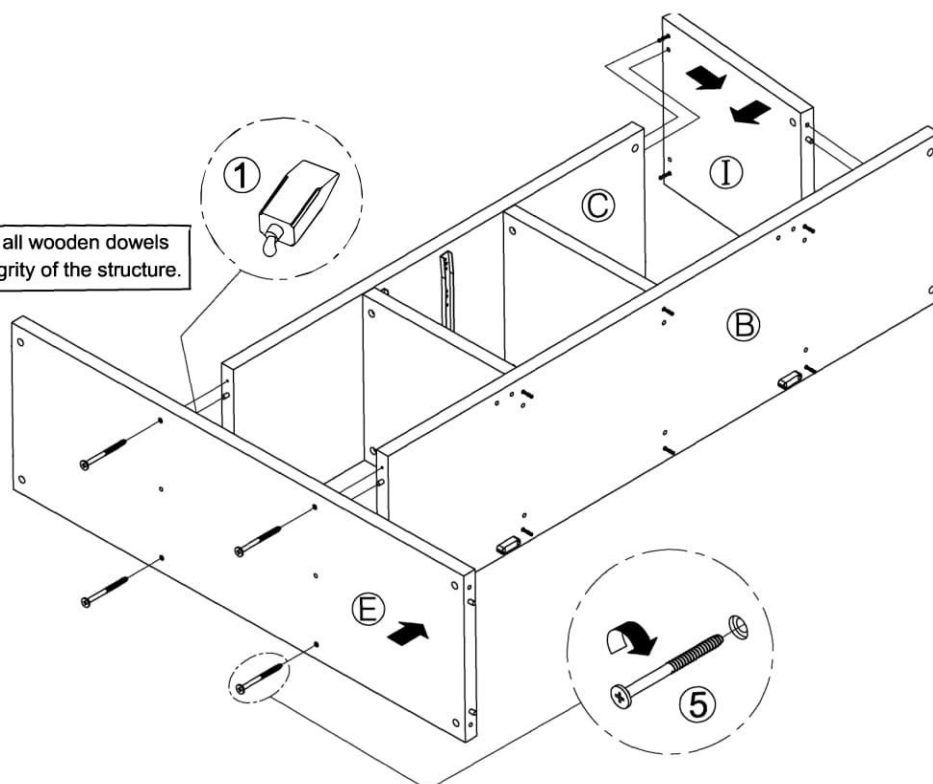




LEFT

Apply glue on all wood endowels to ensure integrity of the structure.


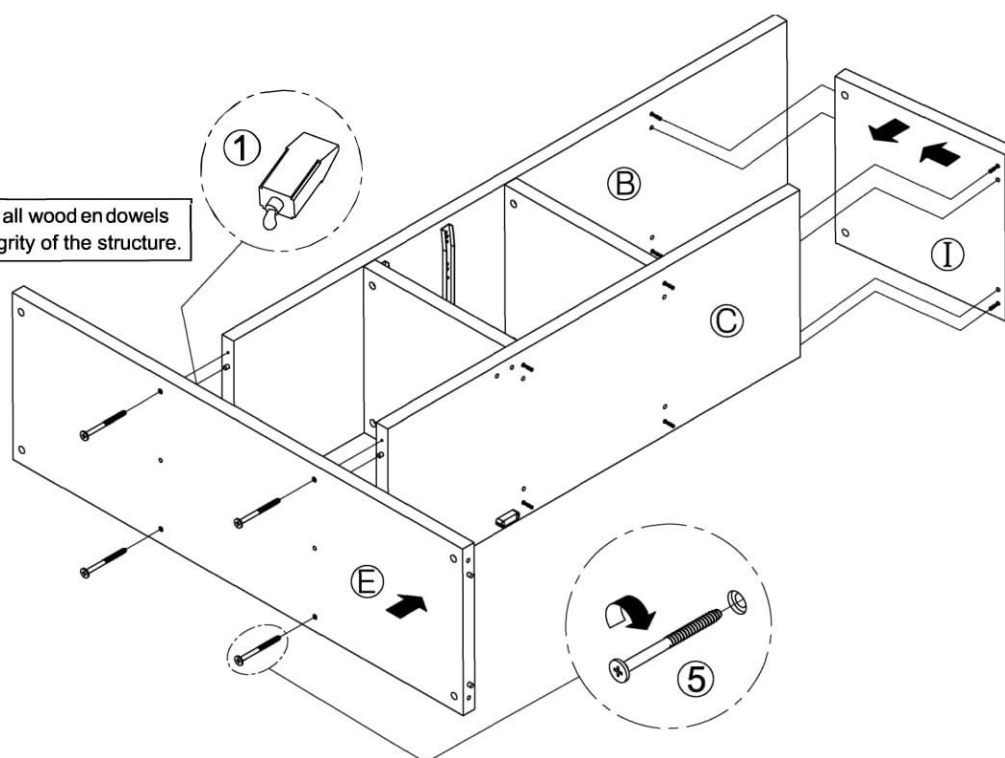


RIGHT

STEP 7 :



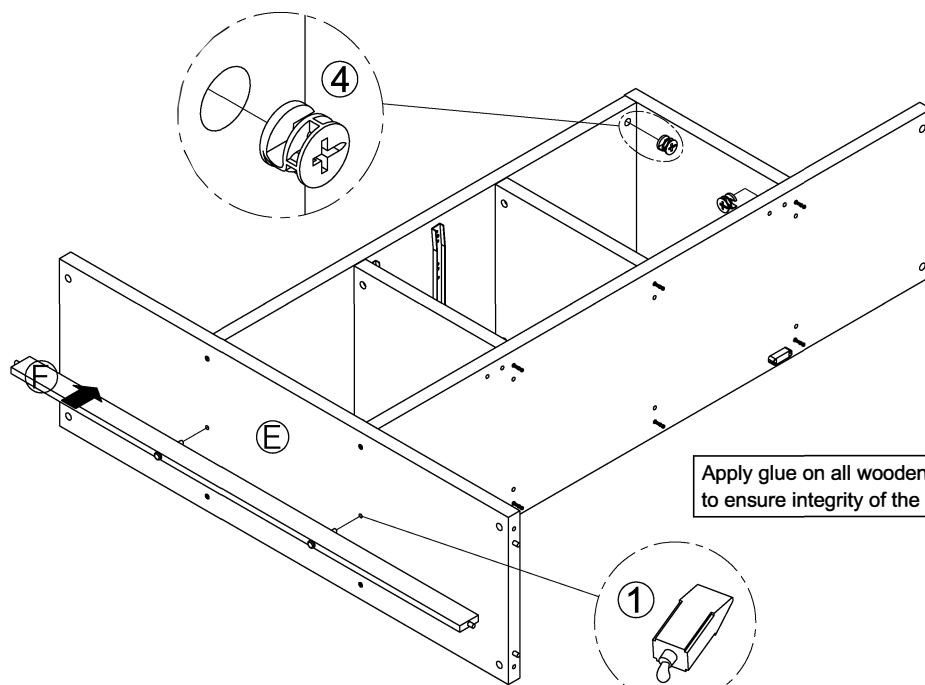




LEFT


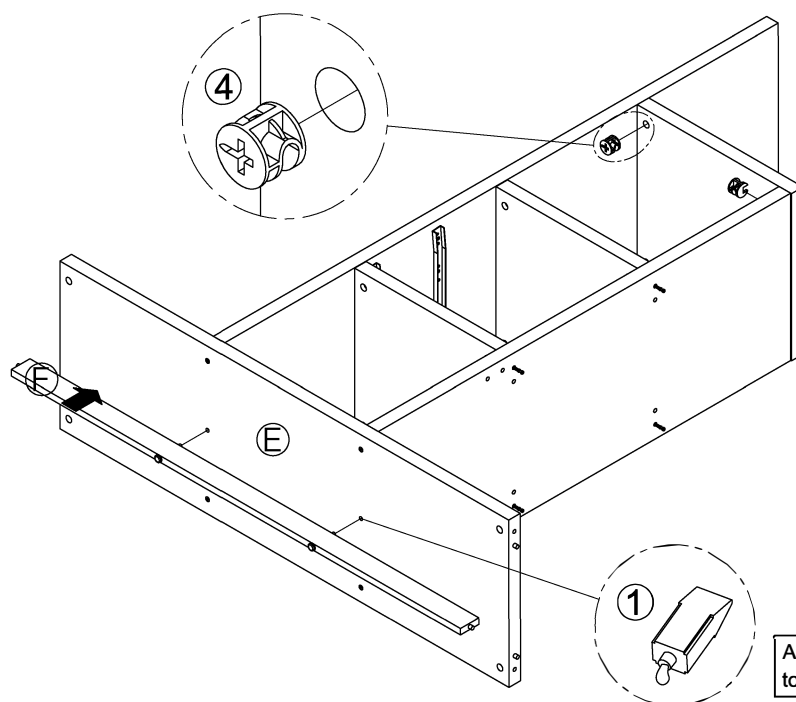
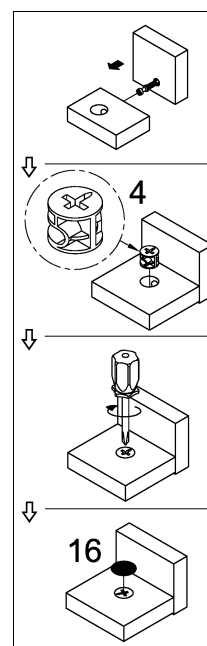


RIGHT


STEP 8 :

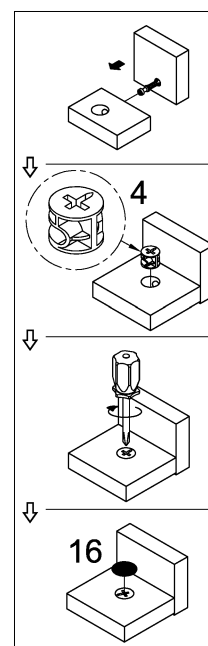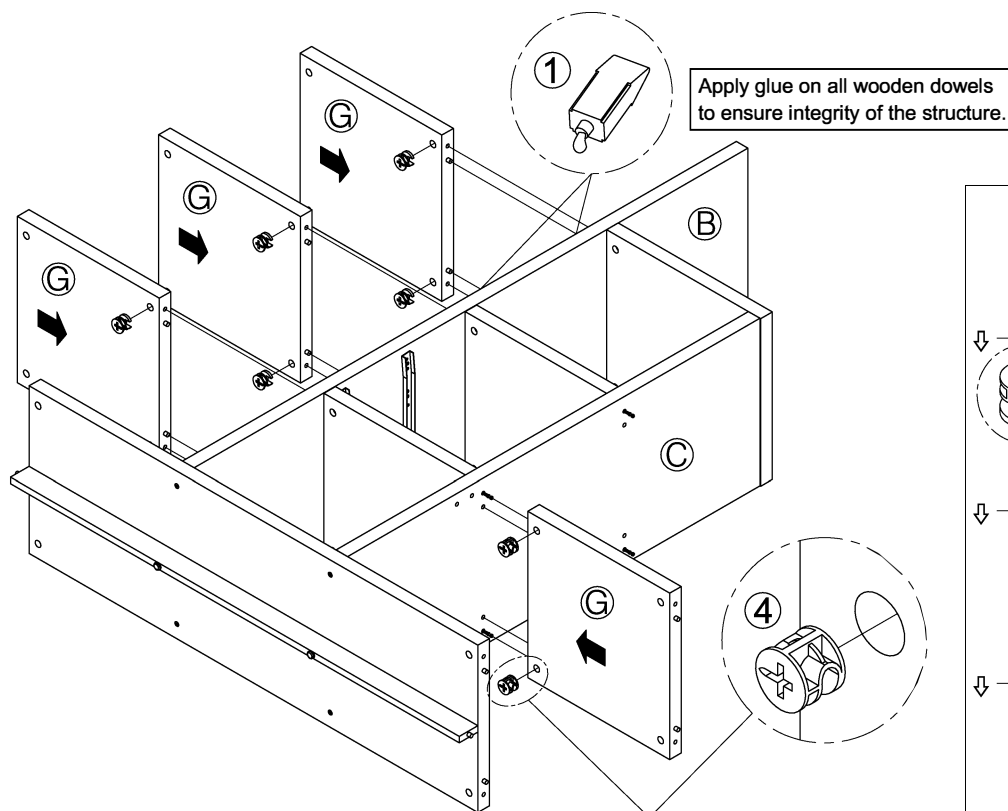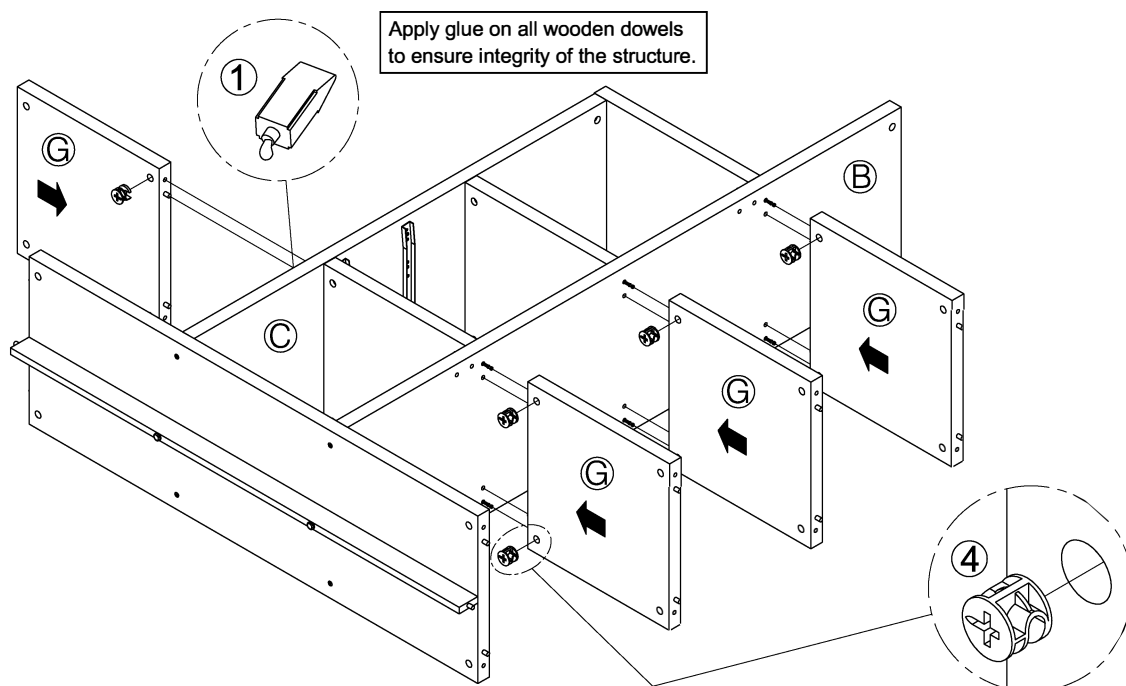


STEP 9 :

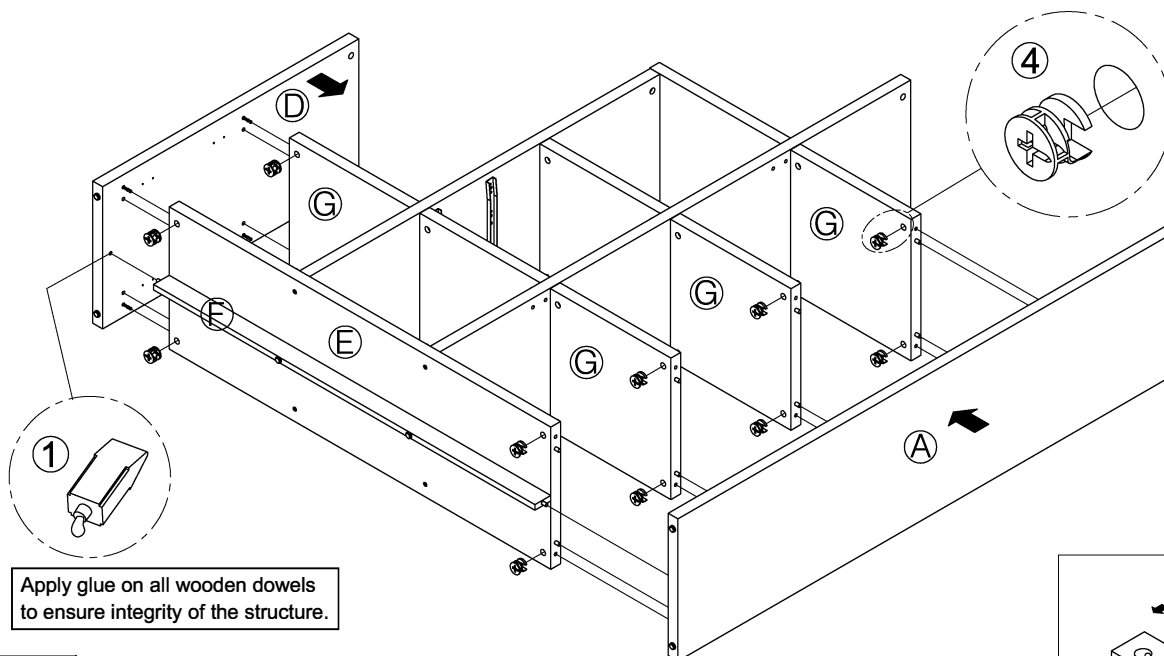




LEFT

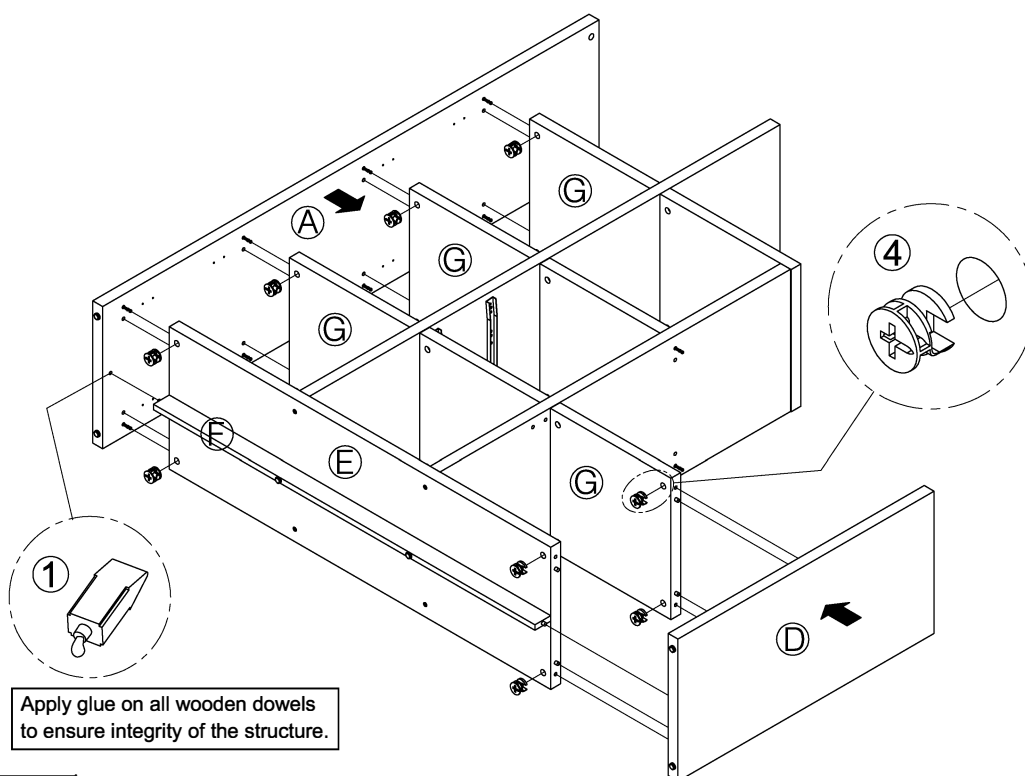



RIGHT

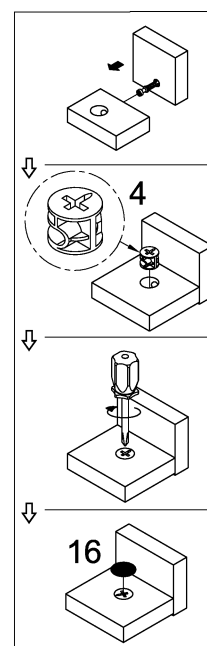

STEP 10 :

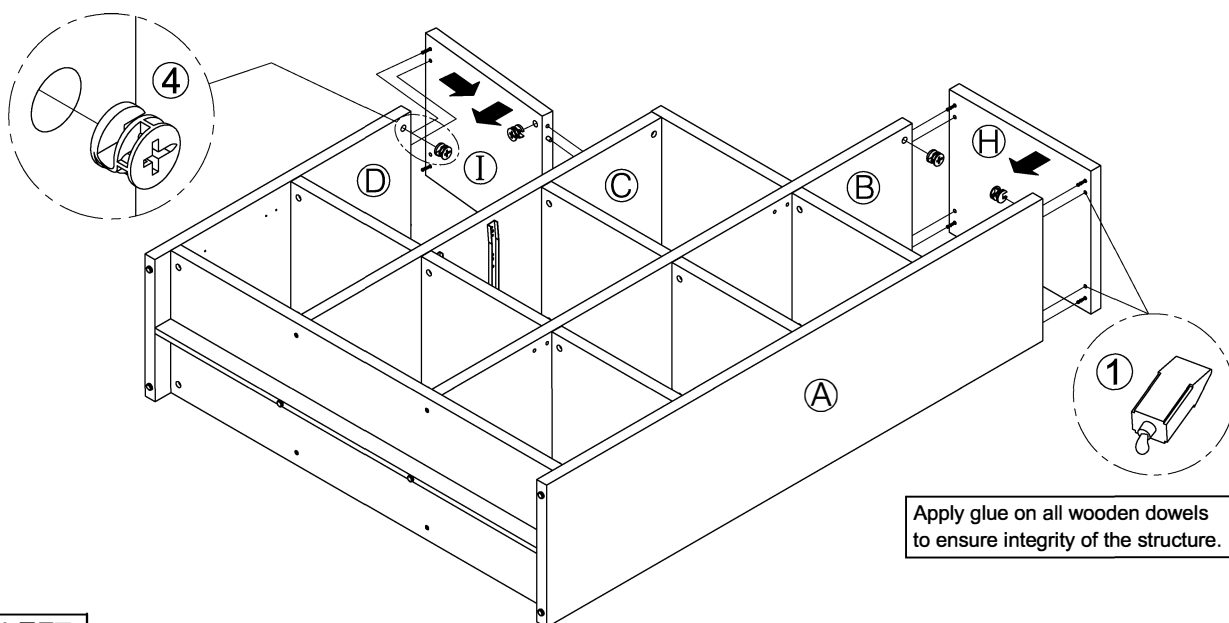




LEFT


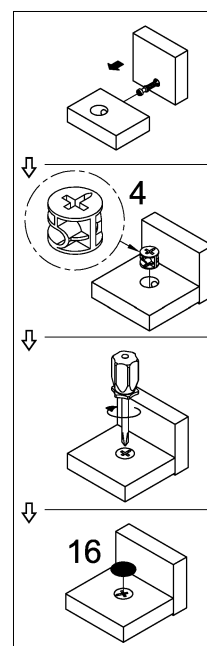
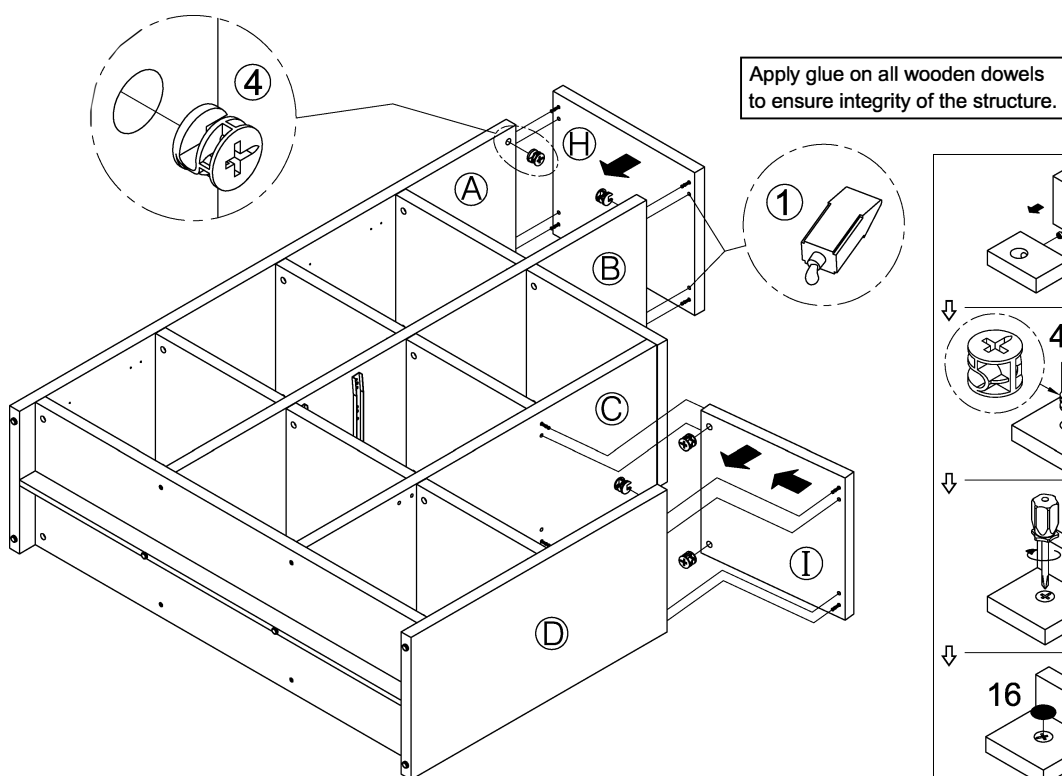


RIGHT


STEP 11 :

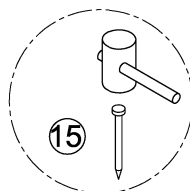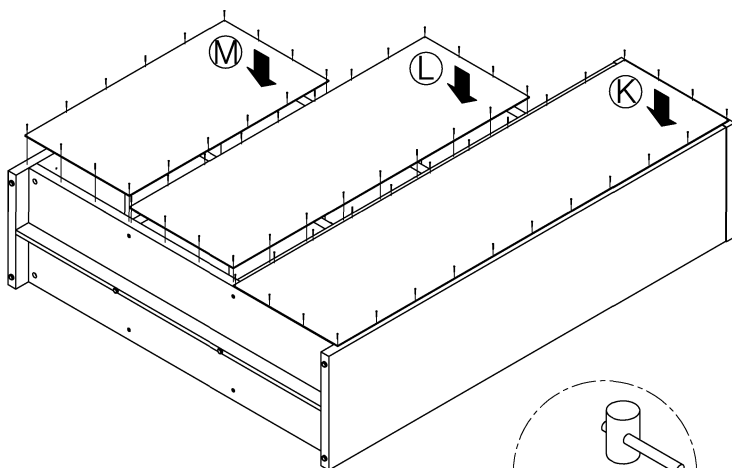



LEFT

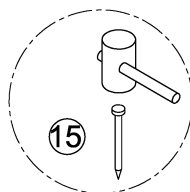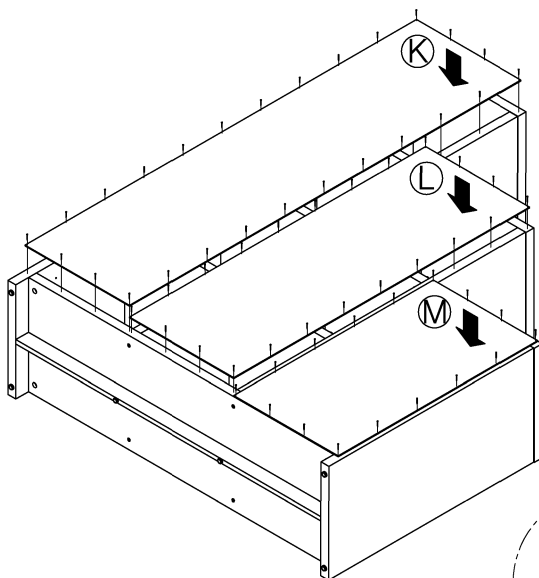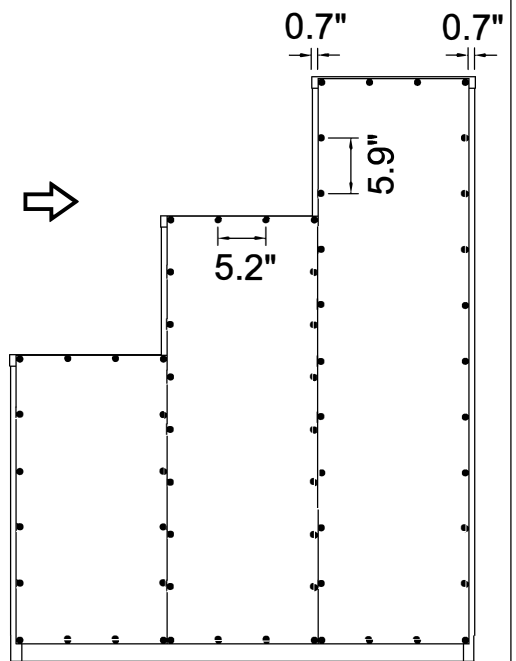


RIGHT

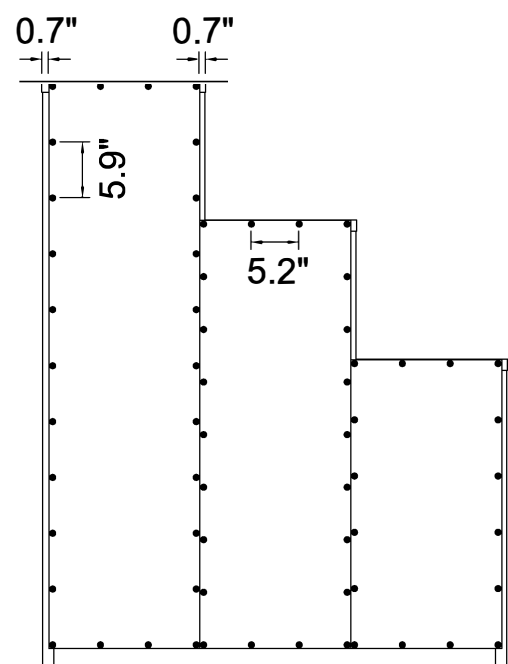



STEP 12 :

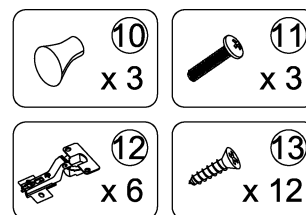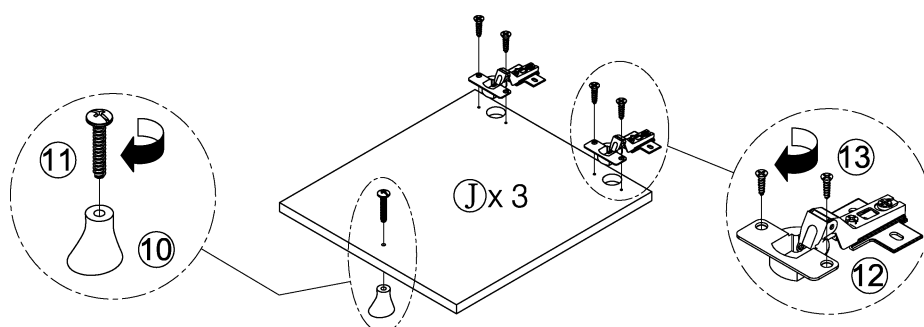


STEP 13 :

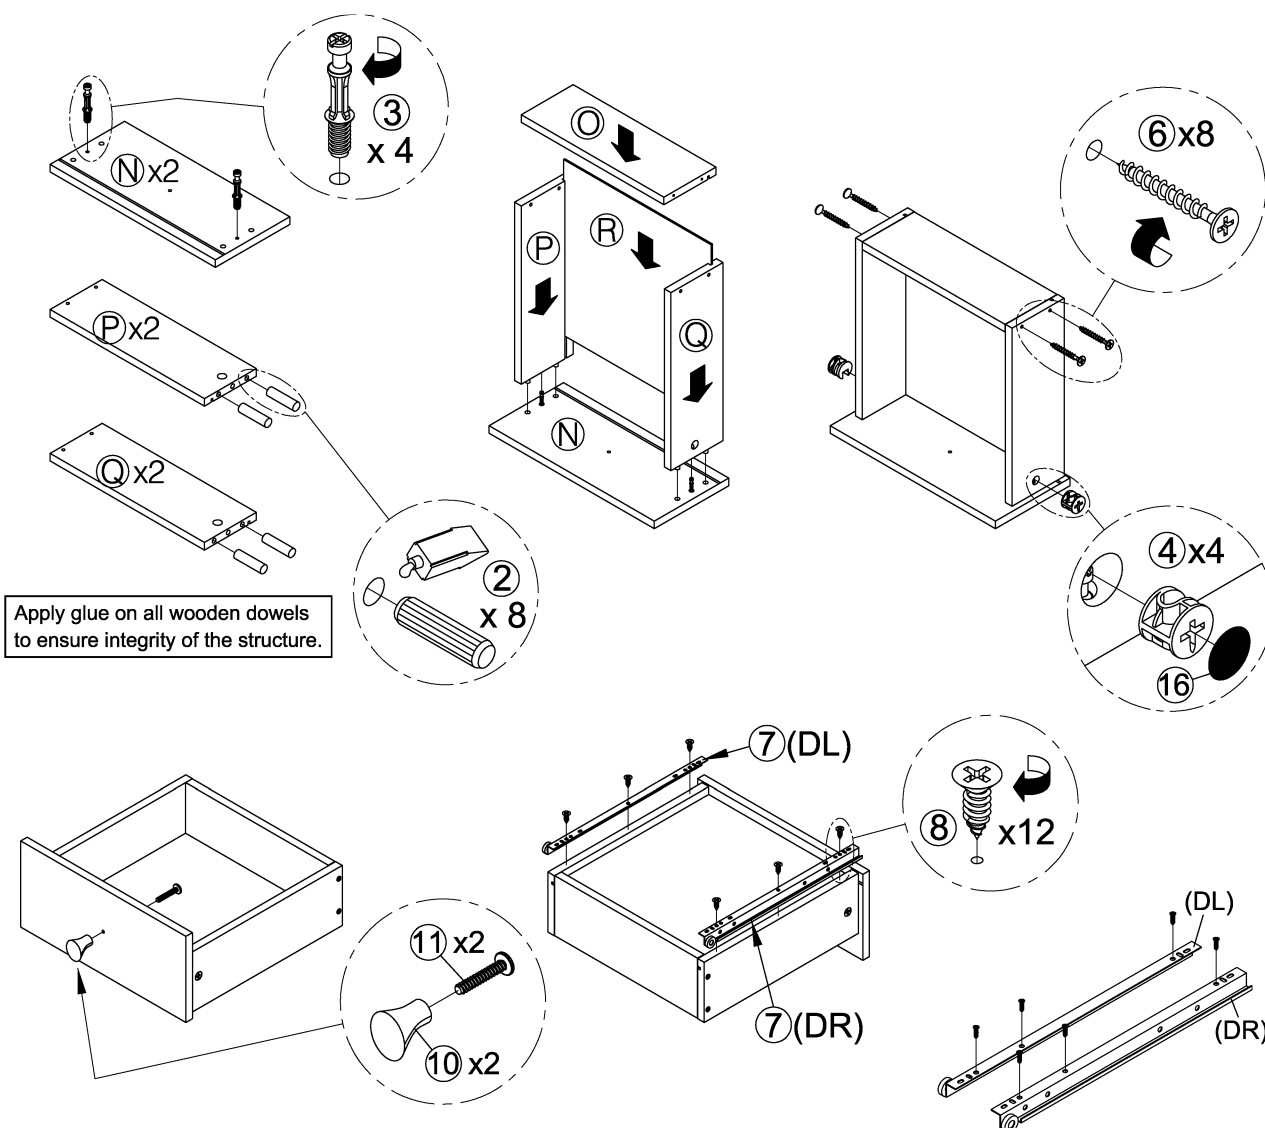





STEP 14 :

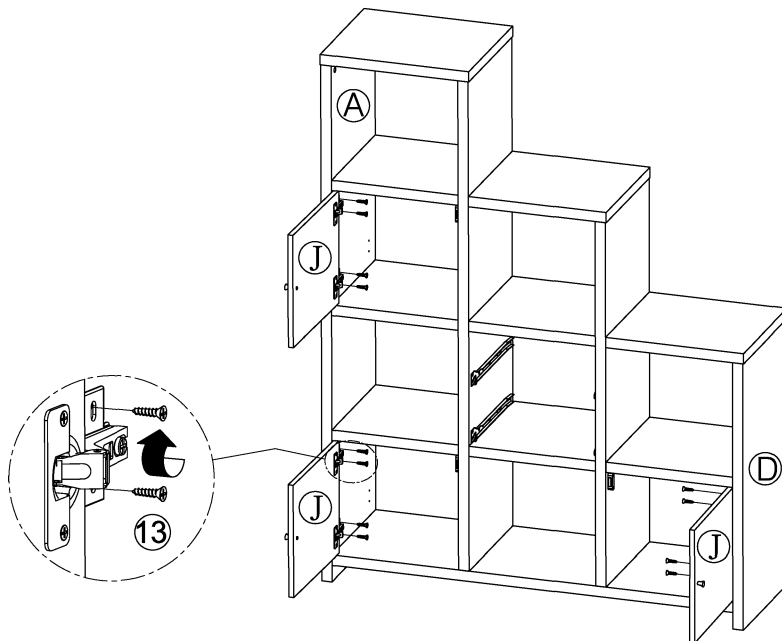


LEFT

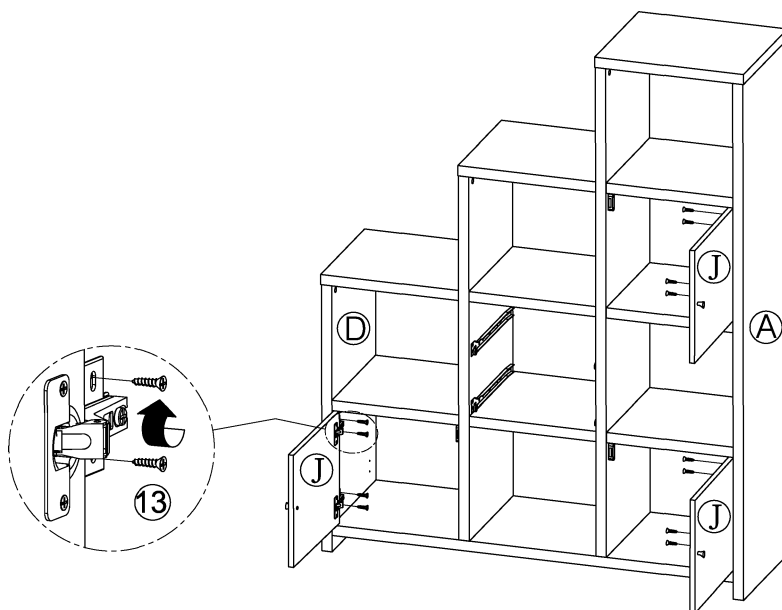


RIGHT

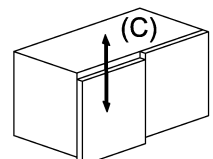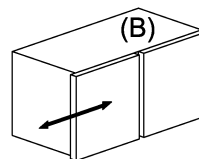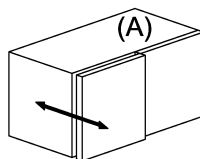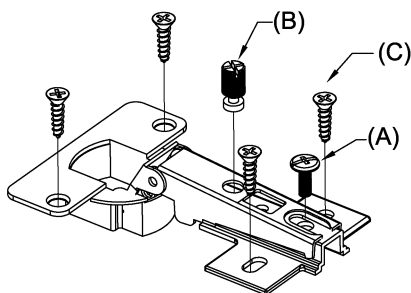

STEP 15 :

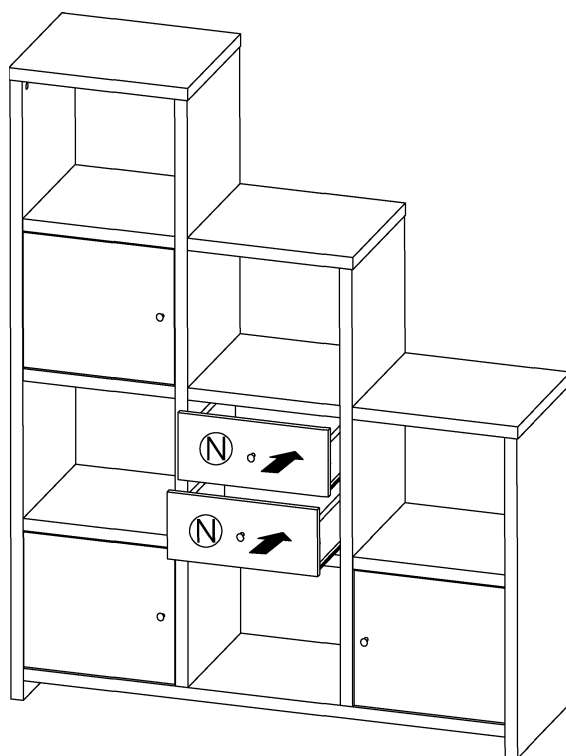

LEFT







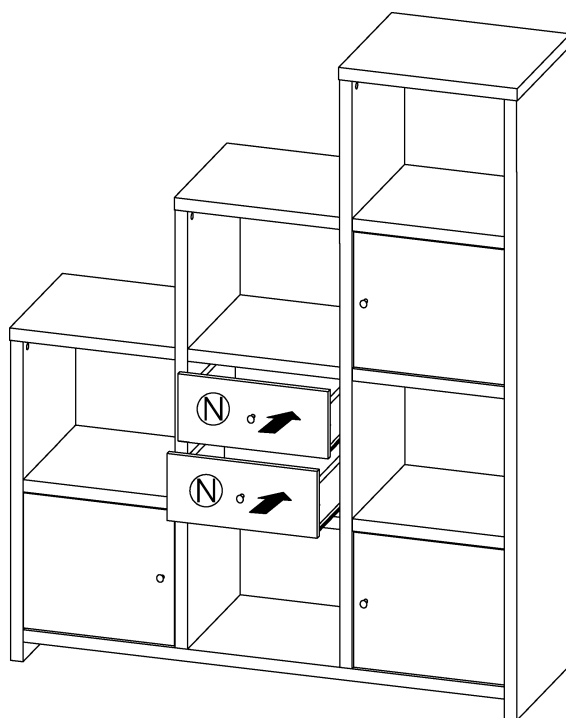


RIGHT

STEP 16 :

ATTENTION: ANTI TIPPING SAFEGUARD

Please install the anti-tipping hardware as shown in the drawing.
This can help to prevent any tipping issues.

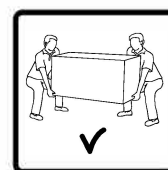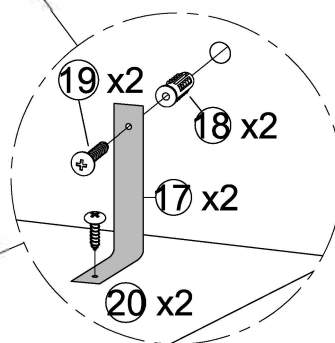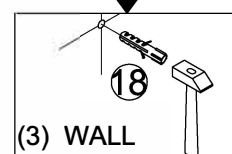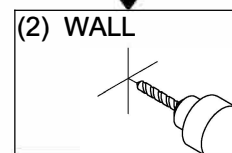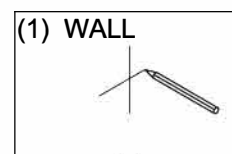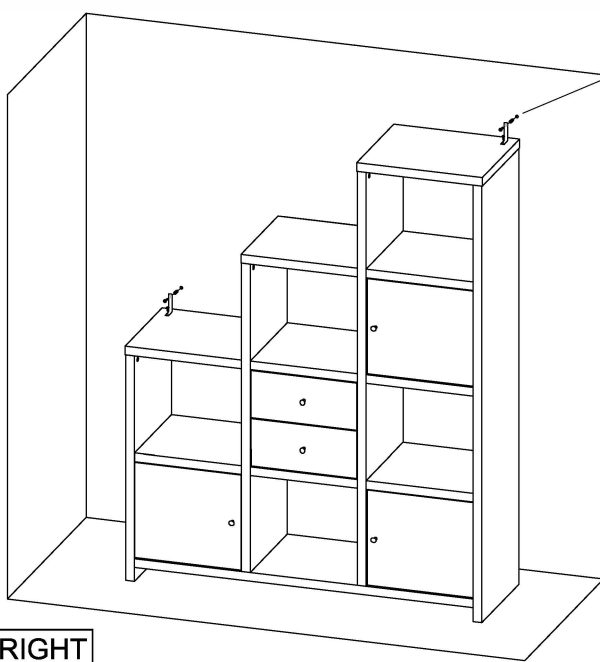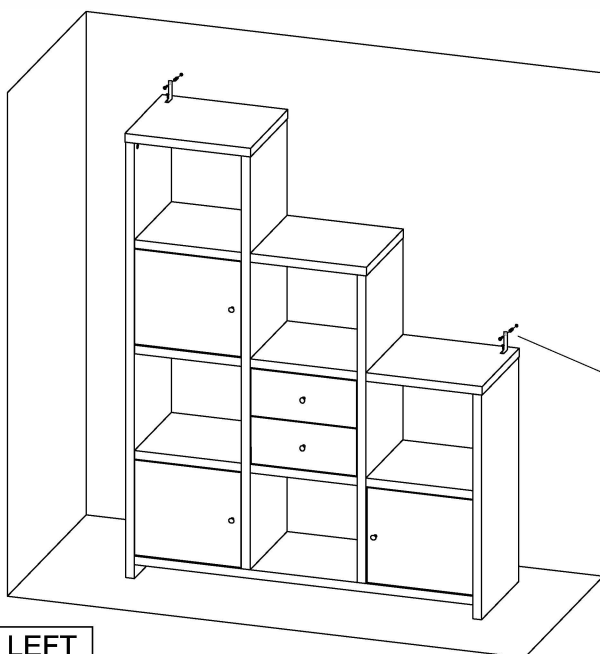

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture

This restraint is not a substitute for proper adult supervision.
This restraint may provide protection against tipping furniture.

Do not allow children to climb on furniture.

Failure to detach this restraint before moving furniture may
result in injury and damage