

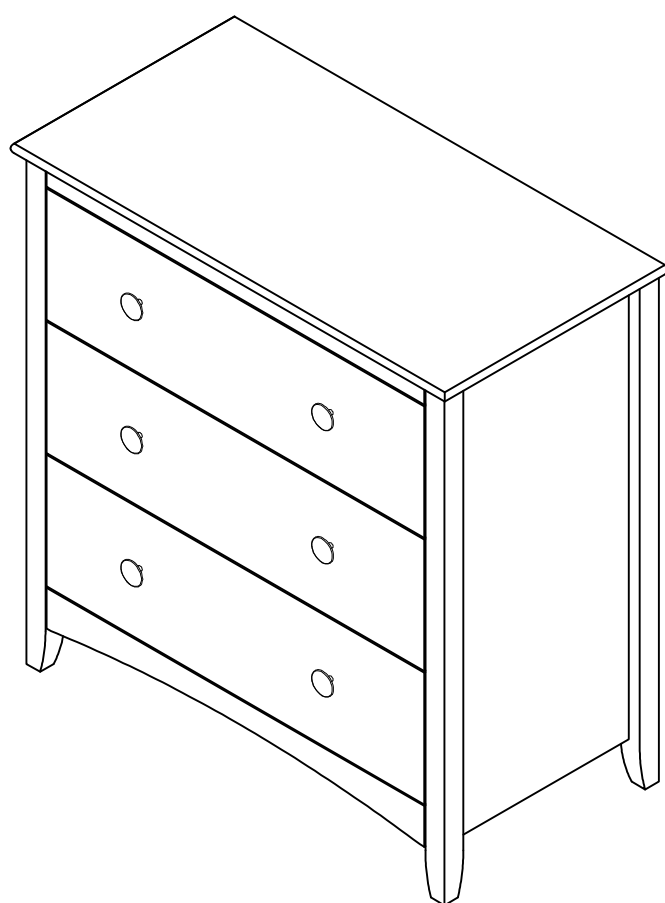
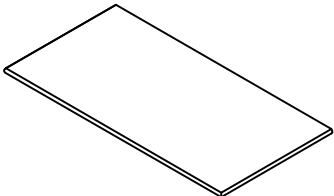
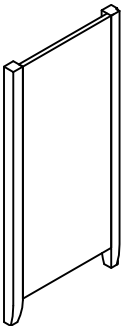
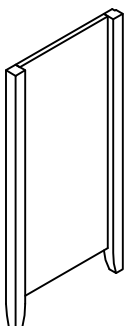
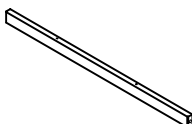
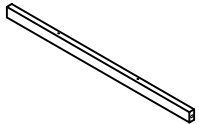
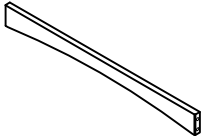
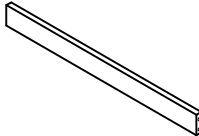
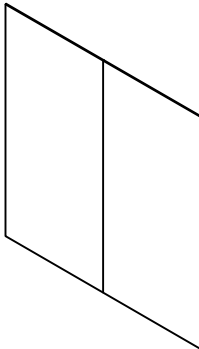
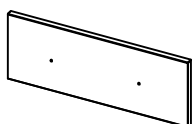









WF189222AAA

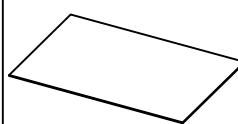


Parts for frame listing			
①  x1	②  x1	③  x1	④  x1
⑤  x1	⑥  x1	⑦  x1	⑧  x1

Parts for drawers listing					
⑨  x3	⑩  x3	⑪  x3	⑫  x3	⑬  x3	⑭  x3


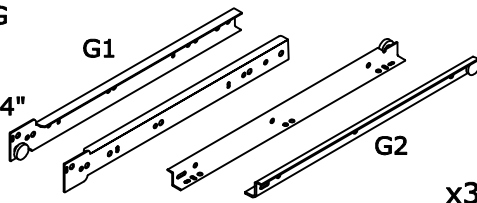
Hardware listing					
A Ø8x30mm  x8	B Ø6x35mm  x27	C Ø15x9mm  x27	D Ø3x13mm  x20	E  x6	
F M4x22mm  x6	G 14"  x3			k 250x25mm  x1	N  x1
H Ø3x12mm  x24	I Ø4x35mm  x4	J Ø3x25mm  x18	M  x1	I Ø9x1mm  x2	O Ø4x50mm  x1

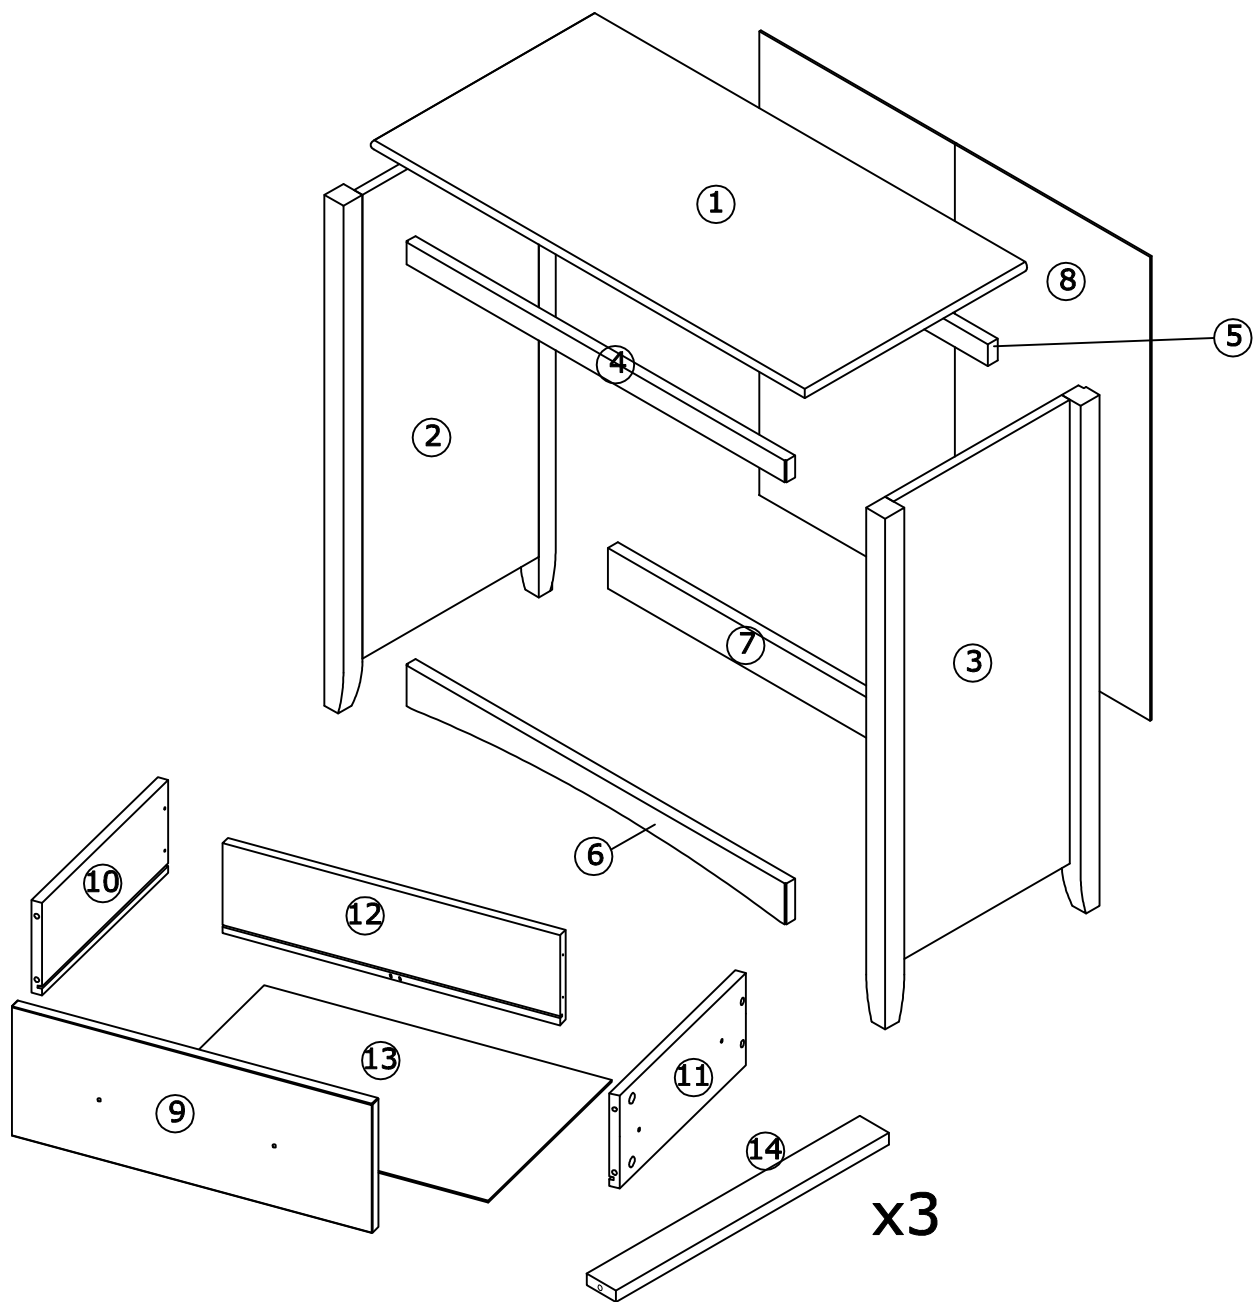


5X45mm bolt installation as below

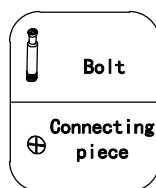


STEP

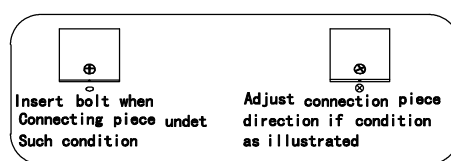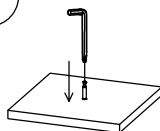


STEP



STEP

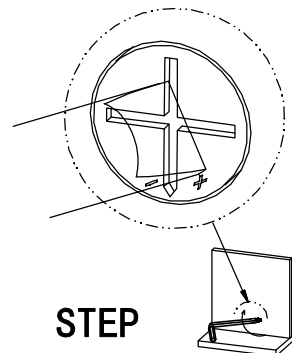


1

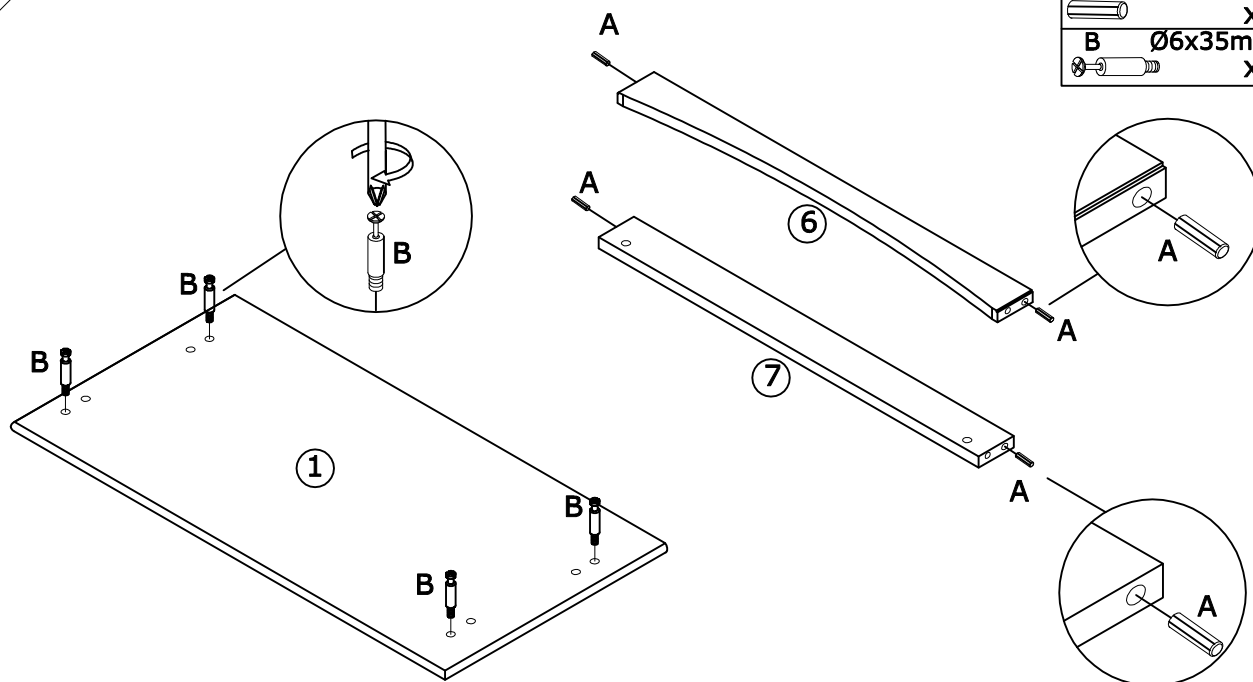

SCREWS

A	Ø8x30mm	x4
B	Ø6x35mm	x4


2

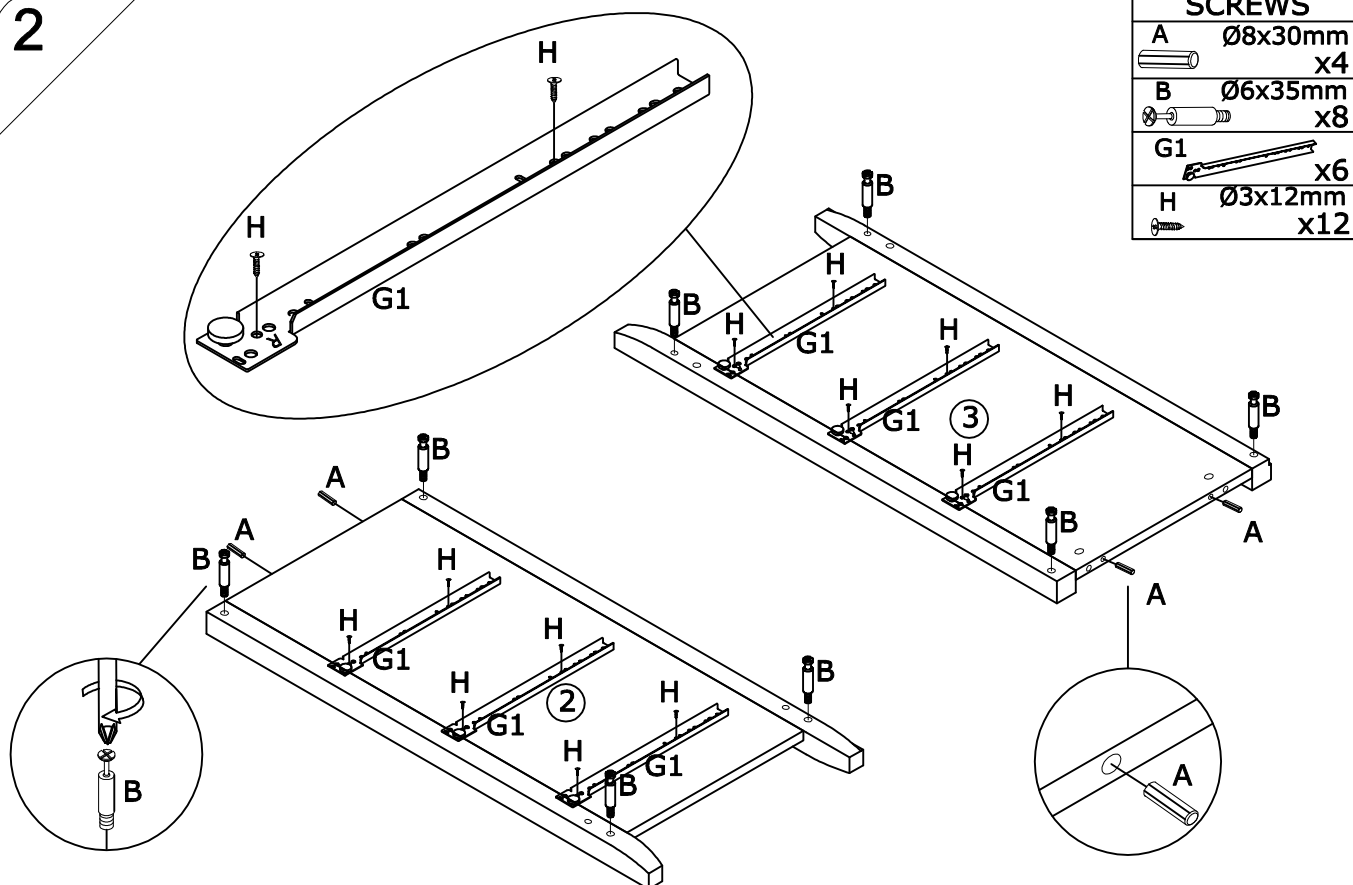


SCREWS

A	Ø8x30mm	x4
B	Ø6x35mm	x8
G1		x6
H	Ø3x12mm	x12

3

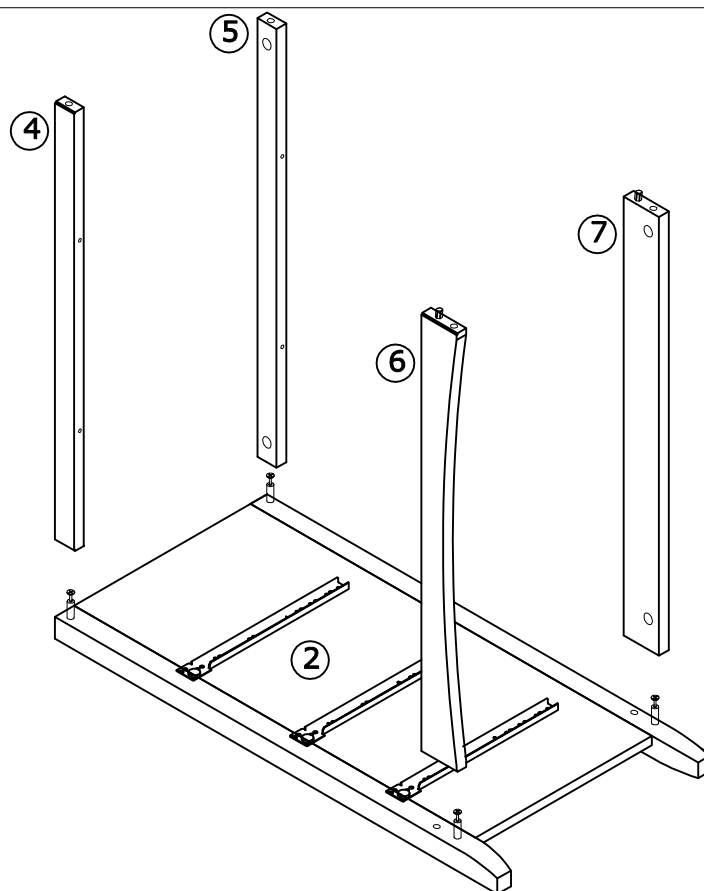

4

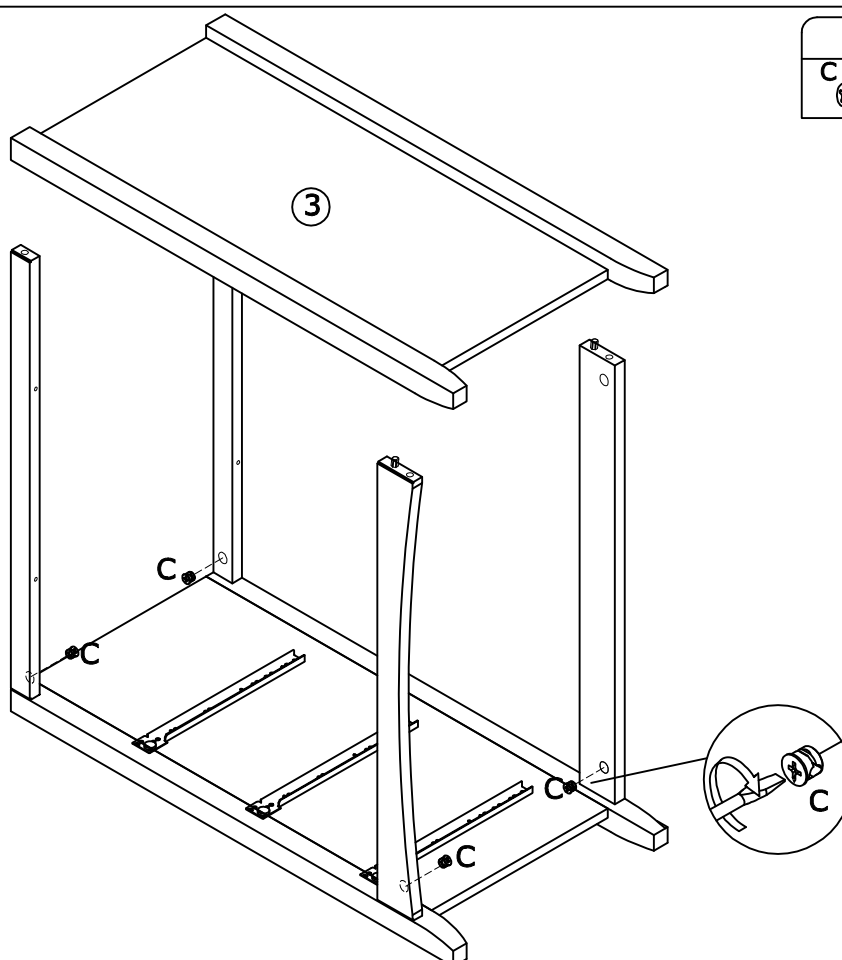


SCREWS


C Ø15x9mm
x4

5

SCREWS

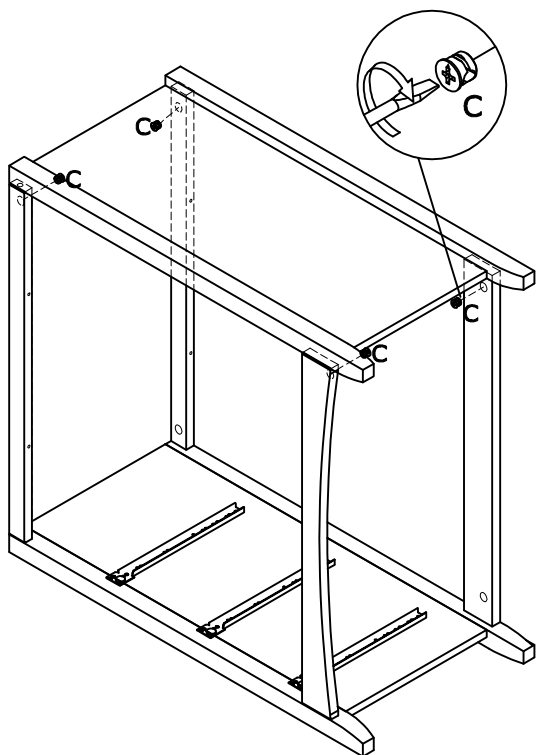
C Ø15x9mm
x4

6

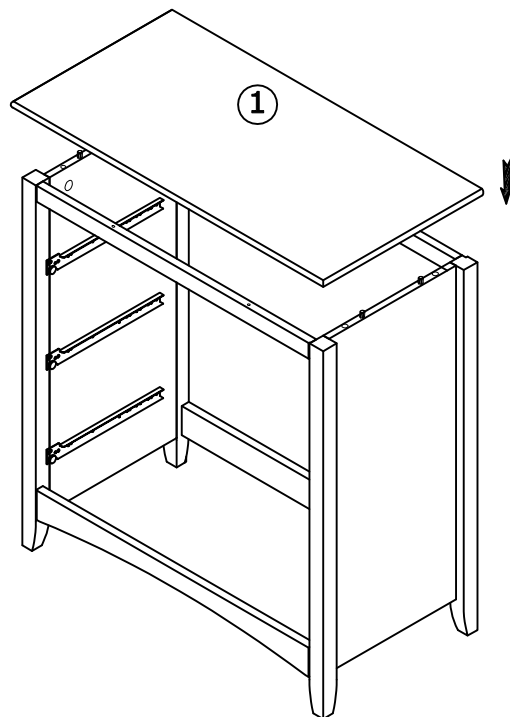


7


SCREWS

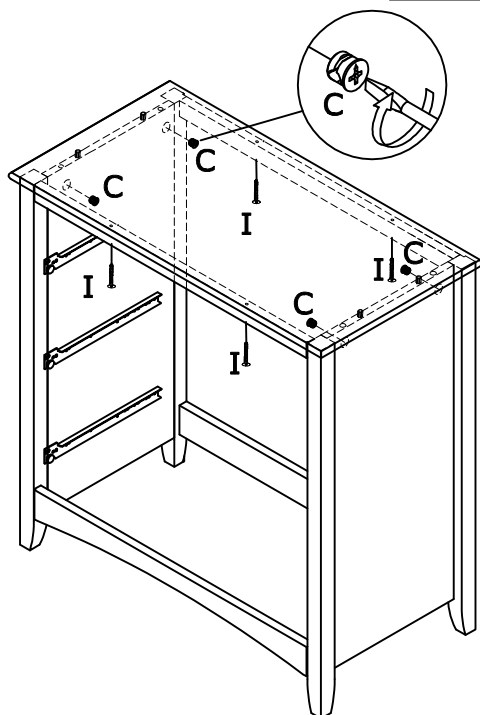C Ø15x9mm
x4I Ø4x35mm
x4

8


SCREWS

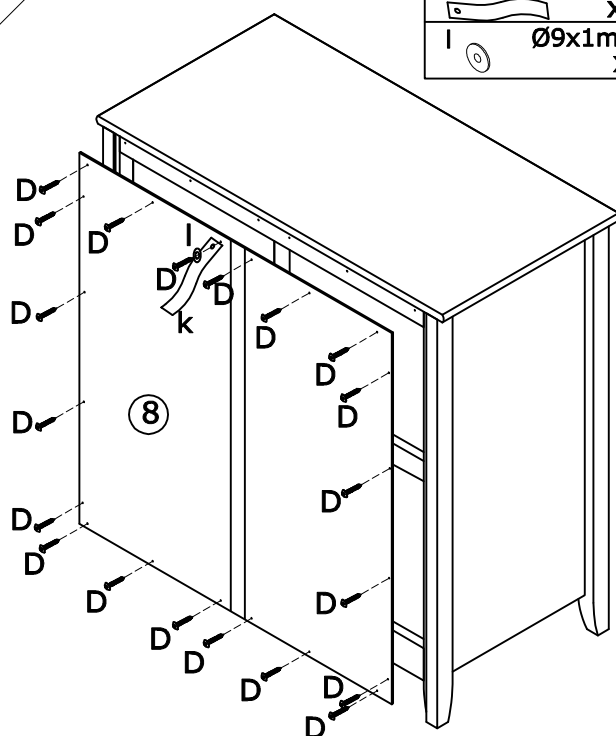D Ø3x13mm
x20k 250x25mm
x1l Ø9x1mm
x1

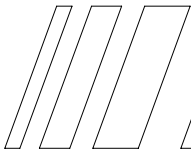


9

SCREWS

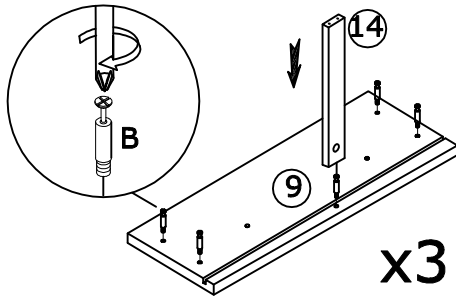B $\varnothing 6 \times 35 \text{ mm}$
x15


10

SCREWS

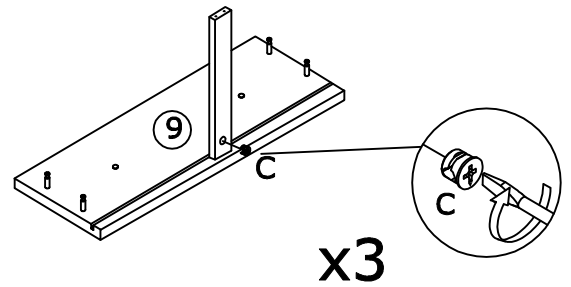C $\varnothing 15 \times 9 \text{ mm}$
x3


11

SCREWS

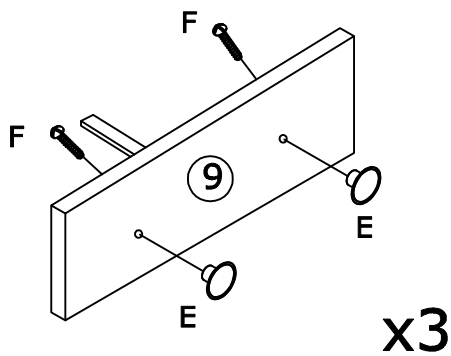
E $\varnothing 3 \times 25 \text{ mm}$
x6
F M4x22mm
x6

12

SCREWS

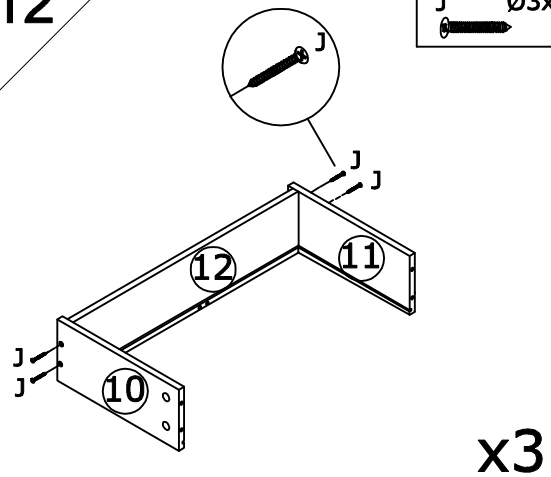J $\varnothing 3 \times 25 \text{ mm}$
x12


13

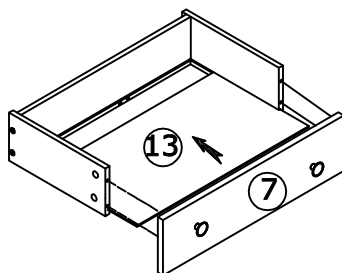


x3


14

SCREWS

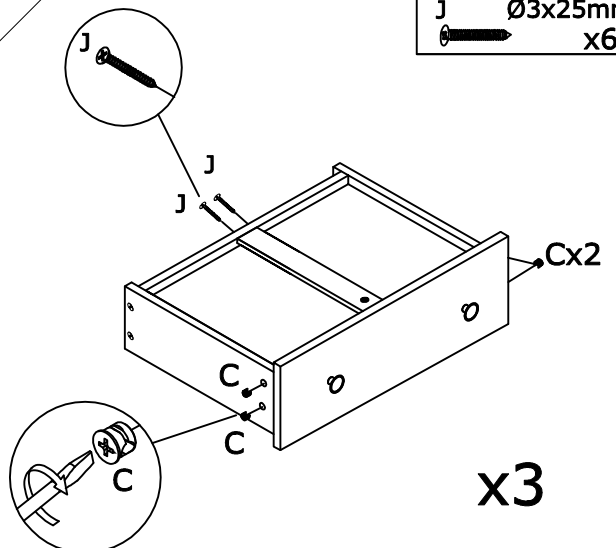
C $\varnothing 15 \times 9 \text{ mm}$
x12
J $\varnothing 3 \times 25 \text{ mm}$
x6

15


SCREWS		
G2		x6
H		Ø3x12mm x12

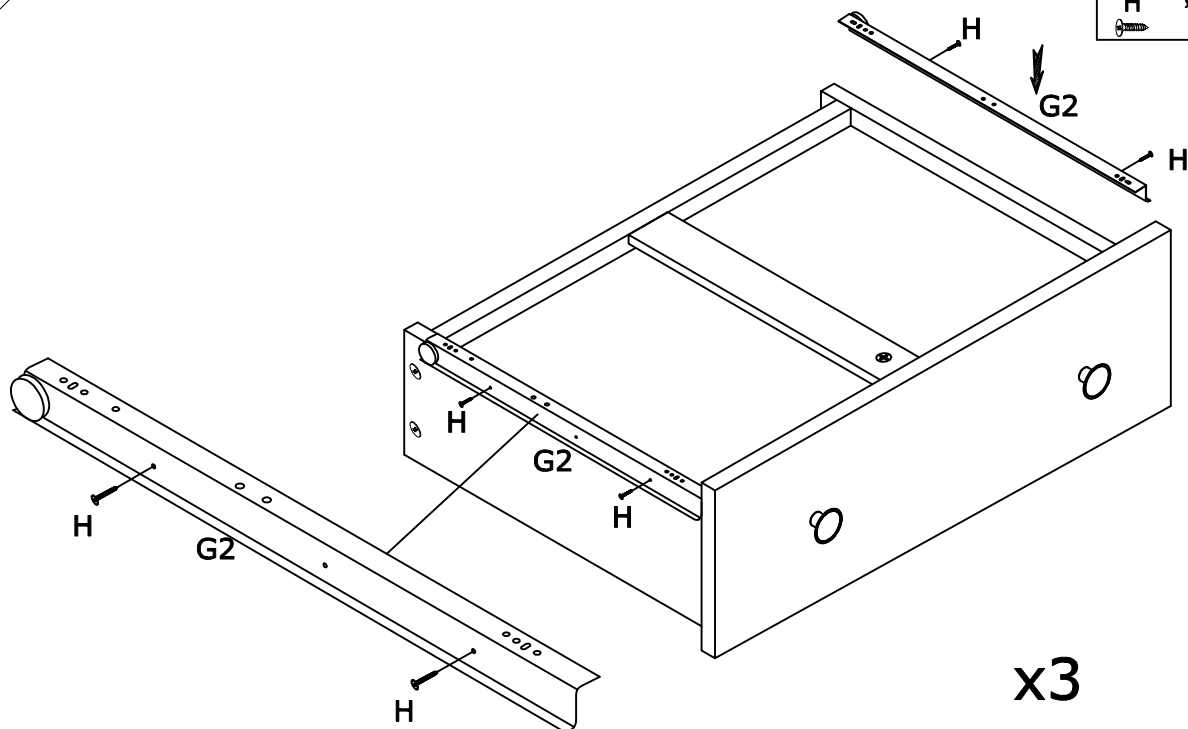

16

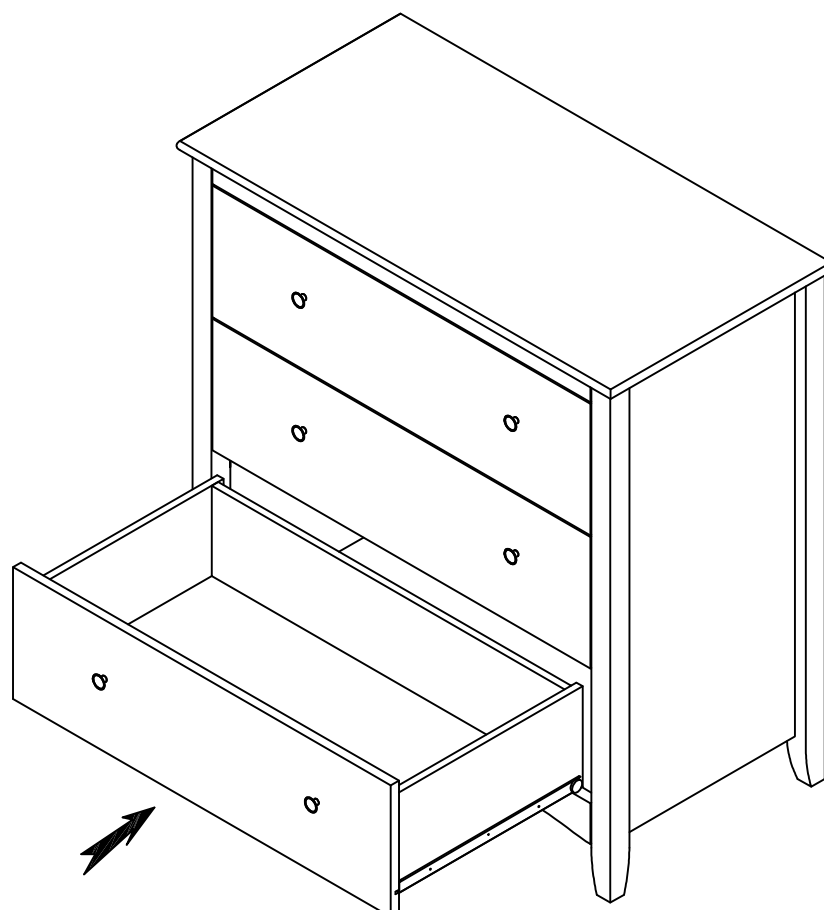

17

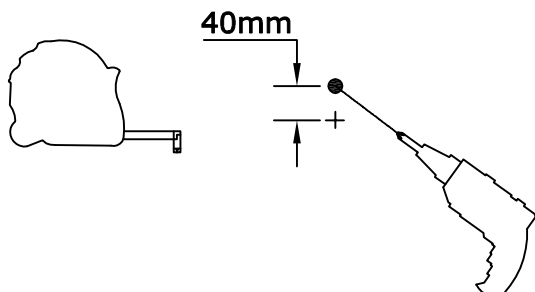


SCREWS


N



x1

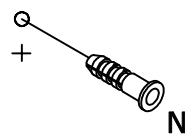

18

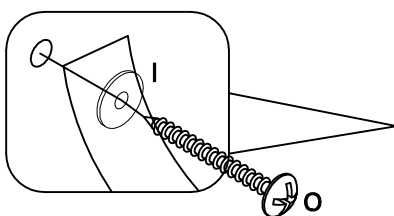

SCREWS

I

Ø9x1mm

x1

O

Ø4x50mm

x1

