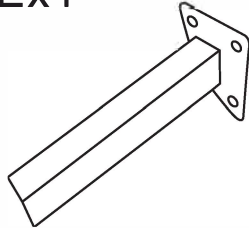
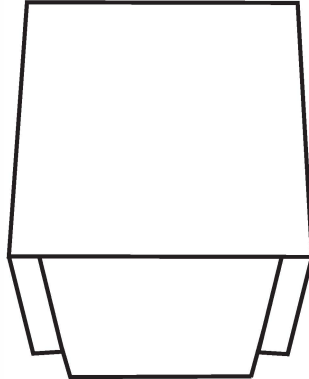
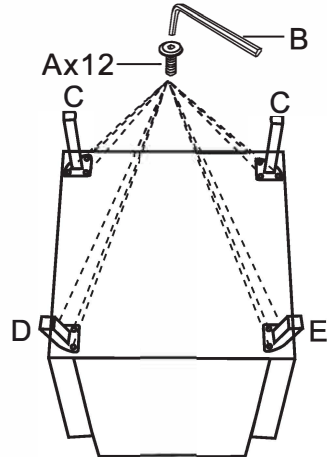
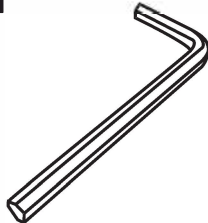
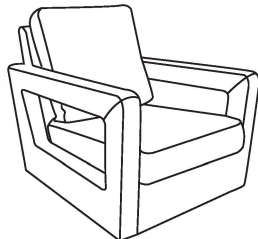
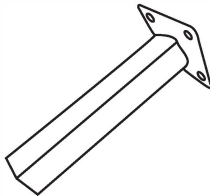
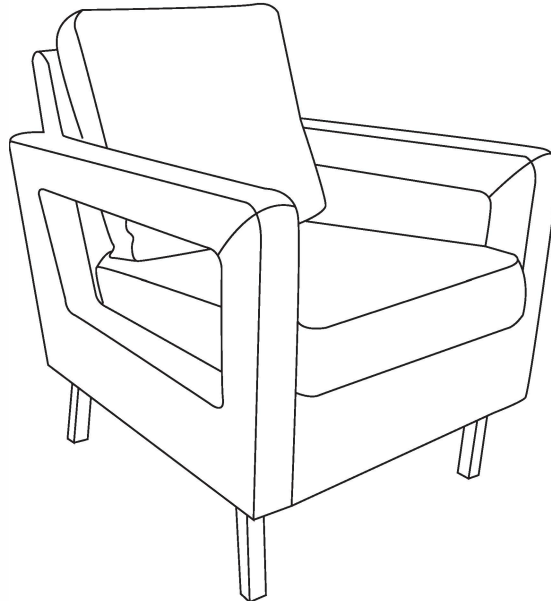


Assembling Instruction

Ax12  M6x18MM	Ex1 	① 	② Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first. 
Bx1 	Fx1 		
Cx2 	Gx2 EXTRA PARTS 	③   For velvet:With help of adult partner, Iron the fabric cover to stretch the wrinkles and dent mark with steam iron while necessary.please separate with a towel before ironing..	
Dx1 