


IMPORTANT
RETAIN FOR FUTURE REFERENCE
READ CAREFULLY

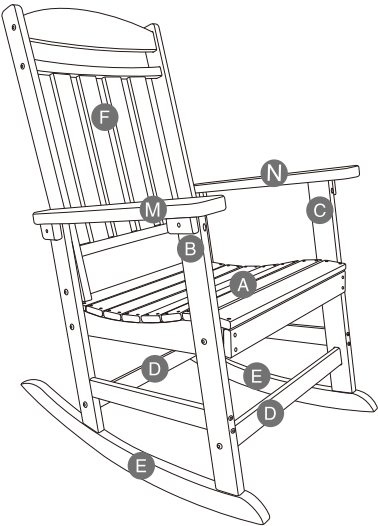







Assembly Instructions











- Note:**
- 1. Do not use electric screwdriver.
 - 2. Two people are required to assemble this item. Assemble the item on a flat, solid and even surface.
 - 3. Make sure that all the necessary parts are in the carton before starting the assembly.
 - 4. Please secure all parts and bolts loosely, only when the frame is complete should you fully tighten the screws.
 - 5. If any instability occurs, loosen the screws, re-align the components as necessary and re-tighten the screws evenly.
 - 6. This item is not a climbing frame or toy.
 - 7. Danger of suffocation. Keep out of reach of children.



Hardware List


1 M6x100mm Screw  4PCS	2 M6x60mm Screw  4PCS	3 M6x85mm Bolt  2PCS	4 M6x60mm Bolt  8PCS
5 M6 WASHER  10PCS	6 M6 NUT  10PCS	7 No.10 Spanner  1PC	8 S5 Allen key  1PC

Parts List


A Chair Seat  1PC	B Right Chair Leg  1PC	C Left Chair Leg  1PC	D Front&Back Rail  2PCS
E Rheboscilia  2PCS	F Chair Backrest  1PC	M Right Armrest  1PC	N Left Armrest  1PC

Assembly


Step 1: Attach part B (right chair leg) to part A (Chair Seat) , Repeat part C (left chair leg) operation on the other side. Using Hardware 4 (M6*60mm Bolt)、Hardware 5(M6 Washer) and Hardware 6 (M6 Nut).

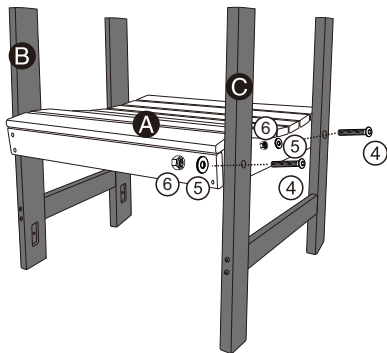


Step 2: Connect part D (Front&back rail) to part B (right chair leg) and part C (left chair leg) . Using Hardware 2 (M6 × 50mm Screw).

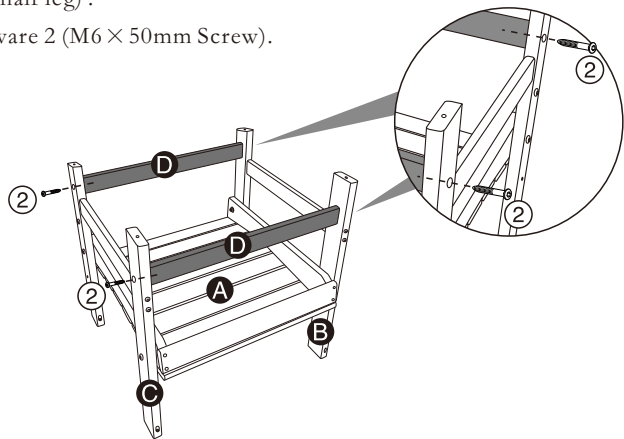

Step 3: Put part E (Rheboscelia) onto the chair legs and secure with Hardware1 (M6 × 100mm Screw).

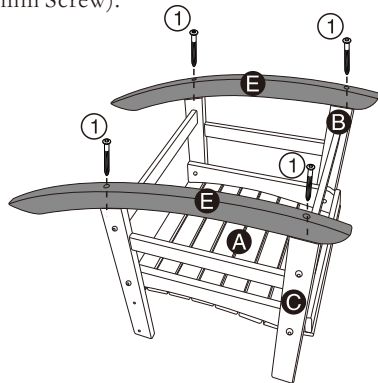

Step4: Secure part M (Right Armrest) to part B (Right Chair Leg). Secure part N (Left Armrest) to part C (Left Chair Leg). Using Hardware4 (M6 x 60mm Bolt) 、 Hardware 5 (M6 Washer) and Hardware 4 (M6 Nut).

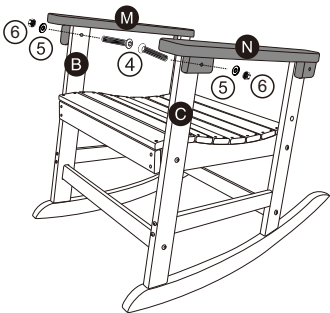

Step5: Insert part F (chair backrest) into chair arm ,using Hardware3 (M6 × 90mm Bolt)、 Hardware4 (M6 × 60mm Bolt)、 Hardware 5 (M6 Washer) and Hardware 6(M6 Nut) . After this step, please fully tighten all bolts if you check all the parts are positioned. Assembly is complete.

