



10 x 10 FT

□ □ □ □ □ □ □ □ □ □ WQOT304 □ □ □ □ □ □ □ □ □ □

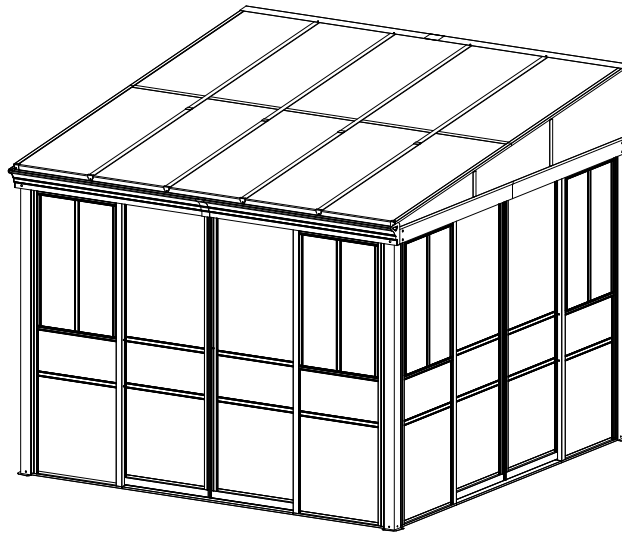




Note: The gazebo needs to be installed in cooperation with five people.
The following tools are not included and needed for assembly:

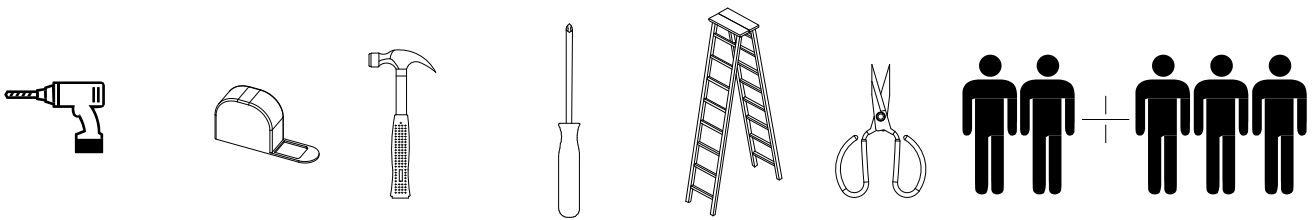

Pistol Drill Tape Measure Hammer Screwdriver Ladder Scissor 5 People

ATTENTION:



1. Please check the manual carefully and make sure you have received all the parts.
2. If any parts are missing, please let us know the letter marked on the part.
3. If any parts are damaged, please send us clear photos. We will review them and provide the best solution as soon as possible.
4. If you have any problems, please feel free to contact us. Our professional customer service and after-sales team are always ready to help you.
5. You can reach us via email at customer01service@hotmail.com.

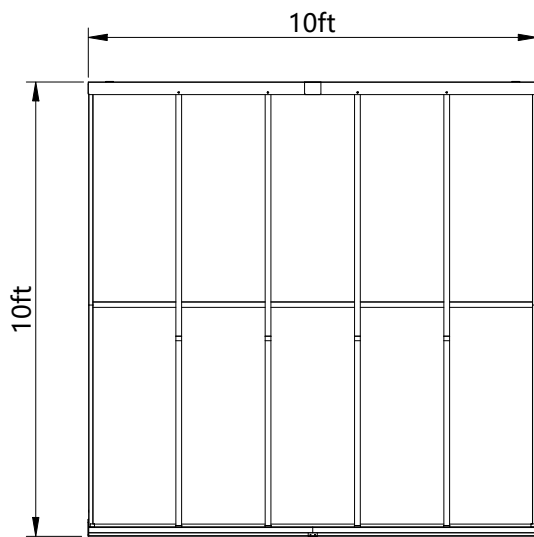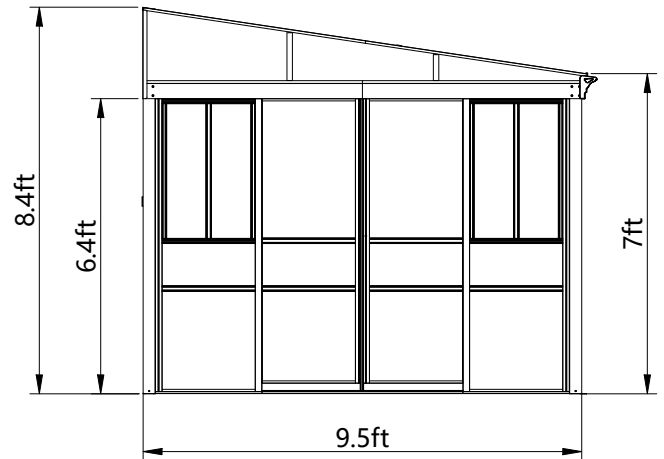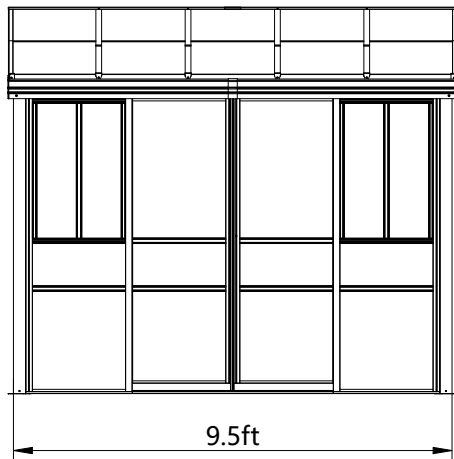


Box A		Box B		Box C	
Part #	Qty	Part #	Qty	Part #	Qty
ⓈC1	1	ⓈA5	1	ⓈE2	1
ⓈC1-1	1	ⓈA5-1	1	ⓈE2-1	1
ⓈC2	1	ⓈA2	2	ⓈF1	4
ⓈC2-1	1	ⓈA2-1	2	ⓈL7	1
ⓈC3	1	ⓈB4	1	ⓈL7-1	1
ⓈC3-1	1	ⓈB4-1	1	ⓈL3	1
ⓈO1	2	ⓈB5	2	ⓈL3-1	1
ⓈO1-1	2	ⓈB5-1	2	Ⓢ1B	3
ⓈE1	1	ⓈF2	4	Ⓢ2B	3
ⓈE1-1	1	Ⓢ1E	12	Ⓢ5B	3
ⓈG4	4	Ⓢ2J	2	Ⓢ6B	3
ⓈG5	6			Ⓢ1D	3
ⓈH6	5			Ⓢ2D	3
ⓈH2	2			Ⓢ1C	3
ⓈH3	2			Ⓢ2C	3
Ⓢ1A	3				
Ⓢ2A	3				
Ⓢ1F	3				
Ⓢ2H	6				
Ⓢ2J	1				
Ⓢ2P	6				
Ⓢ2N	3				


Box D		(D4)	12	Box E																									
Part #	Qty	(D5)	12	Part #	Qty																								
(I1)	2	(1R)	12	(1G)	6																								
(I2)	2	(3R)	12	(3G)	24																								
(J)	2	(Z3)	10	(2K)	6																								
(J1)	2	(3-1)	12	(2L)	12																								
(K)	1	(4-1)	12	(2M)	6																								
(P)	1	(5-1)	2	(R1)	1																								
(P1)	2	(15)	1	(R1-1)	1																								
(P2)	4	Hardware Pack Parts 1-14,16-18	1	(R2)	1																								
(P3)	3			(R2-1)	1																								
(Q2)	22	Instruction Manual	1	(R3)	1																								
(Q3)	2	<table border="1"><tr><td colspan="6">10x10</td></tr><tr><td>AB</td><td>AB</td><td>AB</td><td>BA</td><td>BA</td><td>BA</td></tr><tr><td>AD</td><td>AD</td><td>AD</td><td>DA</td><td>DA</td><td>DA</td></tr><tr><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td></tr></table>	10x10						AB	AB	AB	BA	BA	BA	AD	AD	AD	DA	DA	DA	AF	AF	AF	AF	AF	AF	1	(R3-1)	1
10x10																													
AB	AB	AB	BA	BA	BA																								
AD	AD	AD	DA	DA	DA																								
AF	AF	AF	AF	AF	AF																								
(U1)	3	(S)	6																										
(U2)	3			(S1)	12																								
(U3)	3			(S2)	12																								
(U4)	3			(S3)	6																								
(V1)	1			(S4)	6																								
(V2)	1			(1S)	6																								
(V3)	4																												
(W)	2																												

Remove the plastic packing blocks from both ends of profiles 1E, 1G, 3G, 2L and 2H.

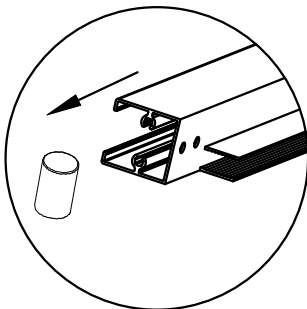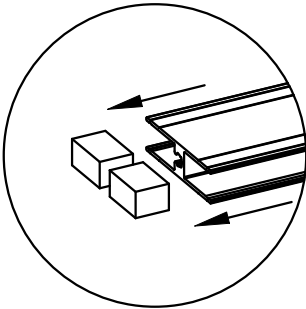





C1 1x



C1-1 1x




C2 1x



C2-1 1x




C3 1x




C3-1 1x




A5 1x



A5-1 1x



A2 2x




A2-1 2x




B4 1x



B4-1 1x



B5 2x




B5-1 2x



O1 2x











































O1-1 2x



































E1 1x



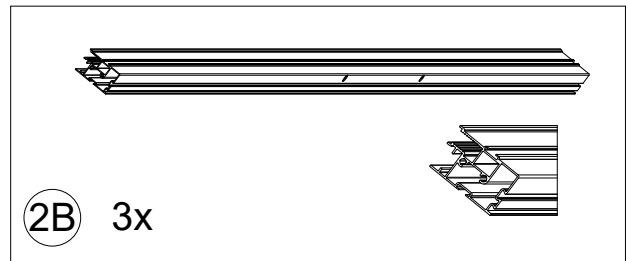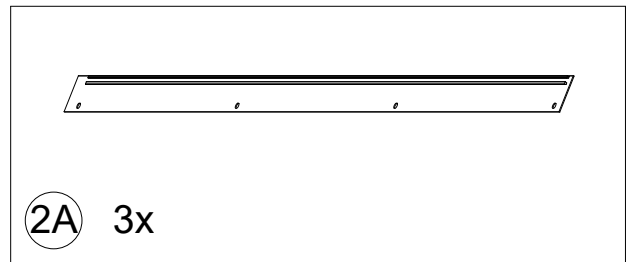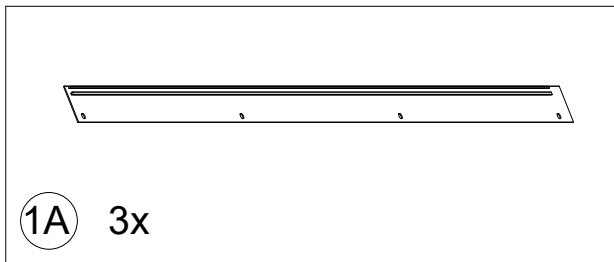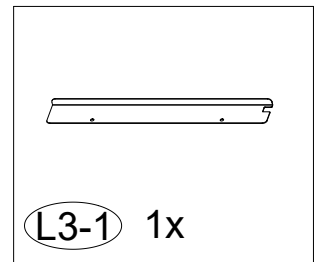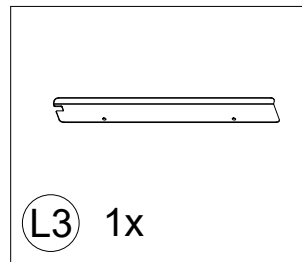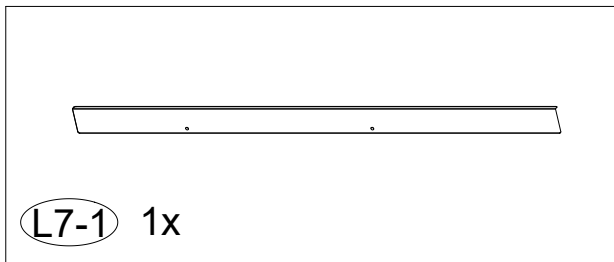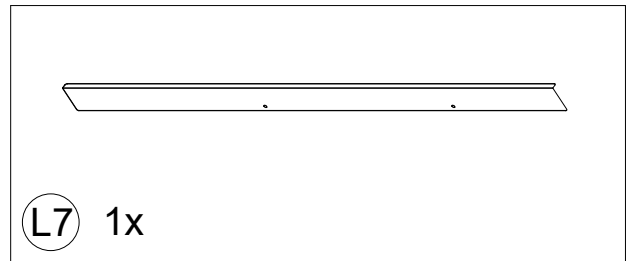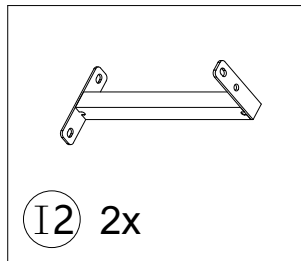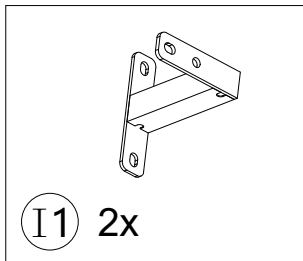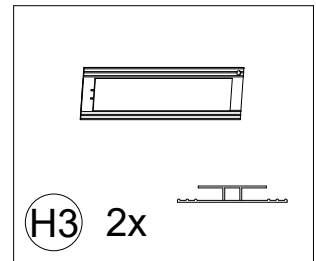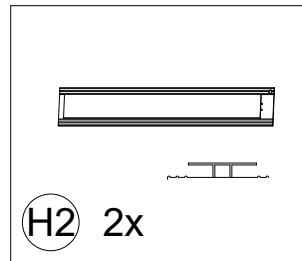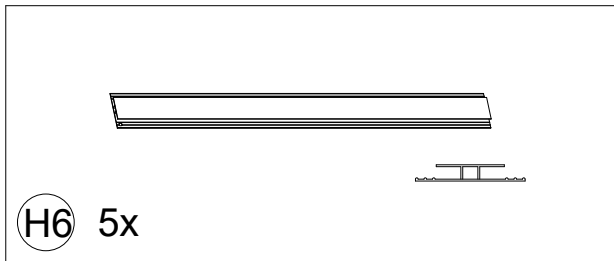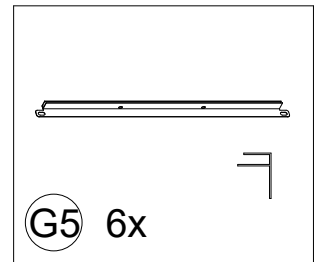
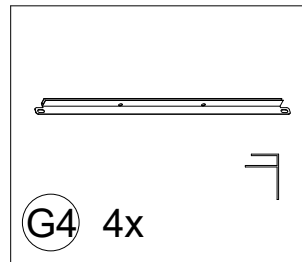
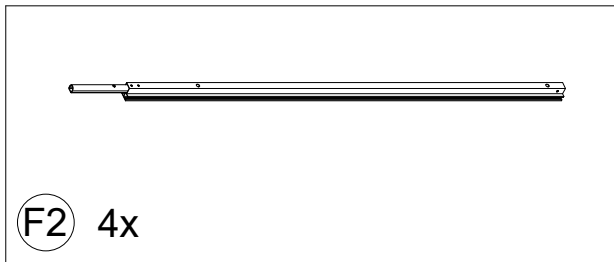
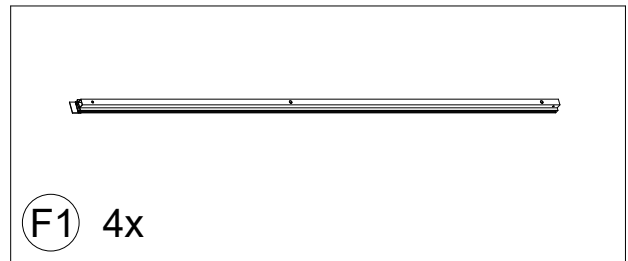
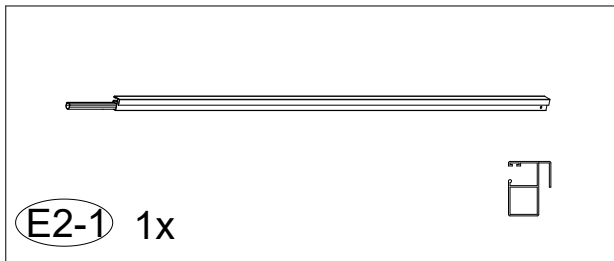
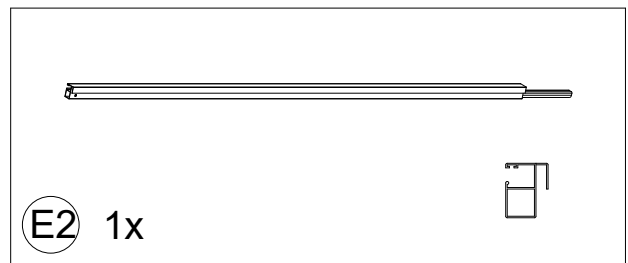
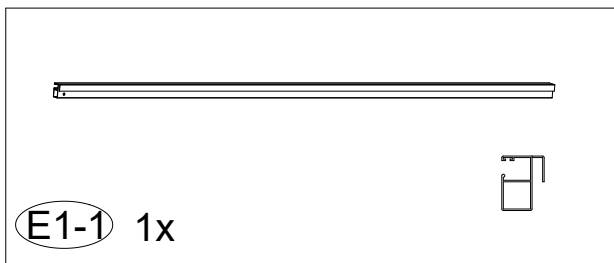


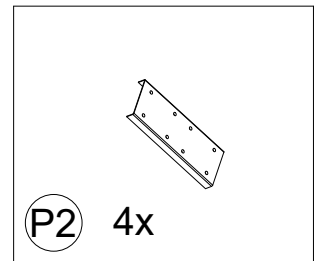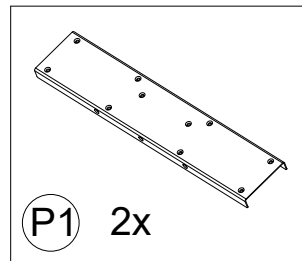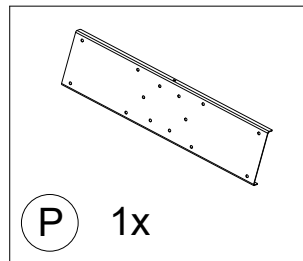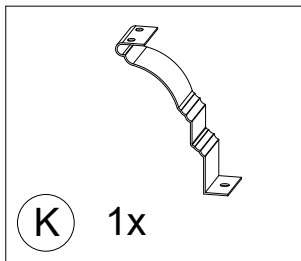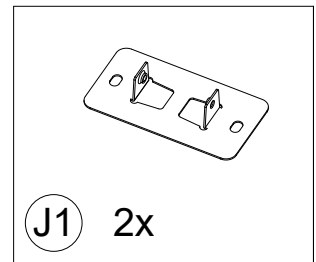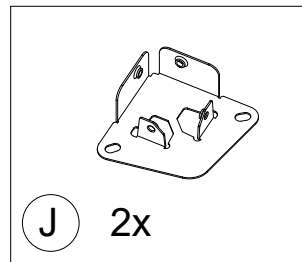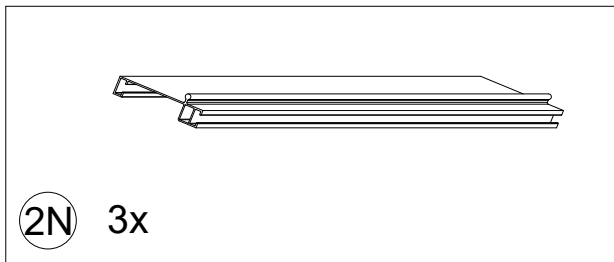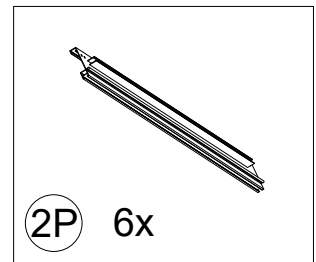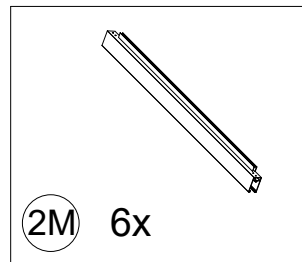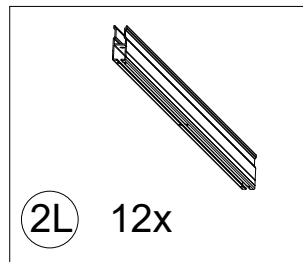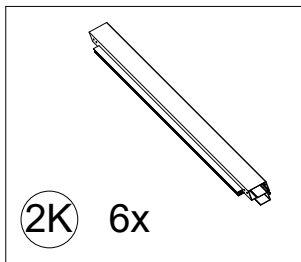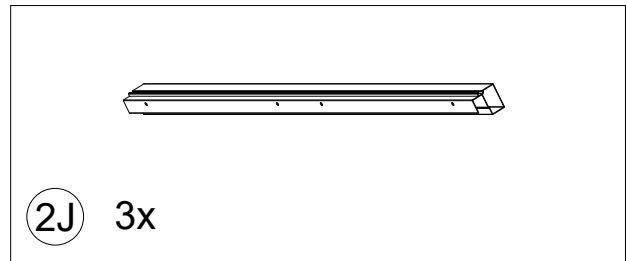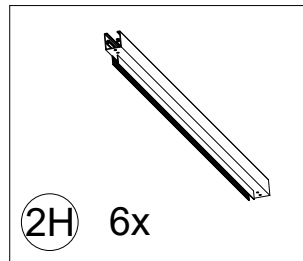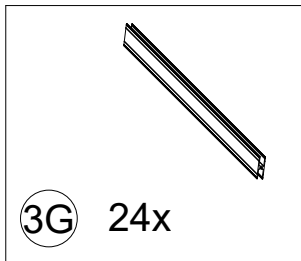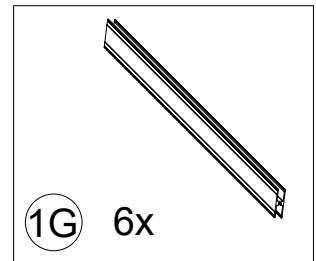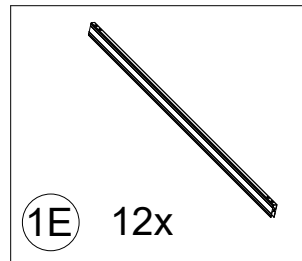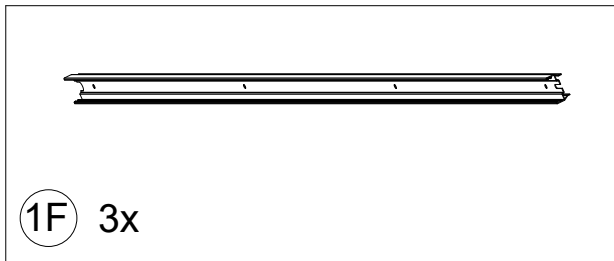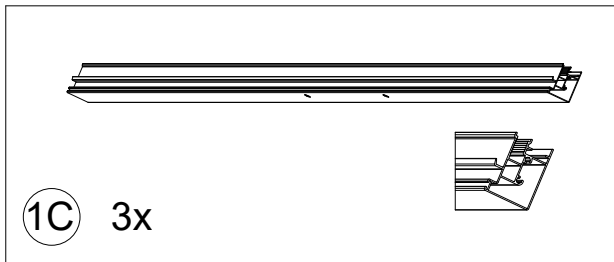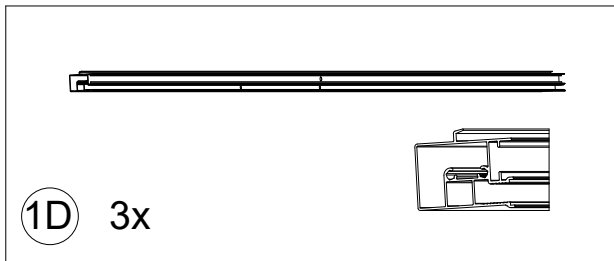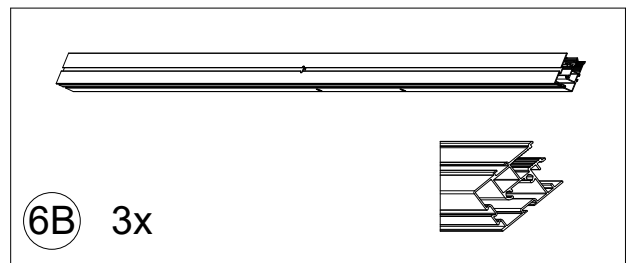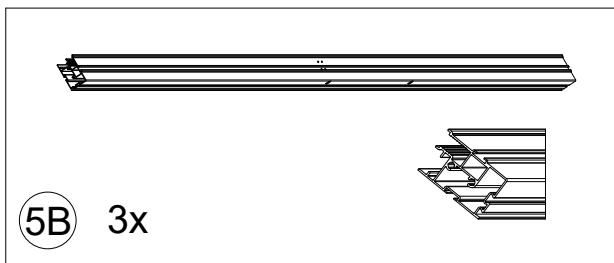


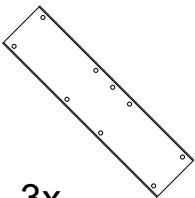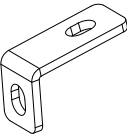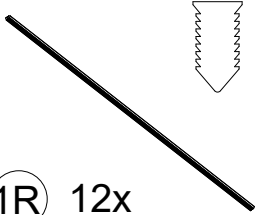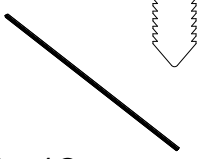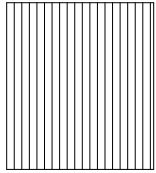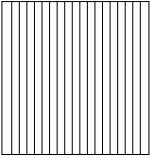 P3 3x	 Q2 22x	 Q3 2x	 U1 3x
 U2 3x	 U3 3x	 U4 3x	 V1 1x
 V2 1x	 V3 4x	 W 2x	 X1 6x
 X2 16x	 N1 1x	 N2 1x	 D1 24x
 D2 48x	 D3 12x	 D4 12x	 D5 12x
 1R 12x	 3R 12x	 R1 1x	 R1-1 1x
 R2 1x	 R2-1 1x	 R3 1x	 R3-1 1x
 S 6x	 S1 12x	 S2 12x	 S3 6x

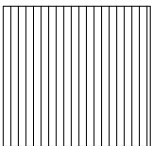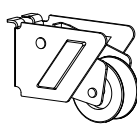
 (S4) 6x	 (1S) 6x	 (Z3) 10x	 6.2*11*15 (3-1) 12x
 (4-1) 12x	 51m (5-1) 2x		

Bags of Screws

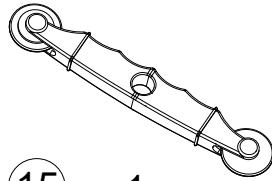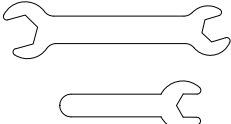
 M6x15 1 287x	 2 22x	 ST 4.8x12 3 14x	 M4x20 4 120x																		
 M4x35 5 48x	 M4x50 6 48x	 7 18x	 M5x6 8 72x																		
 M6 9 12x	 M5 10 36x	 M5x12 11 36x	 12 10x																		
 M5x15 13 12x	 M4x12 14 3x	 15 1x	 16 1x																		
 4mm 17 2x	 2.5mm 18 2x		<table><tr><td>AB</td><td>AB</td><td>AB</td><td>BA</td><td>BA</td><td>BA</td></tr><tr><td>AD</td><td>AD</td><td>AD</td><td>DA</td><td>DA</td><td>DA</td></tr><tr><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td><td>AF</td></tr></table> letter sticker 1x	AB	AB	AB	BA	BA	BA	AD	AD	AD	DA	DA	DA	AF	AF	AF	AF	AF	AF
AB	AB	AB	BA	BA	BA																
AD	AD	AD	DA	DA	DA																
AF	AF	AF	AF	AF	AF																

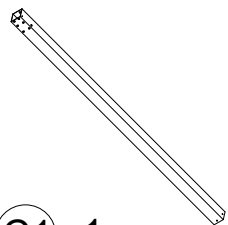


C1 1x

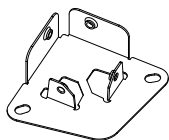

J 1x

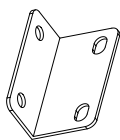

Q2 1x

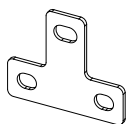


W 1x




M6x15


1 6x

<1>

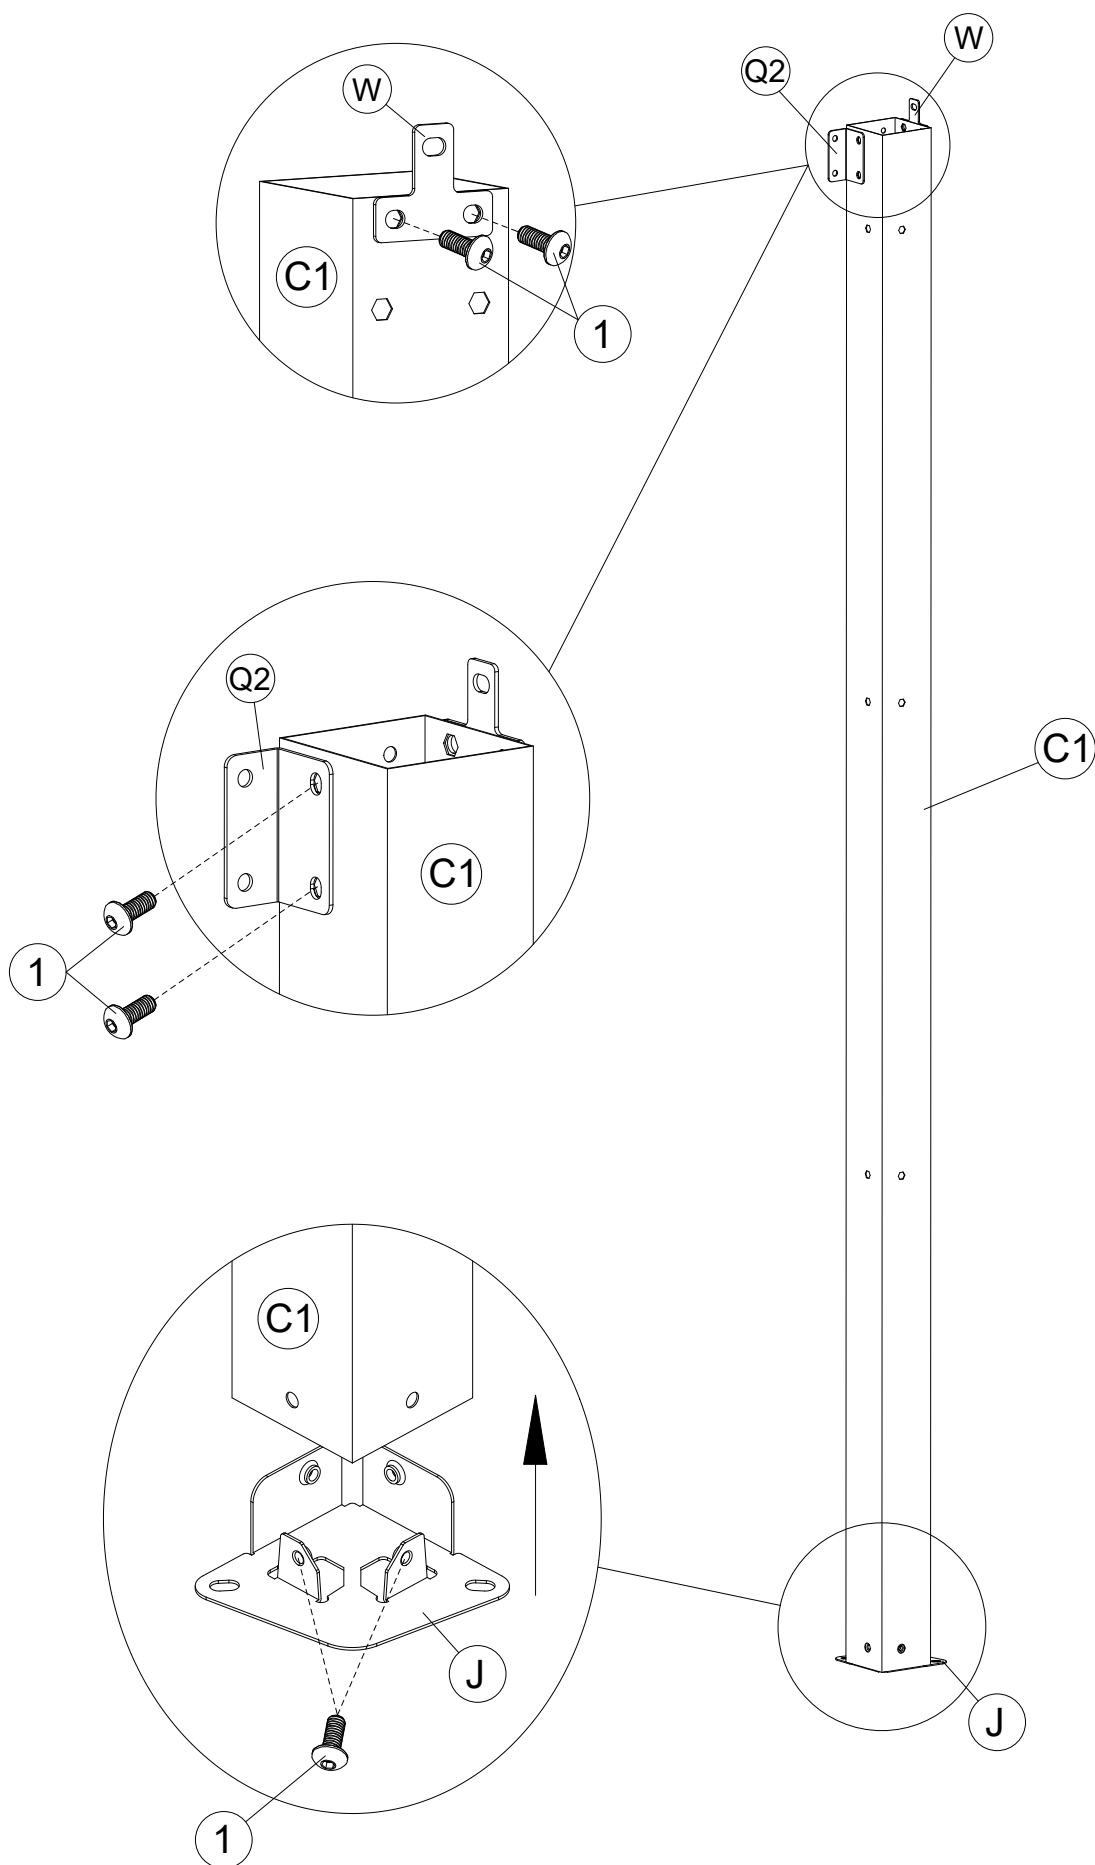


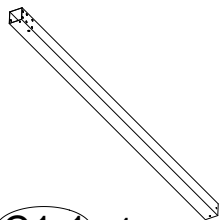


C1-1 1x

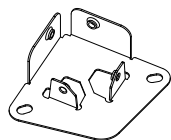

J 1x

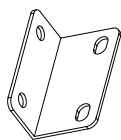

Q2 1x

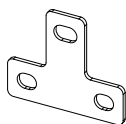


W 1x




M6x15

1 6x

<2>

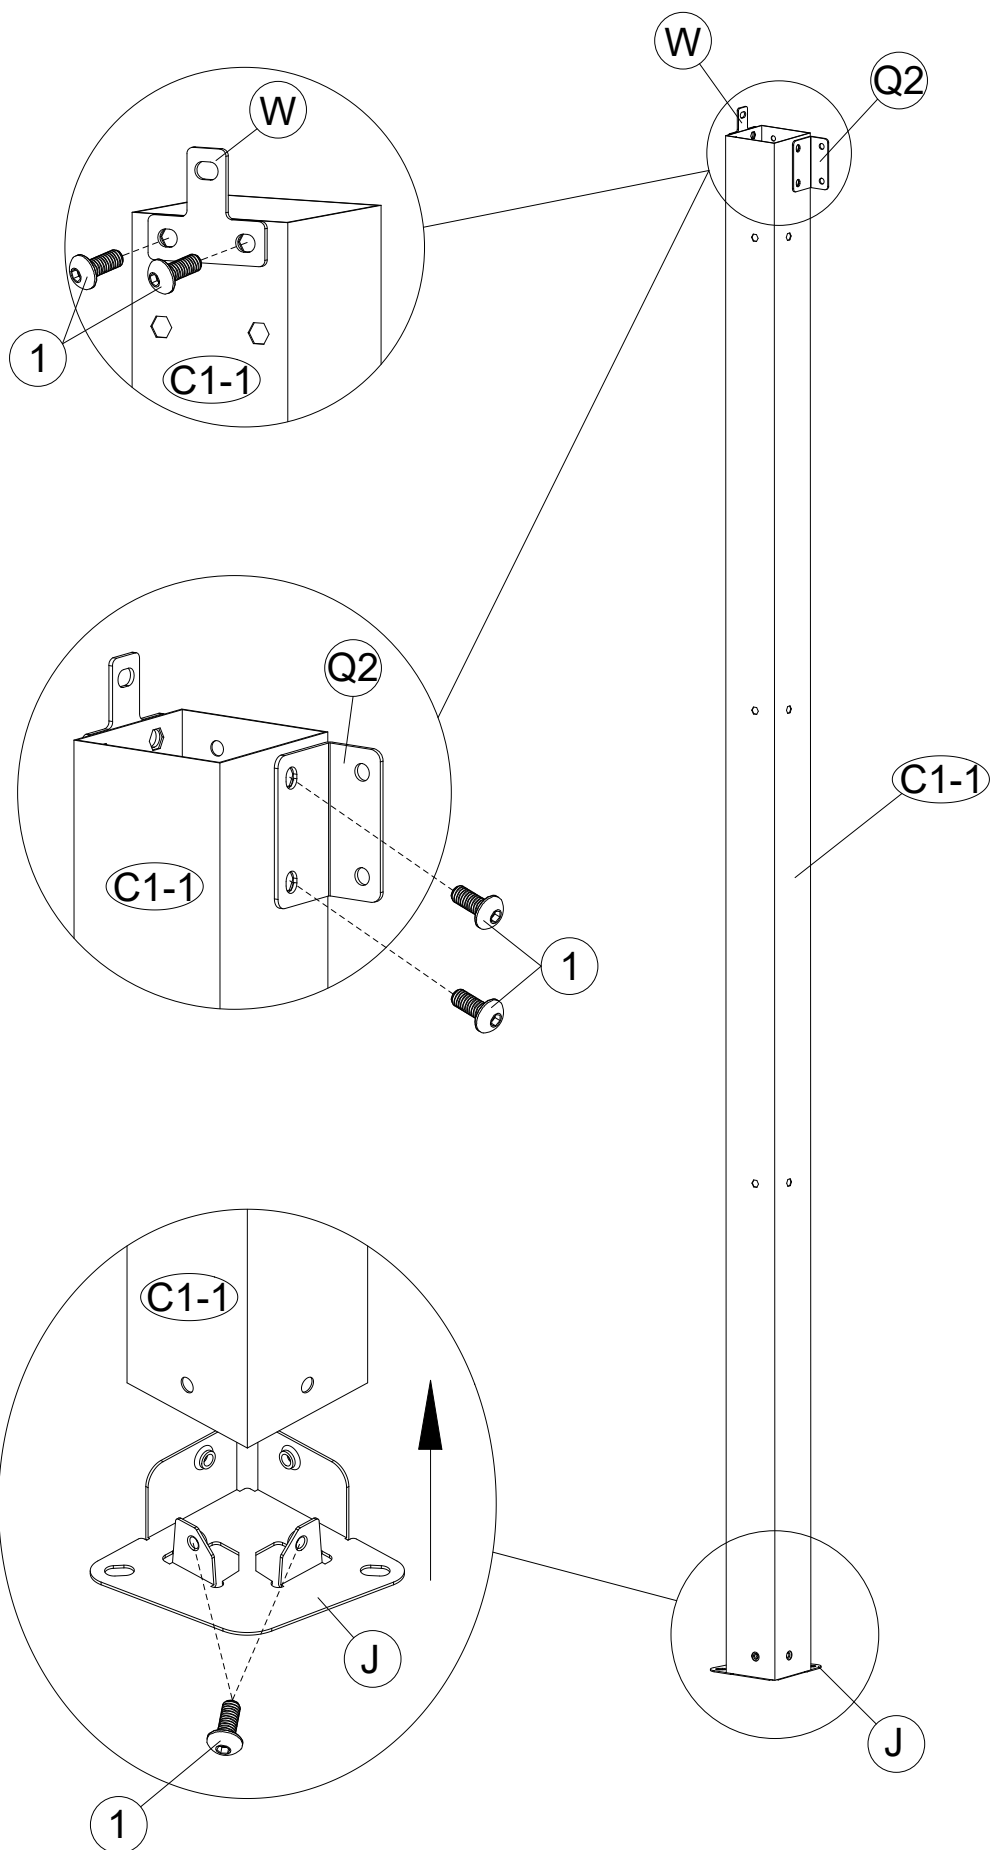


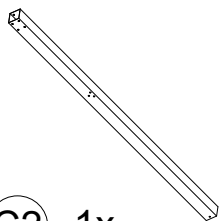


C2 1x




C3 1x

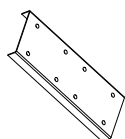

P2 2x

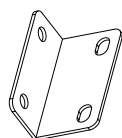

Q2 1x




J1 1x




M6x15

1 16x

<3>

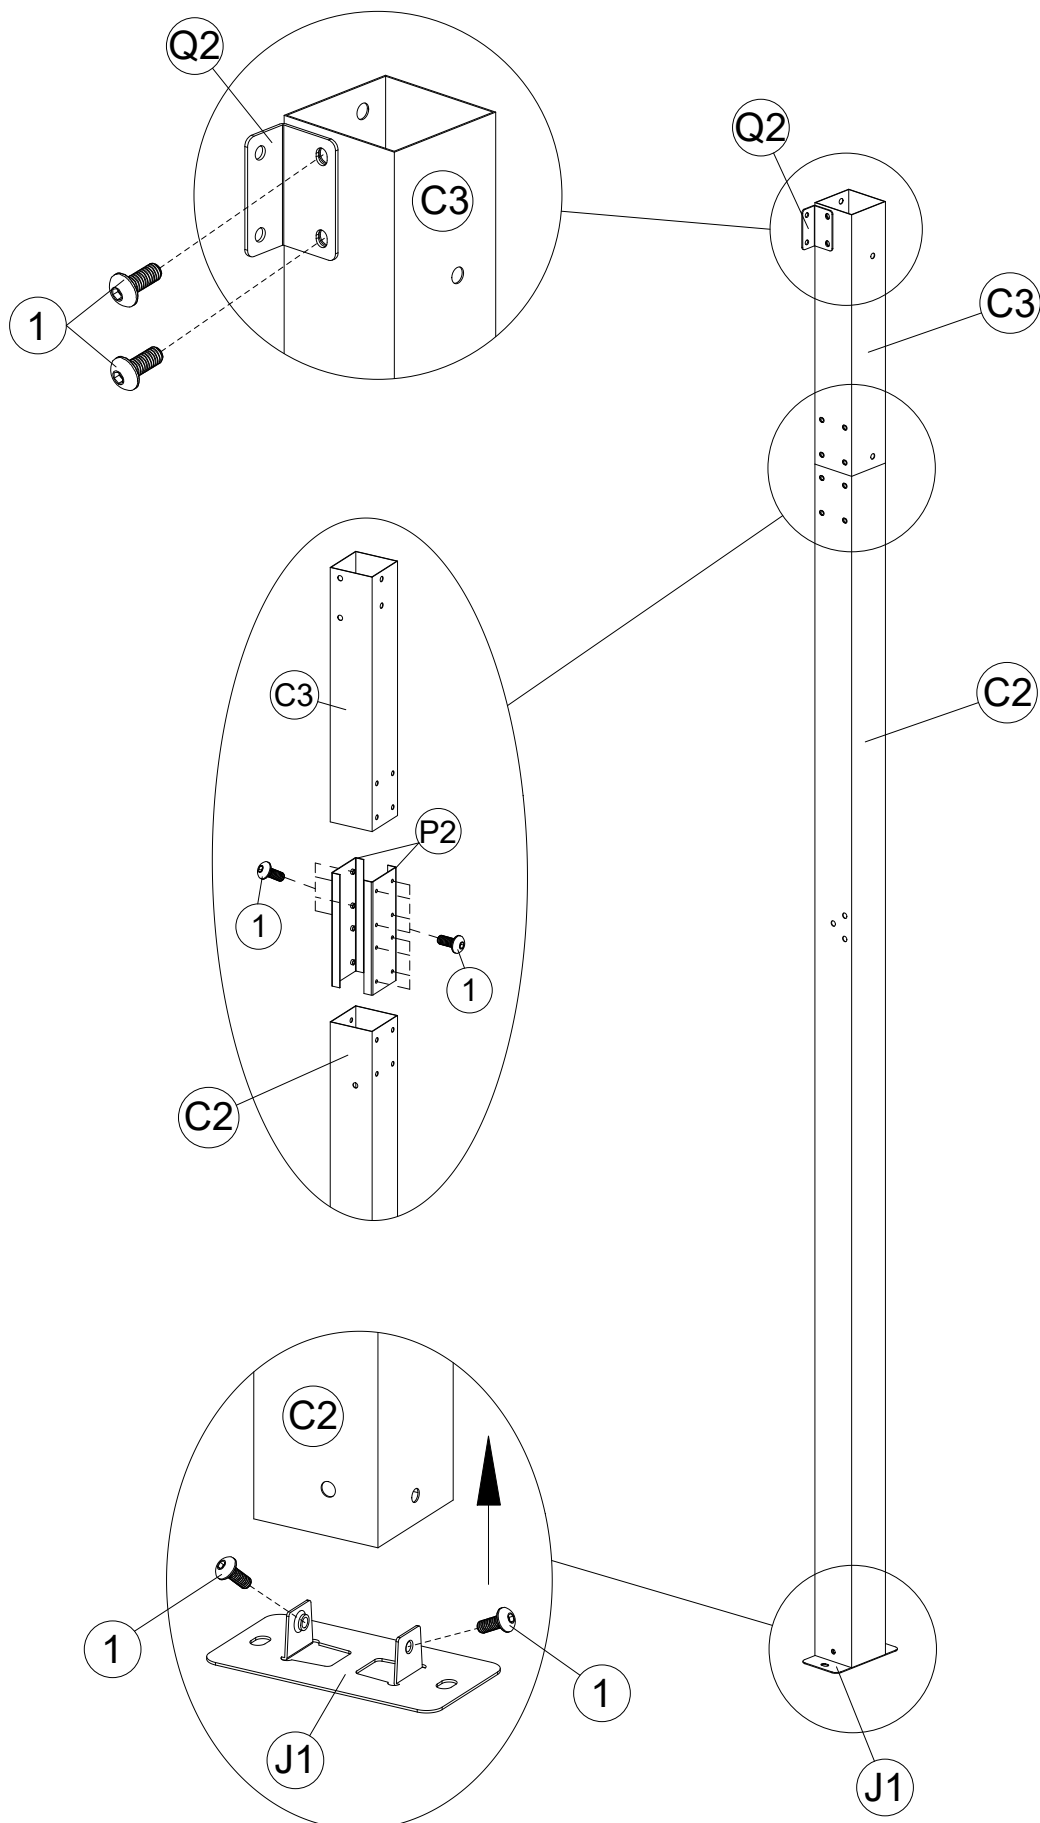


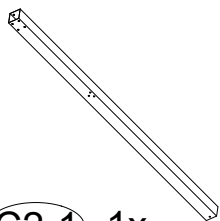


C2-1 1x




C3-1 1x

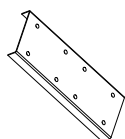

P2 2x

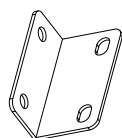

Q2 1x







J1 1x




M6x15

1 16x


<4>

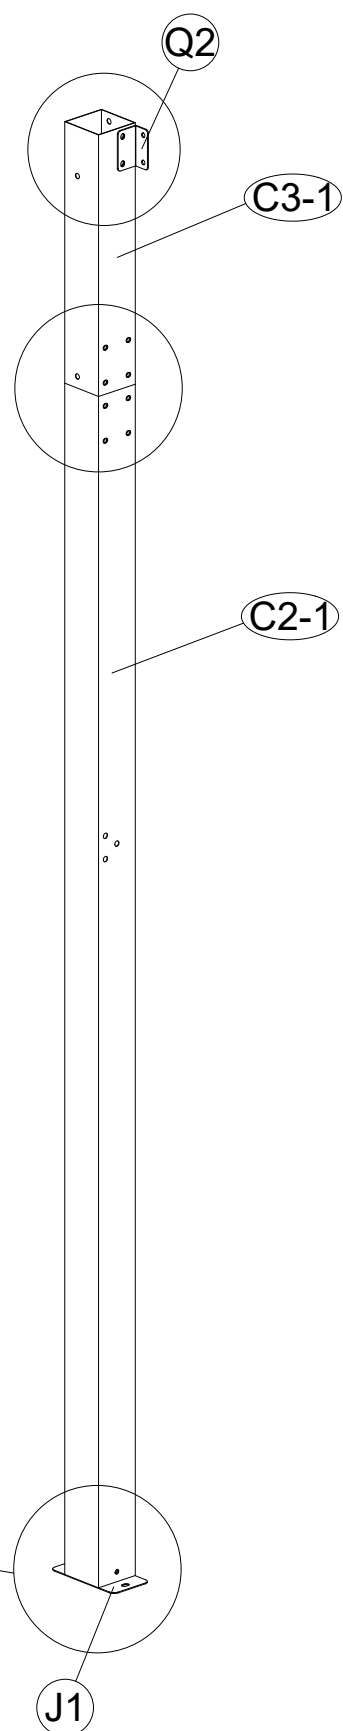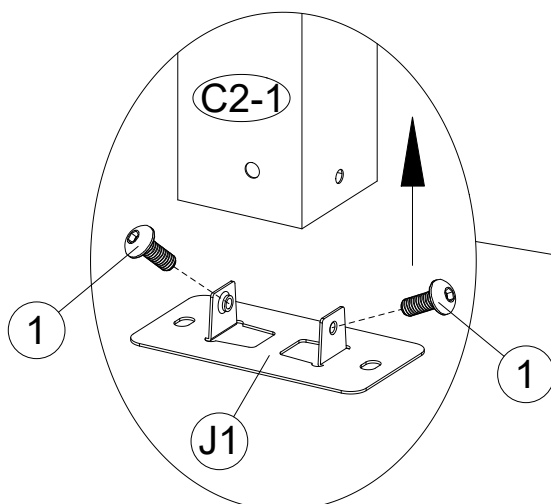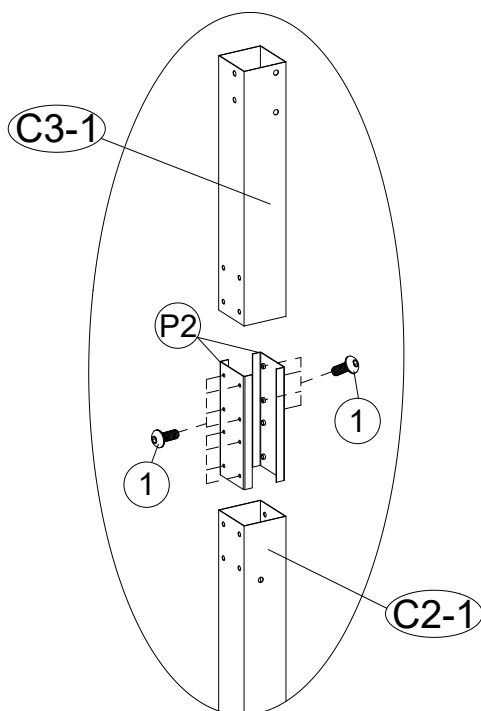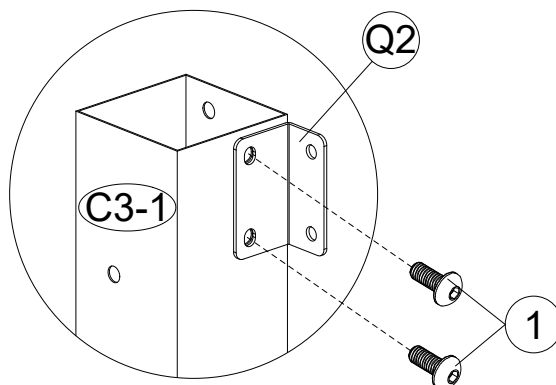


<5>

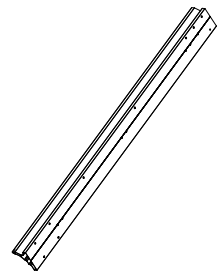


A5 1x

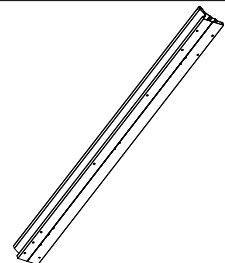

A5-1 1x

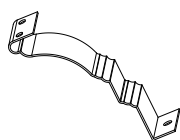

K 1x



P 1x





ST 4.8x12

3 2x




M6x15


1 11x

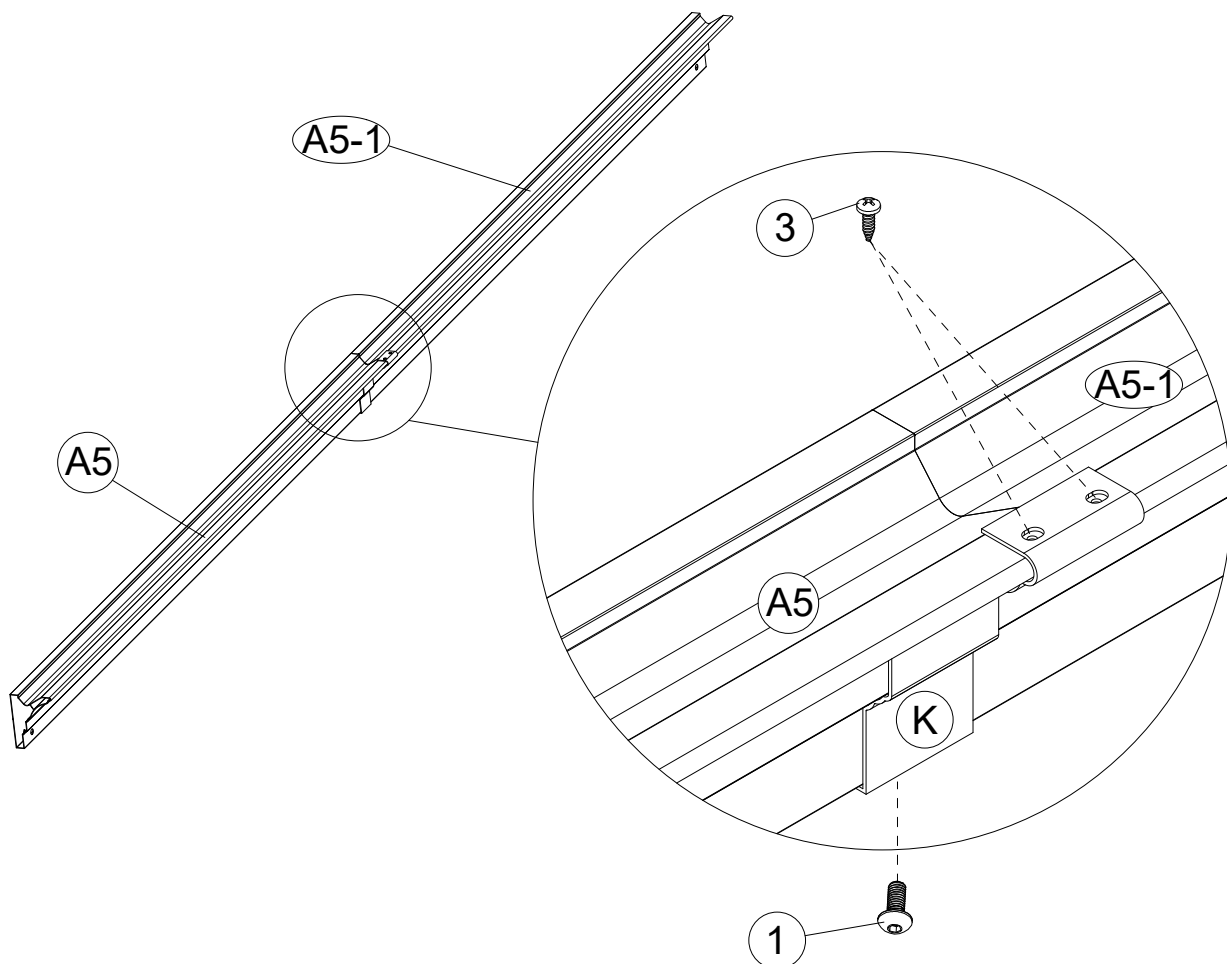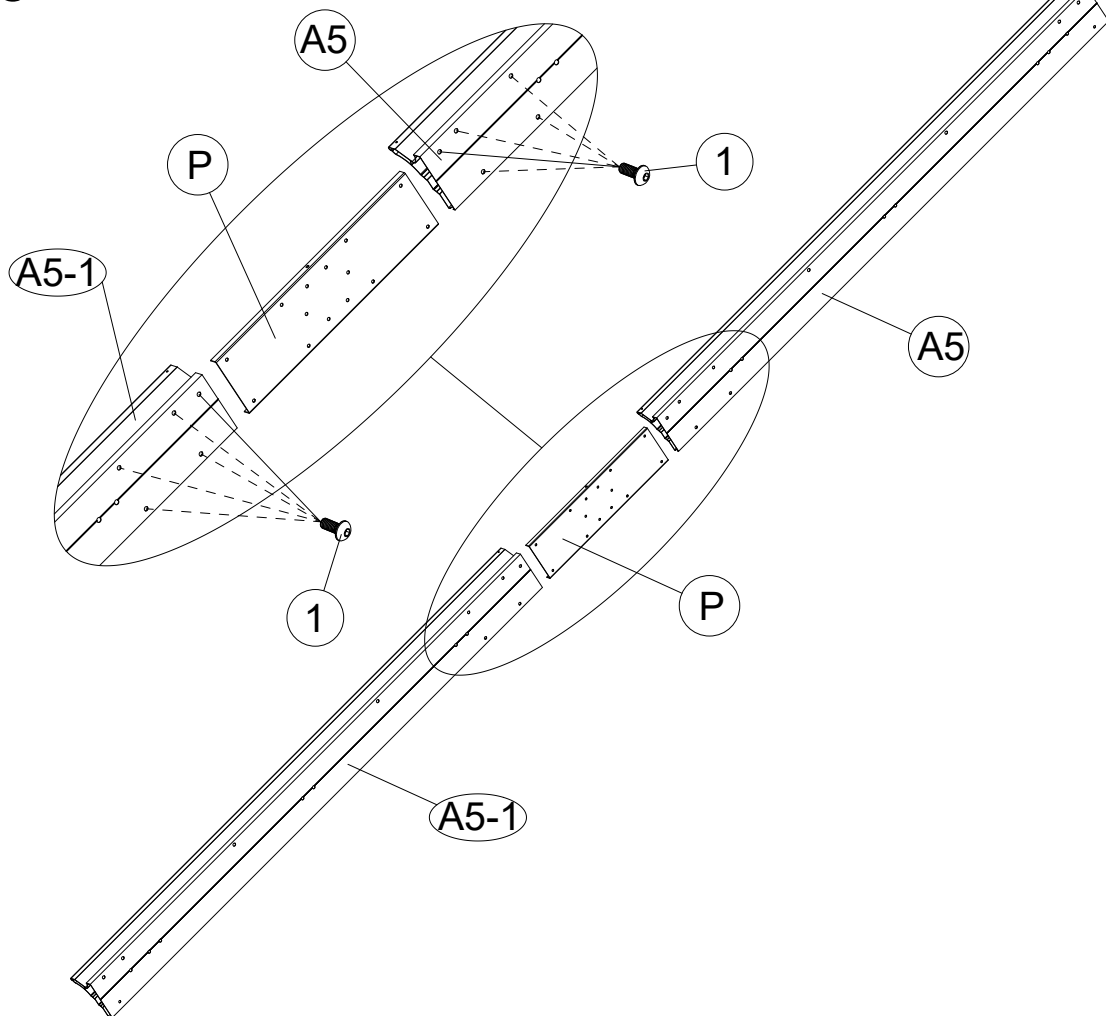


<6>

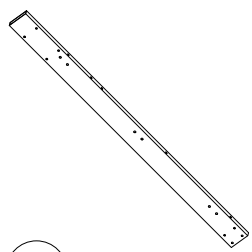


A2 2x

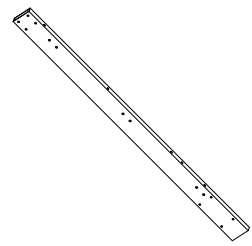


A2-1 2x

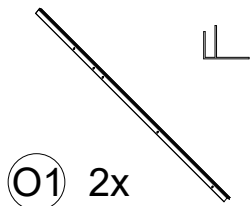


O1 2x

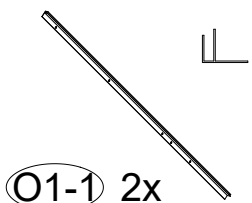


O1-1 2x

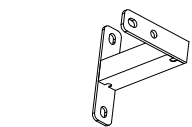

I1 2x



I2 2x




P1 2x




M6x15

1 40x


15

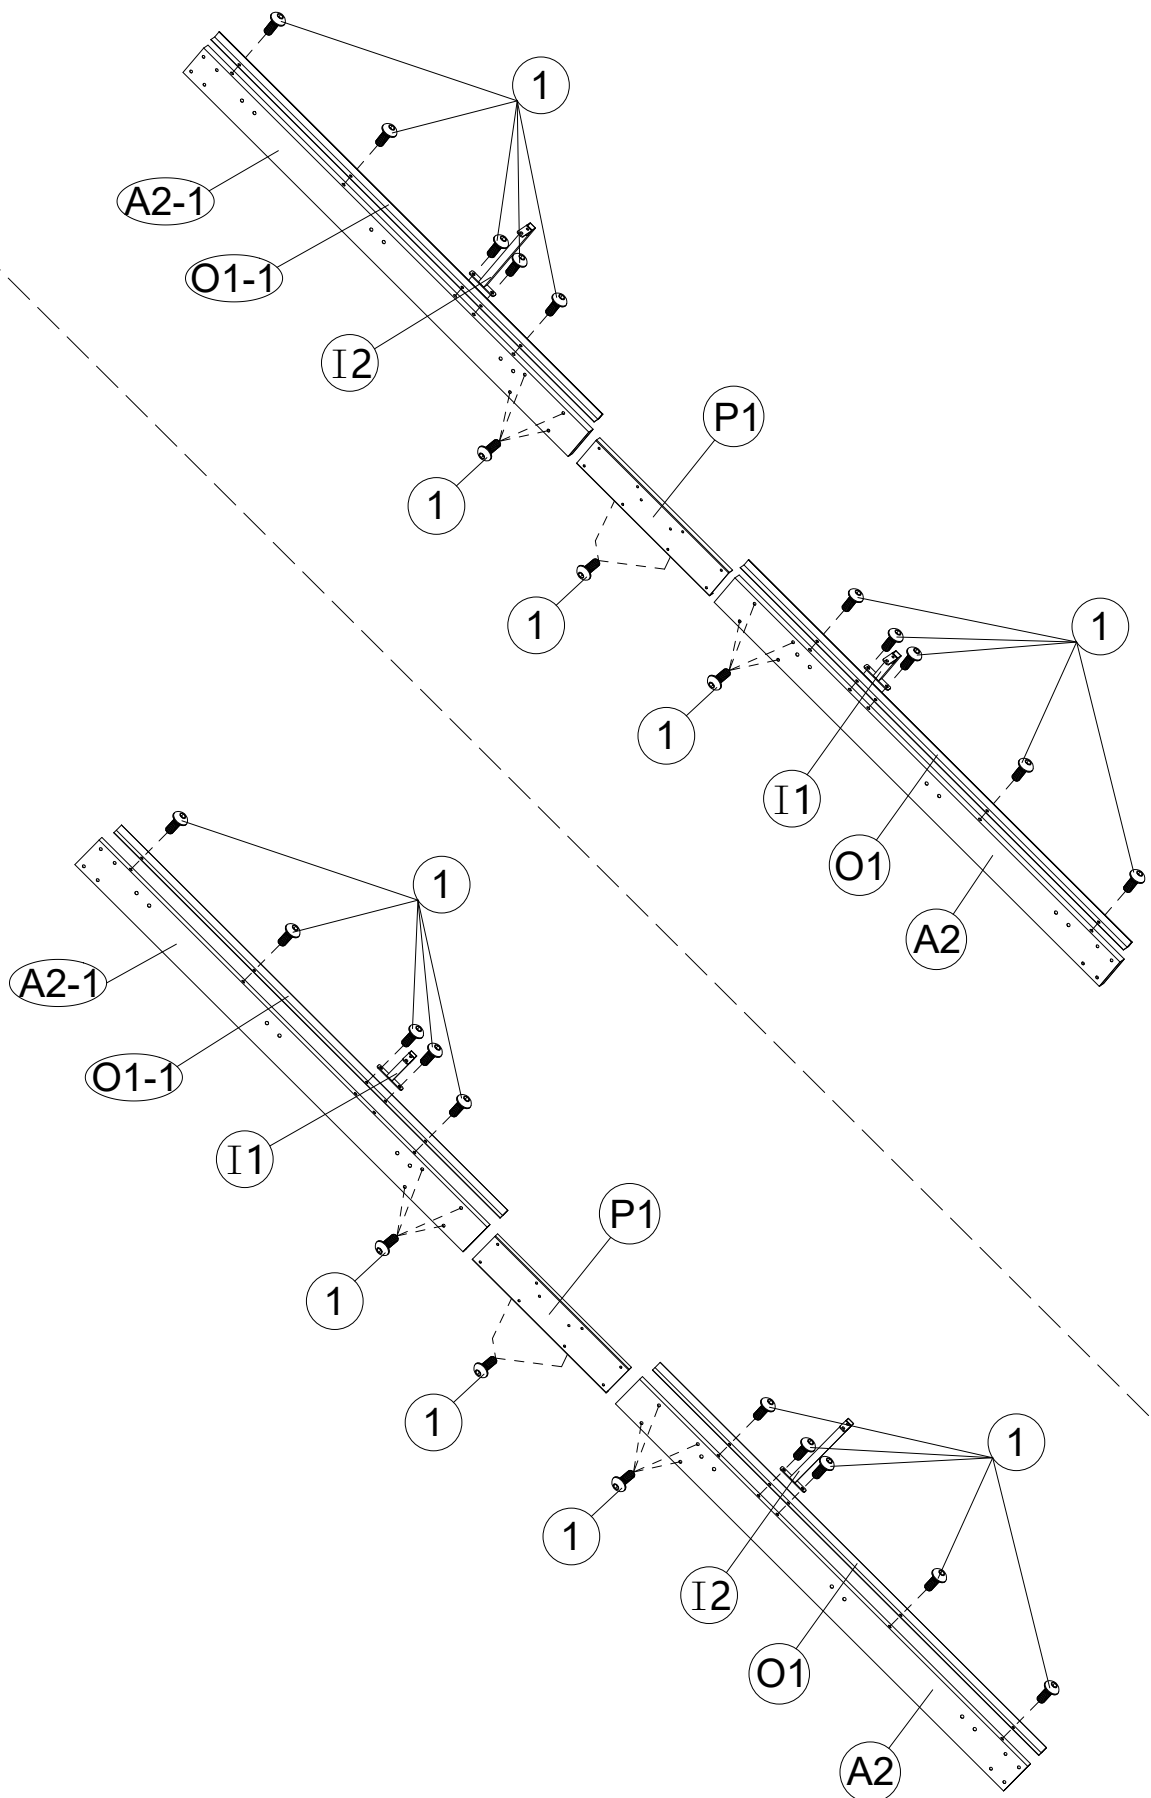


<7>

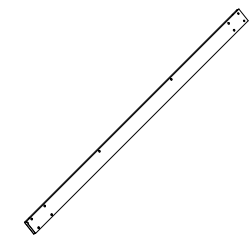

B4 1x

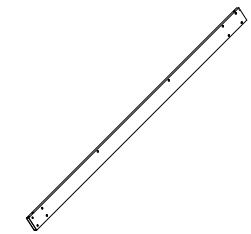


B4-1 1x

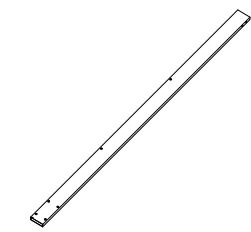

B5 2x



B5-1 2x

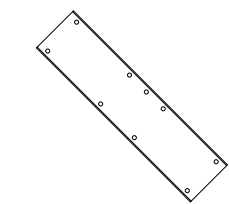


P3 3x



M6x15

1 30x

16

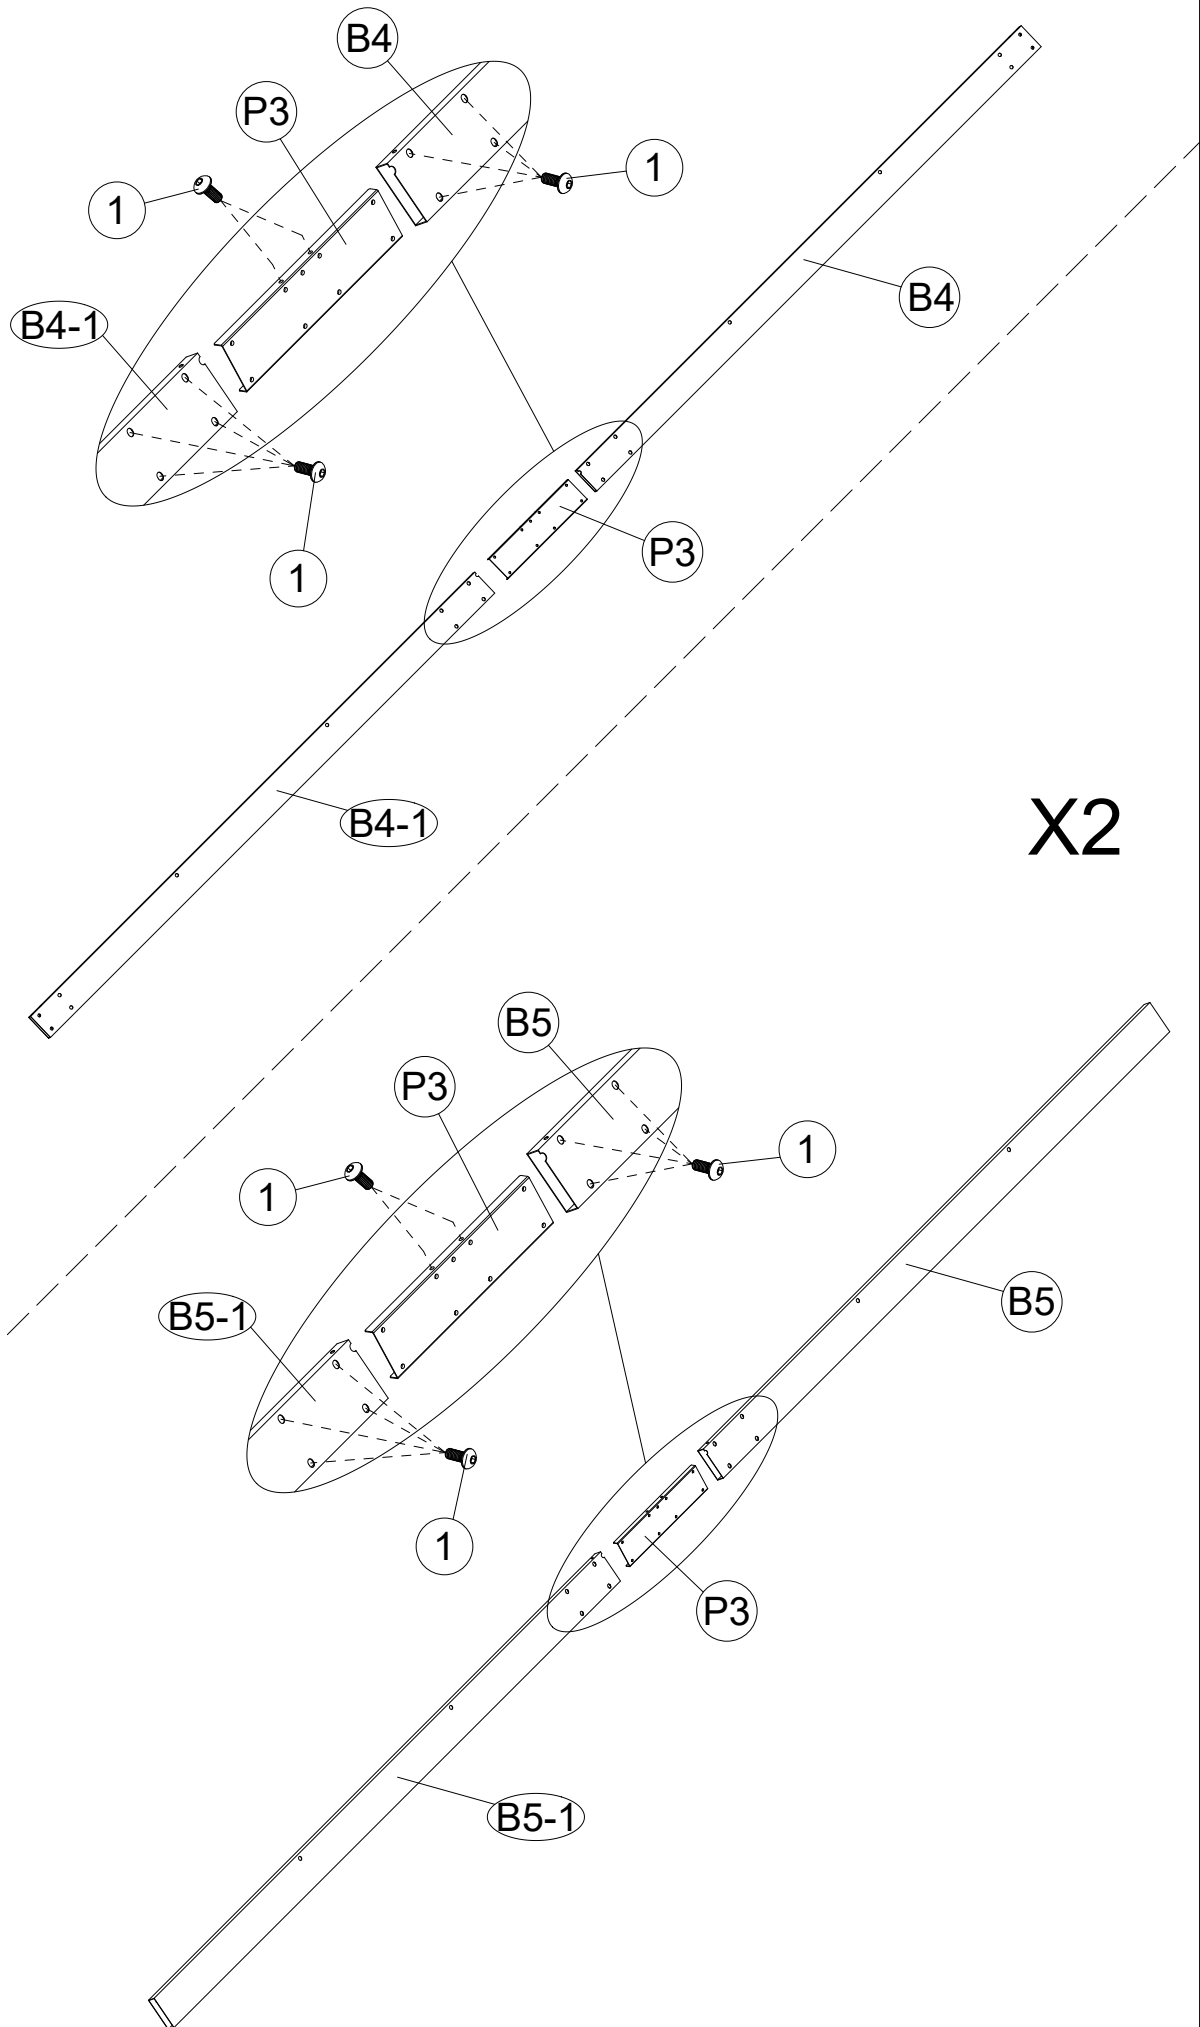

<8>




2 2x



M6x15


1 6x

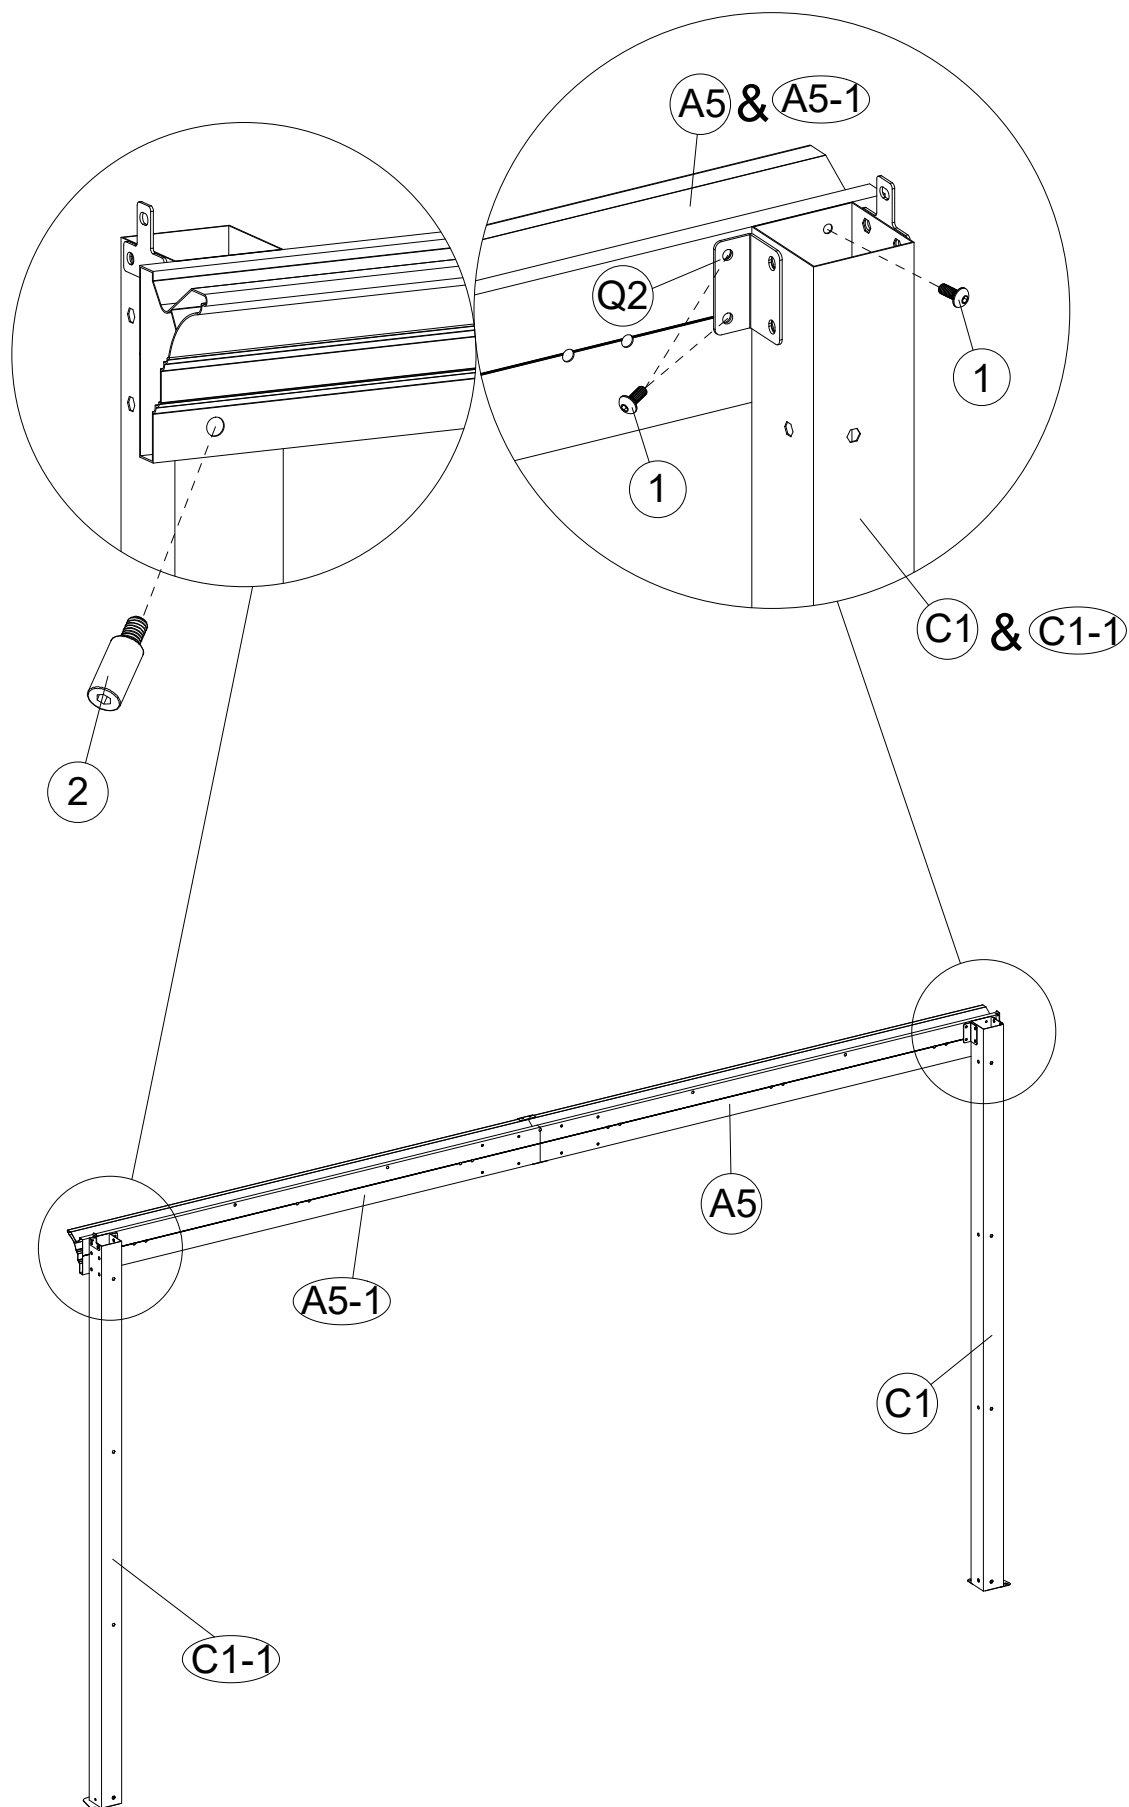



<9>


2 8x

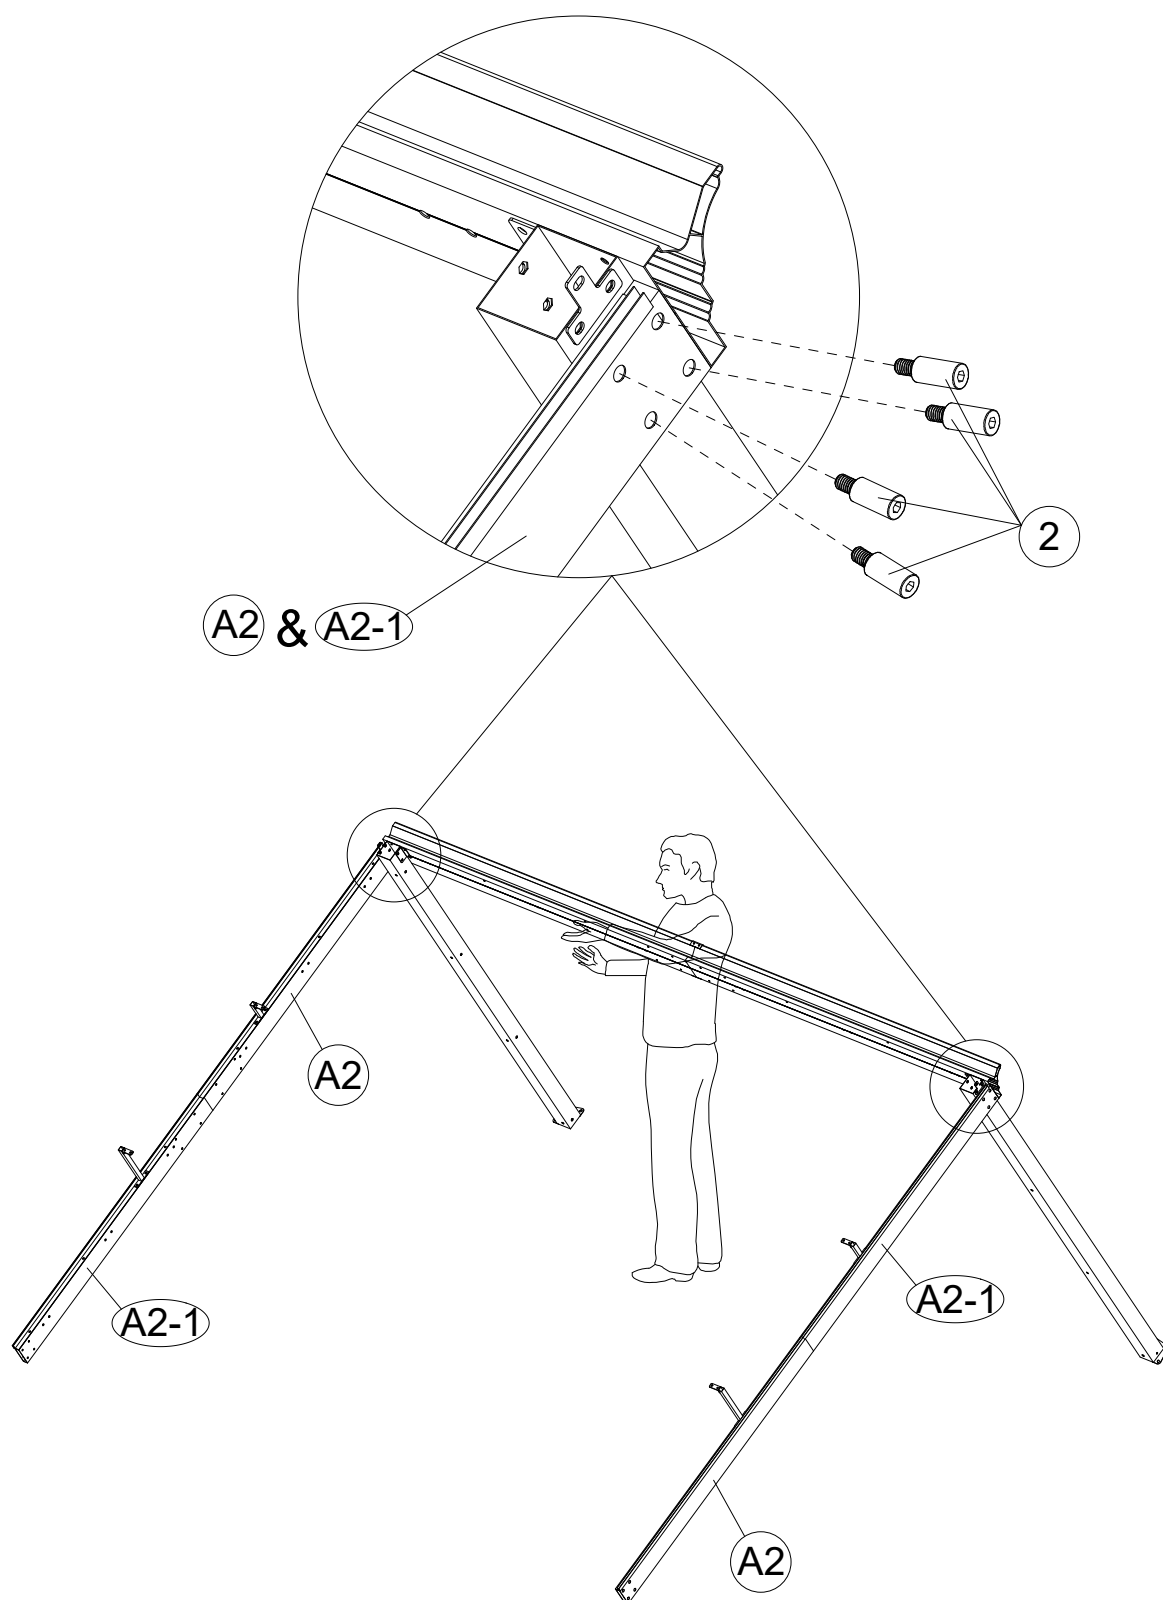




<10>

2 8x

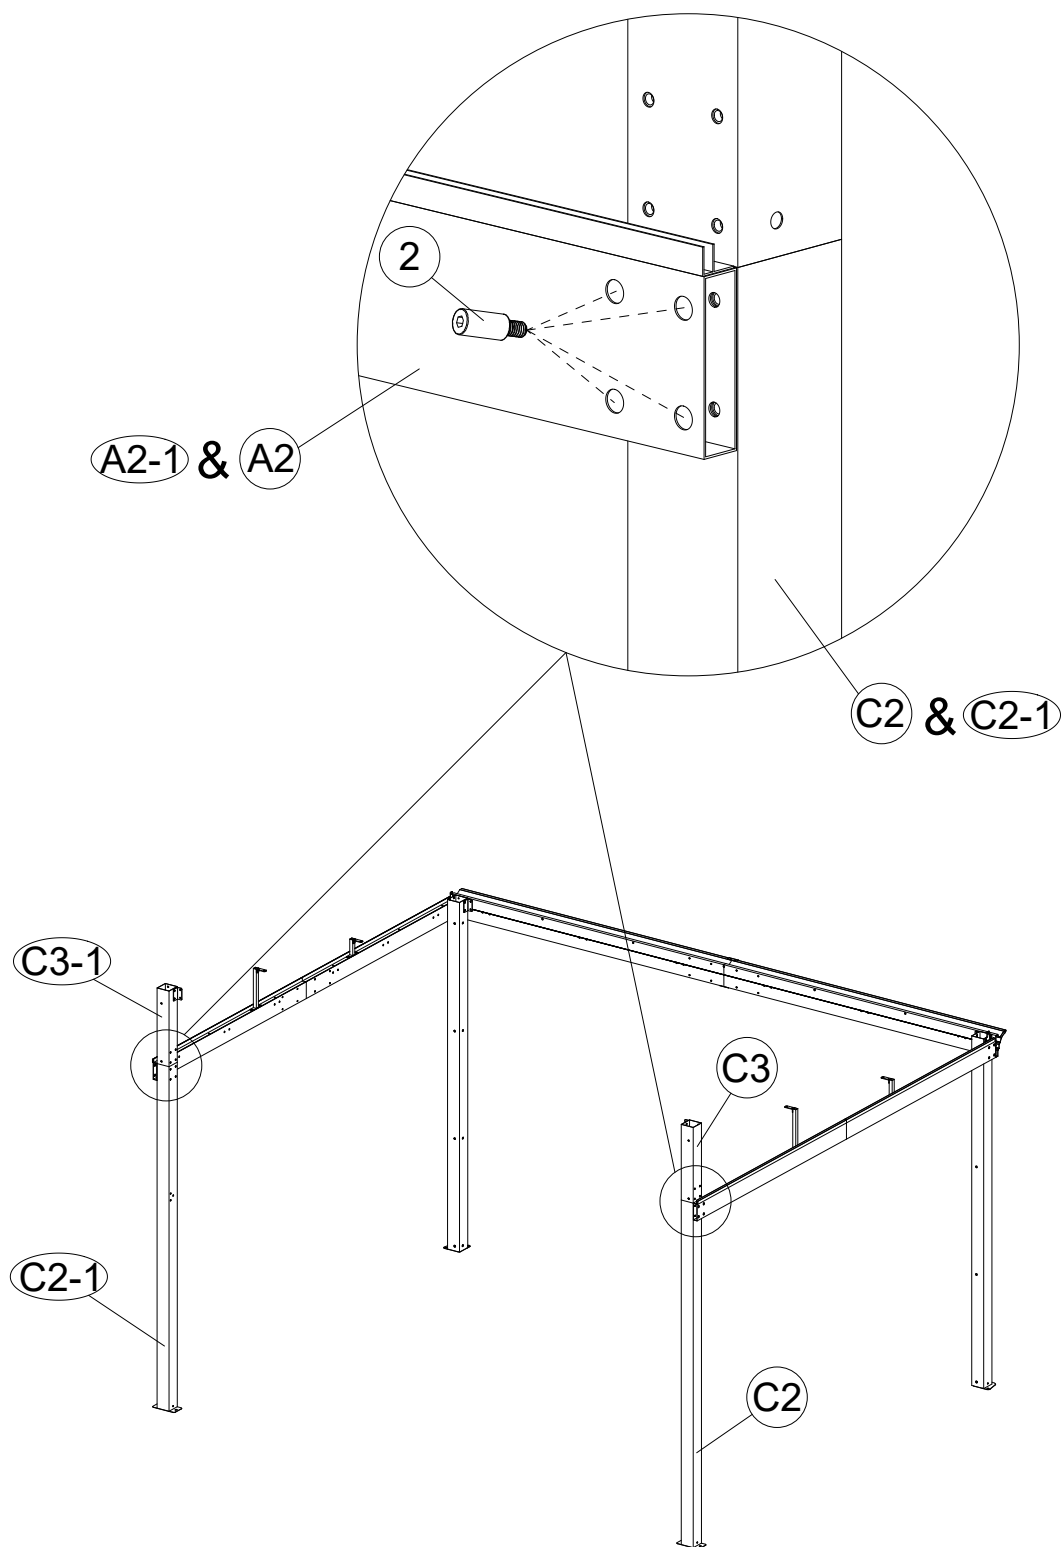

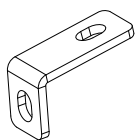

X1 2x




2 4x




M6x15

1 6x

<11>

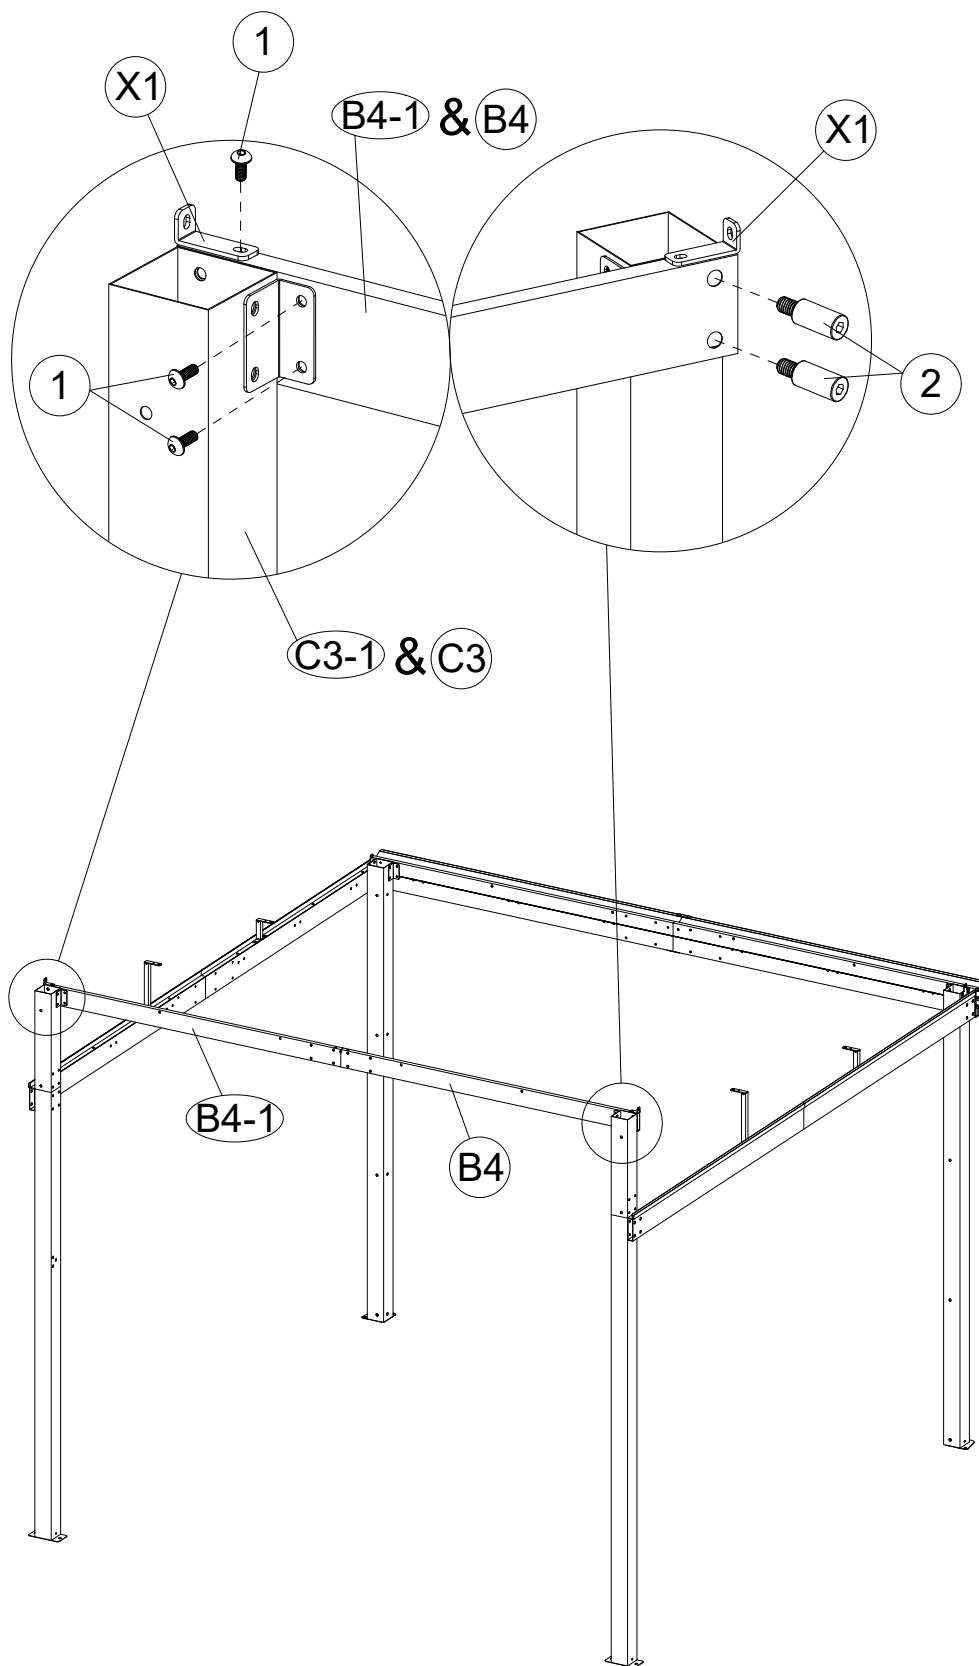

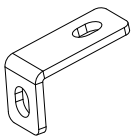


X1 4x




M6x15

1 12x


<12>

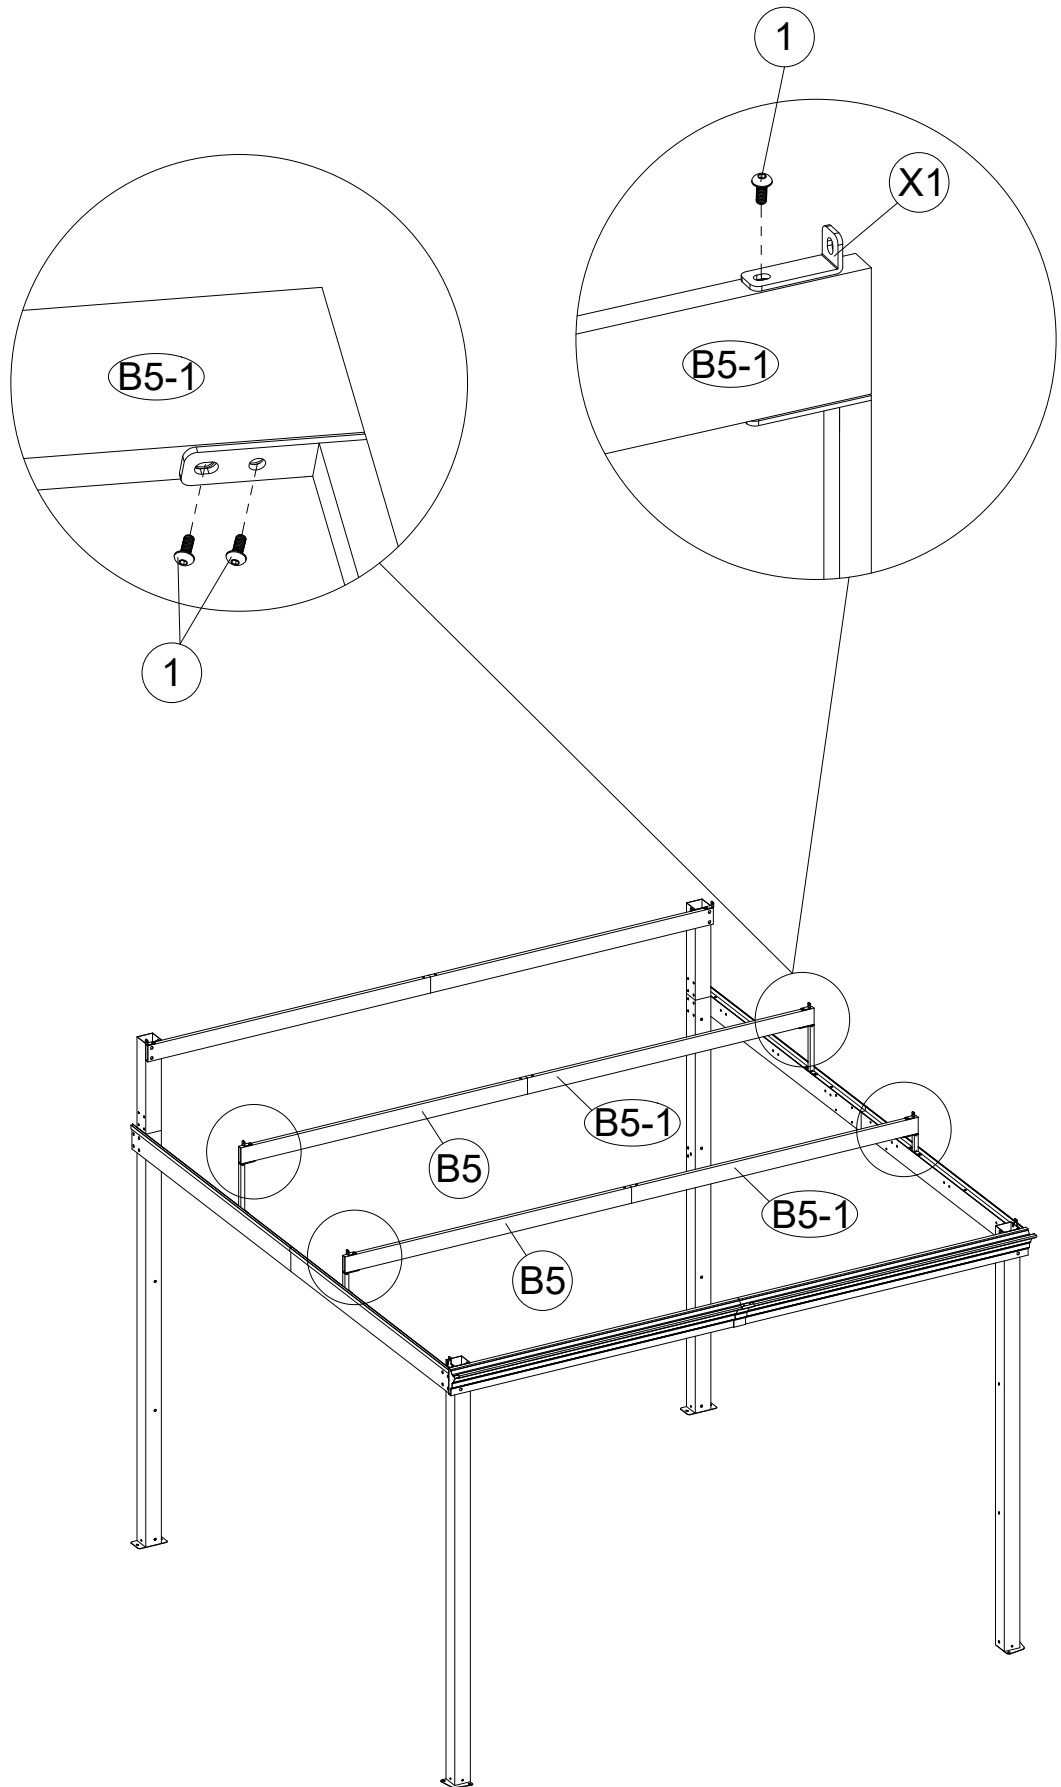


<13>




(R1) 1x




(R1-1) 1x




(R2) 1x




(R2-1) 1x




(R3) 1x



(R3-1) 1x




(H2) 2x


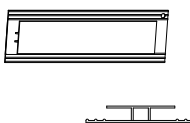


(H3) 2x

22

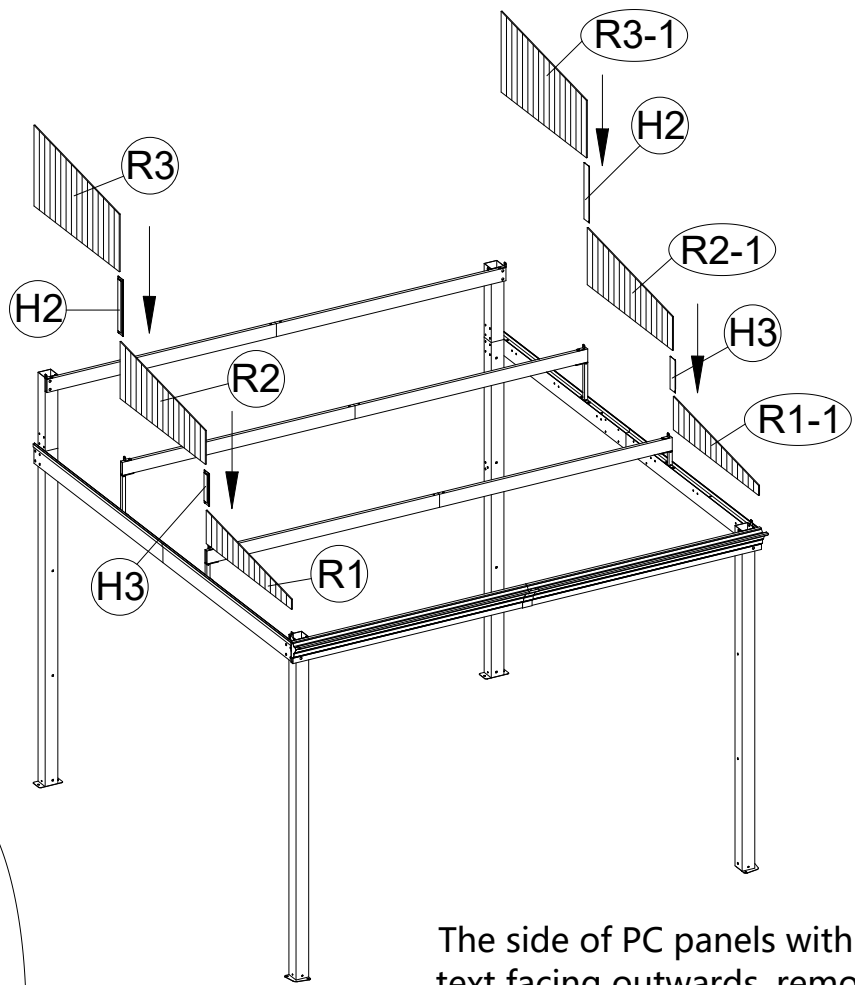

The side of PC panels with text facing outwards, remove the protective film and install the panel.

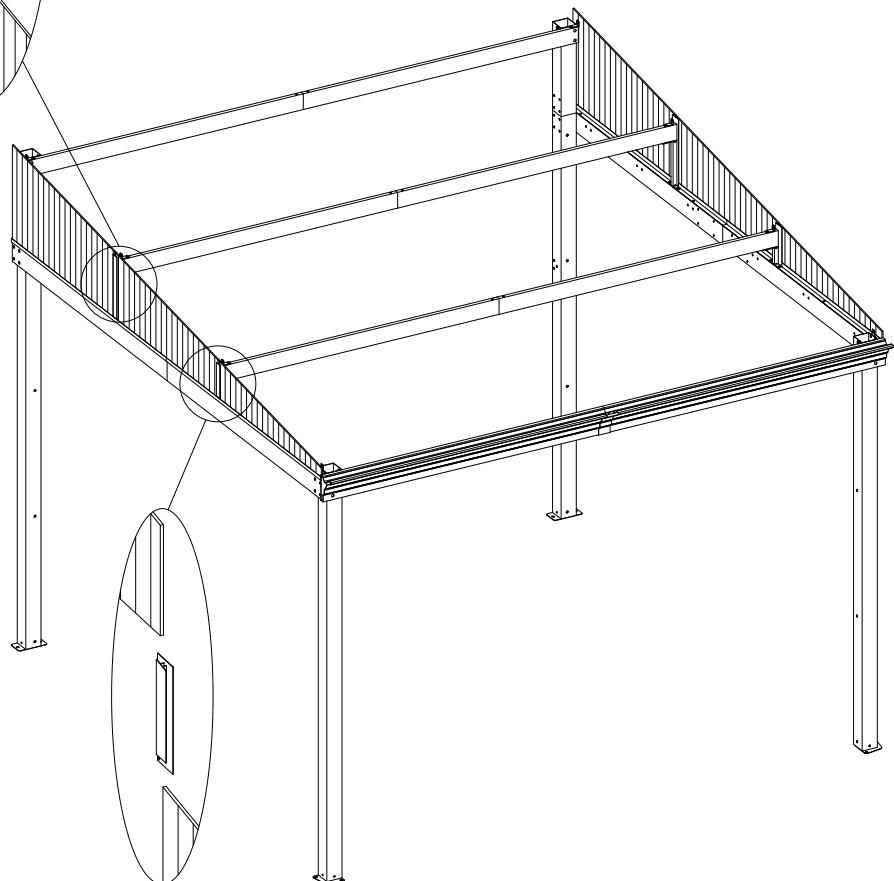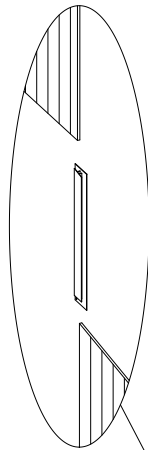



<14>

E1 1x

E1-1 1x

E2 1x

E2-1 1x

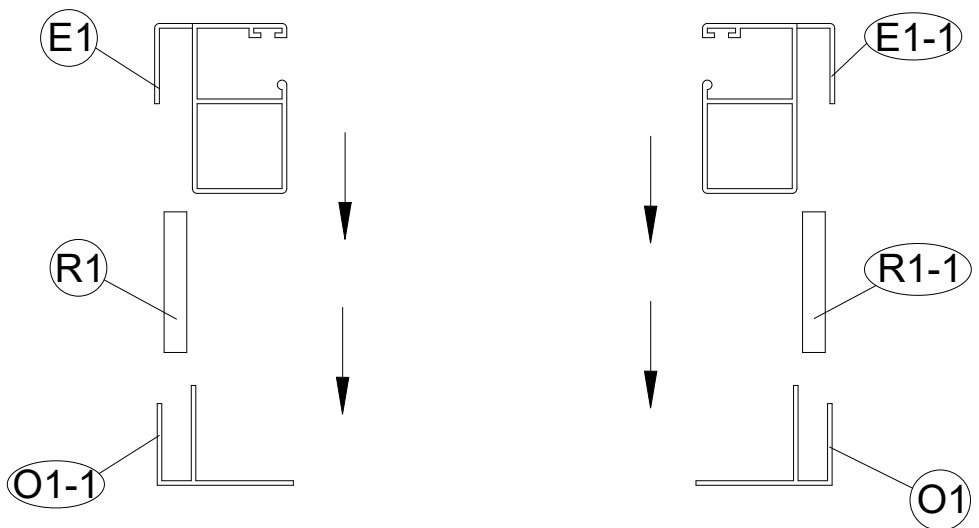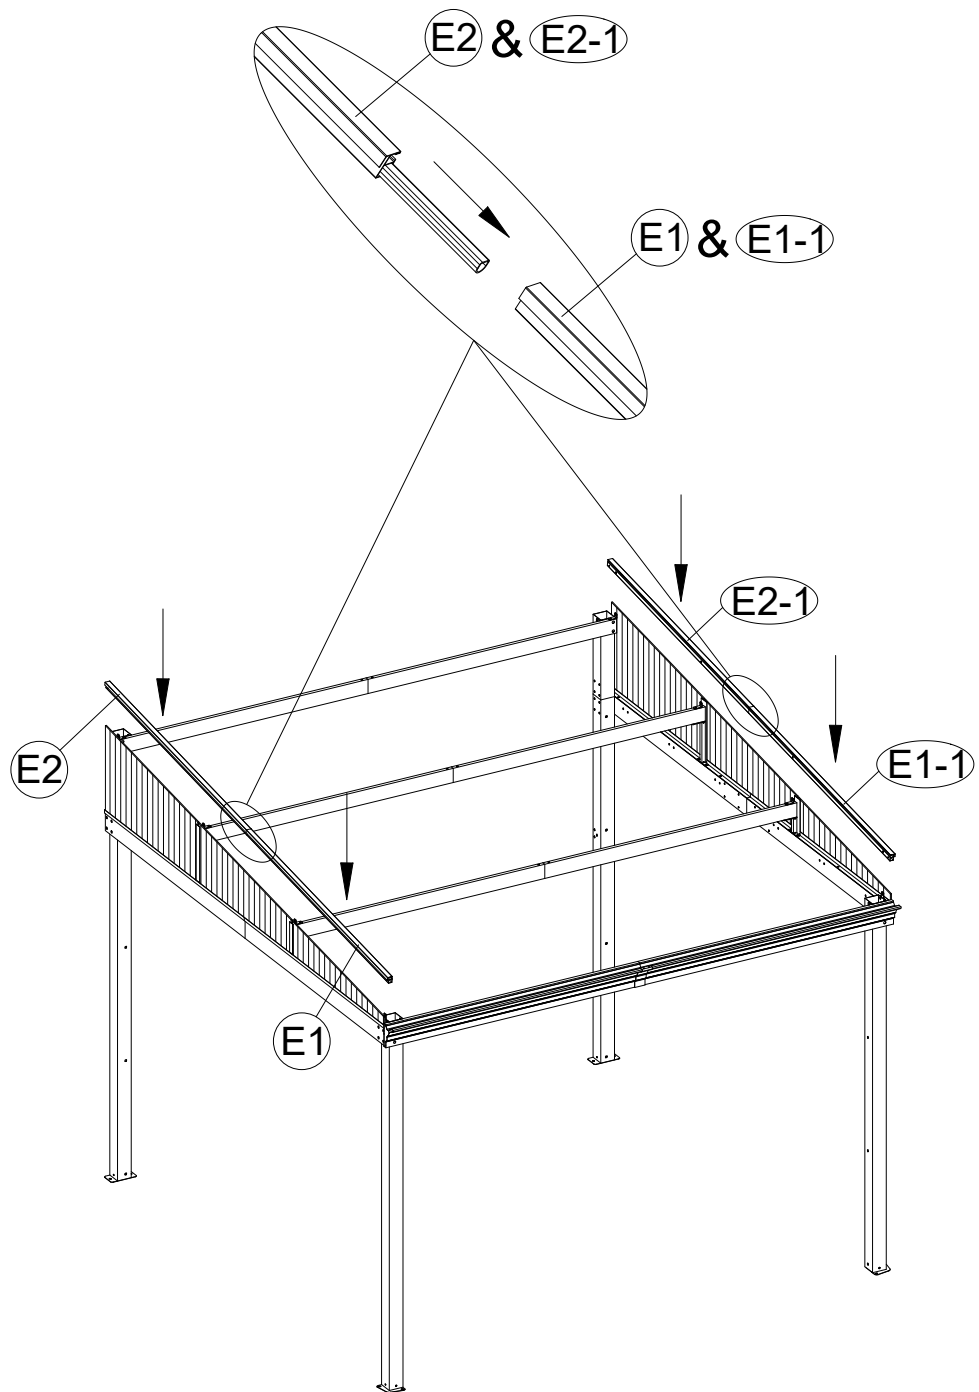




M6x15

<15>

1 8x

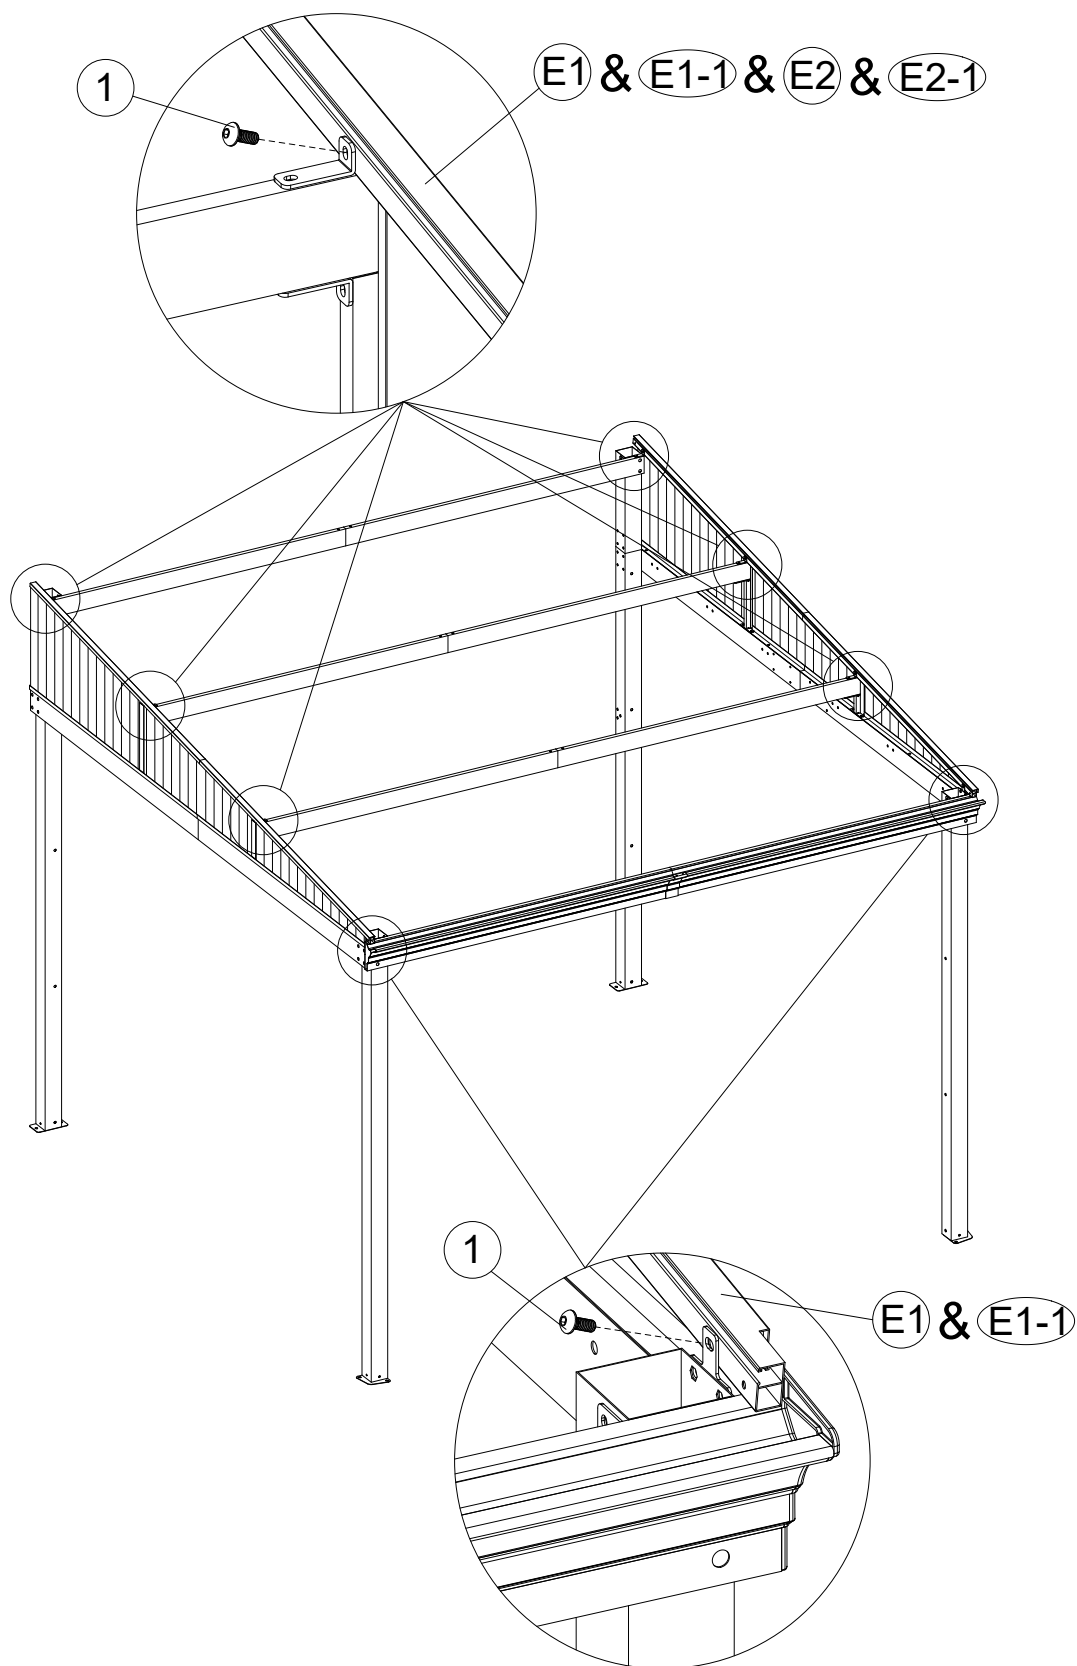

<16>

x4


F1 4x

F2 4x

X2 16x

1 16x

M6x15

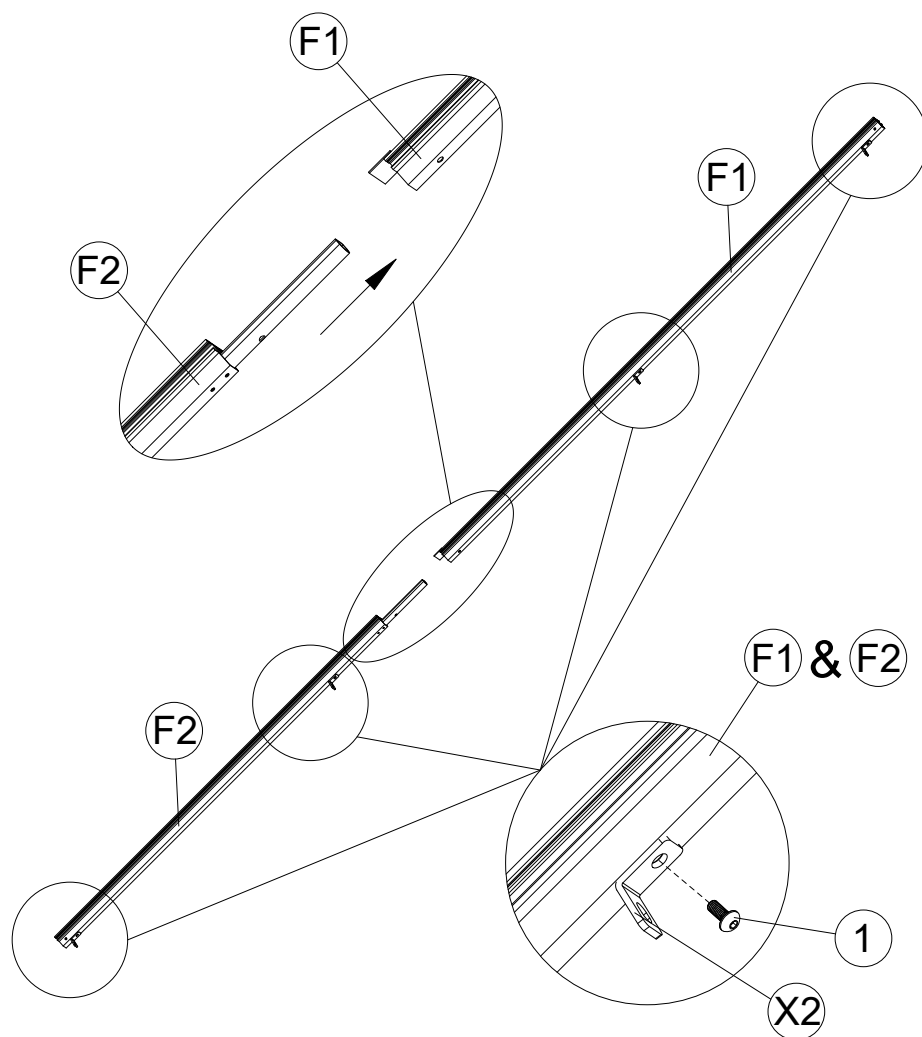





M6x15

<17>


1 16x

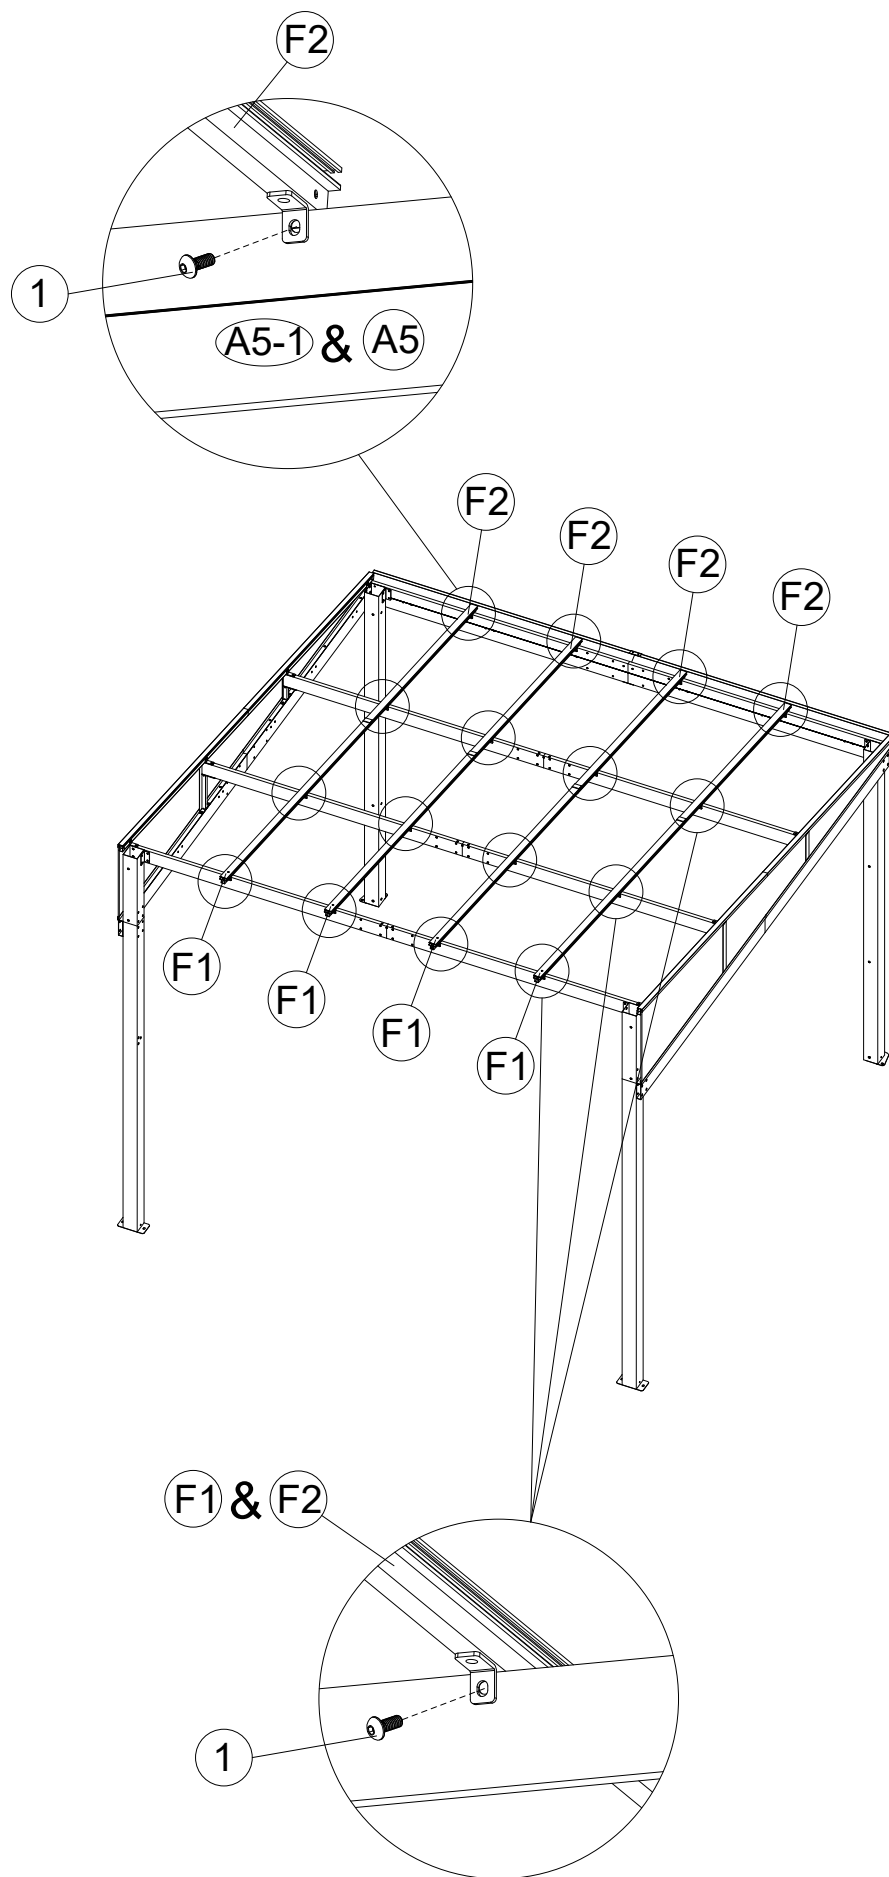


<18>



Z3 10x

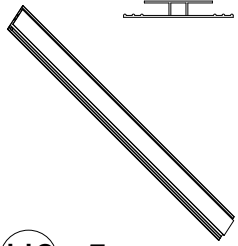


H6 5x

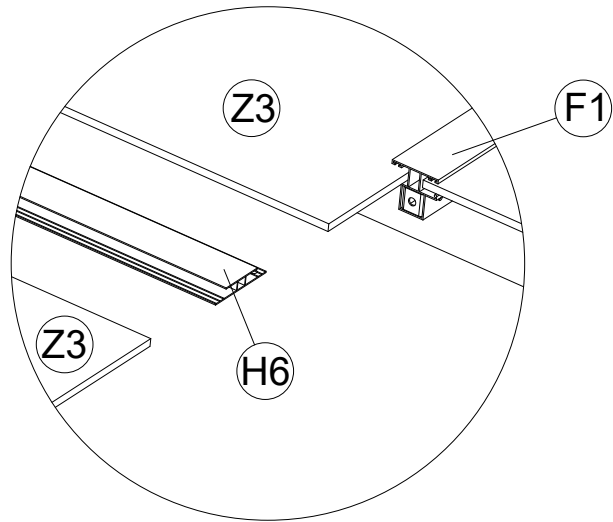


Note:

When H6 slide into the F1, the wide side must be face down and narrow side face up, otherwise will cause water leaking

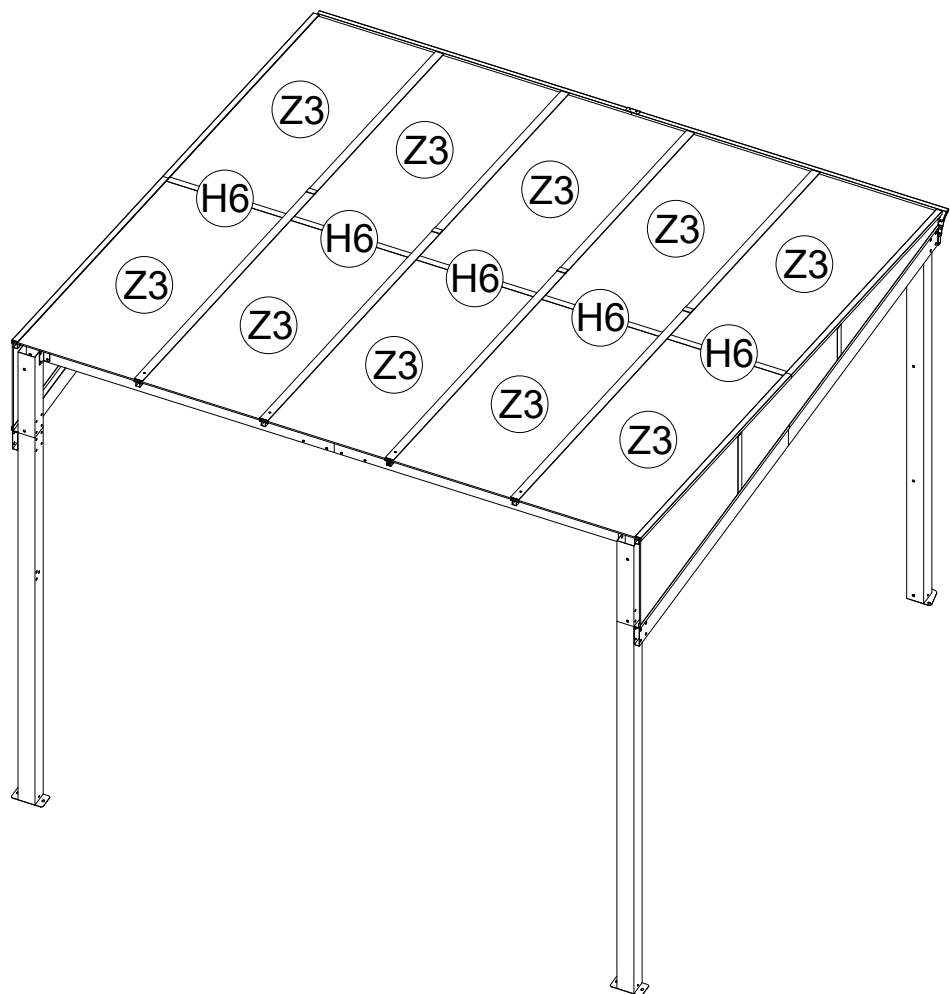


<19>

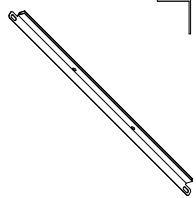


G4 4x




G5 6x



V1 1x



V2 1x









V3 4x



M6x15

1 12x

28

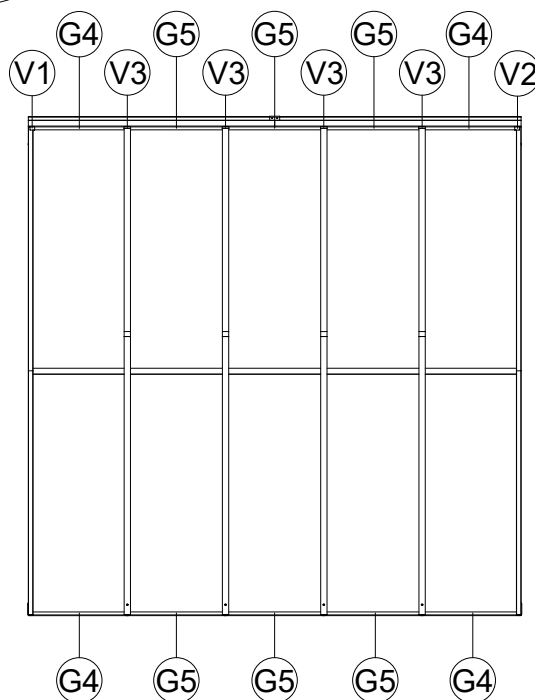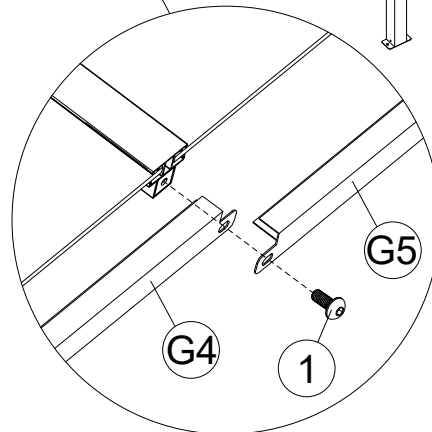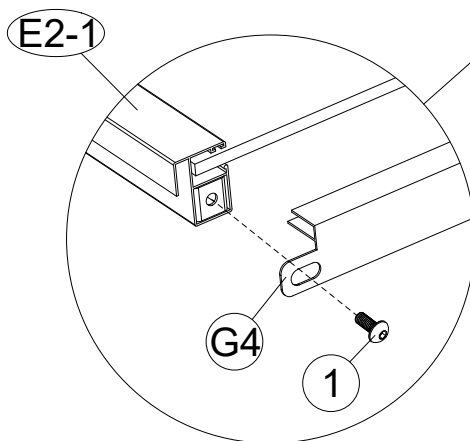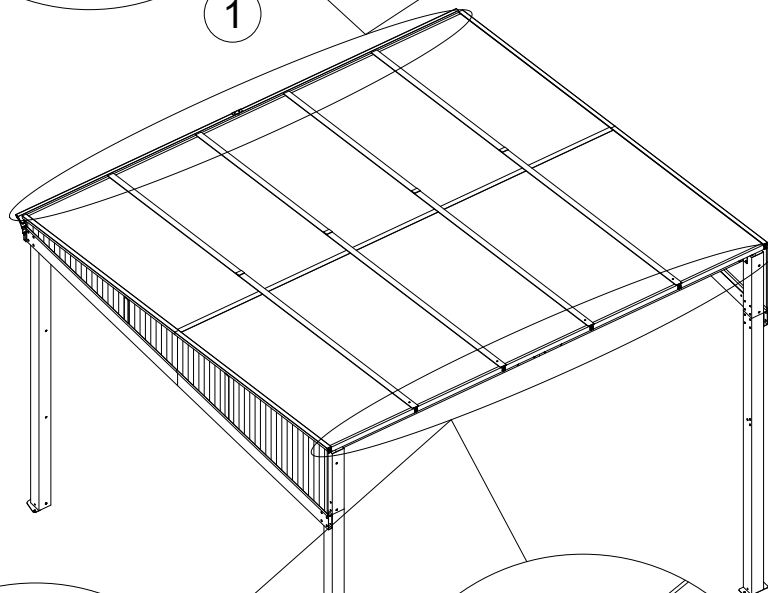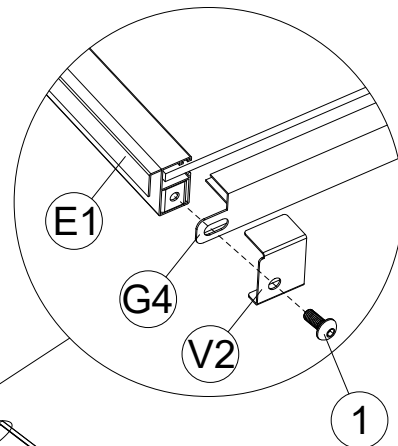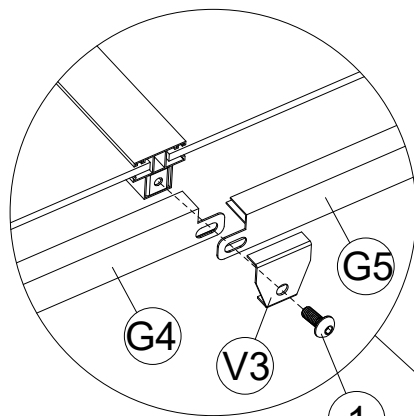

<20>

L7 1x

L7-1 1x

L3 1x

L3-1 1x


N1 1x

N2 1x

1 8x


M6x15

29

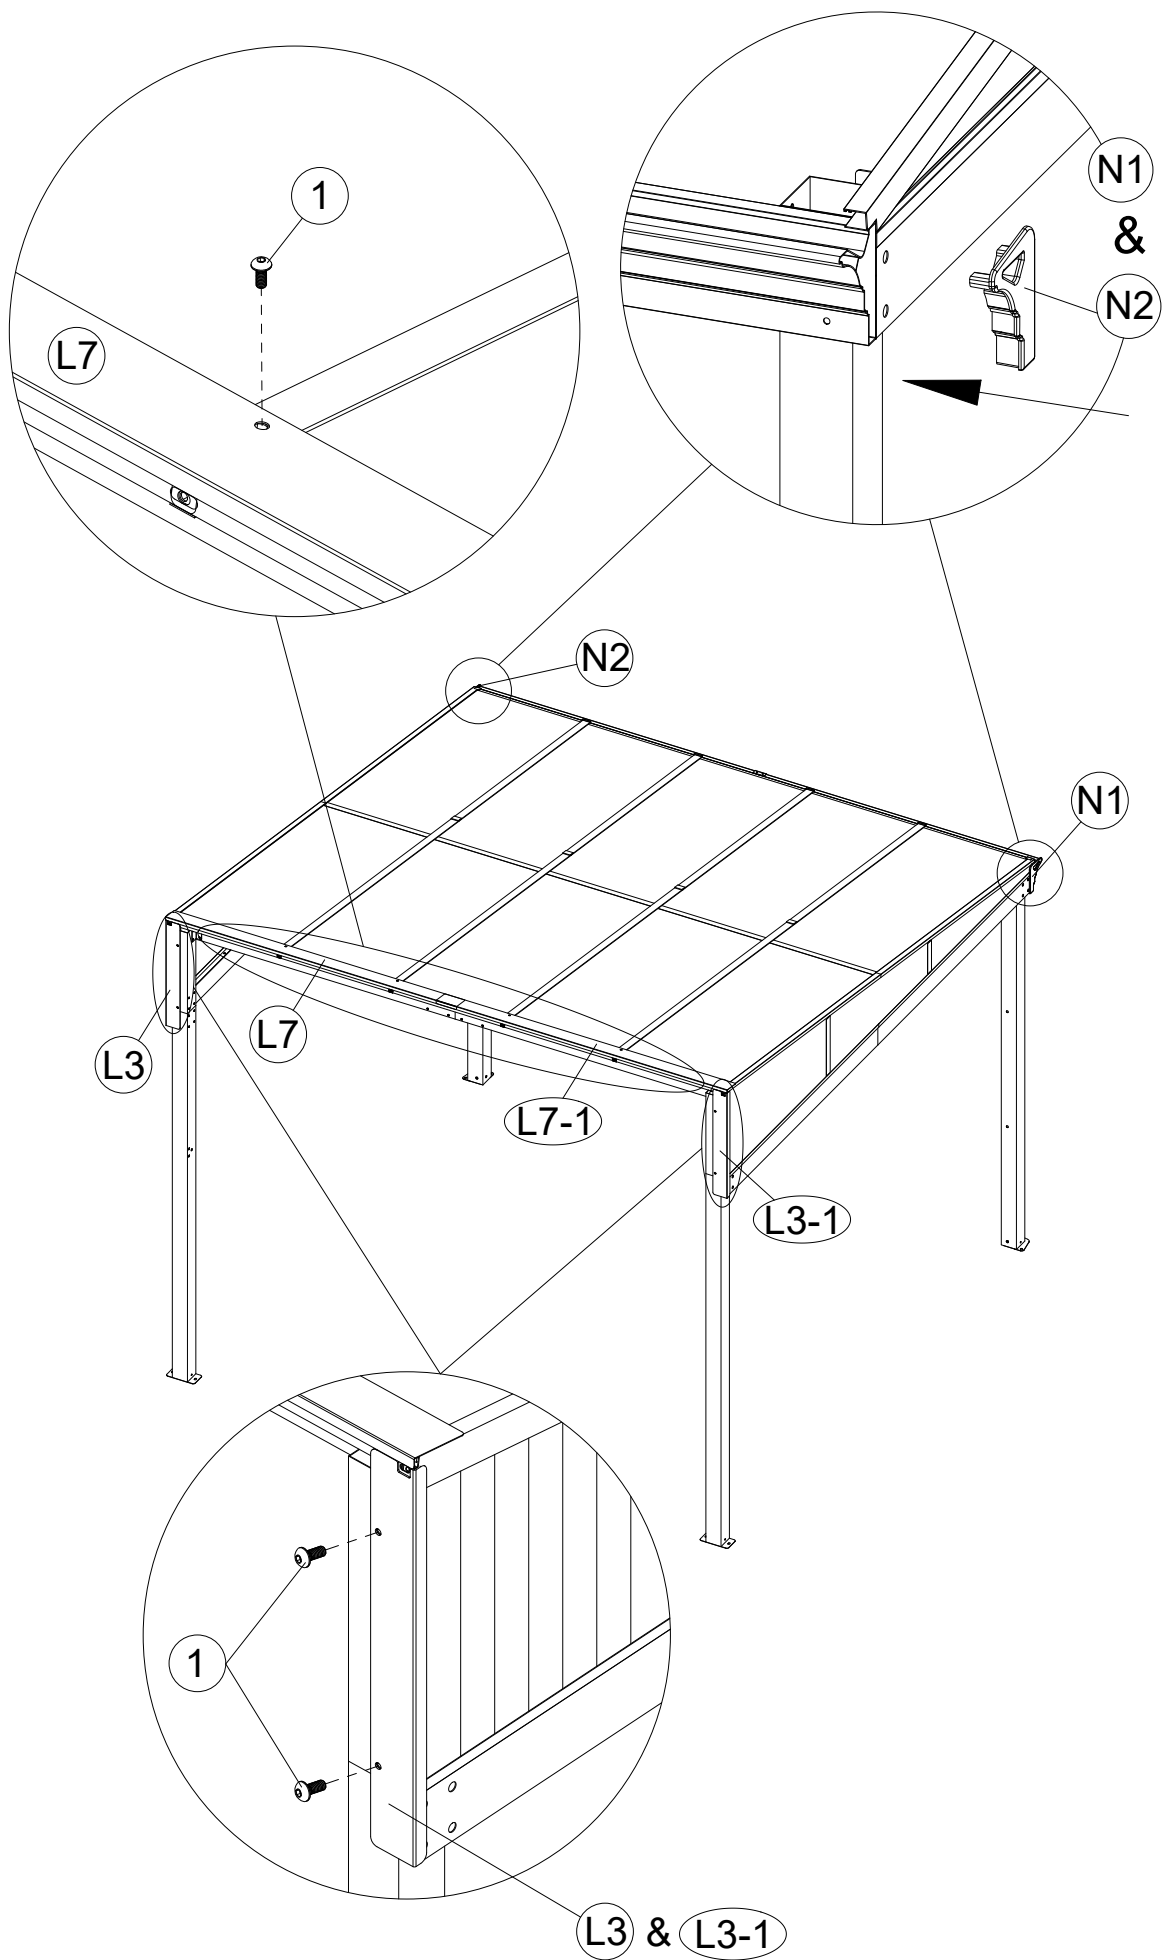


<21>


AB 3x

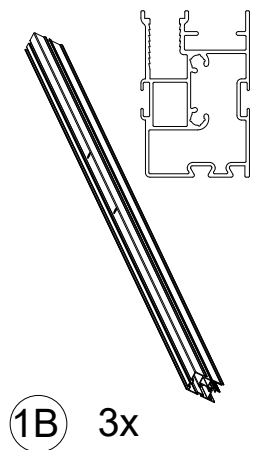


1B 3x

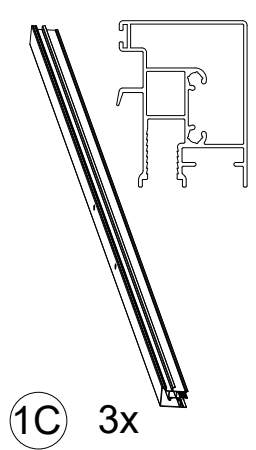


1C 3x

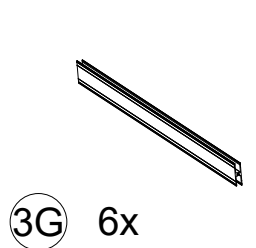

3G 6x



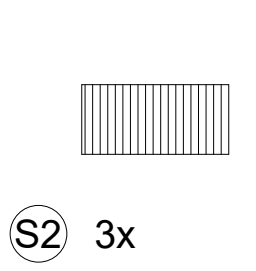


S2 3x

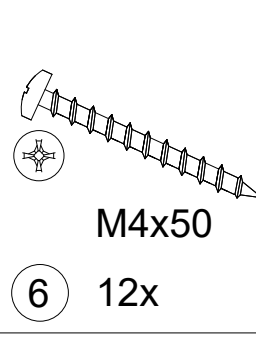

M4x50

6 12x

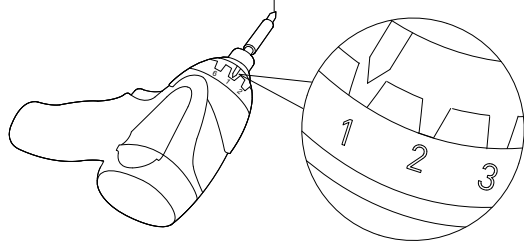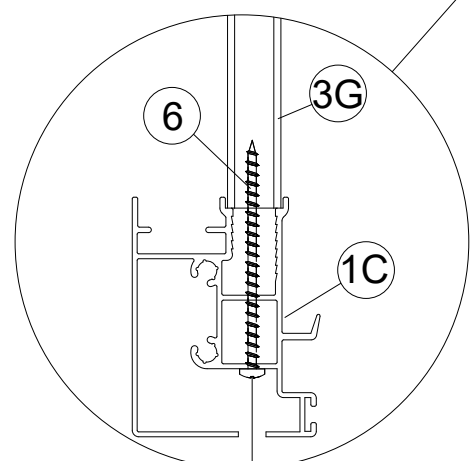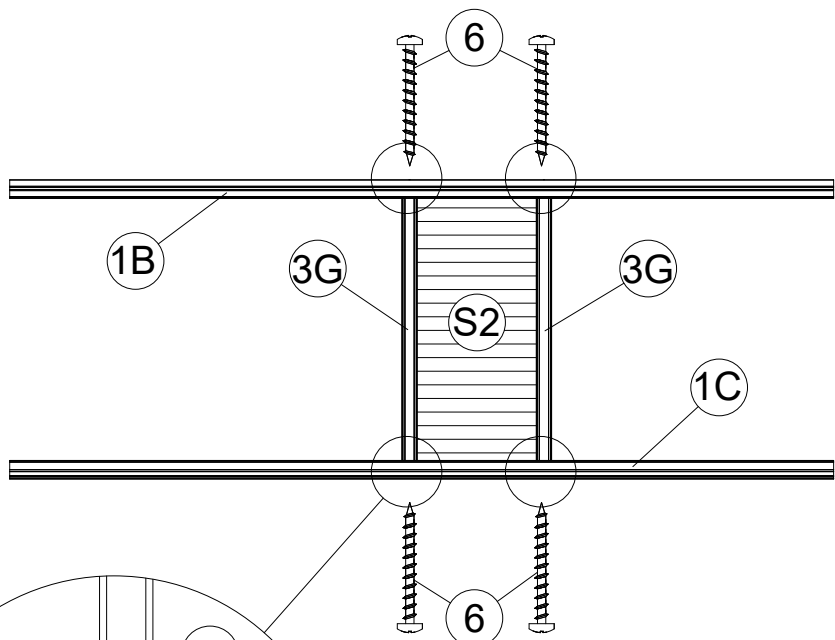

Select the low gear.

The side of PC panel with text facing outwards, remove the protective film and install the panel.




The door frame installation template on pages 30 to 34 is displayed. All subsequent door frames follow this template.

<22>

AB 3x

1S 3x

2K 3x

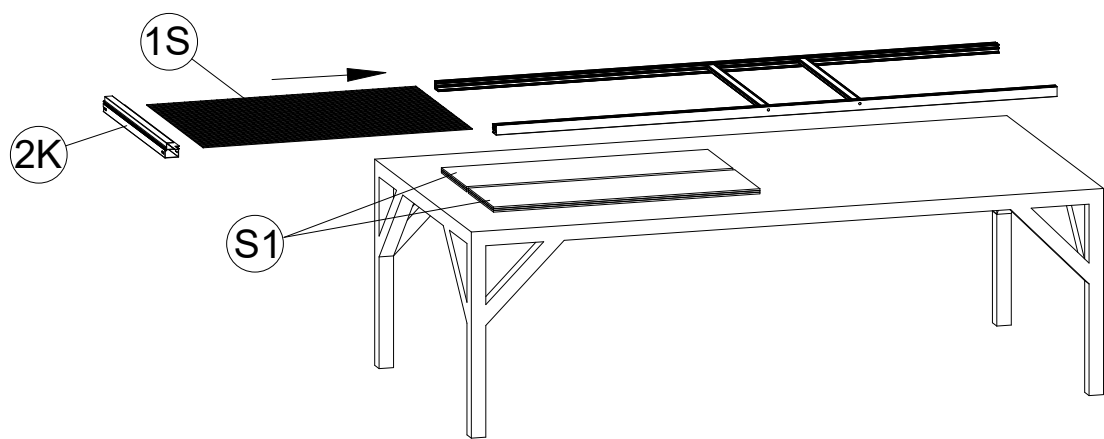


M4x20

4 12x



In the case of assembling 1S, borrow 6 sheets of "S1" in two piles and stack the bottom, lift the "1S".

When installing components BA, use the S1 PC panel as a pad in the same way.






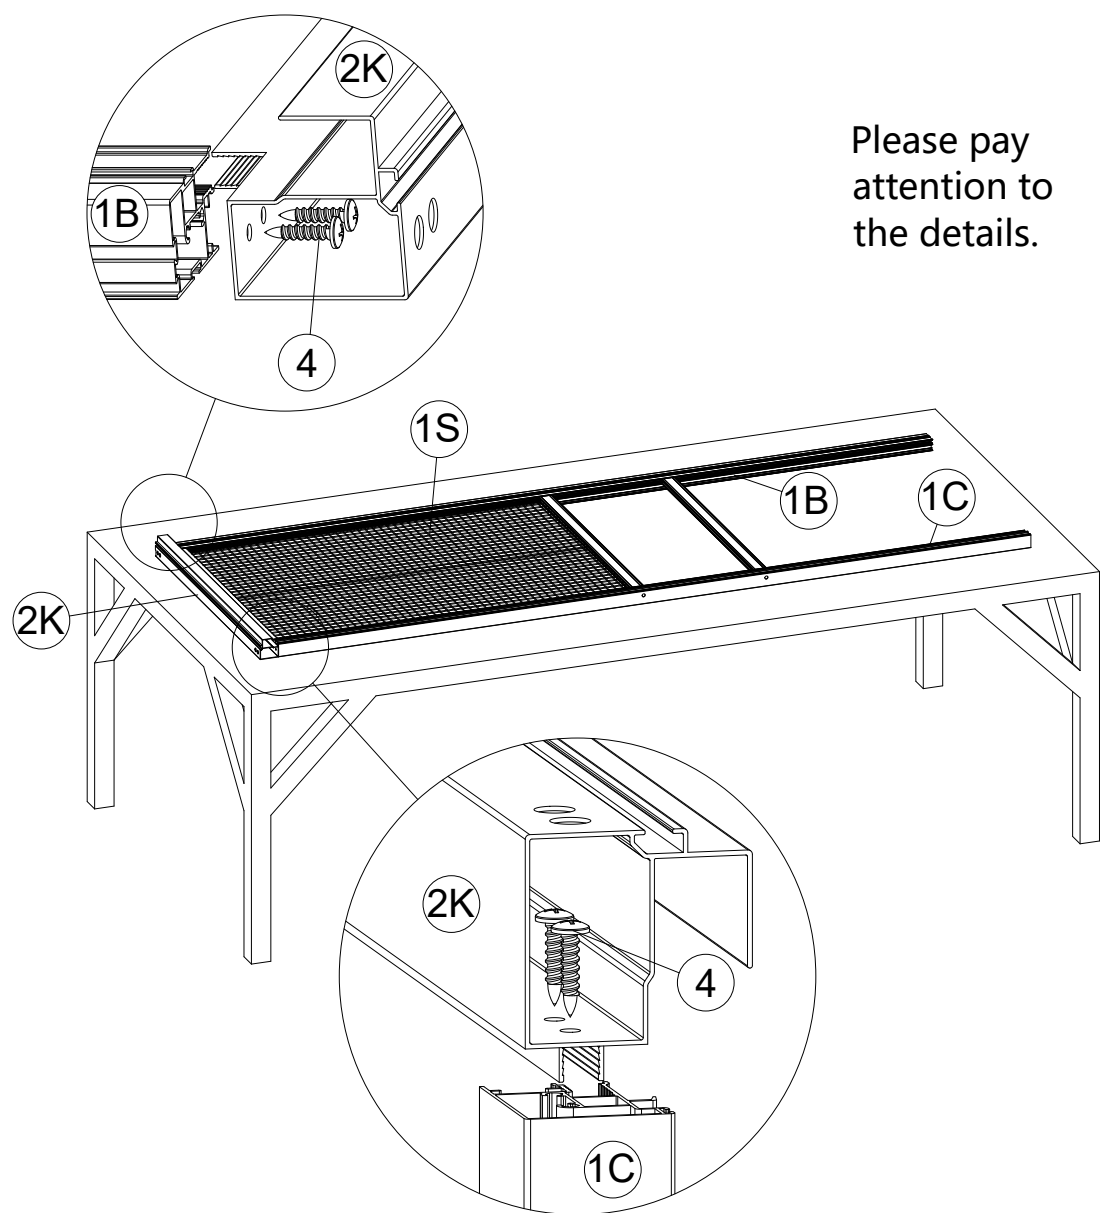


Please pay attention to the details.

<23>


AB 3x

Before installing the parts (1R and 3R),
move the mesh by hand to ensure make
enough space around the mesh.

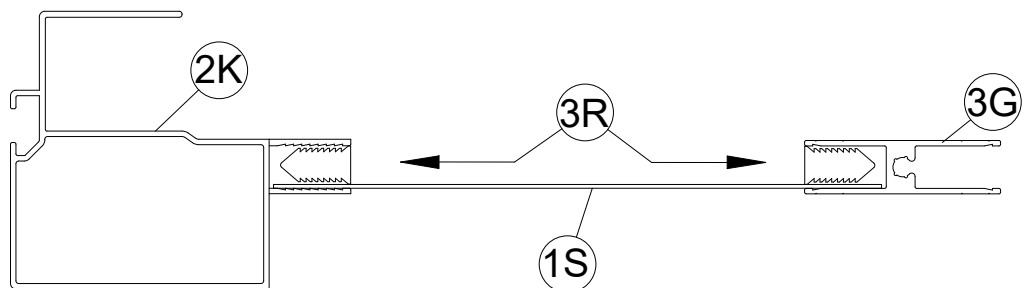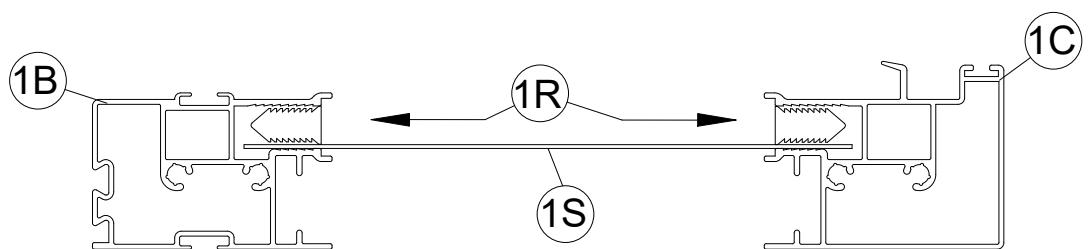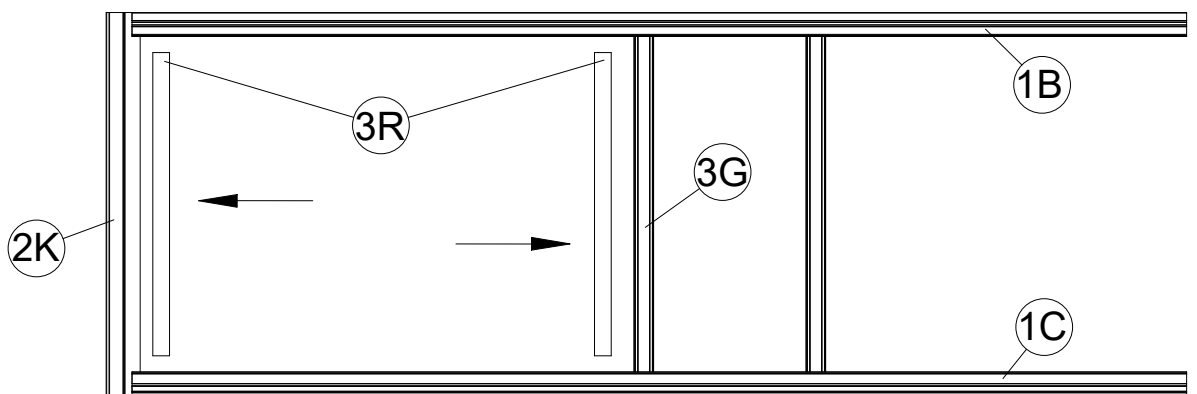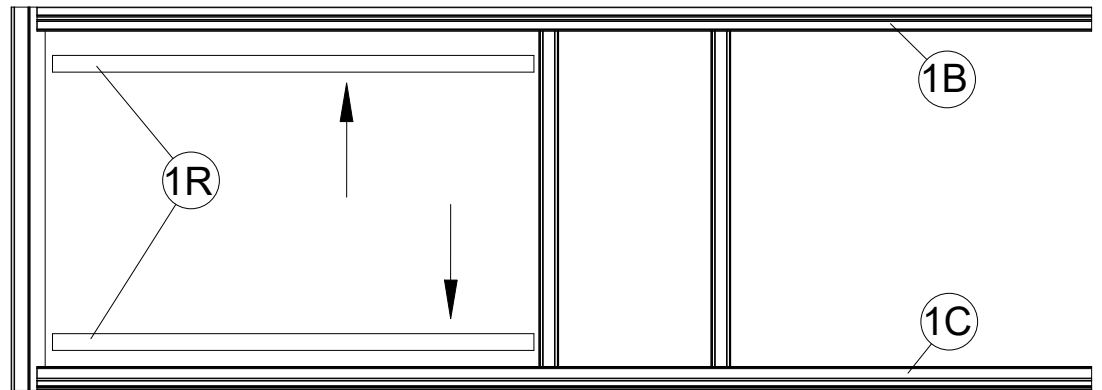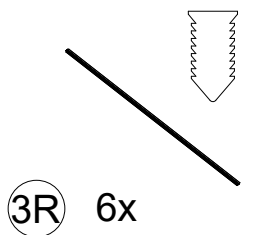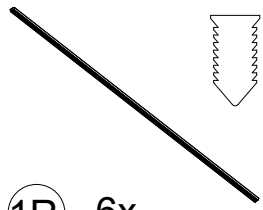

<24>

This diagram is for subsequent reference.

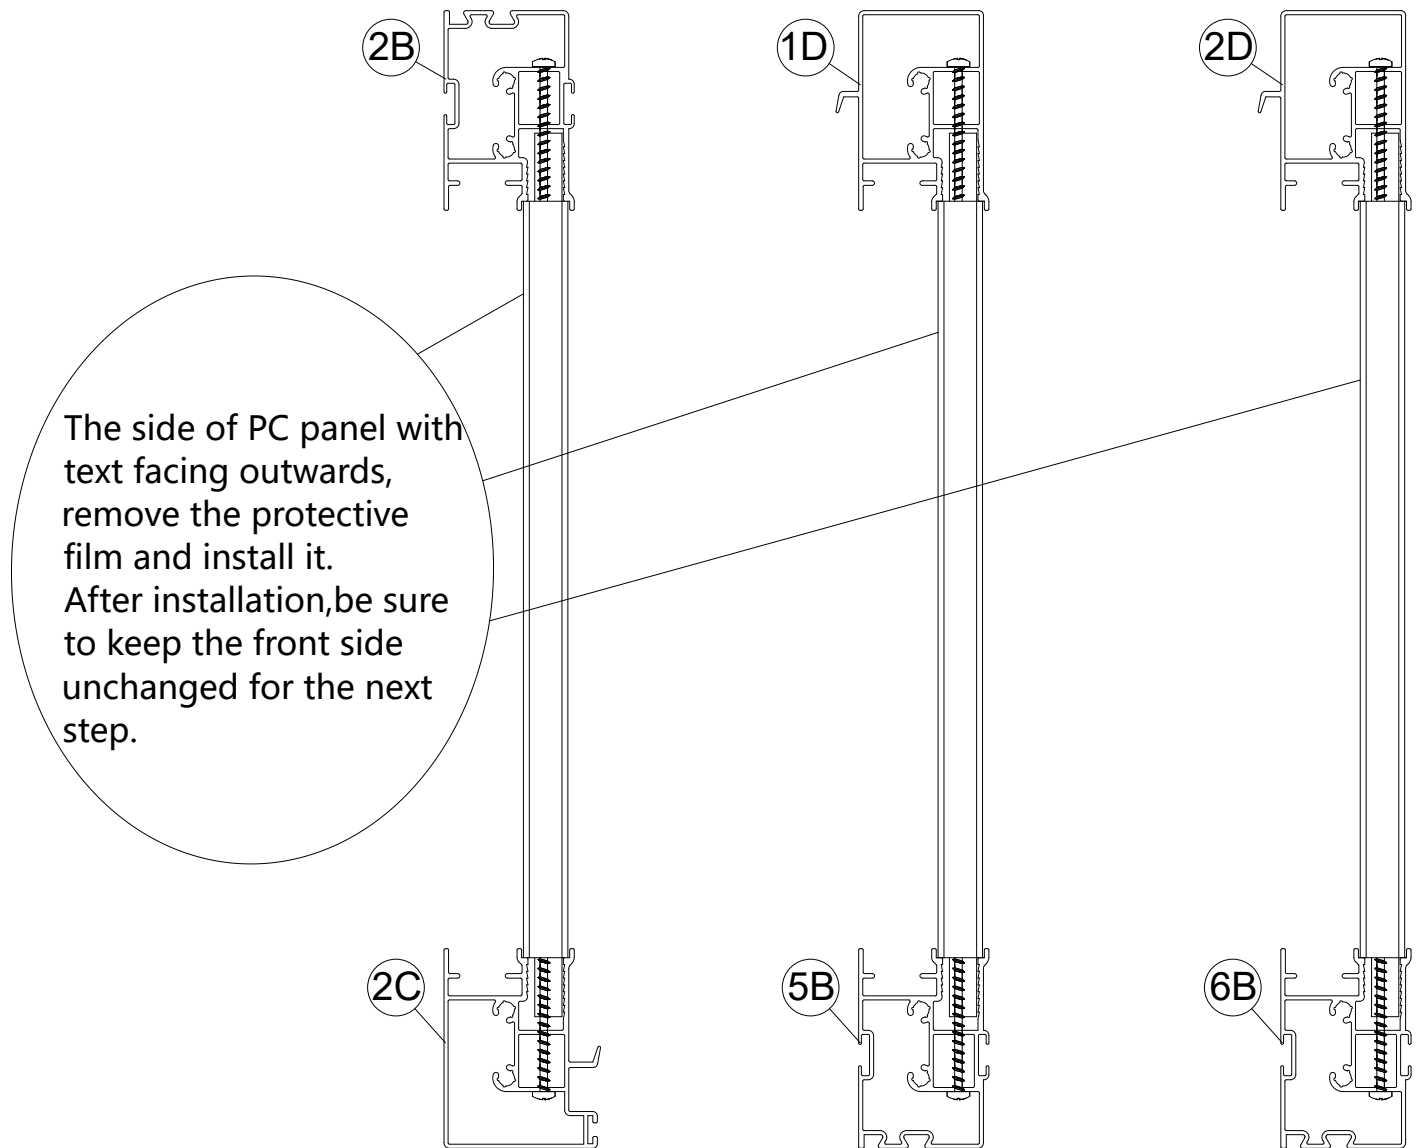

<25>

Install door frame BA,
according to
the installation on
pages 30 to 34.

2K 3x

1R 6x

3R 6x

3G 6x

1S 3x

S2 3x


2B 3x

2C 3x

6 12x

4 12x


BA 3x

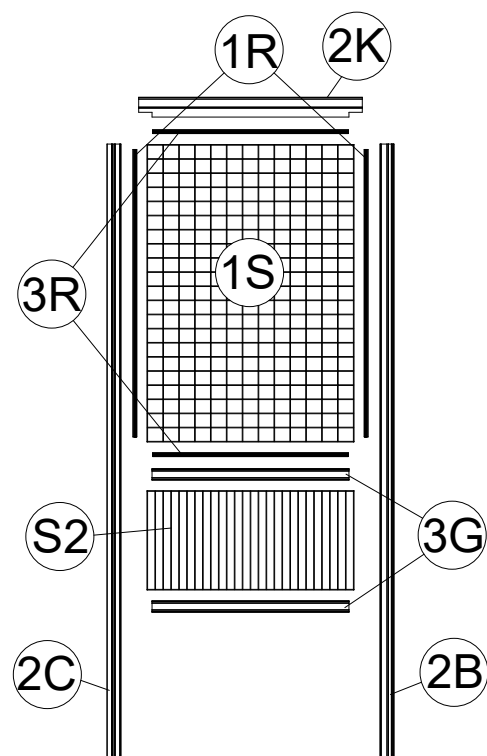


Component AB is symmetric to BA.

<26>


AF 6x

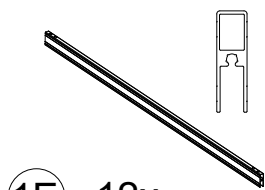


1E 12x

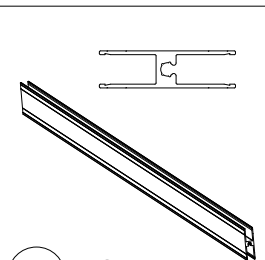


1G 6x

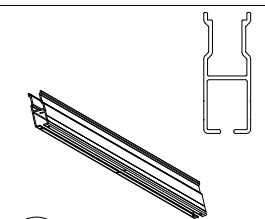

2L 12x






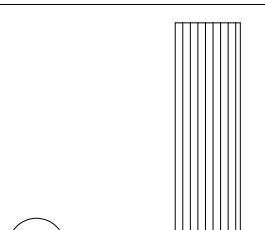


S1 12x

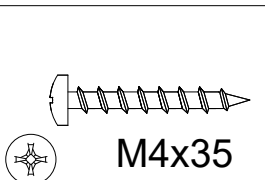


M4x35


5 36x

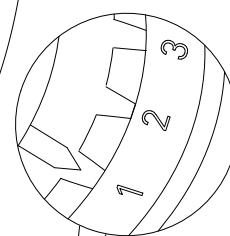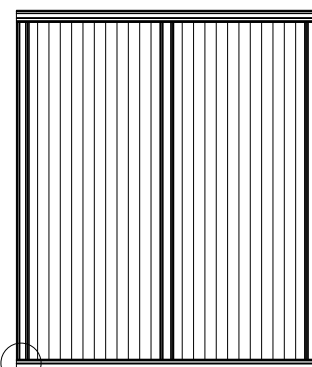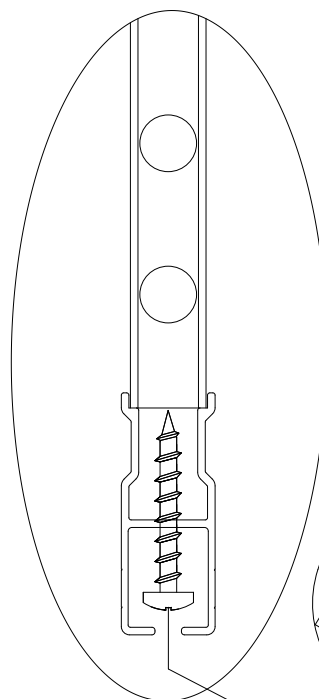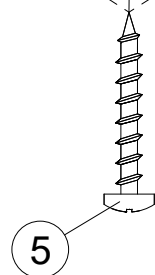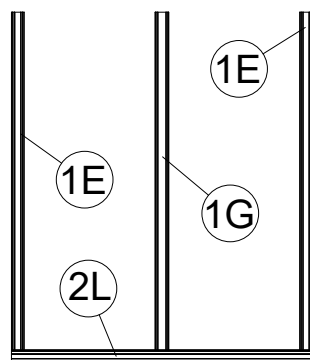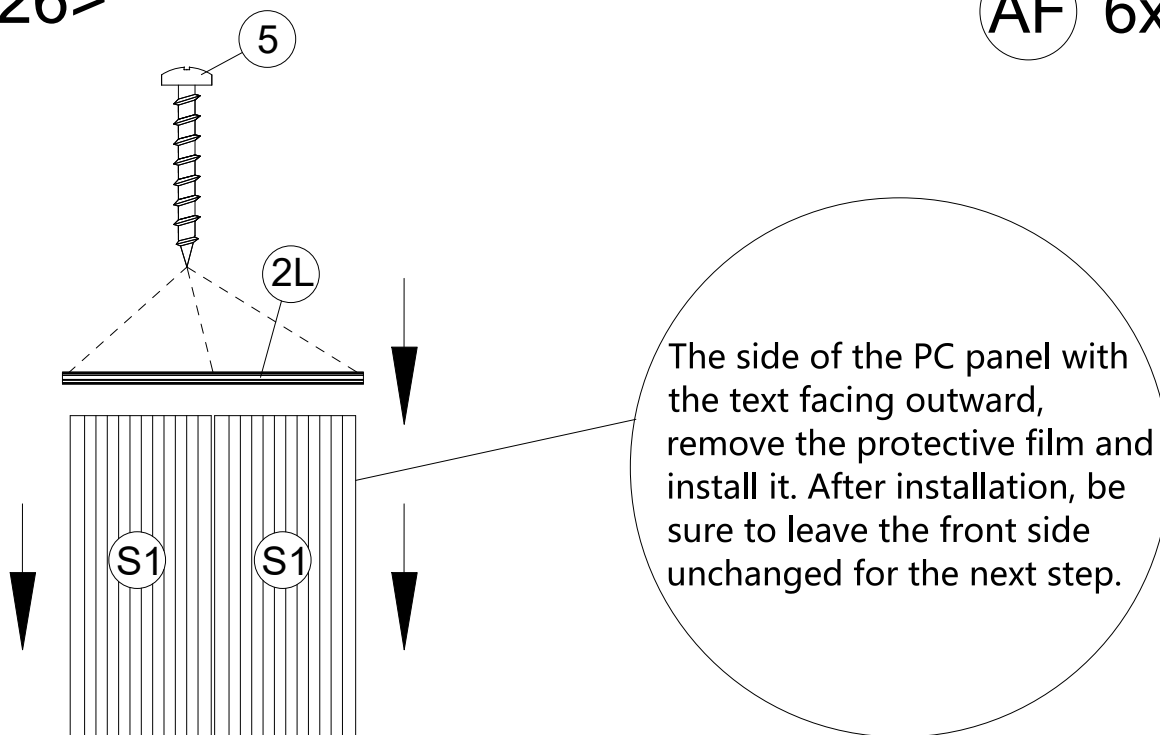

Select low gear

Repeat the previous steps to assemble eight AF components. For easier identification during the subsequent assembly, attach an "AF" label to a clearly visible position on the front side.

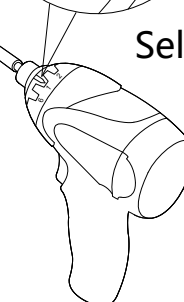




D1 24x





D2 48x




D3 12x

<27>

AF 6x

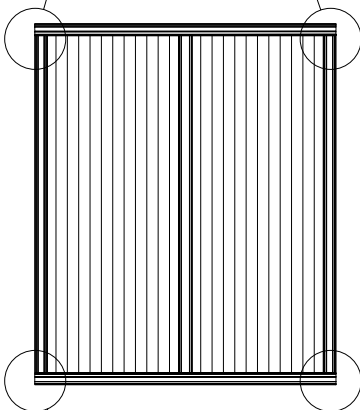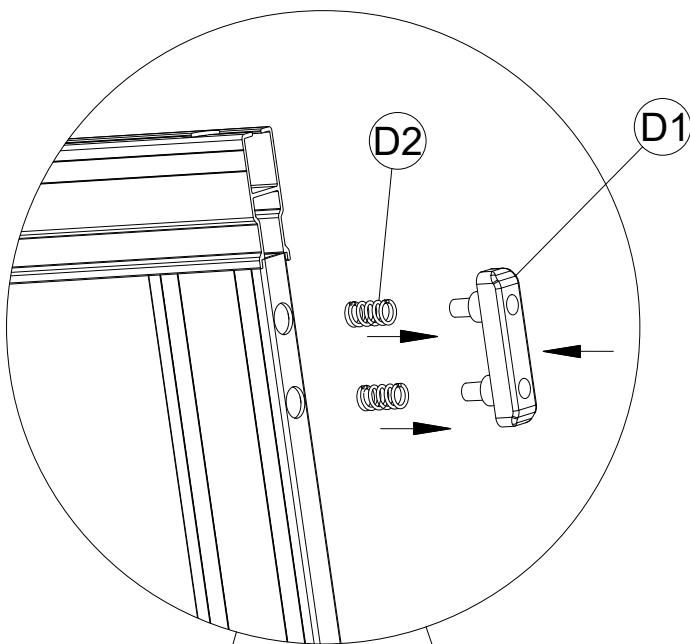


It is recommended that this step be assembled along with the next step.

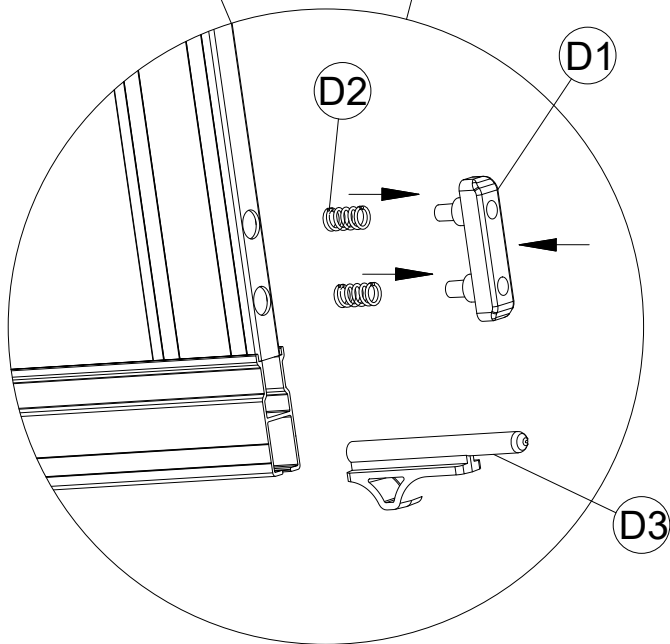


<28>

AB 3x


BA 3x

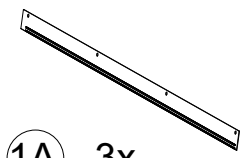


1A 3x

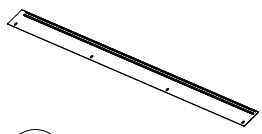


2A 3x

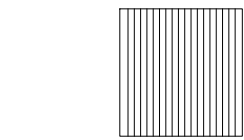

S3 6x


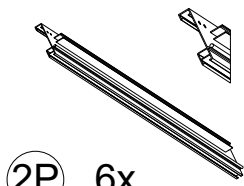


2P 6x

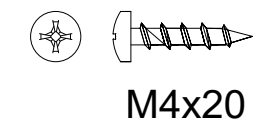


M4x20


4 24x

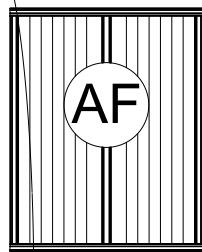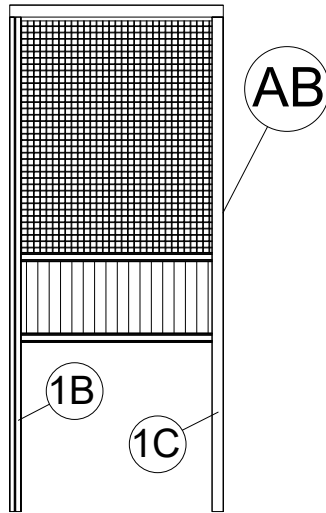


1A

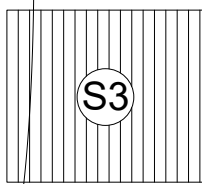

2P

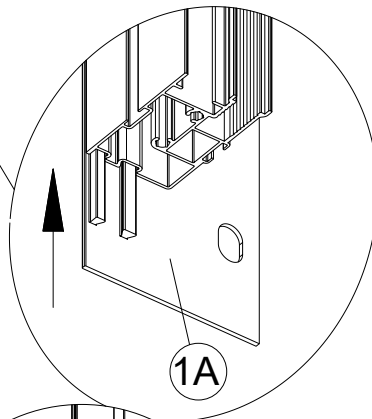

1A

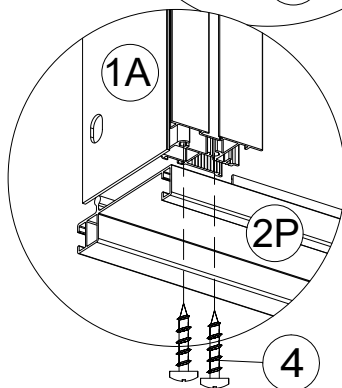


1A



2P




4

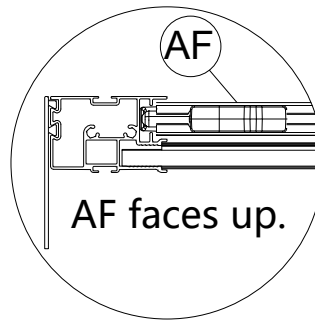


AF faces up.

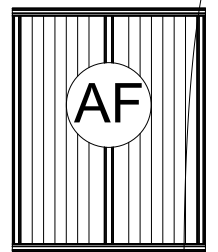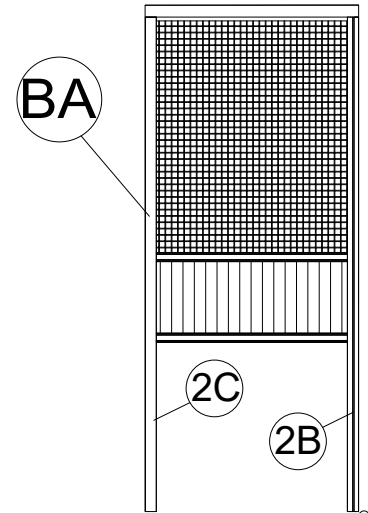


2A

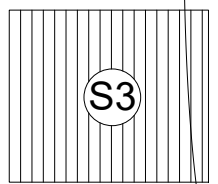

2P

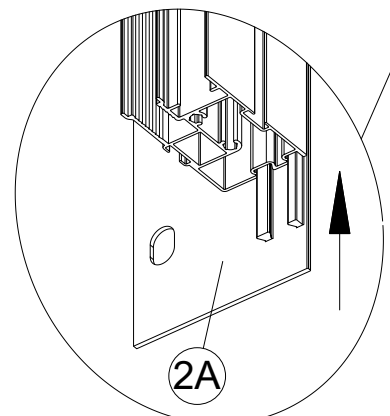

2A

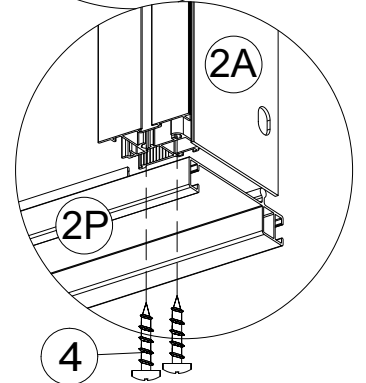









2A

2P


4

<29>


AD 3x

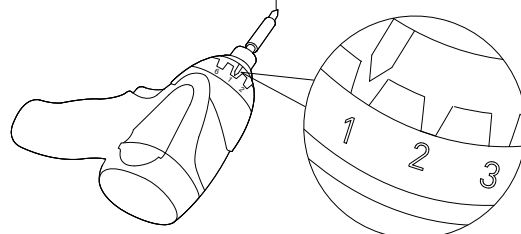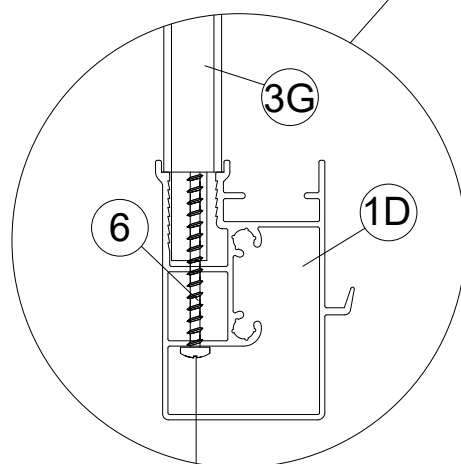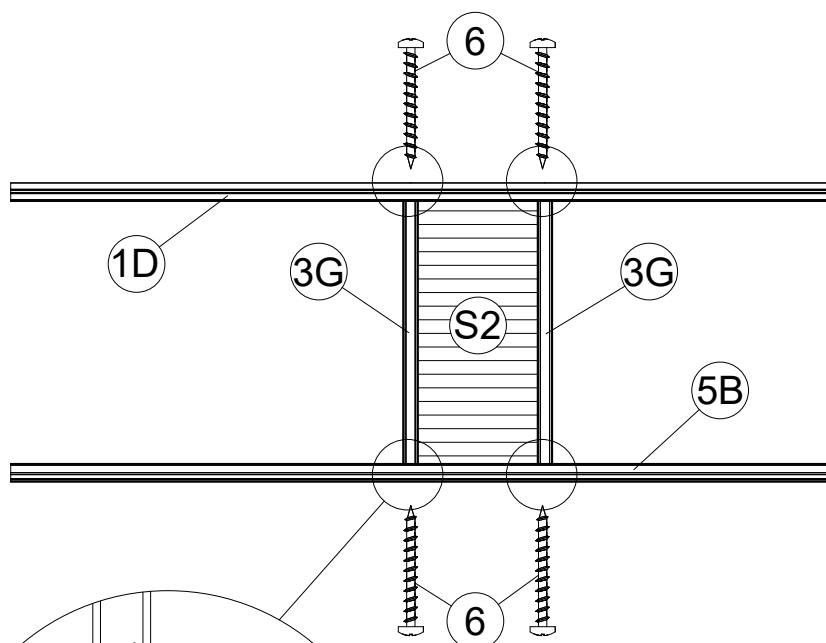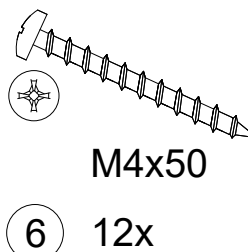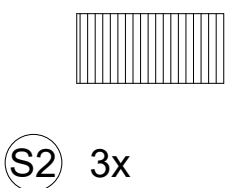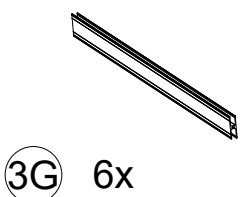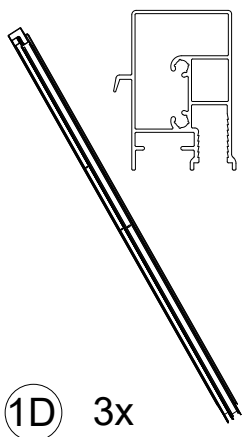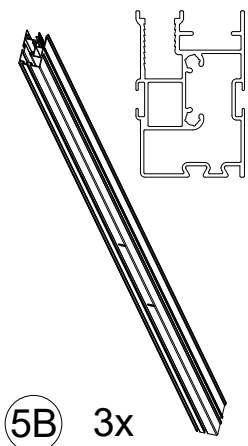

Select the low gear.

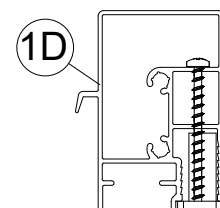






The side of PC panel with text facing outwards, remove the protective film and install the panel.

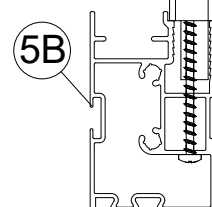


The door frame installation template is shown on pages 38 to 40. All subsequent door frames should follow this template.

<30>


AD 3x

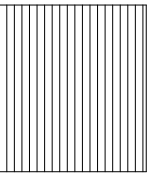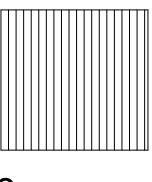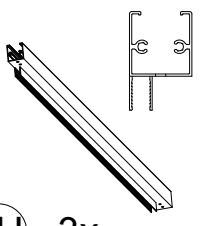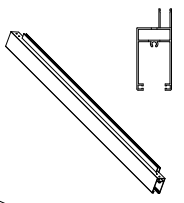-  S 3x
-  S4 3x
-  2H 3x
-  2M 3x
-  M4x20
-  4 24x

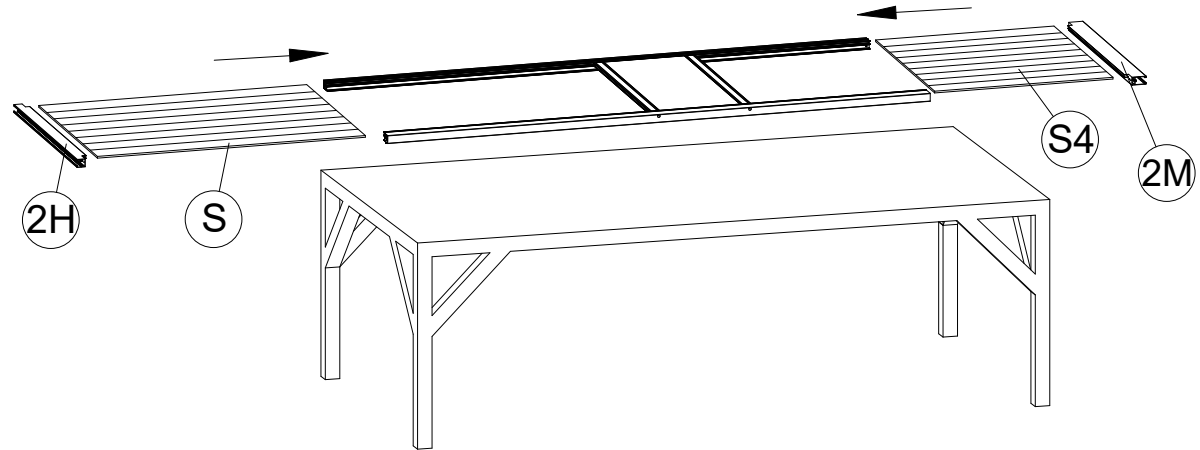

This diagram is for subsequent reference.

General diagram of AD, DA, AE, and EA components.

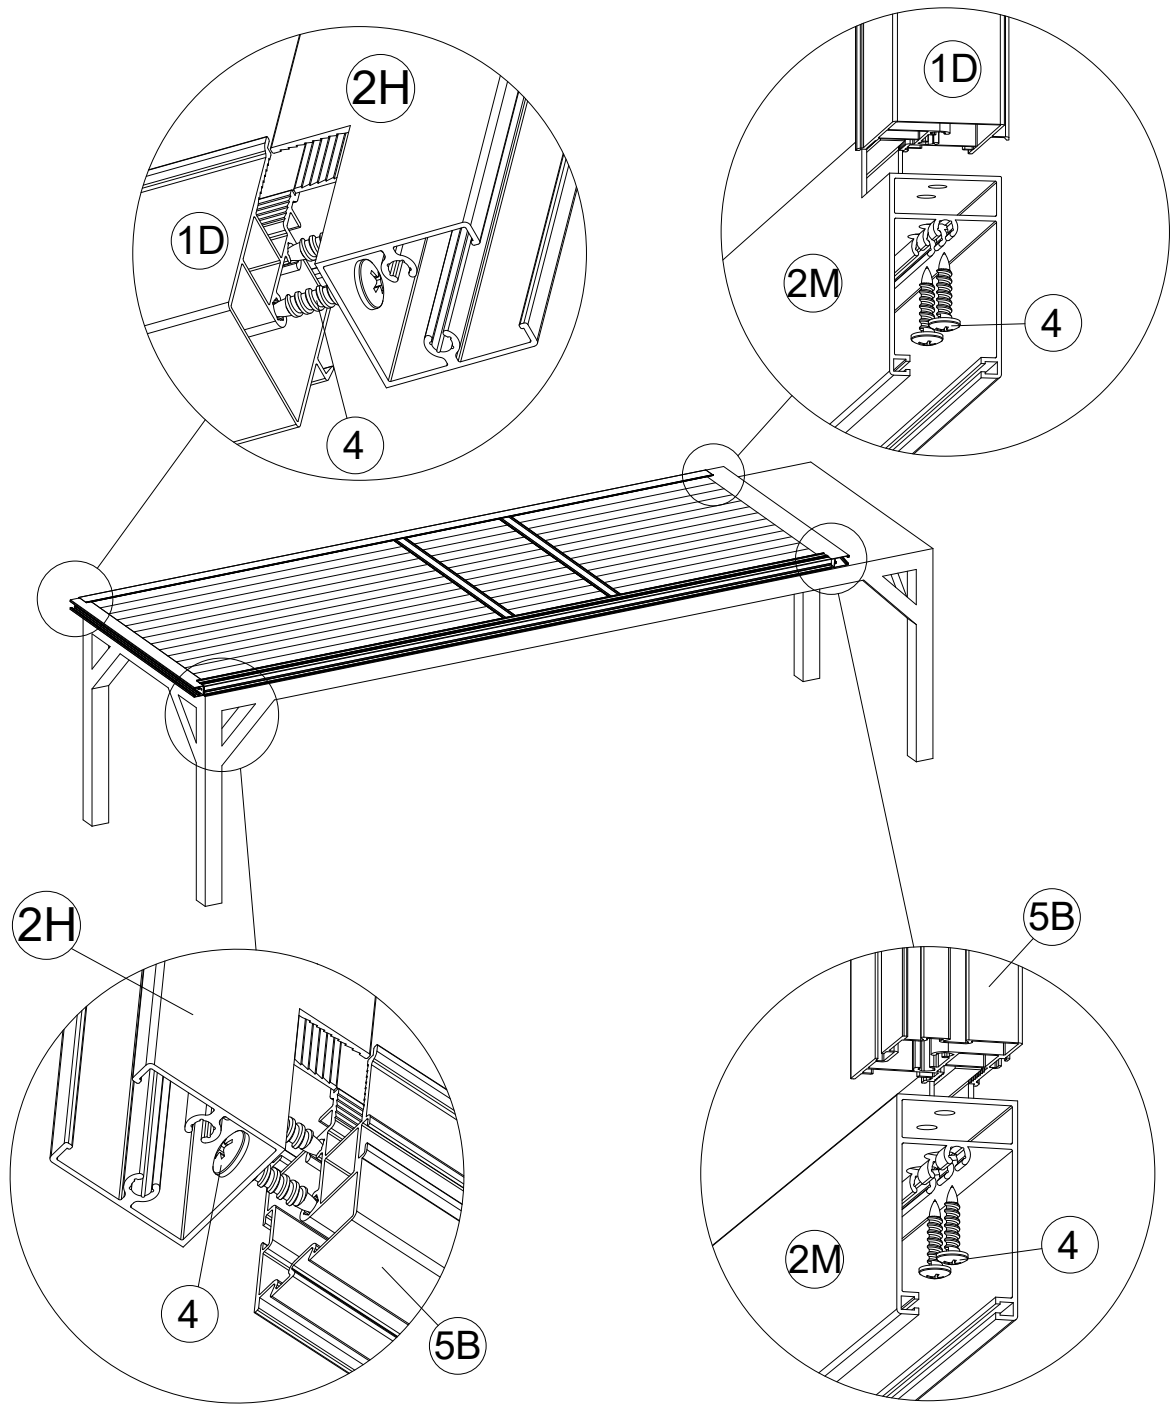

<31>

Install door frame DA,
according to
the installation on
pages 38 to 40.

(2H) 3x

(2M) 3x

(S) 3x

(S2) 3x

(S4) 3x

(3G) 6x


(6B) 3x

(2D) 3x


(6) 12x

(4) 24x


(DA) 3x

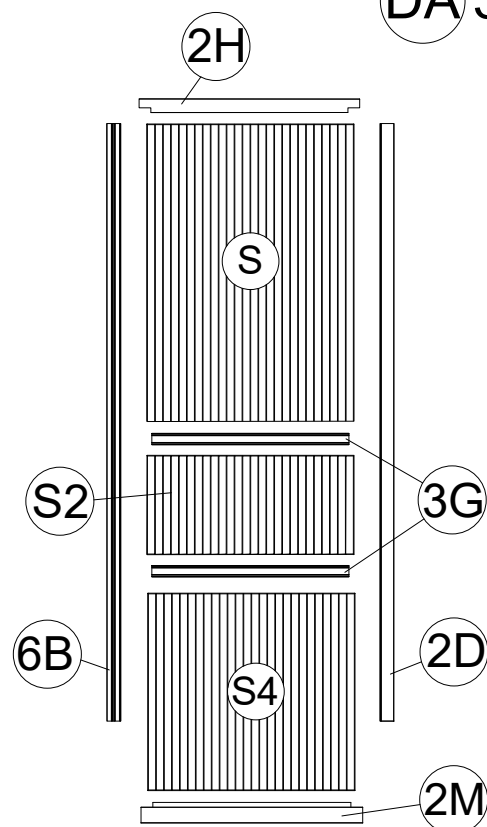


Component AD is symmetric to DA.




D5 6x



D4 6x




4-1 6x



M4x20

4 12x





M4x35




5 6x

<32>

AD 3x

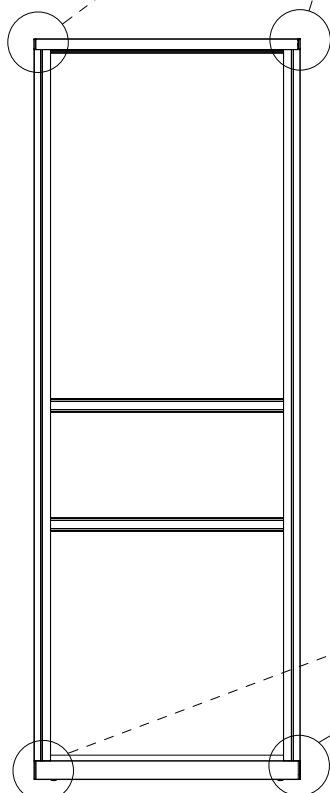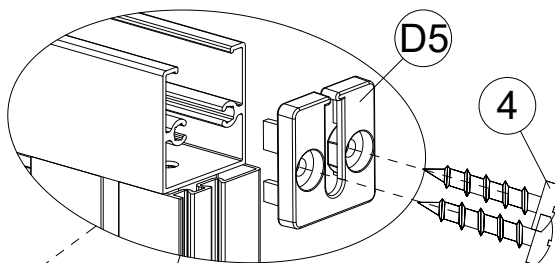

The door frame installation template on pages 41 to 42 is displayed. All subsequent door frames follow this template.

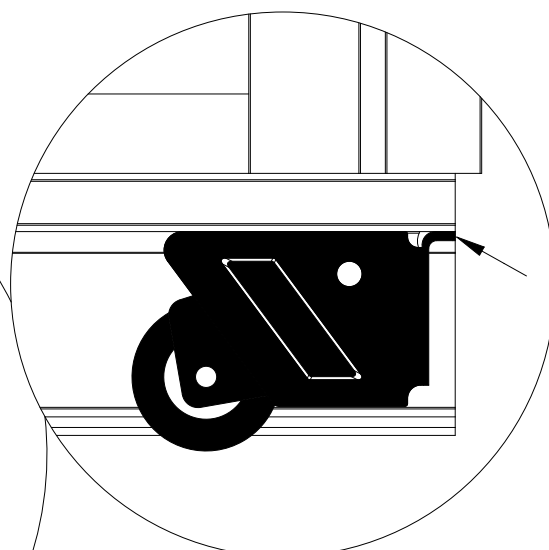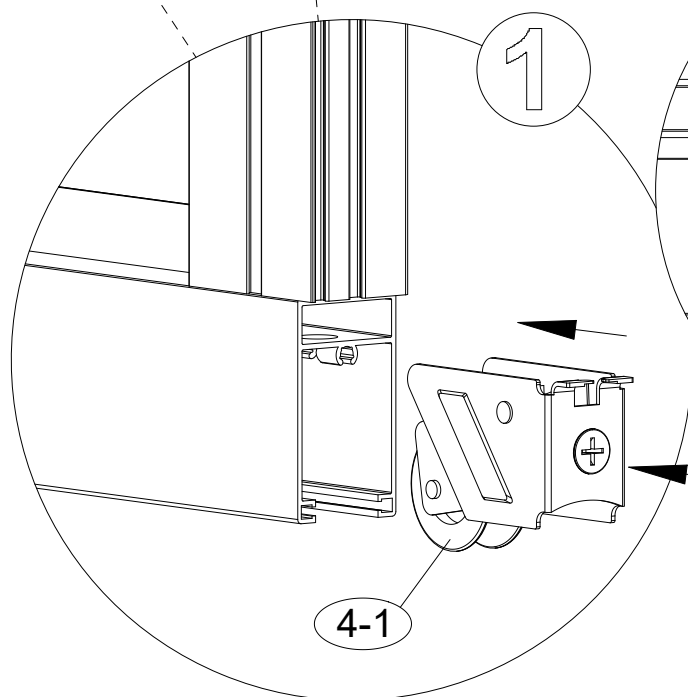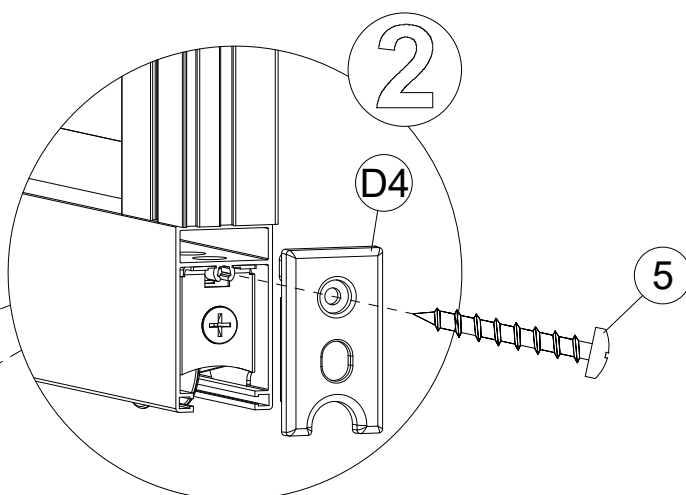

<33>

Install door frame DA,
according to
the installation on
pages 41 to 42.

D4 6x

D5 6x

4-1 6x

4 12x


5 6x

D5

DA 3x

D4


4-1

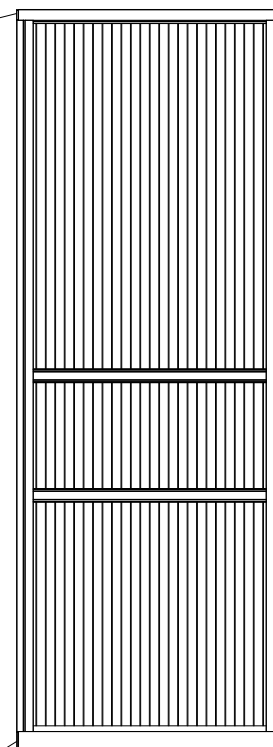

Component AD is symmetric to DA.








5-1 2x

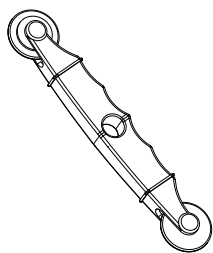

15 1x

<34>

Before installation, wet the rubber strips "5-1" with water to make it easier to stick into the slot.

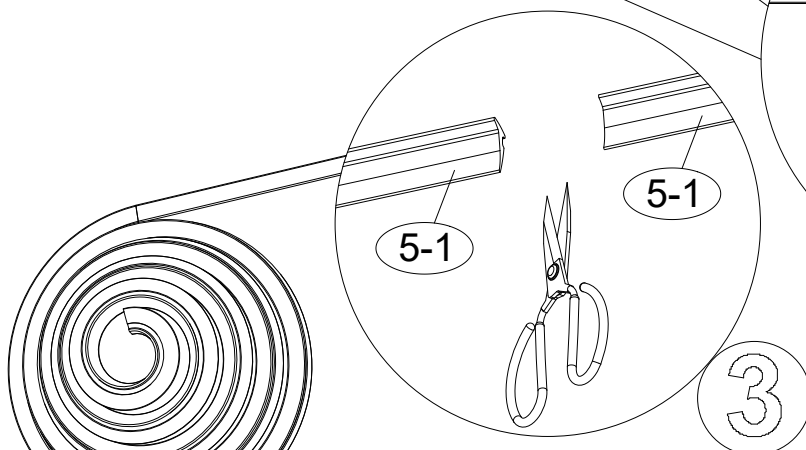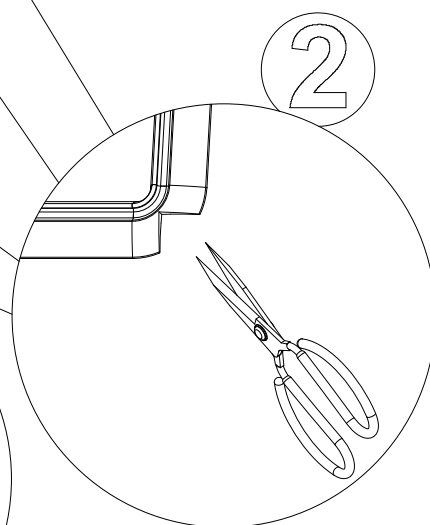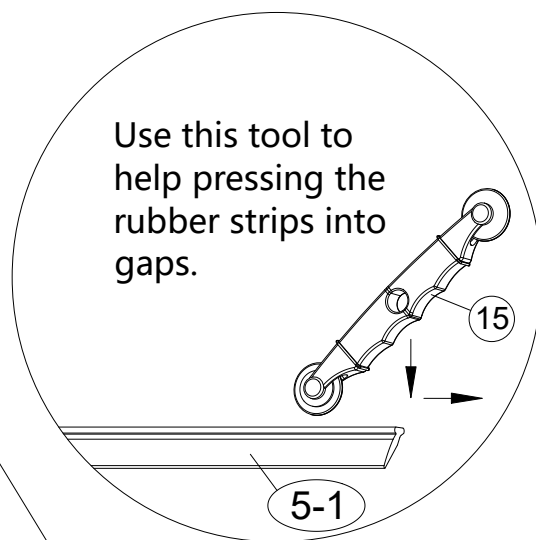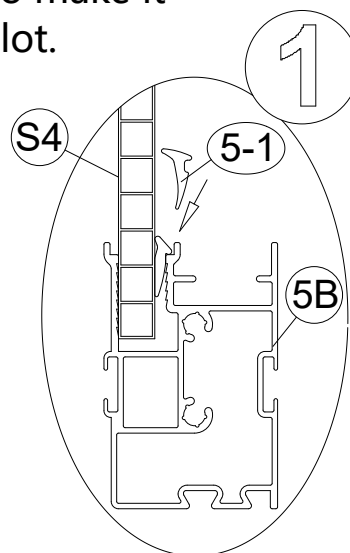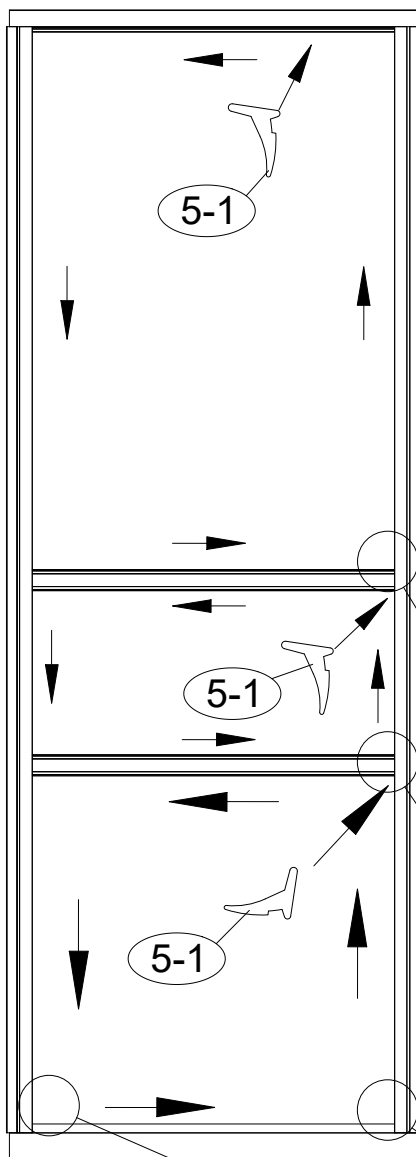

<35>

x3

(2J) 3x

6.2*11*15


(3-1) 12x

M6

(9) 12x

M6x15

(1) 12x

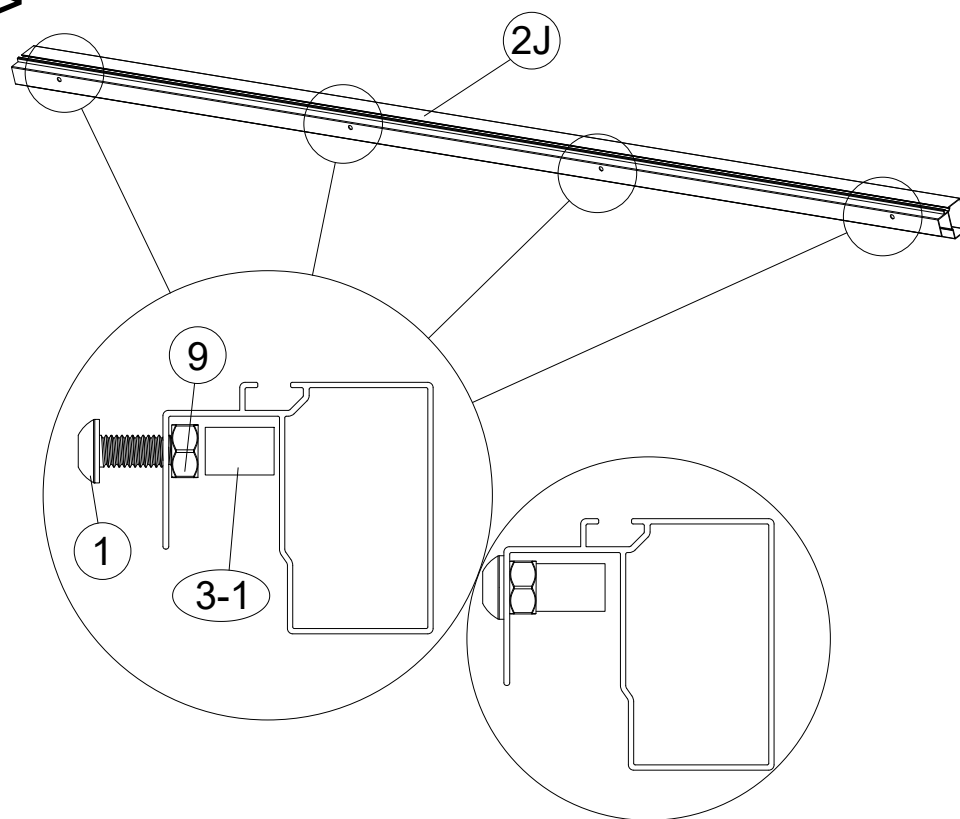

x3


(2N) 3x

(7) 18x

M5*6

(8) 72x

44


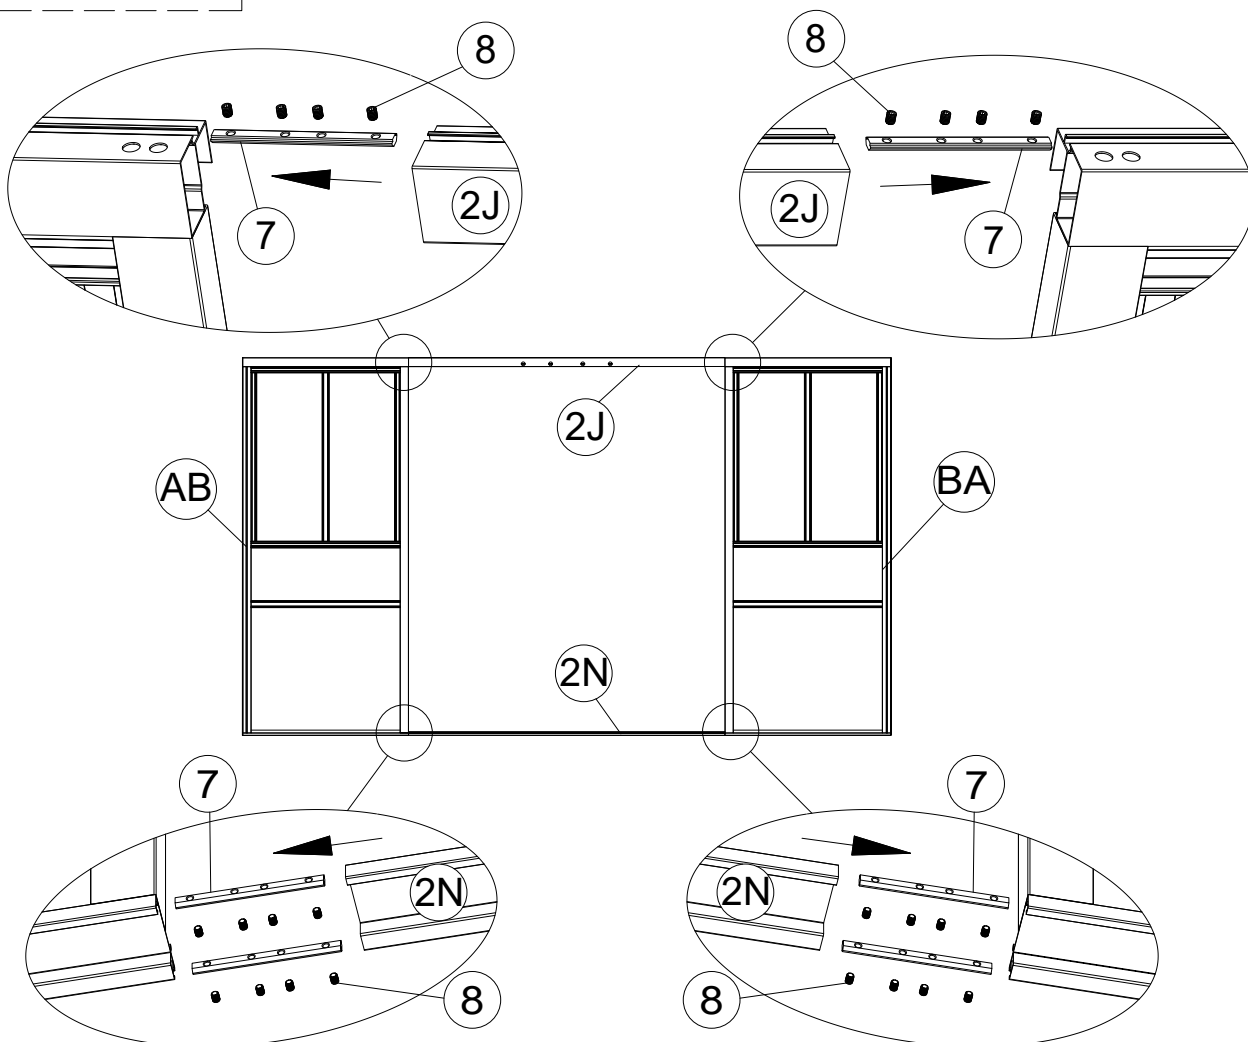







M6x15


<36>

1 16x

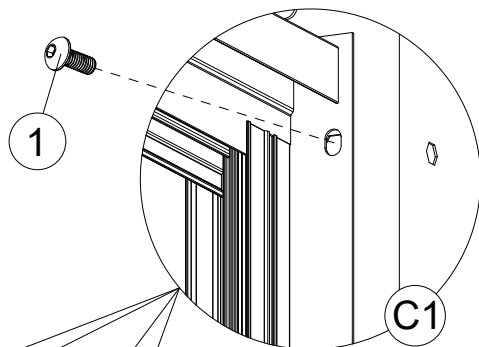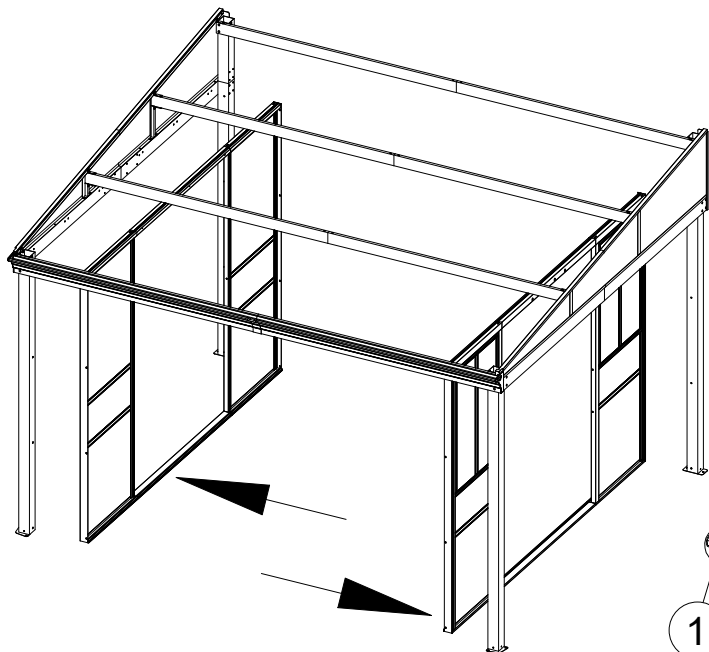

C1
&
C1-1
&
C2
&
C2-1

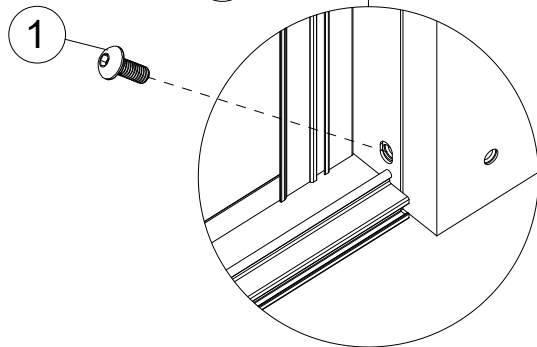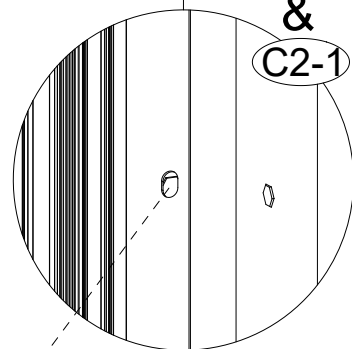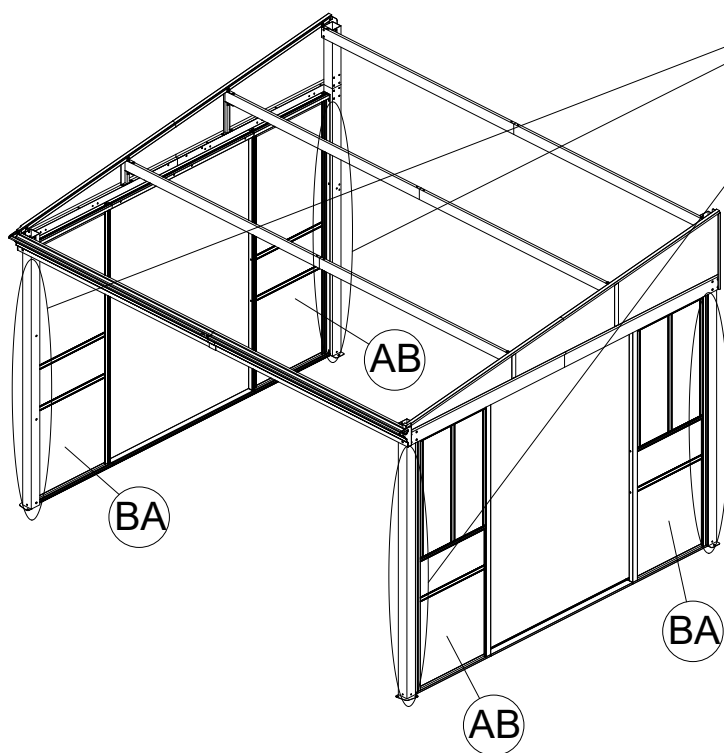



<37>

Q2 12x



M5

10 24x






M5x12

11 24x



M6x15

1 24x


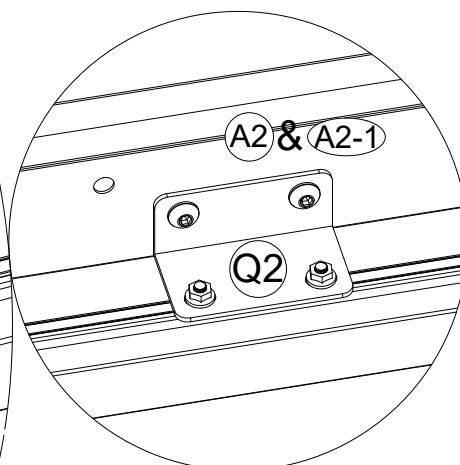
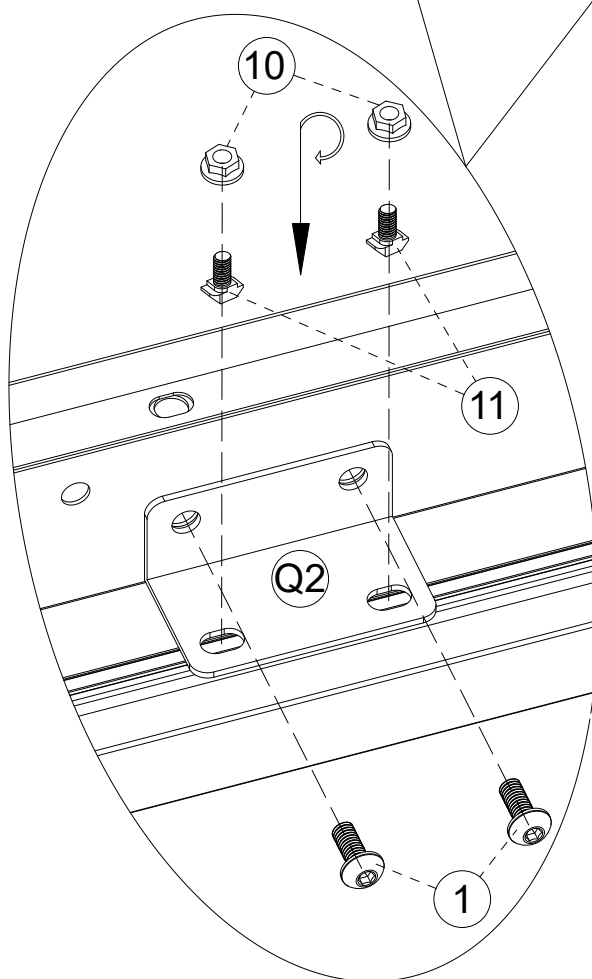
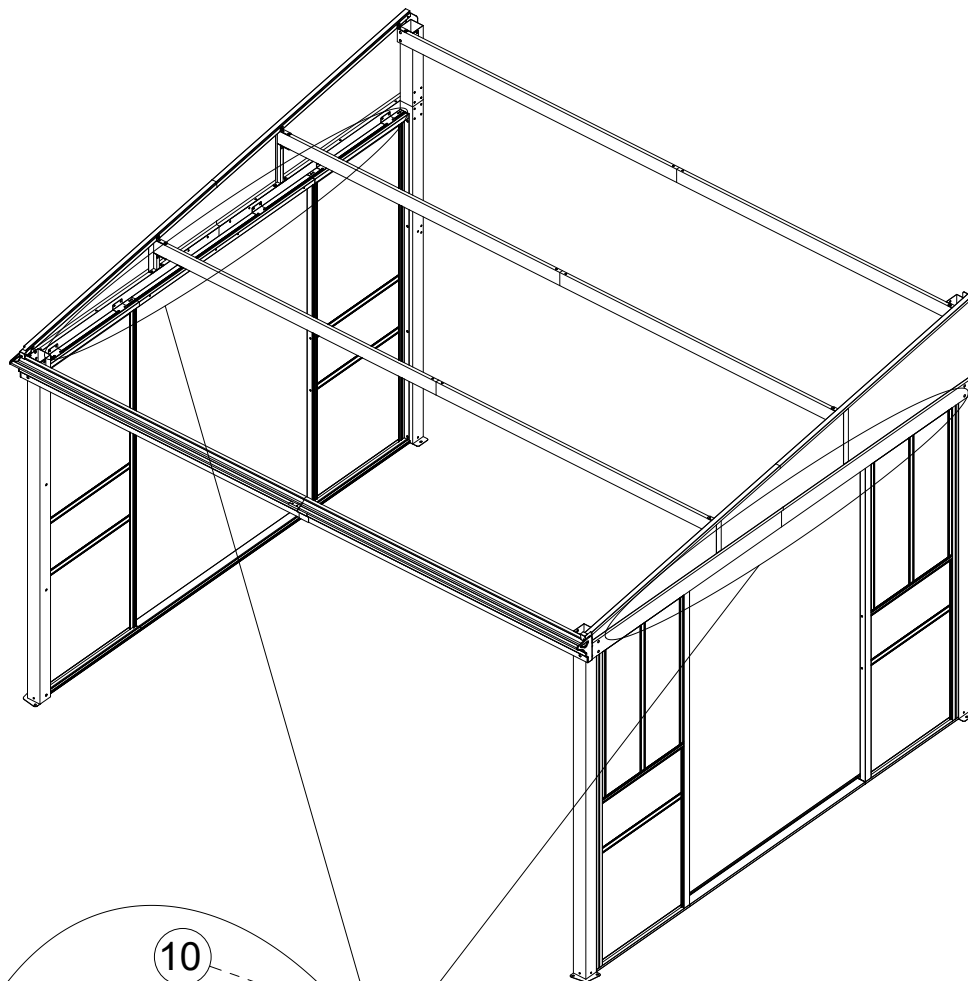





M6x15

<38>

1 8x

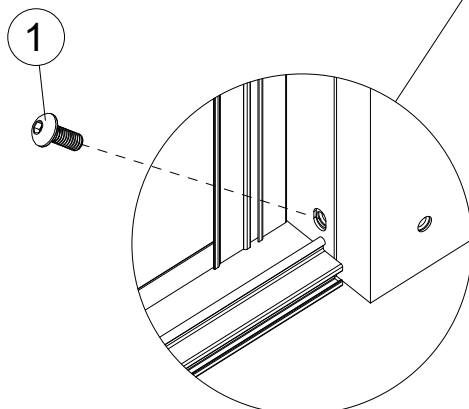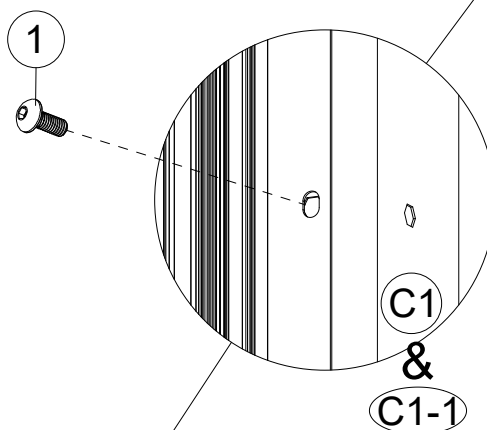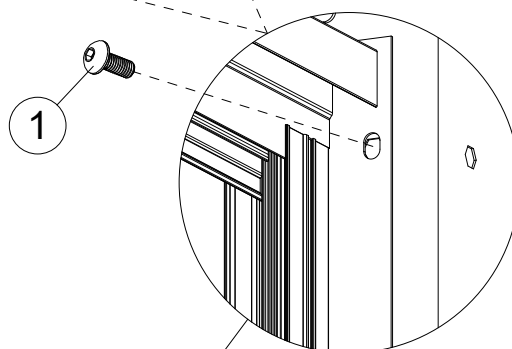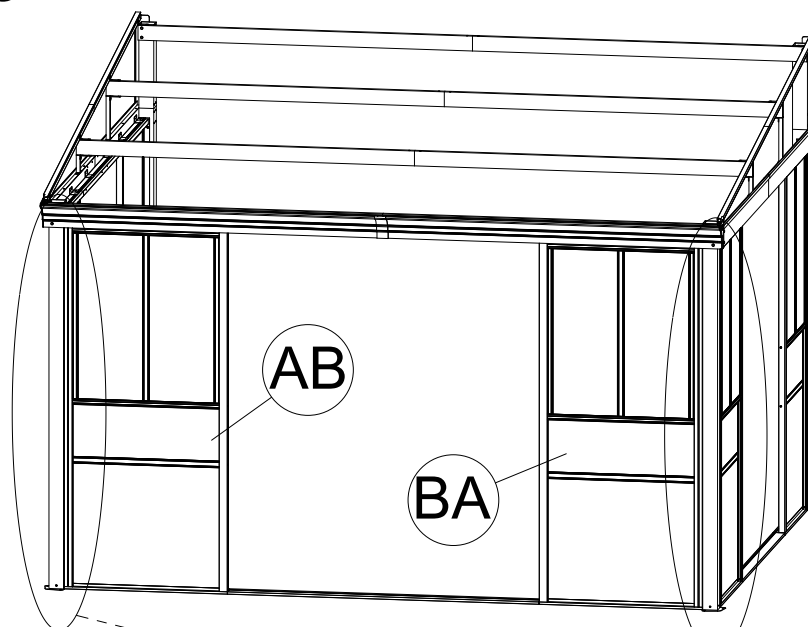



<39>

Q2 6x



M5

10 12x






M5x12

11 12x




M6x15

1 12x

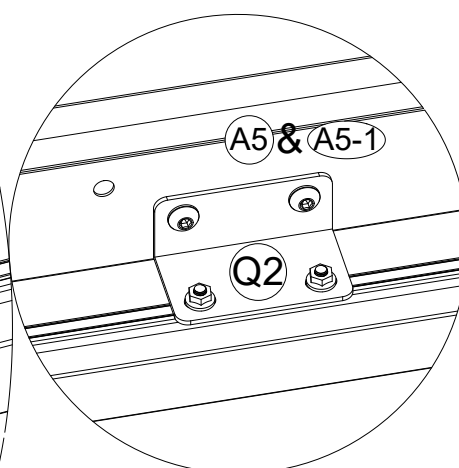
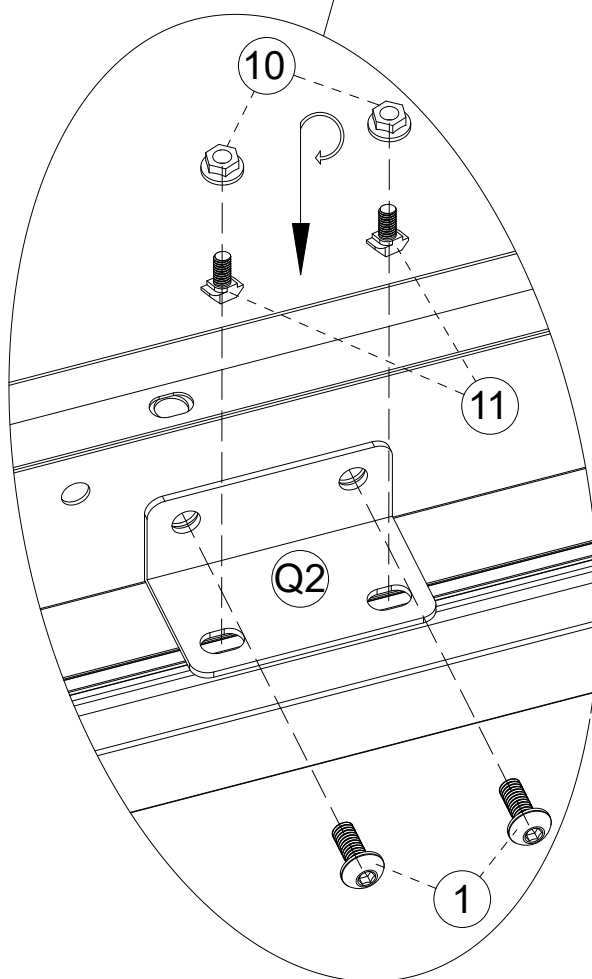
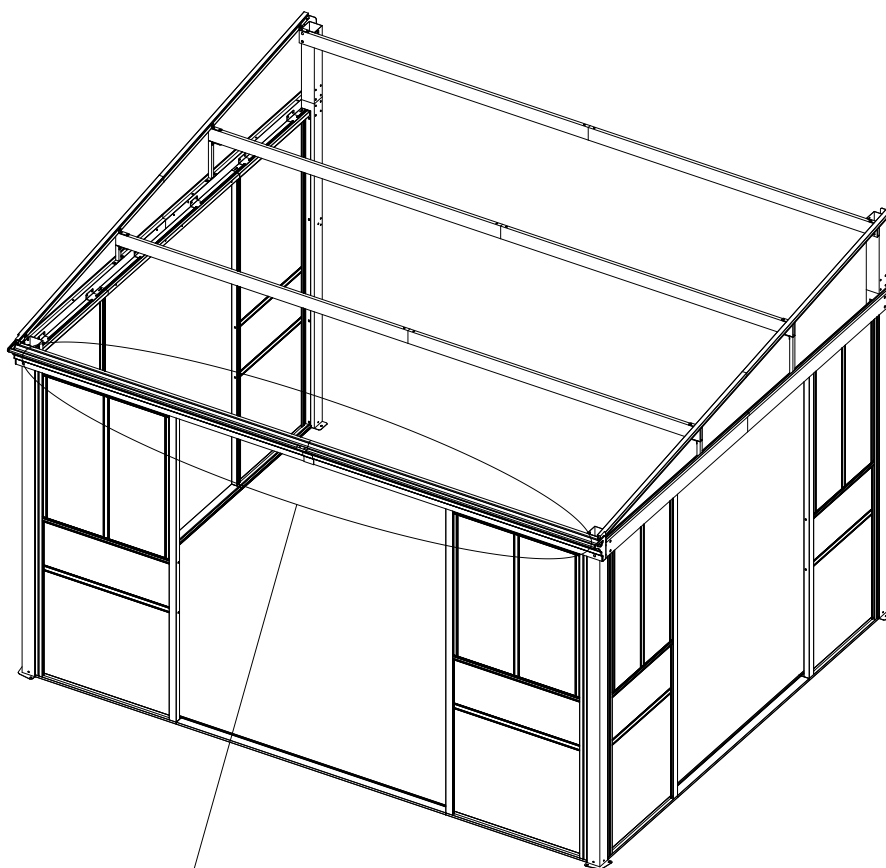



<40>

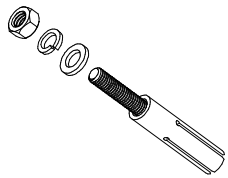

12 8x

Please install it
on a level floor

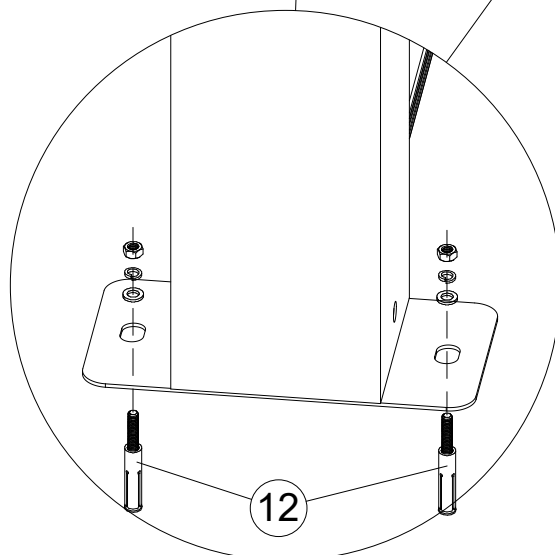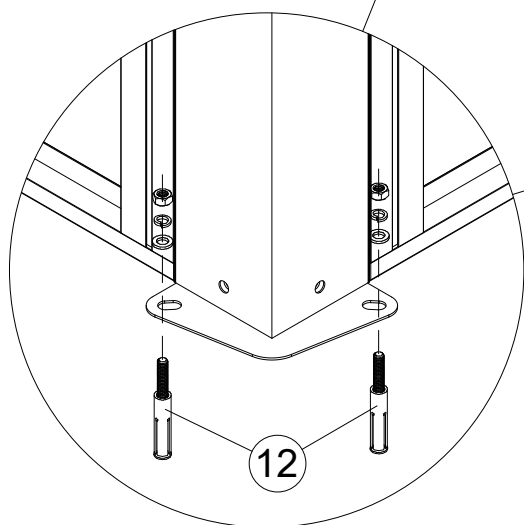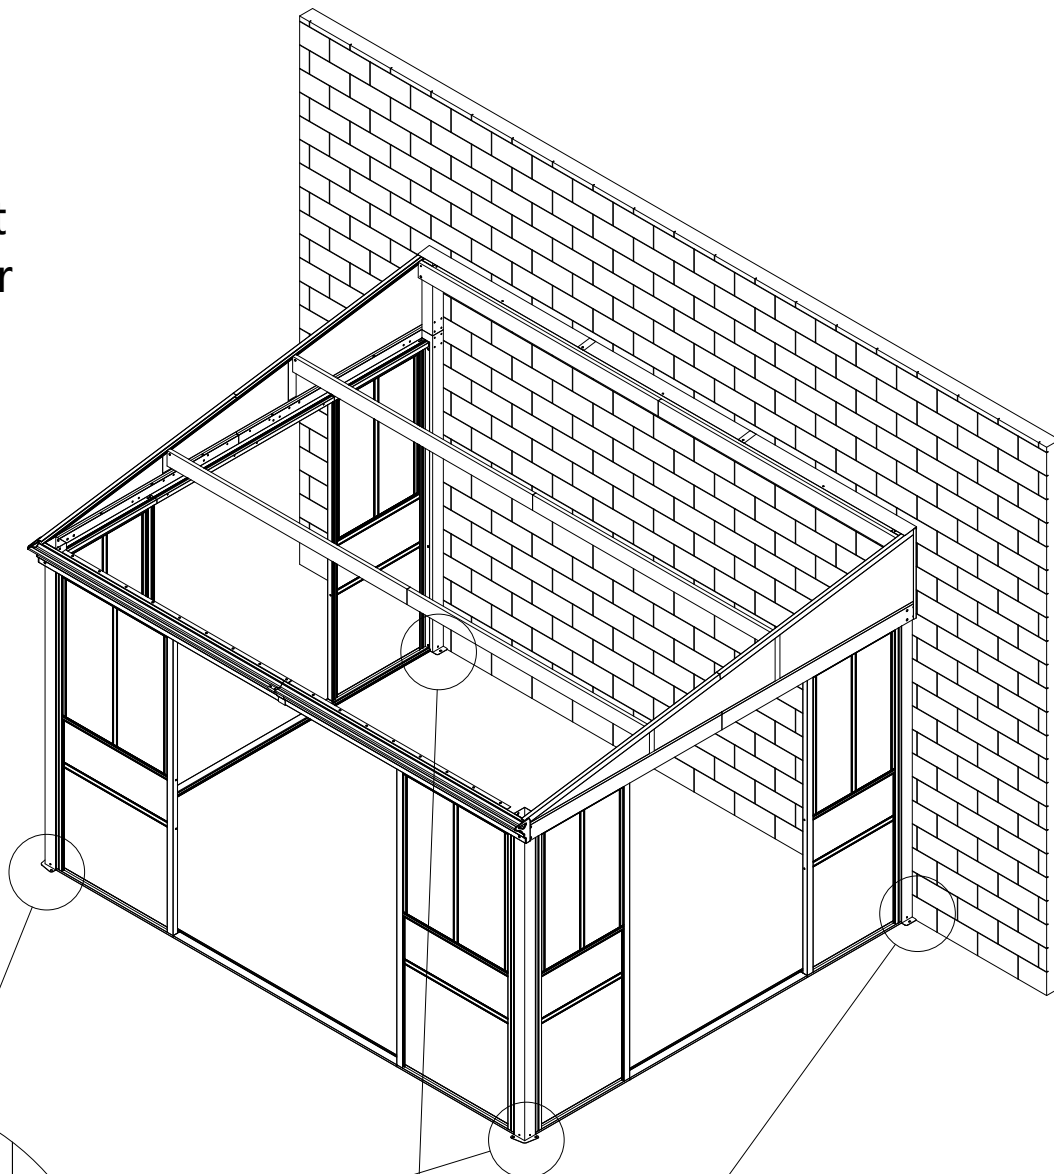




<41>

Q3 2x






M6x15

1 6x

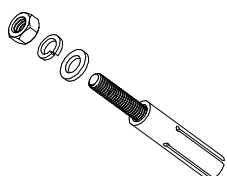

12 2x

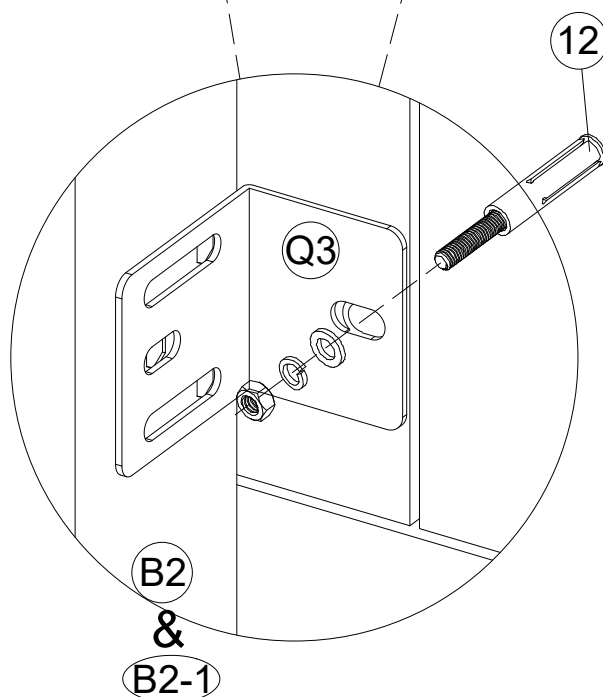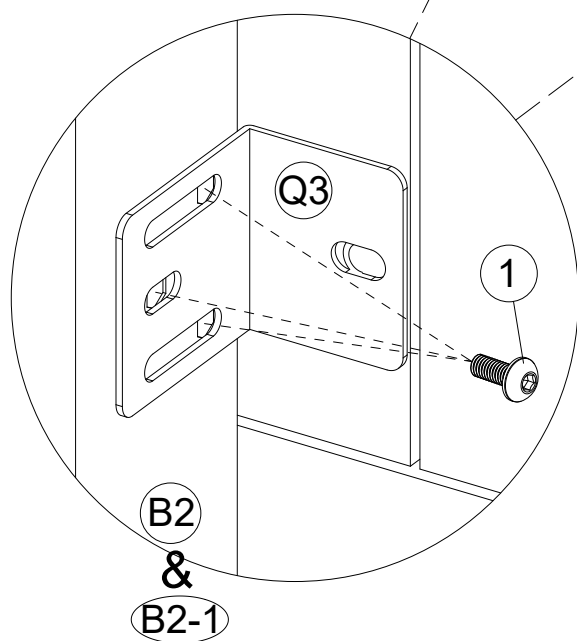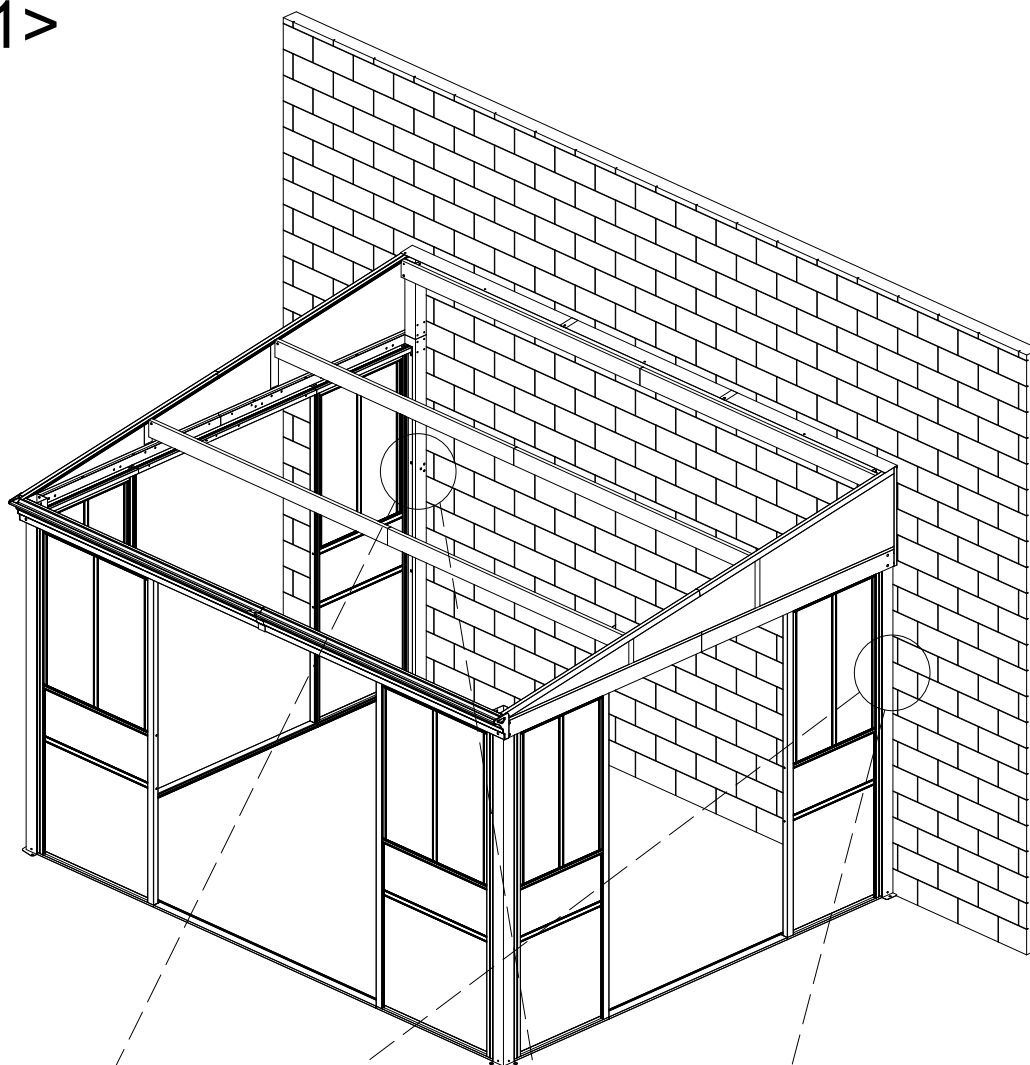

<42>

DA 3x


Pay attention to the left and right orientation when installing the door.

1F 3x




ST 4.8x12

3 12x

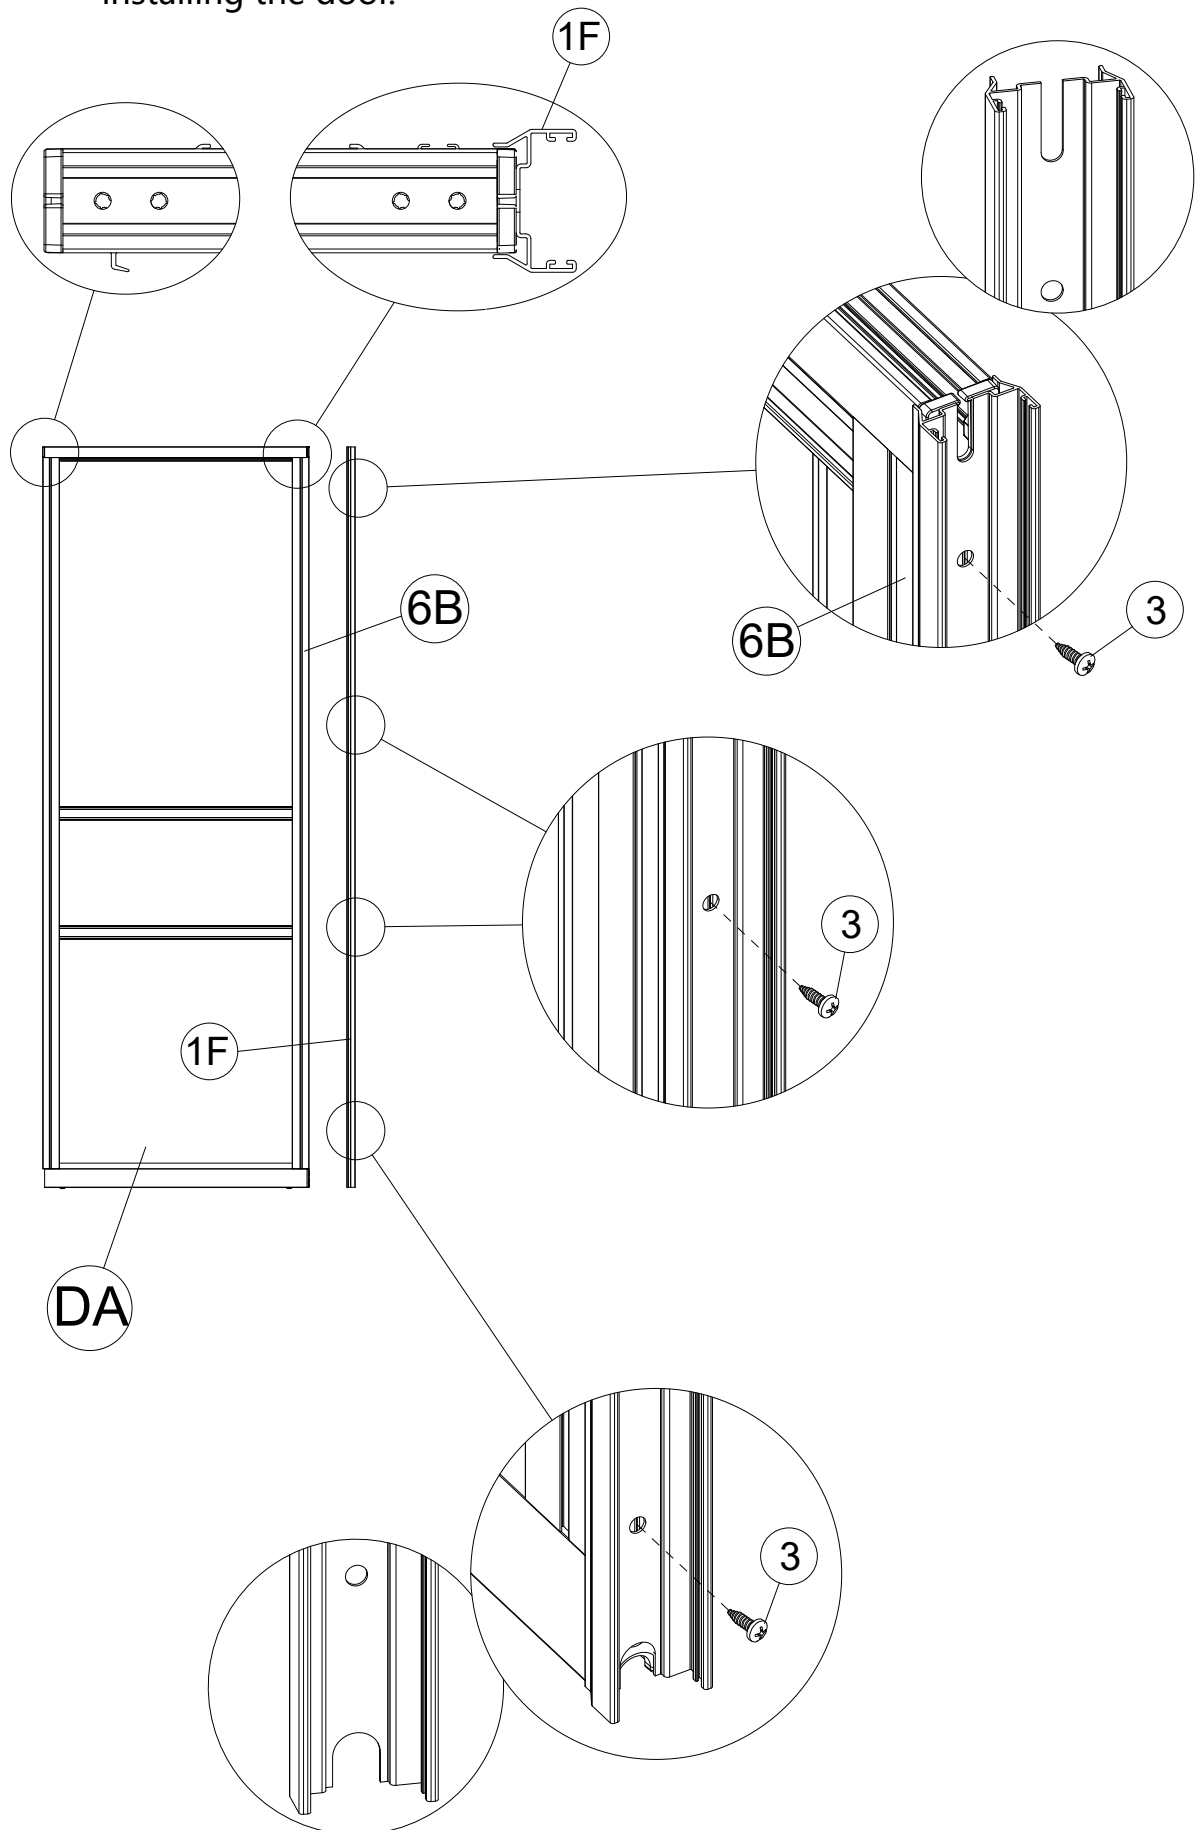

<43>


DA 3x



U1 3x



U2 3x




U3 3x




M4x12


14 3x

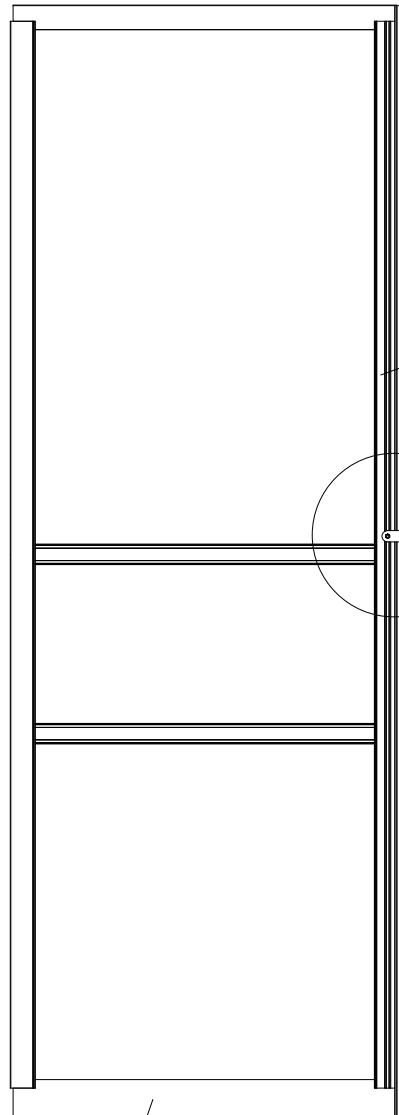

6B

DA

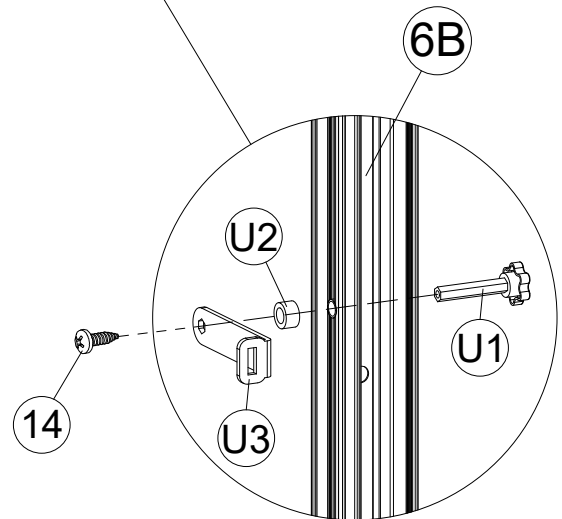



U4 3x




M5x15



13 12x

<44>

AD 3x


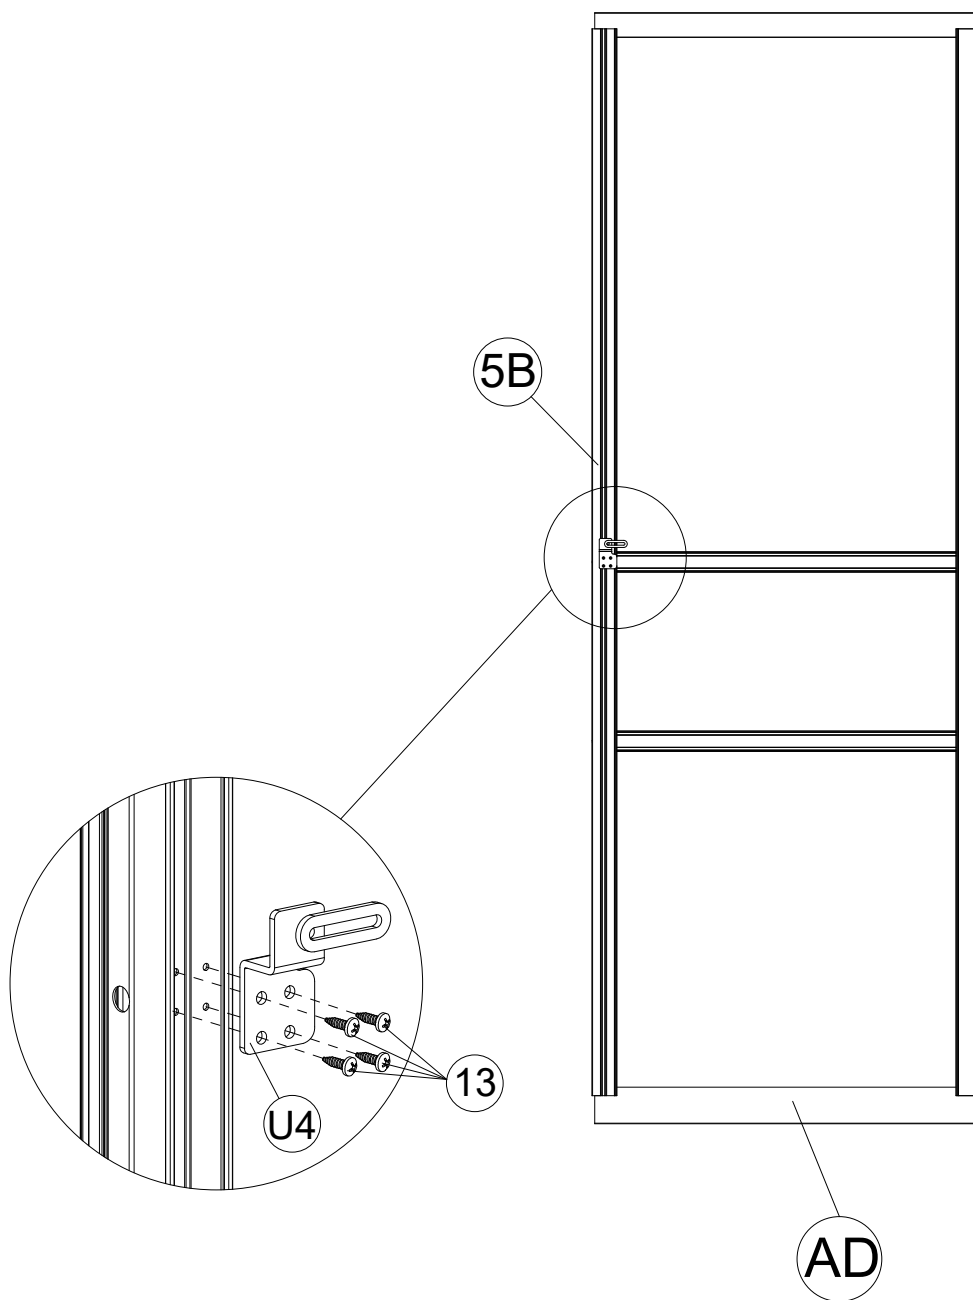


<45>

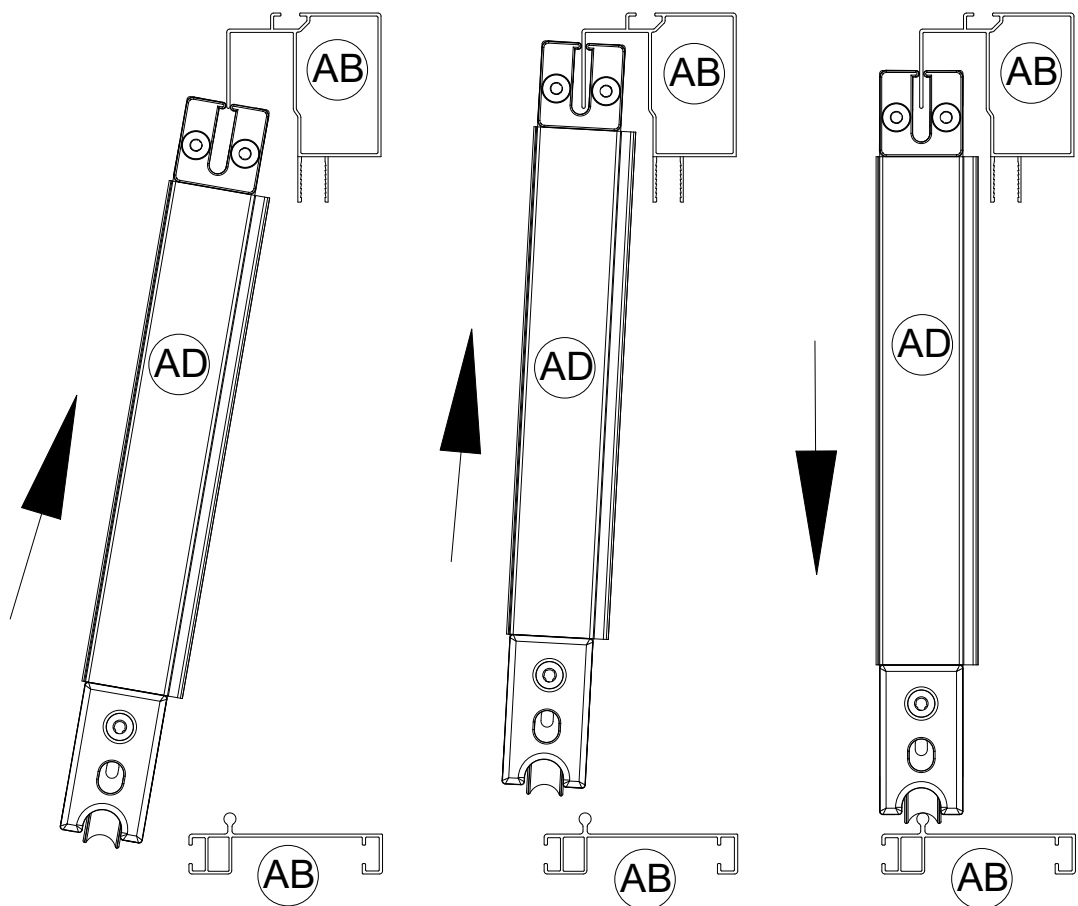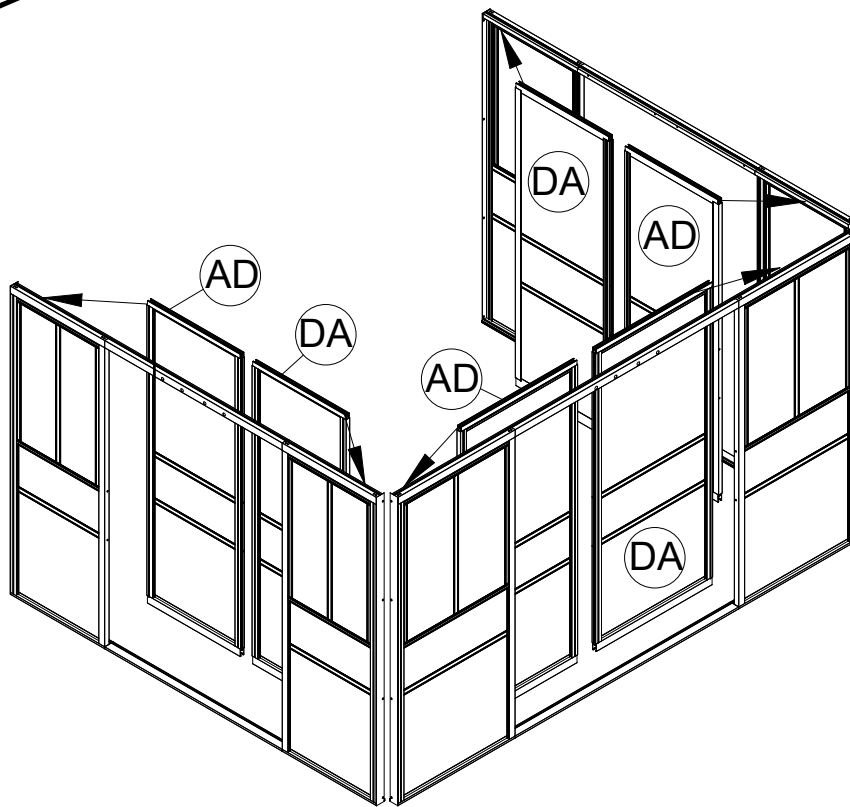

Repeat the previous steps
for other components.

<46>

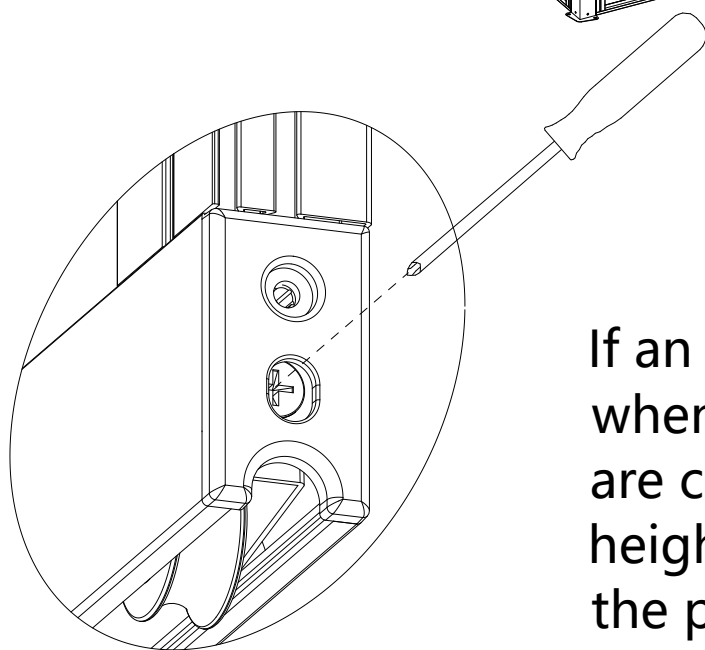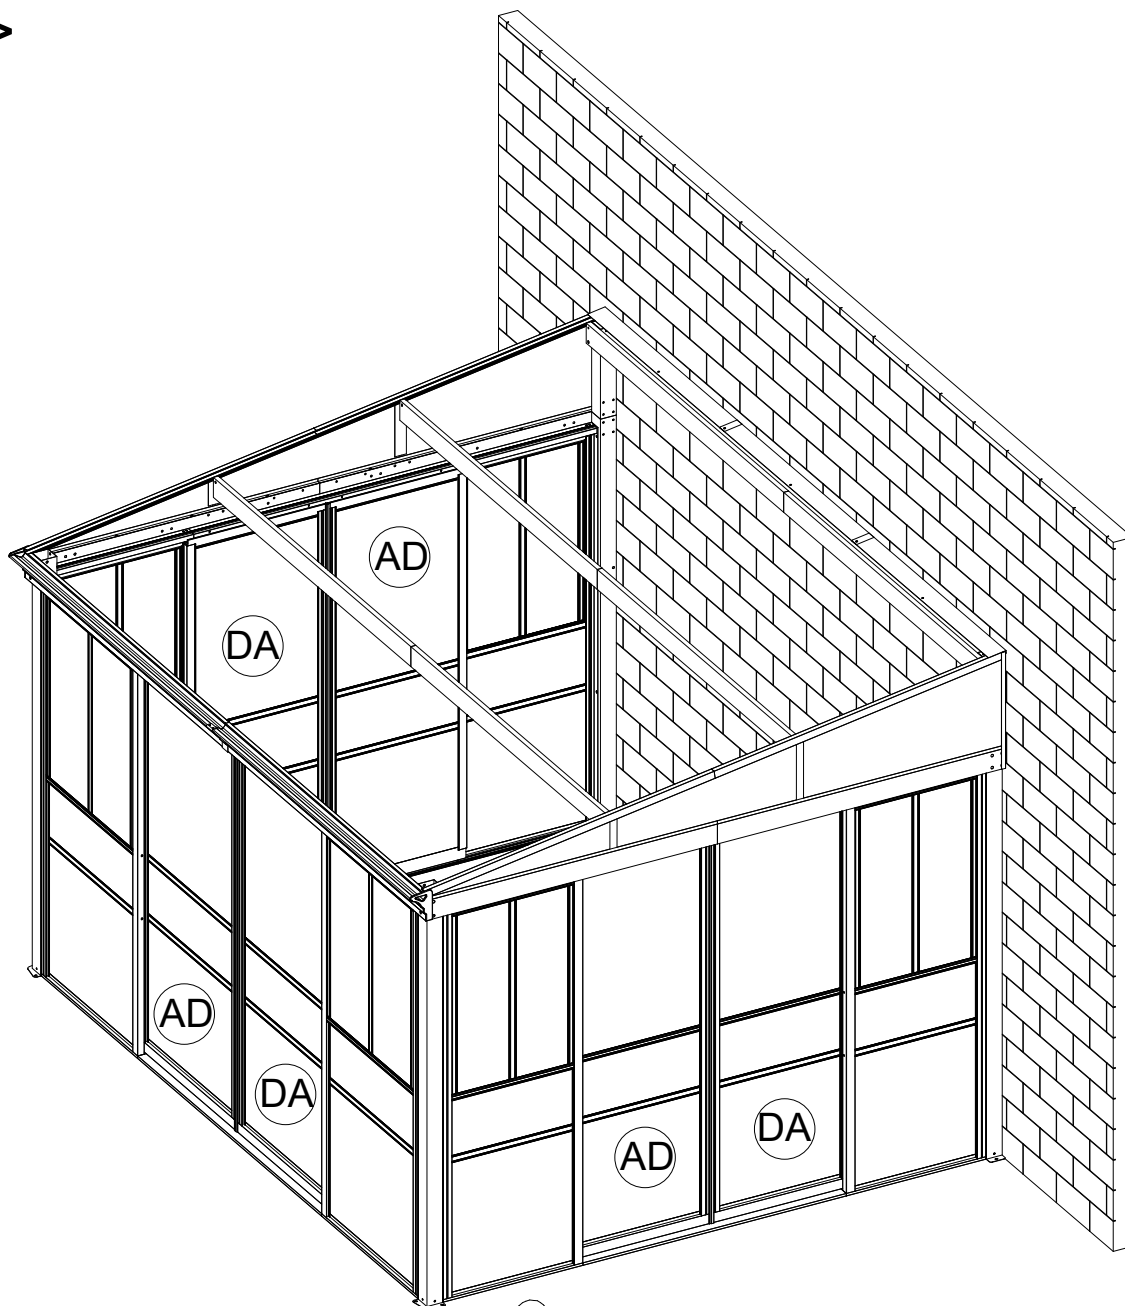

If an obvious gap appears when the two sliding doors are closed, adjust the pulley height using the screw on the pulley.

<47>

