
# TV Stand

Assembly Instructions - Please keep for future reference

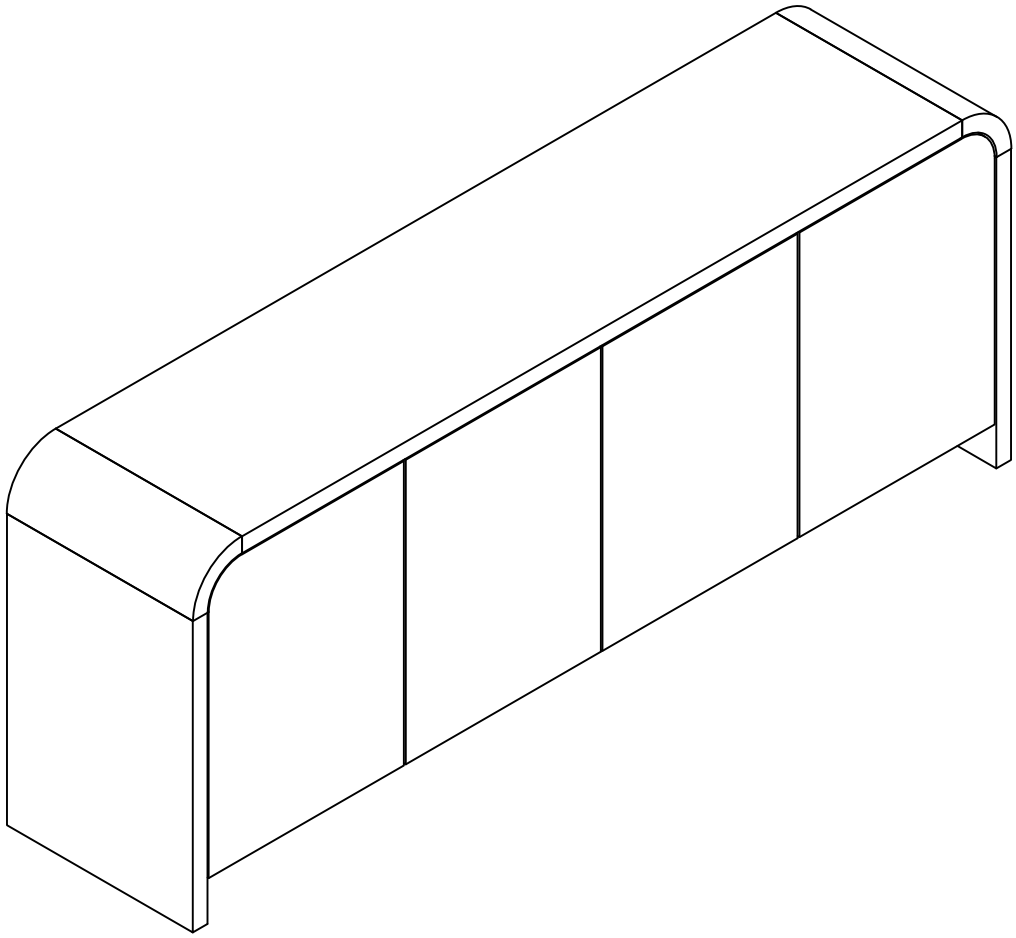

## Dimensions

Width-65.748inch

Depth-14.961inch

Height-25.591inch

**WARNING**




This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

# Safety and Care Advice

## Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

## WARNING
**In order to help prevent overturning – please follow these instructions**












To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Components-Fittings

## Please check you have all the panels llsted below

Note:The quantlle below are the correcet amount to complete the assembly. in some cases more fittings may be supplied than are required
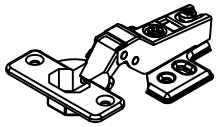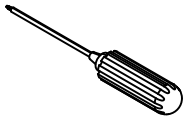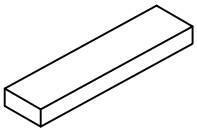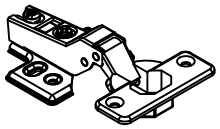
| | | | |
|---|---|---|---|
| Ⓐ  6*35mm Cam Bolt x 22 | Ⓑ  15*10mm Cam Lock x 22 | Ⓒ  8*30mm Dowel x 20 | Ⓓ  4*40mm Screw x 4 |
| Ⓔ  3.5*14mm Screw x 82 | Ⓕ  Layer plate support x 8 | Ⓖ  Anti-tilting nylon tape x 2 | Ⓗ  Large bend hinge x 4 |
| Ⓘ  Phillips screwdriver x1 | Ⓙ  Back panel buckle x 20 | Ⓚ  Plastic expansion bolt x 2 | Ⓛ  EVA pad x 4 |
| Ⓜ  Pusher x 4 | Ⓝ  Medium bending hinge x4 | Ⓞ  Adjustable foot pads x 1 | Ⓟ  Connect the iron sheet x 1 |
| Ⓠ  Pusher base x 4 | | | |

## Tools required




Phillips screwdriver

# Using Camlocks


## Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

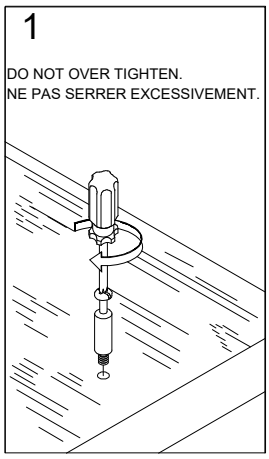


## Step 2


Push the male camlock into the entry hole.

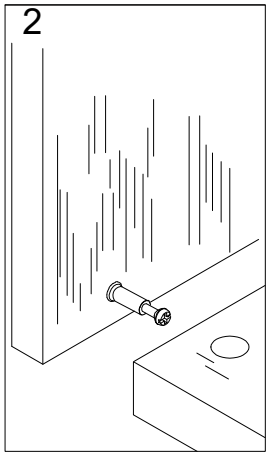


## Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

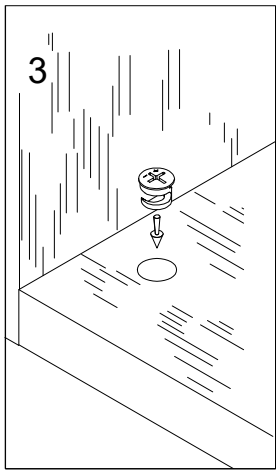



## Step 4


Turn the female camlock clockwise with a screwdriver.













You should feel a click when the camlock is locked in place.

The joint is now secure.

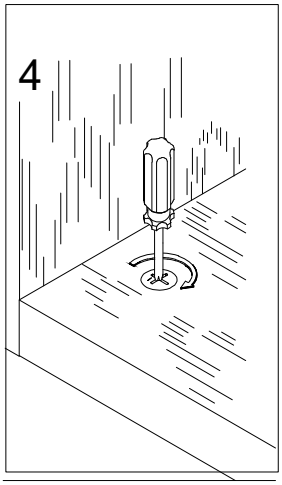


# Assembly Instructions

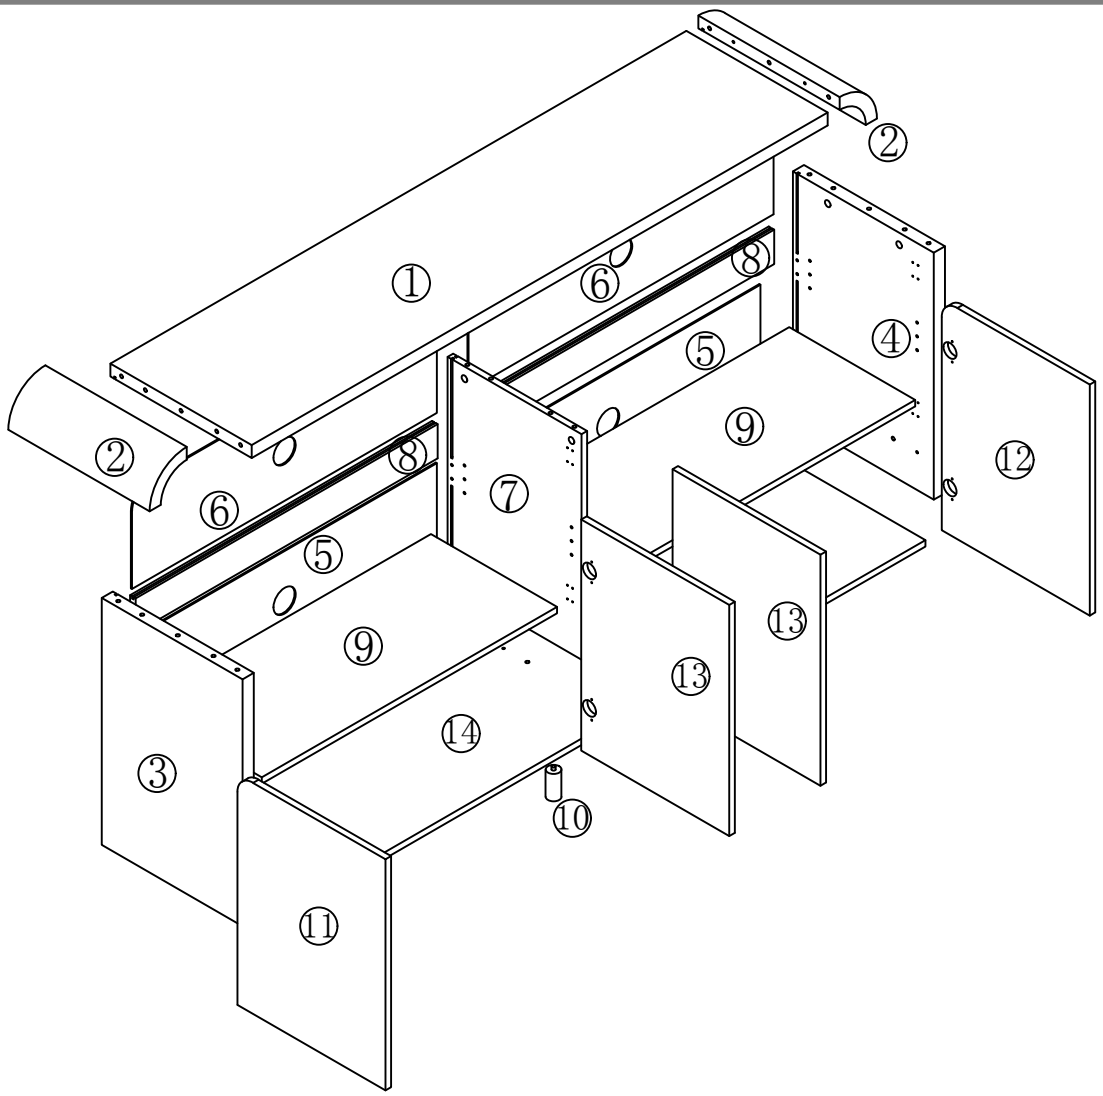

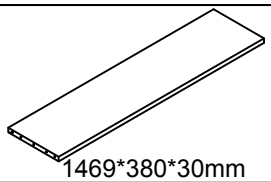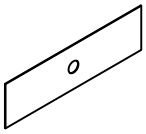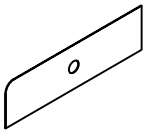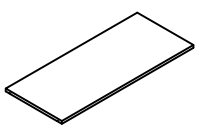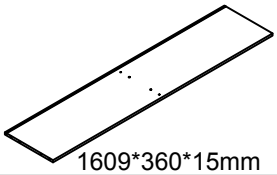
| | | | |
|---|---|---|---|
|  1469*380*30mm |  380*100*30mm |  550*379*30mm |  550*379*30mm |
| ①X1 | ②X2 | ③X1 | ④X1 |
|  805*231*3mm |  805*231*3mm |  525*360*15mm |  797*80*15mm |
| ⑤X2 | ⑥X2 | ⑦X1 | ⑧X2 |
|  794*339*12mm |  72*30*30mm |  538*398*15mm |  538*398*15mm |
| ⑨X2 | ⑩ X1 | ⑪ X1 | ⑫ X1 |
|  538*398*15mm |  1609*360*15mm | | |
| ⑬ X2 | ⑭ X1 | | |


# Assembly Instructions


## Step 1

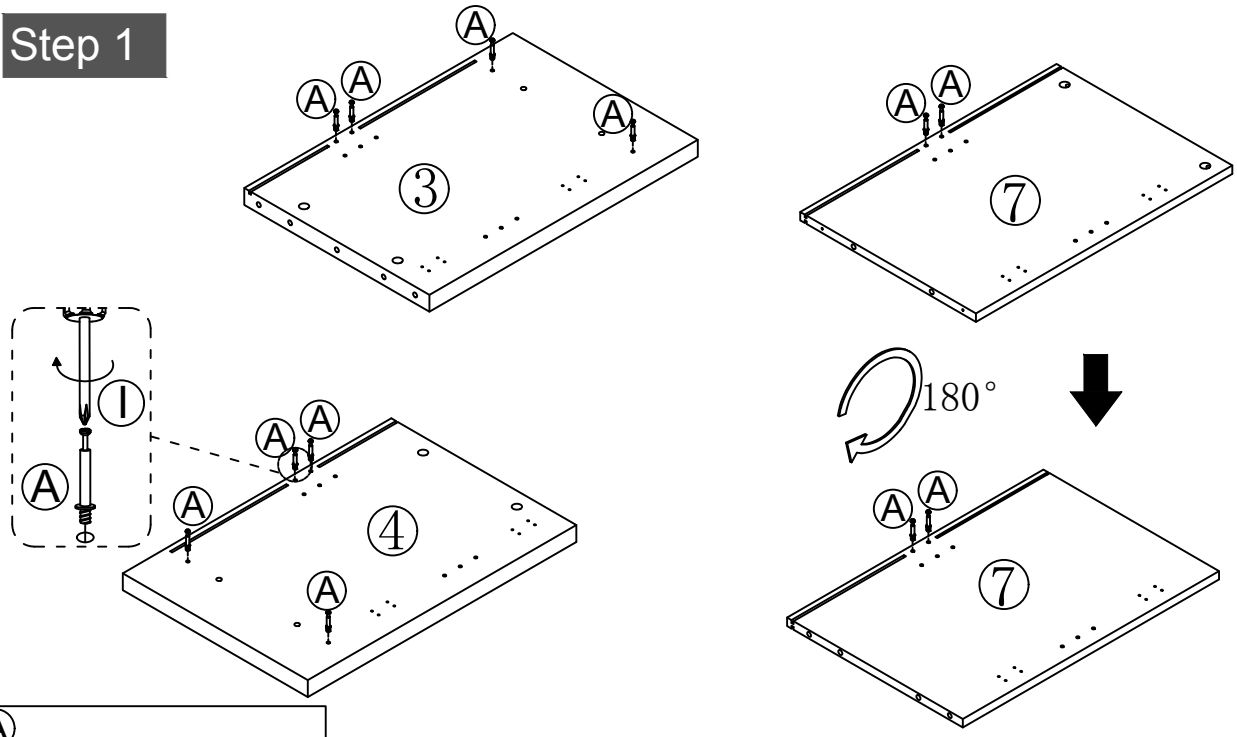


| A |
| --- |
| 6*35mm Cam Bolt x 12 |

## Step 2

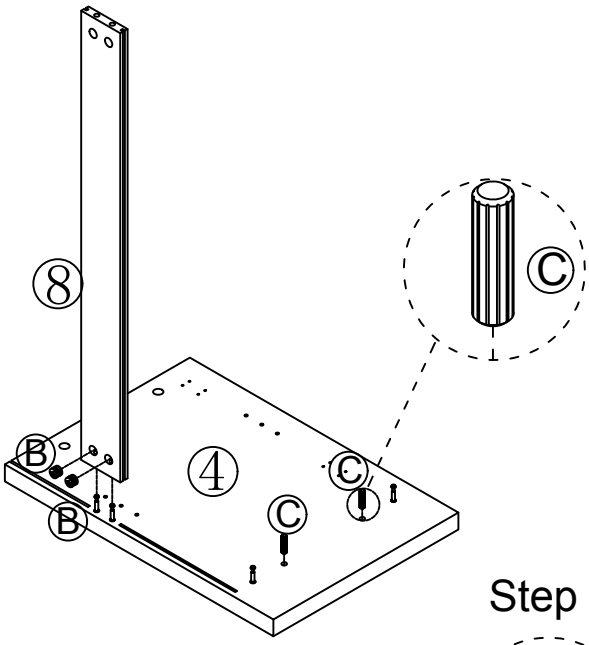



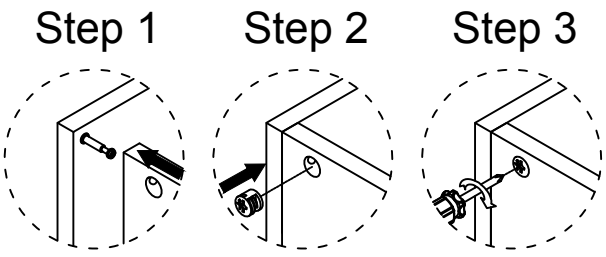




| B | C |
| --- | --- |
| 15*10mm Cam Lock x 2 | 8*30mm Dowel x 2 |


# Assembly Instructions

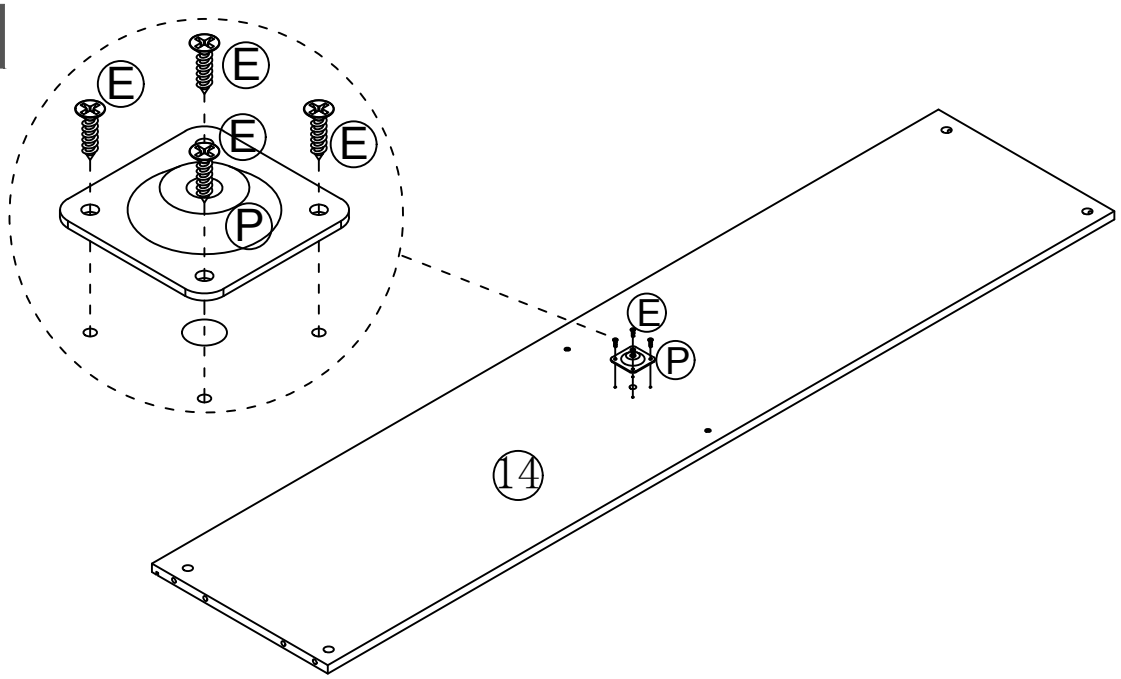
## Step 3




| E | P |
|---|---|
|  |  |
| 3.5*14mm Screw x 4 | Connect the iron sheet x 1 |


## Step 4

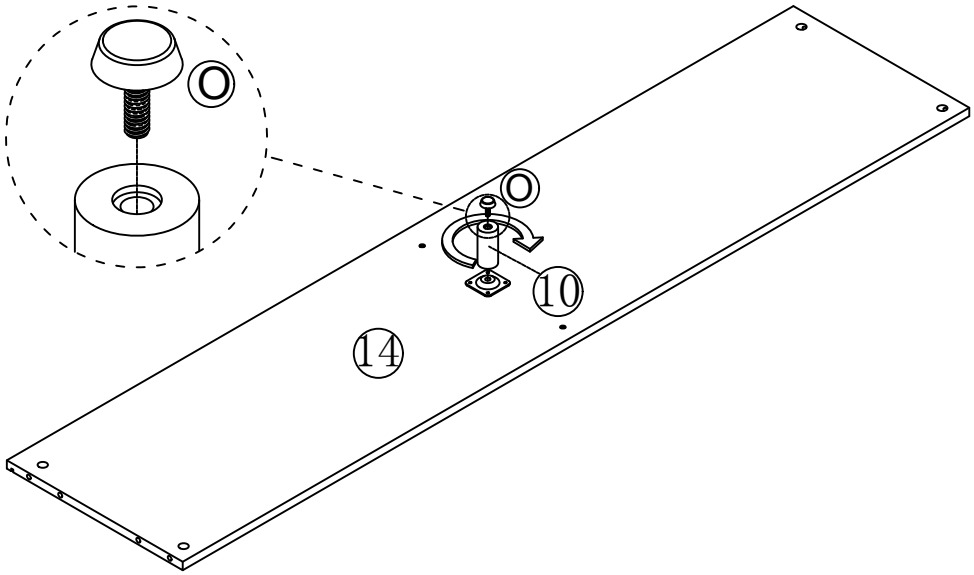



| O |
|---|
|  |
| Adjustable foot pads x 1 |


# Assembly Instructions

## Step 5

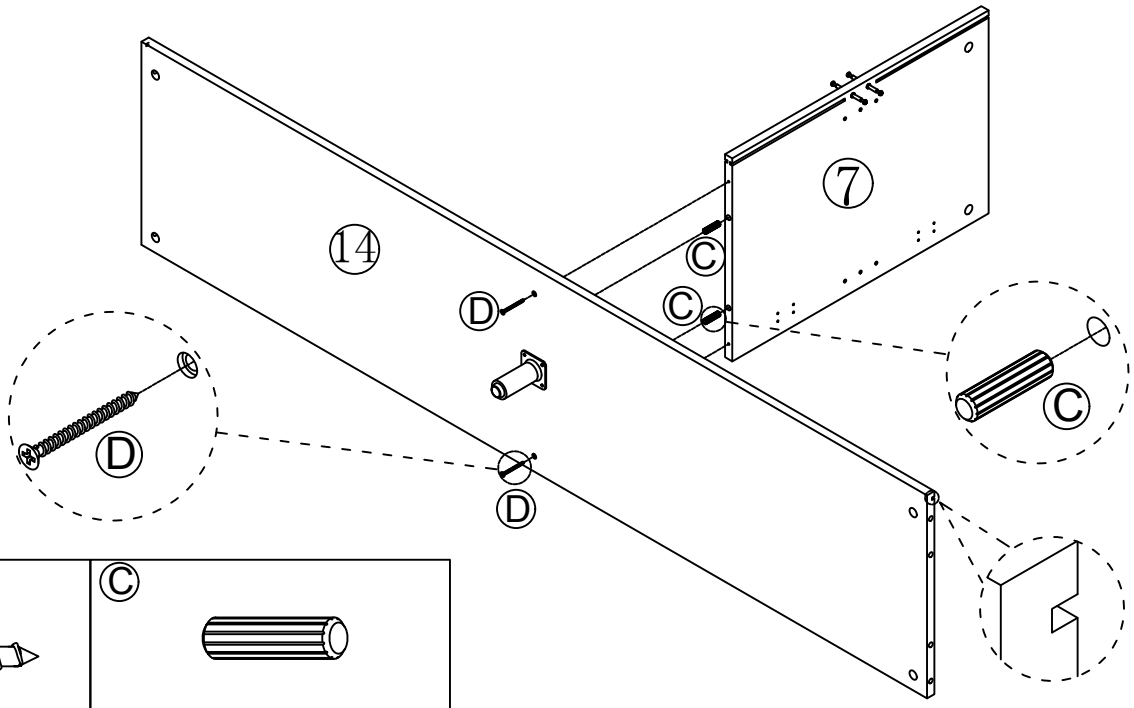



| D | C |
|---|---|
|  |  |
| 4*40mm Screw x 2 | 8*30mm Dowel x 2 |

## Step 6

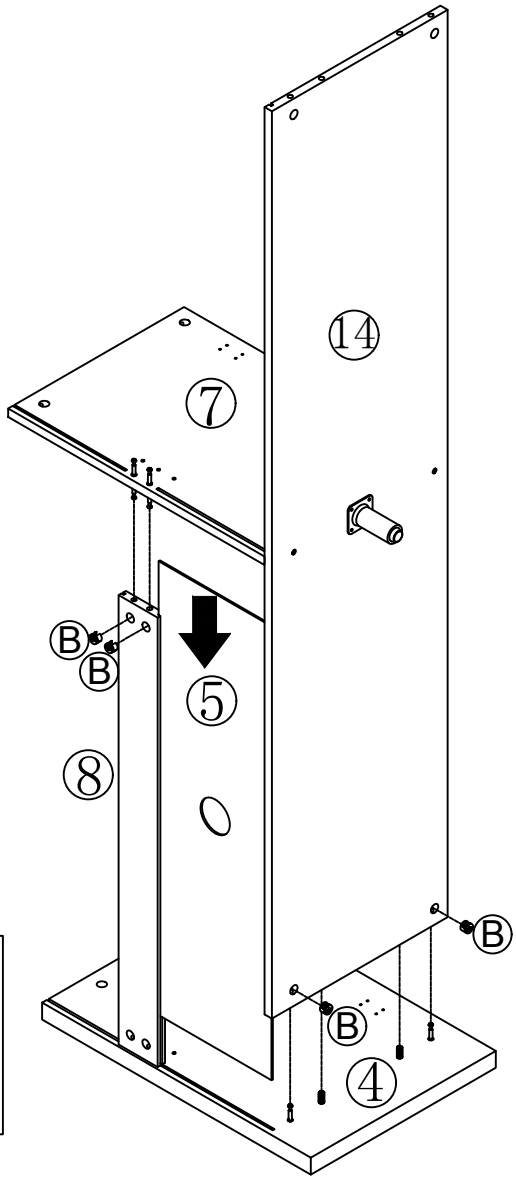



Caution Notice
At least two people need to complete it simultaneously

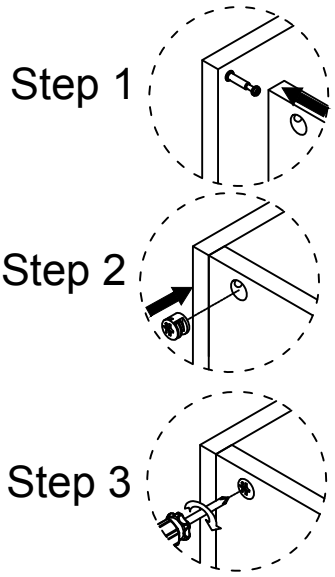



| B |
|---|
|  |
| 15*10mm Cam Lock x 4 |

# Assembly Instructions

## Step 7

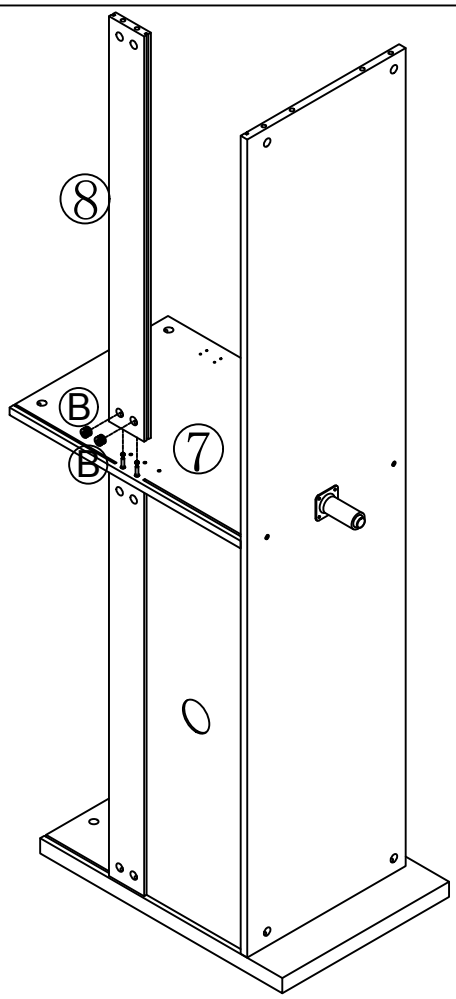

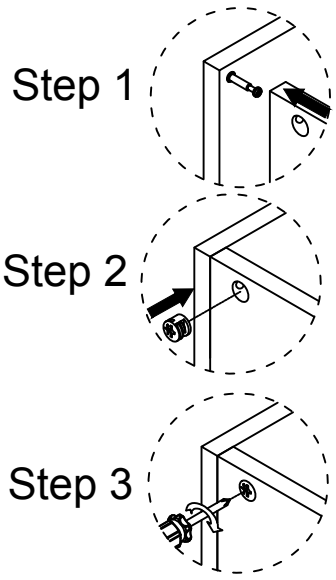




Ⓑ



15*10mm Cam Lock x 2
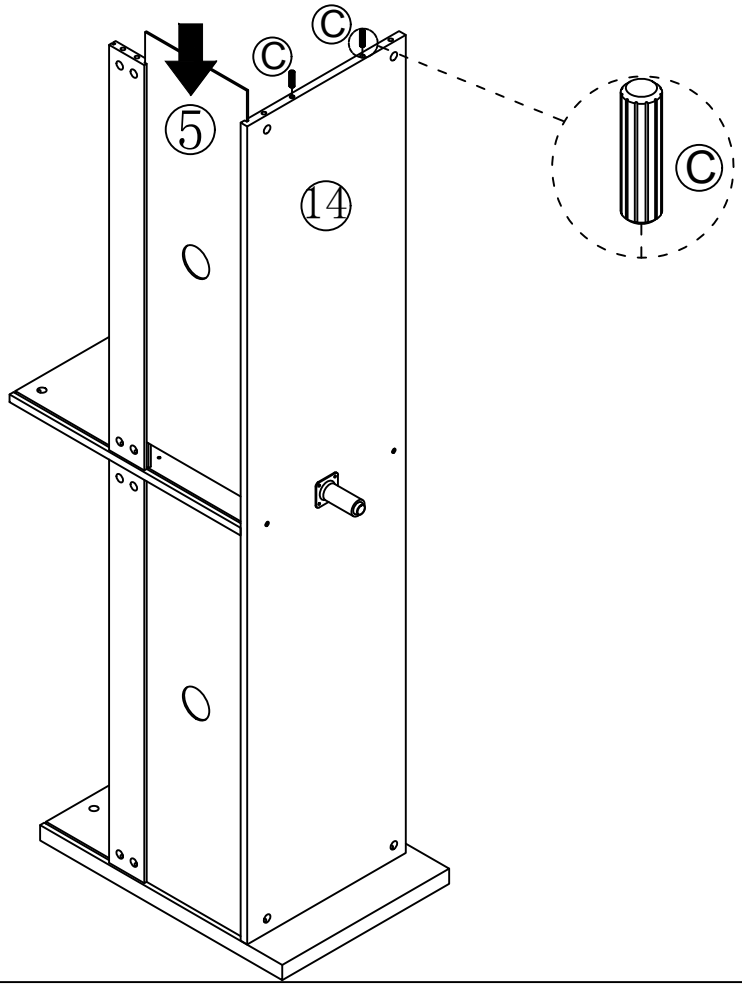
## Step 8





Ⓒ




8*30mm Dowel x 2

# Assembly Instructions

## Step 9

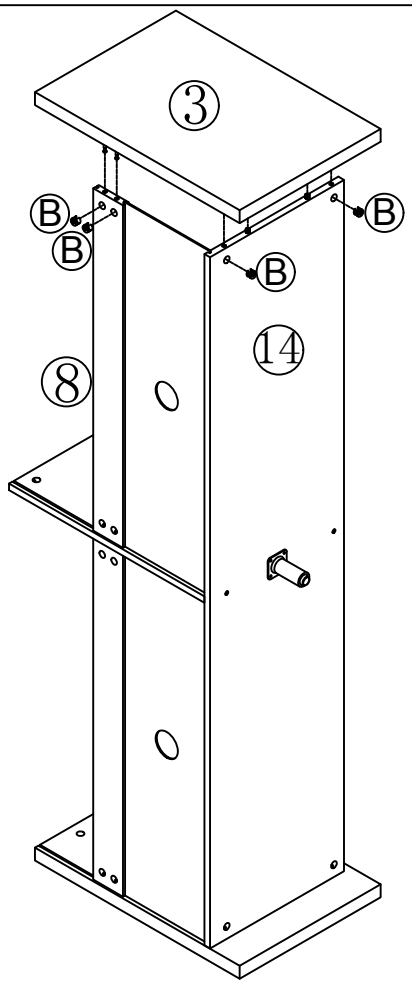

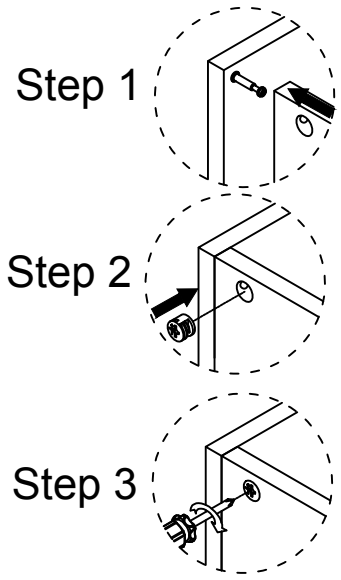



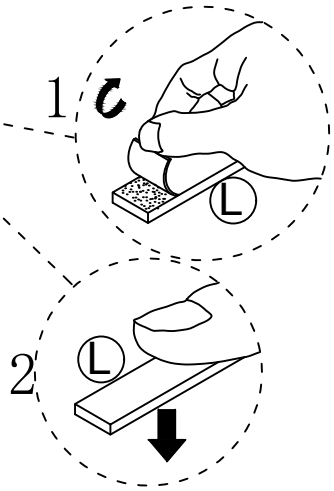

Ⓑ




15*10mm Cam Lock x 4

## Step 10

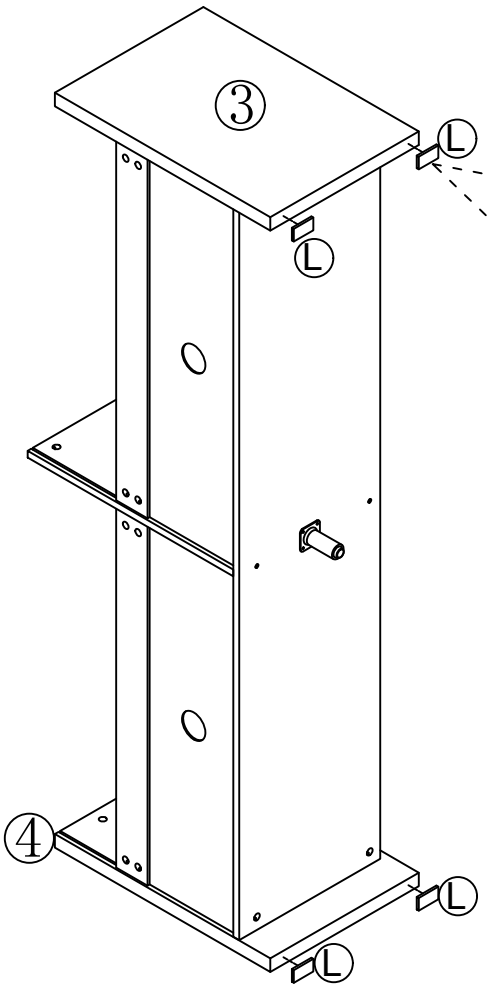




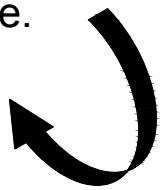

Be careful! At least two people are required here.



90°

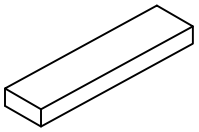
Ⓛ



EVA pad x 4


# Assembly Instructions

## Step 11

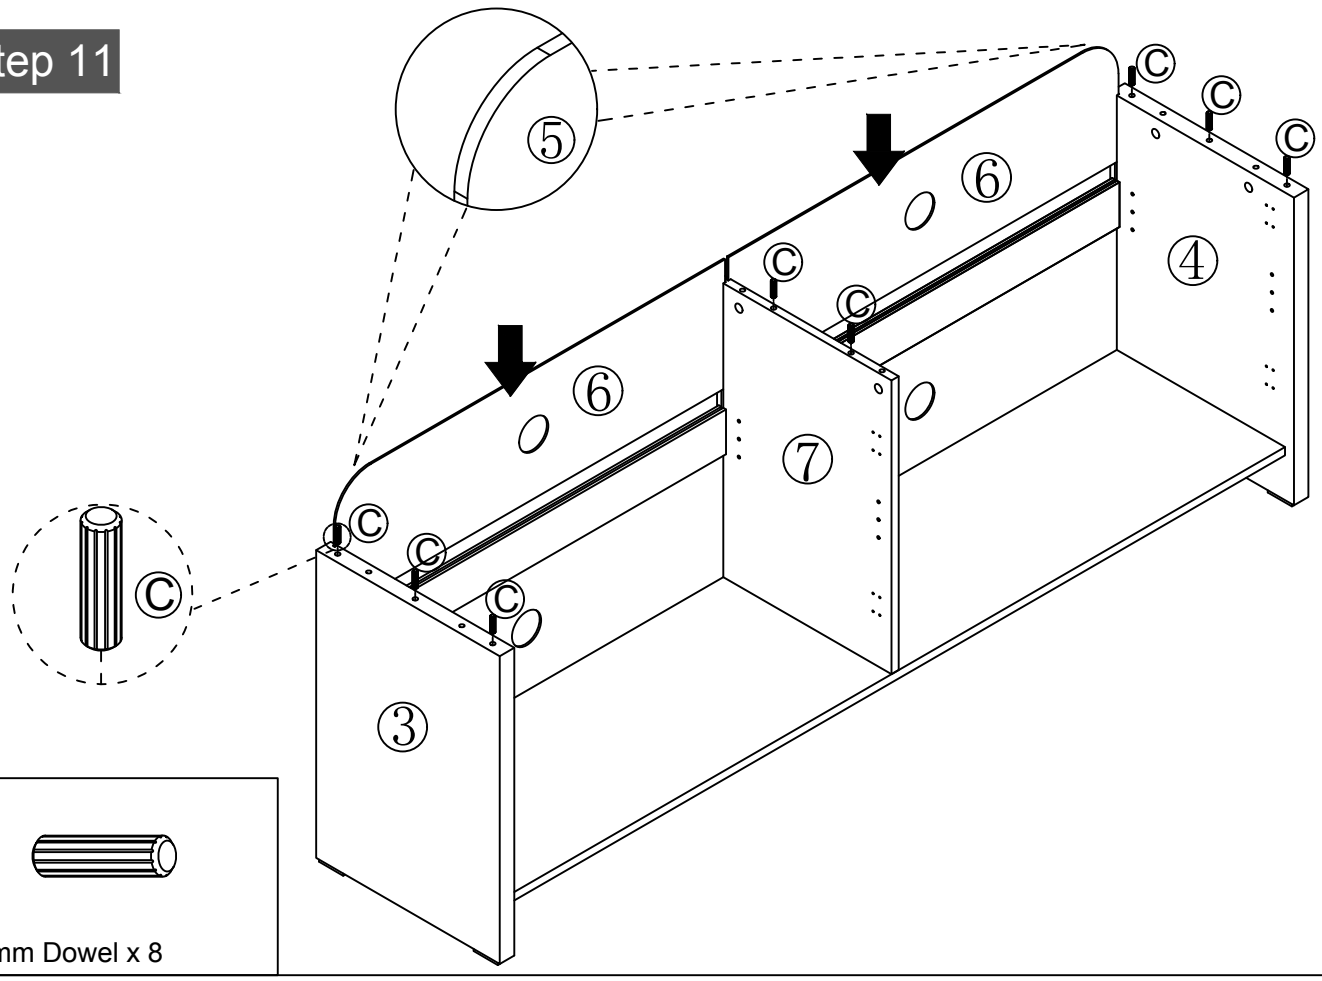


| C |
| --- |
| 8*30mm Dowel x 8 |


## Step 12

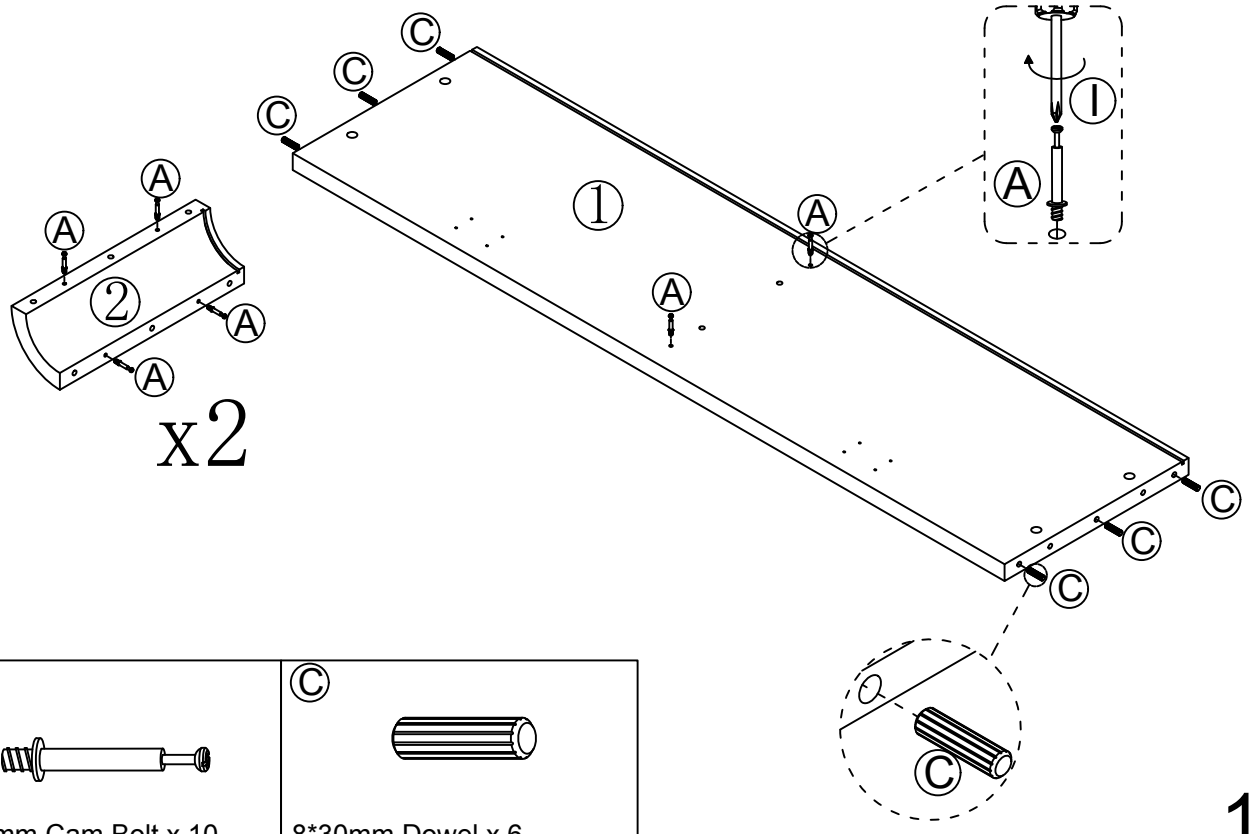



| A | C |
| --- | --- |
| 6*35mm Cam Bolt x 10 | 8*30mm Dowel x 6 |

# Assembly Instructions

## Step 13

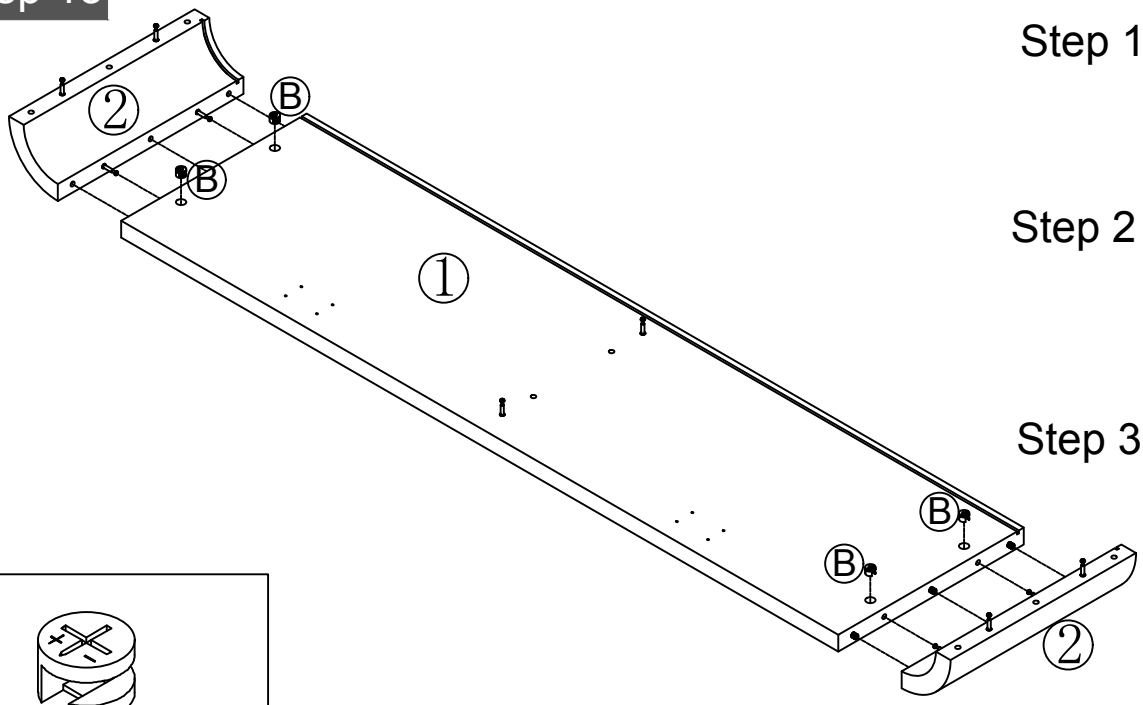

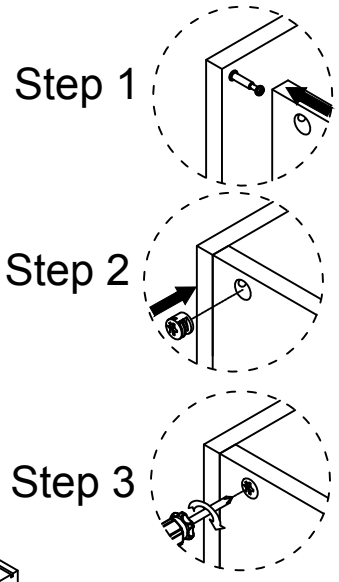



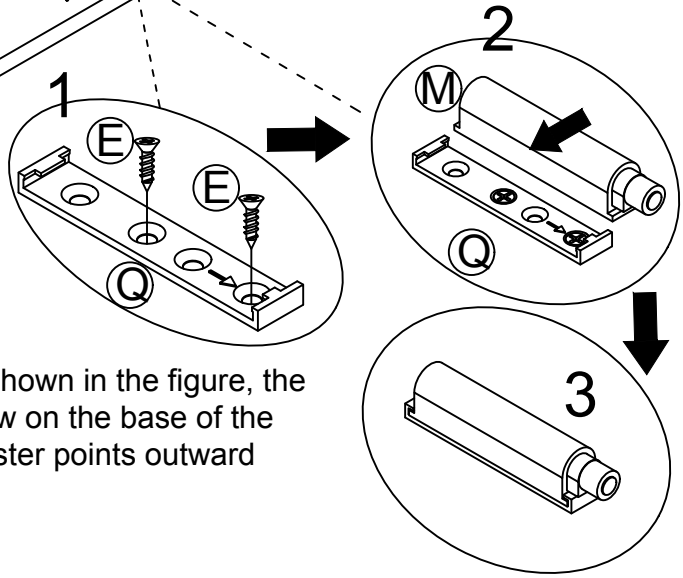

Ⓑ






15*10mm Cam Lock x 4

## Step 14

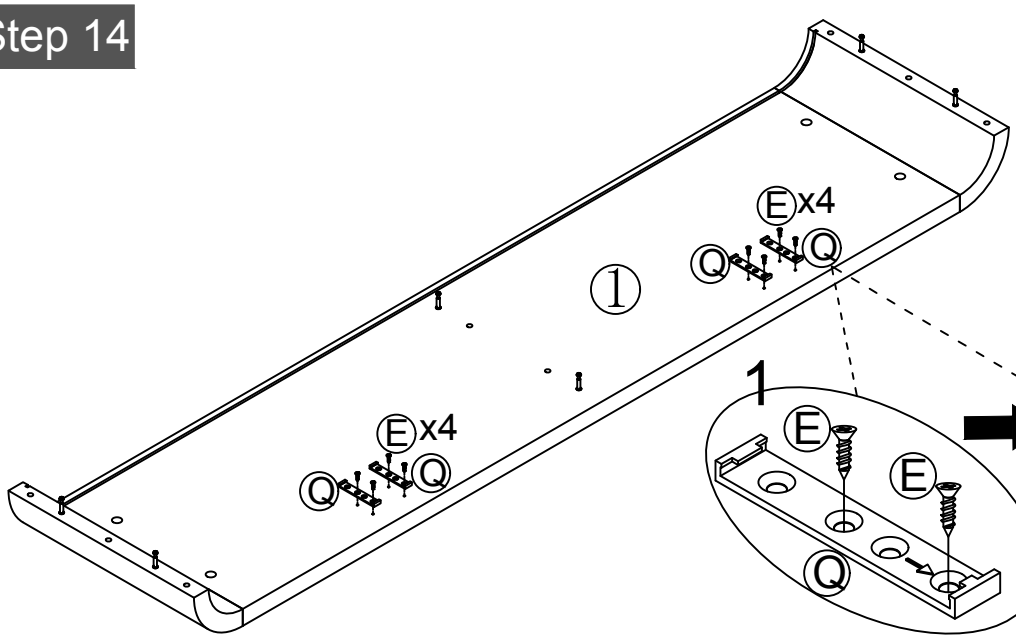



As shown in the figure, the arrow on the base of the thruster points outward

| Ⓔ | Ⓜ | Ⓠ |
|---|---|---|
|  |  |  |
| 3.5*14mm Screw x 8 | Pusher x 4 | Pusher base x 4 |


# Assembly Instructions

## Step 15


Step 1

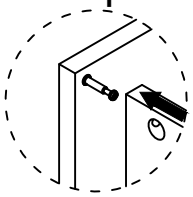


Step 2

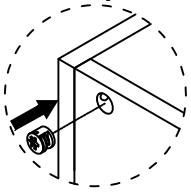

Step 3

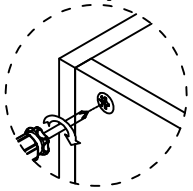

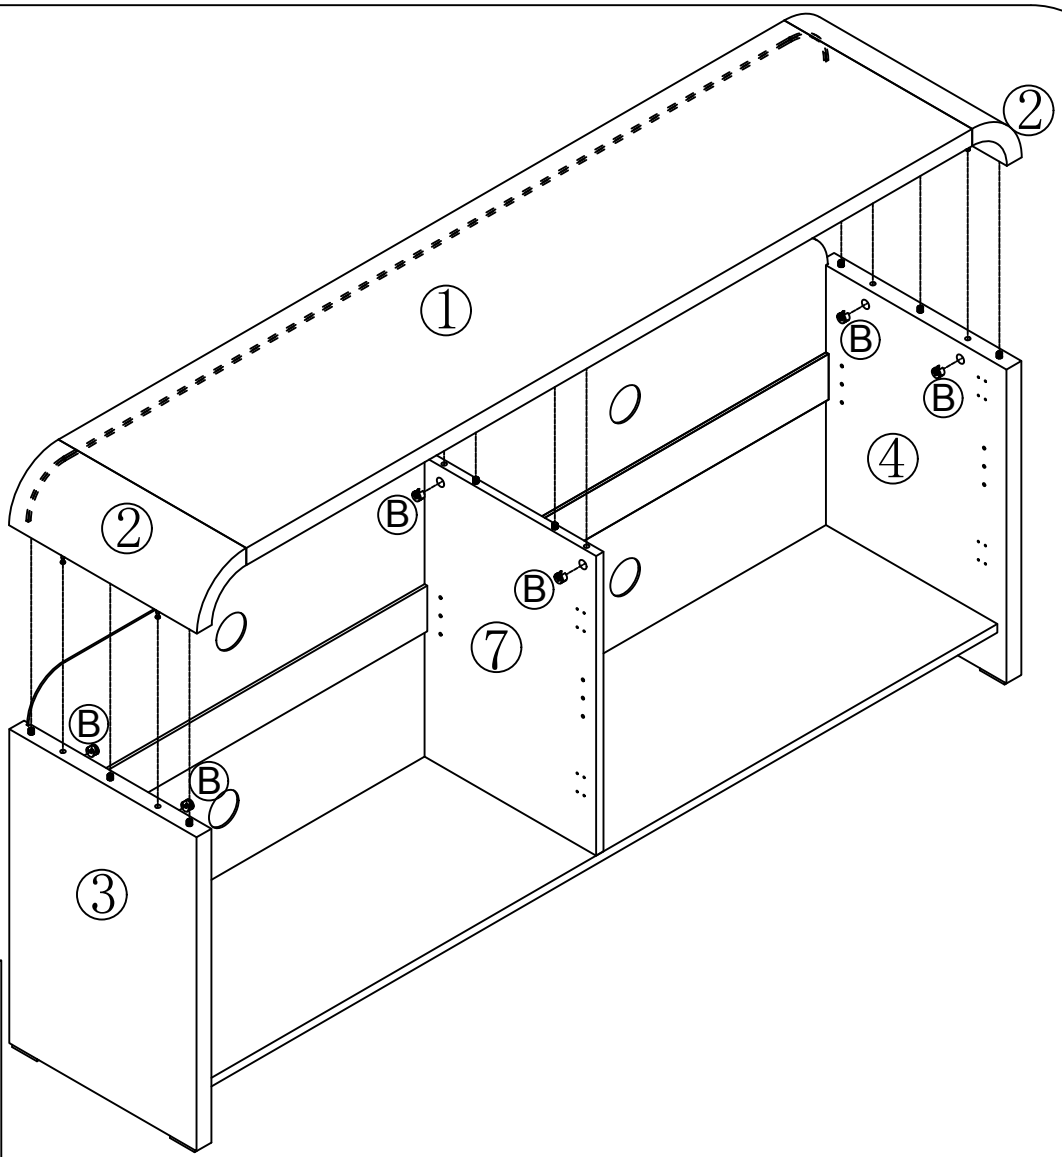



Ⓑ



15*10mm Cam Lock x6

## Step 16

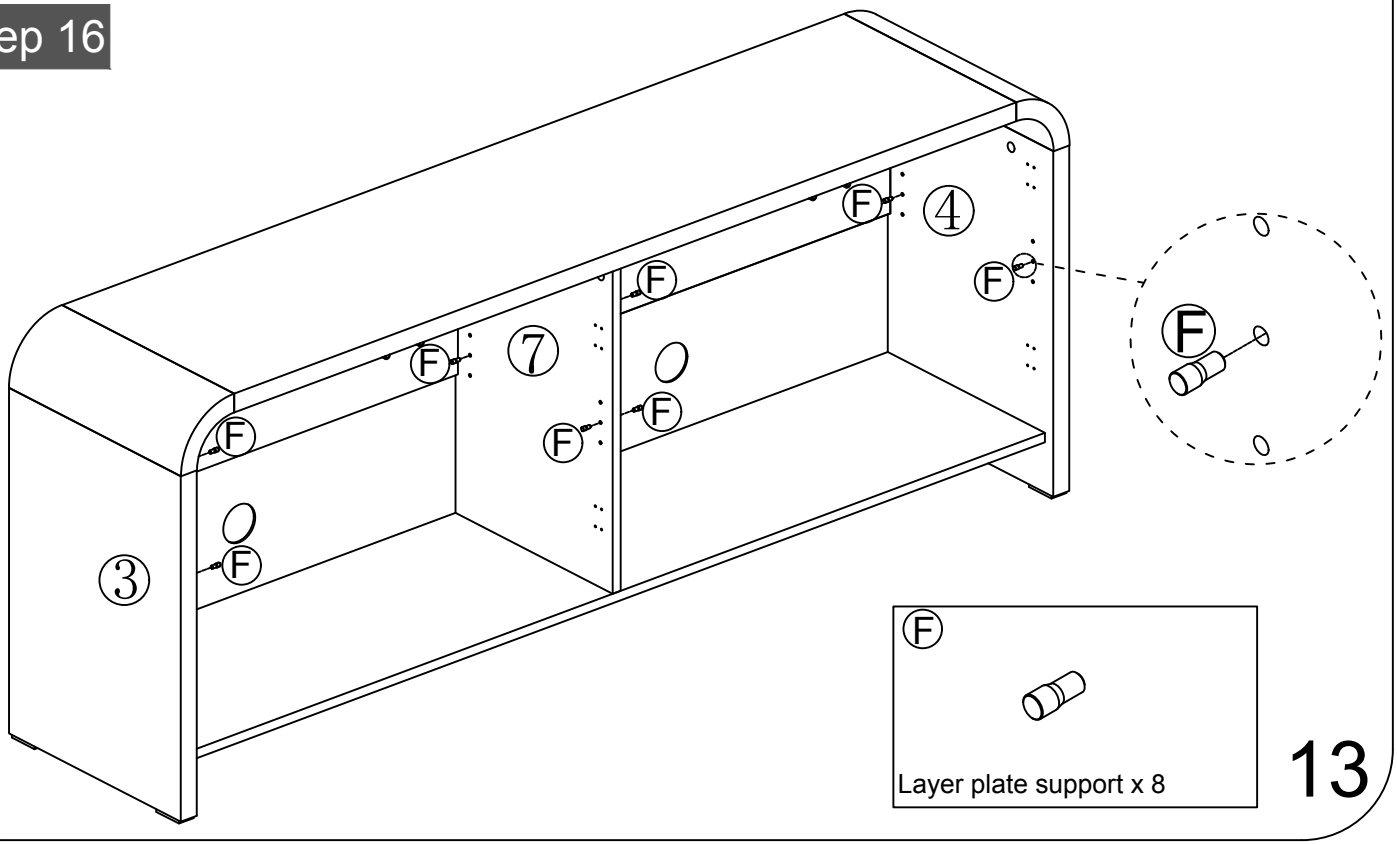



Ⓕ




Layer plate support x 8


# Assembly Instructions

## Step 17

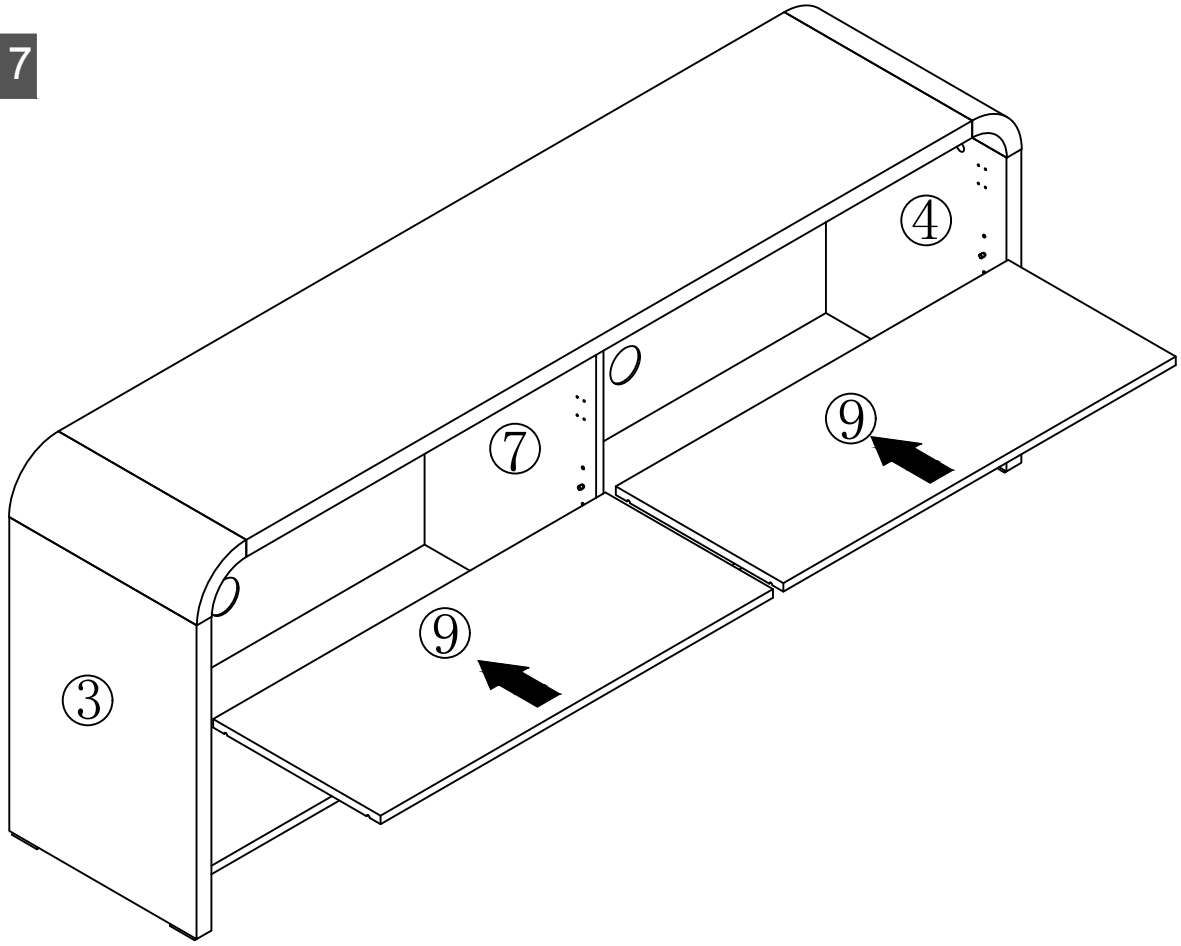


## Step 18

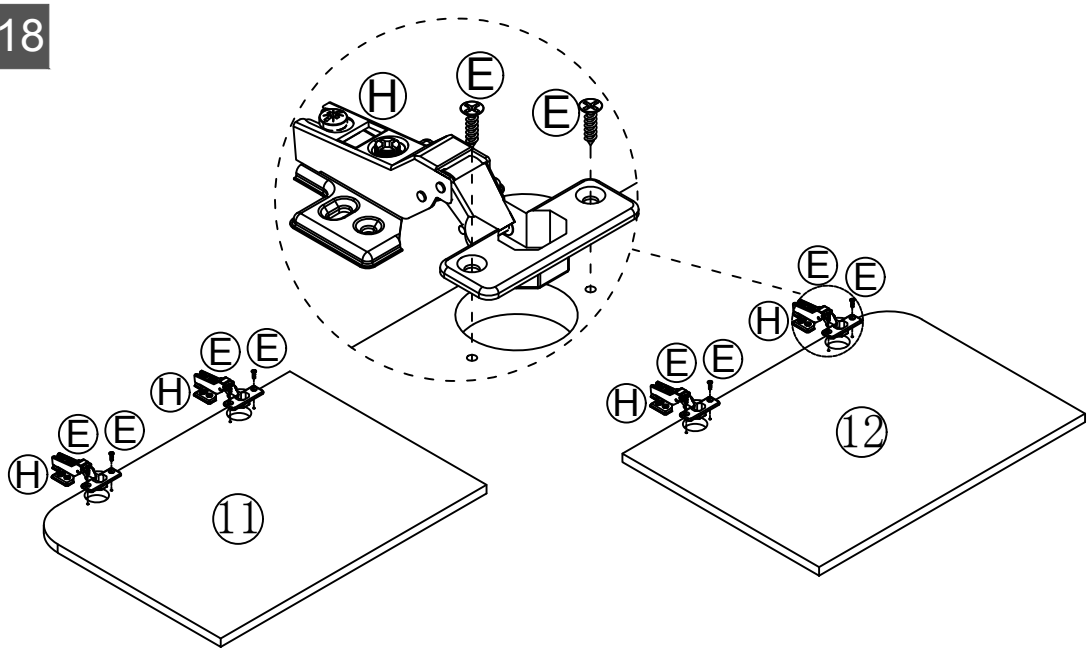


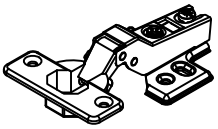
| Ⓔ | Ⓗ |
|---|---|
|  |  |
| 3.5*14mm Screw x 8 | Large bend hinge x 4 |

# Assembly Instructions

Step 19

The following steps are for installing the hinge H

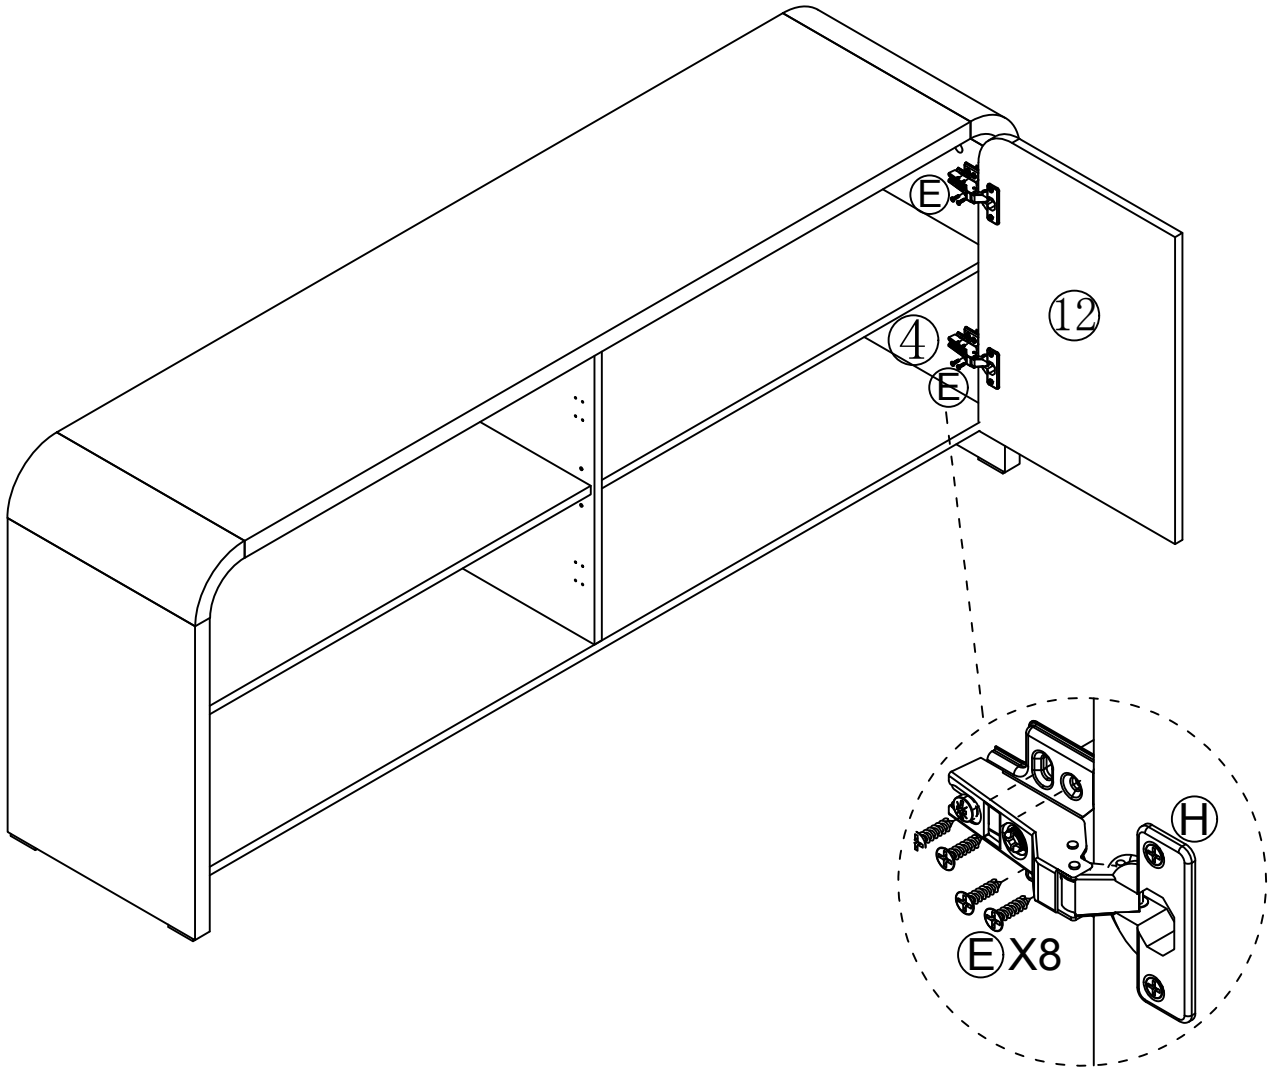


Ⓔ




3.5*14mm Screw x 8

# Assembly Instructions

Step 20

The following steps are for installing the hinge H

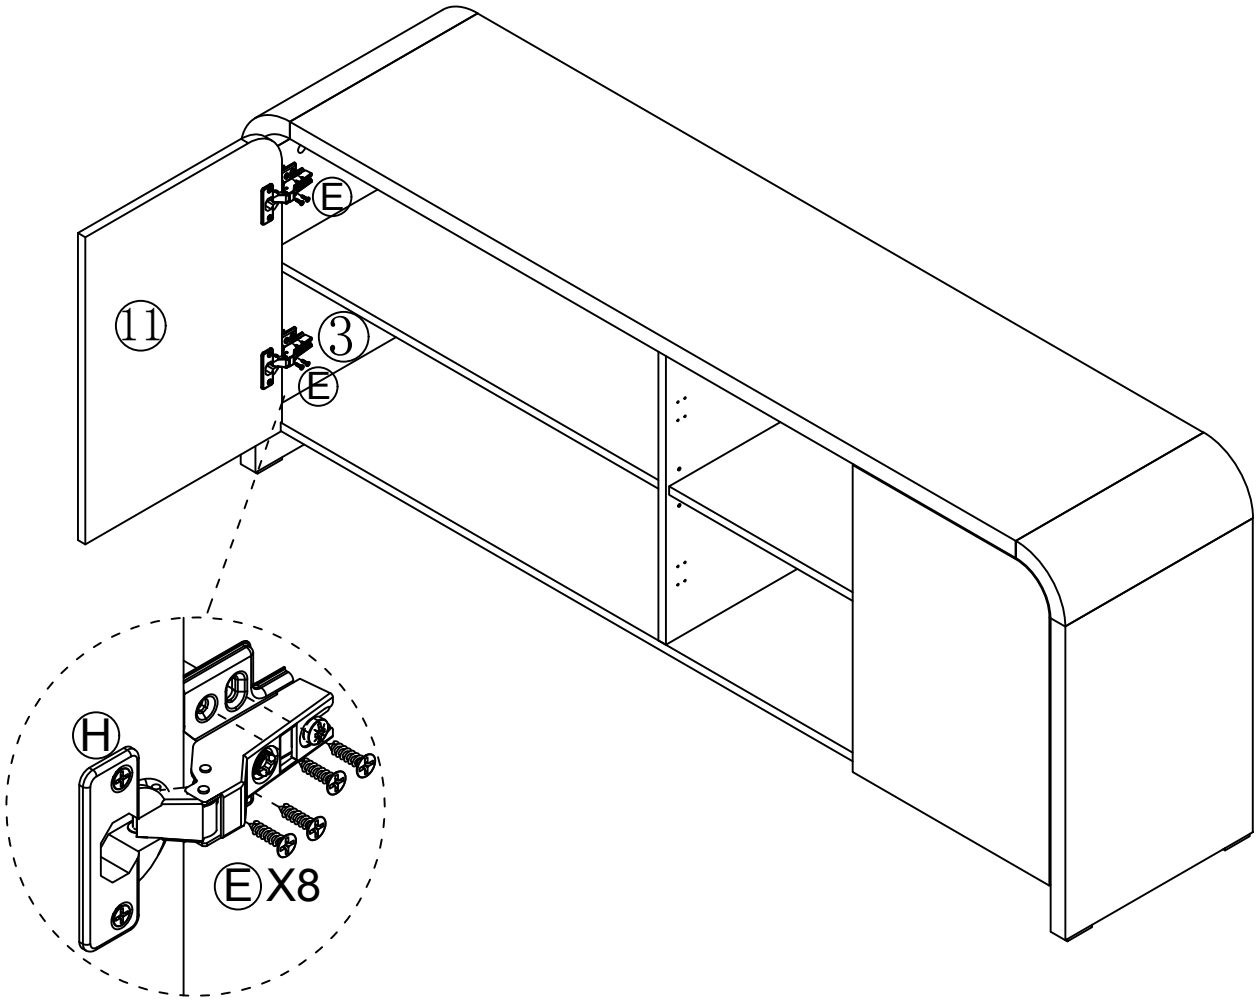



E





3.5*14mm Screw x 8

# Assembly Instructions


## Step 21

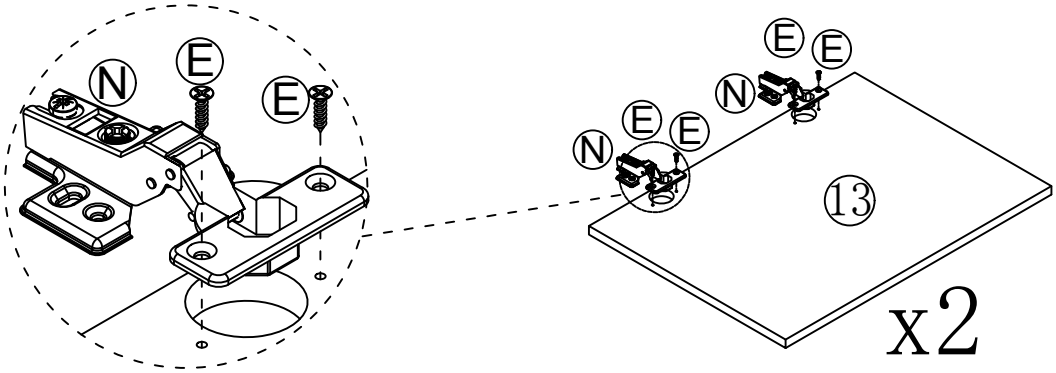


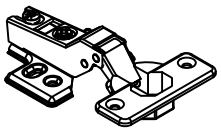
| E | N |
|---|---|
|  |  |
| 3.5*14mm Screw x 8 | Medium bending hinge x4 |

## Step 22

The following steps are for installing the hinge N

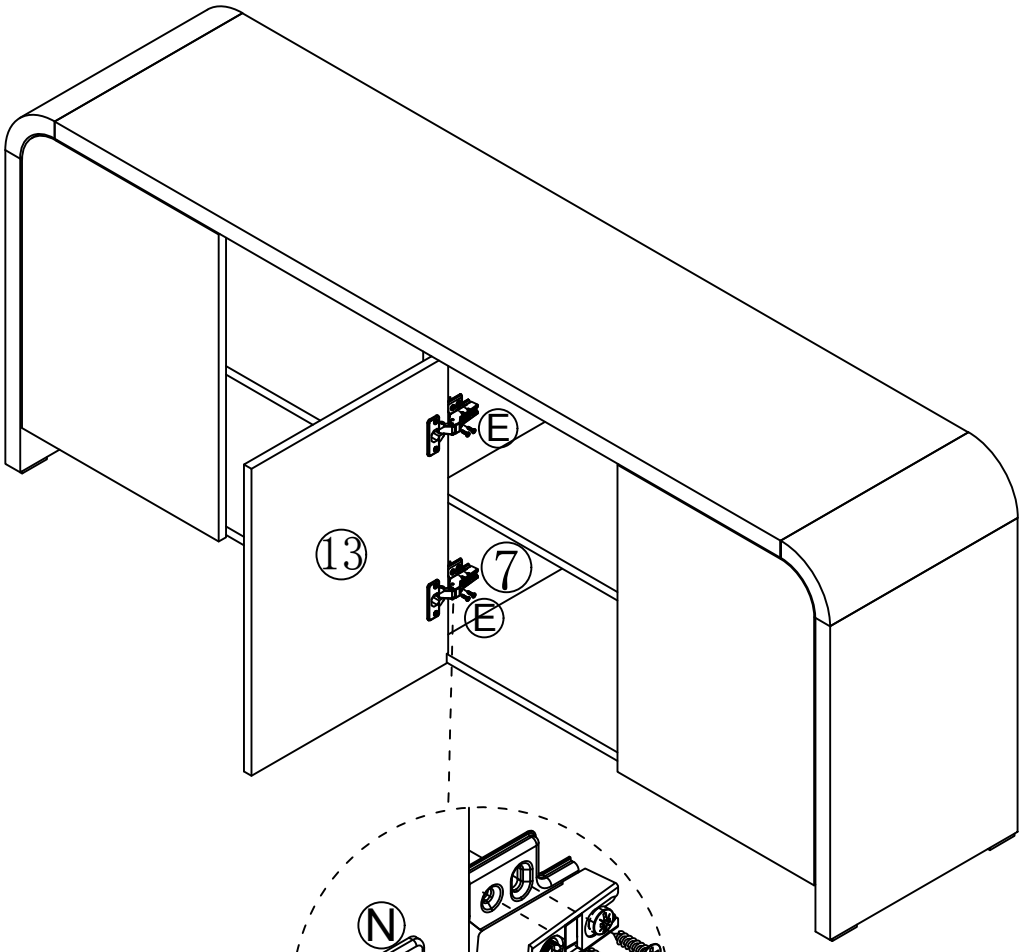

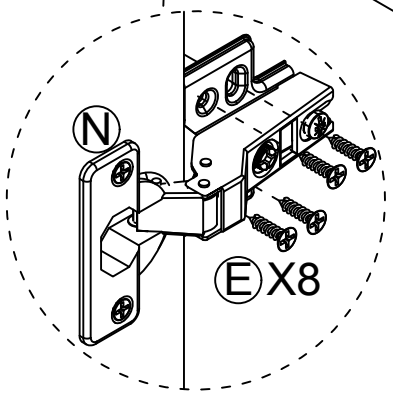




| E |
|---|
|  |
| 3.5*14mm Screw x 8 |

# Assembly Instructions

Step 23

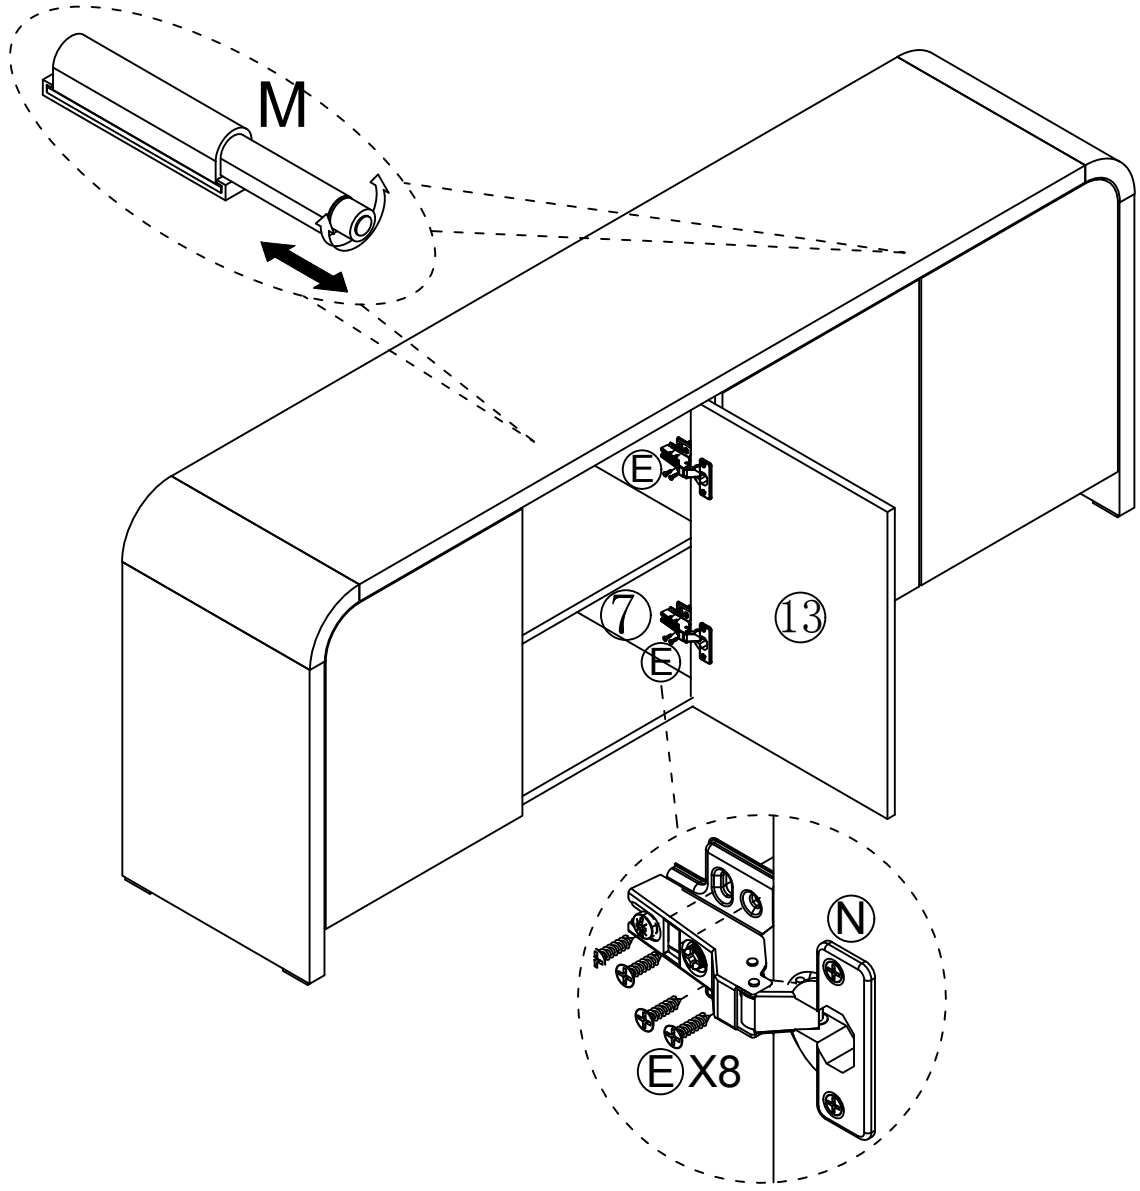The following steps are for installing the hinge N




Note that when the door cannot be opened by pressing it, you can adjust the hardware M as shown in the picture to turn the head of the pusher outward


E




3.5*14mm Screw x 8


# Assembly Instructions

When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

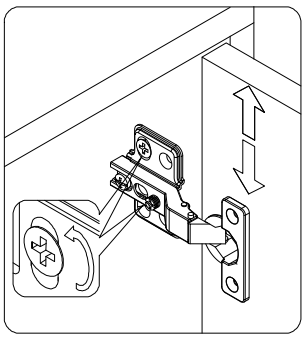



1. Adjust the screws shown in Fiqure 1 to adjust the door up and down.

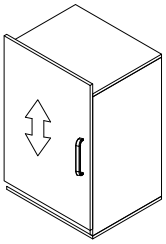

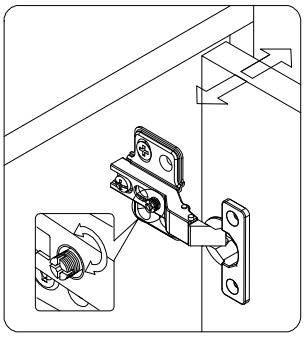



2. Adiust the screws shown in Fiqure 2 to adjust the door left and right to the right position.

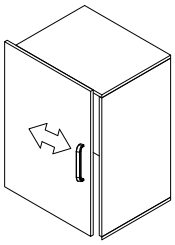

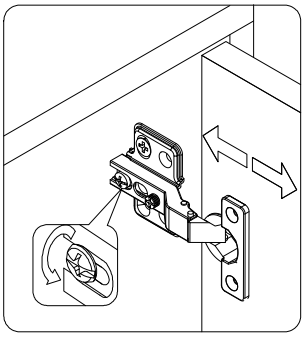

3. Adjust the screws shown in Fiqure 3 and pull the door back and forth so that it can be opened smoothly.

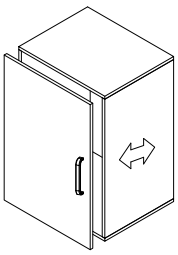


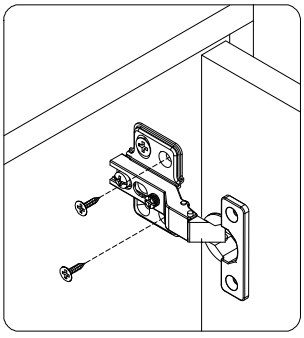

4. After the adjustment is complete, secure the remaining two screws to secure the door in place.


# Assembly Instructions

## Step 24

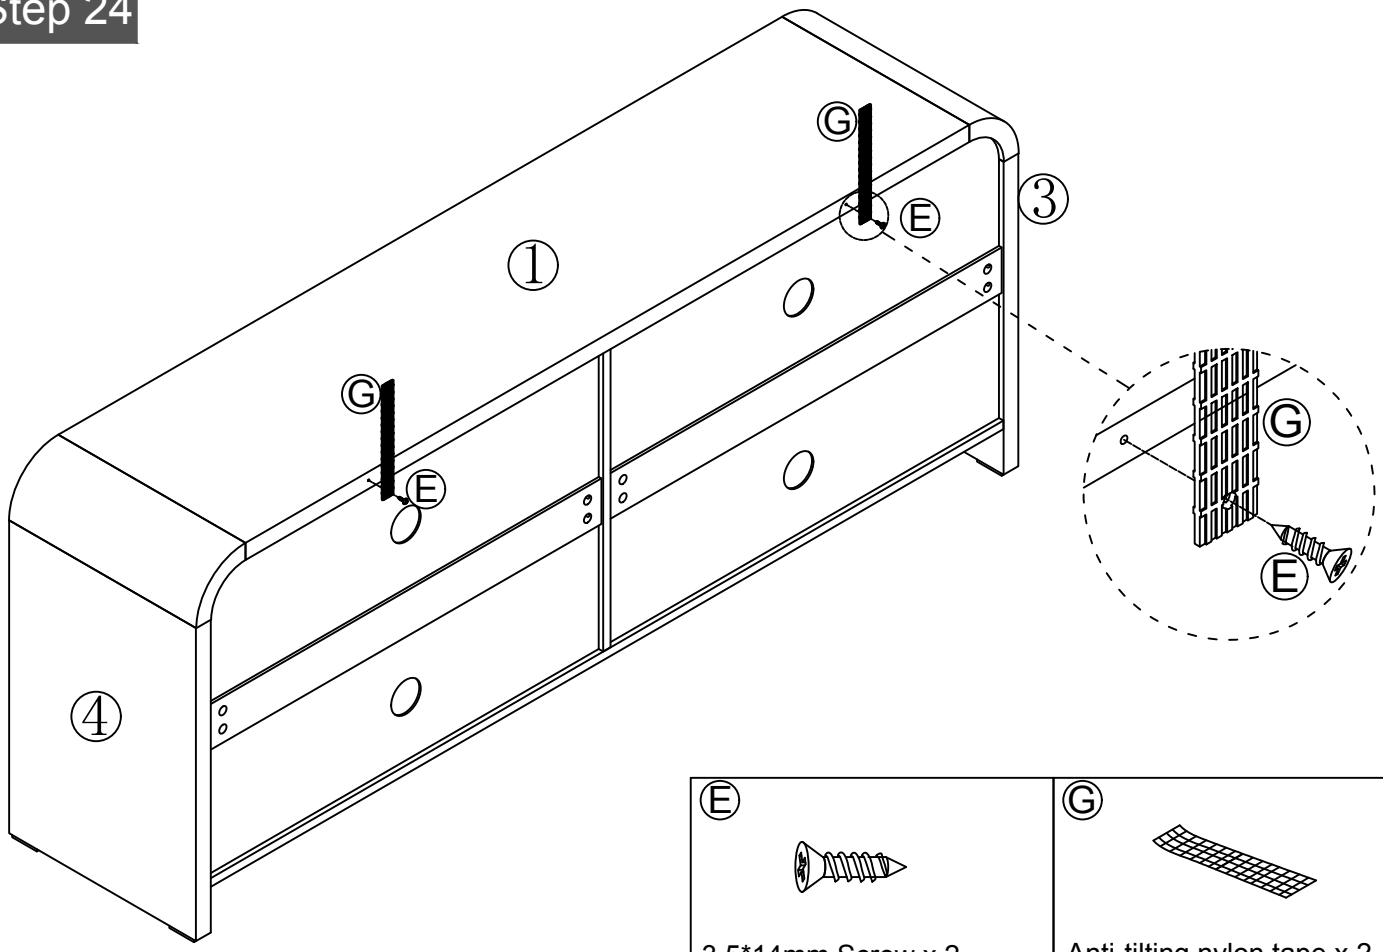


| E | G |
|---|---|
|  |  |
| 3.5*14mm Screw x 2 | Anti-tilting nylon tape x 2 |


## Step 25

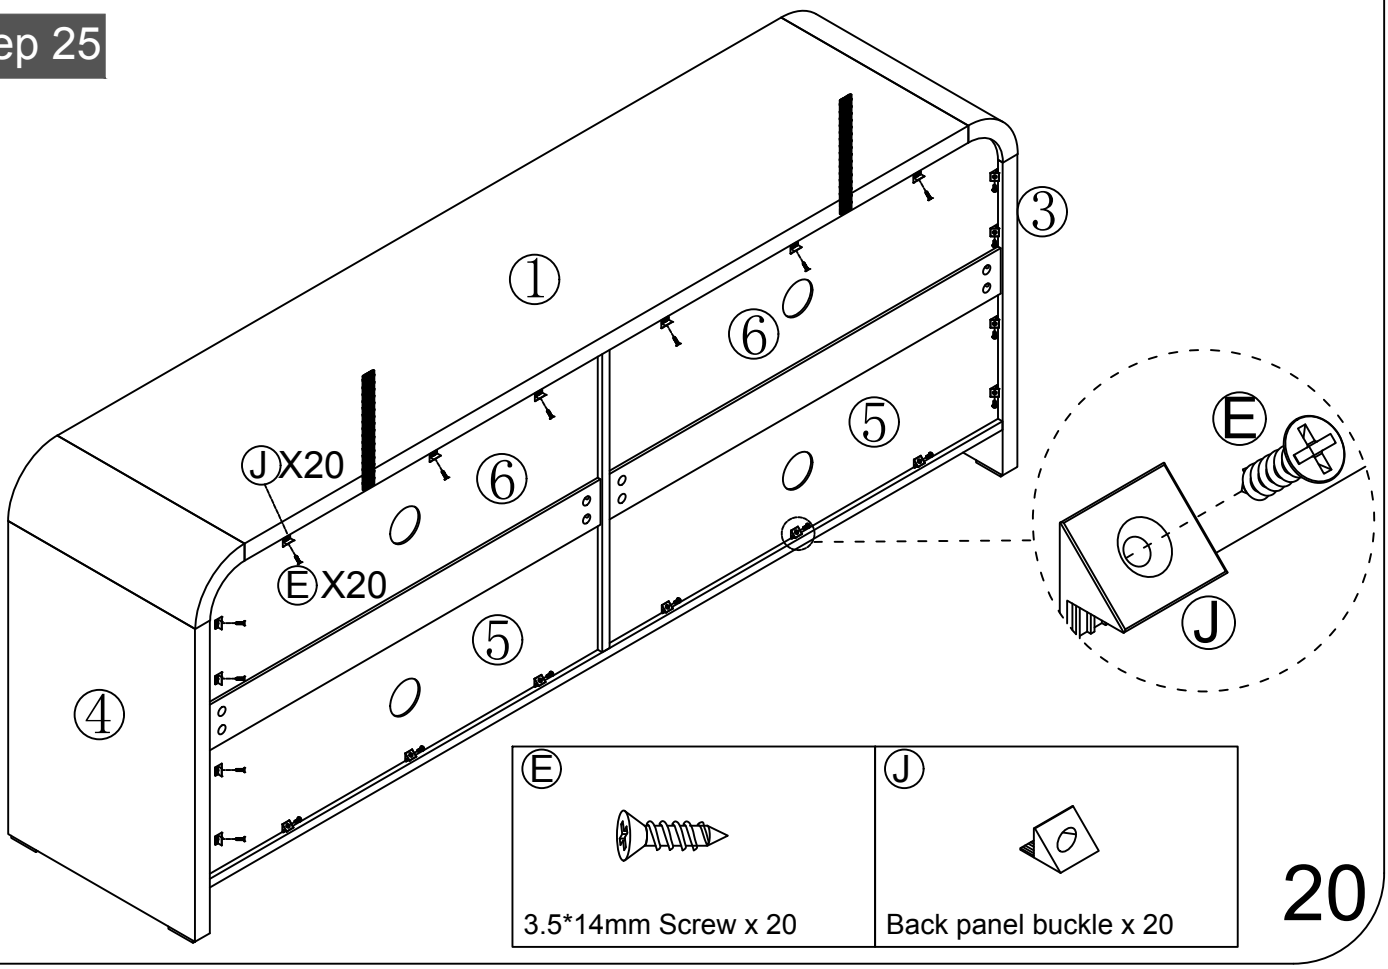


| E | J |
|---|---|
|  |  |
| 3.5*14mm Screw x 20 | Back panel buckle x 20 |

# Assembly Instructions

## Step 26

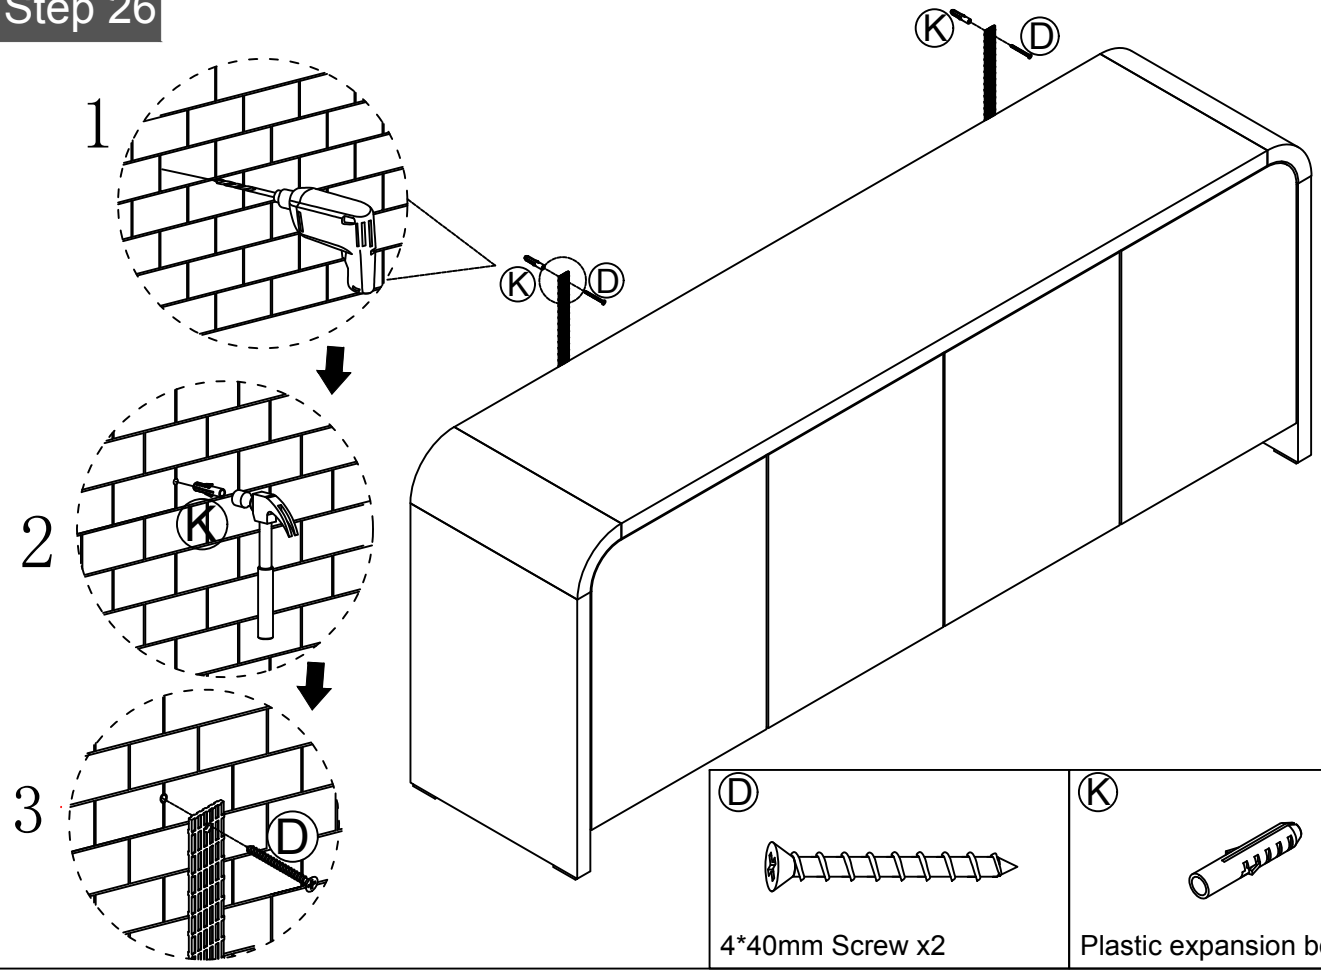


| D | K |
|---|---|
|  |  |
| 4*40mm Screw x2 | Plastic expansion bolt x 2 |

## FINISH

