
Installation Instruction

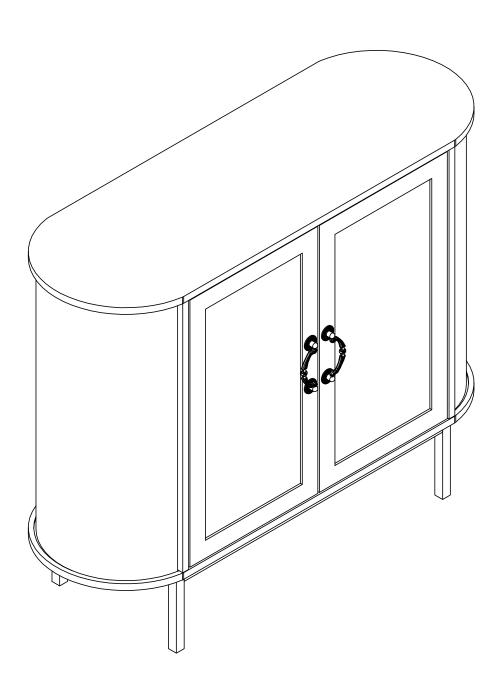

Assembling

Estimated time for assembly



45:00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 | 35 lbs table top | lbs per



What' included

Code Description	Qty
A Cam Bolt M6X35MM	4
B Cam Lock 15X12MM	4
C Wooden Dowel M8X30MM	4
D Screw M4X40MM	6
E Screw M3.5X14MM	2
F Metal shake handshandle	2
G Nylon Strap	2
H Screw M3.0X14MM	16
I Cam Bolt M4X20MM	4
J The back button	8
K Anchor	2
L The bolt	4
M Ron absorption	2
N Metal handle	2
O Screw M6X40MM	4
P Screw M6X30MM	8
Q Shelf Holder	4
R Wrench M4X55MM	1

The Hardwares

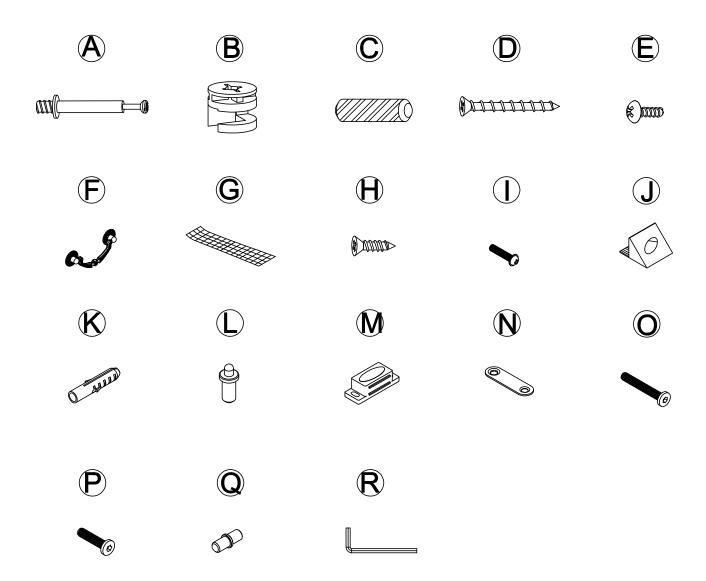


IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product. Do not use power tools.


Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Coaming panel	2
6	Movable laminated plate	1
7	Metal Door	2
8	Backboard	2
9	Cross bar	2
10	Side frame	2


The Accessoriess

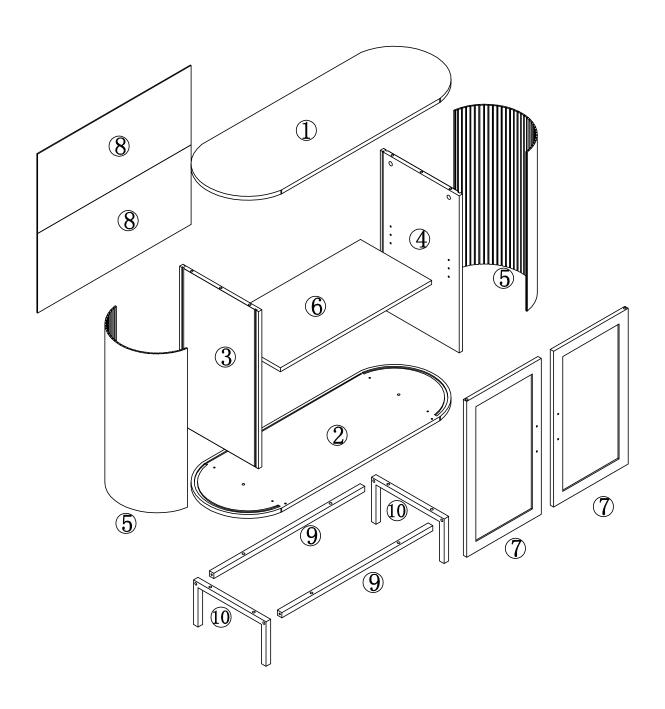

Step 1 A x 4 C x 2 H x 4 M x 2

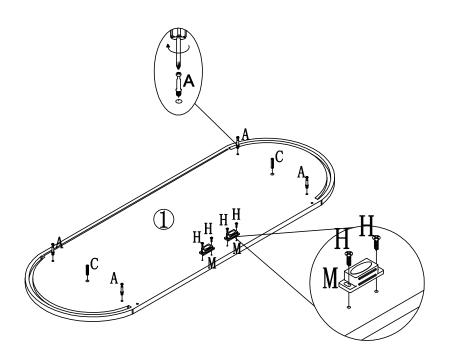


Step 2

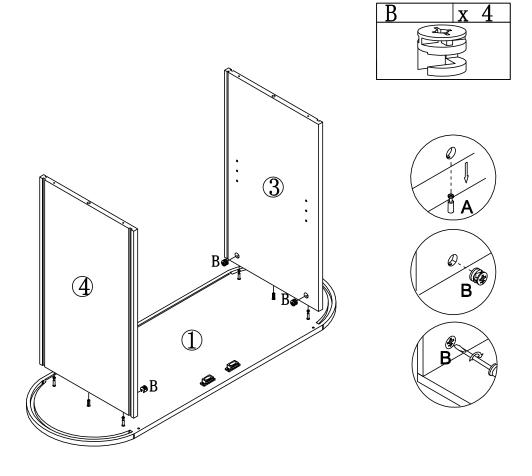



Step 3

The hemp surface faces out, the groove surface faces in \$\\ \text{8}\$

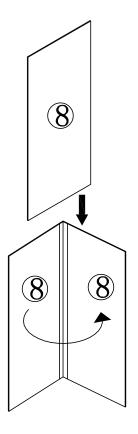



Step 4



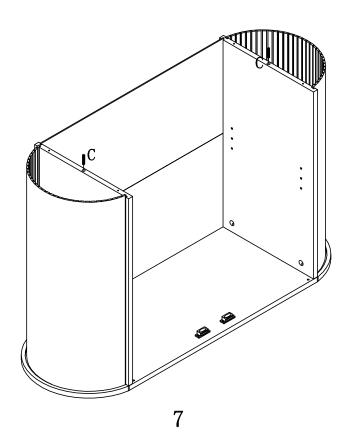







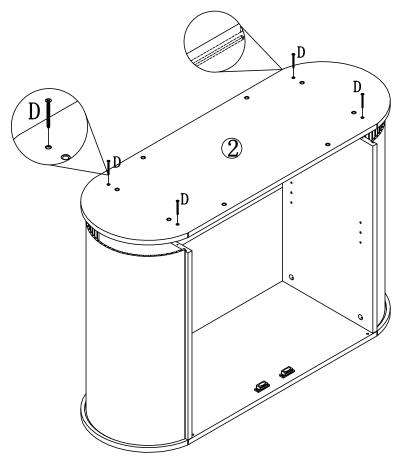



Step 6



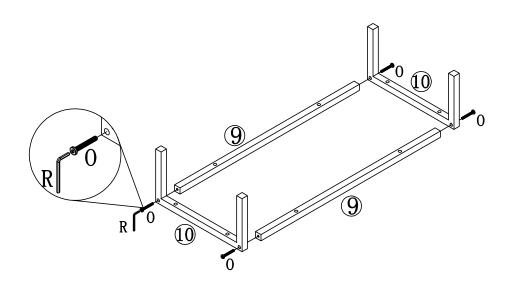



Step 7

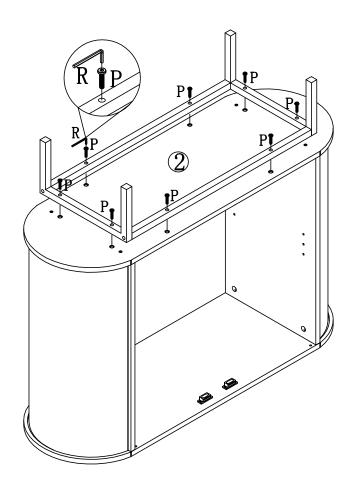


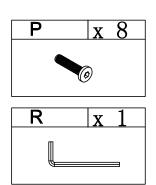


Step 8

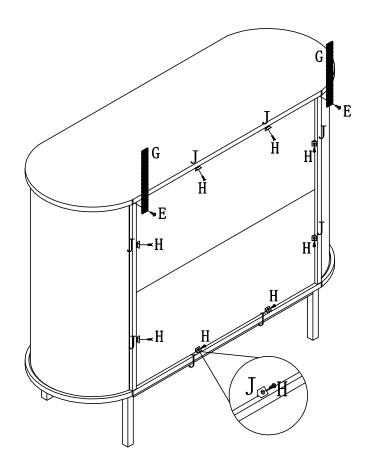

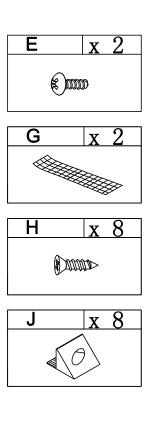

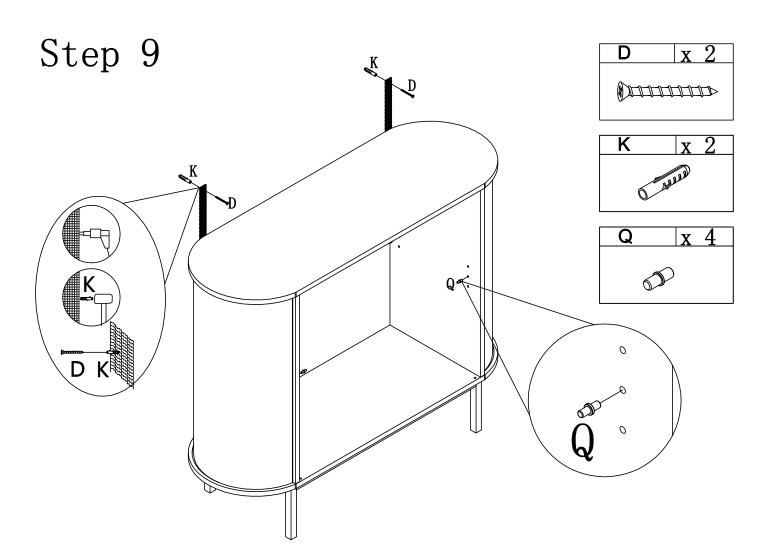

Step 10

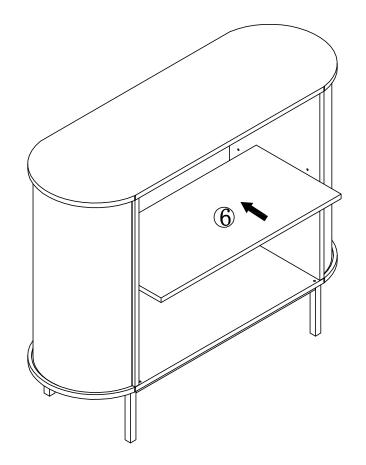

Step 11 x 4 x 4 x 2 7 7 Step 12 x 2 x 4 7 7