ASSEMBLY INSTRUCTION


1.Carefully take all parts out of carton.

2.Screw the Tube B/Tube C onto the base A.

3.Screw the swivel arm D onto the Tube C, then tighten it.

4.Push the shade E into the lamp cup and screw the nut G

5.Place the Bulb F into the Socket of shade.(bulb not included)

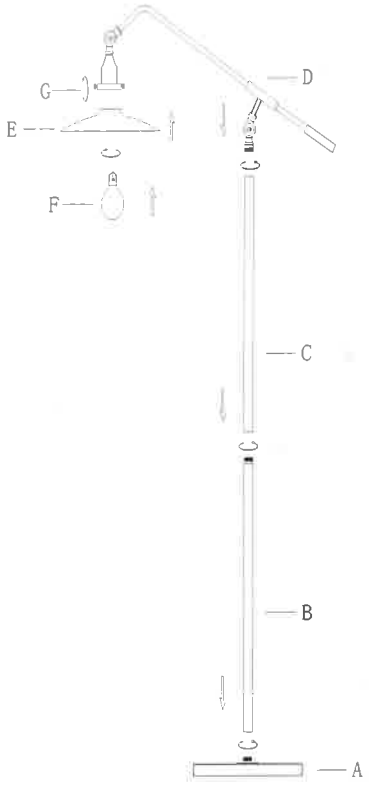

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK.THIS PLUG WILL FIT IN A POLARIZE OUTLET ONLY ONE WAY.IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET,REVERSE THE PLUG.IF IT STILL DOES NOT FIT,CONTACT A QUALIFIED ELECTRICIAN.NEVER USE WITH AN EXTENSION CORI UNLESS PLUG CAN BE FULLY INSERTED.DO NOT ALTER THE PLUG