



Assembly Instructions

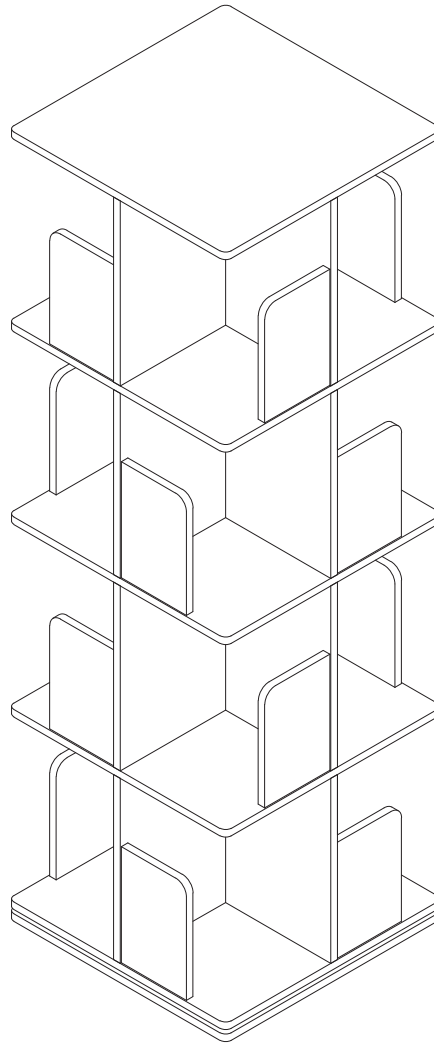

**DESIGN
TRANSFORMS
LIFE**

Product Attributes

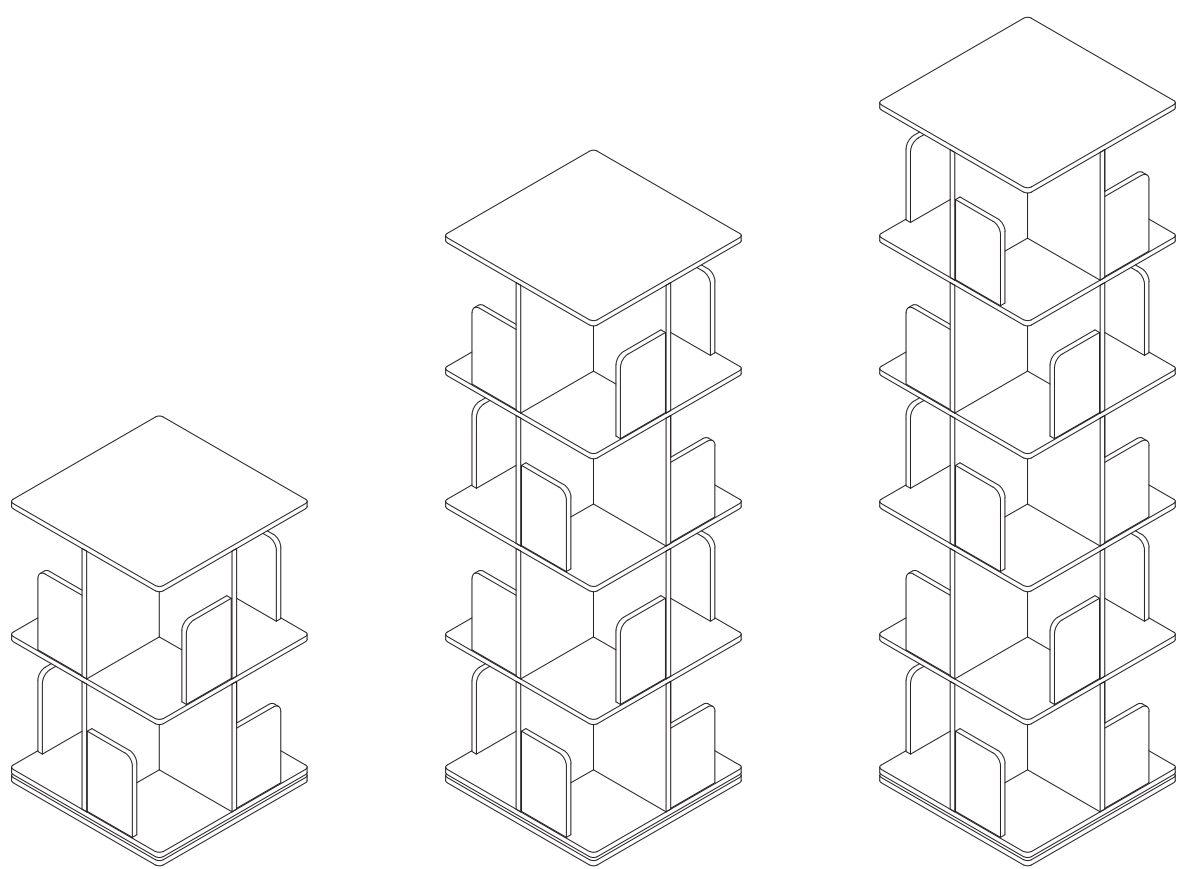

Material

Particle Board	Plywood	Rubberwood
	✓	

Specification


2 Tiers	4 Tiers	5 Tiers
	✓	

Color


☐ Walnut	☐ Black	☒ White	☐ Natural
---------------------------------	--------------------------------	---	----------------------------------


Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.














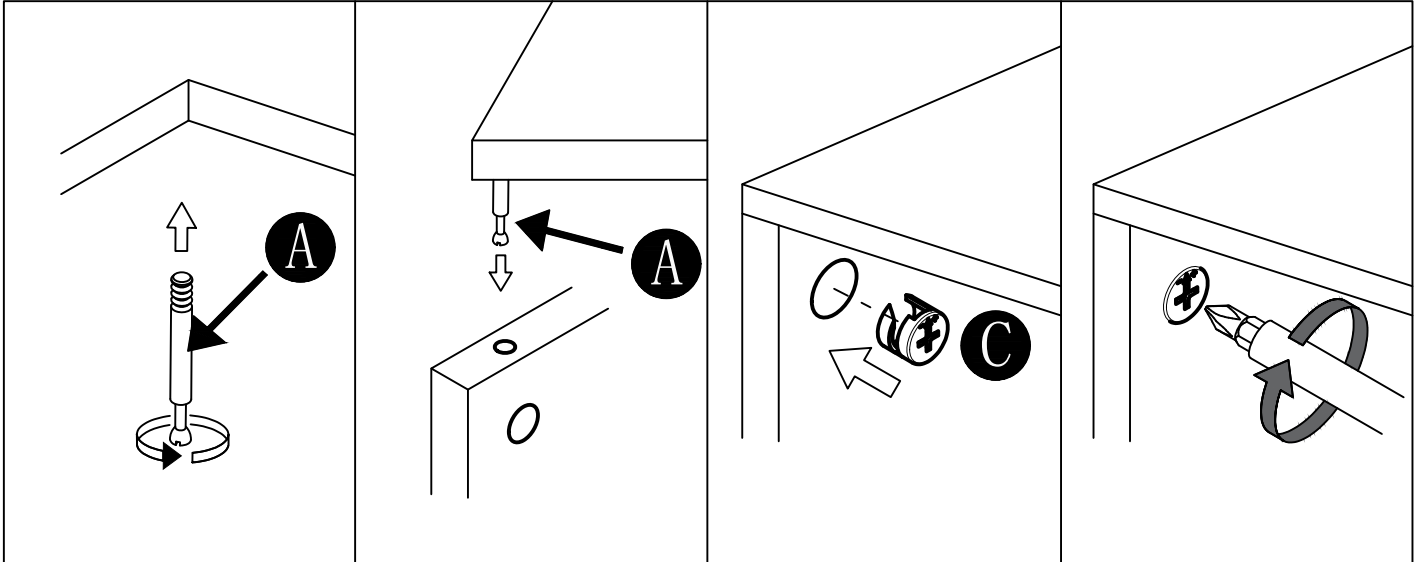


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.


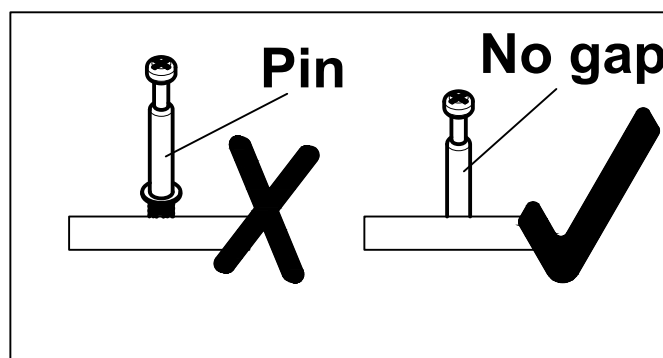


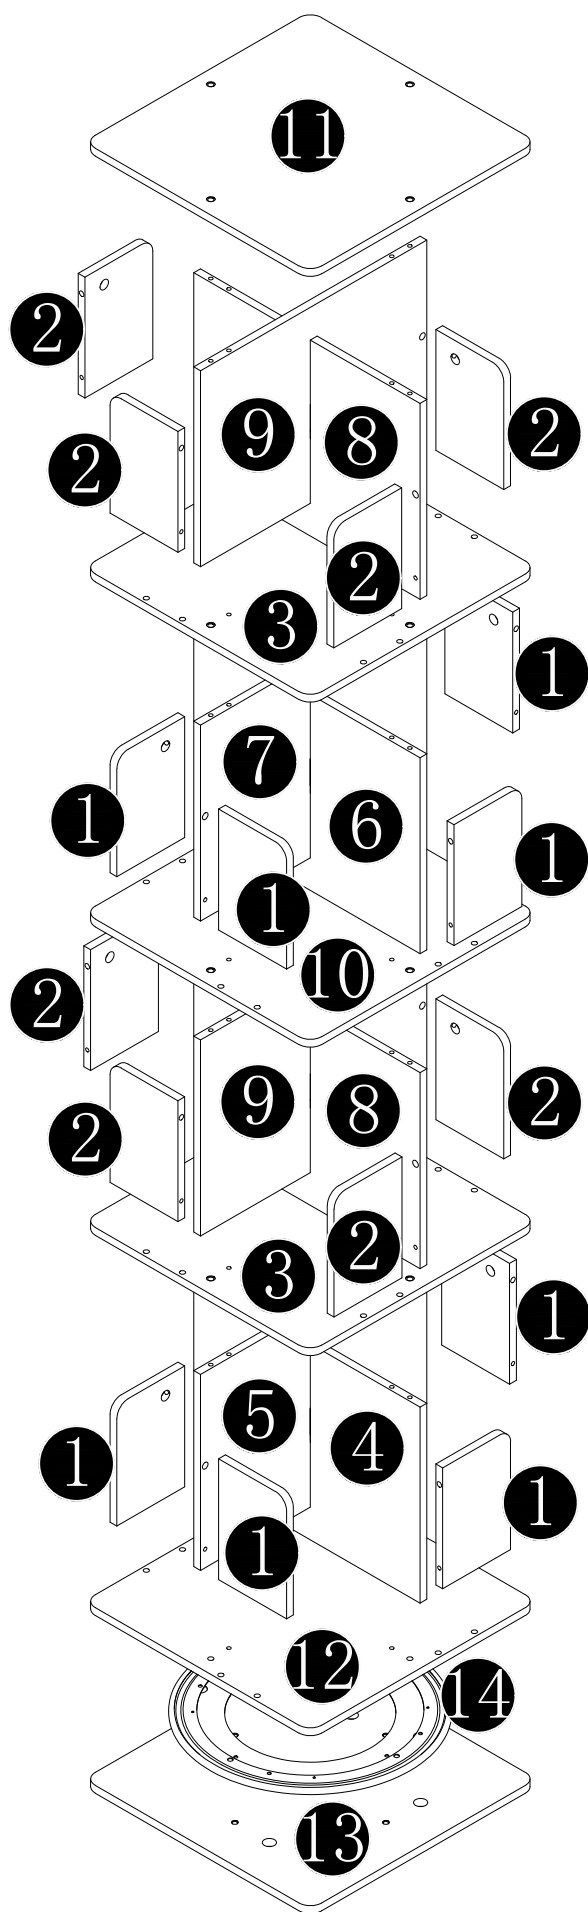








Parts & Hardware List

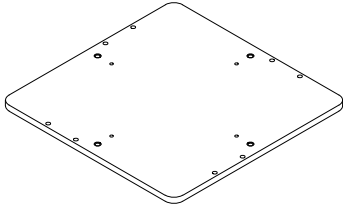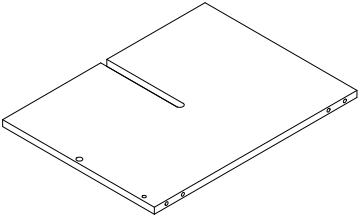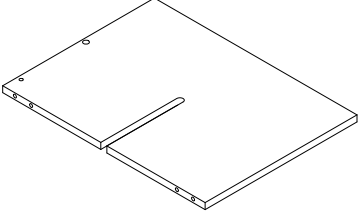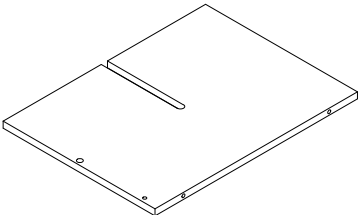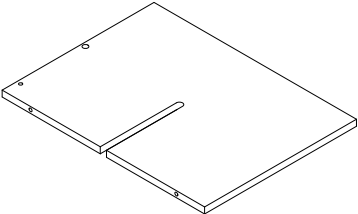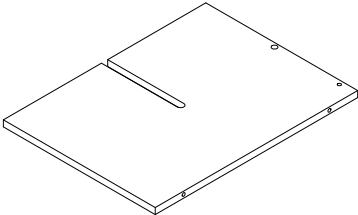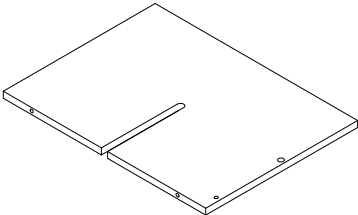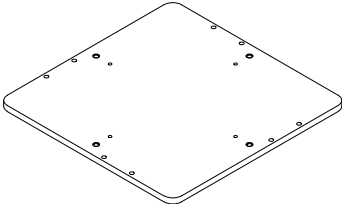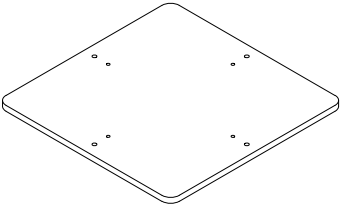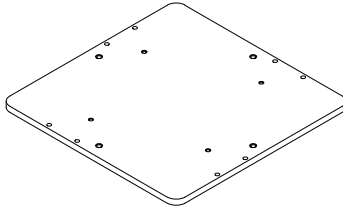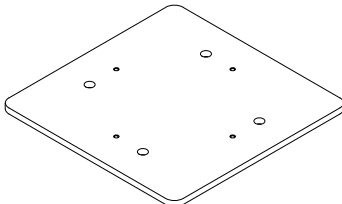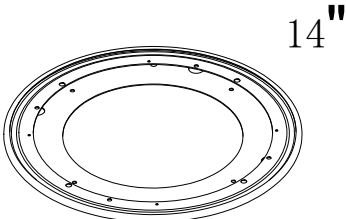 1 8pcs	 2 8pcs	 3 2pcs
 4 1pc	 5 1pc	 6 1pc
 7 1pc	 8 2pcs	 9 2pcs
 10 1pc	 11 1pc	 12 1pc
 13 1pc	 14 1pc	


Parts & Hardware List

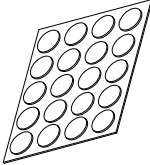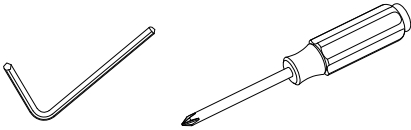 A 16pcs	 M7X50MM B 52pcs	 C 16pcs	 M6X30MM D 24pcs	 M6X50MM L 12pcs
 M4X8MM T 8pcs	 Y 8pcs	 1pc		

1

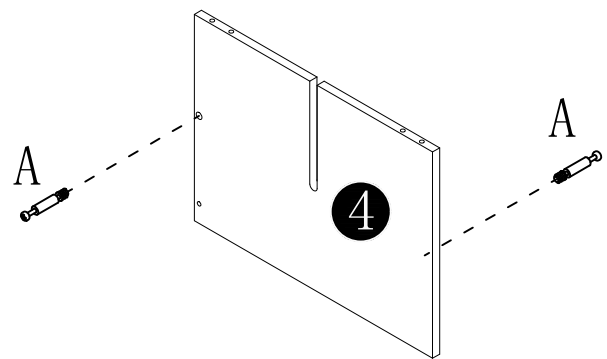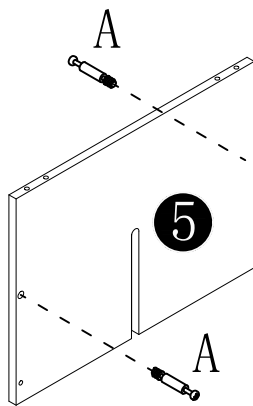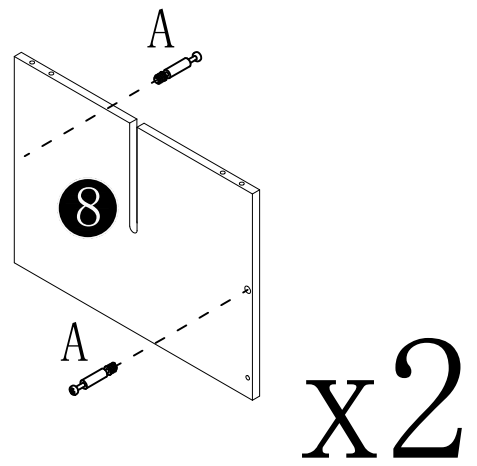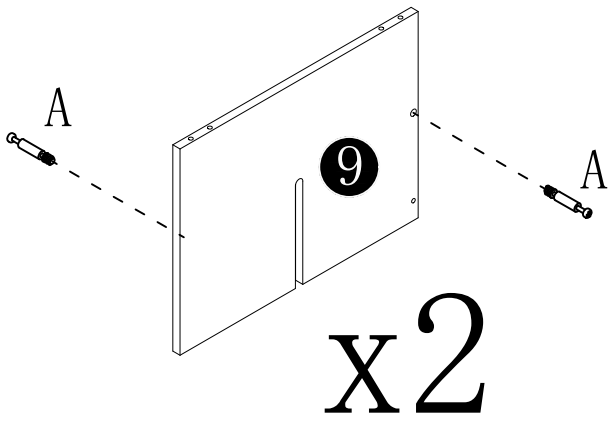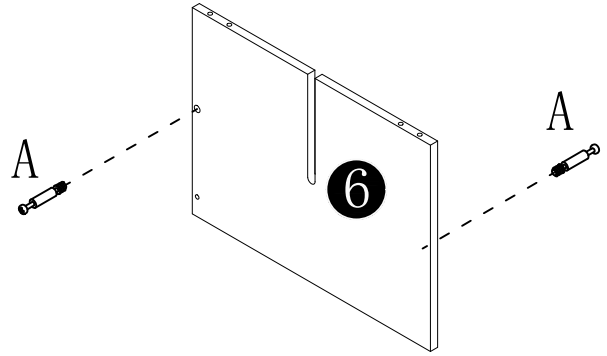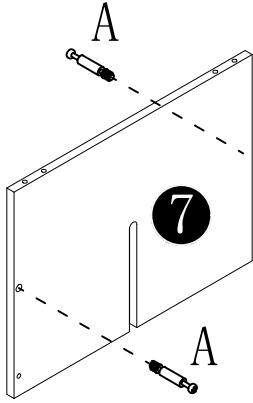
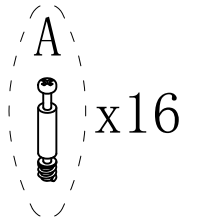


2



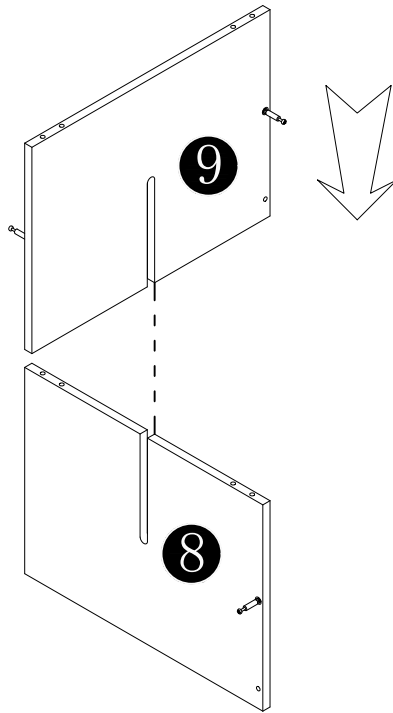


x2

3

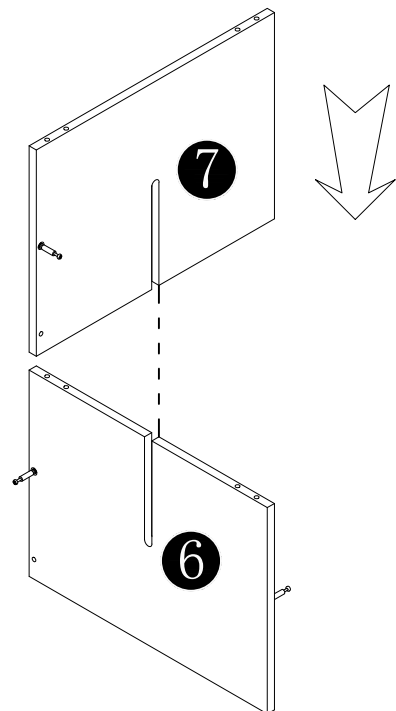
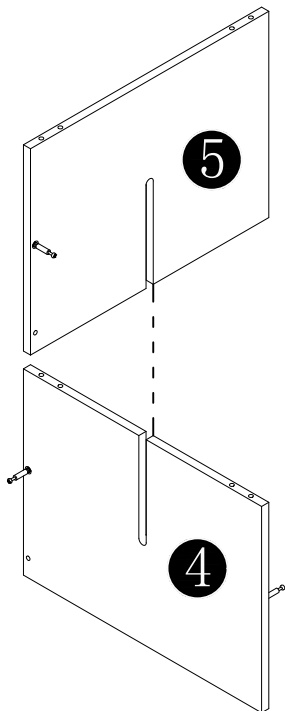


4

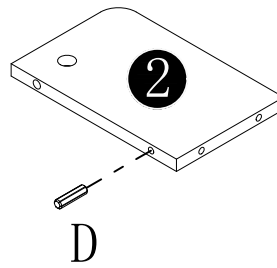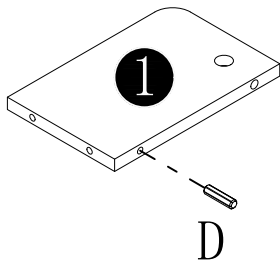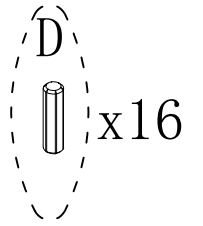


x8

5

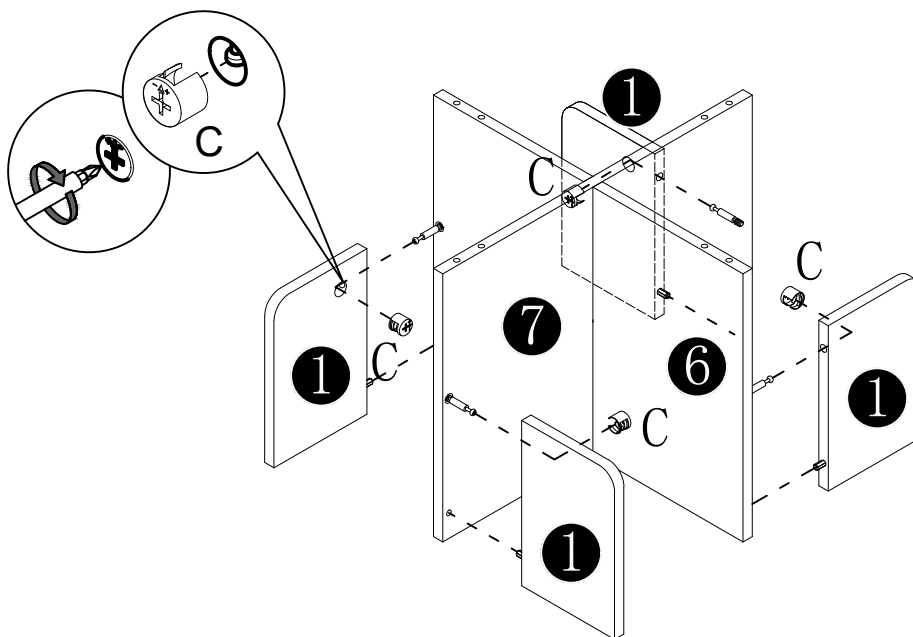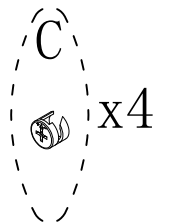

6


C
x8

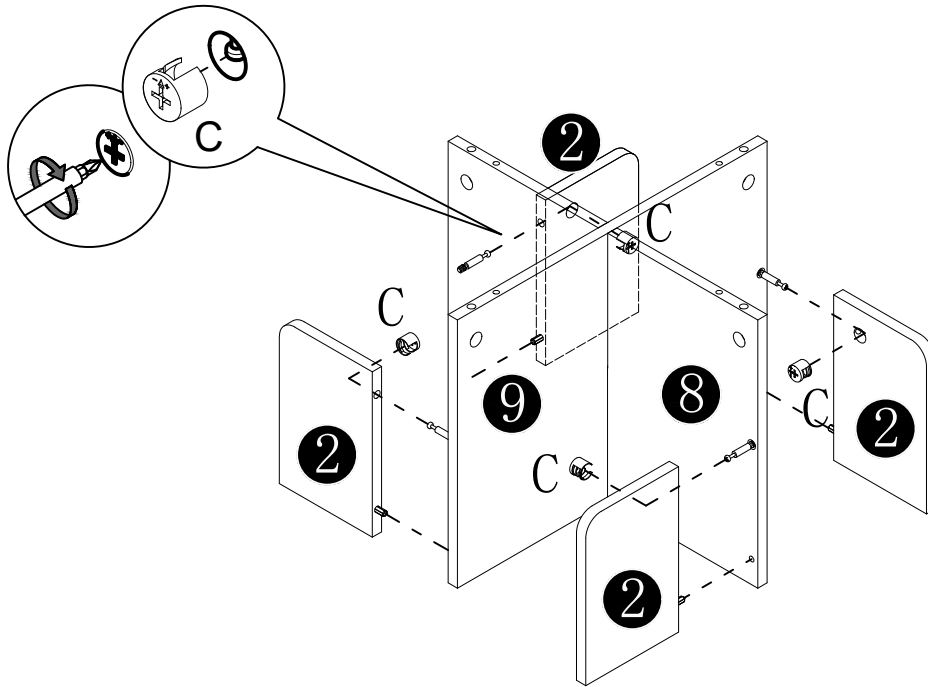



x2

7




C
x4

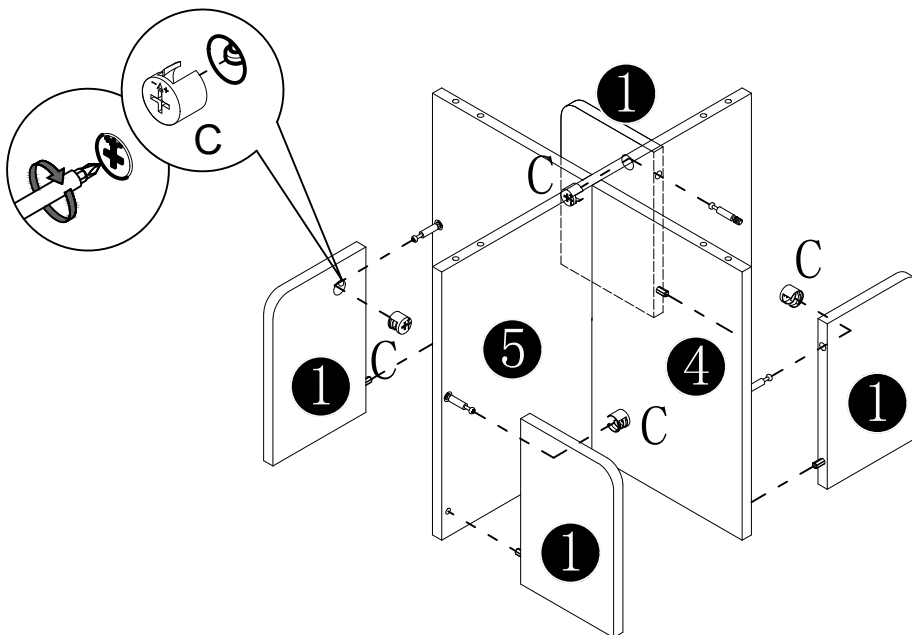




8

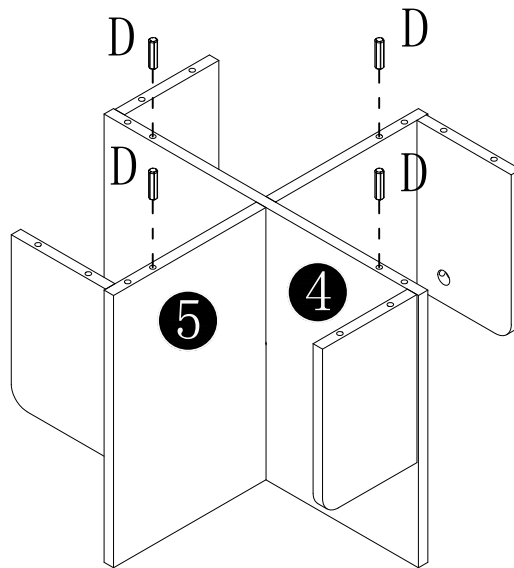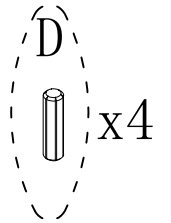

9




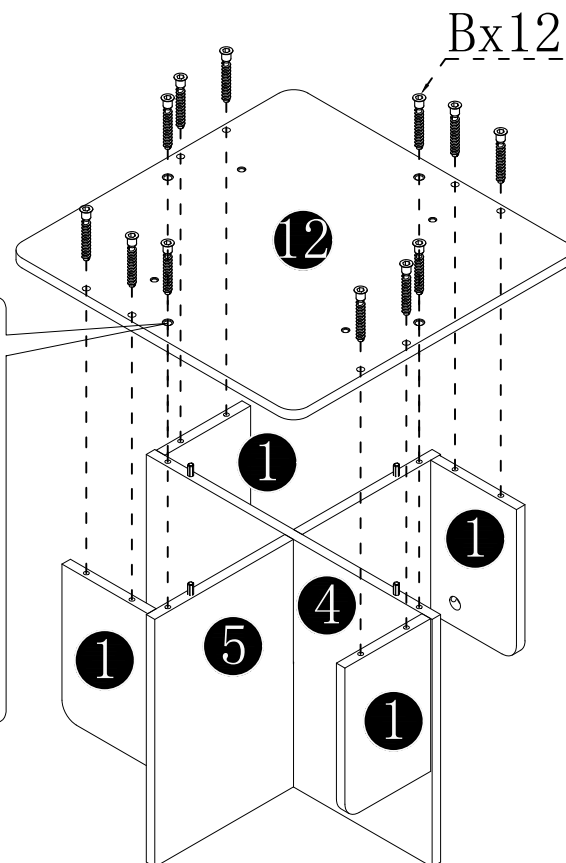
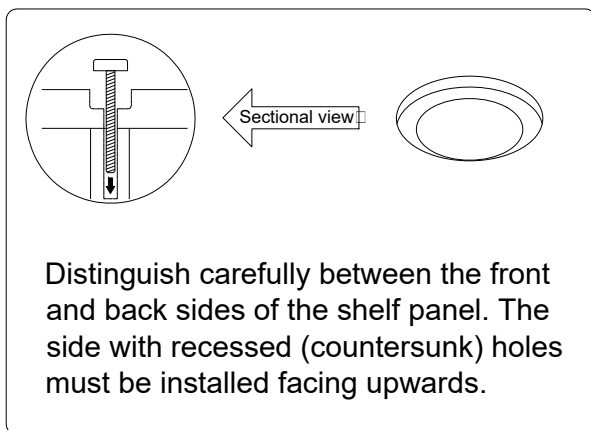
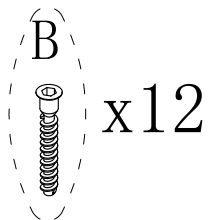


10

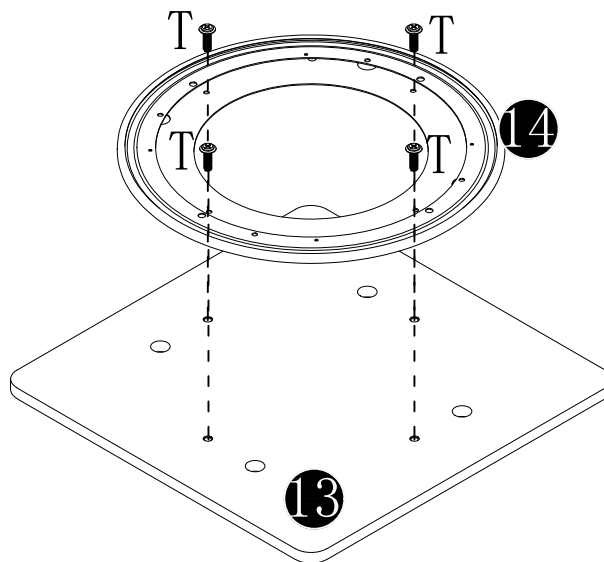
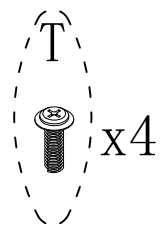
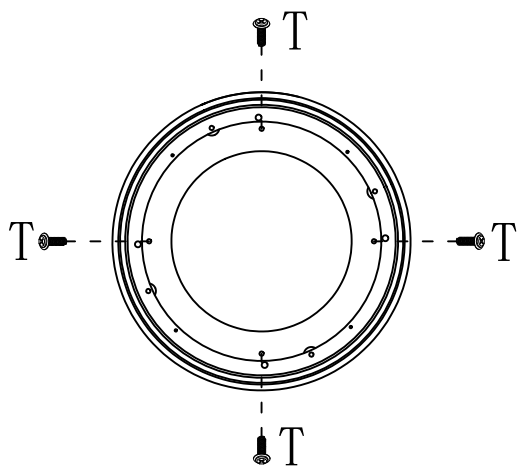


11




Rotate the turntable to align with the hole position,
and then install the T-screw

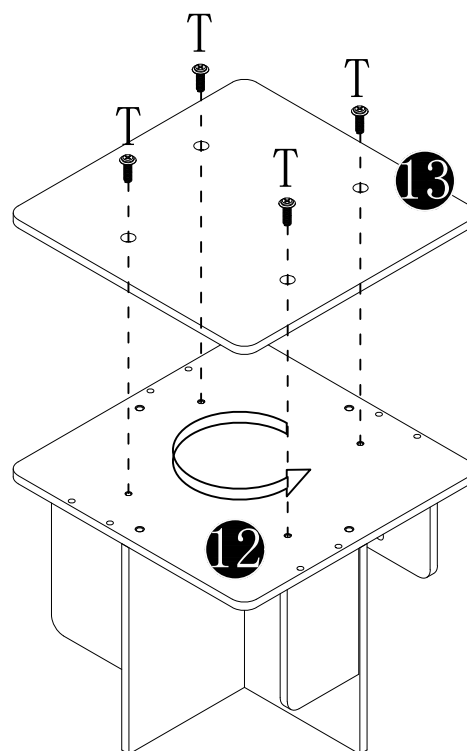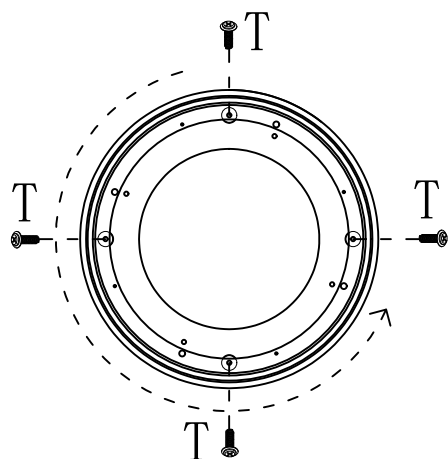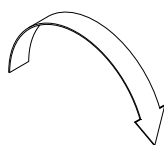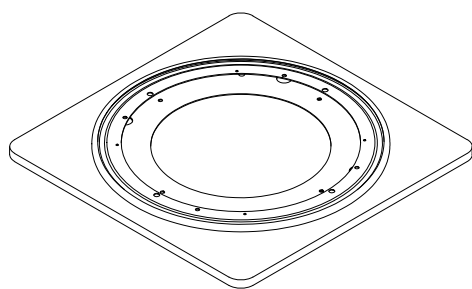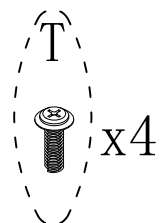



12

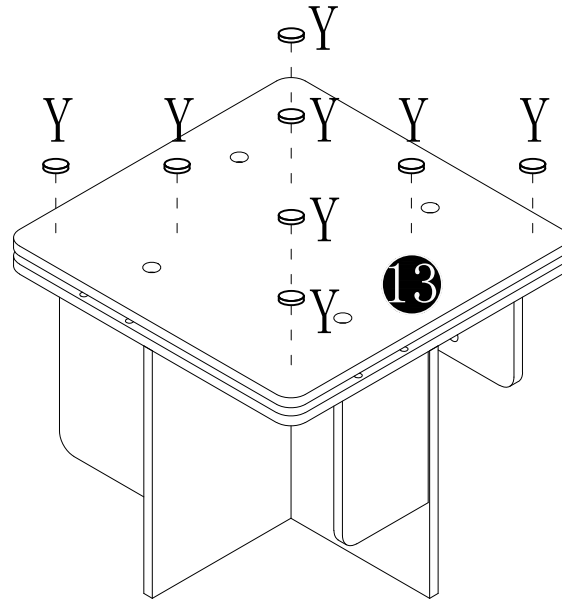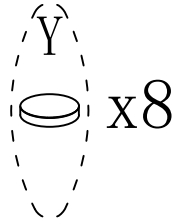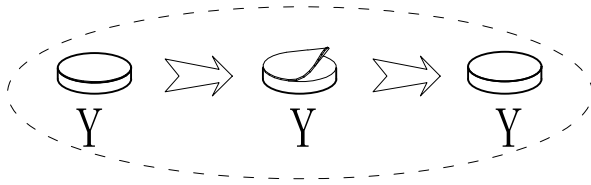





13

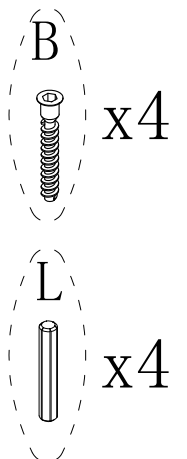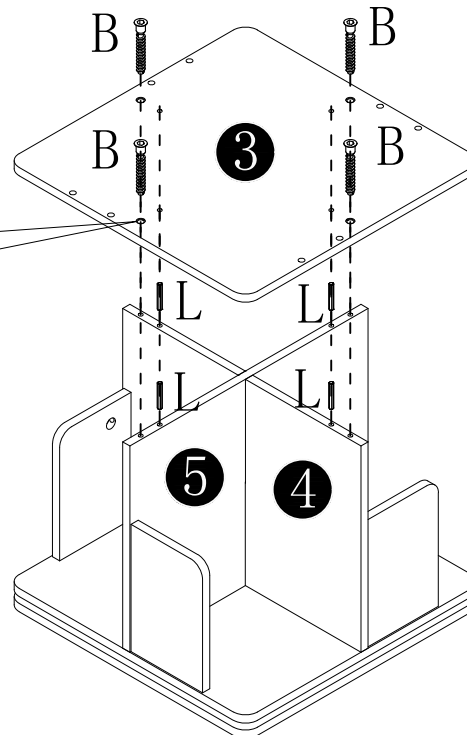
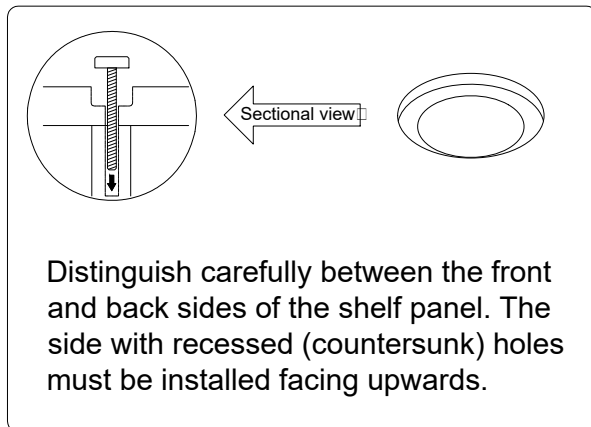





14

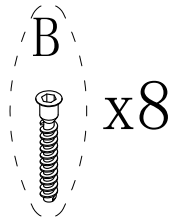
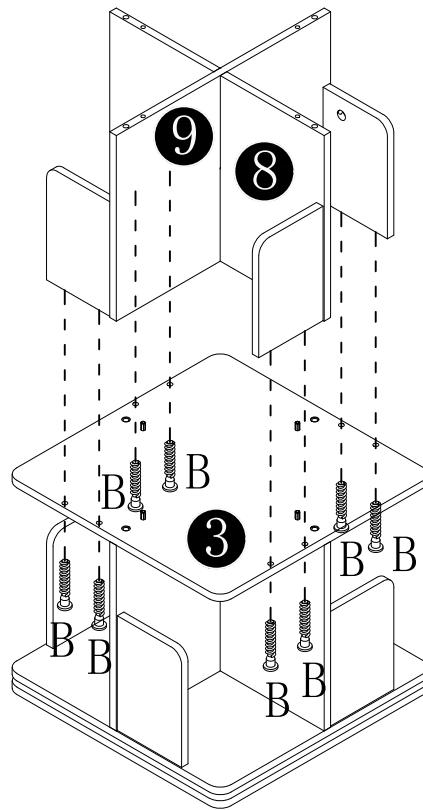





15

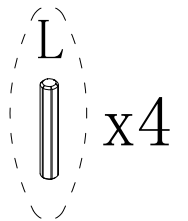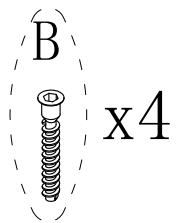
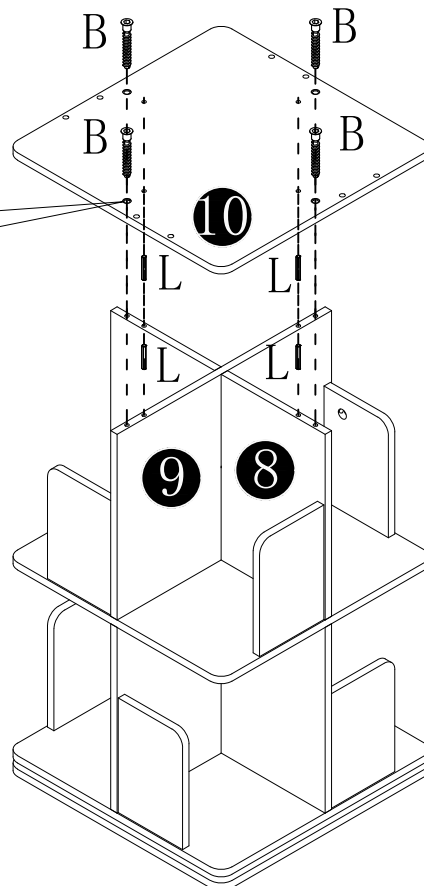
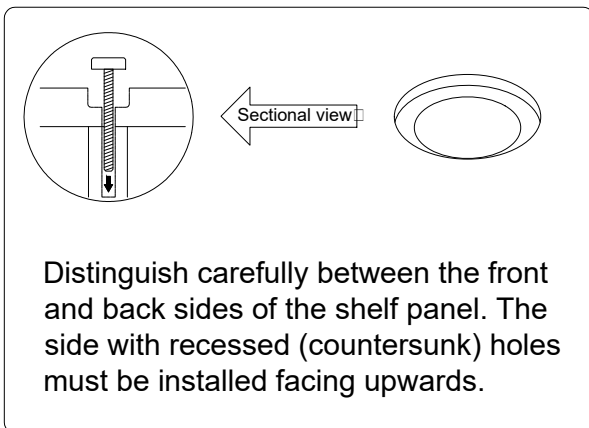


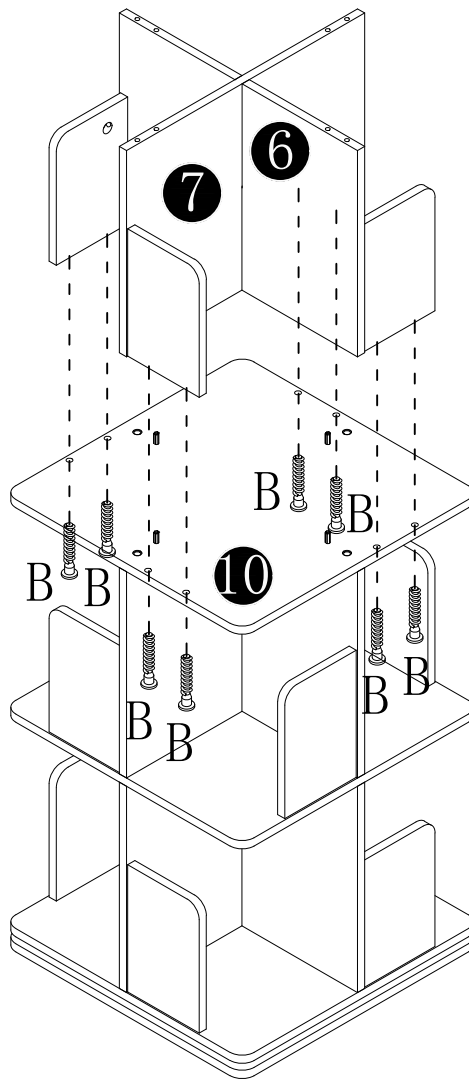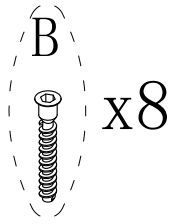

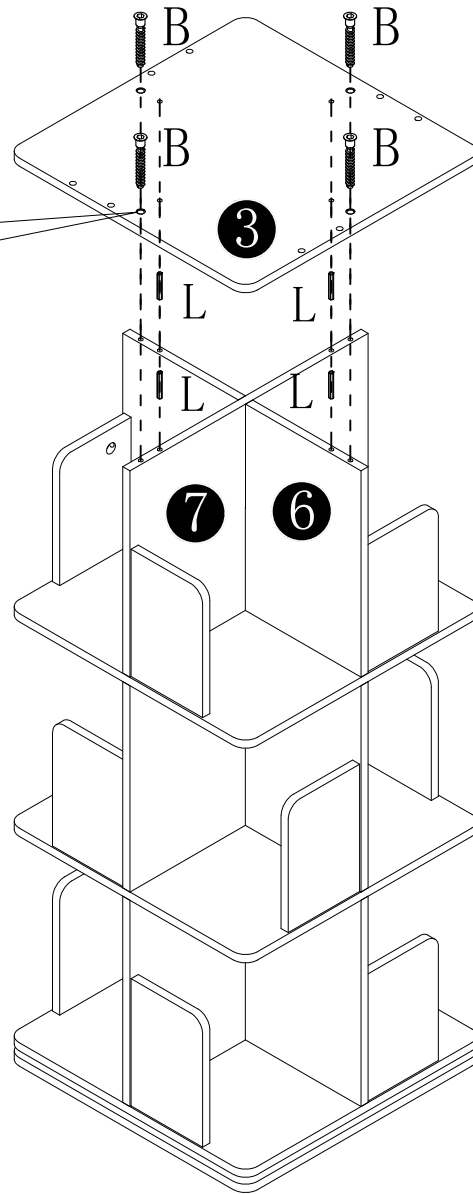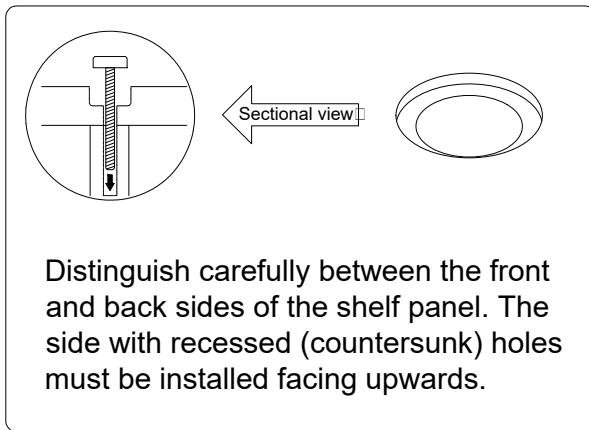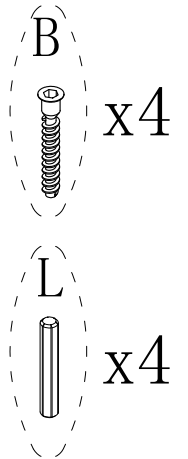

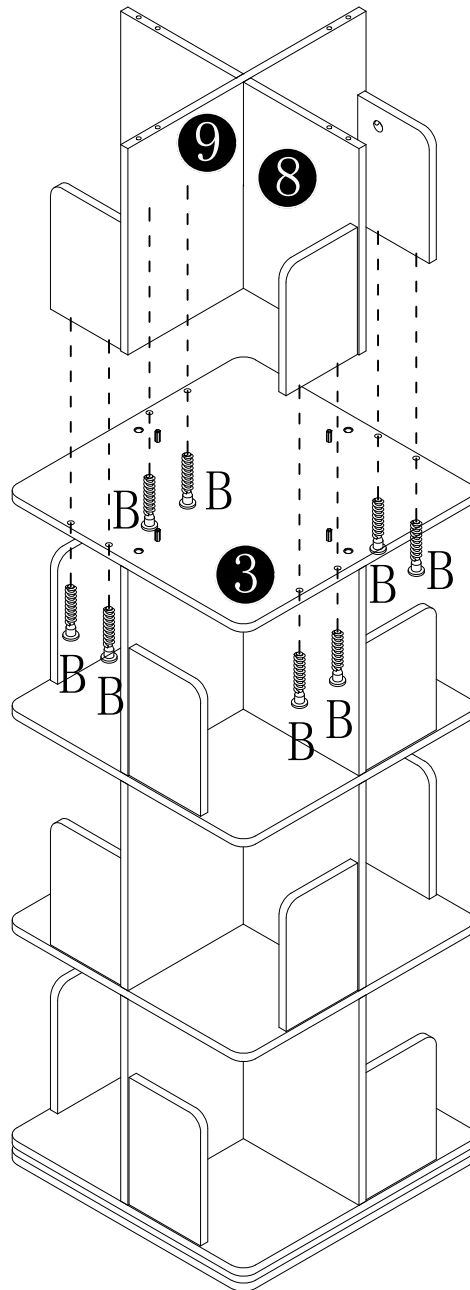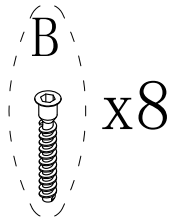

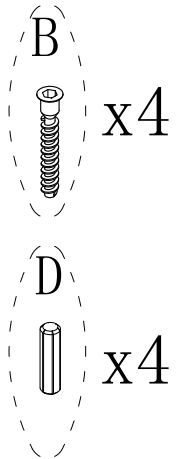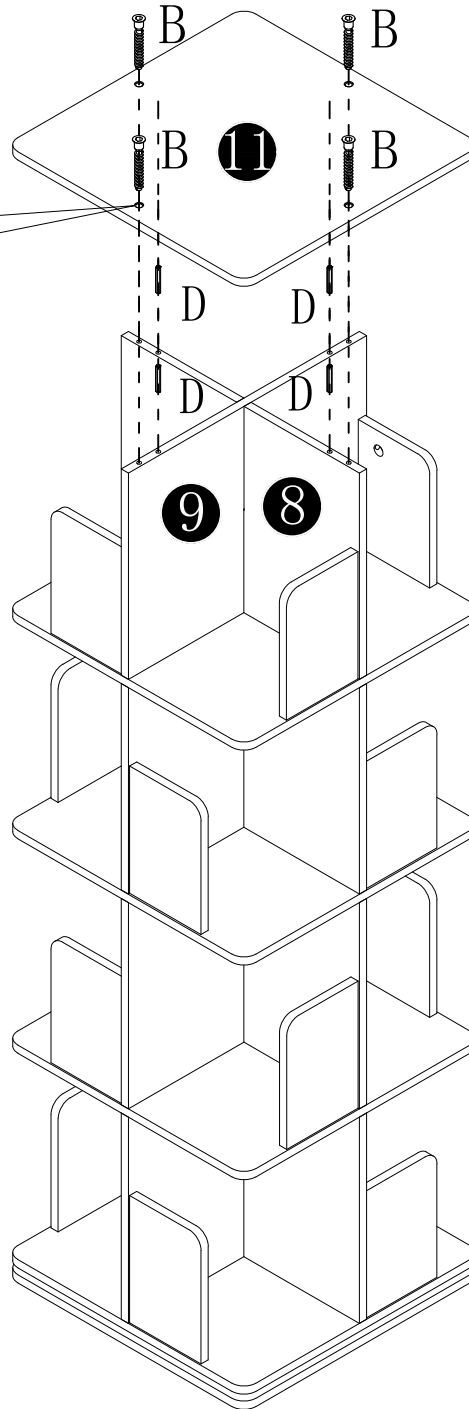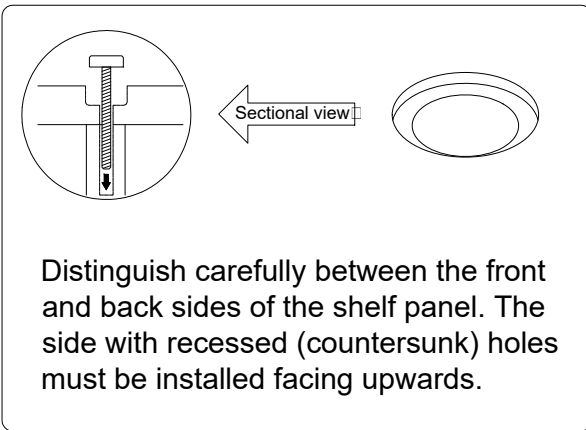

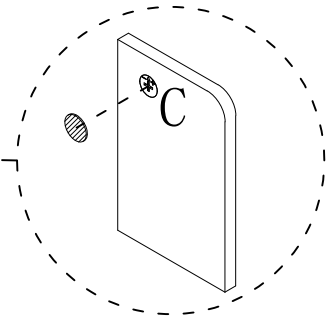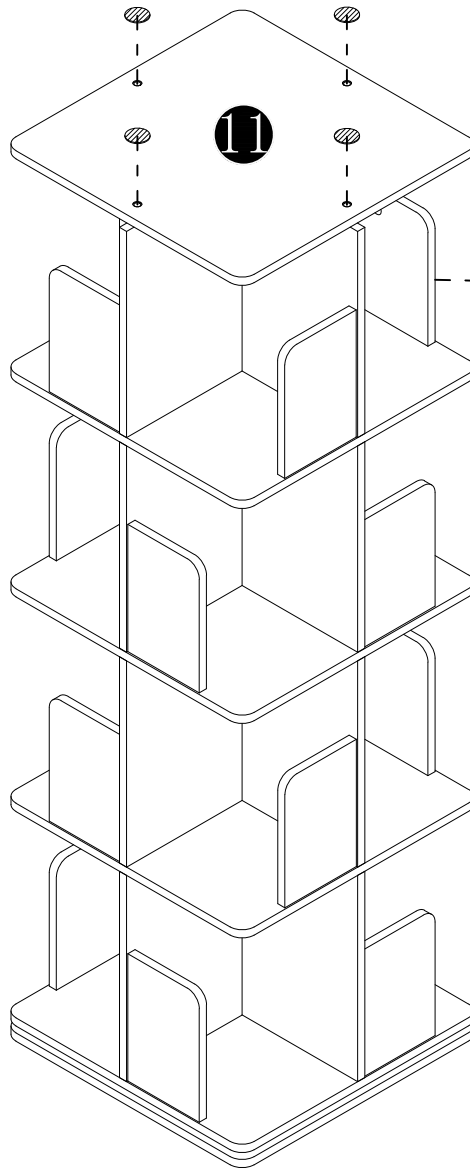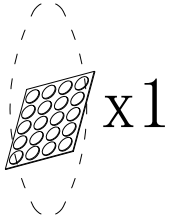

To ensure a neat and attractive appearance of the furniture, we recommend covering all cam lock fittings (Part C) with the included decorative stickers.