
Assembly Instructions

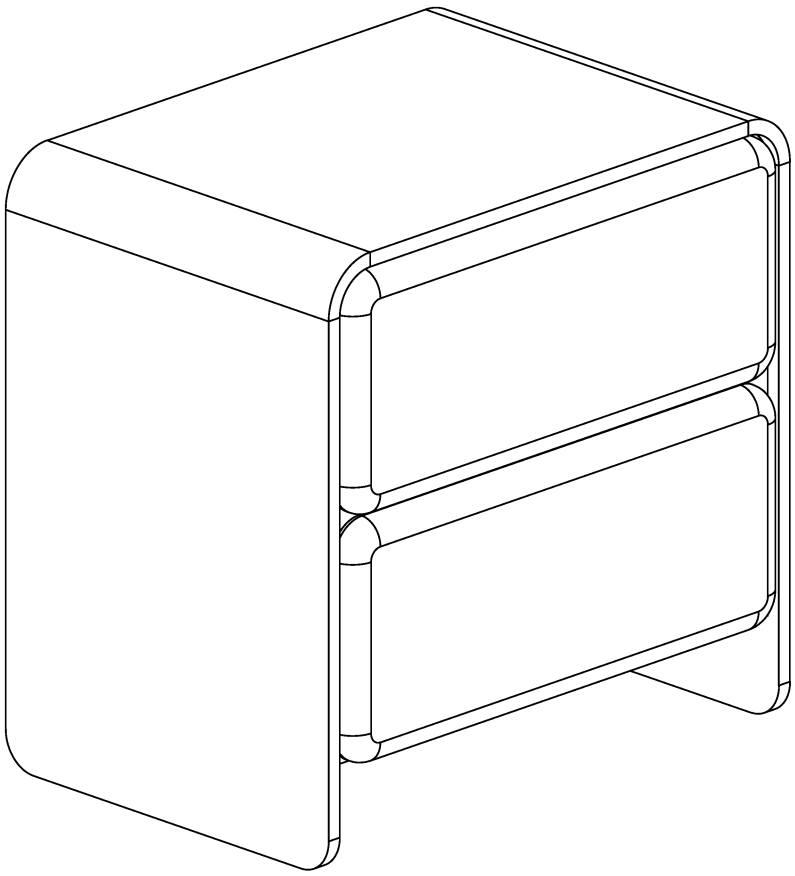


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

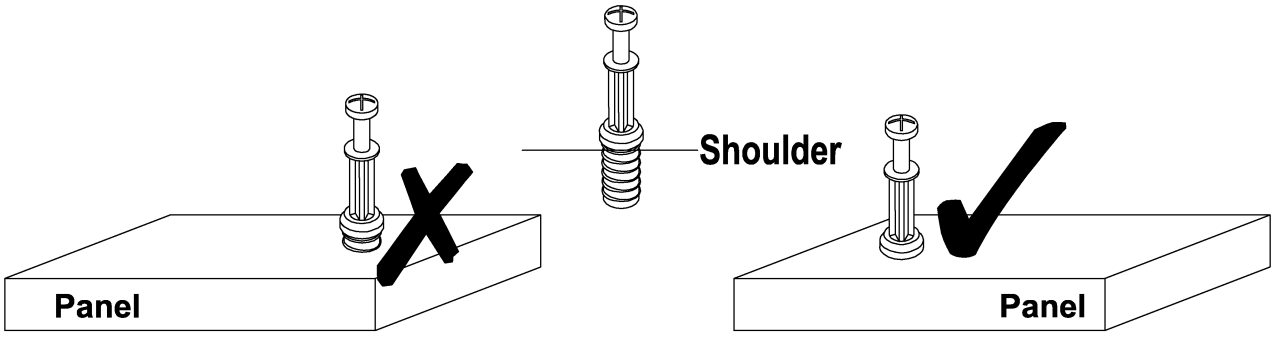

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

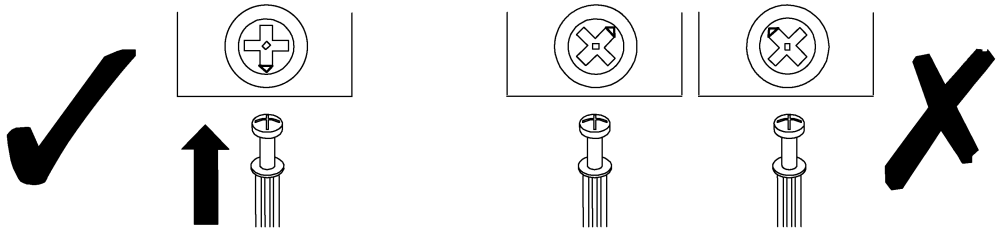

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT












Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

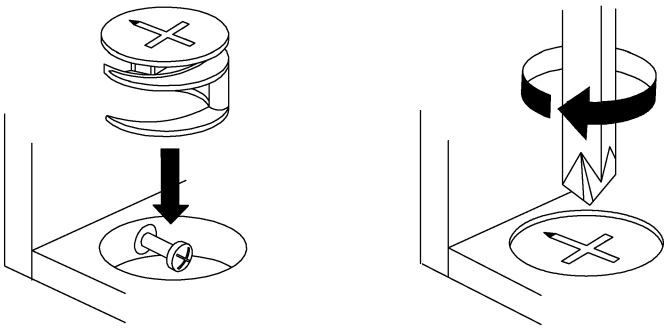



Turn cam lock clockwise to tighten.

Part List

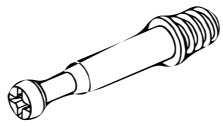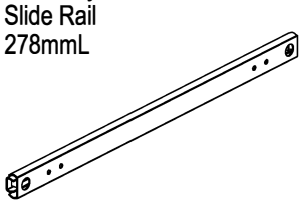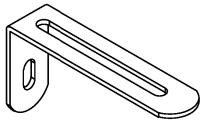No. A Quantity: 28+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 28+1 PCS Cam ø15x9.5mm 	No. C Quantity: 28+1 PCS Sticker ø20mm 	No. D Quantity: 8+1 PCS Dowel ø6x30mm 
No. E Quantity: 12+1 PCS Screw ø3.5x12mm 	No. F Quantity: 10+1 PCS Screw ø3x16mm 	No. G Quantity: 1 PCS Screw ø4x12mm 	No. H Quantity: 4+1 PCS Bolt M4x10mm 
No. I Quantity: 8+1 PCS Screw ø4x30mm 	No. J Quantity: 10 PCS plastic buckle 15*15*10mm 	No. K Quantity: 4 PCS Slide Rail 278mmL 	No. L Quantity: 1 PCS L-Shaped anti tipping iron bar 76x15x30mm 
No. M Quantity: 1 PCS plastic plug Ø8*40 	No. N Quantity: 1 PCS screw Ø4*38 		


Product structure

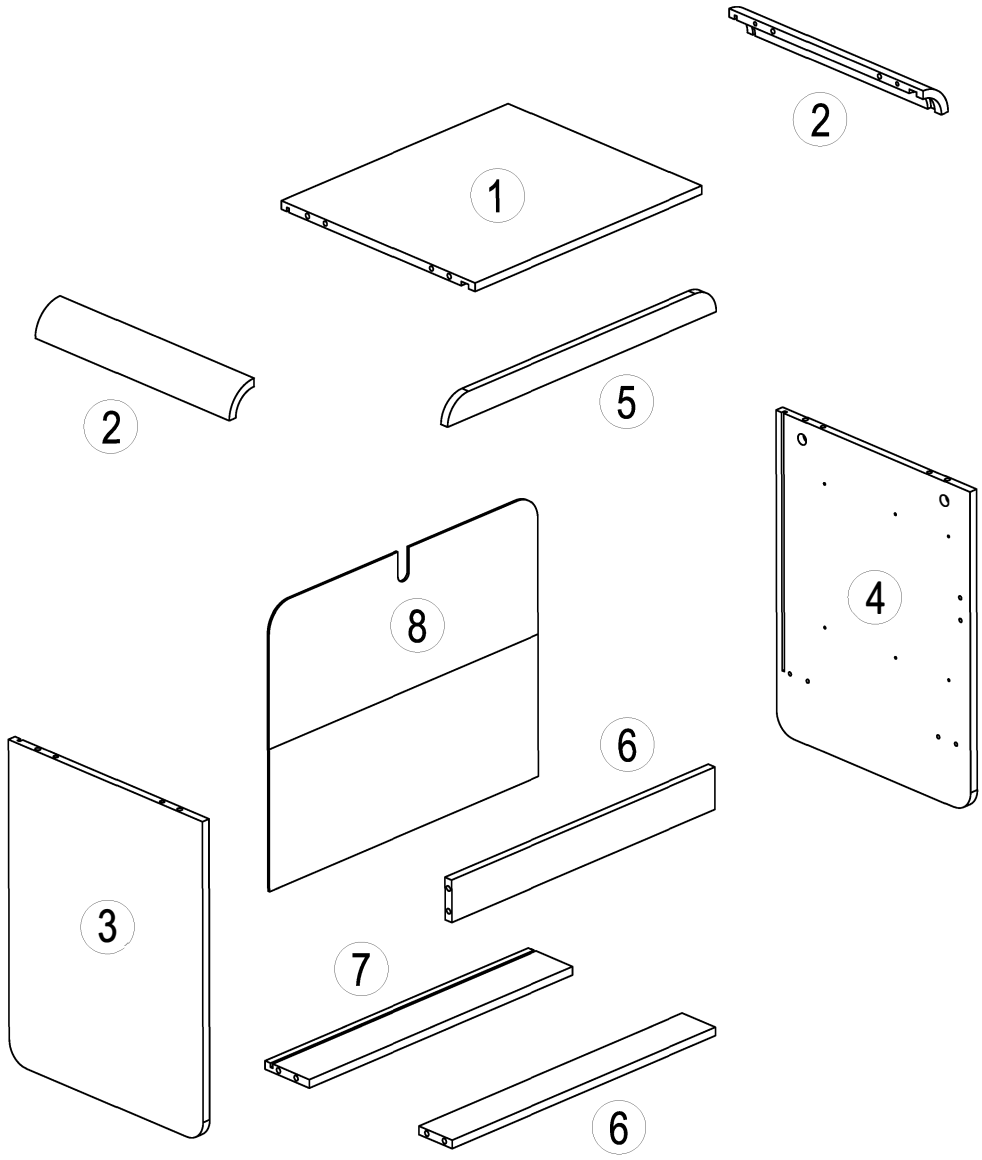

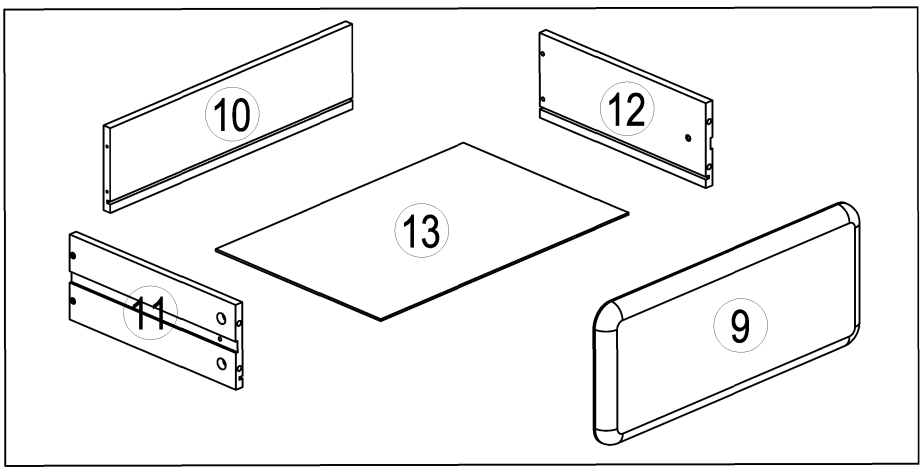


x2


STEP 1


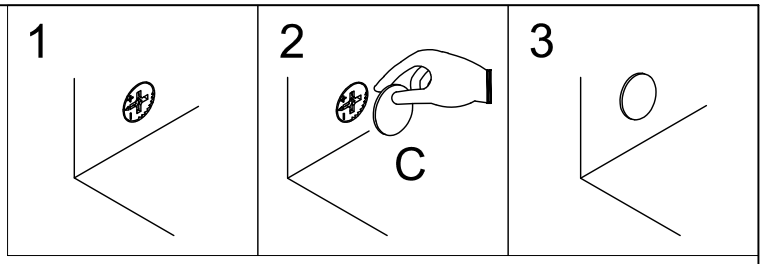


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

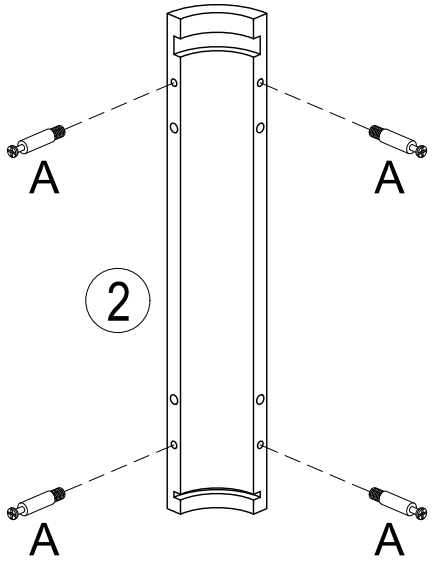



x2

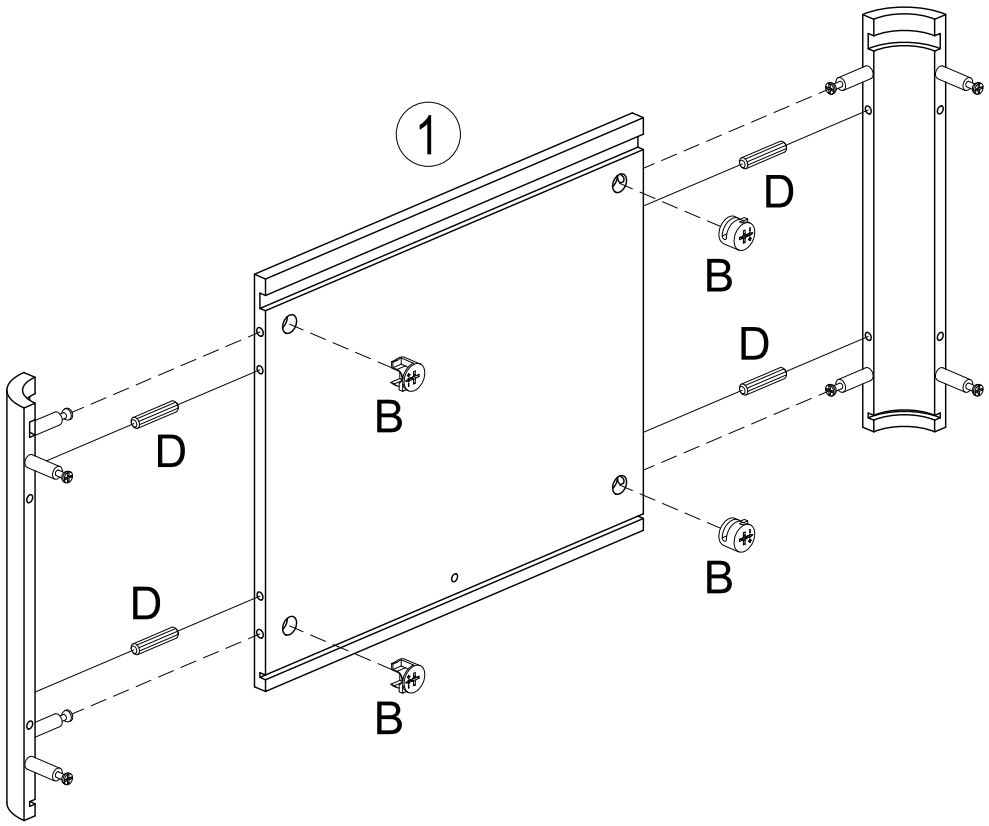

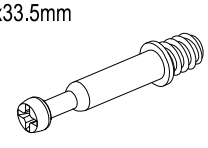No. A	No. B	No. C	No. D
Quantity: 8 PCS Cam Bolt ø6x33.5mm	Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm
			


STEP 2

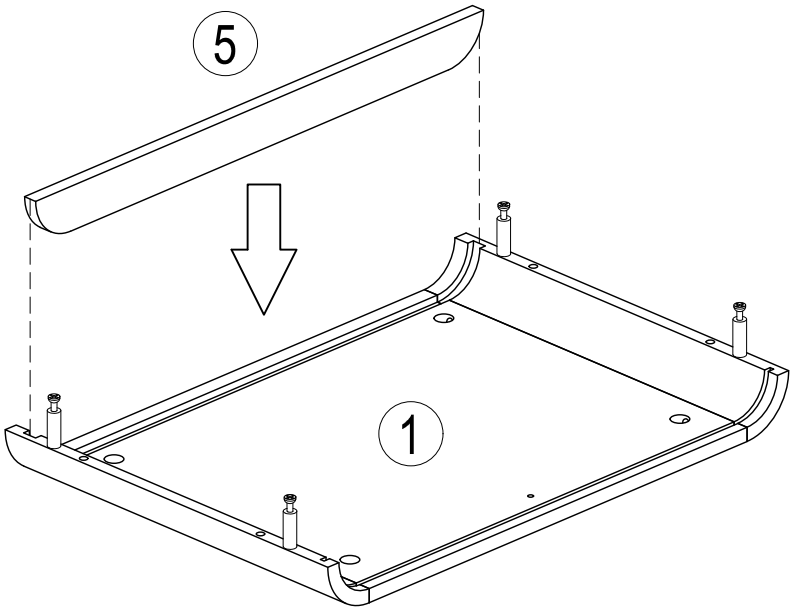

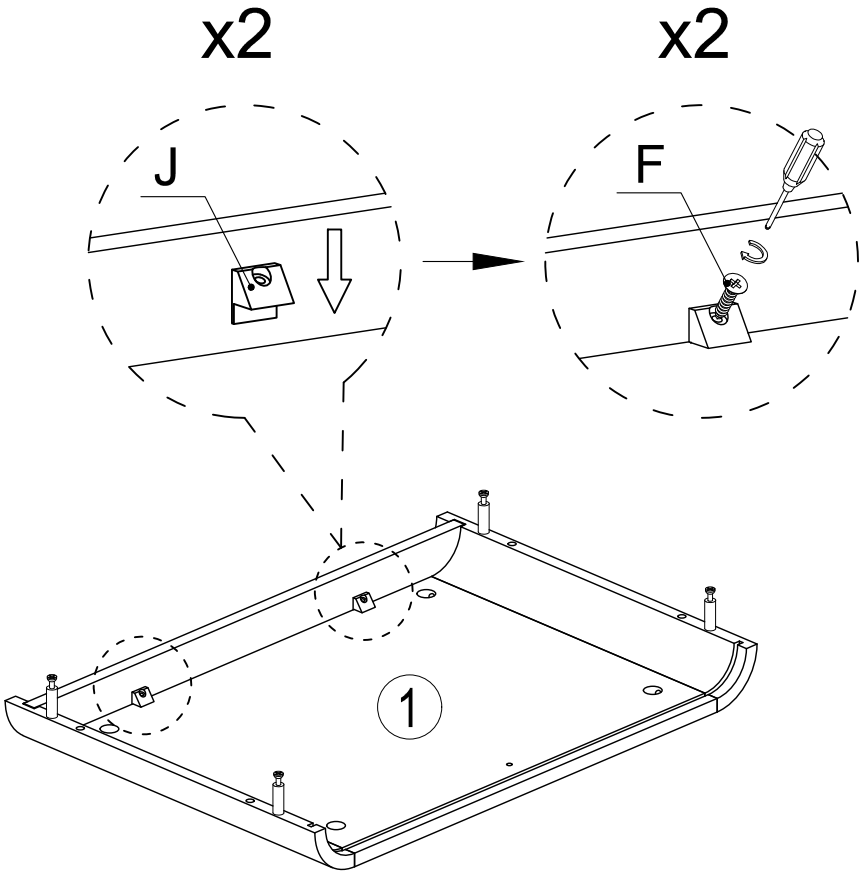


No. F	No. J
Quantity: 2 PCS Screw ø3x16mm	Quantity: 2 PCS plastic buckle 15*15*10


STEP 3

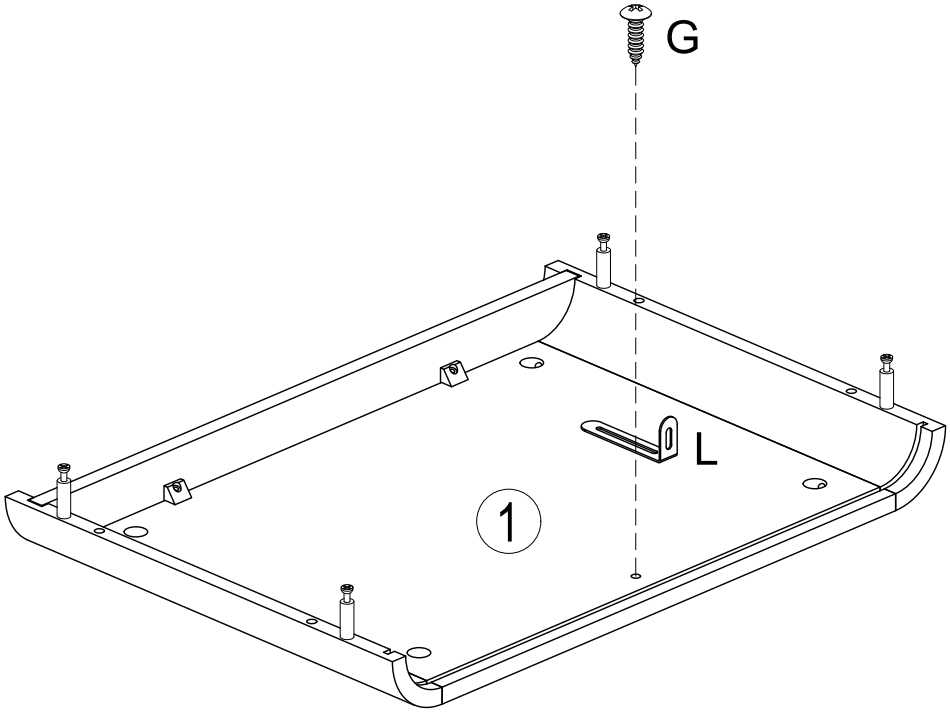

No. G	No. L
Quantity: 1 PCS Screw ø4x12mm	Quantity: 1 PCS L-Shaped anti tipping iron bar 76x15x30mm


STEP 4

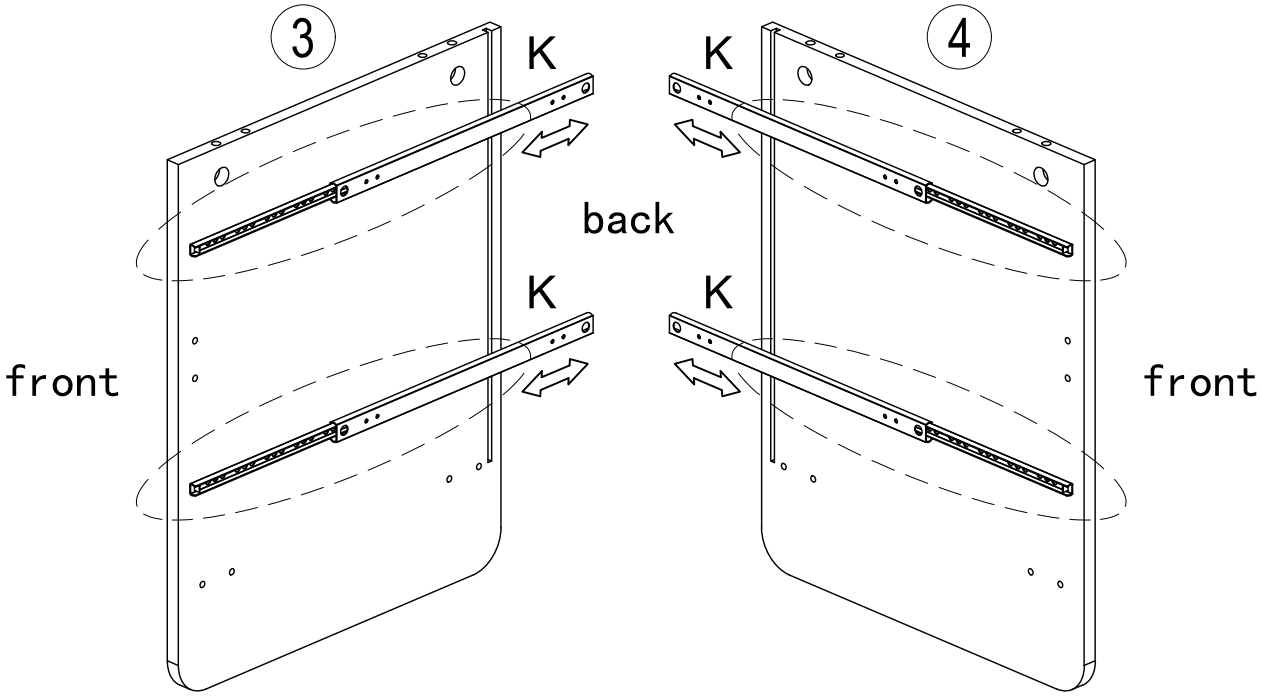


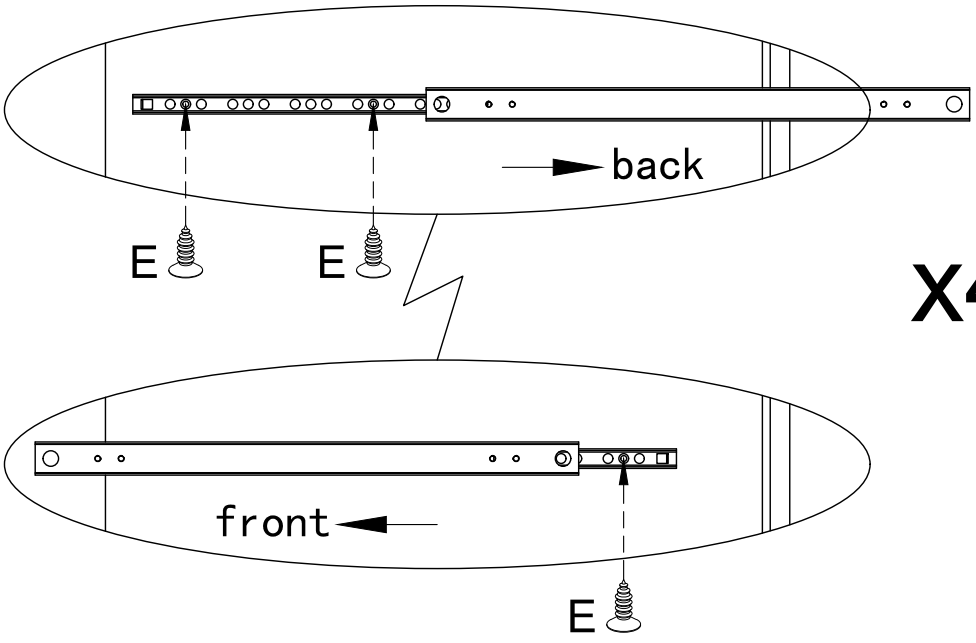


x4

No. E	No. K
Quantity: 12 PCS	Quantity: 4 PCS
Screw	Slide Rail
ø3.5x12mm	278mmL




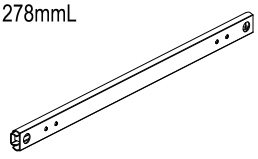


STEP 5

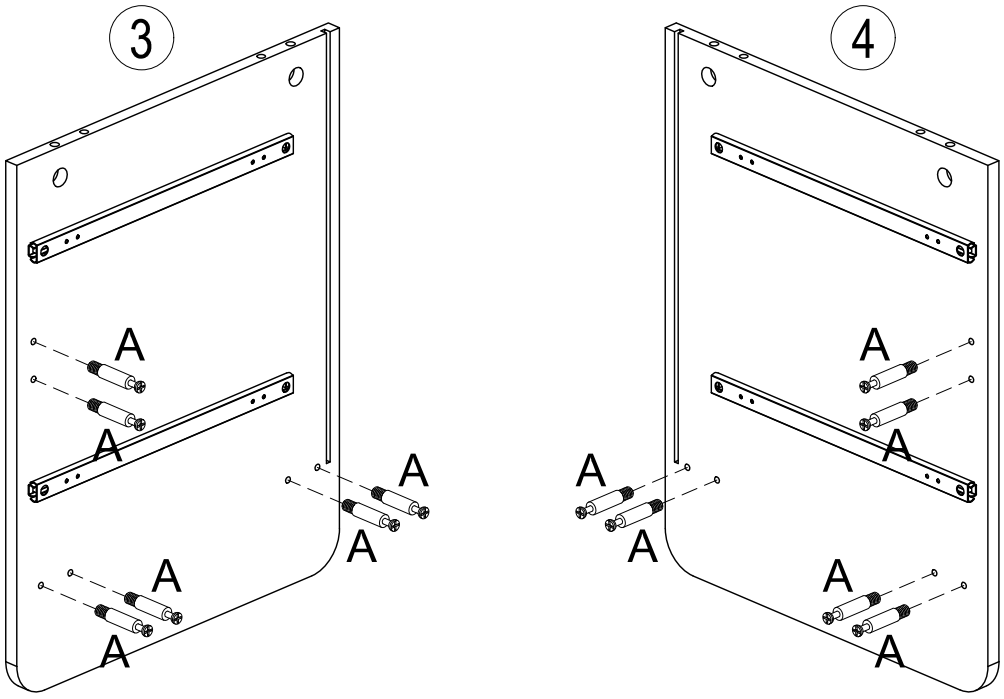


No. A
Quantity: 12 PCS
Cam Bolt
ø6x33.5mm

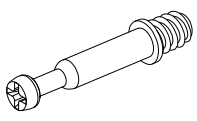


STEP 6

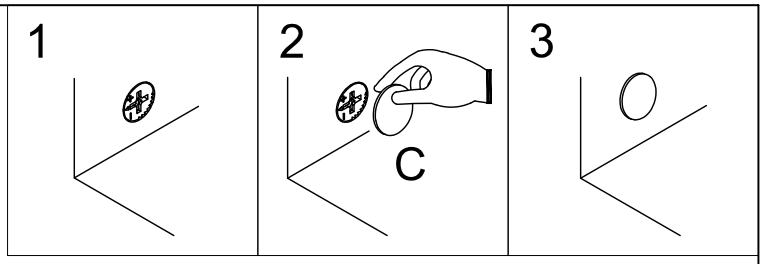

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

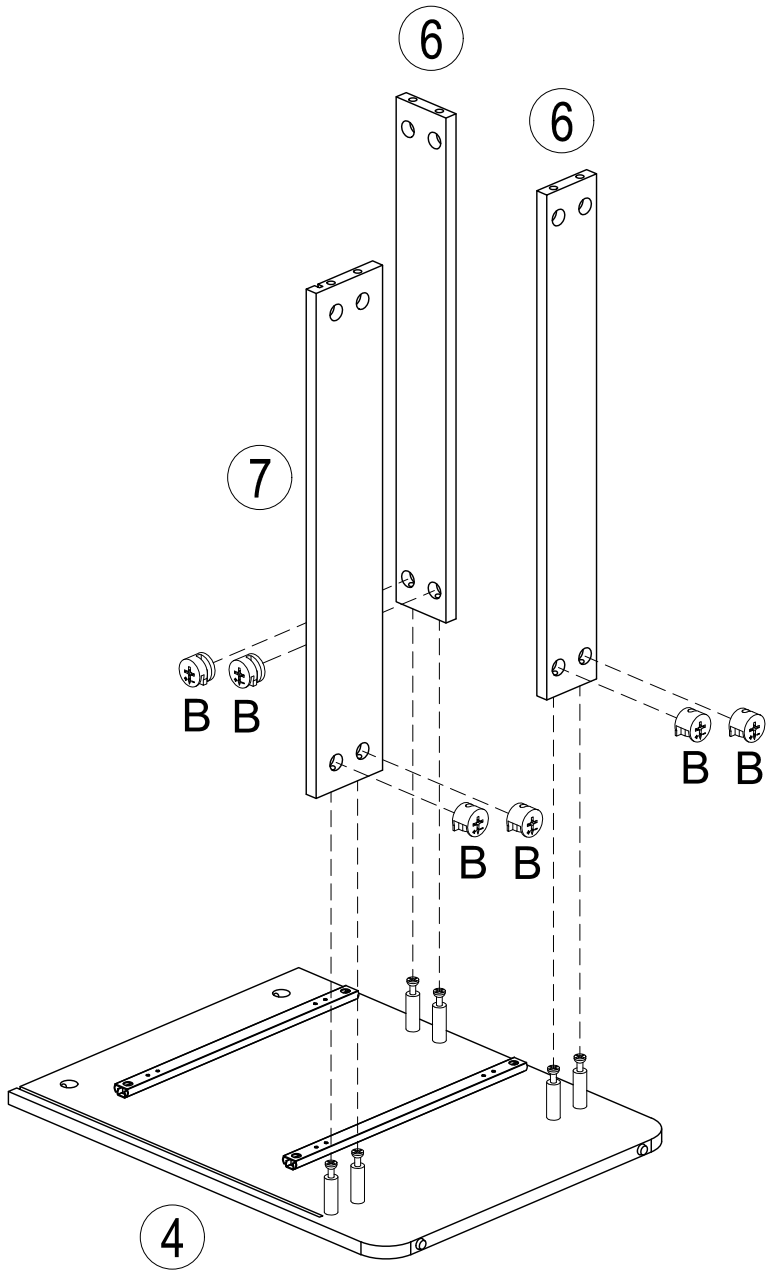


No. B	No. C
Quantity: 6 PCS Cam ø15x9.5mm	Quantity: 6 PCS Sticker ø20mm







STEP 7

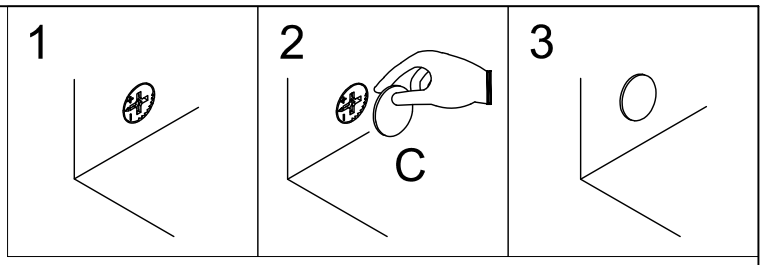

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

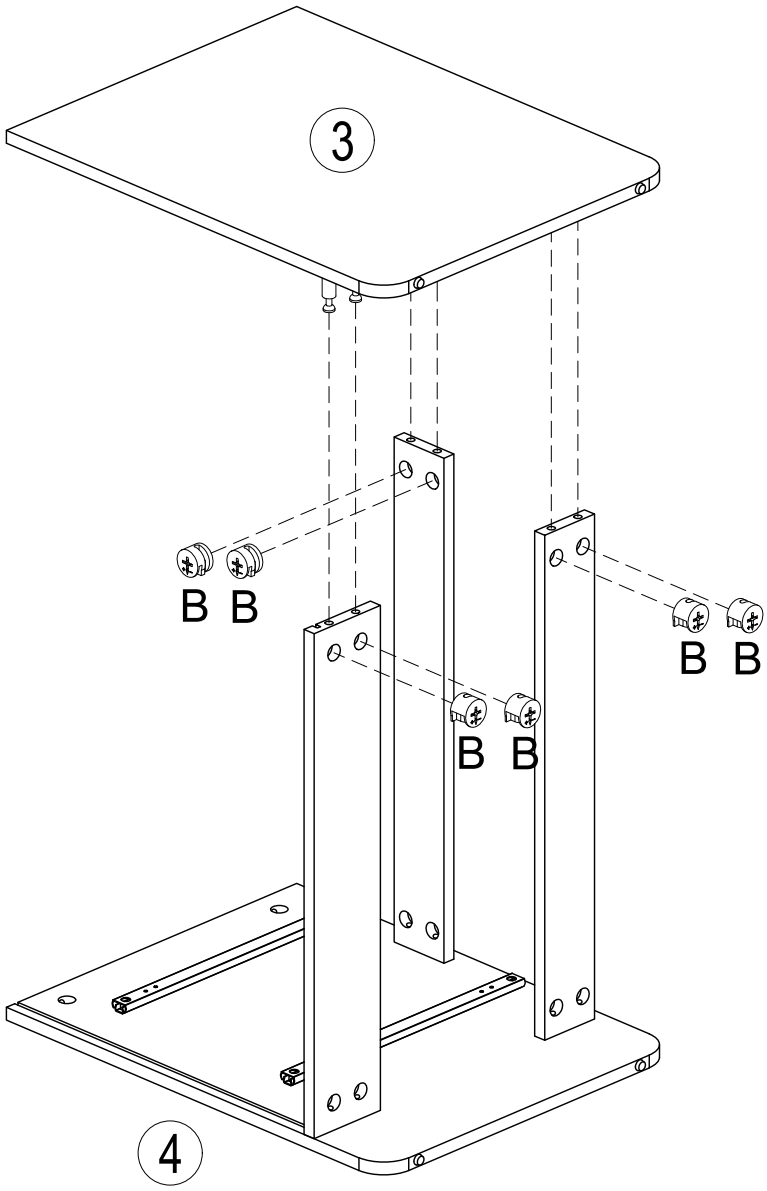



No. B	No. C
Quantity: 6 PCS Cam ø15x9.5mm	Quantity: 6 PCS Sticker ø20mm






STEP 8

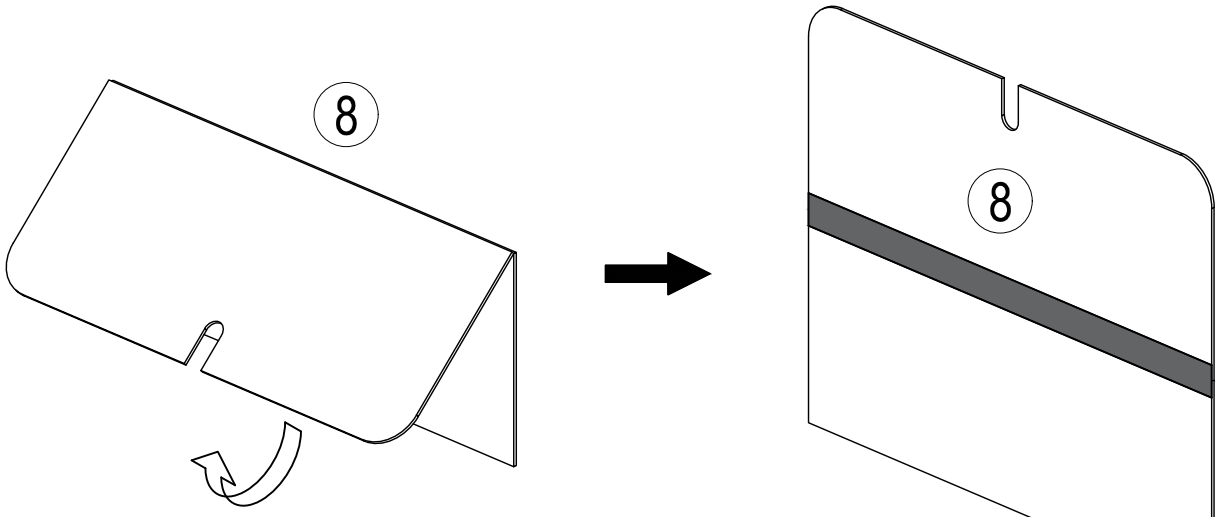


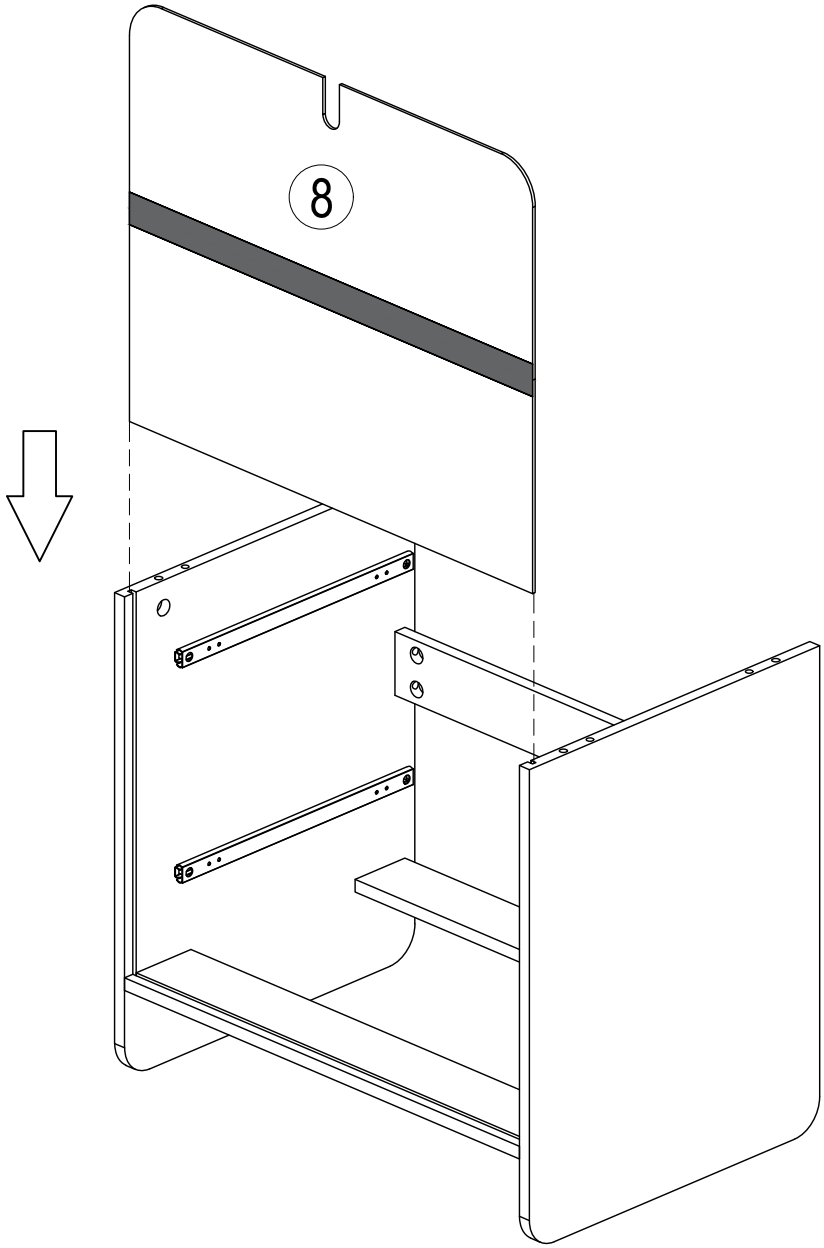

STEP 9

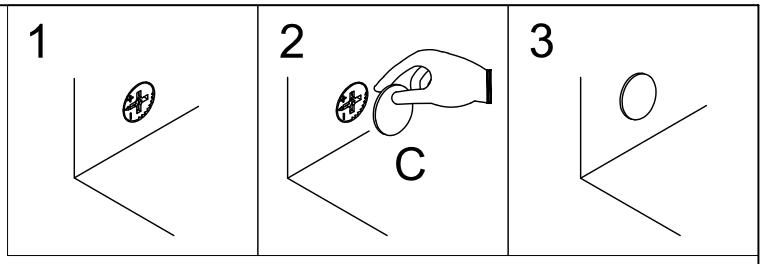


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

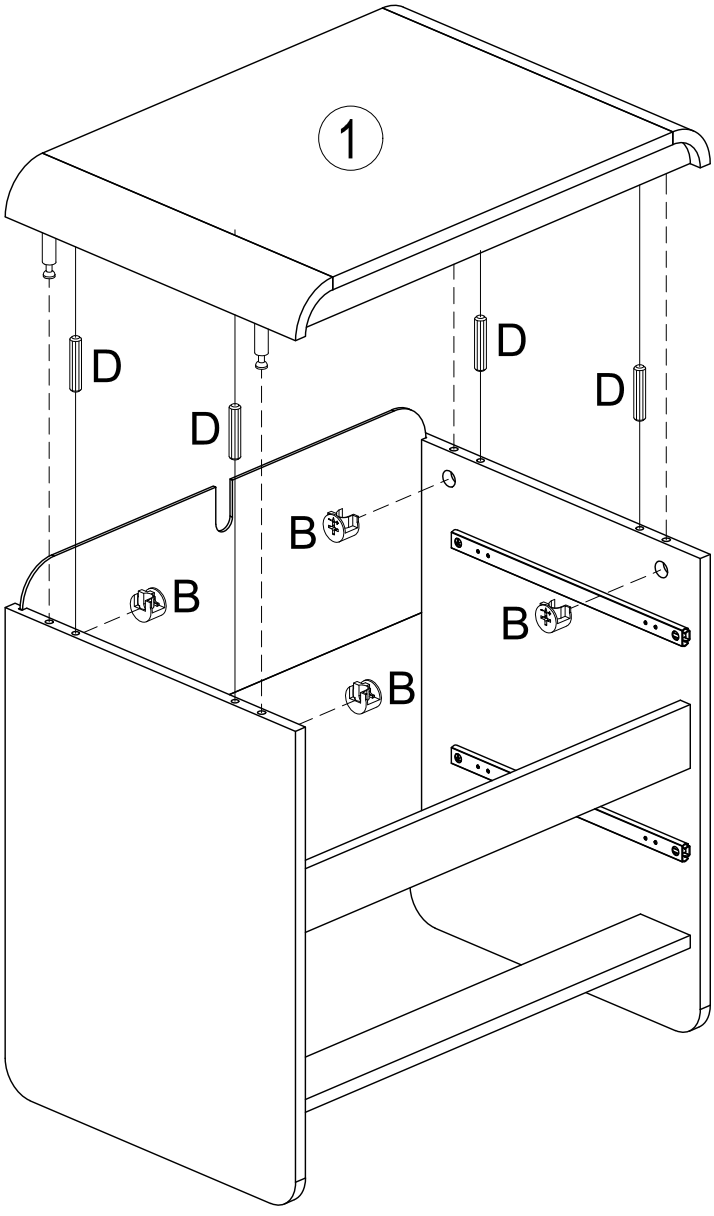

No. B	No. C	No. D
Quantity: 4 PCS Cam ø15x9.5mm	Quantity: 4 PCS Sticker ø20mm	Quantity: 4 PCS Dowel ø6x30mm


STEP 10


Please Note: To ensure greater product stability,
parts M and F must be installed according to the instructions.
Failure to install them will cause the product to wobble.

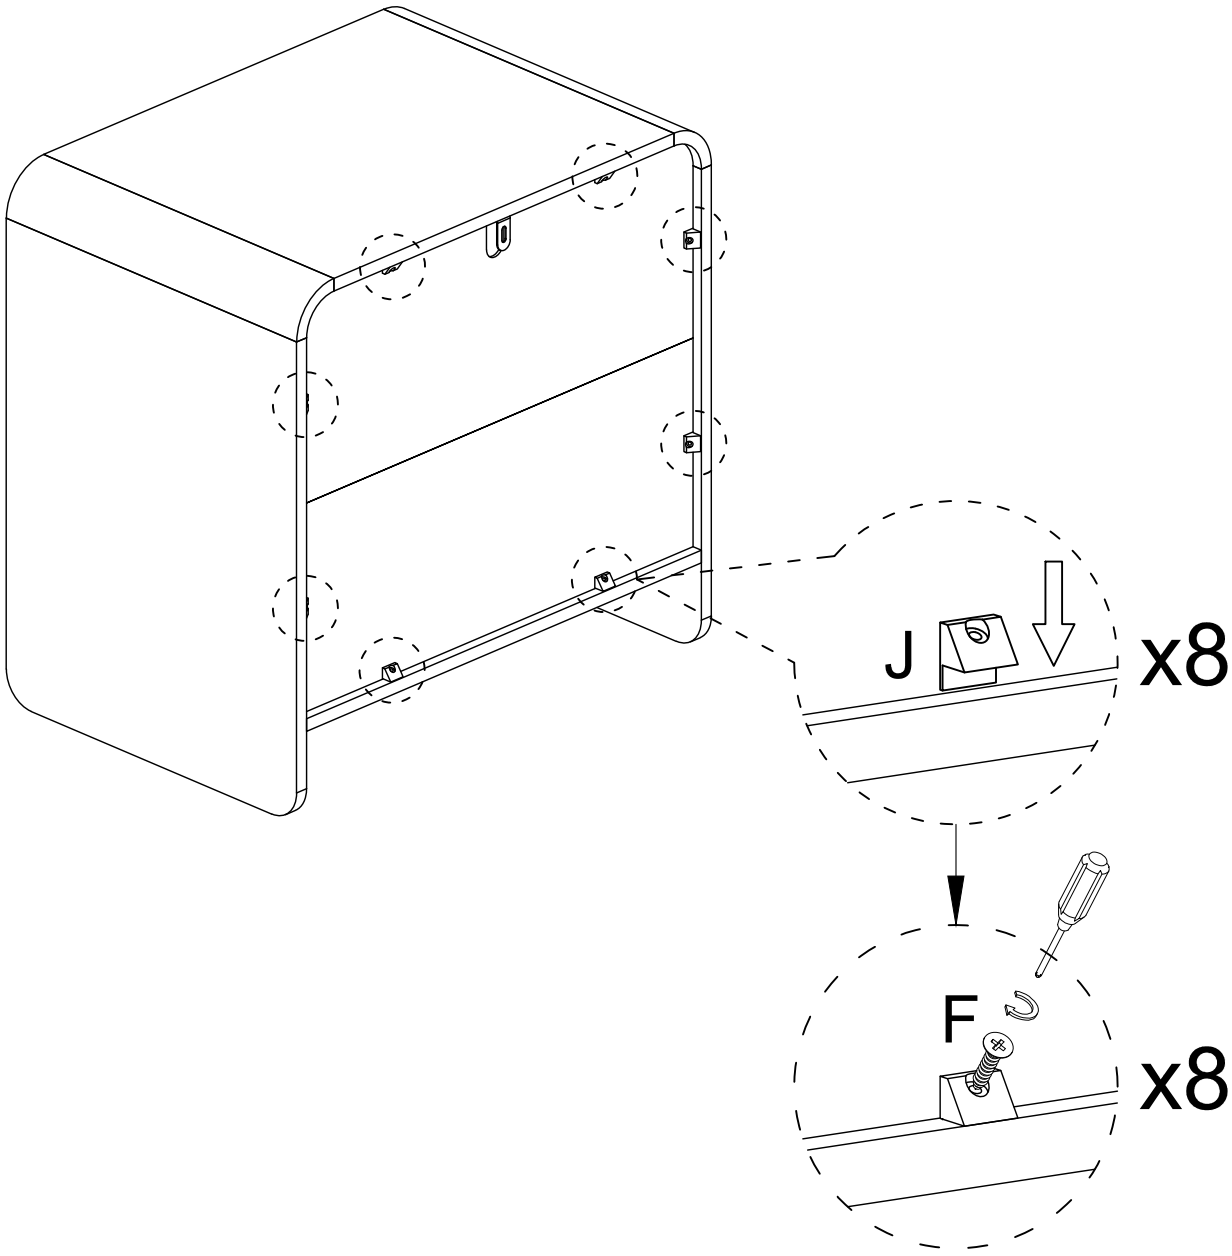


No. F	No. J
Quantity: 8 PCS Screw ø3x16mm	Quantity: 8 PCS plastic buckle 15*15*10

STEP 11

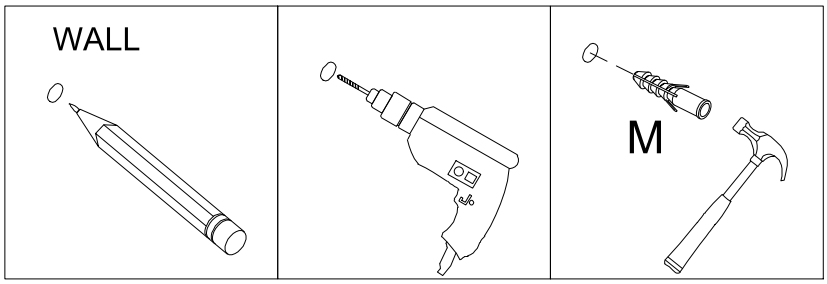


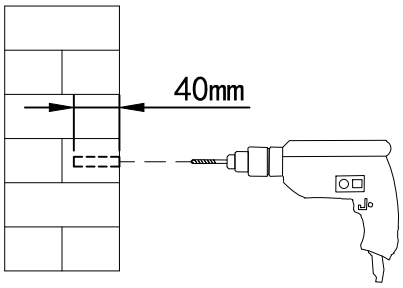

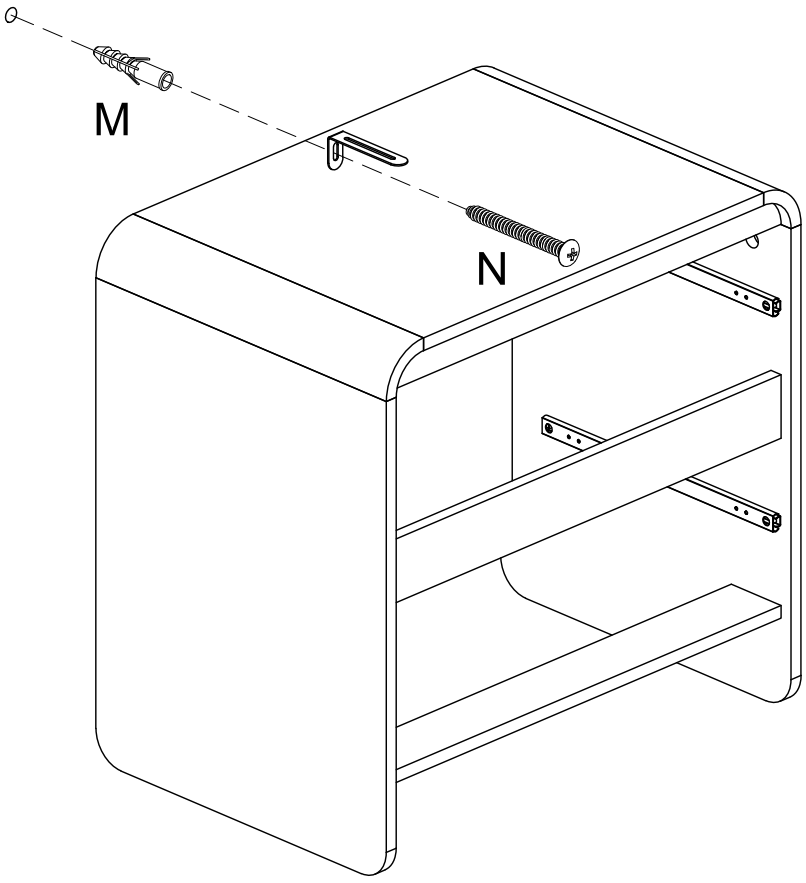

No. M	No. N
Quantity: 1 PCS plastic plug Ø8*40	Quantity: 1 PCS screw Ø4*38


STEP 12

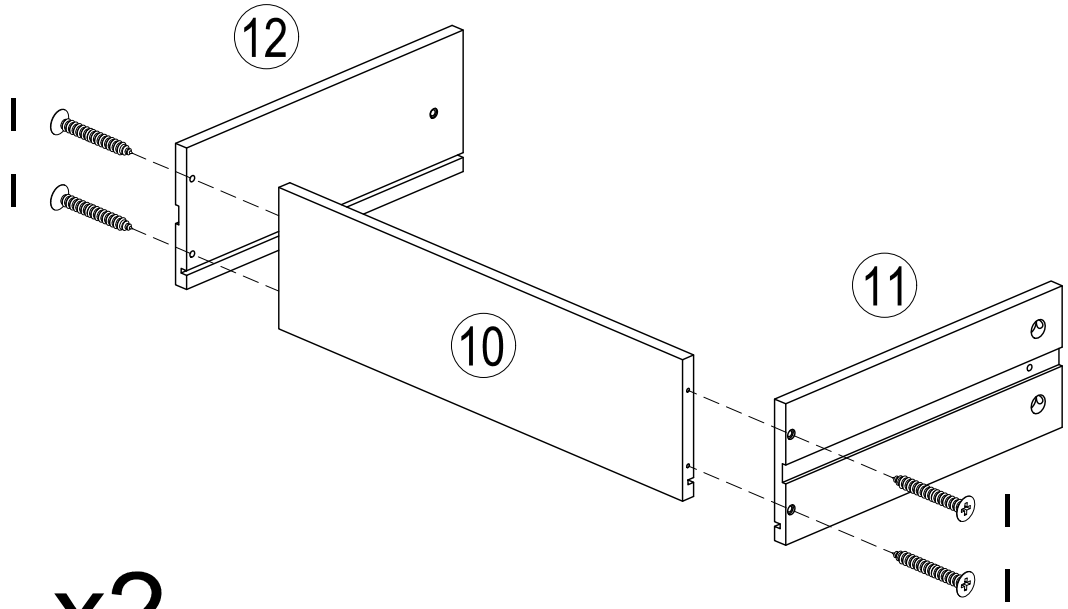


x2

---


x2

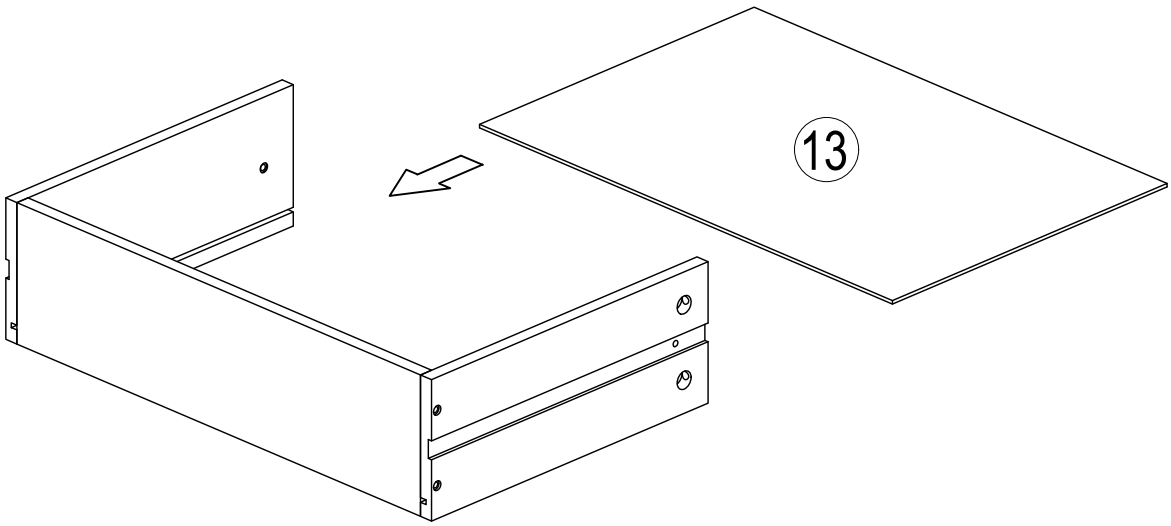


No. I
Quantity: 8 PCS
Screw
ø4x30mm



STEP 13

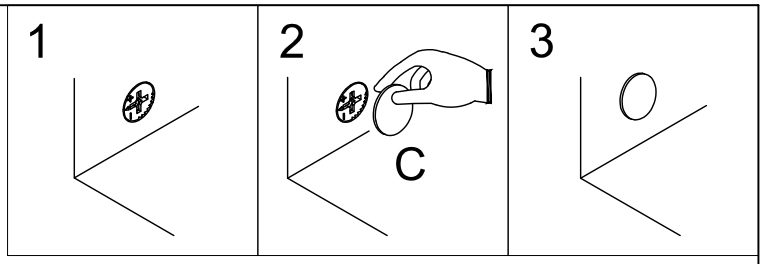


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)


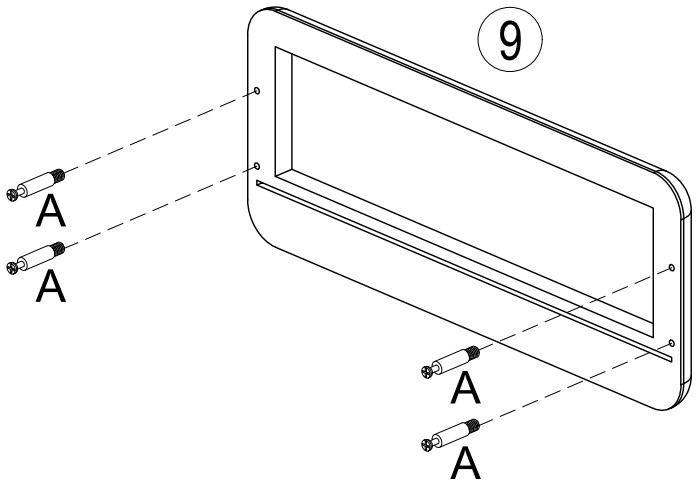


x2


---

x2

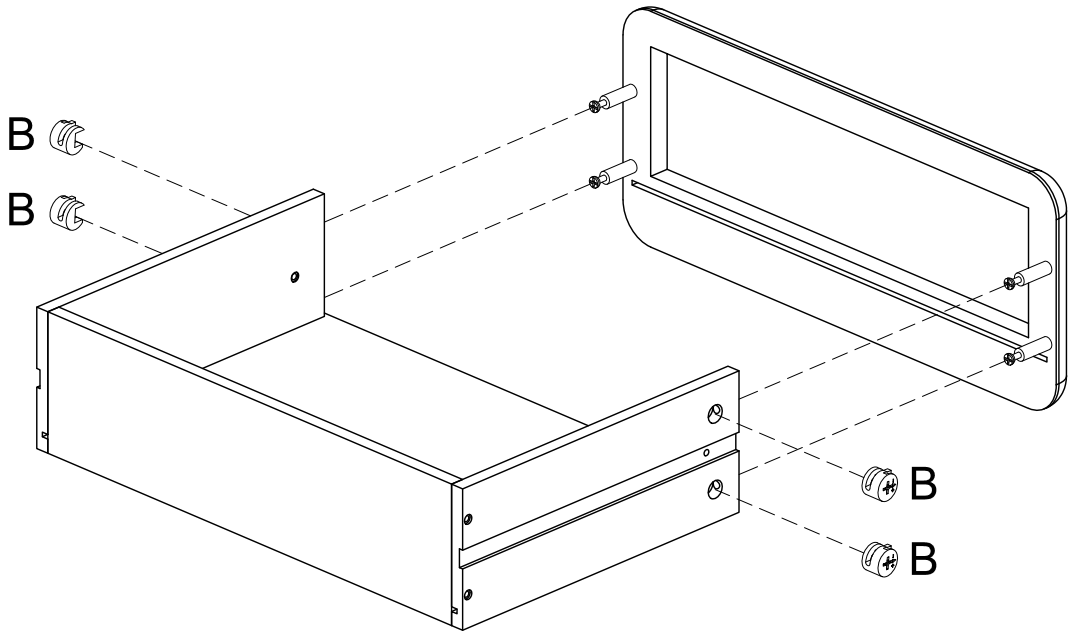


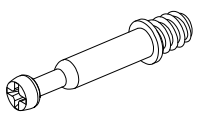
No. A	No. B	No. C
Quantity: 8 PCS	Quantity: 8 PCS	Quantity: 8 PCS
Cam Bolt	Cam	Sticker
ø6x33.5mm	ø15x9.5mm	ø20mm
		

STEP 14

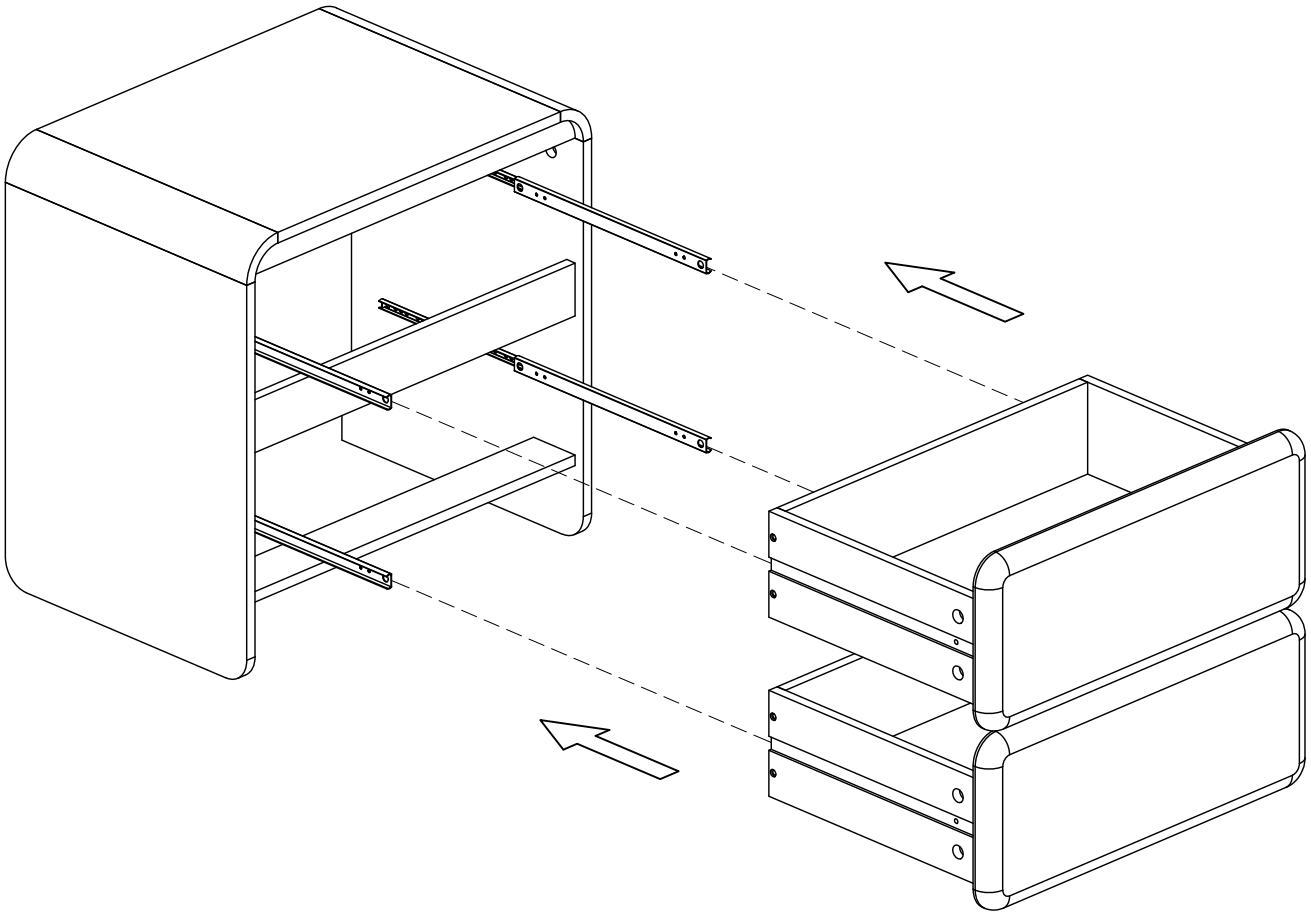

STEP 15

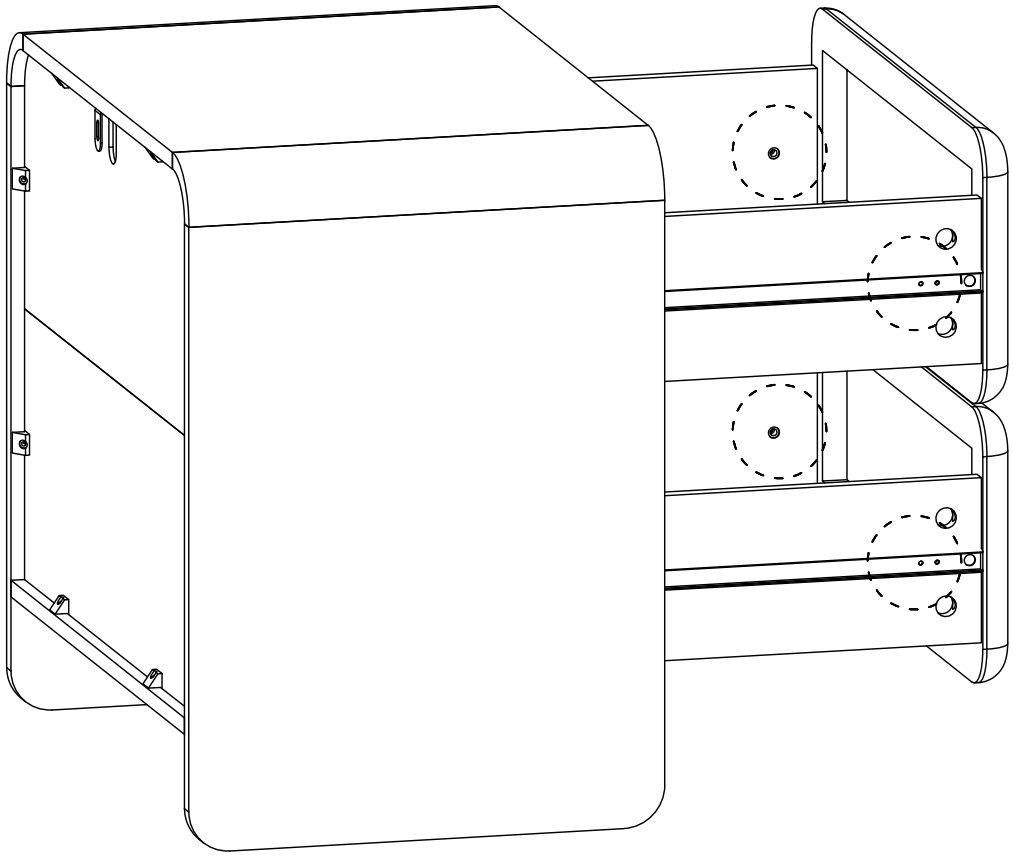

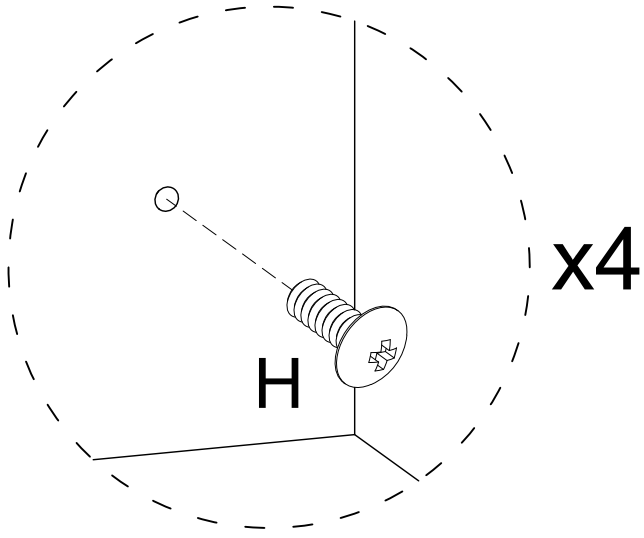

No. H
Quantity: 4 PCS
Bolt
M4x10mm

