


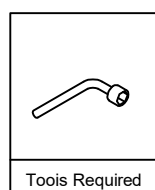
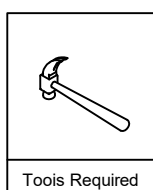
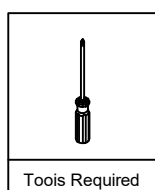
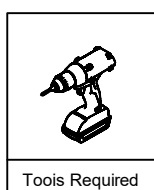
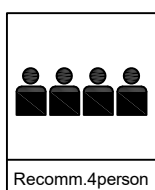


Assembly Instruction

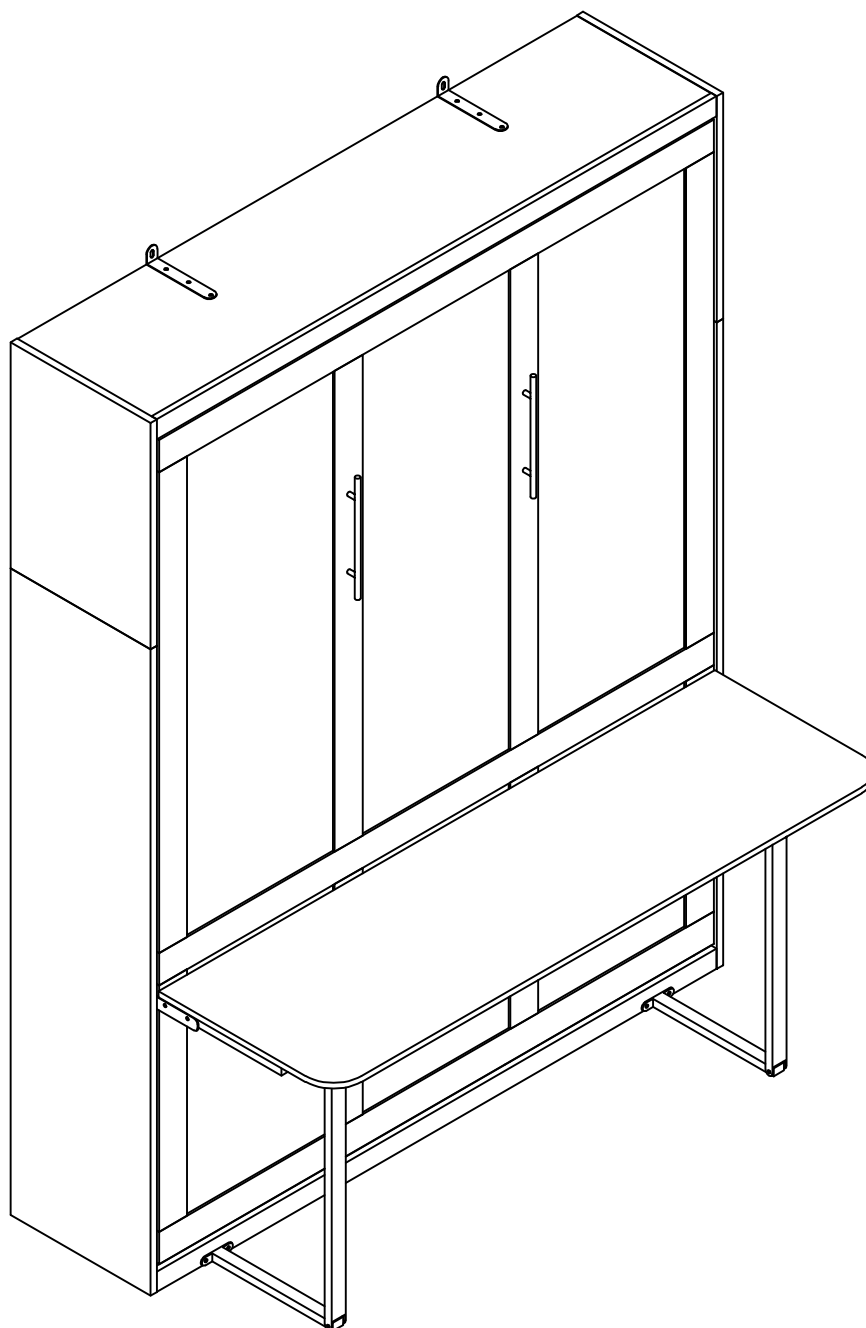

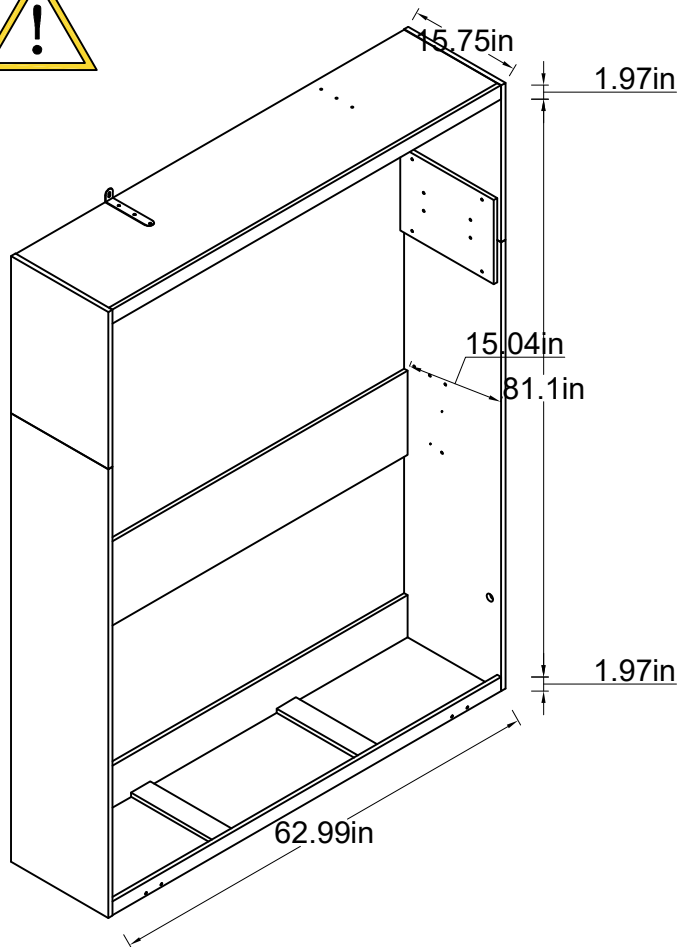

Decorative door panel:
W62.36xD0.591xH80.31 inches

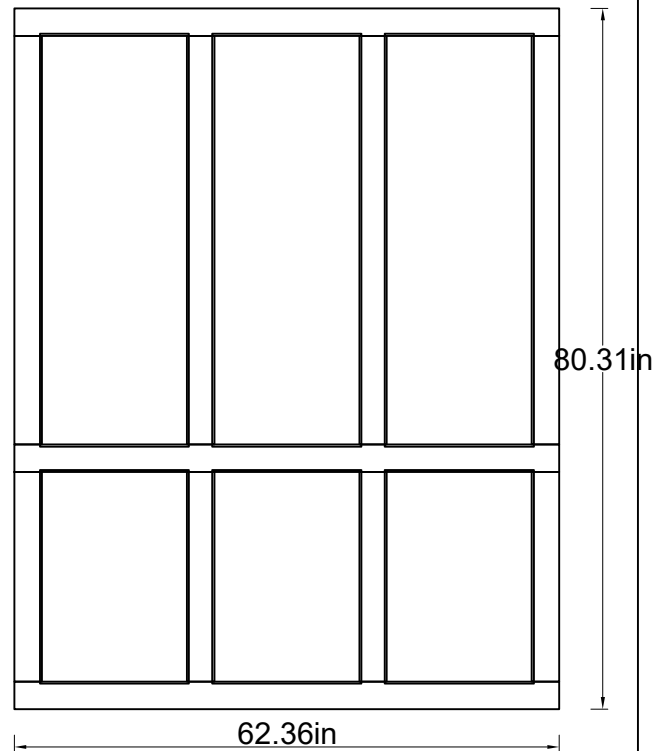

If you choose to DIY the cabinet when just bought our murphy bed hardware kit, Please pay attention to the following keys for cabinet dimension datas and requirements:

1. The internal dimensions of cabinet should be accurate reserved to: W62.99xD14.961xH81.102 inches;
2. The total dimension of cabinet door panel (divided into 3-4 pieces to be made): W62.36xD0.591xH80.31 inches;
3. The baseboard height which from the ground to inside cabinet: 1.97 inches;


The cabinet must be fixed to the wall using the matched corner brackets and expansion screws.

Diagram illustrating the internal structure of a refrigerator, showing the evaporator and condenser coils. The evaporator is located at the top, and the condenser is at the bottom. The diagram is labeled with "150 LBS" indicating the weight of the coils.



WARNING

Recommended Maximum Weight

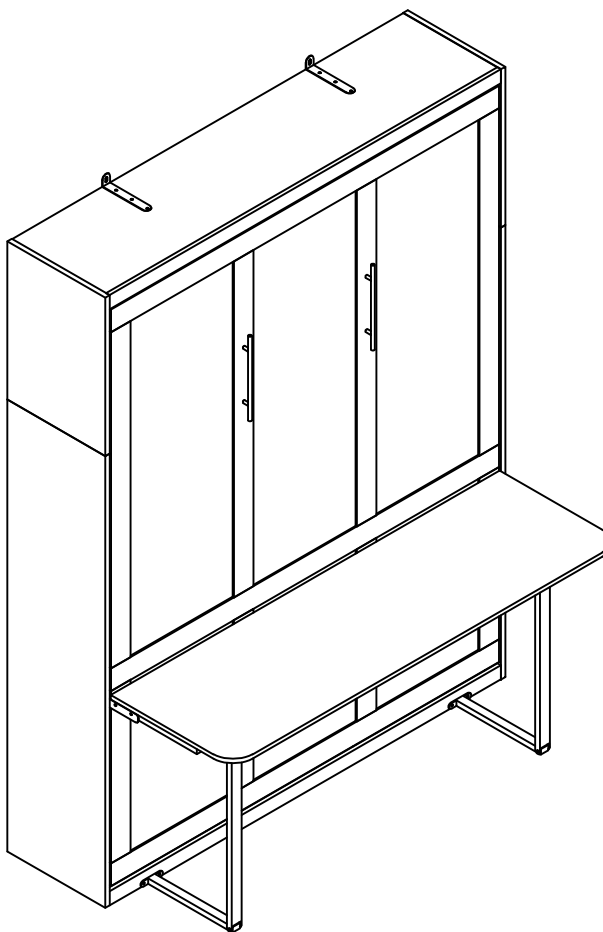


Read all instructions before using this product.

1. This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
2. Avoid sharp objects and corrosive chemicals to prevent damage to the product or bodily injury.
3. Not intended for use in humid environment to prevent mildew, such as bathrooms, laundry areas and similar indoor locations. Do not use outdoors
4. Don't allow anybody stand or climb on the unit. Serious or fatal crushing injuries can occur from furniture tip over. To prevent tip over this furniture must be used with the wall attachment devices provided

Useful Hints before you start:

1. Place soft packaging material on the floor to protect surface of product during assembly
2. It is important that each step is performed in correct order to avoid difficulties.
3. Align all screws with corresponding pre-drilled holes first and tighten.
4. Screws may become loose during long-term use, retighten them to ensure stability and security.
5. Using incompatible hardware might cause damage to product


Parts

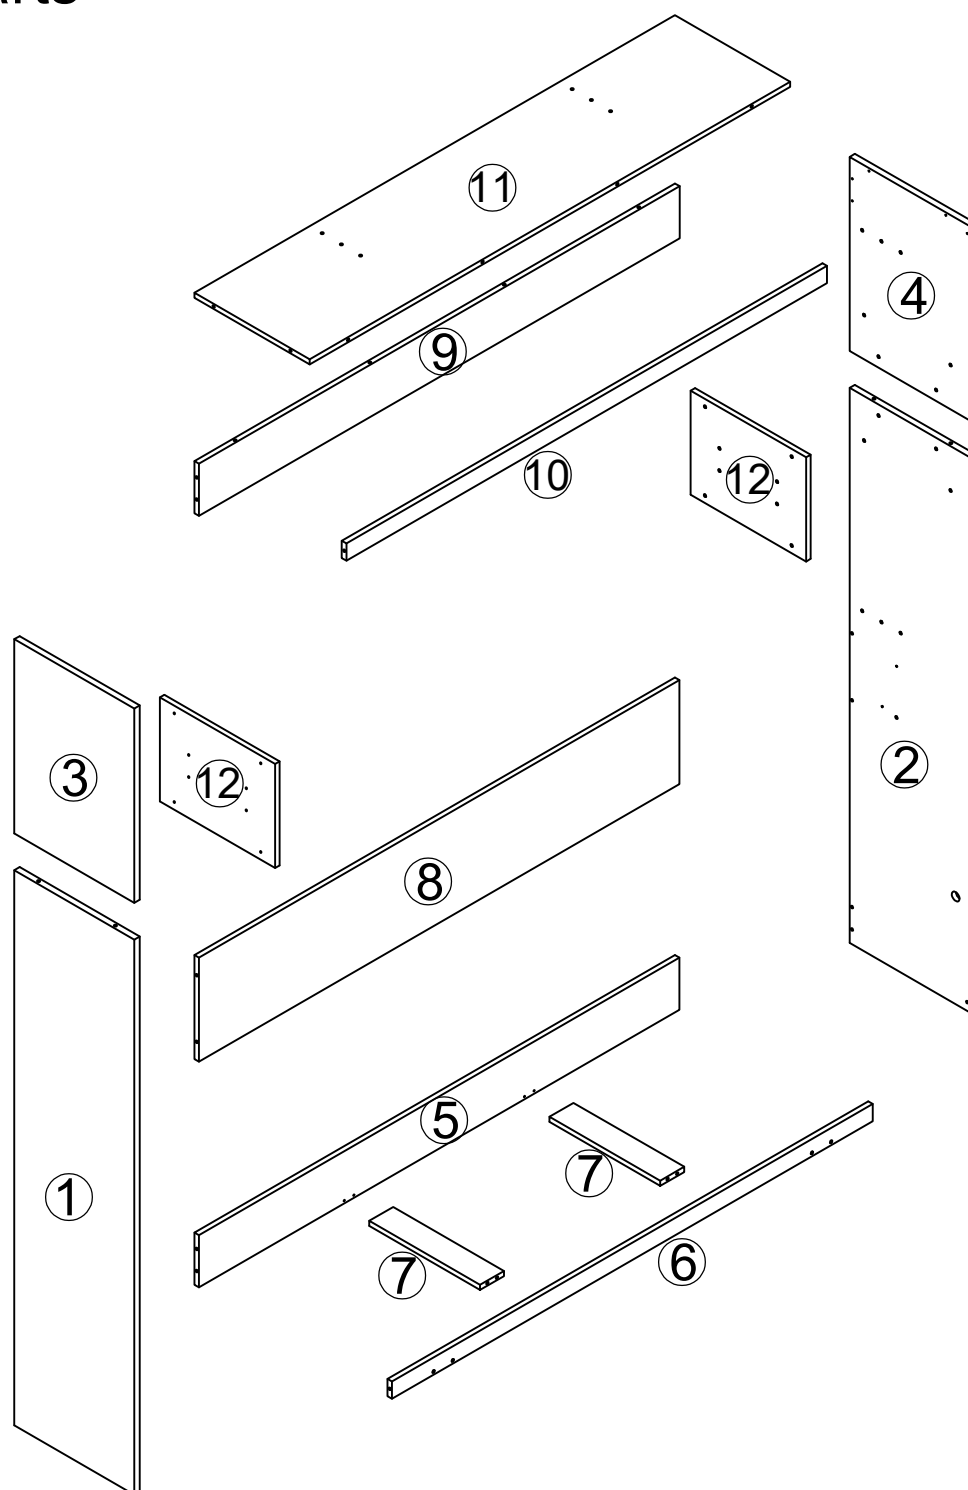

WARNING:

To avoid causing unnecessary troubles,
Please check whether the components with corresponding
numbers are installed correctly according to the diagram.



Parts

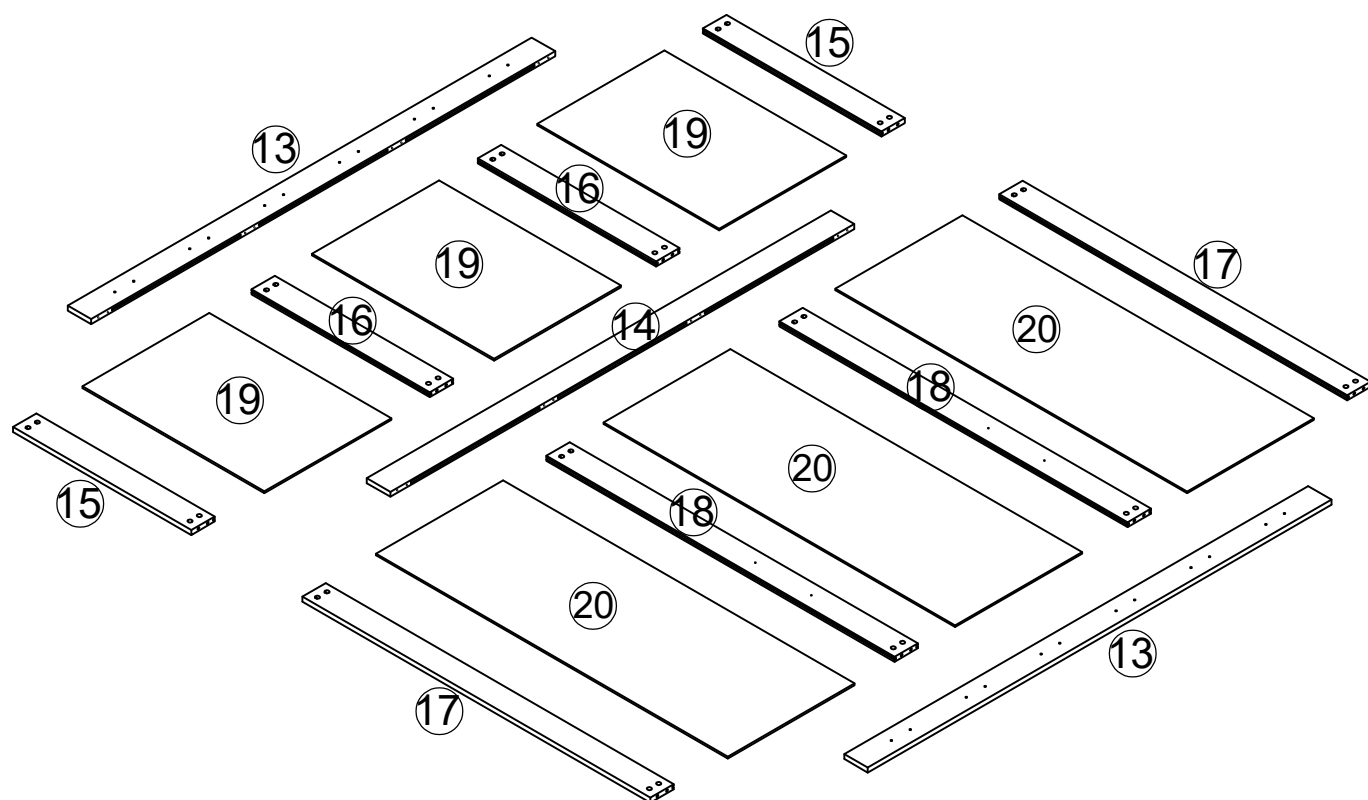

WARNING:

To avoid causing unnecessary troubles,
Please check whether the components with corresponding
numbers are installed correctly according to the diagram.


Parts

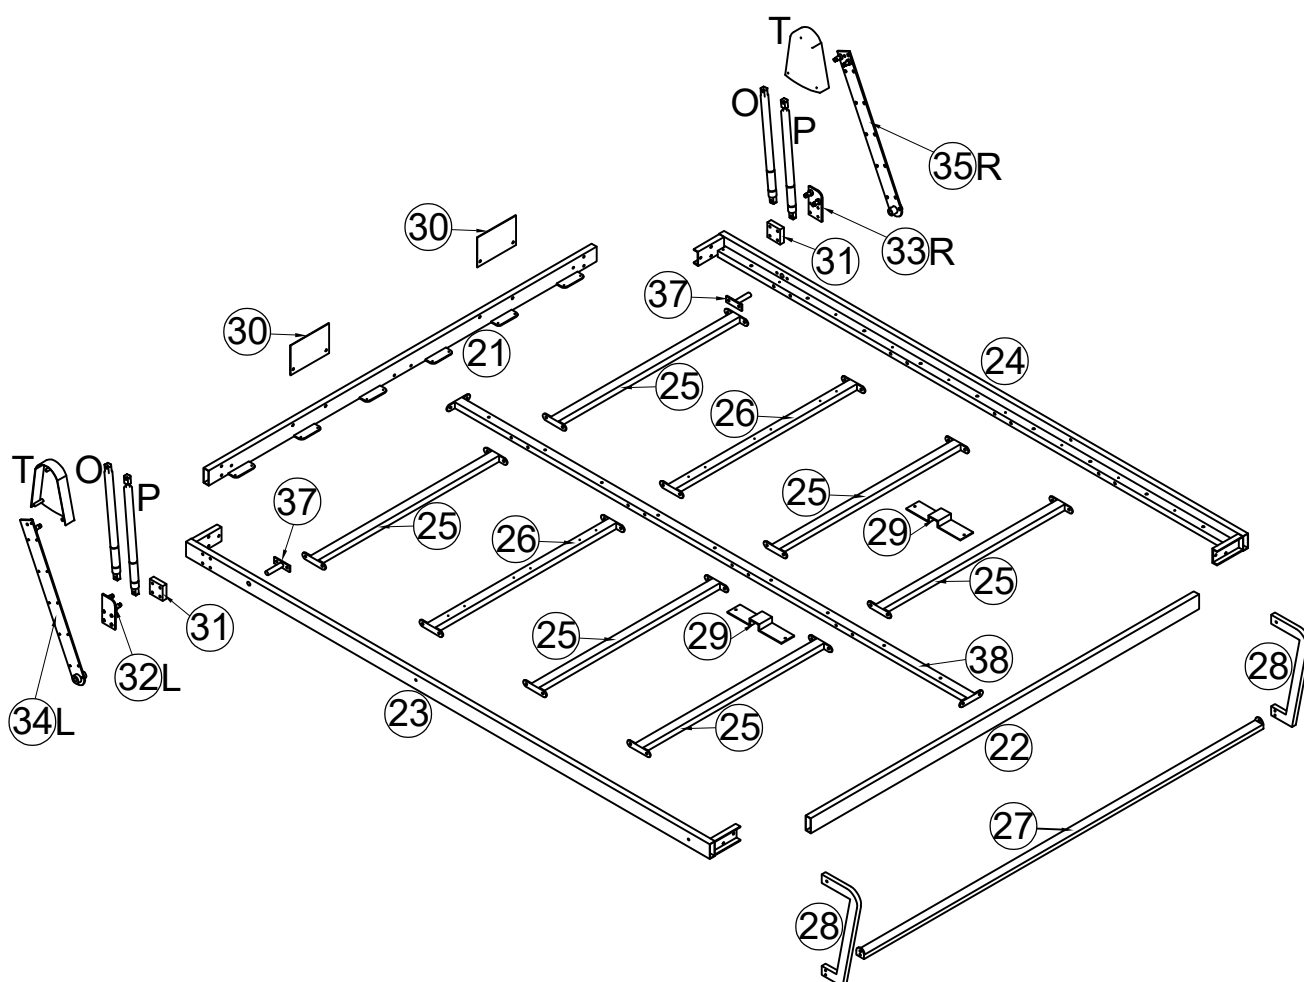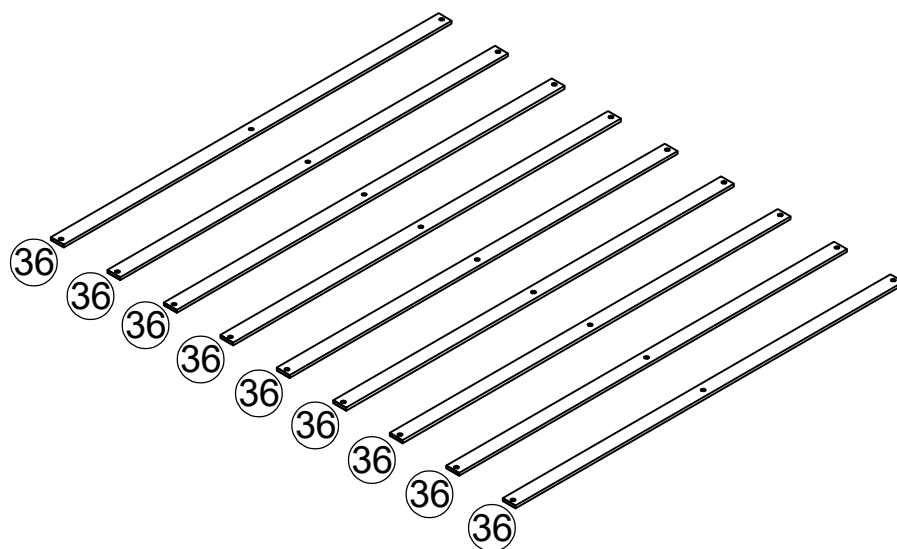

WARNING:

To avoid causing unnecessary troubles,
Please check whether the components with corresponding
numbers are installed correctly according to the diagram.

Parts

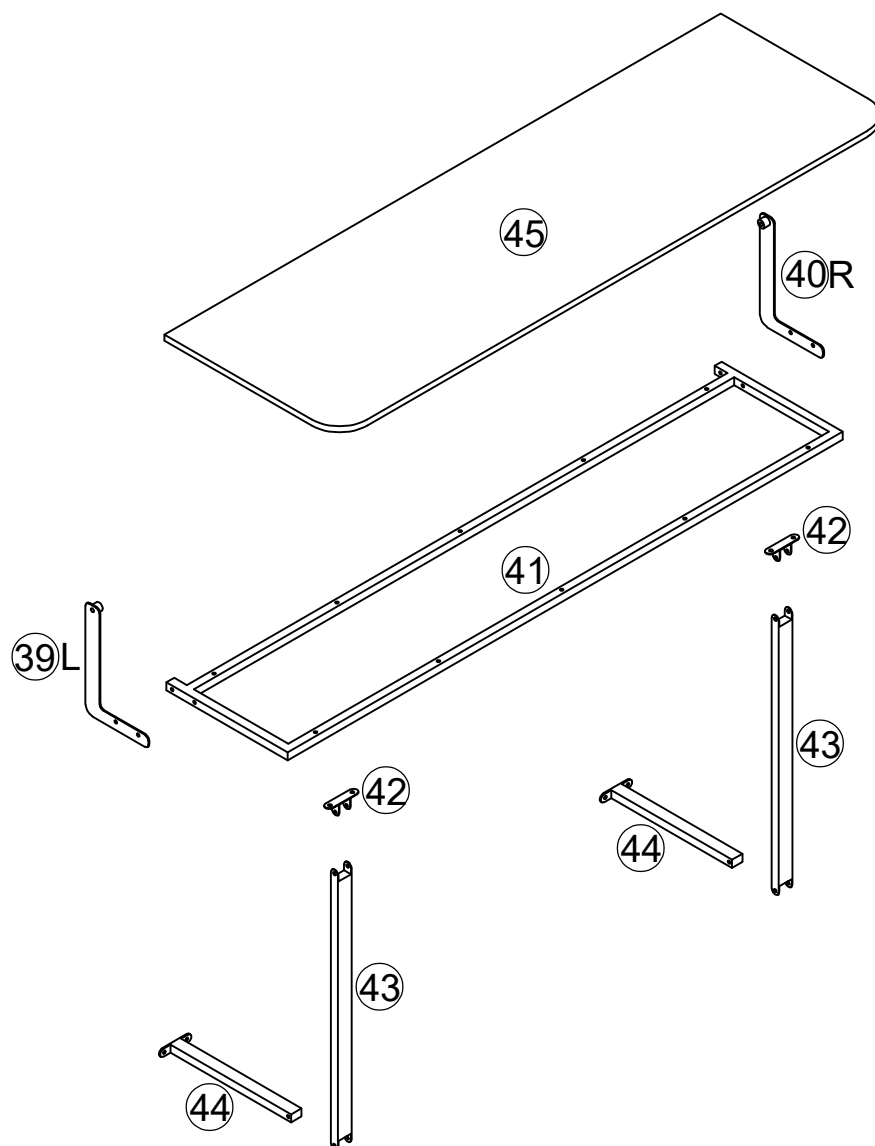


WARNING:

To avoid causing unnecessary troubles,
Please check whether the components with corresponding
numbers are installed correctly according to the diagram.


BOX:W1550P531152

①

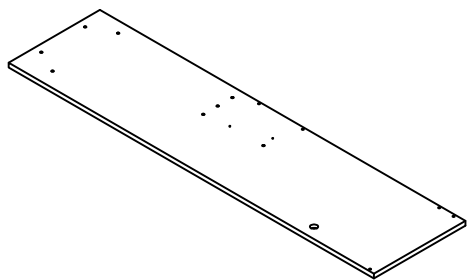


1600x400x18=1PC

②

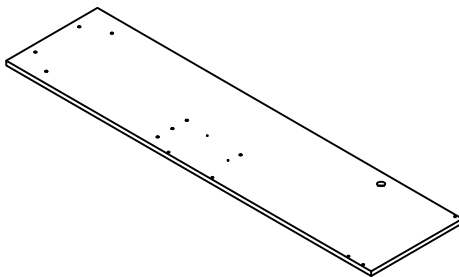


1600x400x18=1PC

⑤

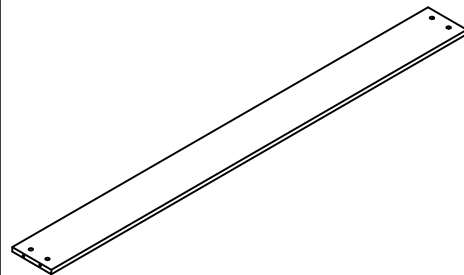


1600x150x15=1PC

⑥

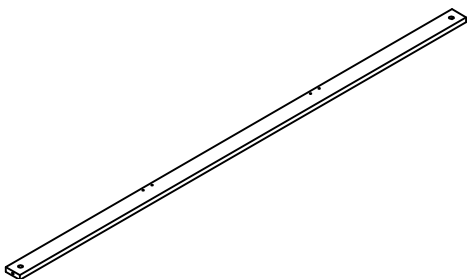


1600x50x15=1PC

⑧

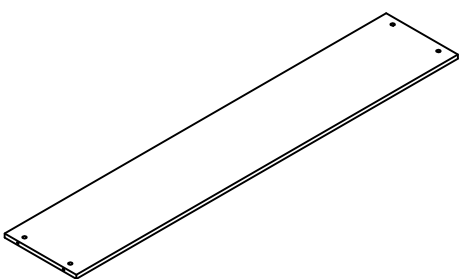


1600x300x15=1PC

⑨

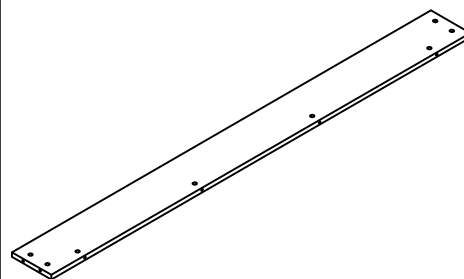


1600x150x15=1PC

⑩

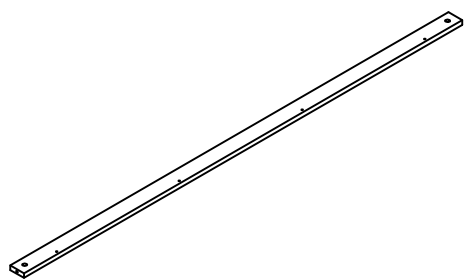


1600x50x15=1PC

⑪

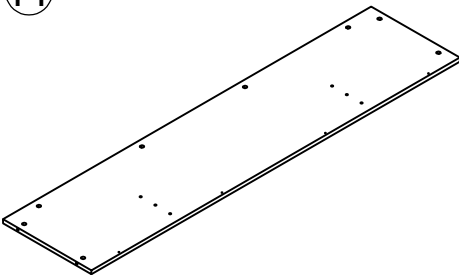


1600x384x15=1PC

⑬

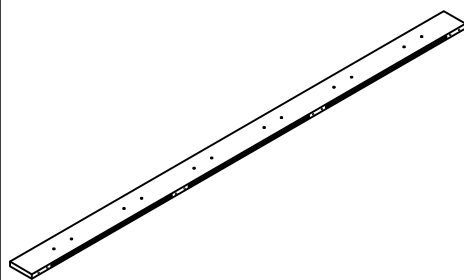

1586x80x15=2PCS


⑭

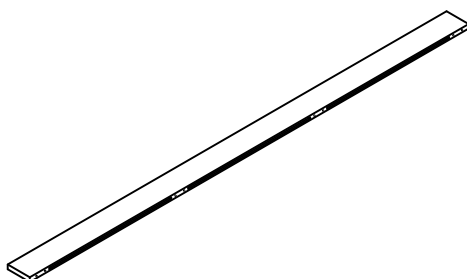

1586x80x15=1PC


BOX:W1550P531154

③

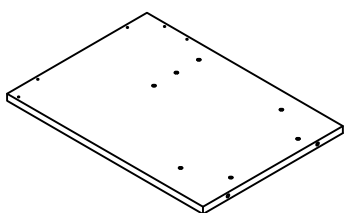


560x400x18=1PC

④

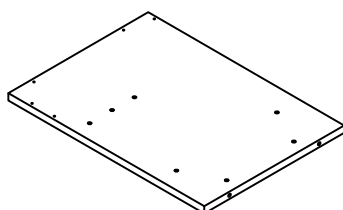


560x400x18=1PC

⑦

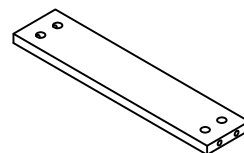


369x80x15=2PCS

⑫

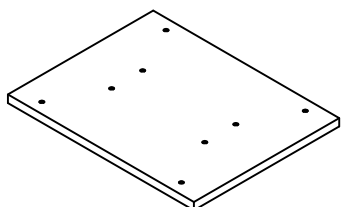


300x384x15=2PCS

⑮

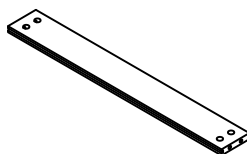


610x80x15=2PCS

⑯

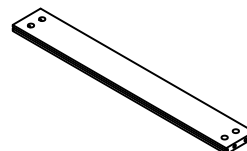


610x80x15=2PCS

⑰

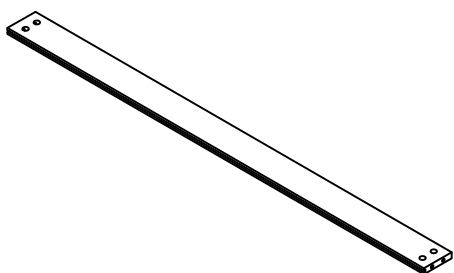


1190x80x15=2PCS

⑱

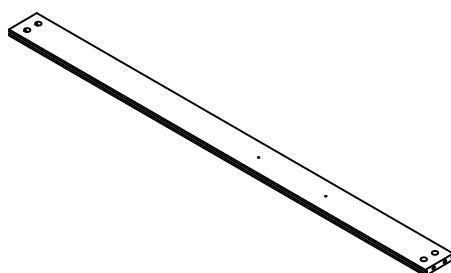


1190x80x15=2PCS

⑲

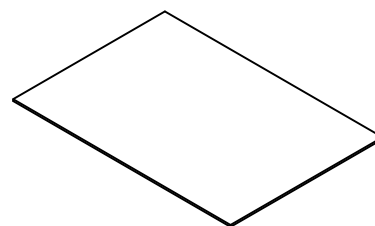




















622x434x5=3PCS

⑳



















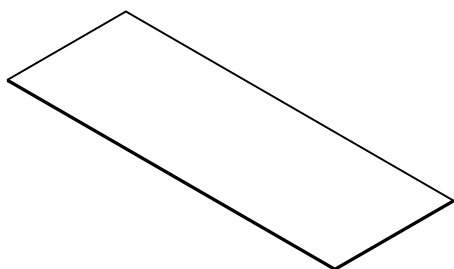


1202x434x5=3PCS














BOX:W1550P531156

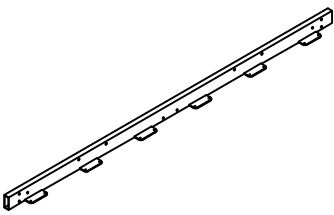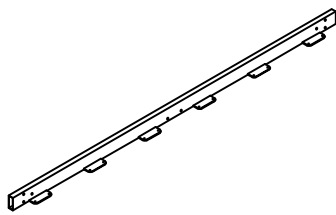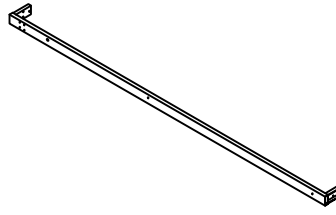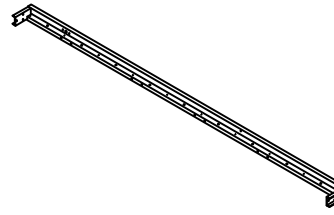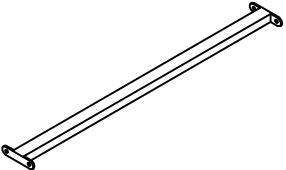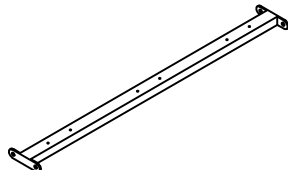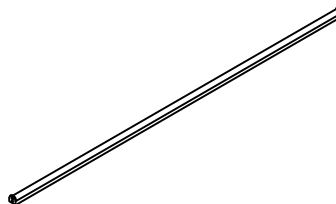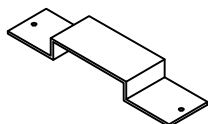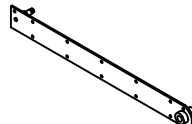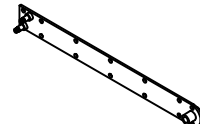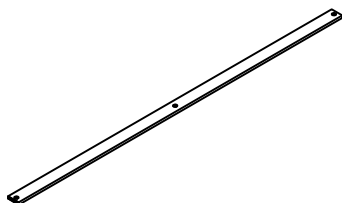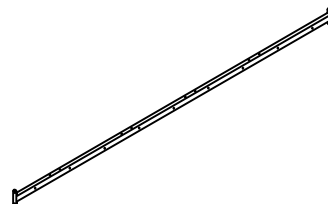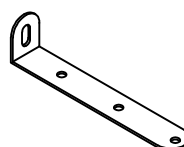21  1512x50x50=1PC	22  1512x50x50=1PC	23  2040x50x120=1PC	24  2040x50x120=1PC
25  711x90x20=6PCS	26  711x90x20=2PCS	27  1586x30x30=1PC	28  339x138x15=2PCS
29  210x50x23=2PCS	30  150x100x2=2PCS	31  50x50x15=2PCS	32L  =1PC
33R  =1PC	34L  =1PC	35R  =1PC	36  1510x50x10=9PCS
37  =2PCS	38  2000x90x20=1PC	39  180x40x30=6PCS	AB  Ø3.5 x 20=26pcs

BOX:W1550P531156

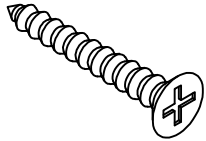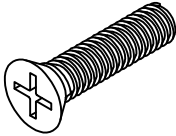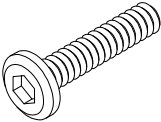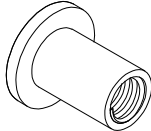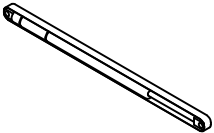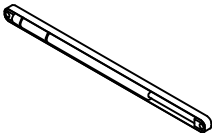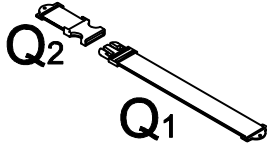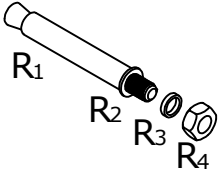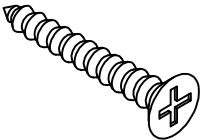A  Ø6 x 35=68pcs	B  Ø15 x 10=68pcs	C  Ø8 x 30=4pcs	D  Ø4 x 35=32pcs
E  Ø3.5 x 16=24pcs	F  Ø6 x 12=91pcs	G  Ø6 x 35=8pcs	H  Ø6 x 20=16pcs
I  Ø6 x 22=8pcs	J  Ø6 x 30=12pcs	K  Ø6 x 12=12pcs	M  M10 x 20 x 2=12pcs
O  300-550=2pcs	P  300-450=2pcs	Q  =1pc	R  M8 x 80=6pcs
S  M8 =8pcs	T  =2pcs	U  =2pcs	V  Ø4 x 22=4pcs
X  Ø3.5 x 30=6pcs	Y  =1pc	Z  =2pcs	AA  =1pc


BOX:W1550P530967

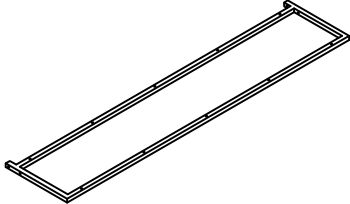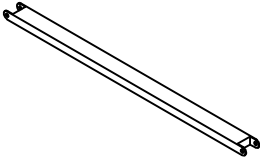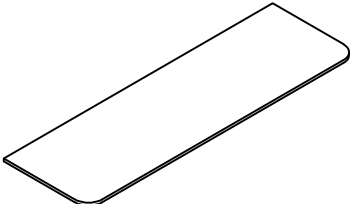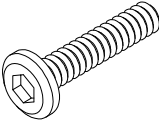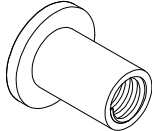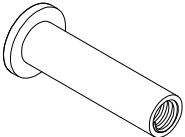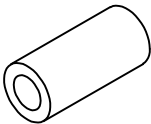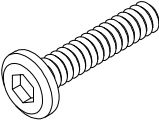③9L  317x180x21=1PC	④0R  317x180x21=1PC	④1  1587x346x20=1PC	④2  90x33x20=2PCS
④3  692x40x20=2PCS	④4  348x90x20=2PCS	④5  1594x500x15=1PC	
F  Ø6 x 12=12pcs	H  Ø6 x 20=4pcs	J  Ø6 x 30=10pcs	K  Ø6 x 12=4pcs
L  Ø6 x 43=4pcs	N  M8 x 2=12pcs	W  Ø8.2 x 30=2pcs	AC  Ø6 x 35=2pcs

Using Camlocks(Single head cam)


STEP1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

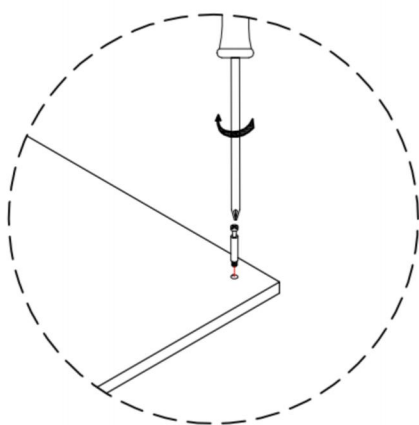

STEP2


Push the male camlock into the entry hole.

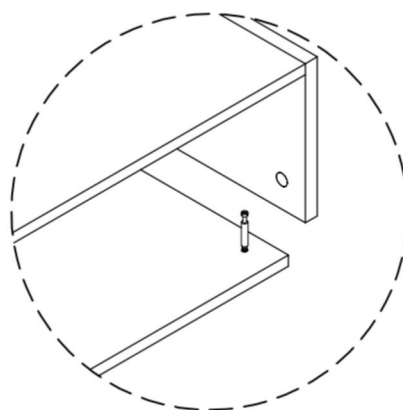

STEP3


Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

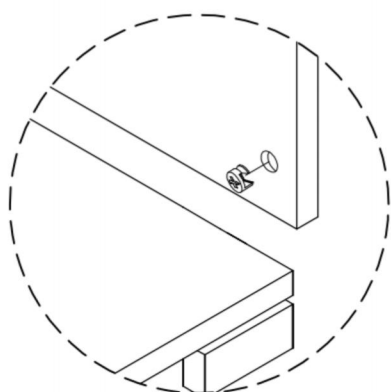


STEP4

Turn the female camlock 180 degrees clockwise with a screwdriver to complete the locking.

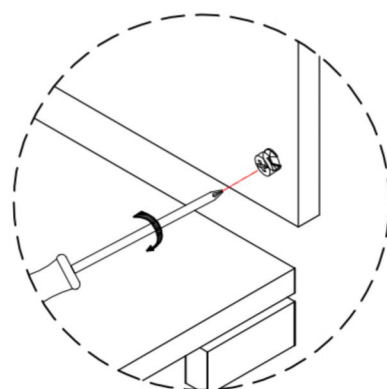

STEP1


Tools used



ATTENTION:


This step involves similar panel components
To prevent assembly errors, please carefully
verify the positional relationship of the hole
positions in the enlarged diagram.

Also make sure that 1# attaches to 3# to 12#, and 2# attaches 4# to 12#.

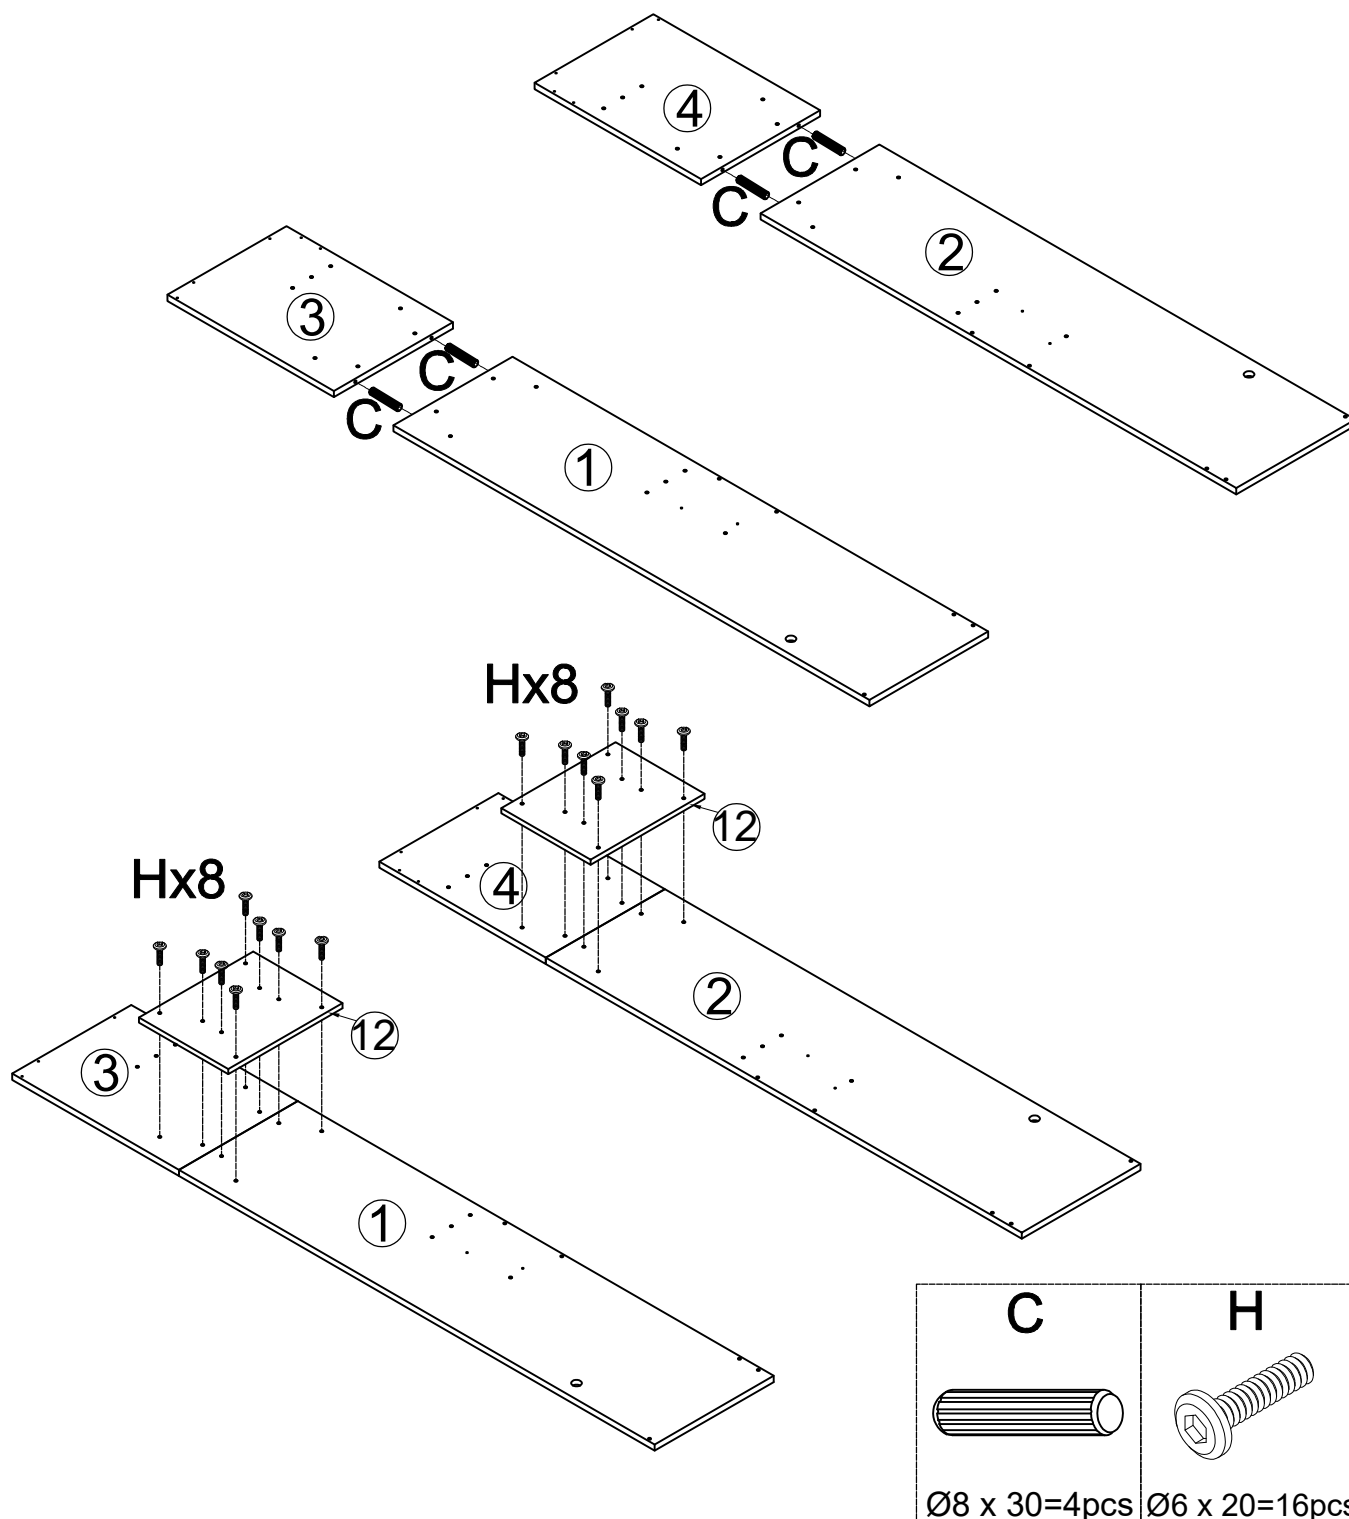


STEP2

Tools Required

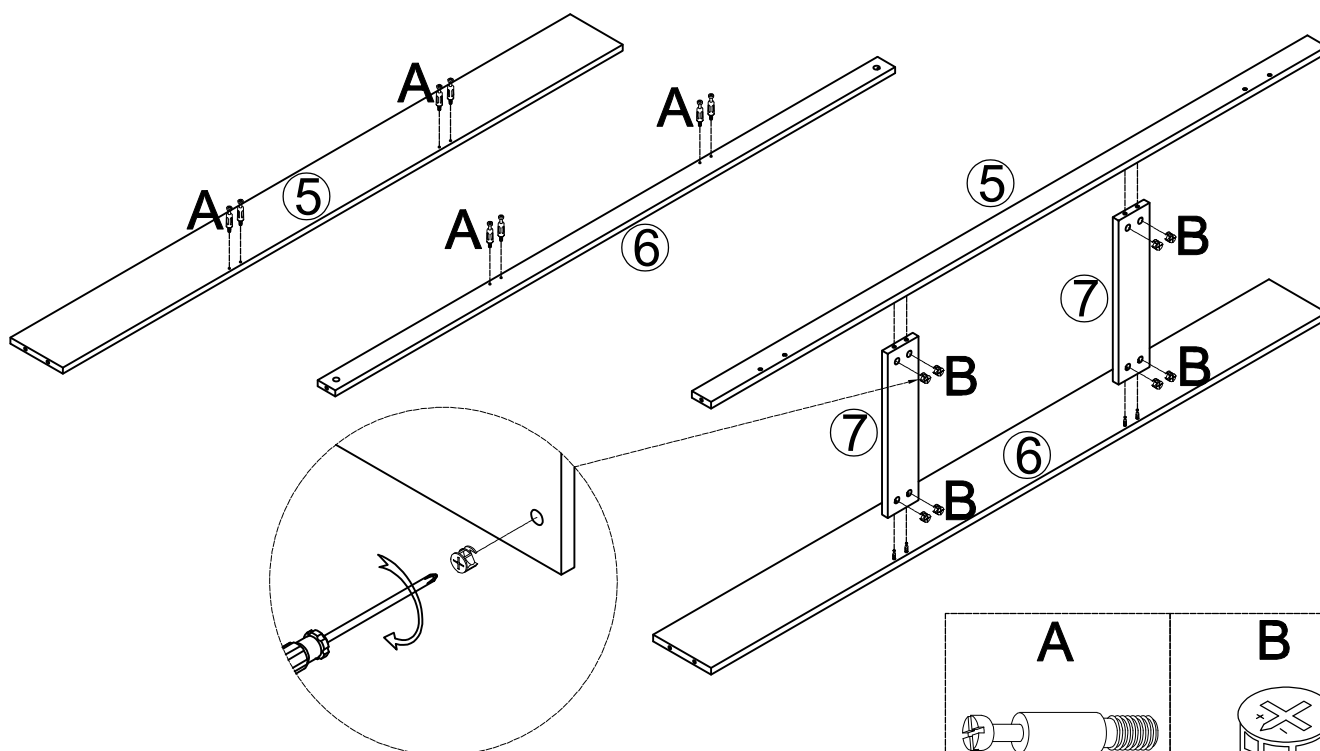

A	B
Ø6 x 35=8pcs	Ø15 x 10=8pcs

STEP3

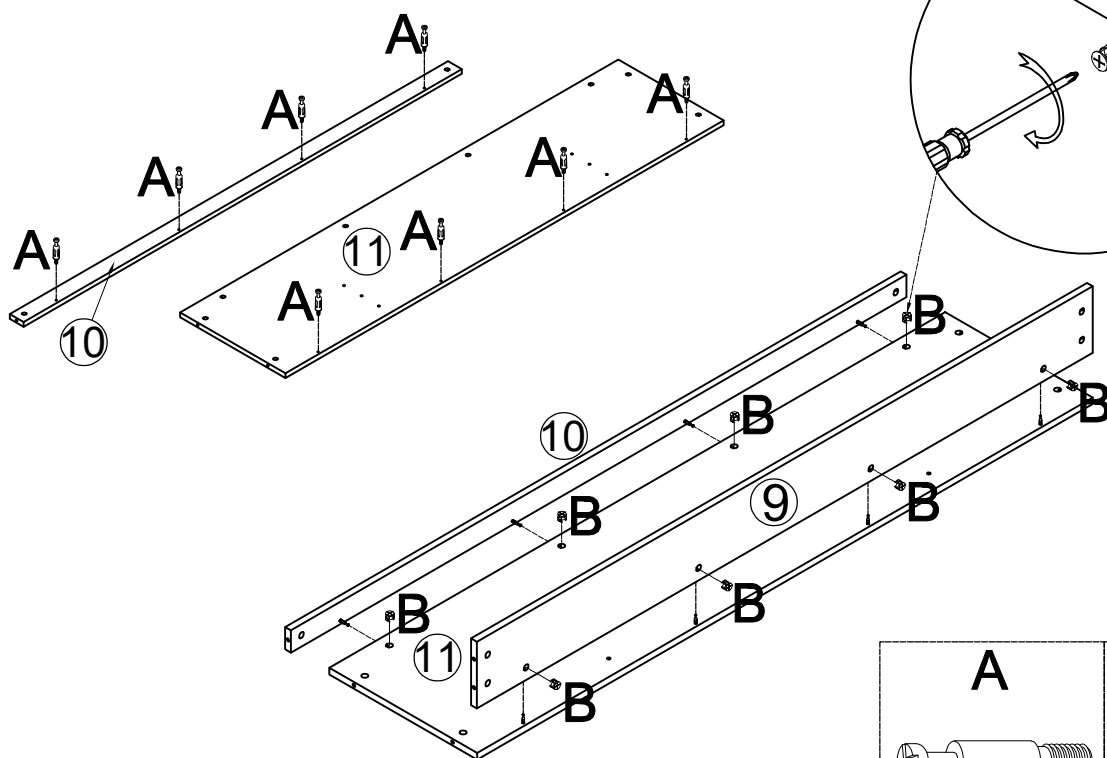

A	B
Ø6 x 35=8pcs	Ø15 x 10=8pcs



STEP4

Tools Required



ATTENTION:

There are quite a few components to be installed in this step.
Please pay attention to checking whether all components are complete!
Put them together in the right position before fastening the screws!

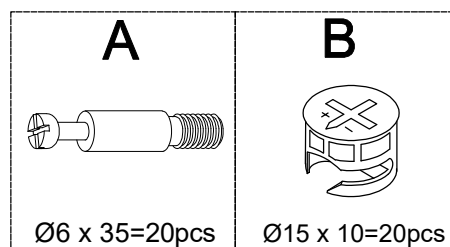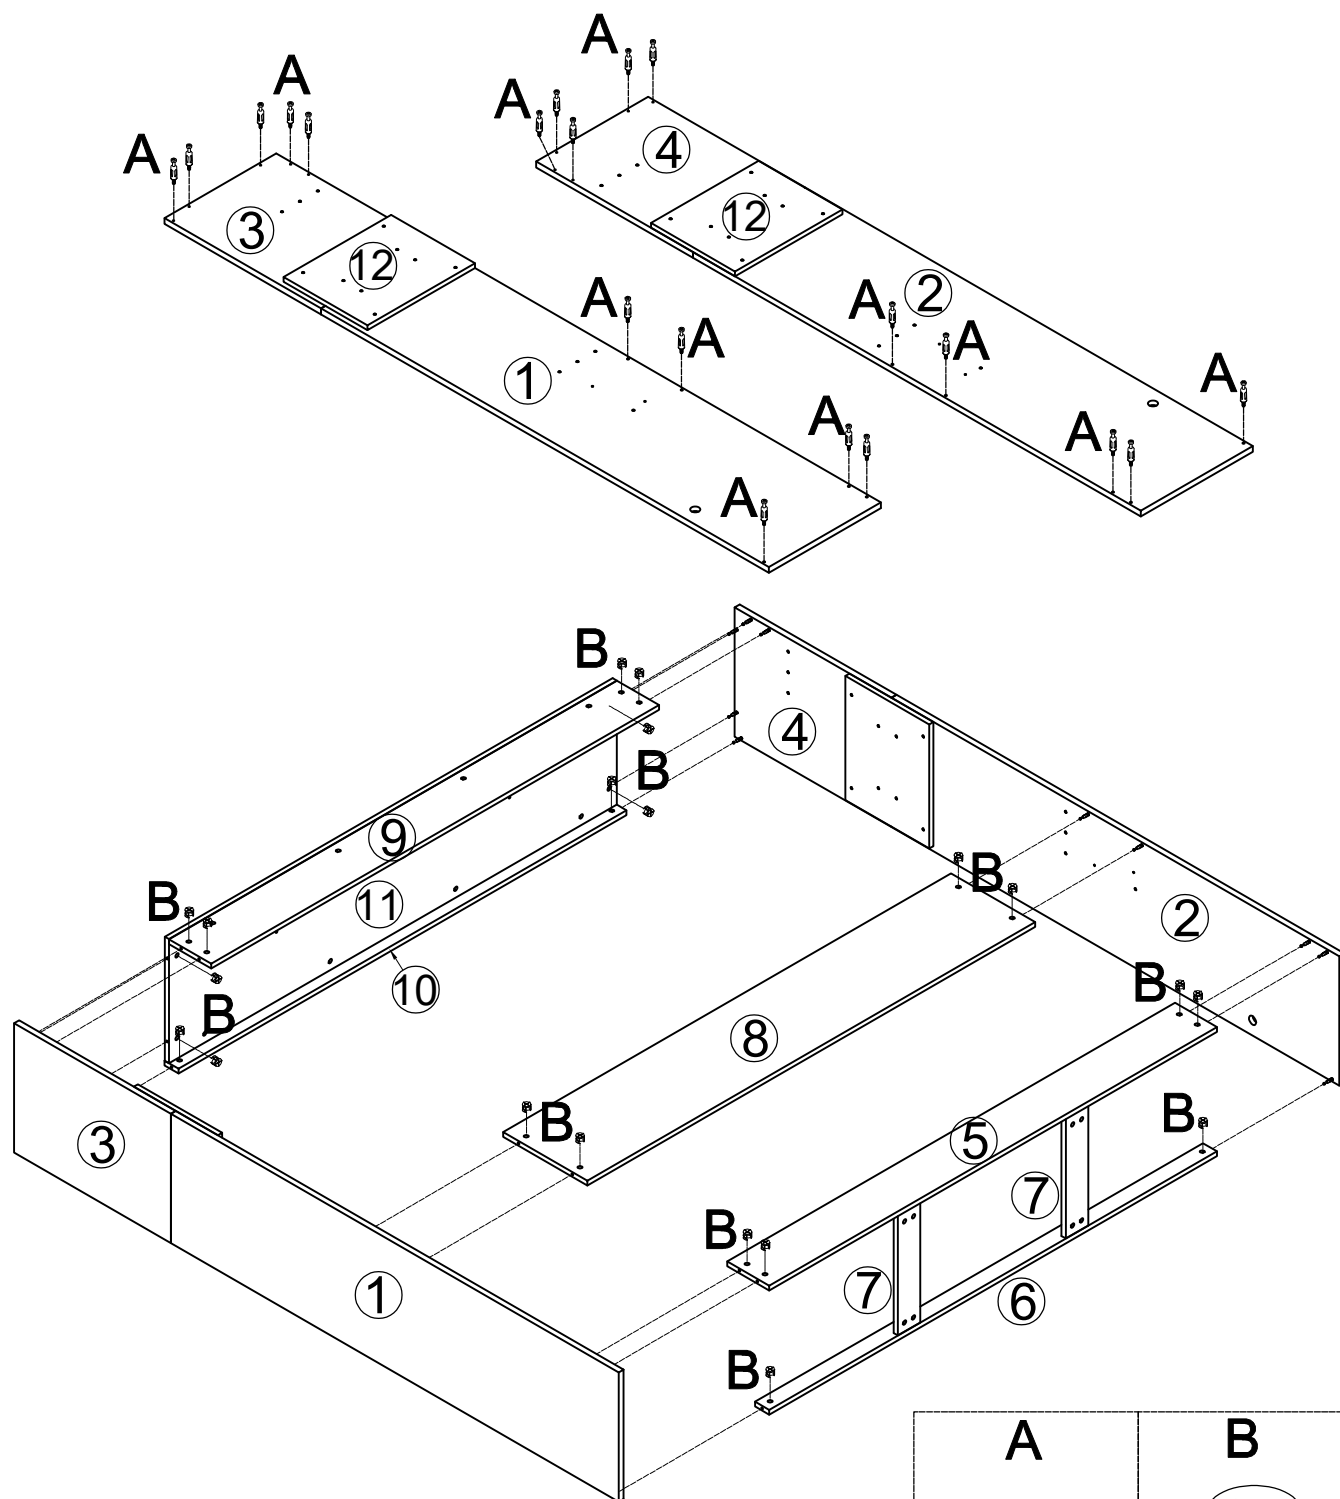



M WALL ANCHORING REQUIREMENTS & INSTALLATION RECOMMENDATIONS

Important information to read before starting the assembly.
Keep this information for future reference.



IMPORTANT WARNINGS

Risk of serious injuries if the wall bed tips over. To prevent wall bed from tipping over, mount it permanently to the wall. Only a qualified person² must carry out the installation and any possible adjustment of the wall bed (including disassembly). If the wall bed is not firmly mounted (anchored) to the wall, it might tip over and cause serious injuries to the installer, users of the bed as well as the people near the bed. The choice of wall anchoring depends on the type of wall, Use wall anchors suitable for the wall material.

Qualified person, it is necessary to have a good understanding of the wall structure where the bed is anchored, including the positioning of the wall studs and structural components in the case of a wood or metal structure. If you do not have the necessary skills, make sure that the wall anchoring is done by someone who has the qualifications and required knowledge. When you choose the installer, make sure to comply with all applicable regulations in the province, state or country where the furniture is installed.



IMPORTANT WARNINGS

INSTALLATION AND APPROPRIATE HARDWARE

Using appropriate hardware, all the anchor screws of the wall bed must be firmly secured to the wood or metal studs, the structural components, or a masonry wall.

Only wall anchor screws for wood-frame walls are provided with this bed.

NEVER USE DRYWALL ANCHOR SCREWS OR SECURE THE BED TO DRYWALL

See wall anchoring requirements and installation notes provided in the instruction manual, according to the type of wall, and use the appropriate anchors such as described in this manual.

NUMBER OF SCREWS NEEDED

Two (2) screws are required for each anchor point. Four (4) wall anchor points are necessary for the proper installation of the wall bed. So you need a total of eight (8) wall anchor screws.

THE SCREWS MUST BE VERY WELL ANCHORED TO THE STRUCTURAL COMPONENTS OF THE WALL.

²A CERTIFIED CONSTRUCTION PROFESSIONAL, IN COMPLIANCE WITH APPLICABLE REGULATIONS IN THE PROVINCE, STATE OR COUNTRY WHERE THE FURNITURE IS INSTALLED.



SAFETY FIRST: WALL ANCHORING IS NON-NEGOTIABLE

MURPHY BEDS MUST BE SECURELY ANCHORED TO STRUCTURAL MEMBERS. NEVER MOUNT SOLELY TO DRYWALL. IMPROPER INSTALLATION CAN CAUSE SERIOUS INJURY OR DEATH.


ABSOLUTELY FORBIDDEN HARDWARE



PLASTIC ANCHORS - WILL FAIL

A. WOOD STUD WALL


HOW TO IDENTIFY

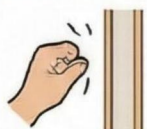

KNOCK ON A
HOLLOW WALL



STUD FINDER
TOOL (WITS)

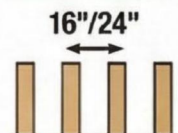


STUDS SPACED
IS 16" STUD

REQUIRED HARDWARE




HEAVY-DUTY SCREWS (MIN. 5/32" DIA., 2.5" LONG)

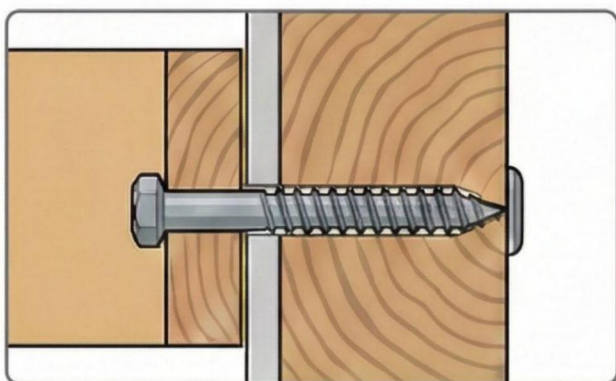

MUST PENETRATE WOOD STUD CENTER AT LEAST 2.5"

B. MASONRY/CONCRETE WALL

HOW TO IDENTIFY

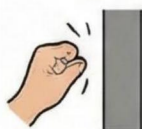

KNOCK ON A
SOLID WALL




DRILL BIT CREATES
GREY/RED DUST

REQUIRED HARDWARE



ALL-METAL EXPANSION BOLTS
(MIN. 5/32" DIA., 2.5" LONG)

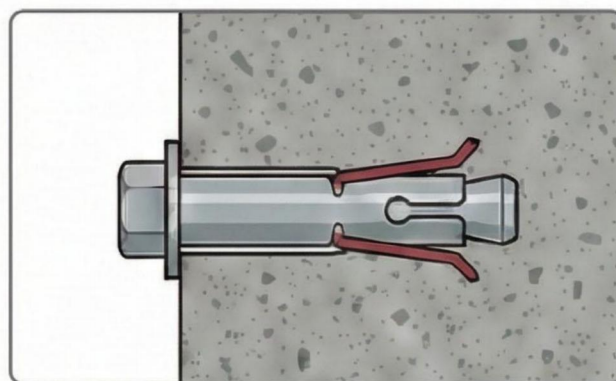

CLEAN HOLE OF DUST. **DO NOT** USE PLASTIC.

FINAL SAFETY CHECKLIST



VERIFY STUD CENTER BEFORE DRILLING



ENSURE FLUSH WALL FIT (ADJUST BASEBOARD)



PERFORM PULL TEST BEFORE MATTRESS LOAD



AVOID HIDDEN WIRES/PIPES BEFORE DRILLING



REGULARLY INSPECT AND MAINTAIN WALL ANCHORS



CONSULT A PROFESSIONAL FOR WALL ASSESSMENT
AND OPTIMAL HARDWARE; CUSTOMER ASSUMES
ALL INSTALLATION LIABILITY

STEP5



Tools Required



WARNING:


There is a risk of serious injury due to the wall-mounted bed tipping over.

To prevent the wall-mounted bed from tipping over, it must be permanently secured to a brick wall. If the wall structure is not masonry, qualified professionals are required to perform the wall anchoring.

1.


Use a marker pen, a tape measure, and a spirit level to mark positions on the brick wall according to the positions shown in the diagram. Use an electric drill to create 6 A holes at the marked positions; Hole A has a diameter of 0.4 inches and a depth of 3.6 inches;

BRICK WALL


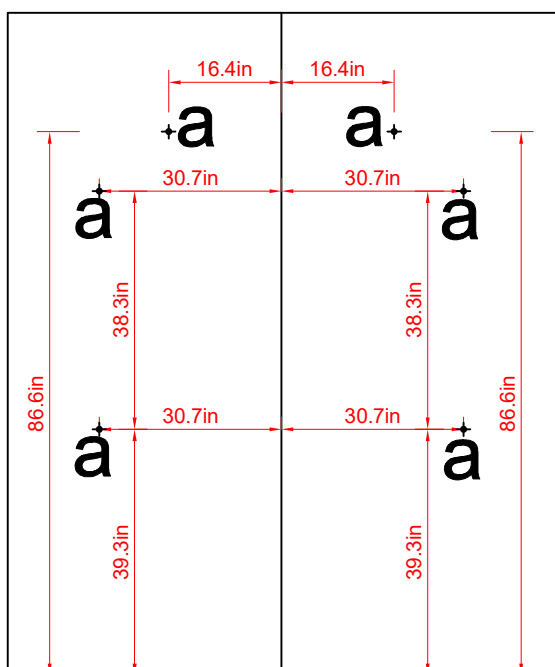


Pre-embedded Hole
Location Diagram of the
Wall

STEP6




Tools Required

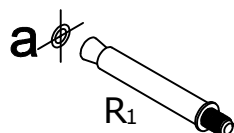


2.

Gently tap the No. R expansion bolts into the holes with a hammer until 0.04 inches are exposed outside. Use an adjustable wrench to tighten the nuts on the expansion bolts clockwise with force. Use an adjustable wrench to remove the nuts and anti-slip washers from the expansion bolts.

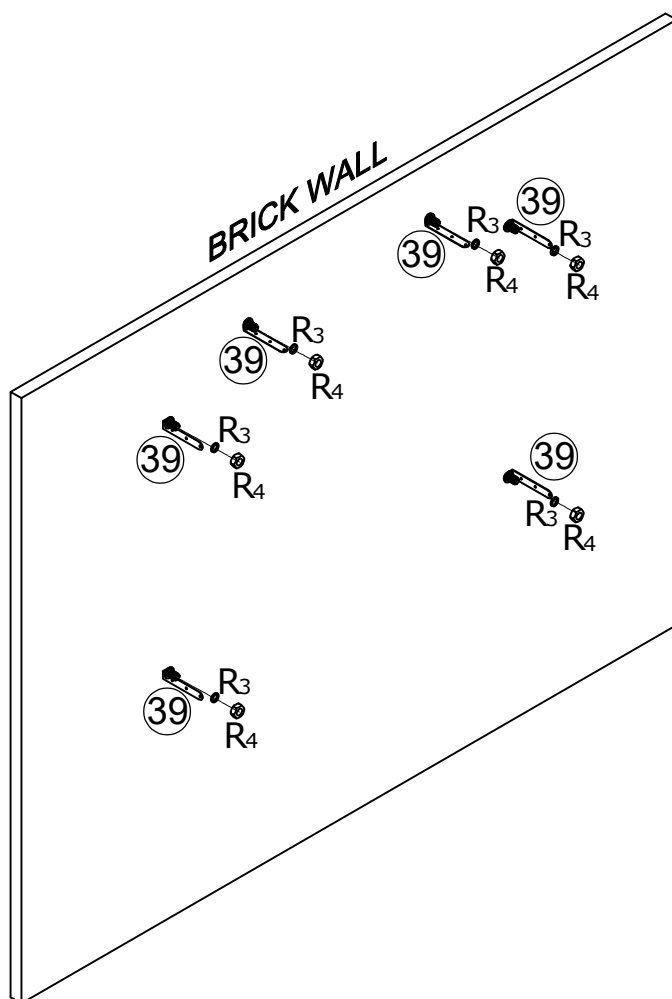

3,

Please install the No. 39 iron part strictly according to the direction shown in the diagram.

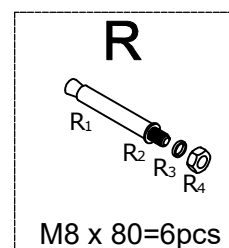



STEP7



WARNING

For your safety

This step requires at least 4 people to complete together. One person is responsible for observing and guiding the moving direction of the cabinet body; two people respectively cooperate on both sides of the cabinet body to move it to the accurate position; and one person is responsible for keeping it upright to prevent the cabinet body from tipping over.

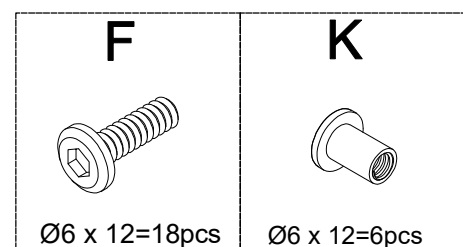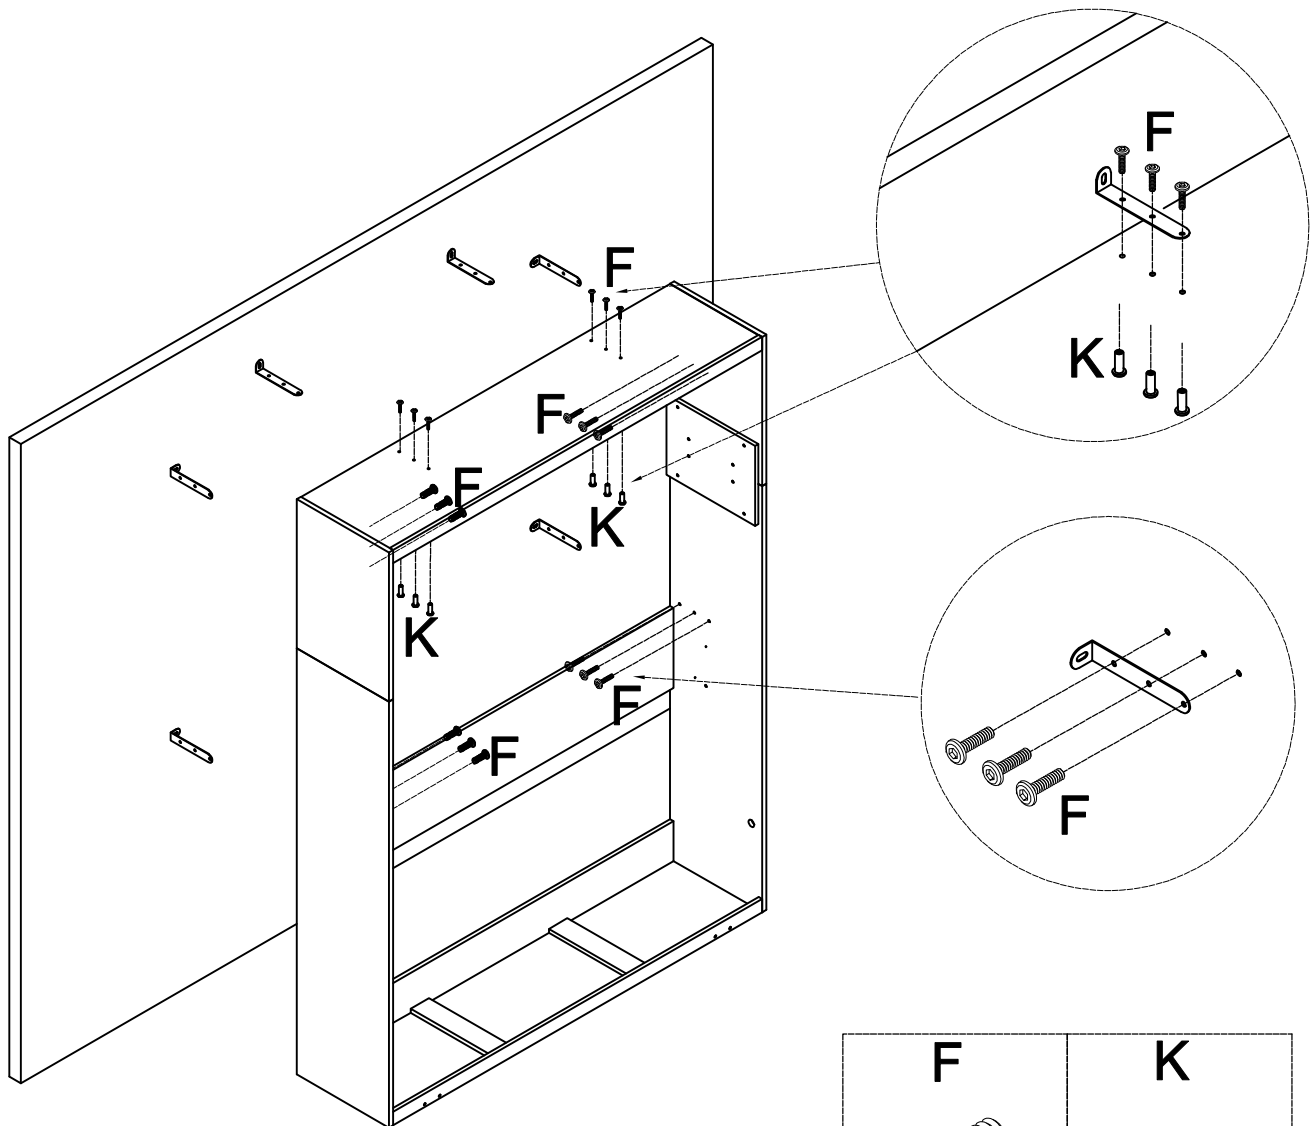

STEP8


Tools Required



ATTENTION:


This step involves similar panel components. To prevent assembly errors, please carefully distinguish the installation positions according to the component numbers

1, Pay attention to the installation direction


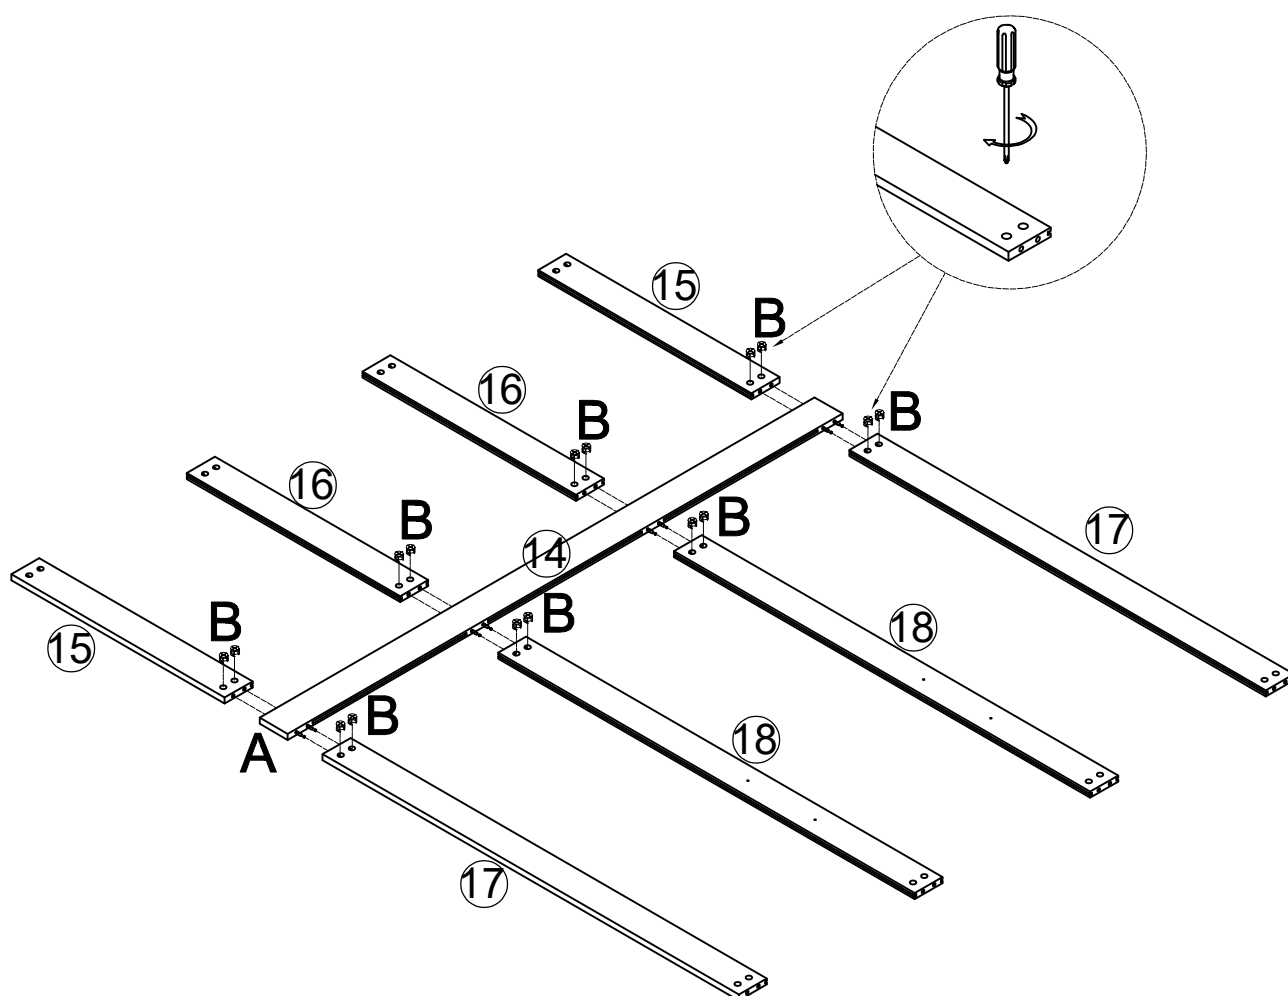


A	B
 Ø6 x 35=16pcs	 Ø15 x 10=16pcs



2, Slots

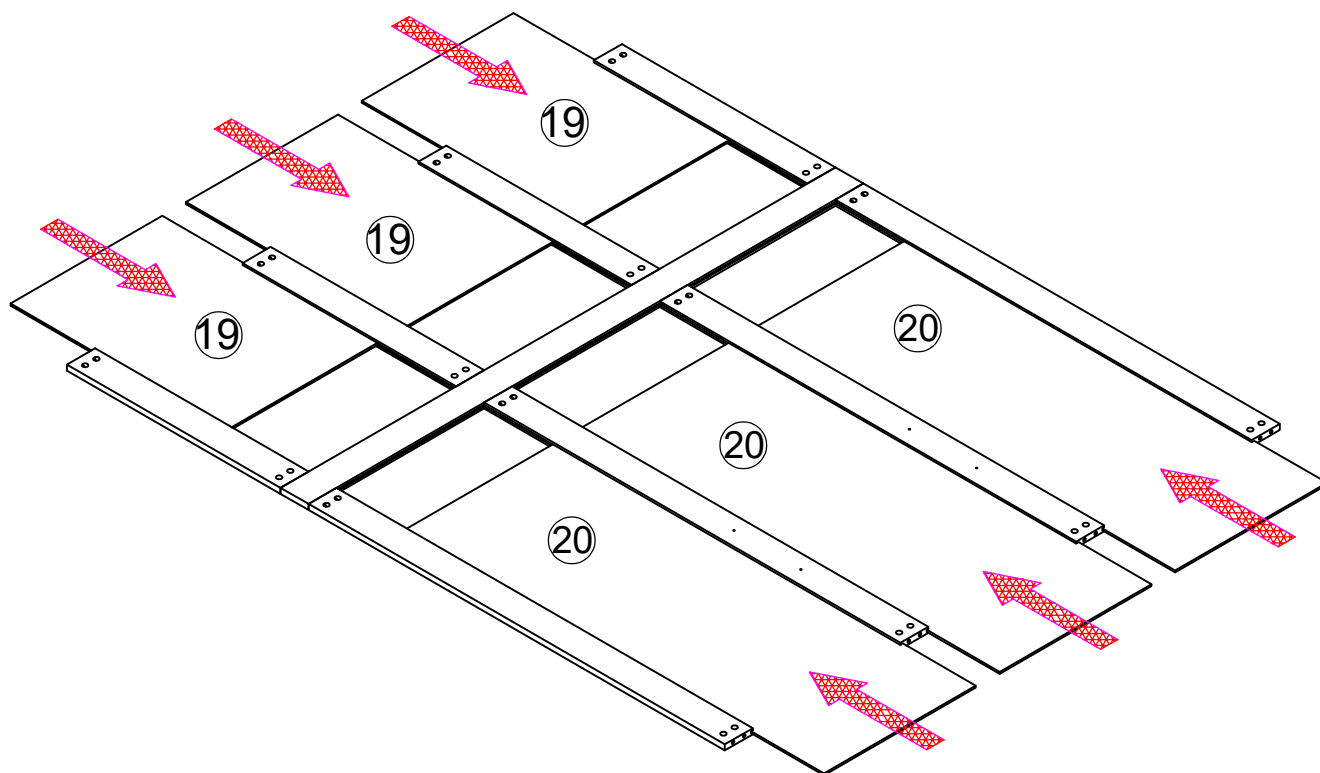


3,

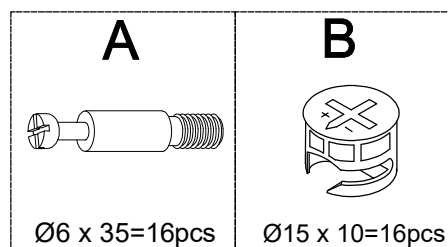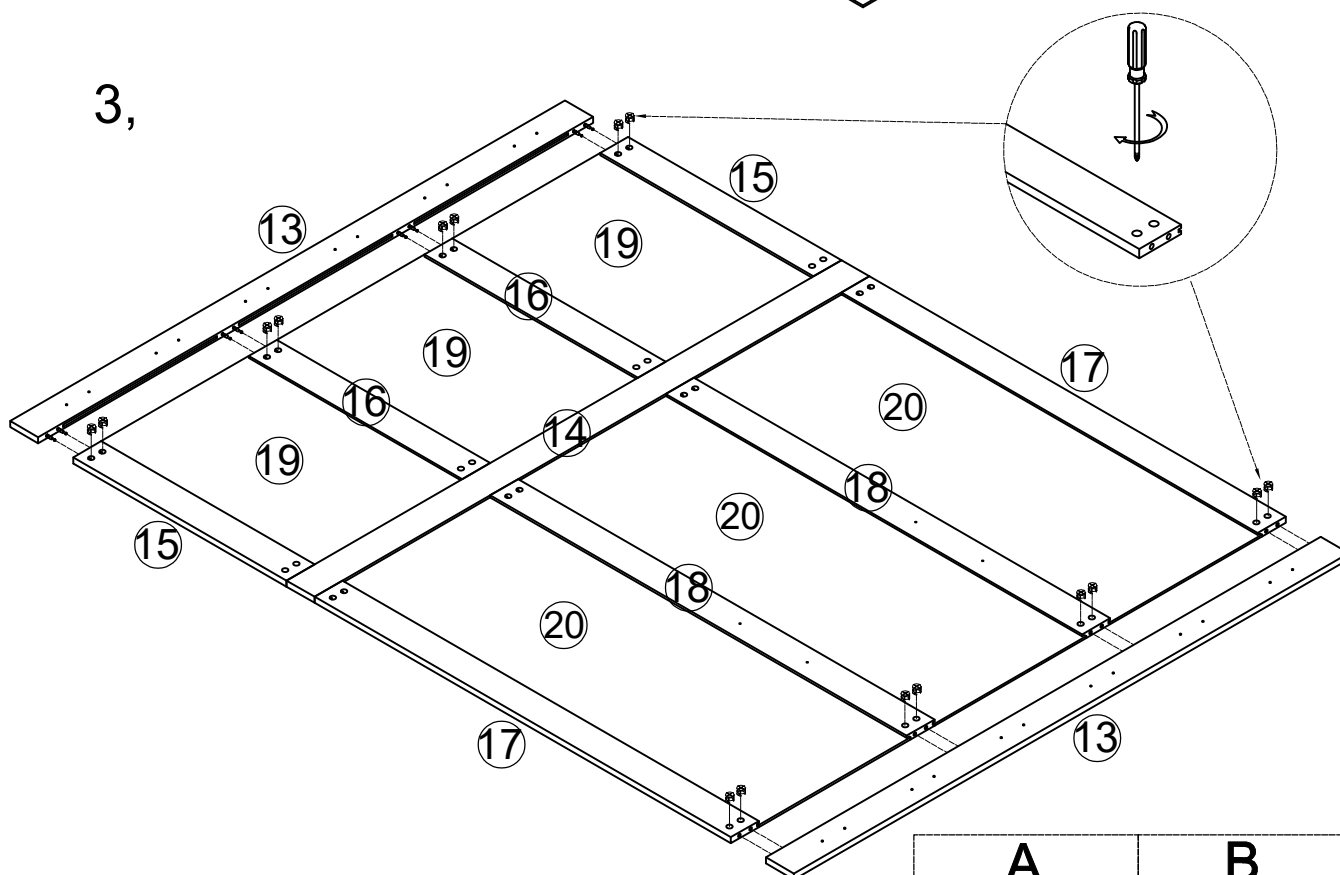


STEP9

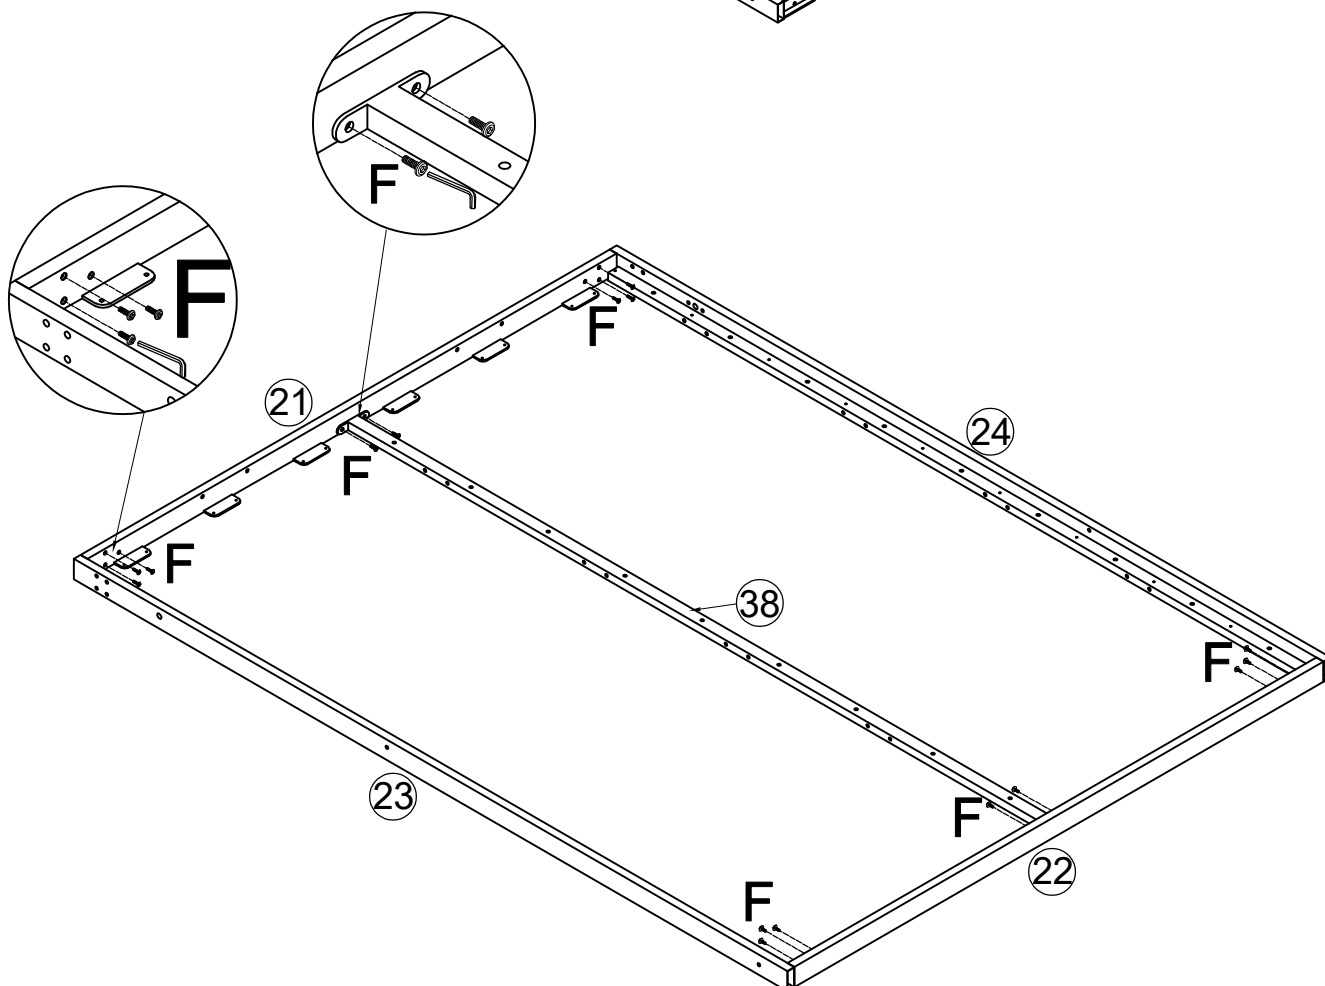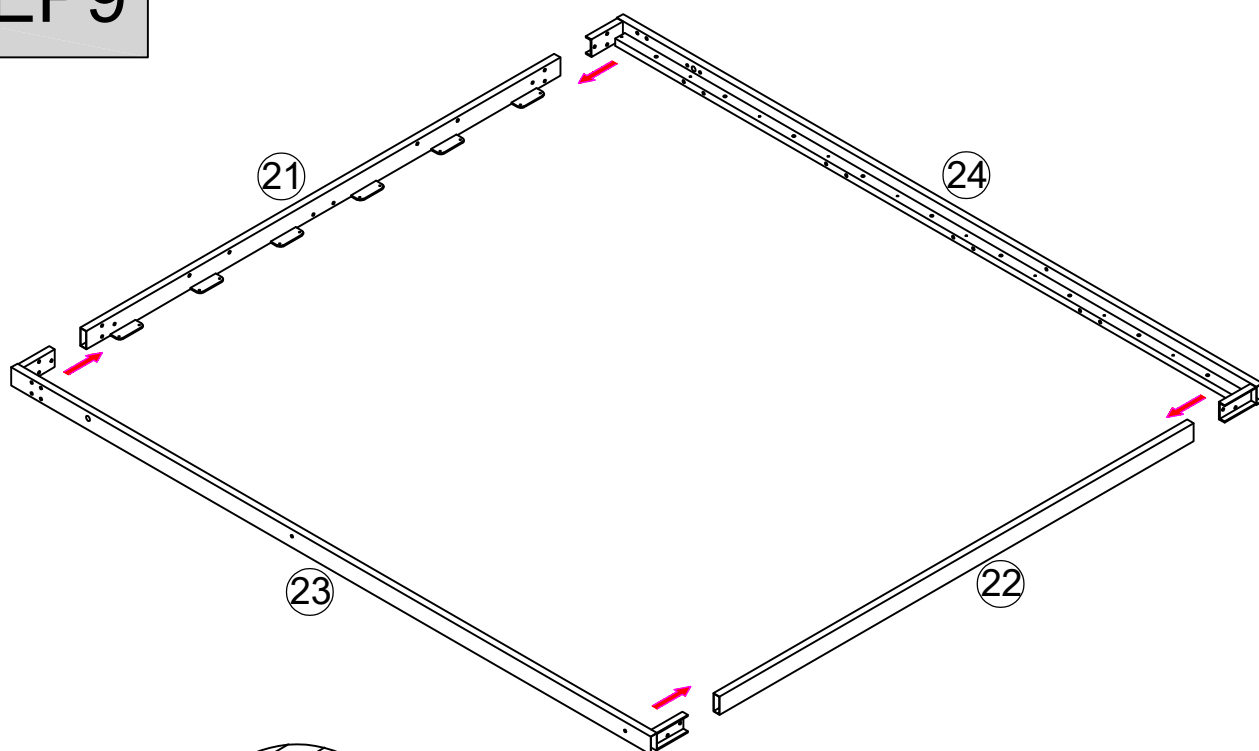

To prevent incorrect installation, please strictly install Panel 38# in the direction shown in the diagram.

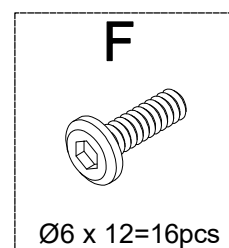






STEP10

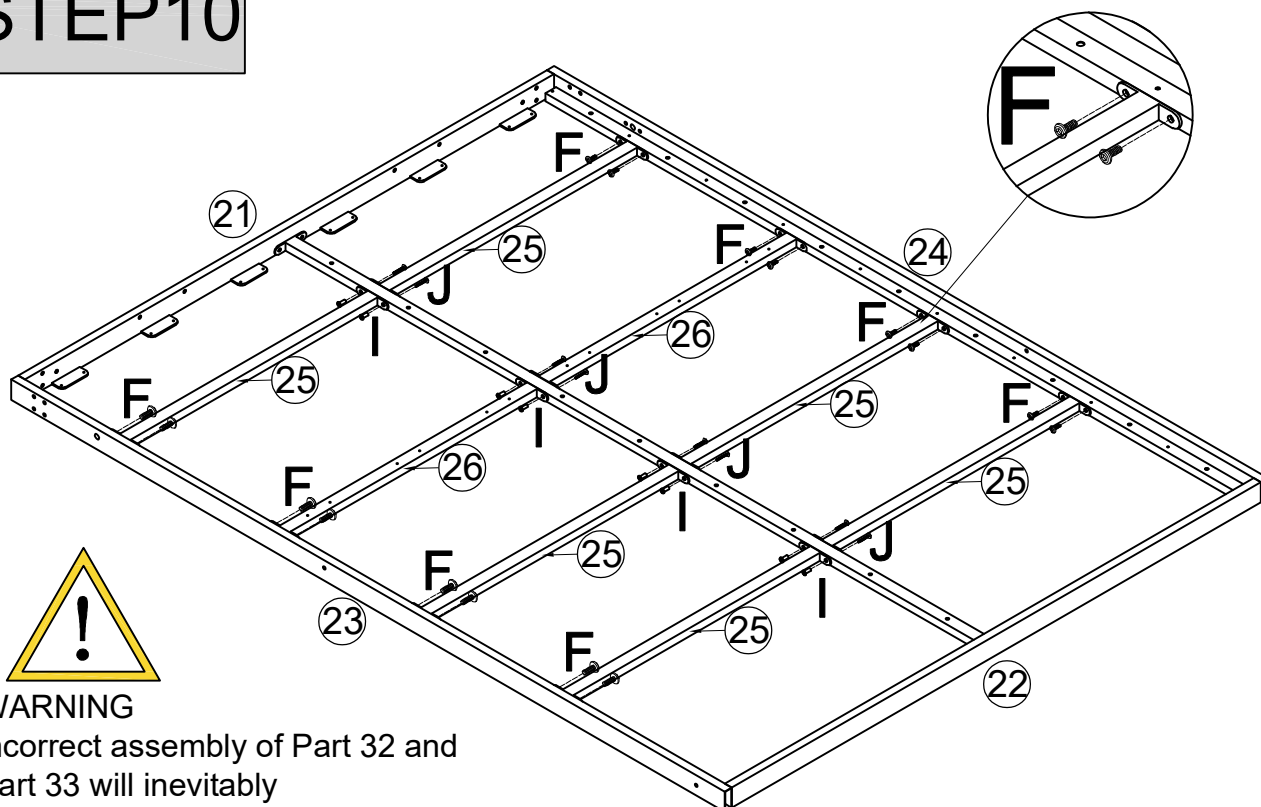

WARNING


Incorrect assembly of Part 32 and Part 33 will inevitably causedamage to the product during use. Please carefully check whether their installation position and direction are consistent with the diagram.

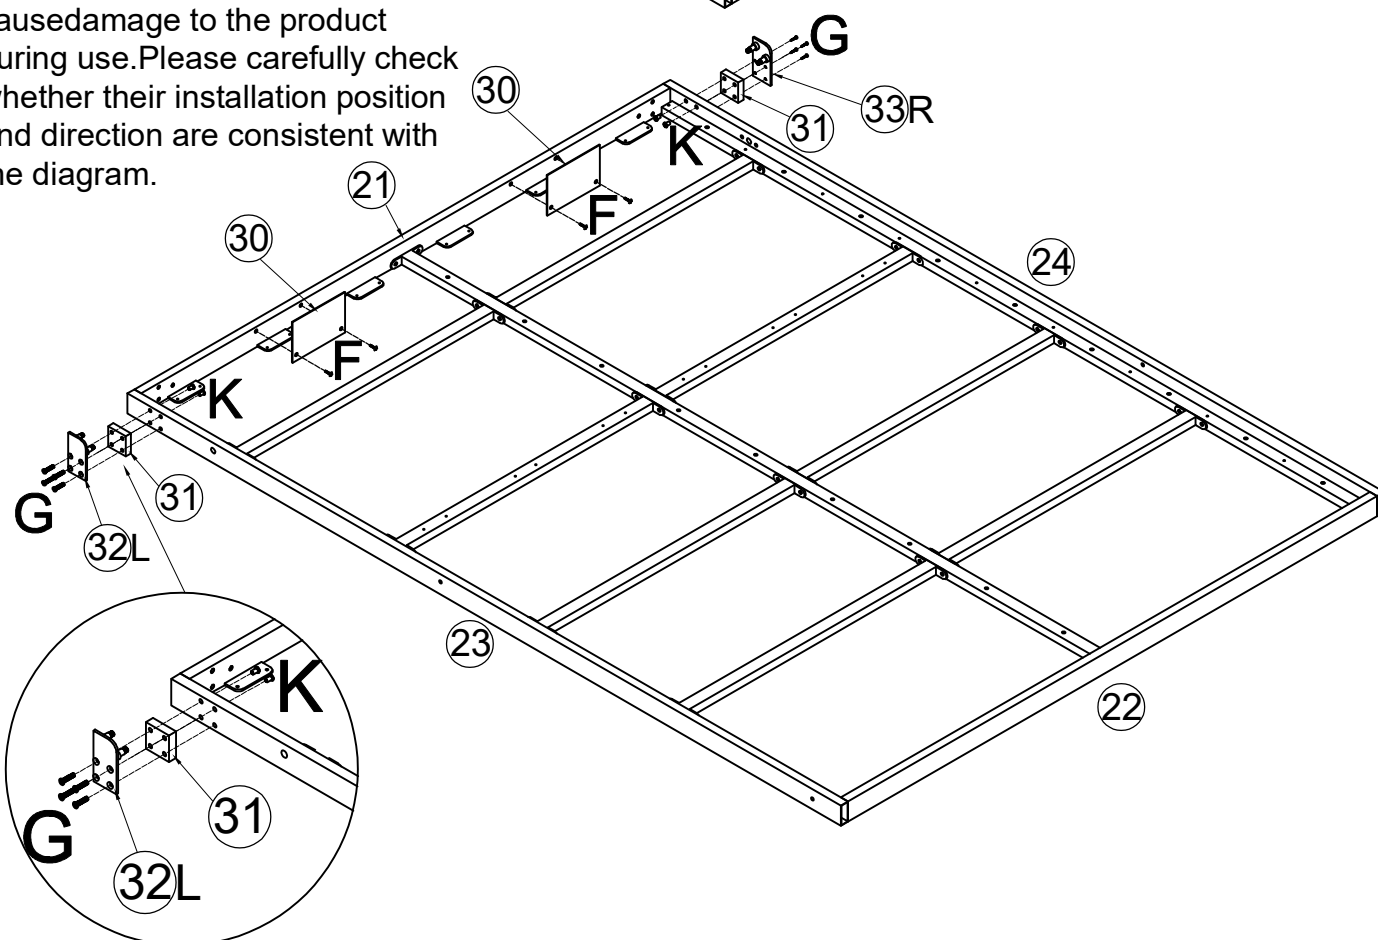

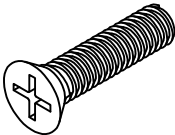

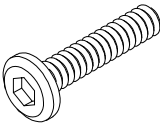
F	G	I	J	K
				
Ø6 x 12=20pcs	Ø6 x 35=8pcs	Ø6 x 22=8pcs	Ø6 x 30=8pcs	Ø6 x 12=4pcs

STEP11


Tools Required


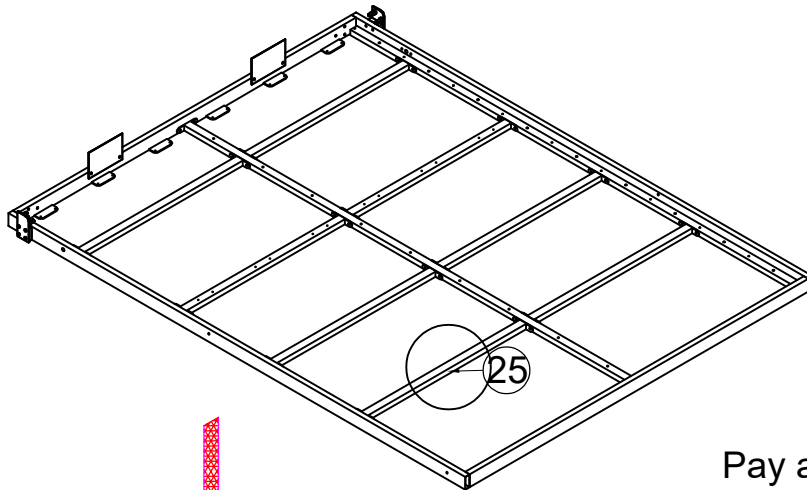


Pay attention to the installation direction. Especially 18# has two guide holes to install 29# stretch across 25#

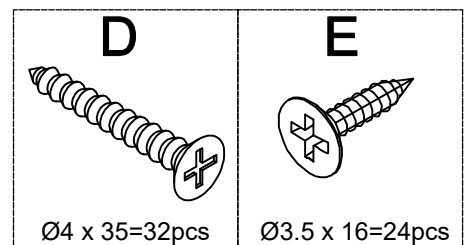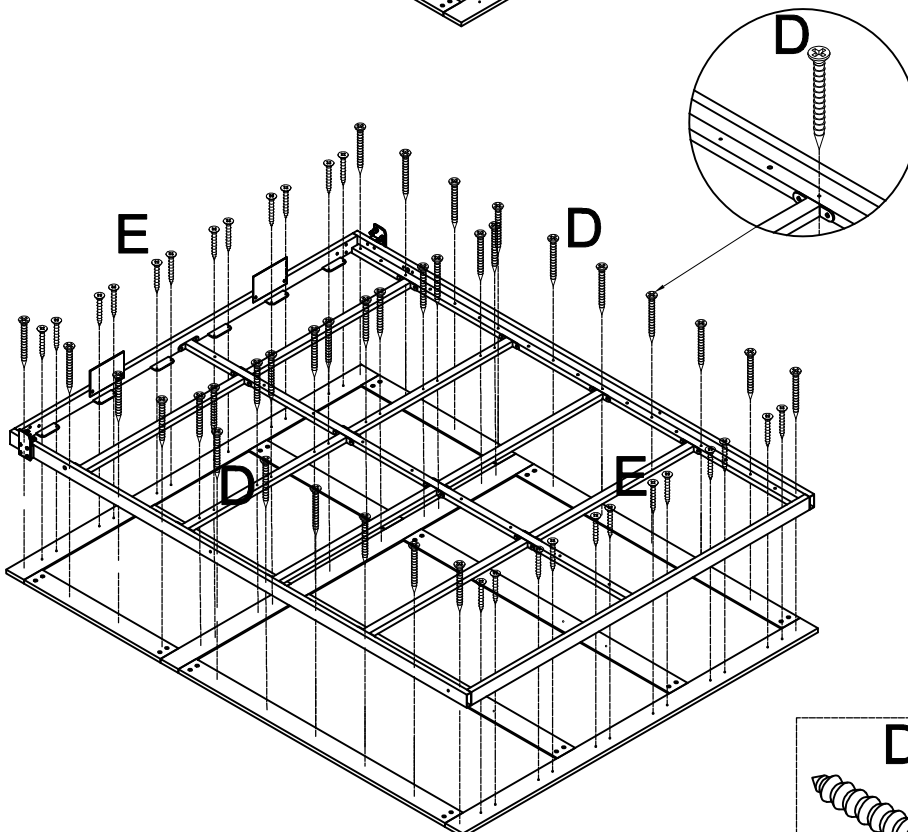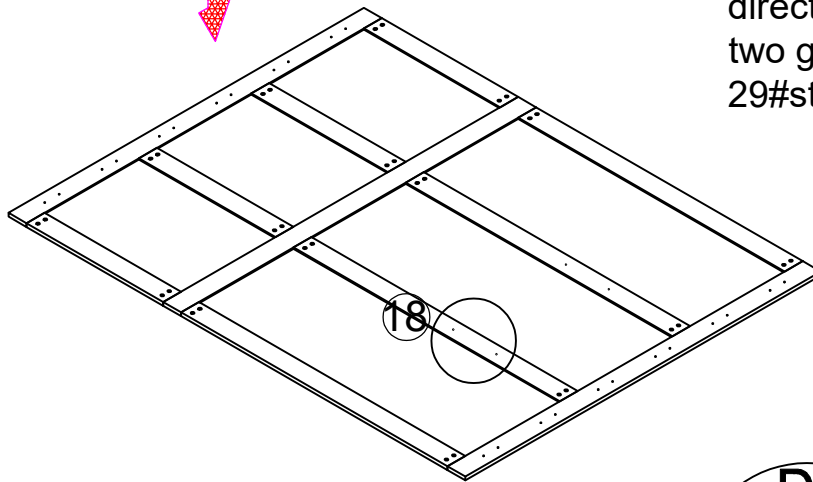


STEP12

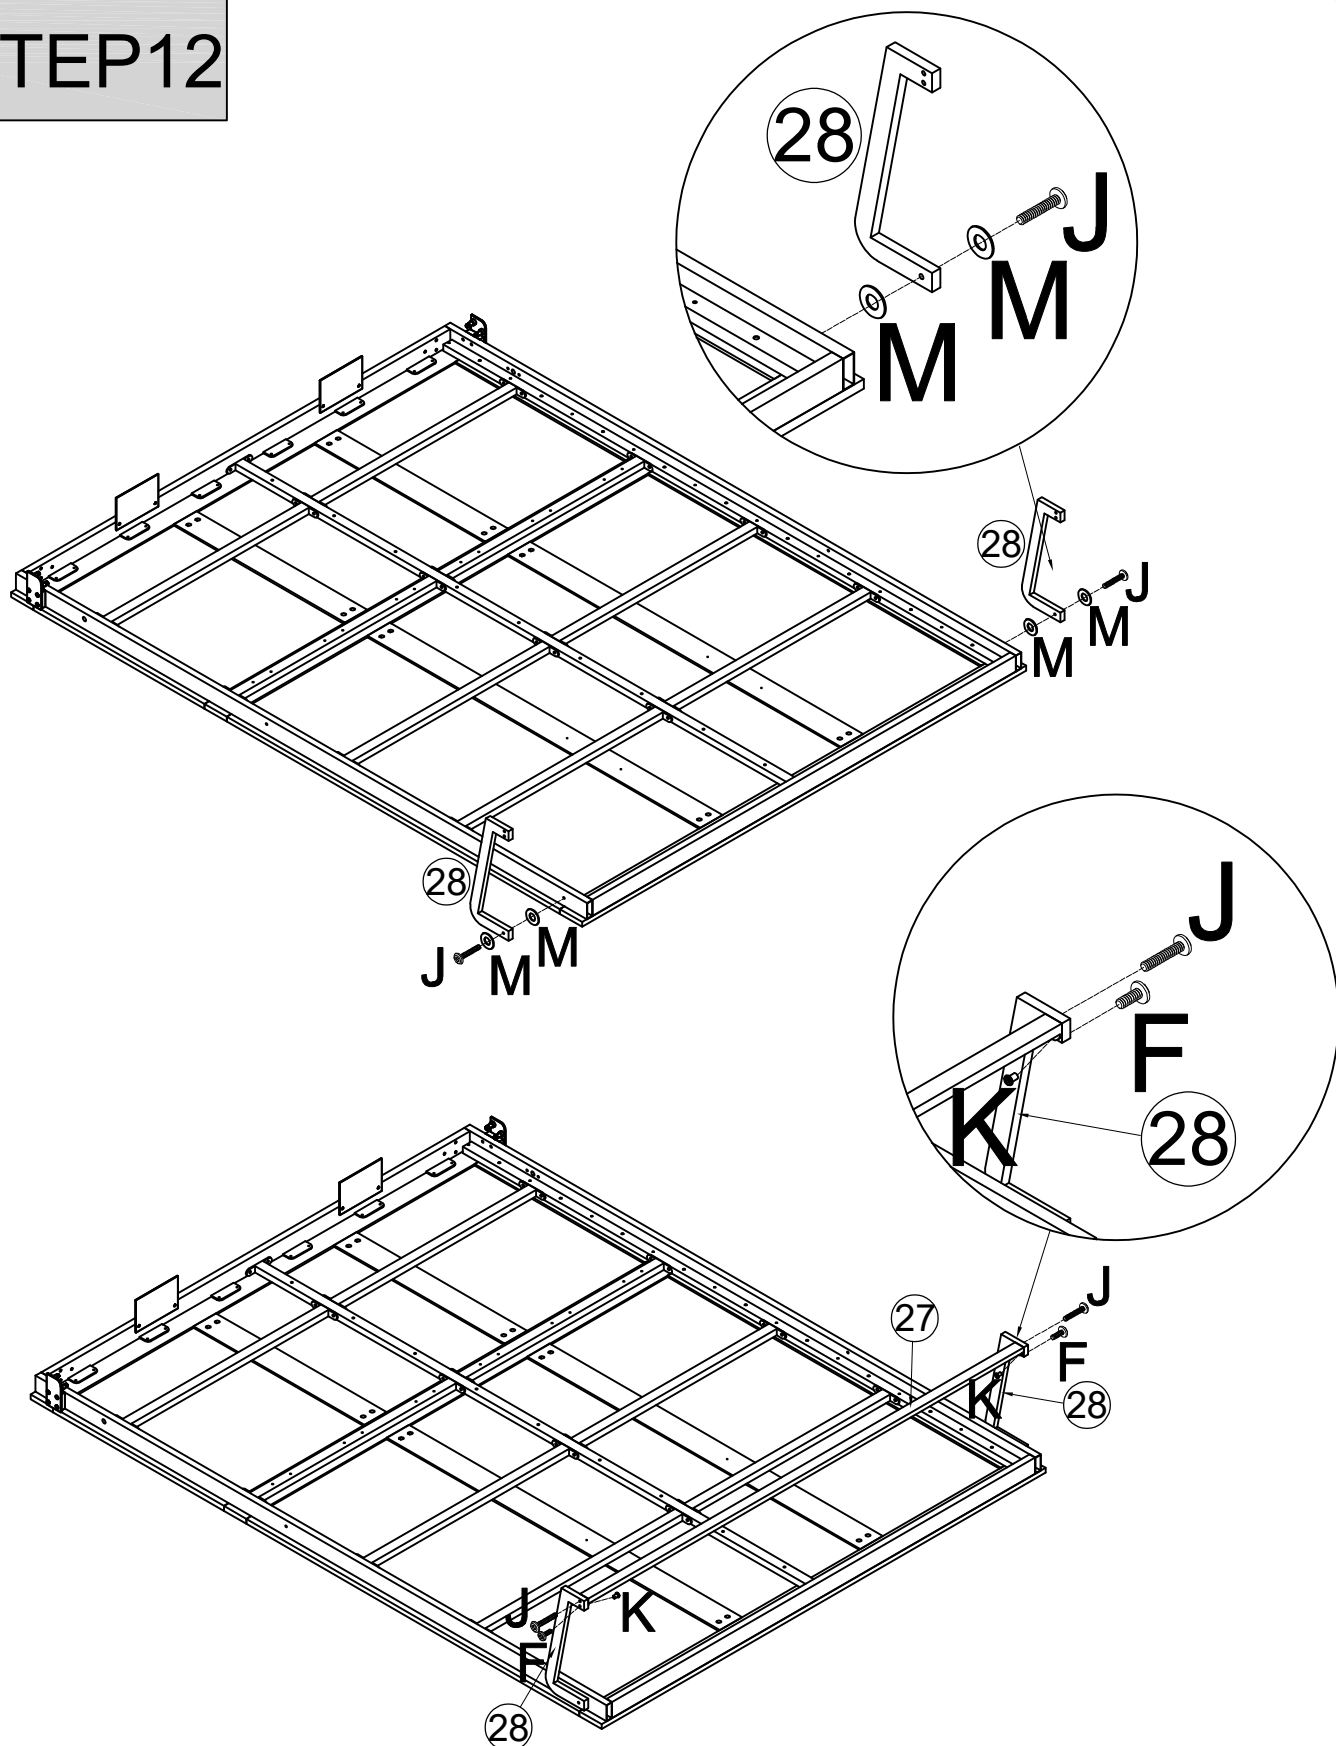

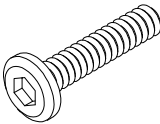
F	J	K	M
			
Ø6 x 12=2pcs	Ø6 x 30=4pcs	Ø6 x 12=2pcs	M10x20x2=4pcs

STEP13

Tools Required

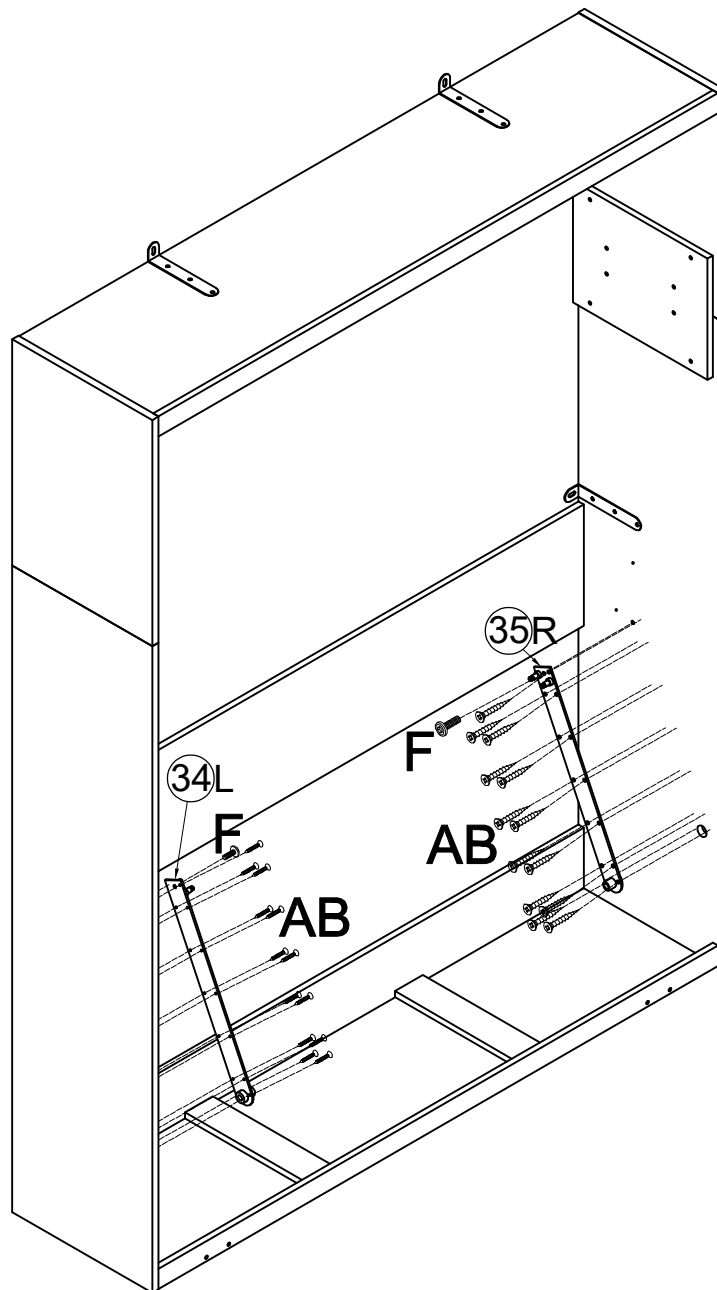


F





Ø6 x 12=2pcs

AB



Ø3.5 x 20=26pcs

STEP14

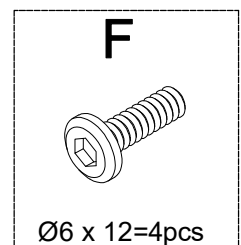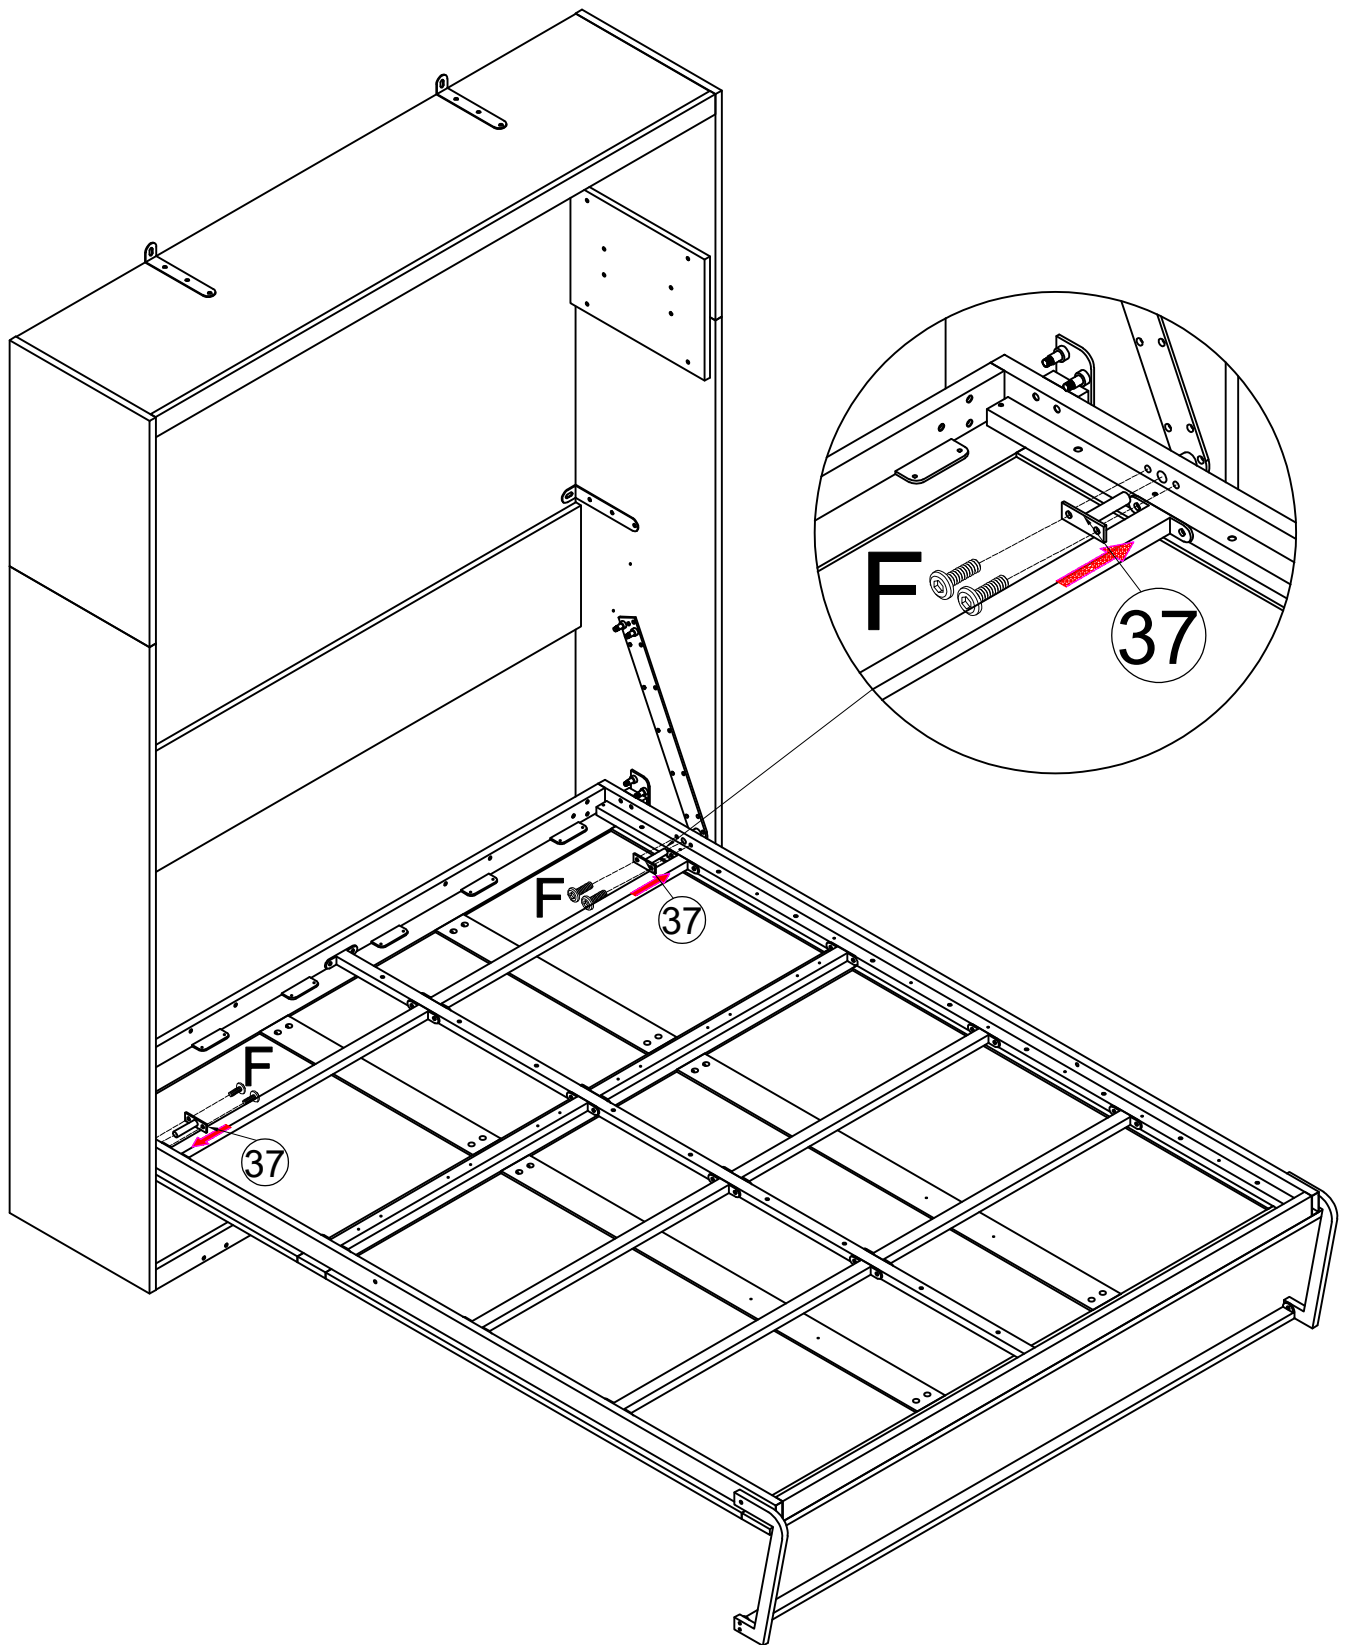

STEP15

Tools Required




This end up




WARNING

DO NOT remove the iron straps compressing the hydraulic rods (Part O and P) until you have fixed the rods on both sides of the cabinet interior.

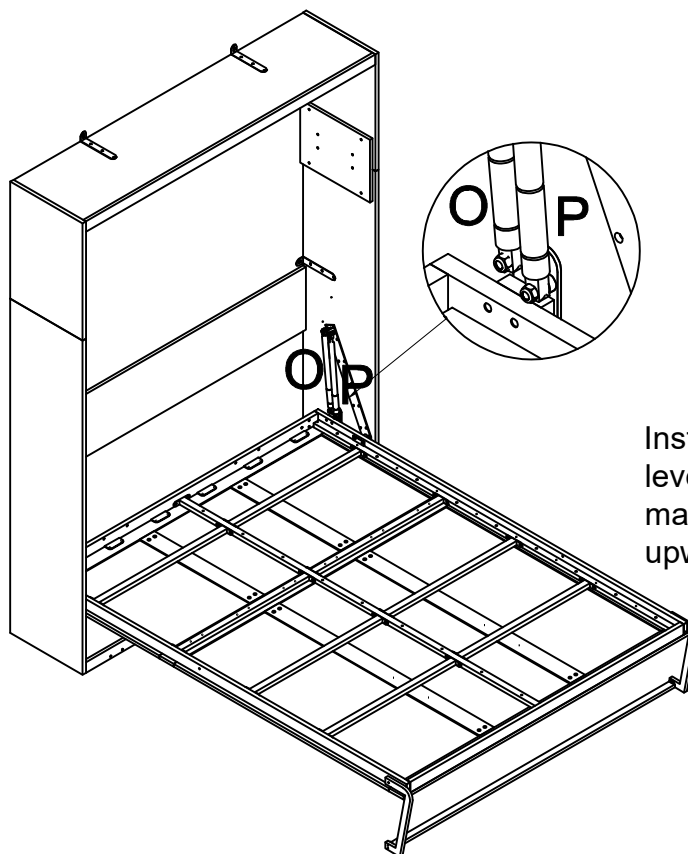

Install the hydraulic lever with the marked area facing upwards.

Swing the bed frame up and down, install O and P# onto the bolts of 34# and 35# to get the right position, then lock S# nuts.

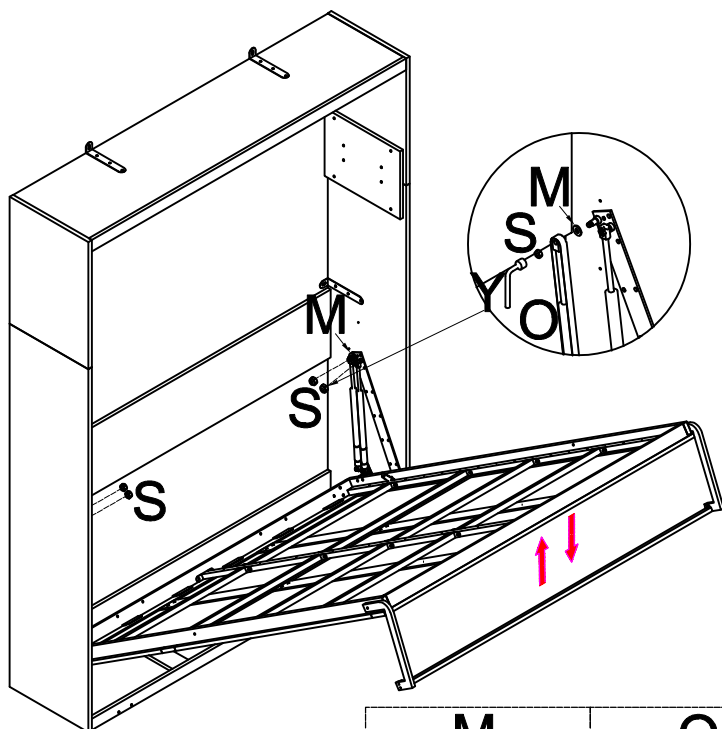

Press down the bed frame appropriately and remove the iron straps of O and P# (recommend to wear gloves).

M	O	P	S
M10x20x2=8pcs	300-550=2pcs	300-450=2pcs	M8 =8pcs


STEP16

Tools Required



ATTENTION:


Because after removing the iron straps around hydraulic rods, the hydraulic rod will produce tension on the bed frame, due to the subsequent installation, there is no heavy weight on the bed frame, so the bed frame will rebound, therefore, please pay attention to the warning belows

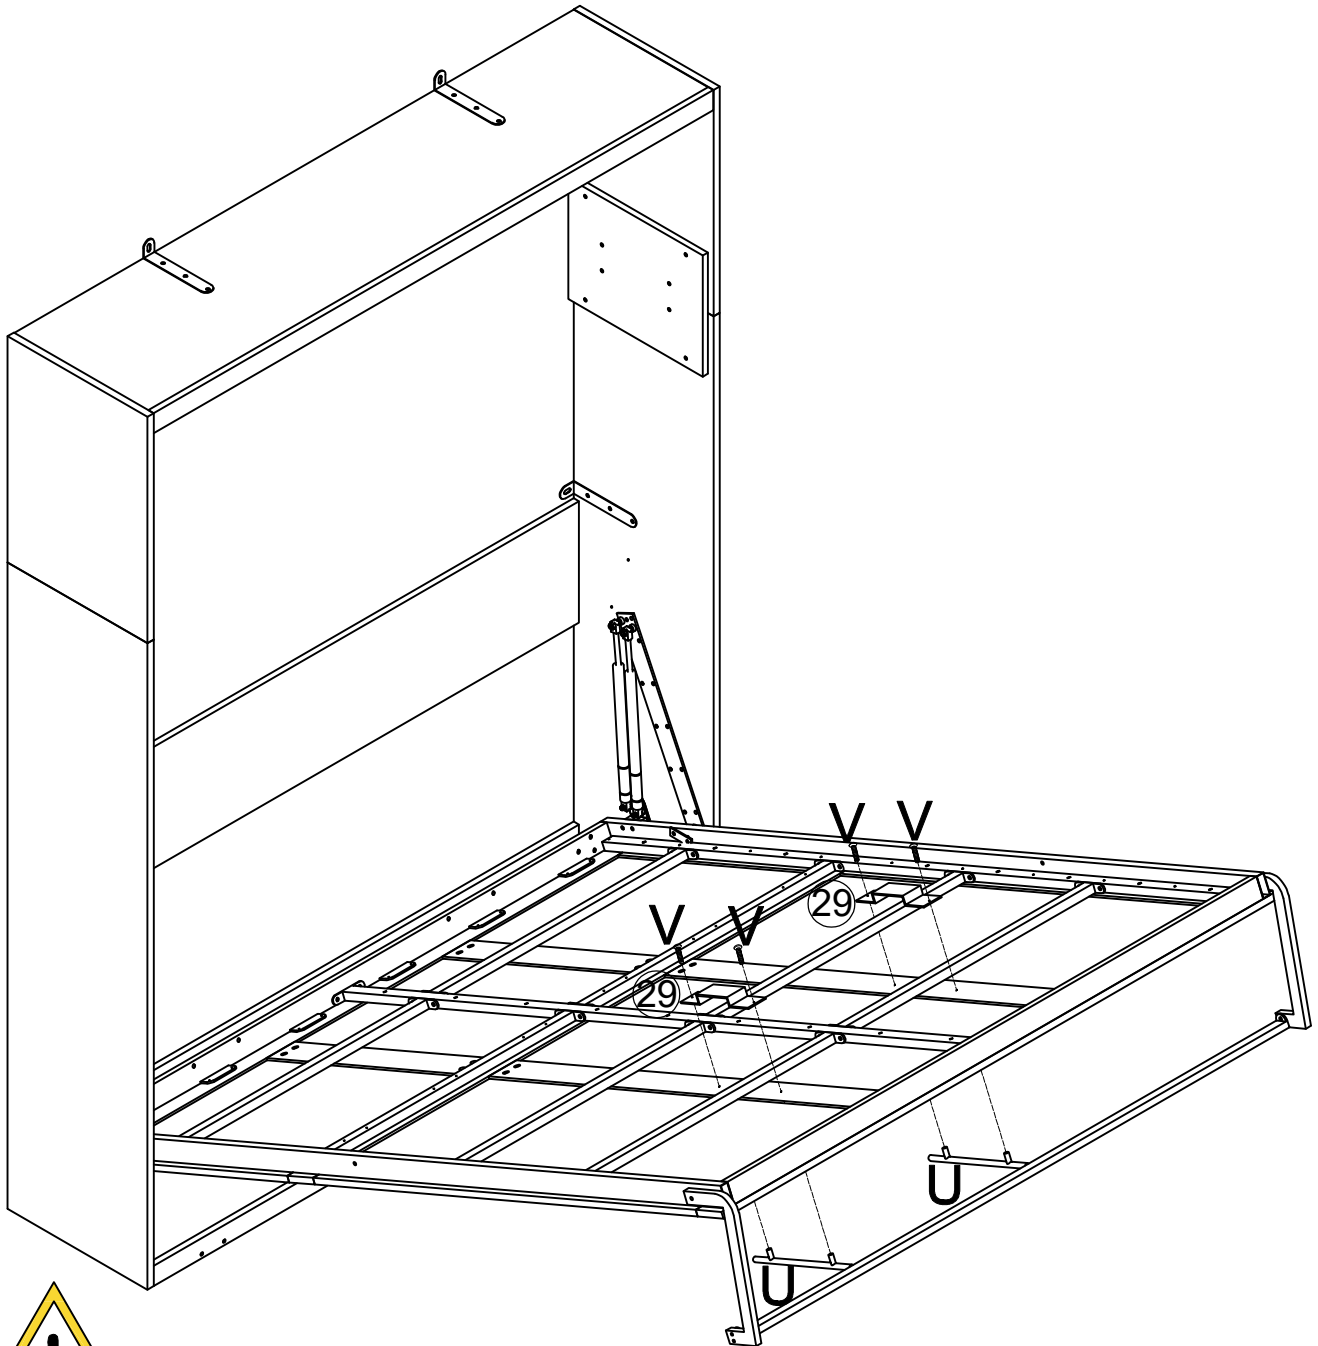


WARNING

For your safety:


Please use no less than 88lbs of weight to press the bed frame in the subsequent installation process, to avoid accidental injury caused by the rebound of the bed frame!

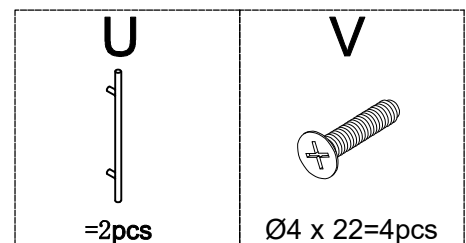


STEP17

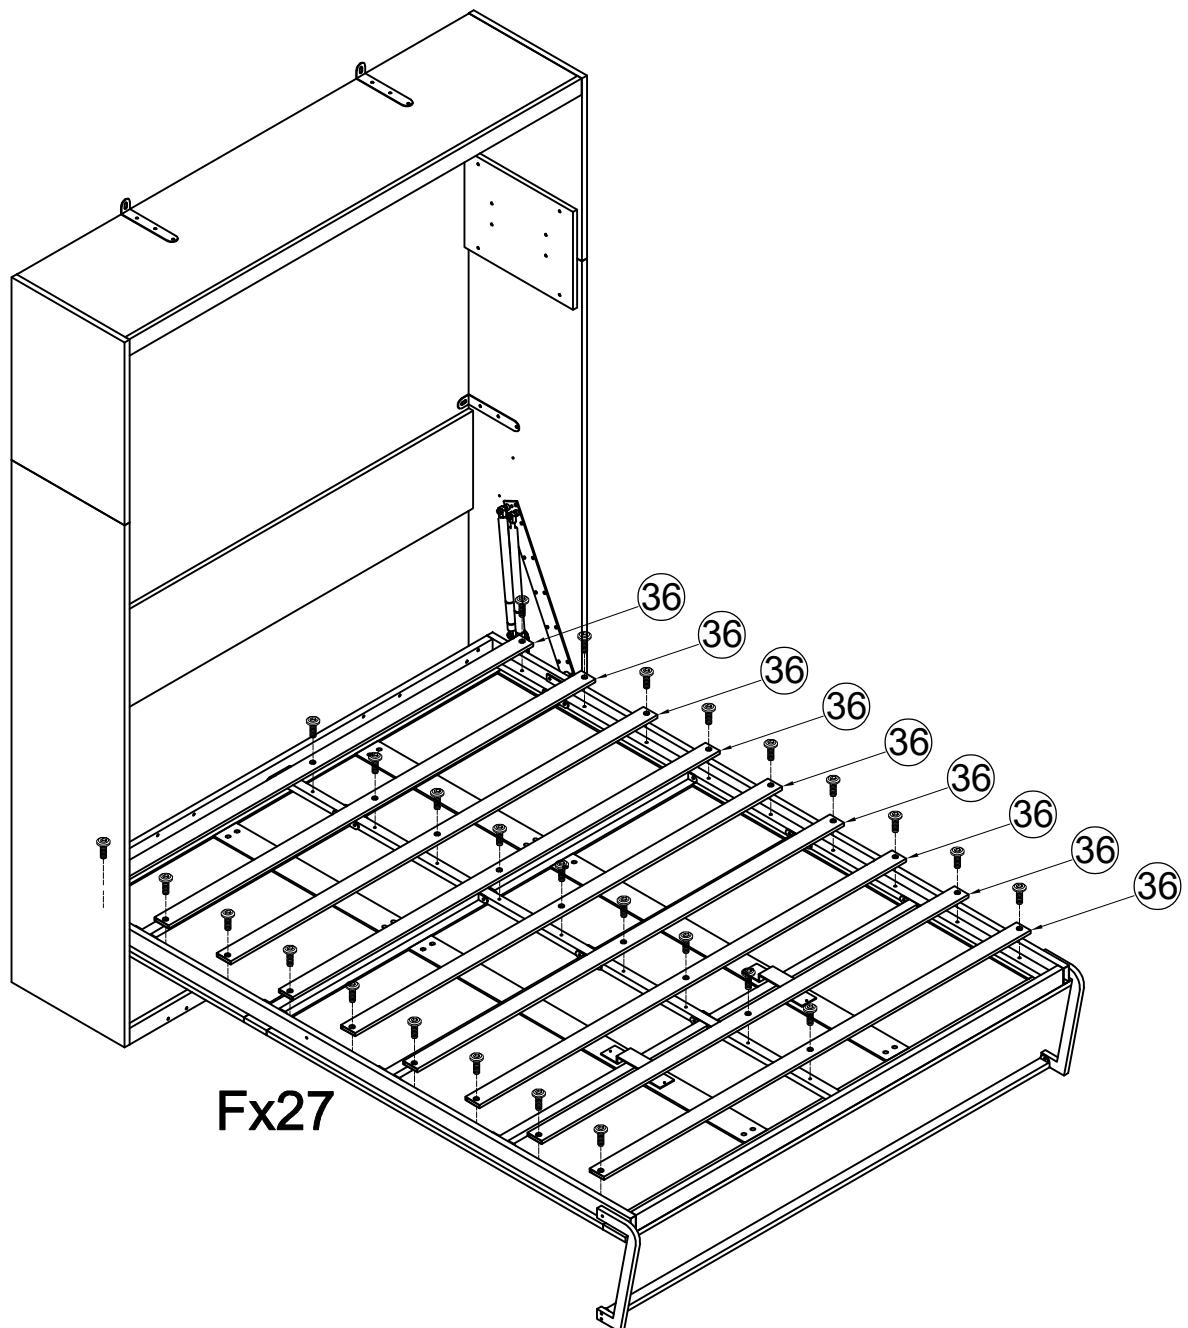

Fx27

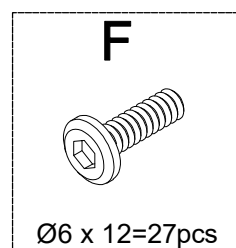




STEP18

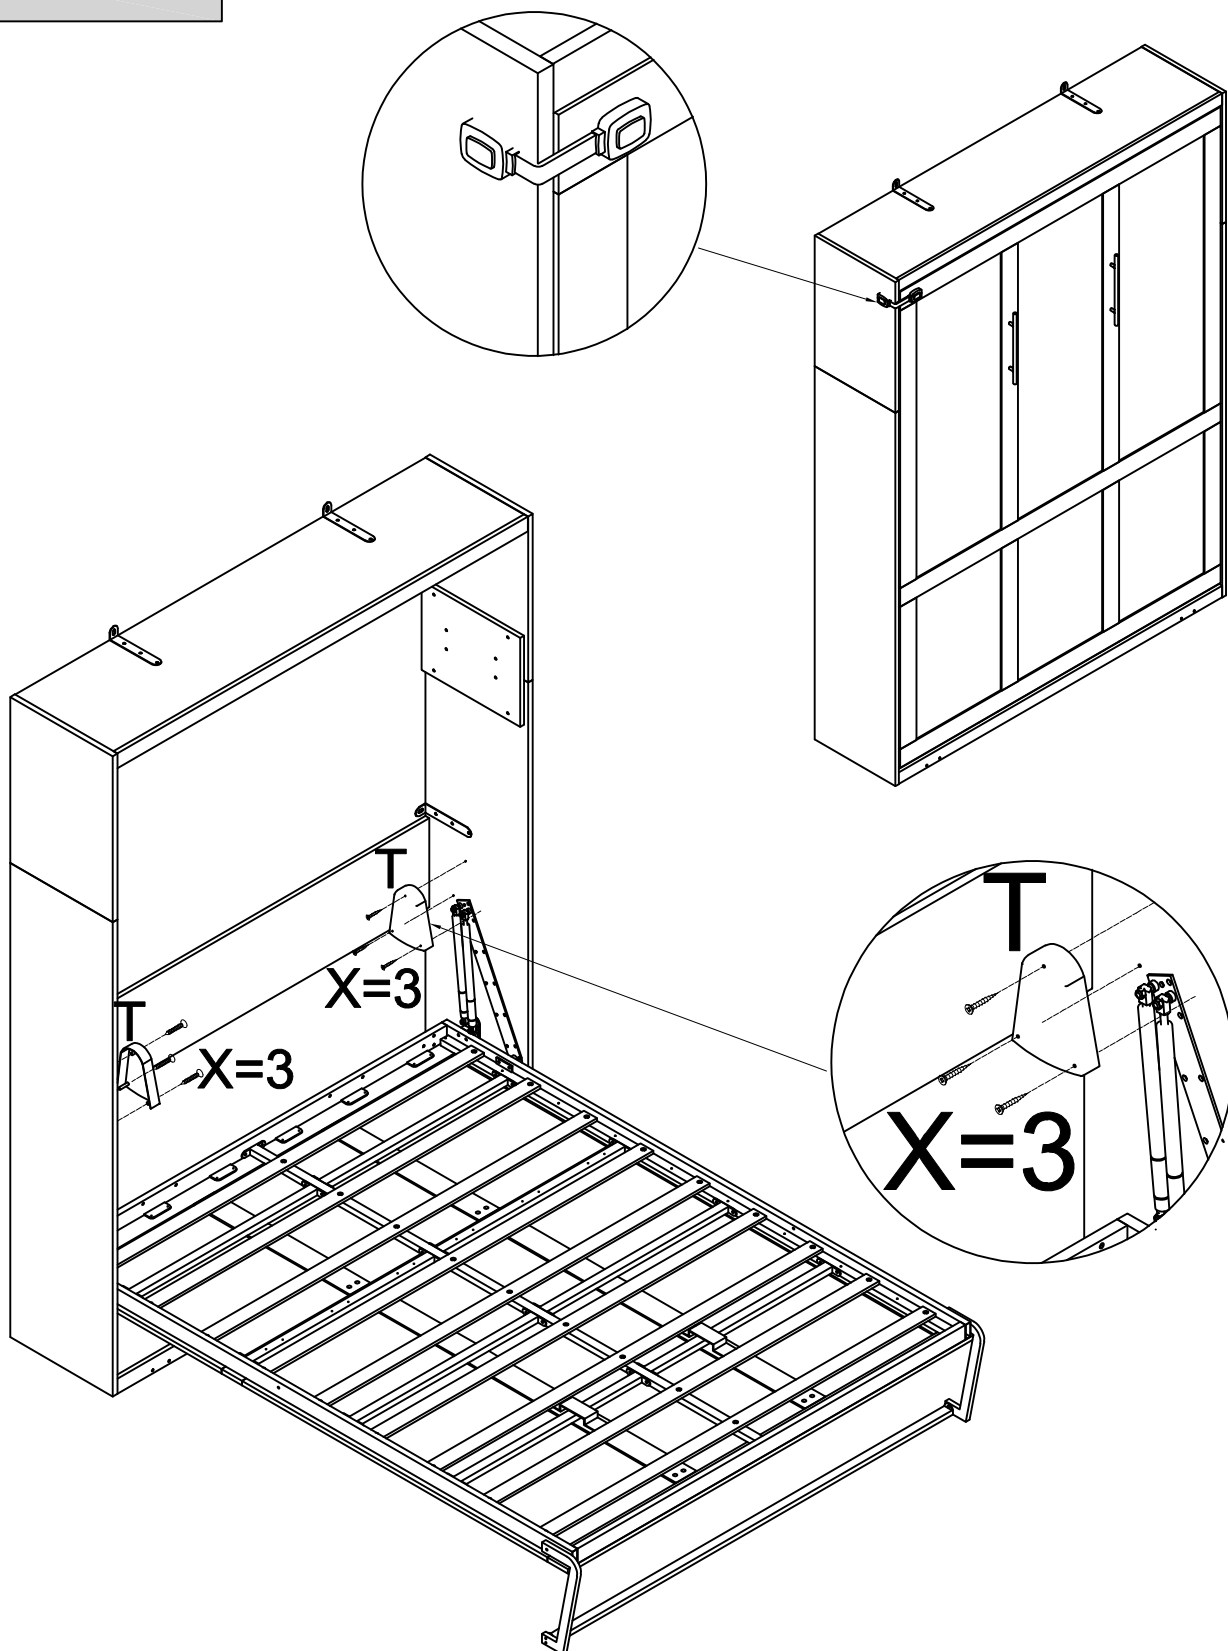


T	X	AA
=2pcs	Ø3.5 x 30=6pcs	=1pc



STEP19

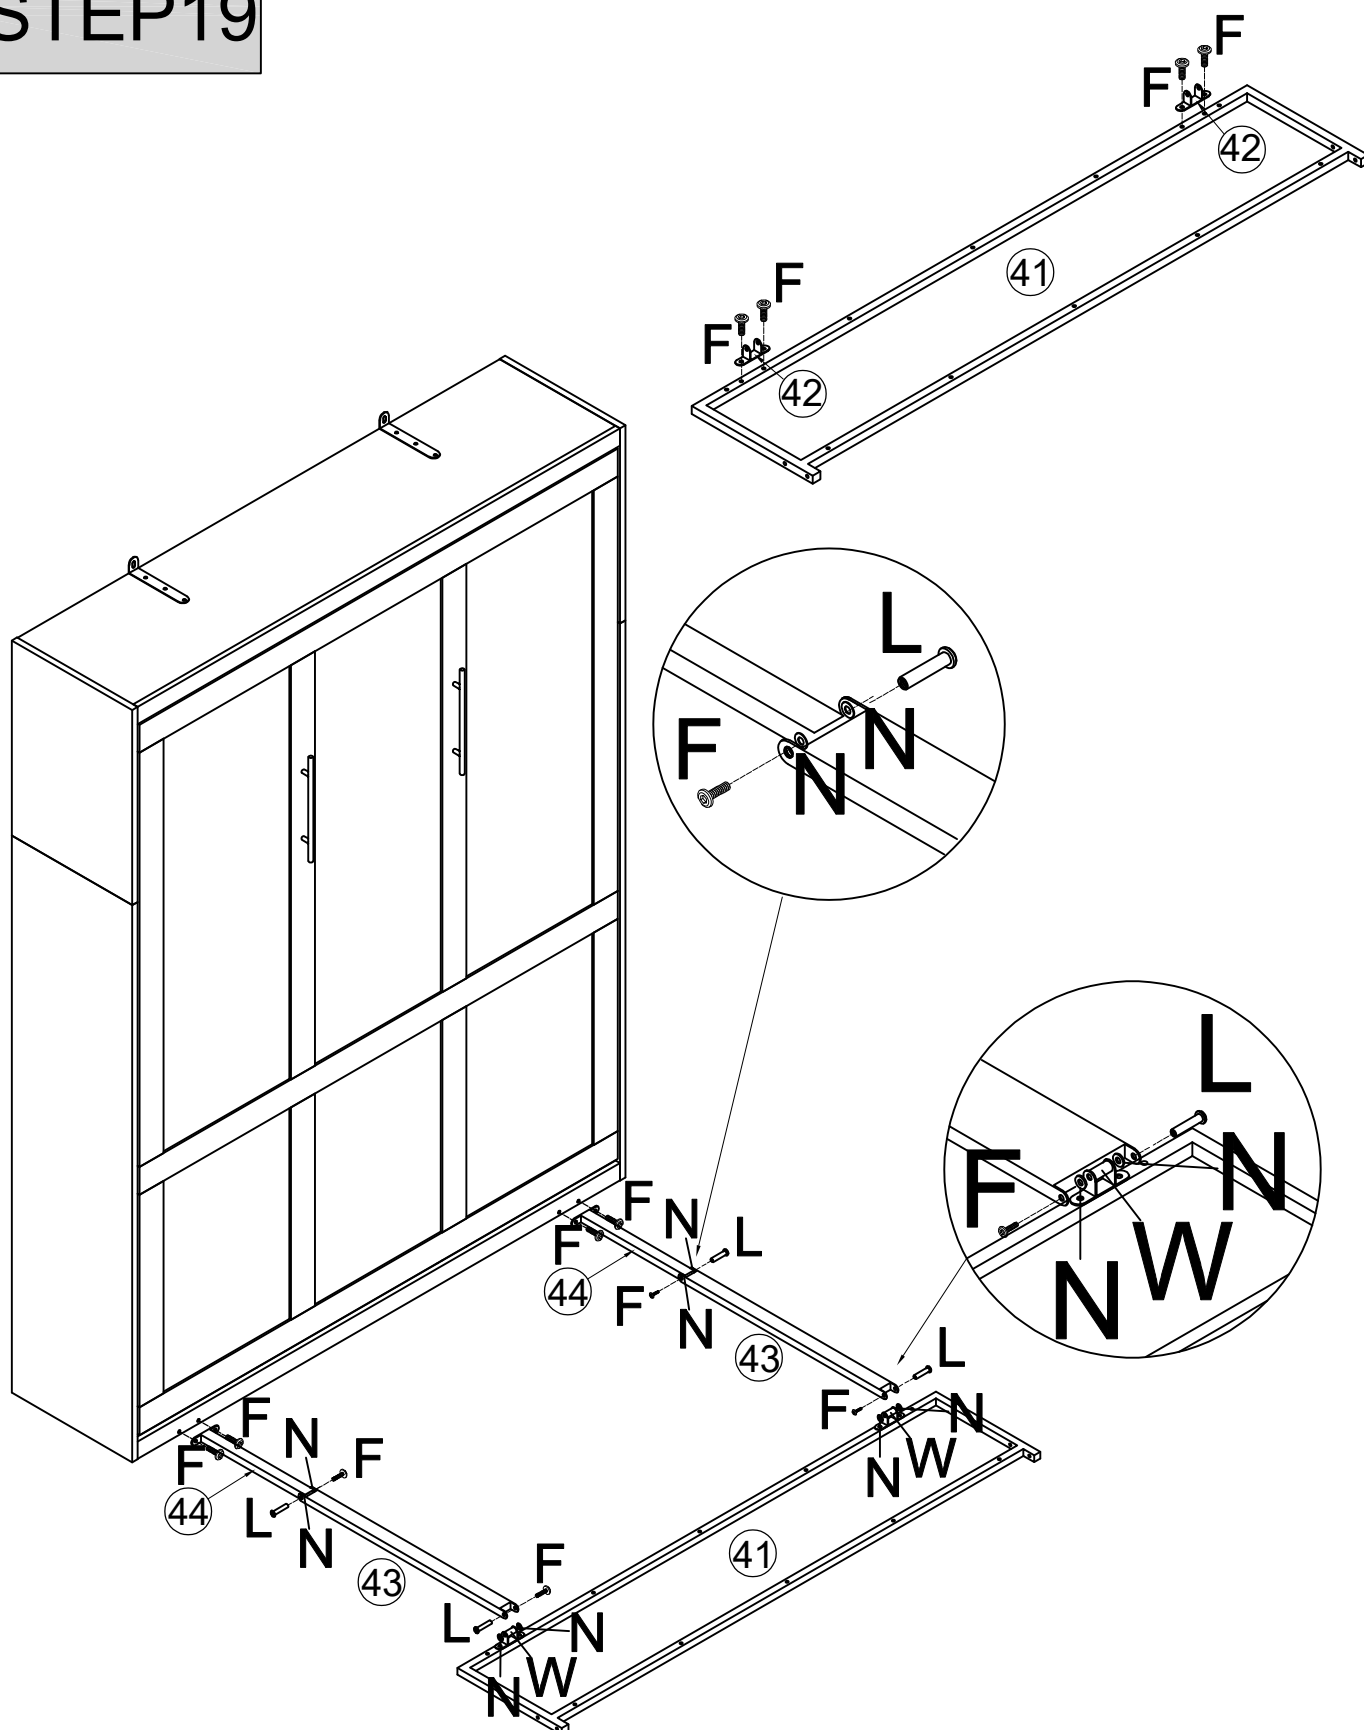



F	L	N	W
			
Ø6 x 12=8pcs	Ø6 x 43=4pcs	M8x2=8pcs	Ø8.2 x 30=2pcs

STEP20

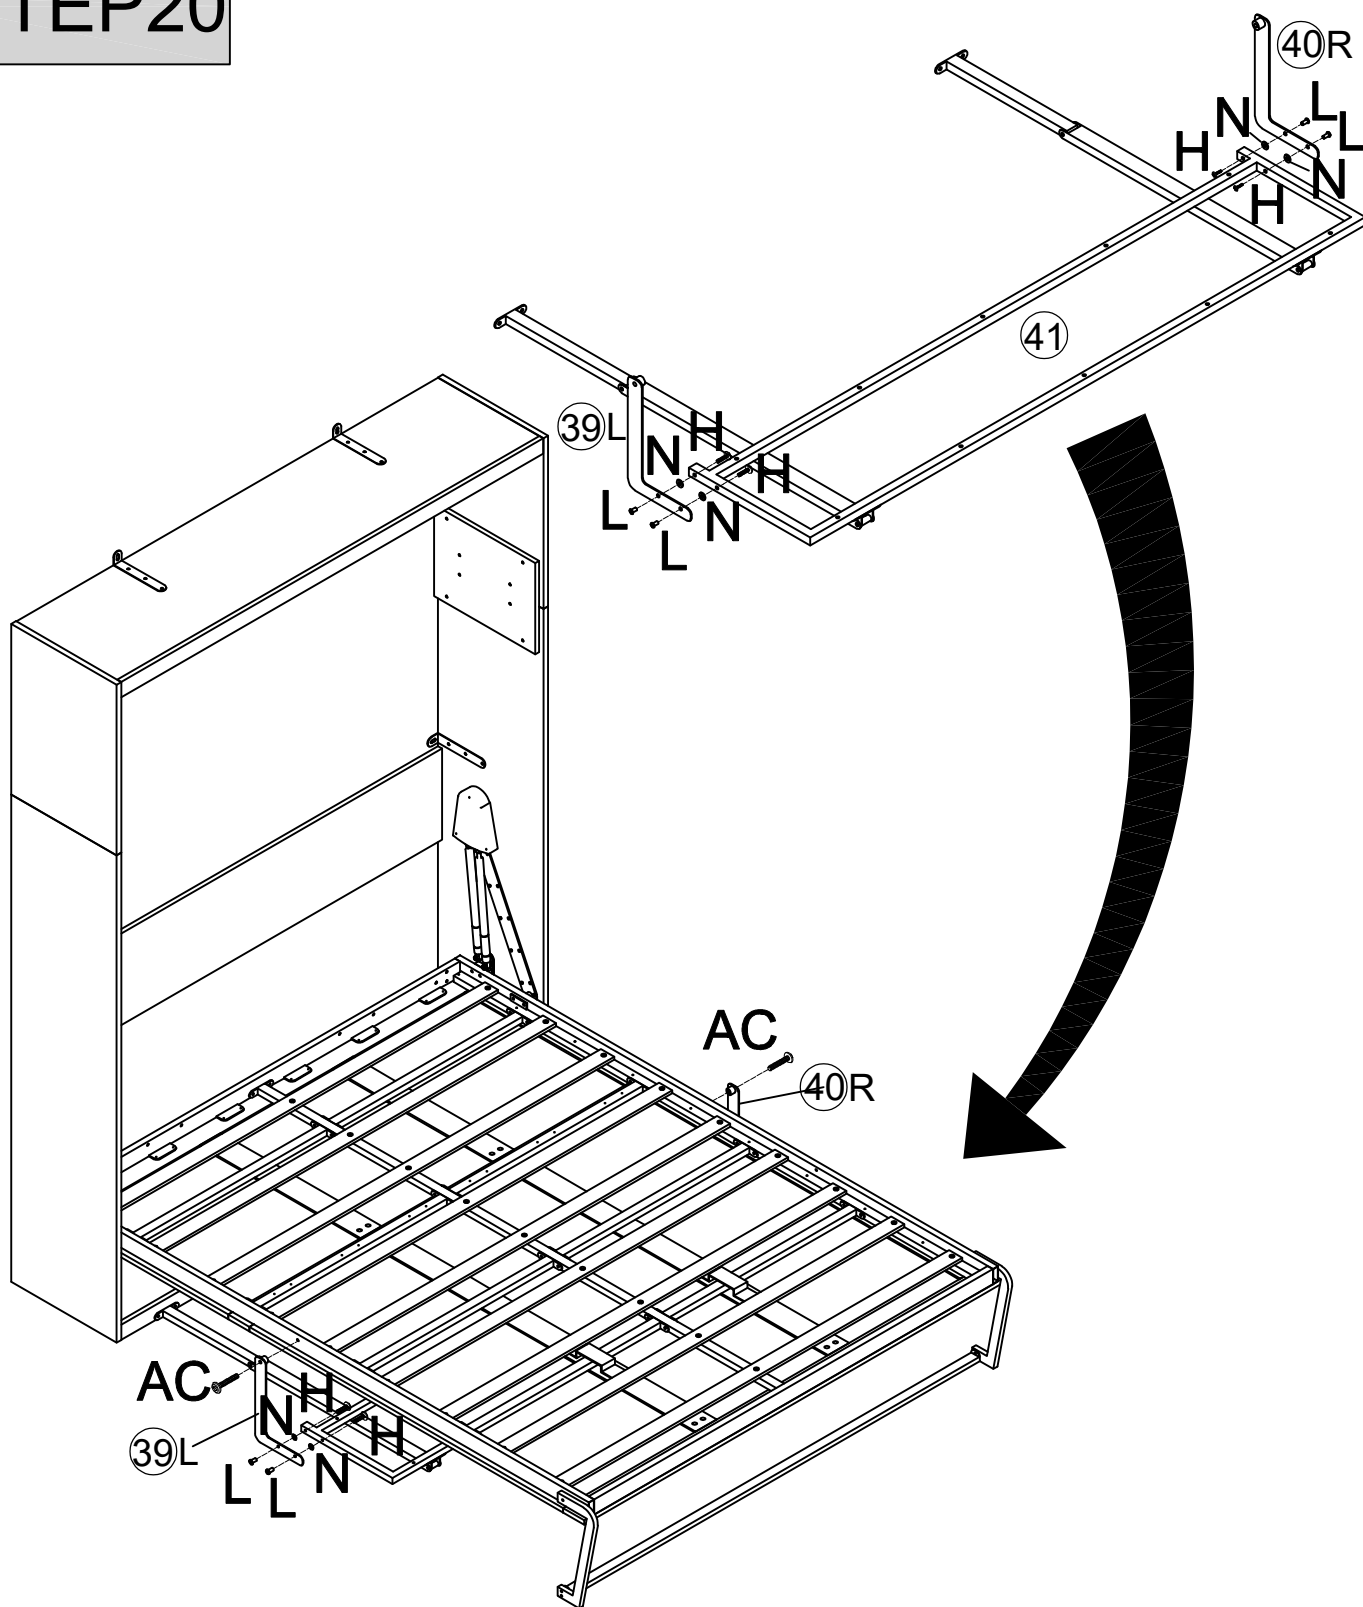


H	L	N	AC
			
Ø6 x 20=4pcs	Ø6 x 12=4pcs	M8x2=4pcs	Ø6 x 35=2pcs

STEP21

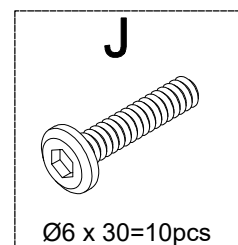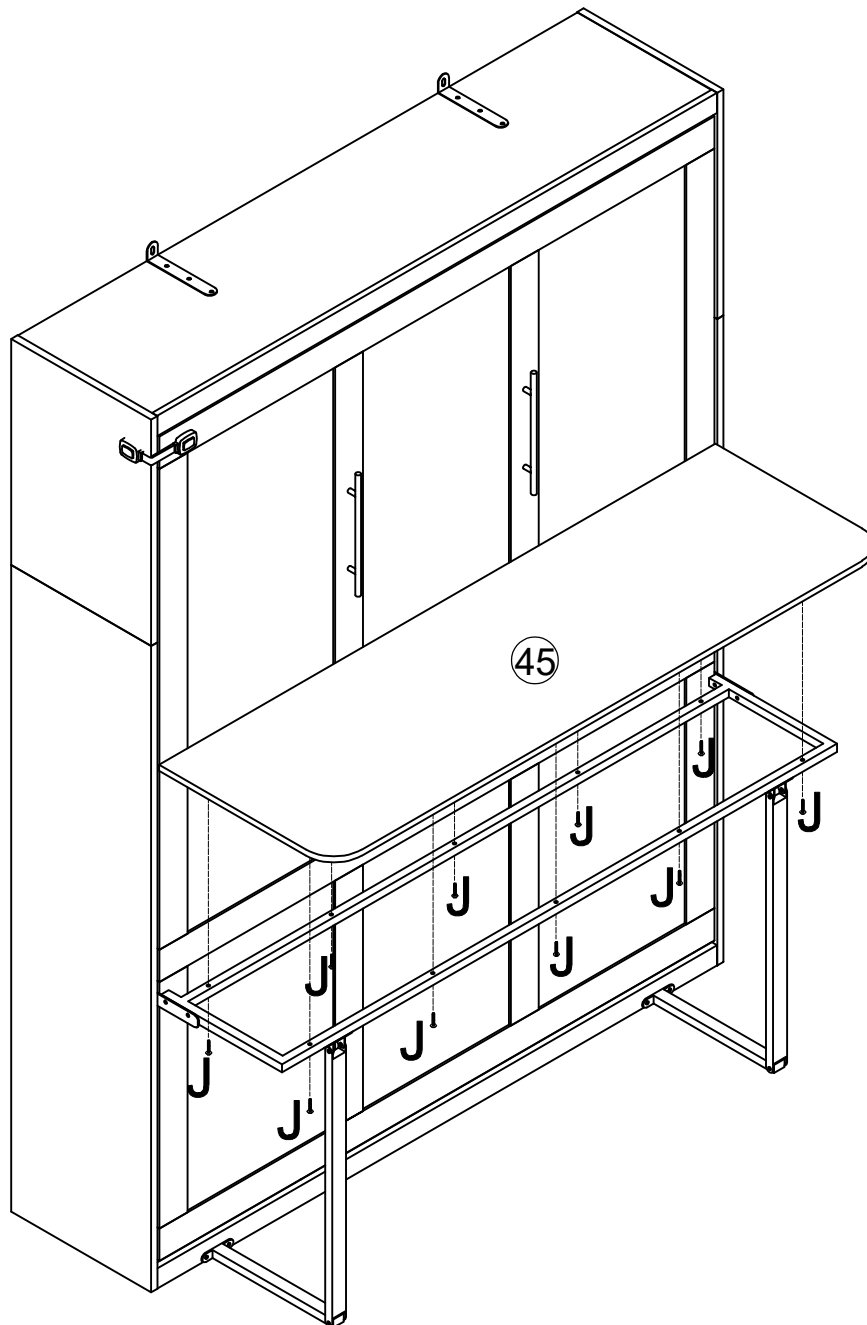

STEP22

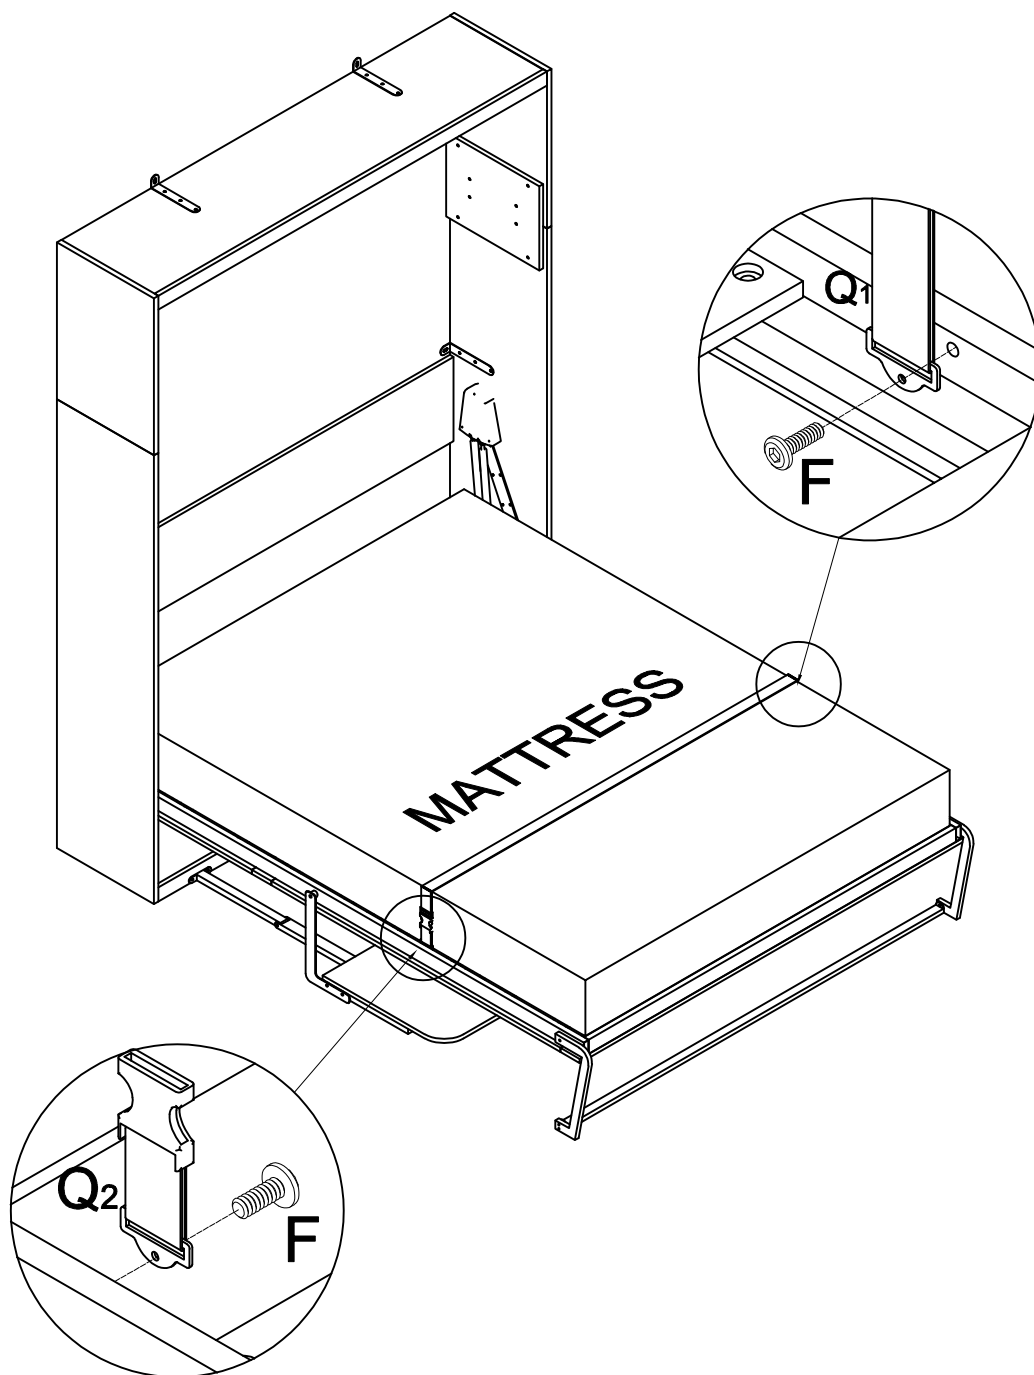

Final Assembly!

