

INSTALLATION GUIDE



WARNING: Remember the screws and hardware chosen should be strong and appropriate for the type of surface on which they are going to be used. If you have any question, contact a specialist.

HARDWARE INCLUDED:

A



Finial x2

B



Outer Rod x1
Inner Rod x1

C



Bracket x2

D



Screw x4

E



Wall Anchor x4

TOOLS REQUIRED (NOT INCLUDED):



Pencil



Phillips
Screwdriver



Hammer



Level




Tape Measure




Drill


1 Step 1



2 Step 2

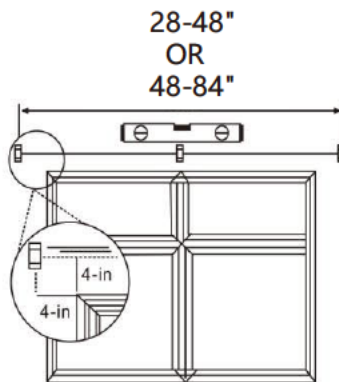


3 Step 3

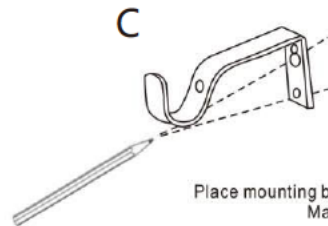


Place mounting bracket at desired position on wall.
Mark holes with pencil

4 Step 4




Drill holes at the center of each marking.

5 Step 5

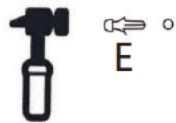


If installing into drywall, tap anchors into drilled holes
with hammer until flush with wall.

6 Step 6

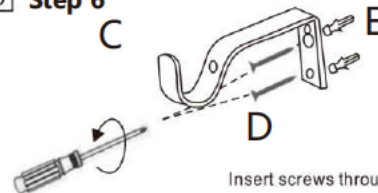


Insert screws through mounting bracket.

6a Step 6.1

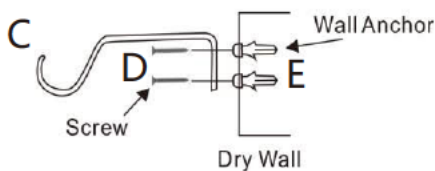


Dry Wall

6b Step 6.2

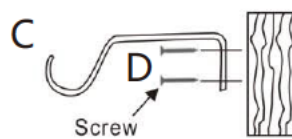


Wood or Studs

7 Step 7

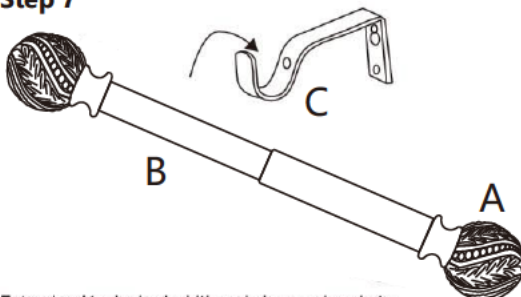

Extend rod to desired width and place on brackets.

8 Step 8

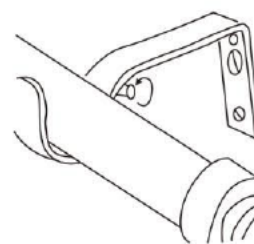


Hand-tighten set screw to secure rod.

INSTALLATION GUIDE



WARNING: Remember the screws and hardware chosen should be strong and appropriate for the type of surface on which they are going to be used. If you have any question, contact a specialist.


HARDWARE INCLUDED:

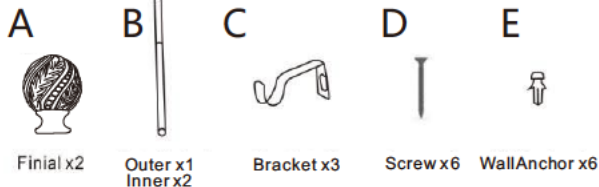


TOOLS REQUIRED (NOT INCLUDED):




1 Step 1



2 Step 2

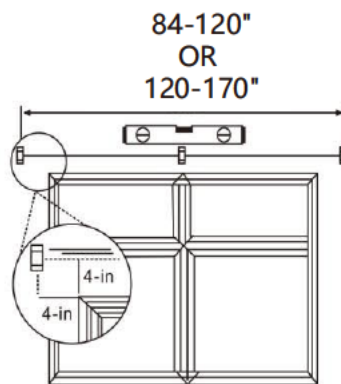

3 Step 3

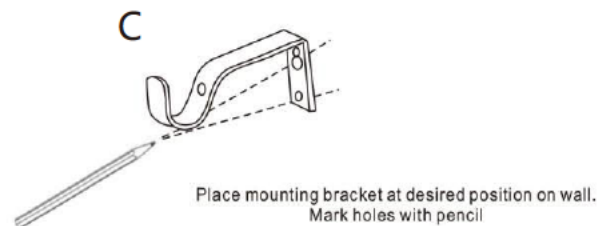

4 Step 4




5 Step 5




If installing into drywall, tap anchors into drilled holes with hammer until flush with wall.


6 Step 6

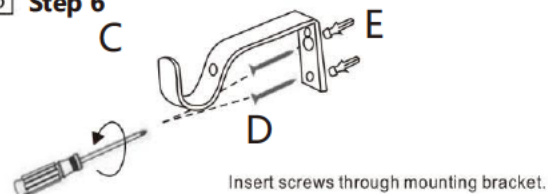


6a Step 6.1

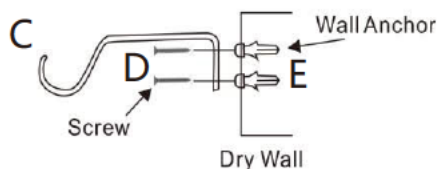

6b Step 6.2

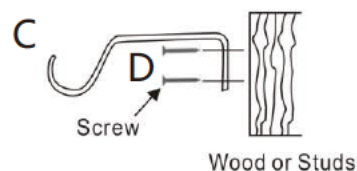


7 Step 7

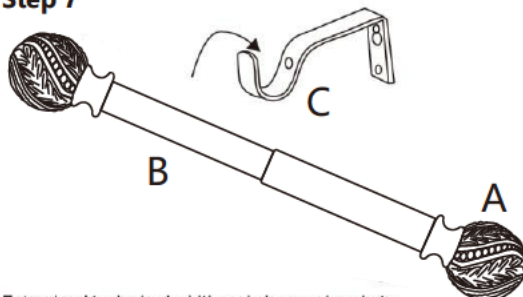

Extend rod to desired width and place on brackets.

8 Step 8

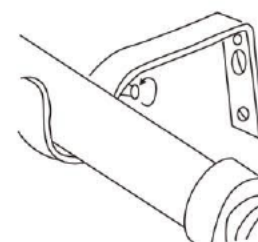

Hand-tighten set screw to secure rod.

INSTALLATION GUIDE



WARNING: Remember the screws and hardware chosen should be strong and appropriate for the type of surface on which they are going to be used. If you have any question, contact a specialist.

HARDWARE INCLUDED:



Finial x2




Outer Rod x1
Inner Rod x1



Bracket x2



Screw x4



Wall Anchor x4

TOOLS REQUIRED (NOT INCLUDED):



Pencil



Phillips
Screwdriver



Hammer



Level




Tape Measure




Drill


1 Step 1

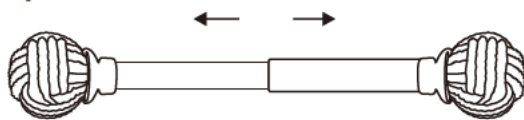

2 Step 2

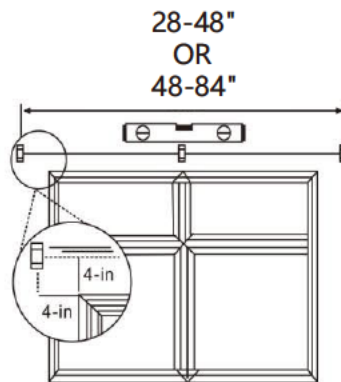


3 Step 3

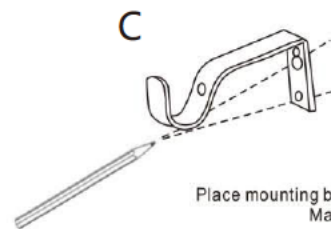


Place mounting bracket at desired position on wall.
Mark holes with pencil

4 Step 4




Drill holes at the center of each marking.

5 Step 5

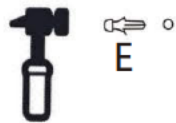


If installing into drywall, tap anchors into drilled holes
with hammer until flush with wall.

6 Step 6

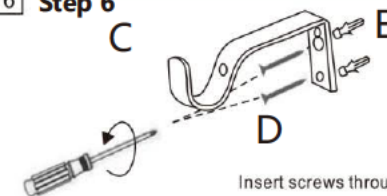


Insert screws through mounting bracket.


6a Step 6.1

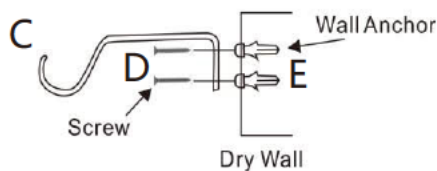

6b Step 6.2

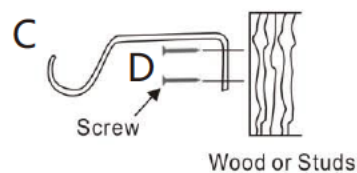


7 Step 7

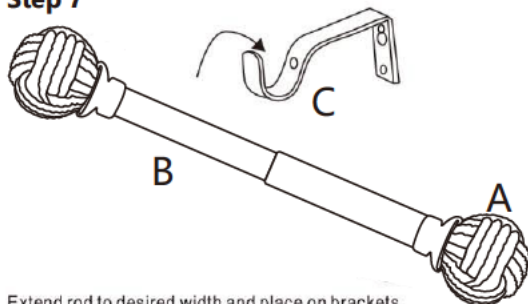

Extend rod to desired width and place on brackets.

8 Step 8

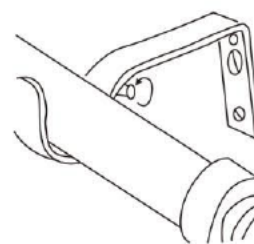

Hand-tighten set screw to secure rod.

INSTALLATION GUIDE



WARNING: Remember the screws and hardware chosen should be strong and appropriate for the type of surface on which they are going to be used. If you have any question, contact a specialist.


HARDWARE INCLUDED:



Finial x2




Outer x1
Inner x2



Bracket x3



Screw x6



Wall Anchor x6

TOOLS REQUIRED (NOT INCLUDED):



Pencil



Phillips
Screwdriver



Hammer



Level




Tape Measure




Drill


1 Step 1

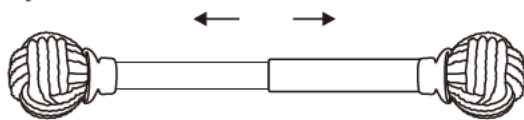

2 Step 2

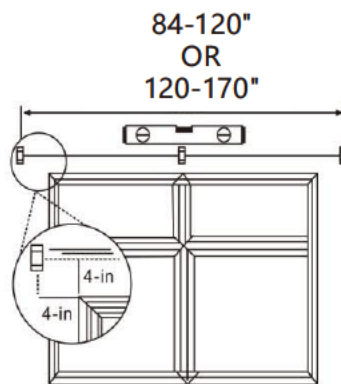

3 Step 3

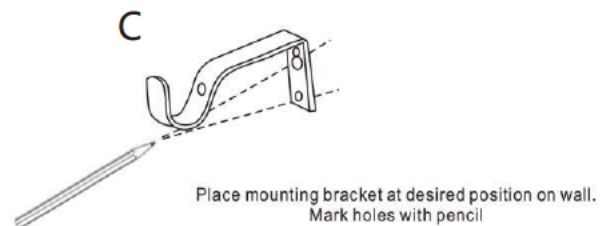

4 Step 4




5 Step 5




If installing into drywall, tap anchors into drilled holes with hammer until flush with wall.


6 Step 6

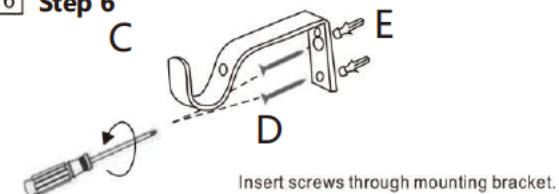


6a Step 6.1

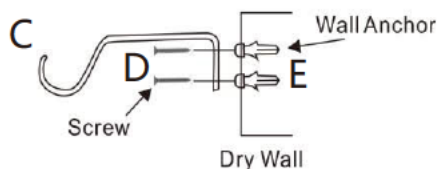

6b Step 6.2

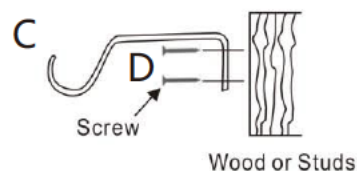

7 Step 7

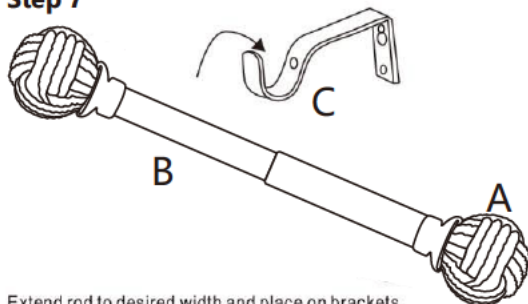

8 Step 8

