



ASSEMBLY INSTRUCTIONS

**NOTE: THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED! ! Q'TY**

No				
A		6 DRAWER DRESSER SIZE	64" X 17" X 38"	1PC
B		BEVELED MIRROR SIZE	42"W X 2-1/4"D X 47-3/4"H	1PC
C		MIRROR SUPPORT IN MIRROR BOX	31-1/2" X 1-1/2" X 3/4"	2PCS

NO.	HARDWARE LIST			Q'TY
1		ALLEN BOLT	Ø1/4"x1-3/8"	8PCS
2		LOCK WASHER	Ø1/4" x 10D x 1.1mm	8PCS
3		FLAT WASHER	Ø1/4" x 18D x 2mm	8PCS
4		ALLEN KEY	2-1/4" x 4mm	1PC

STEP 1

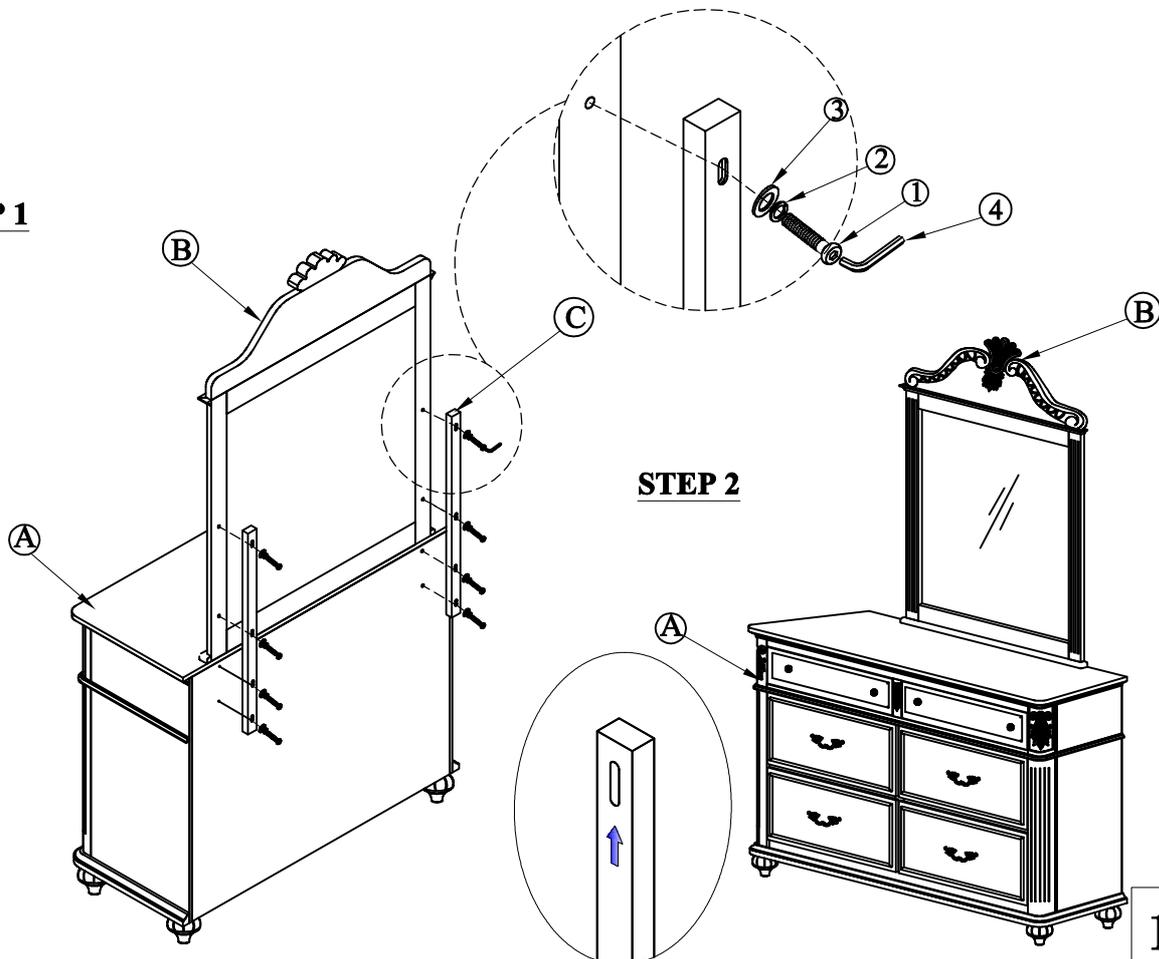

STEP 2

