
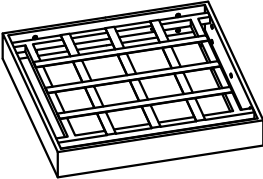
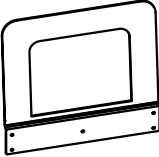
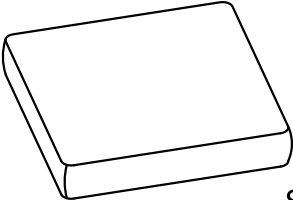
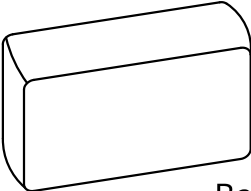
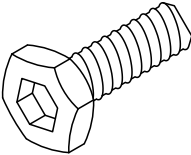



Assembly Instructions

Please read this before you proceed.


NUMBER	COMPONENT	QUANTITY
A	 Sofa Leg	4PCS
B	 Sofa Seat	1PC
C	 Aluminum Backrest Panel	1PC
D	 Seat Cushion	1PC
E	 Backrest Cushion	1PC

Assembly Instructions

NUMBER	COMPONENT	QUANTITY
AA	 Bolt M6*20	17+2PCS
BB	 M6 Flat washer	17+2 PCS
CC	 M6 Allen Key	1PC

Assembly Instructions


①

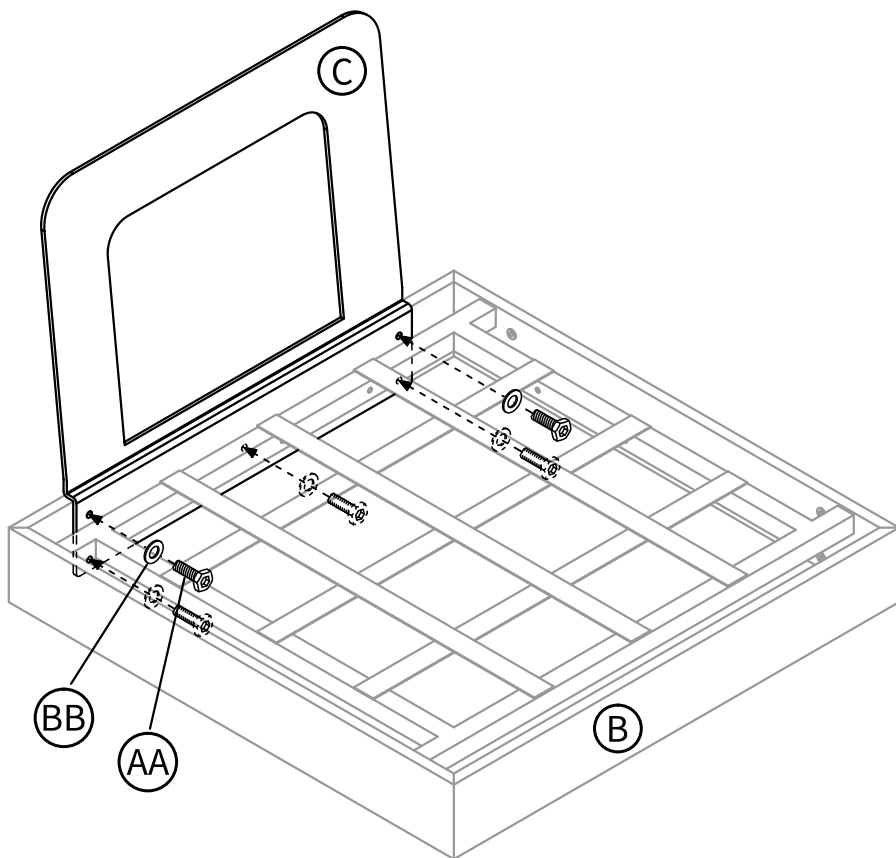

Place the Sofa Seat (B) on the surface with the seat support straps facing up. Attach one (1) Aluminum Backrest Panel (C) to a side of the Sofa Seat (B) using two (2) M6*20 Bolts (AA) and two (2) M6 Flat Washers (BB) on each end. Add one (1) more M6*20 Bolt (AA) with one (1) M6 Flat Washer (BB) in the center.

Assembly Instructions

②

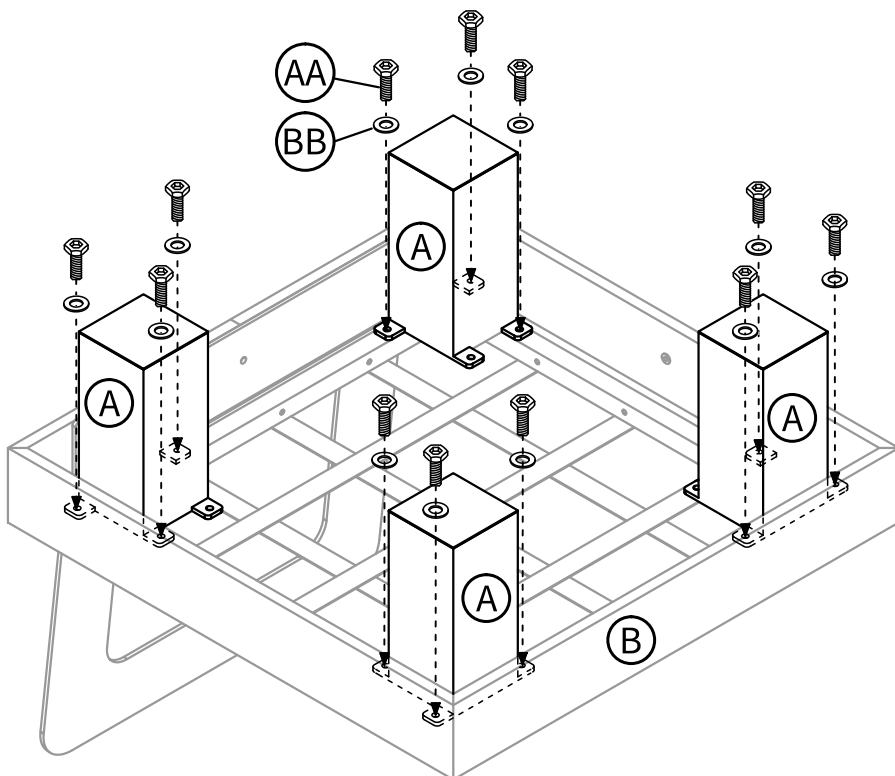


To maintain consistency across all legs, an additional hole has been added.
Please disregard the use of this extra hole. Thank you!

Flip the assembly from Step 1 over. Attach one (1) Sofa Leg (A) in each corner using three (3) M6*20 Bolts (AA) and three (3) M6 Flat Washers (BB) for each leg.

Assembly Instructions



③

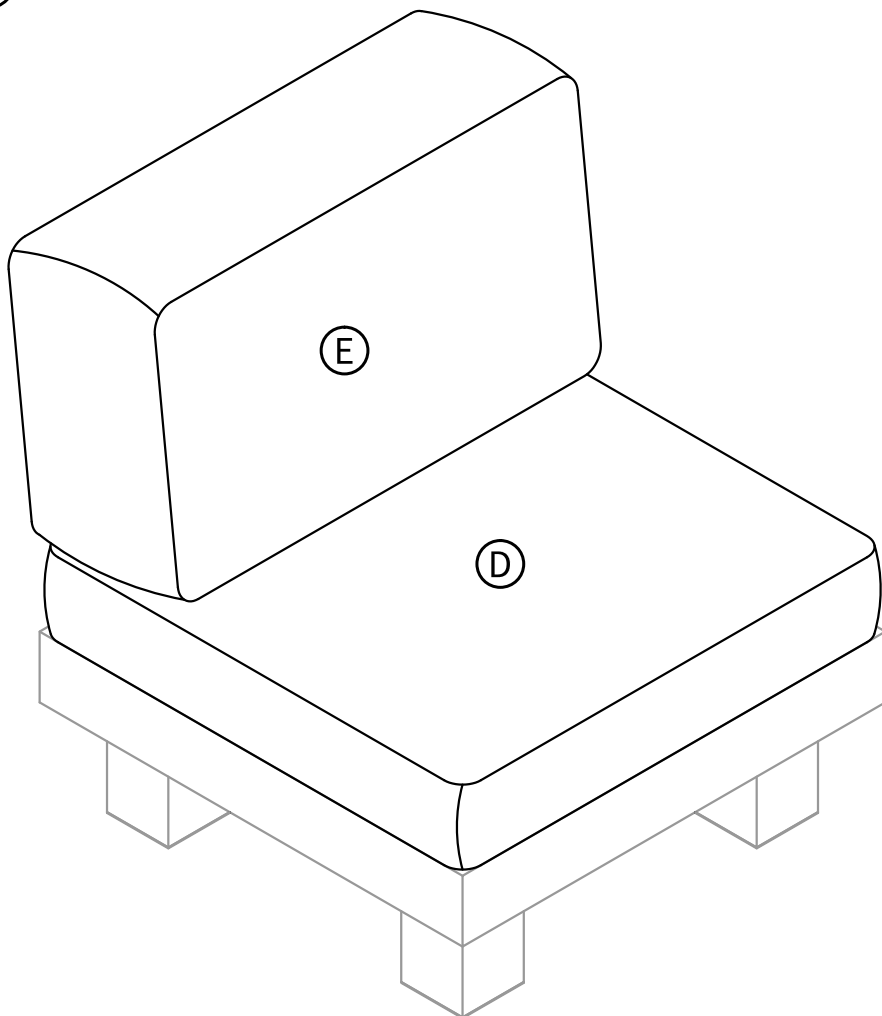



Flip the assembly from Step 2 over. Place the Seat Cushion (D) onto the Sofa Seat (B). Then, place the Backrest Cushion (E) up against the Aluminum Backrest Panel (C).

Assembly Instructions

Please read this before you proceed.

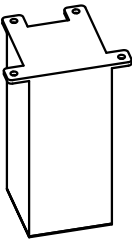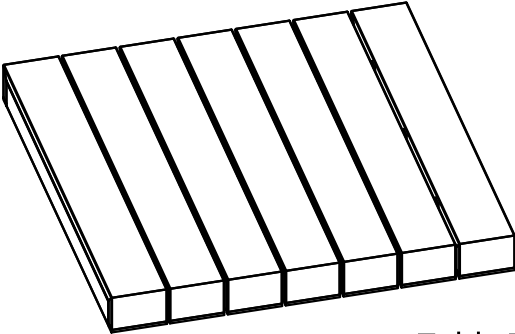
NUMBER	COMPONENT	QUANTITY
A	 Table Legs	4PCS
B	 Table Top	1PC

Assembly Instructions

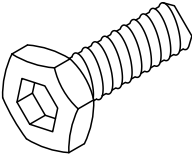NUMBER	COMPONENT	QUANTITY
AA	 Bolt M6*20	16+1PCS
BB	 M6 Flat washer	16+2PC
CC	 M6 Allen Key	1PC

Assembly Instructions


①

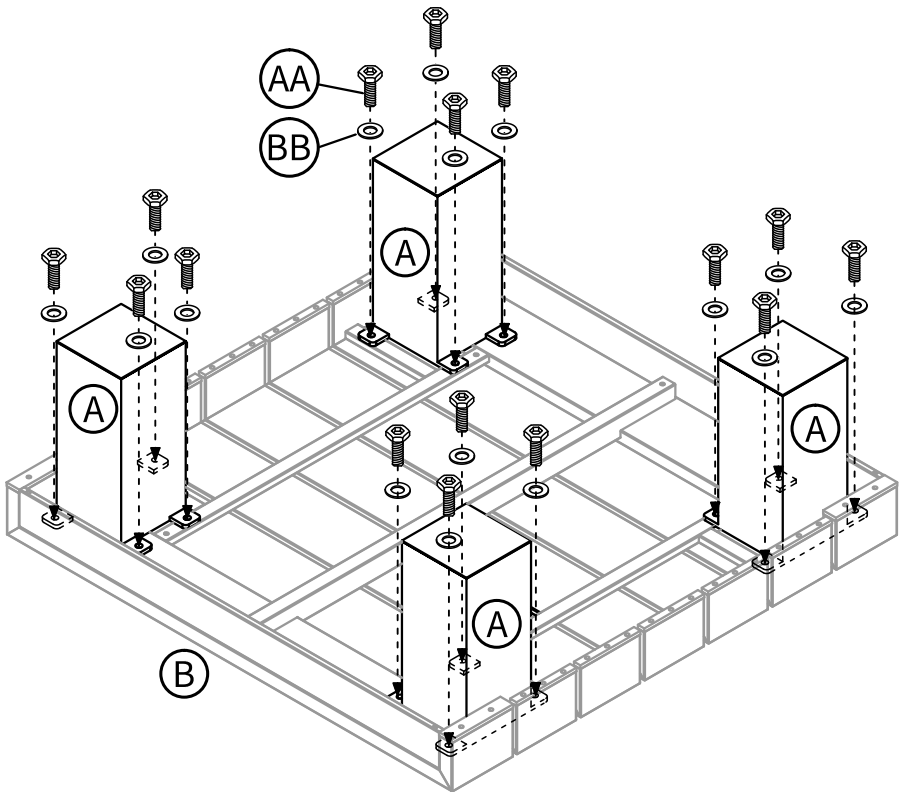

1. Place Table Top (B) top-down.
2. Attach one (1) Table Leg (A) at each corner using four (4) M6*20 Bolts (AA) and four (4) M6 Flat Washers (BB) each.
3. Flip the assembly over.



Assembly Instructions

Please read this before you proceed.

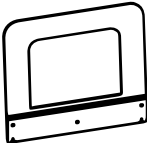NUMBER	COMPONENT	QUANTITY
C	 Aluminum Backrest Panel	2PCS
F	 Armrest Cushion	2PCS




Assembly Instructions

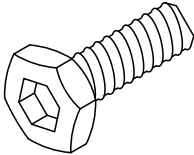NUMBER	COMPONENT	QUANTITY
AA	 Bolt M6*20	10+2PCS
BB	 M6 Flat washer	10+2PCS
CC	 M6 Allen Key	1PC

Assembly Instructions


①

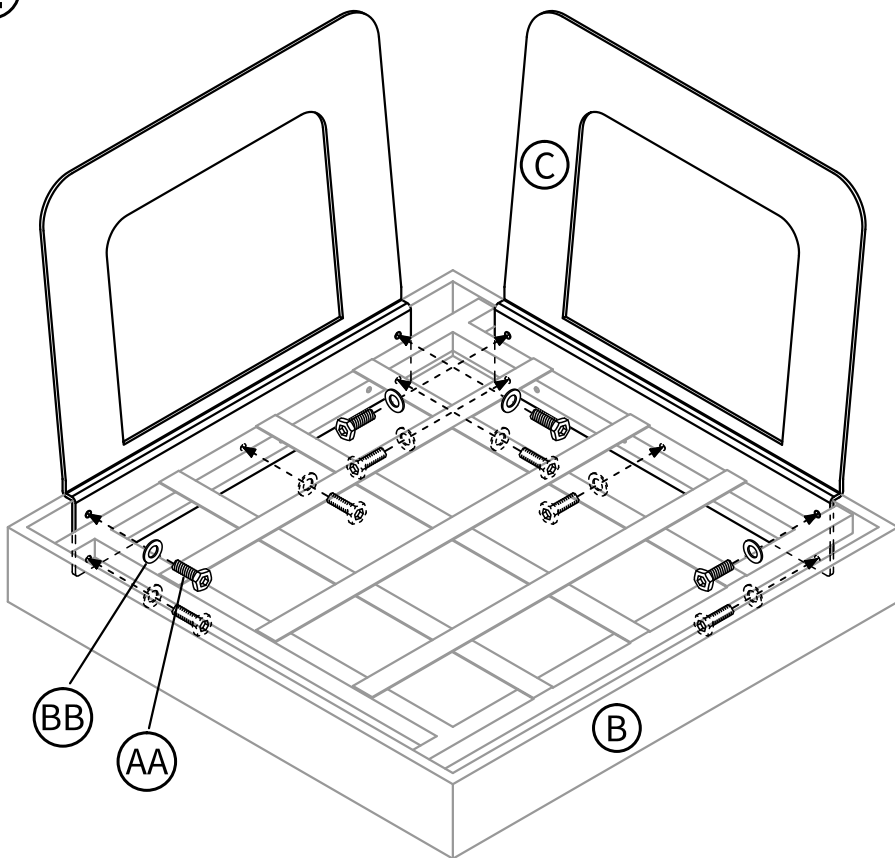

Place the Sofa Seat (B) on the surface with the seat support straps facing up. Attach one (1) Aluminum Backrest Panel (C) to a side of the Sofa Seat (B) using two (2) M6*20 Bolts (AA) and two (2) M6 Flat Washers (BB) on each end. Add one (1) more M6*20 Bolt (AA) with one (1) M6 Flat Washer (BB) in the center. Place one (1) Aluminum Backrest Panel (C) on the side of the Sofa Seat (B) next to the first one and secure using five (5) M6*20 Bolts (AA) and five (5) M6 Flat Washers (BB) in the same pattern.

Assembly Instructions

②

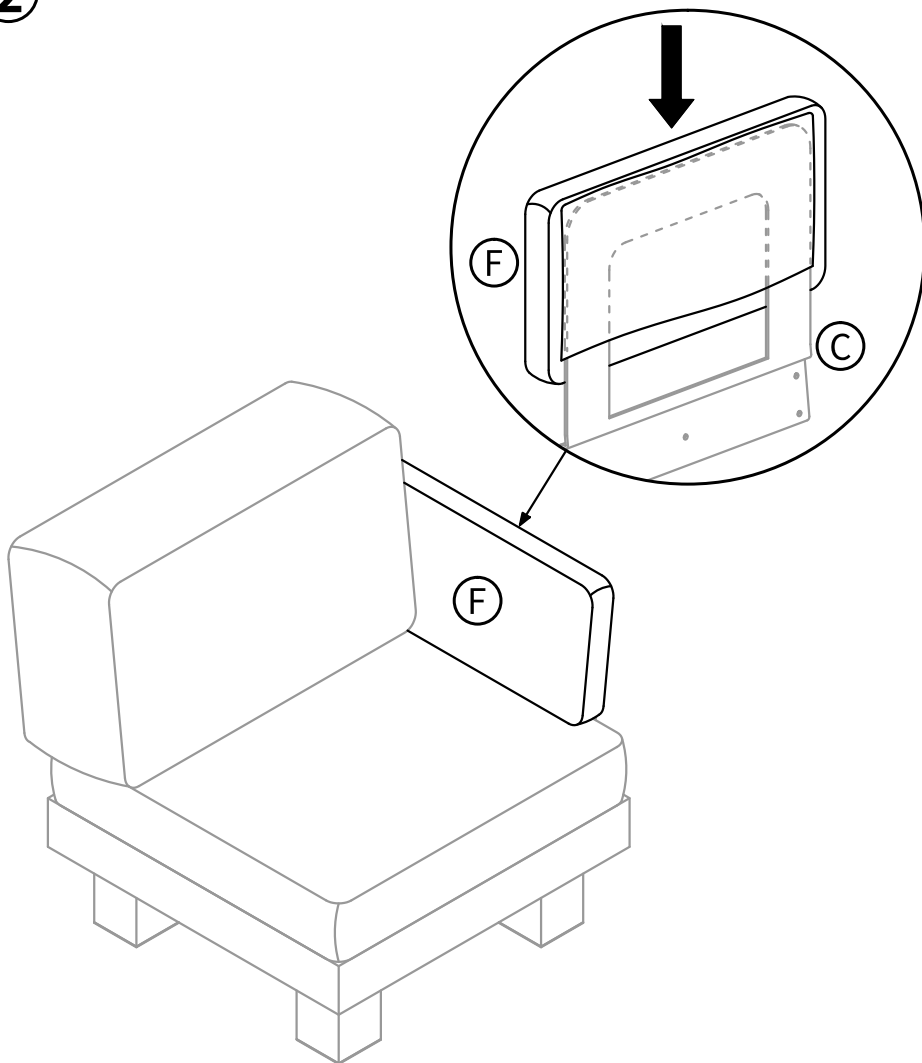

Place the Armrest Cushion (F) against the other Aluminum Backrest Panel (C).