
UPHOLSTERED BED
Asselmbly Instructions
Lit rembourré
Instructions de montage

Queen: N733P539510
N733P539511
King: N733P539512
N733P539513

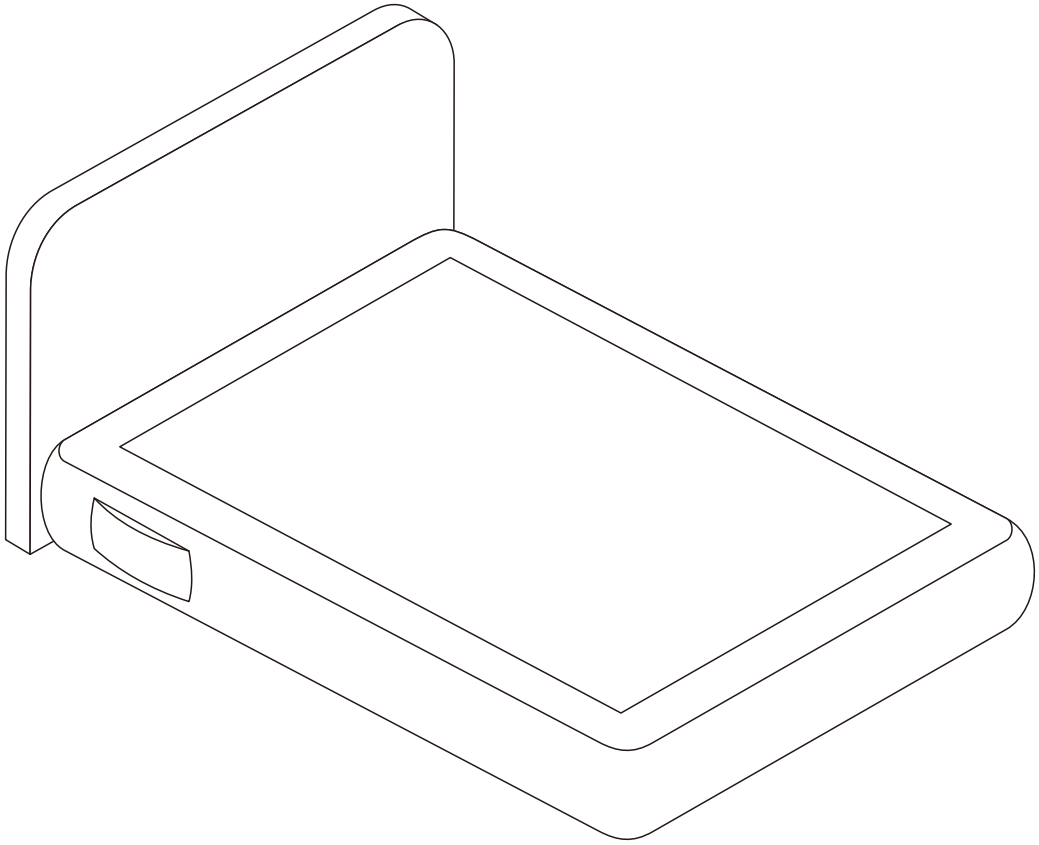

Dear Customers,


Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADEINCHINA



Chers clients,

Nous vous remercions d'avoir acheté notre produit. Veuillez lire attentivement ce manuel d'instructions après avoir reçu ce produit. Il vous aidera à assembler ce produit rapidement, en toute sécurité et correctement. Vous pouvez conserver ce manuel pour référence ultérieure.




MADEINCHINA

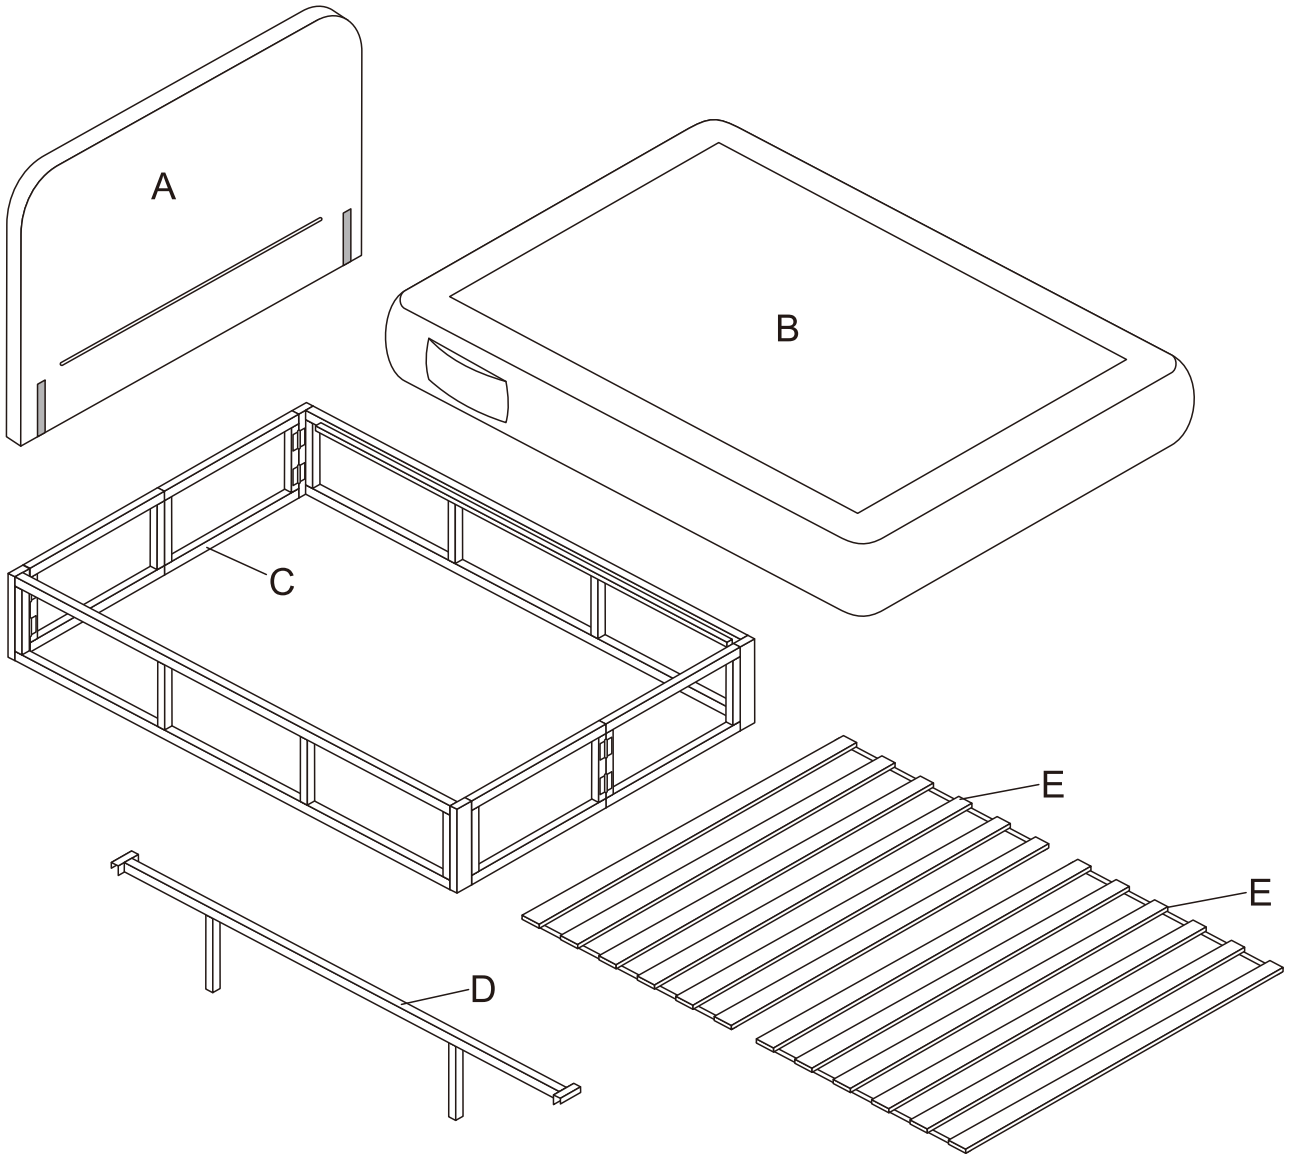
A
B
C
D
E
E


Part List(Box 1-N733P539510-N733P539512)
Liste des pièces (boîte 1-N733P539510-N733P539512)

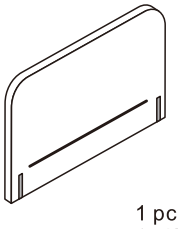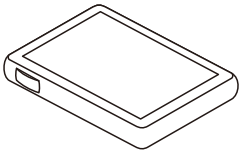A	B
	
1 pc 1 pièce	1 pc 1 pièce


Part List(Box 2-N733P539511-N733P539513)
Liste des pièces (boîte 2-N733P539511-N733P539513)

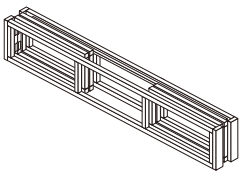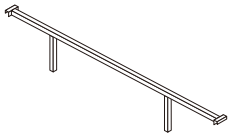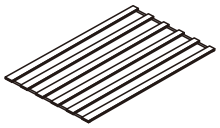C	D	E
		
1 pc 1 pièce	1 pc 1 pièce	2 pcs 2 pièces


1

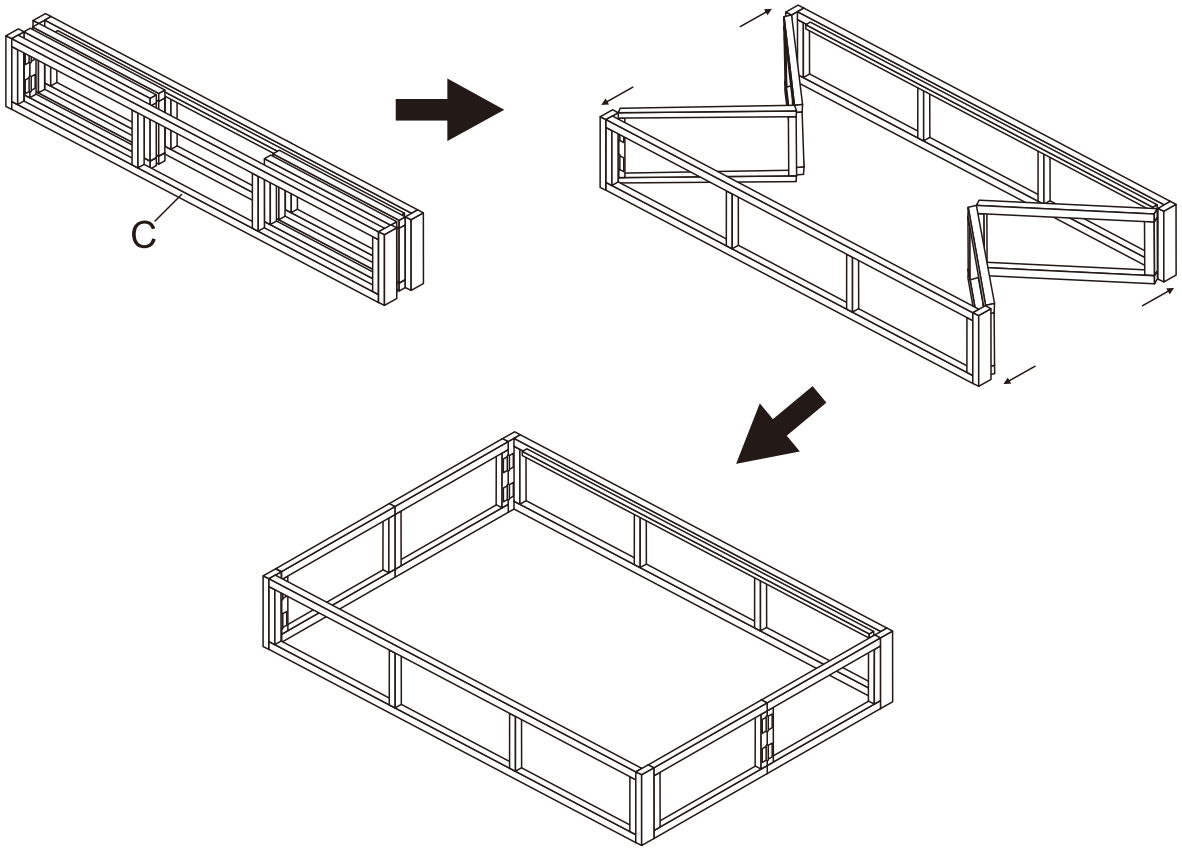


2

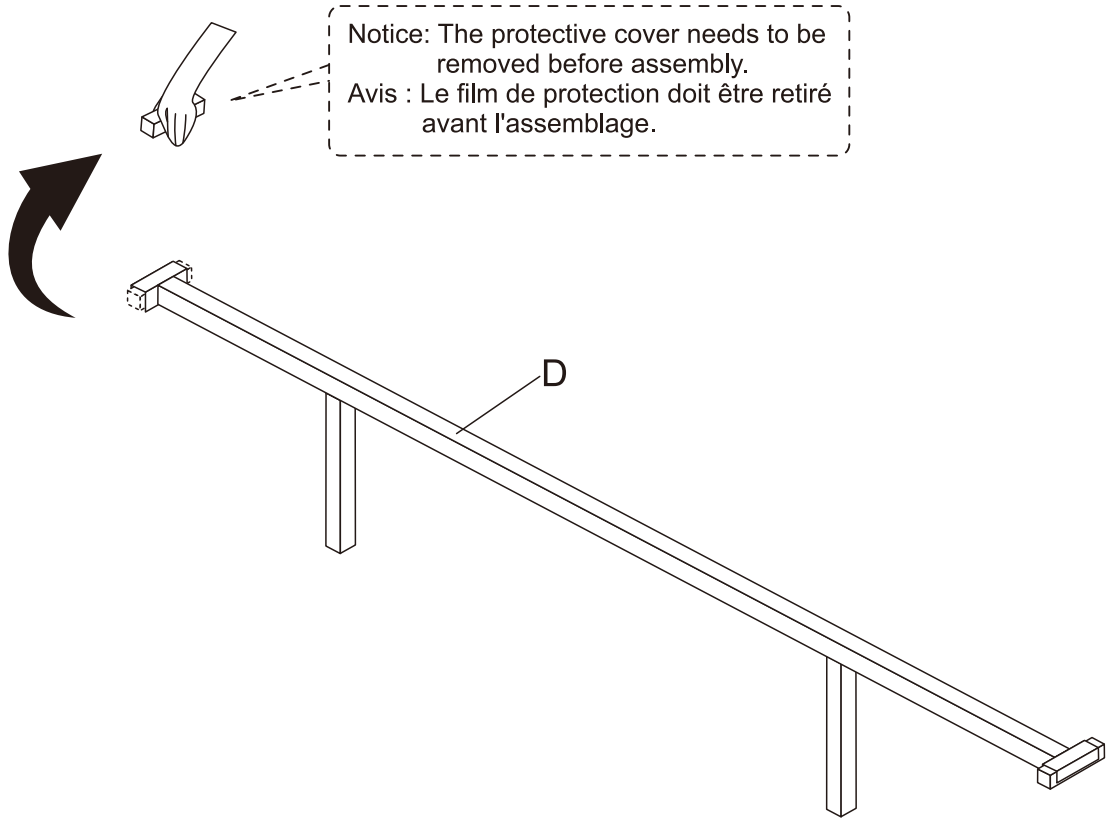
Notice: The protective cover needs to be removed before assembly.
Avis : Le film de protection doit être retiré avant l'assemblage.
D


3

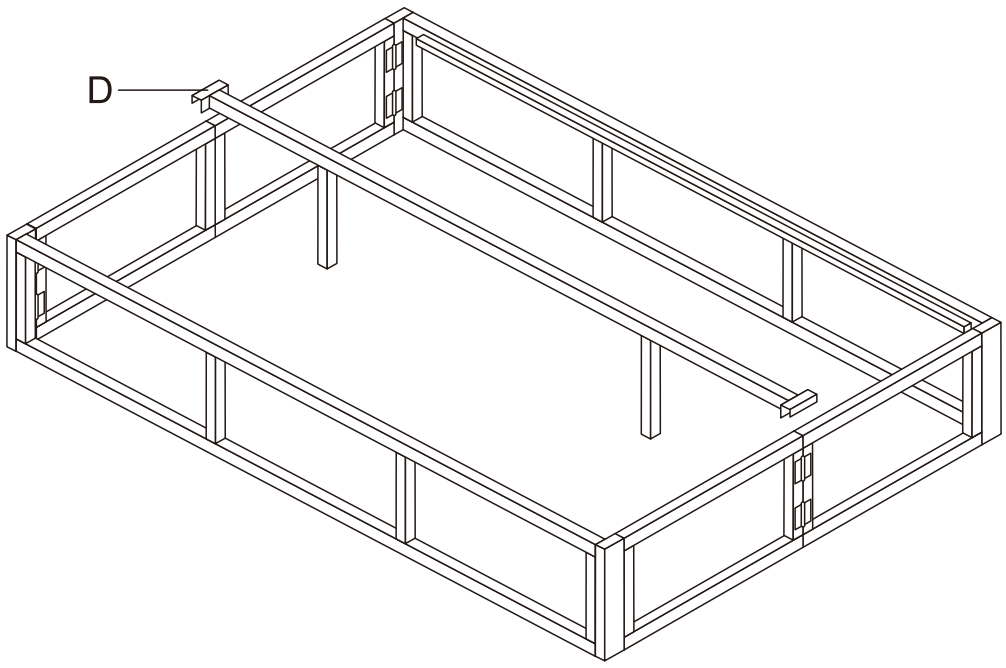

D

4

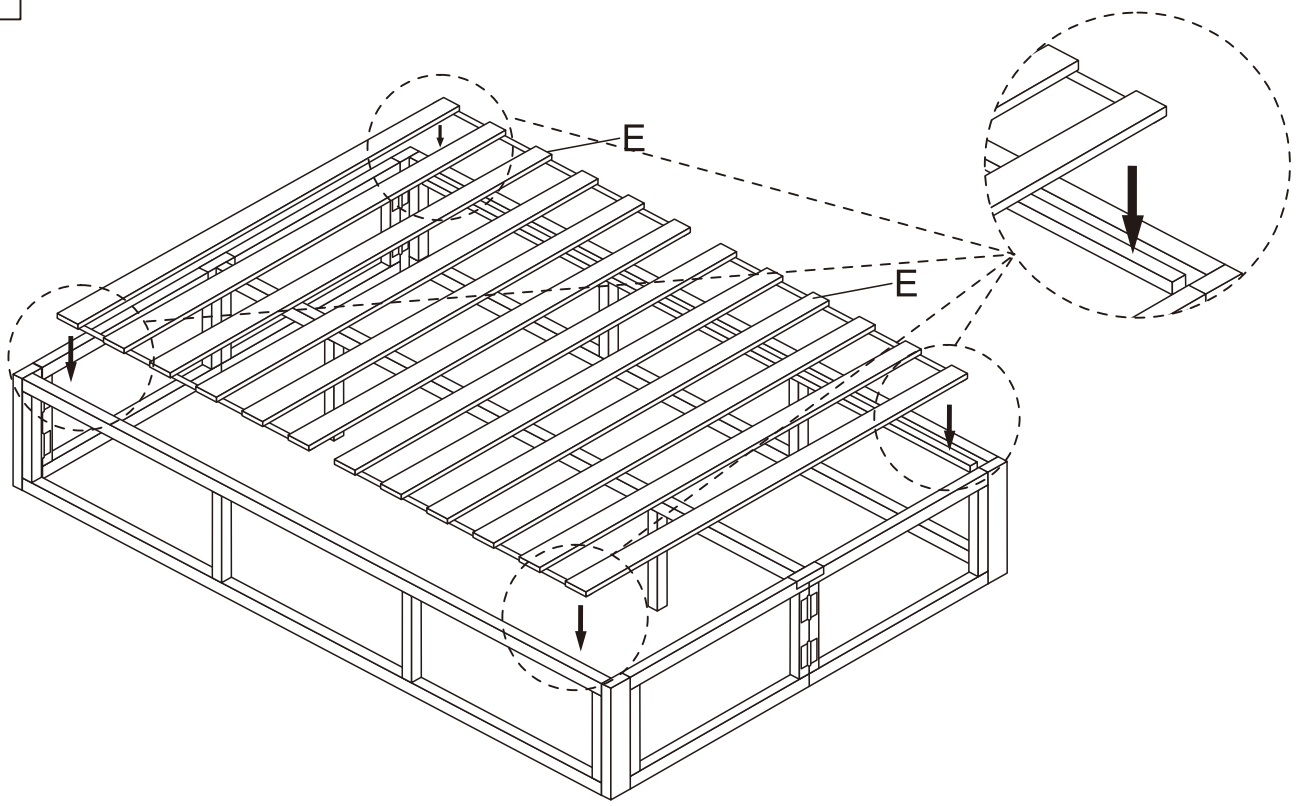


5

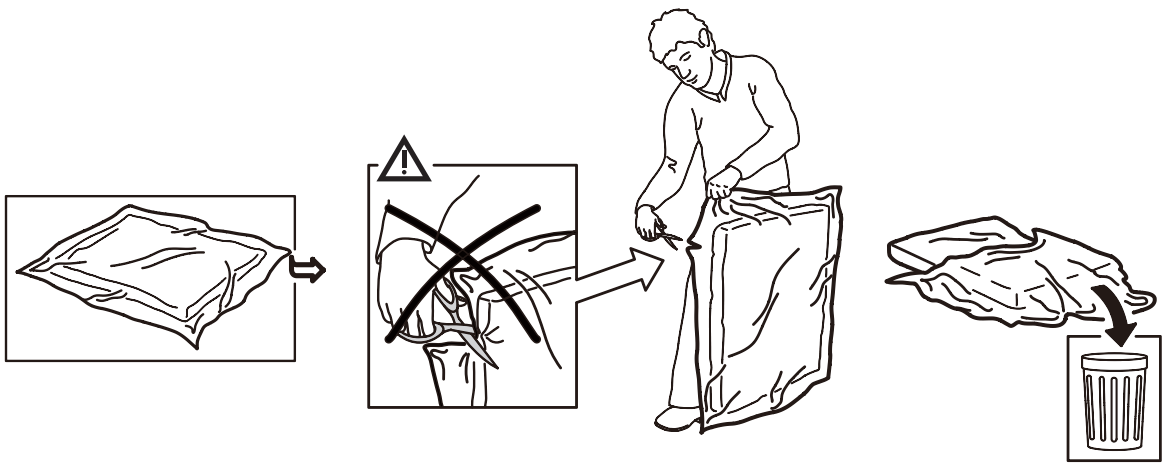


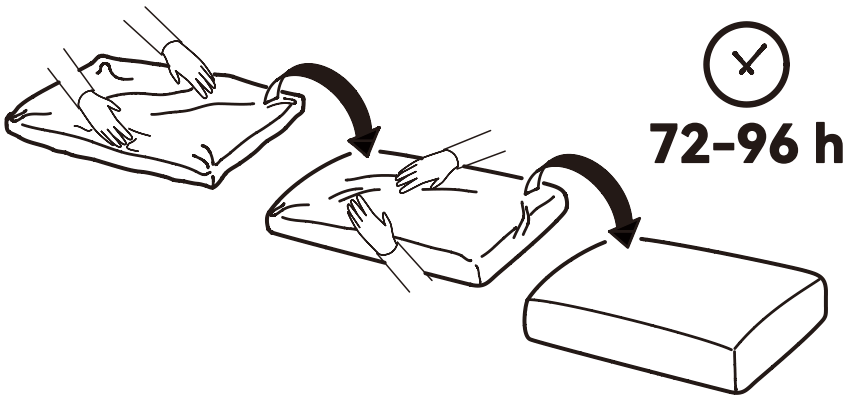

6

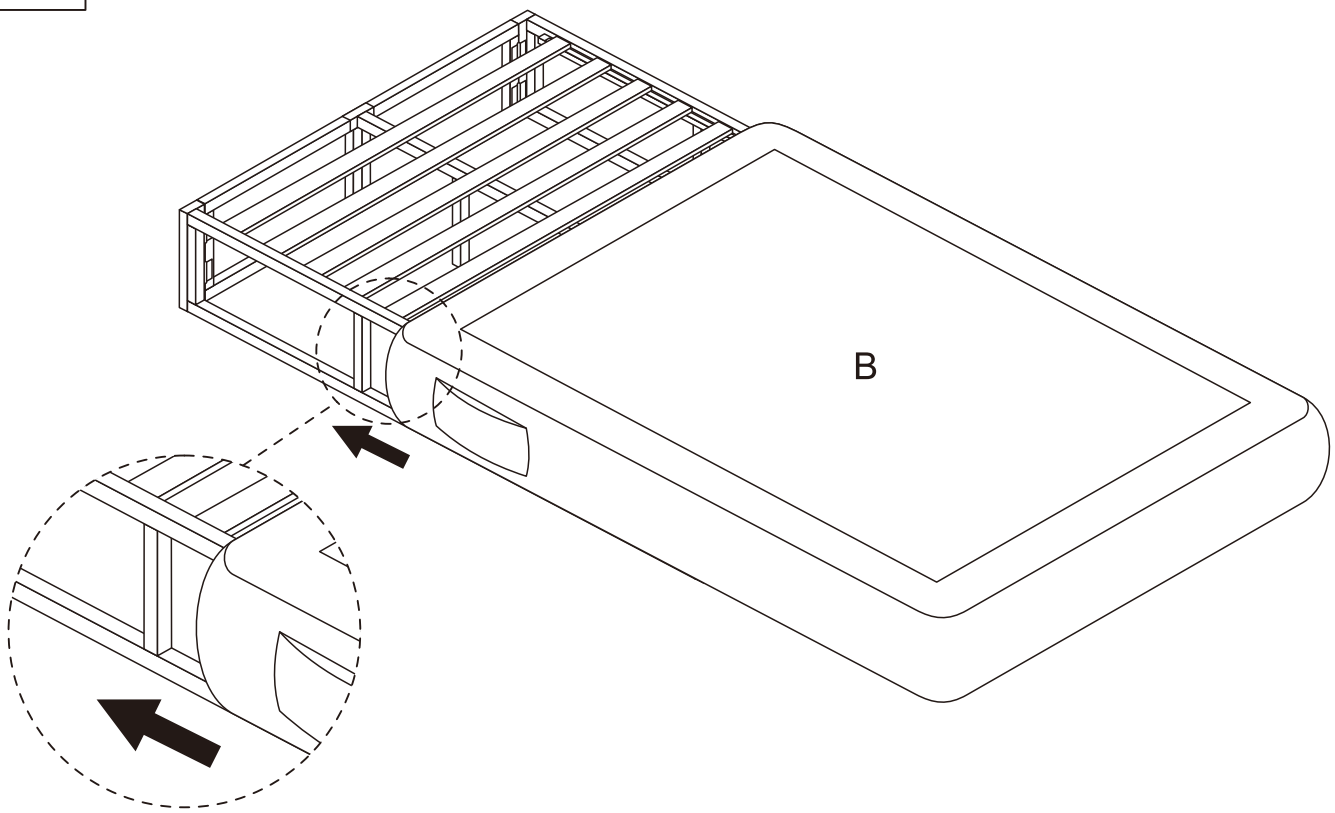


7

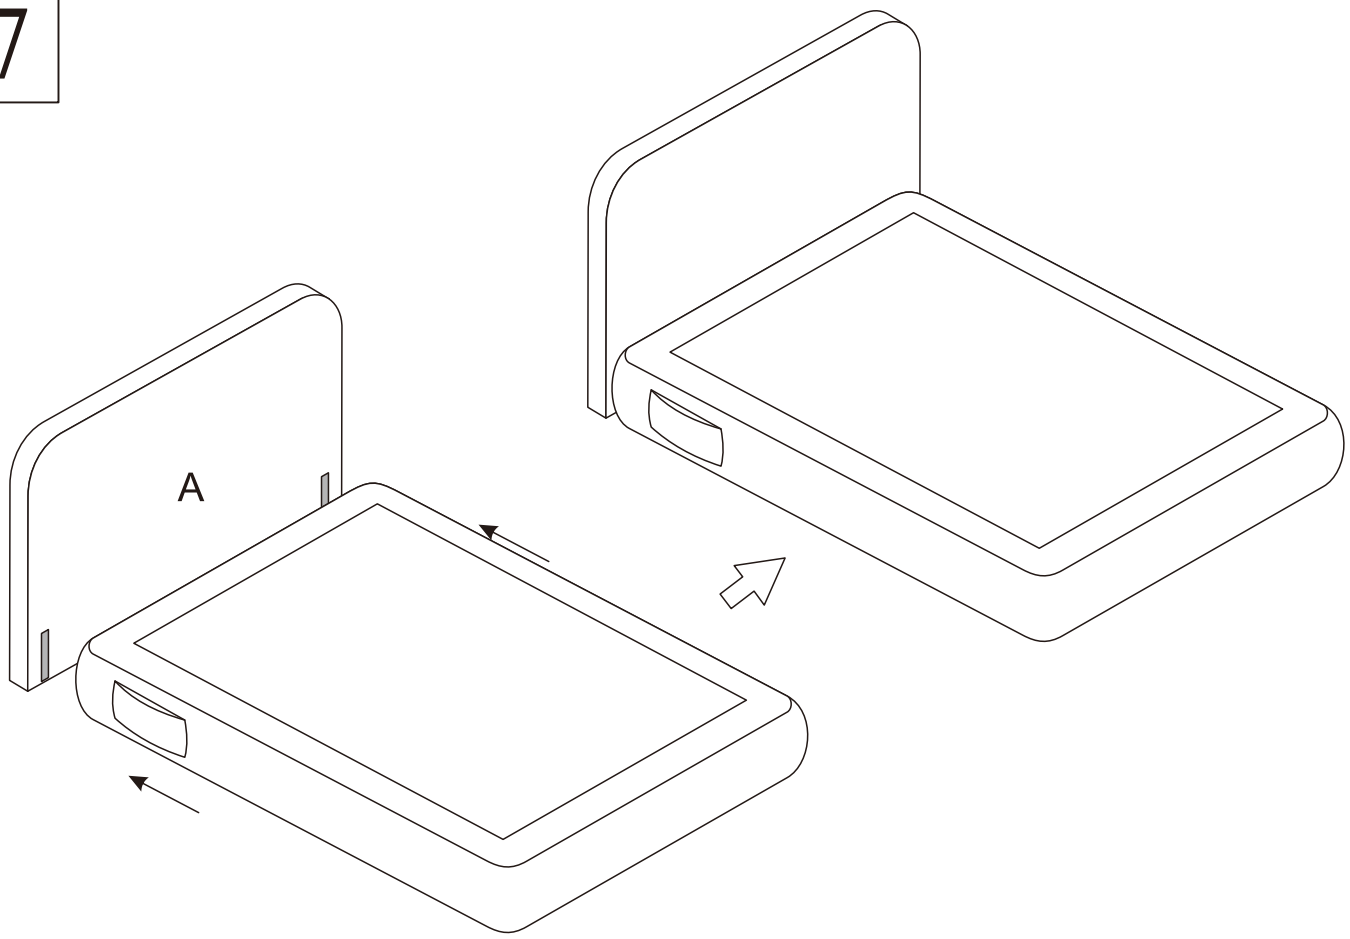

8

Notice: The headboard should be leaned against the wall
Avis : La tête de lit doit être appuyée contre le mur.

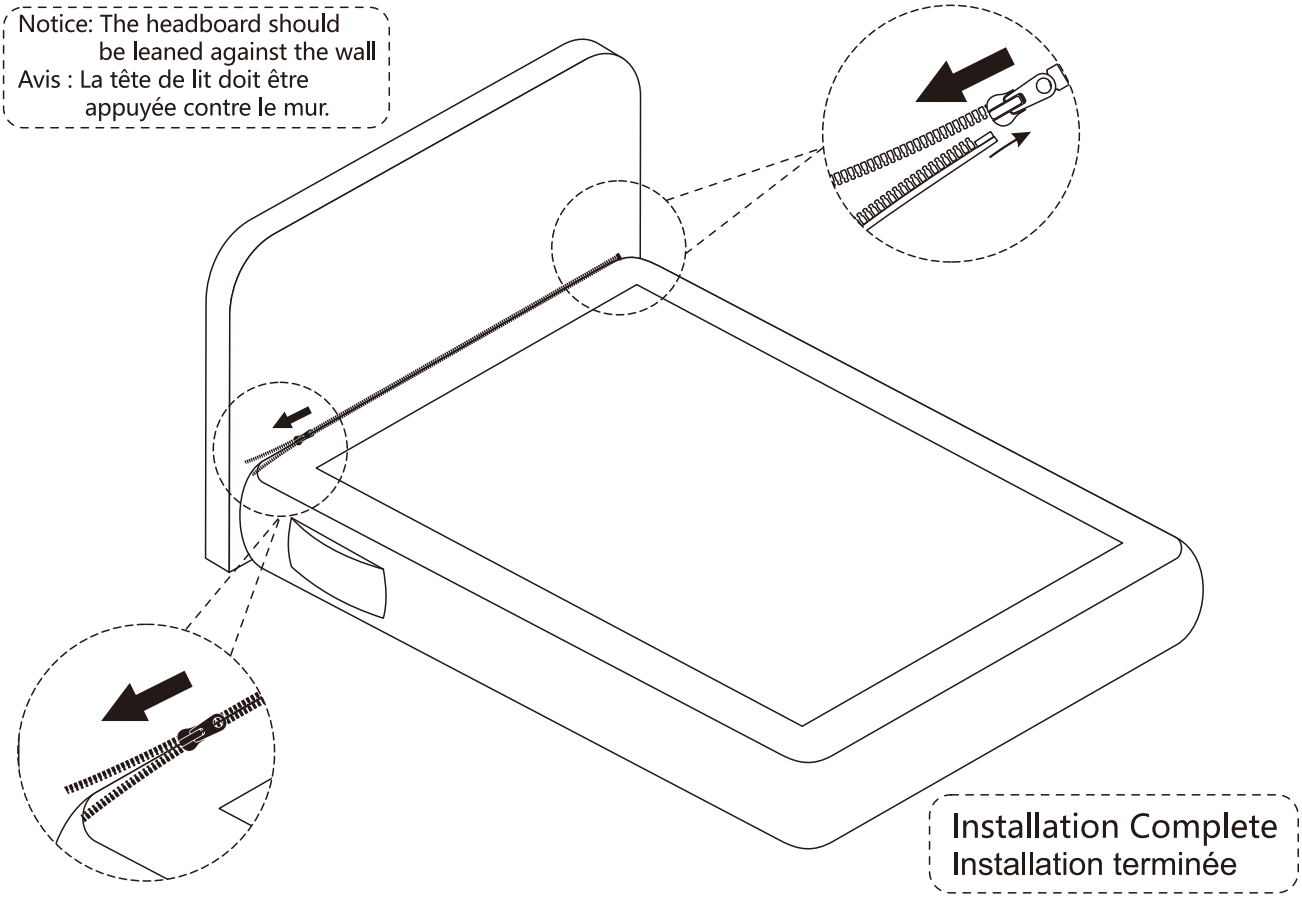

Installation Complete
Installation terminée

9

