
# 6x4FT Storage Shed

## Product ID. 7A4PX

Scan for Support
support@garvee.com

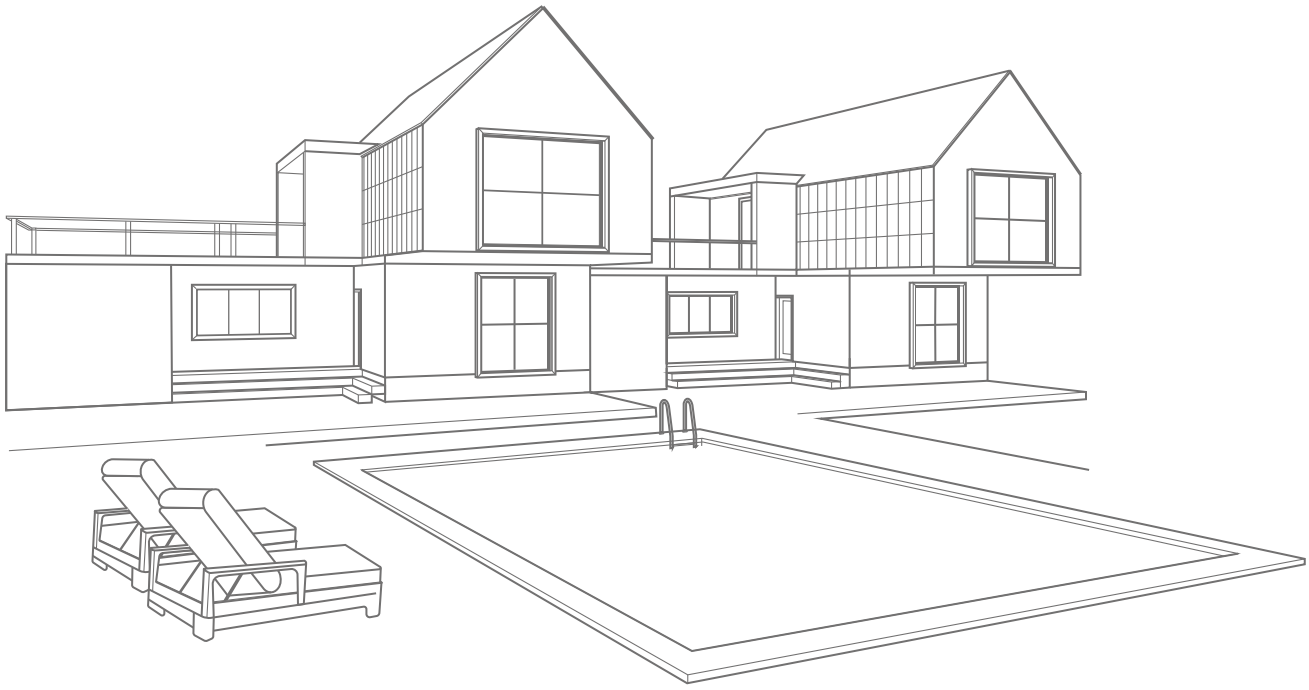

Distributed by
GARVEE.com

V2607270U8F

# PLASTIC GARDEN SHED 6X4FT


## Instructions for Assembly



**WARNING**


Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instrution.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

## Level the ground surface

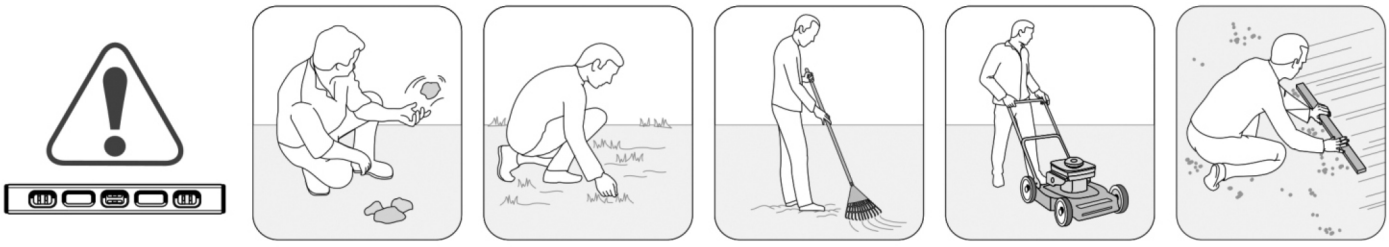


## Recommendation: Construct a wooden or concrete base as afoundation

Option A

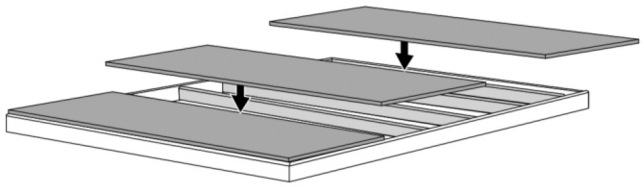


Option B

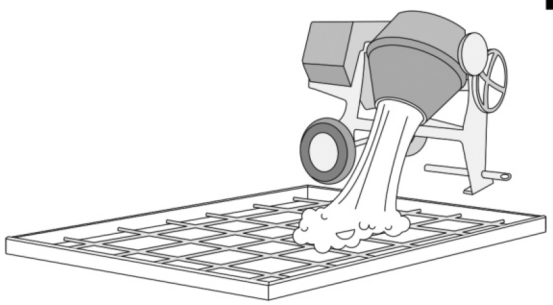

BEFORE STARTING ASSEMBLY

Read the care and safety guidelines at the end of this manual Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly Remove all parts from the package(s) and spread them out on a clean work surface Review all assembly instructions Assemble all the parts according to the direc-tions in this manual Do not skip any steps.

## REQUIRED TOOLS (Tools Not Included)

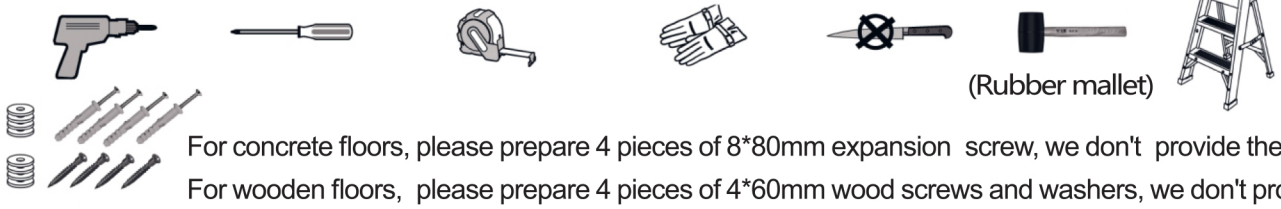



For concrete floors, please prepare 4 pieces of 8*80mm expansion screw, we don't provide them.
For wooden floors, please prepare 4 pieces of 4*60mm wood screws and washers, we don't provide them.



**ASSEMBLY REQUIRES TWO PEOPLE**

# PARTS LIST

| NO. | PART. | Qty. |
|---|---|---|
| P1 |  | 1 |
| P2 |  | 1 |
| P3 |  | 1 |
| P4 |  | 2 |
| P5 |  | 2 |
| P6 |  | 2 |
| P7 |  | 2 |
| P8 |  | 1 |
| P9 |  | 1 |
| P10 |  | 2 |
| P11 |  | 4 |
| P12 |  | 1 |
| P13 |  | 1 |
| P14 |  | 2 |
| P15 |  | 1 |
| P16 |  | 1 |
| P17 |  | 2 |
| P18 |  | 1 |
| P19 |  | 1 |
| P20 |  | 2 |
| P21 |  | 1 |
| P22 |  | 1 |
| P23 |  | 1 |

| NO. | PART. | Qty. |
|---|---|---|
| P24 |  | 1 |
| J1 |  | 4 |
| J2 |  | 4 |
| J3 |  | 2 |
| J4 |  | 2 |
| J5 |  | 2 |
| J6 |  | 2 |
| M1 |  | 1 |
| M2 |  | 1 |
| M3 |  | 1 |
| M4 |  | 1 |
| M5 |  | 1 |
| M6 |  | 1 |
| M7 |  | 4 |
| M8 |  | 3 |
| M9 |  | 1 |
| M10 |  | 1 |
| M11 |  | 6 |
| M12 |  | 2 |
| BY |  | 2 |
| L1 |  | 1 |
| L2 |  | 2 |
| L3 |  | 2 |


| NO. | PART. | Qty. |
|---|---|---|
| L4 |  | 4 |
| L5A |  | 4 |
| L5B |  | 4 |
| L6A |  | 2 |
| L6B |  | 2 |
| H1 |  | 1 |
| H2 |  | 1 |
| C1 |  | 1 |
| C2 |  | 1 |
| C3 |  | 2 |
| SG |  | 2 |
| D1 |  | 220 |
| D2 |  | 80 |
| D4 |  | 50 |
| J7 |  | 8 |
| G |  | 1 |




- Use spatula (part"SG") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing

# FLOOR ASSEMBLY

● Use spatula (part "SG") for easier insertion of panel into profile

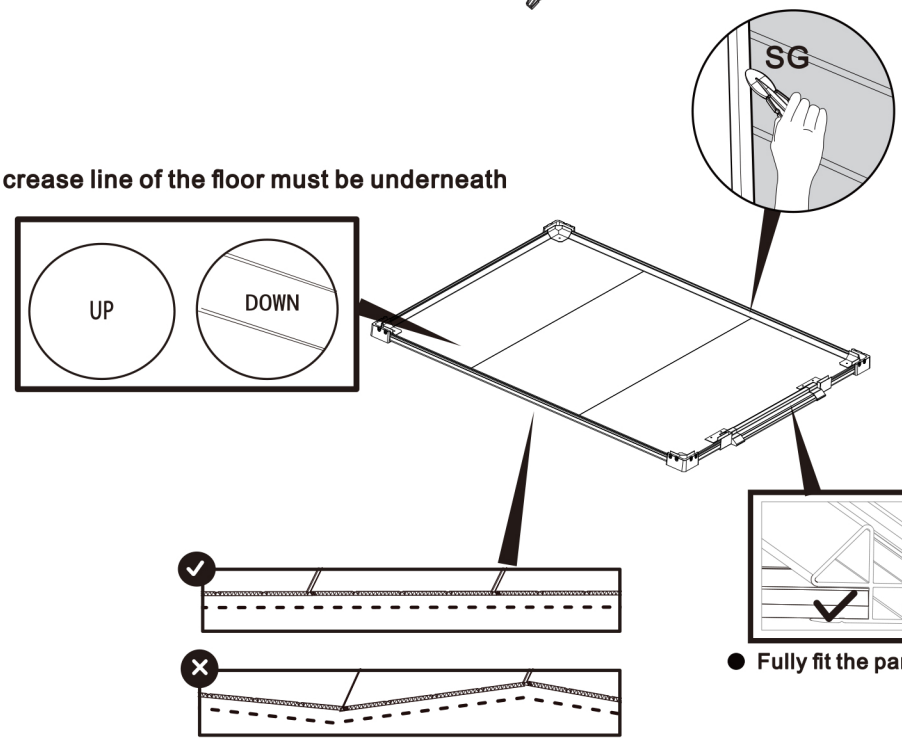




**Note: The crease line of the floor must be underneath**


● **Fully fit the panel inside the profile**

## Step 1



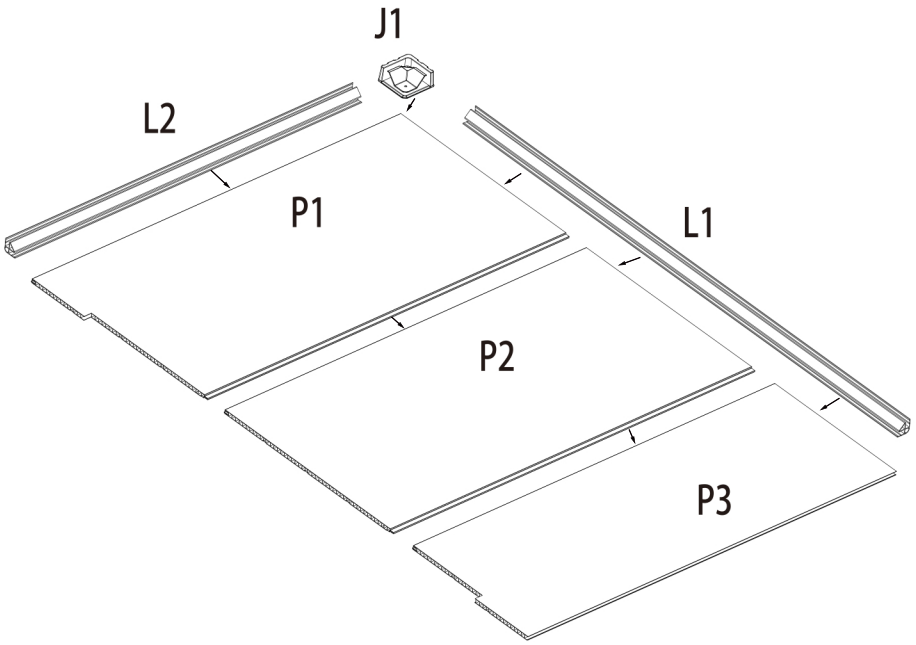


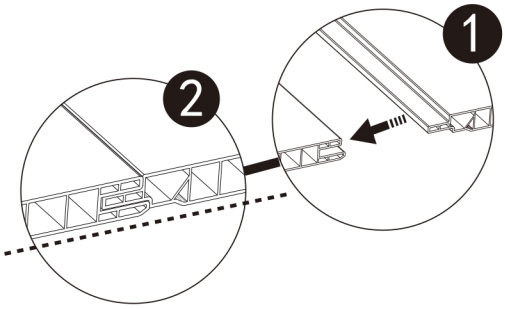


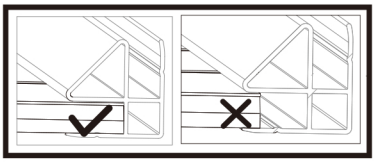
● **Fully fit the panel inside the profile**

## Step 2

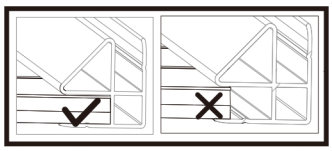



● Fully fit the panel inside the profile

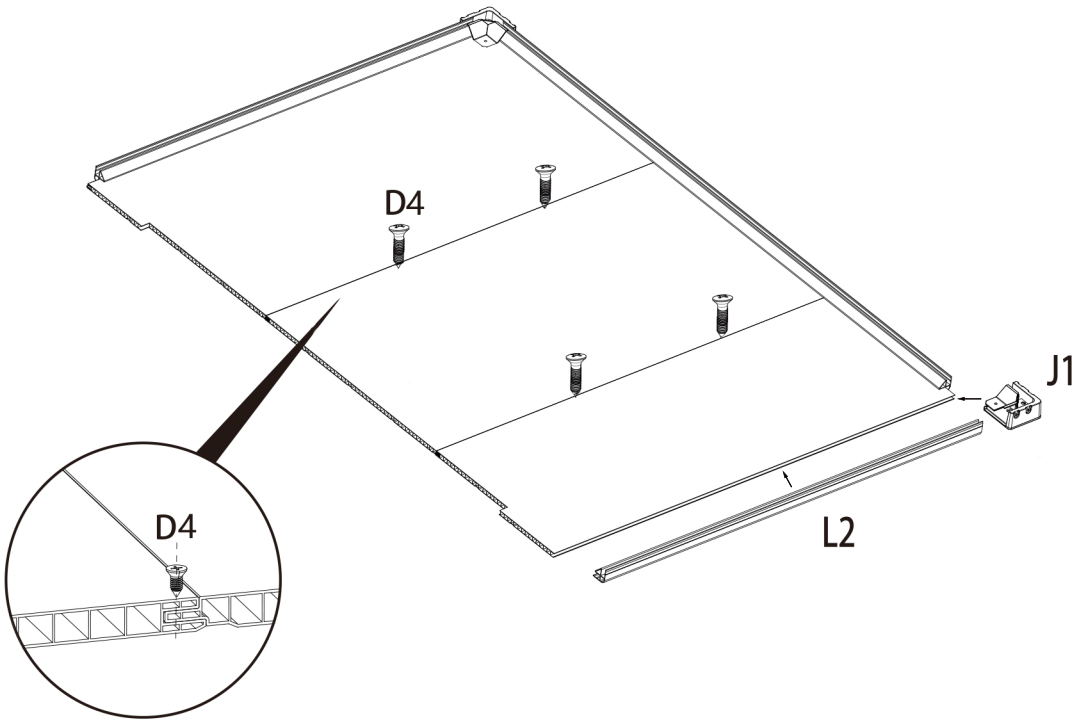


## Step 3




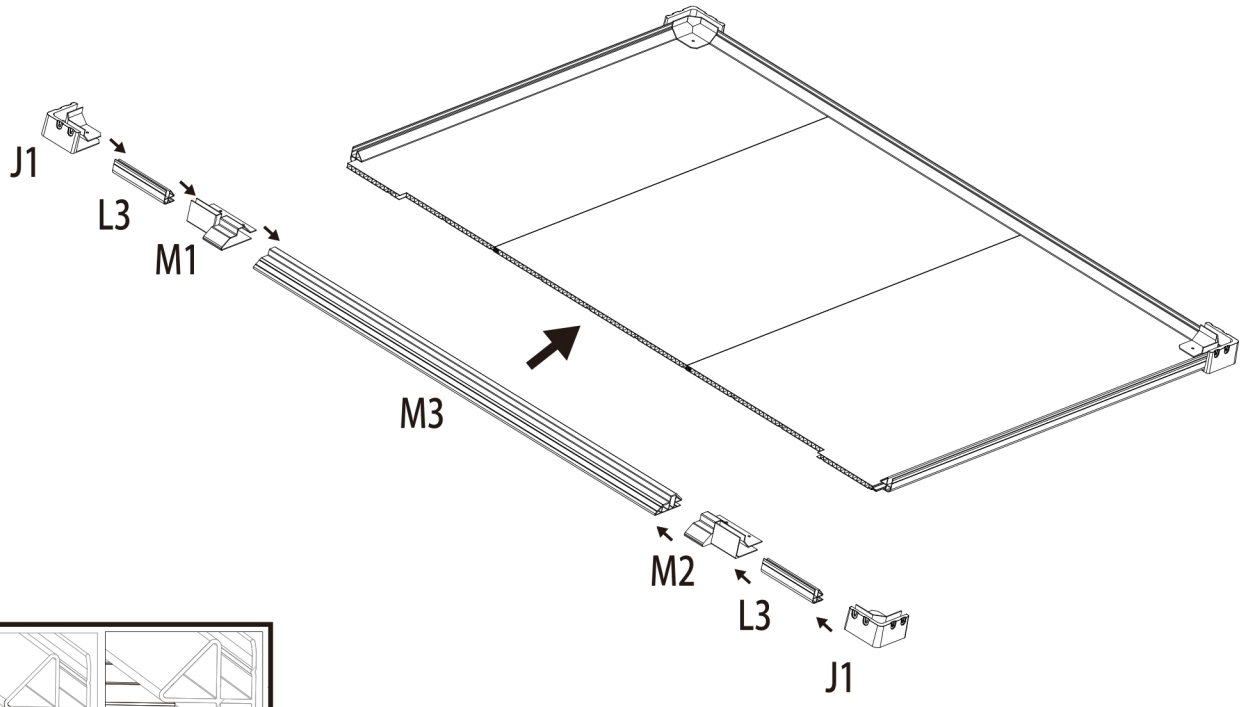

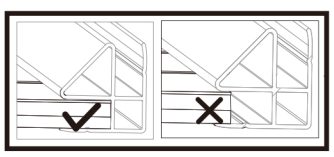



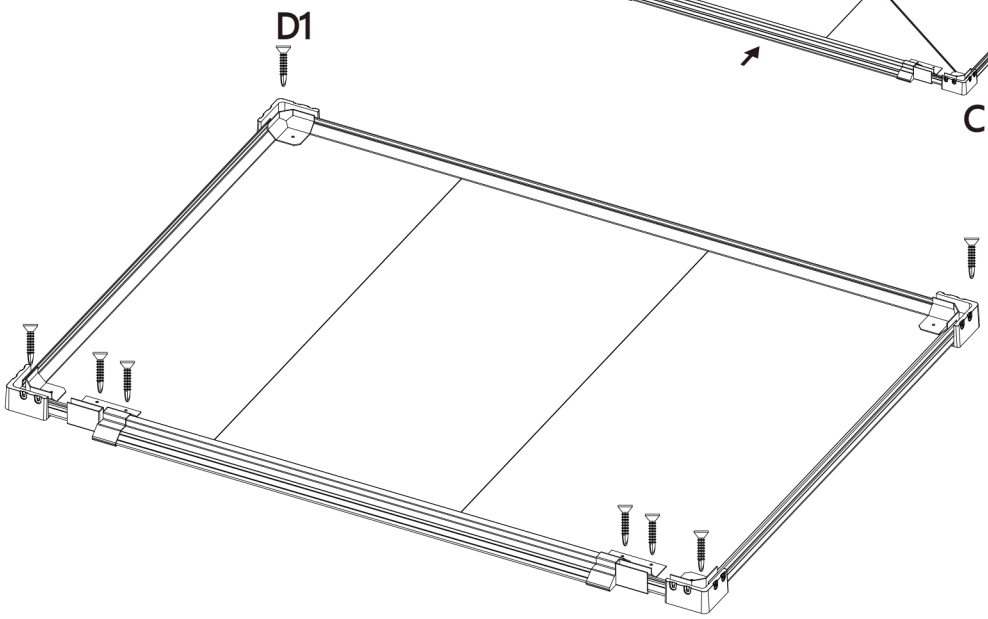
● Fully fit the panel inside the profile

## Step 4

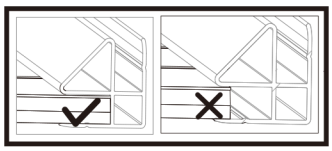


● Fully fit the panel inside the profile

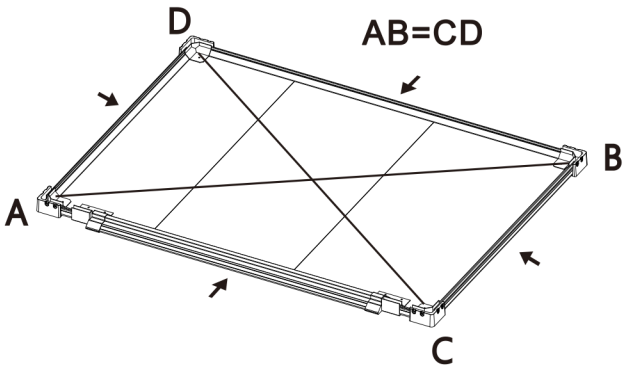


## Step 5



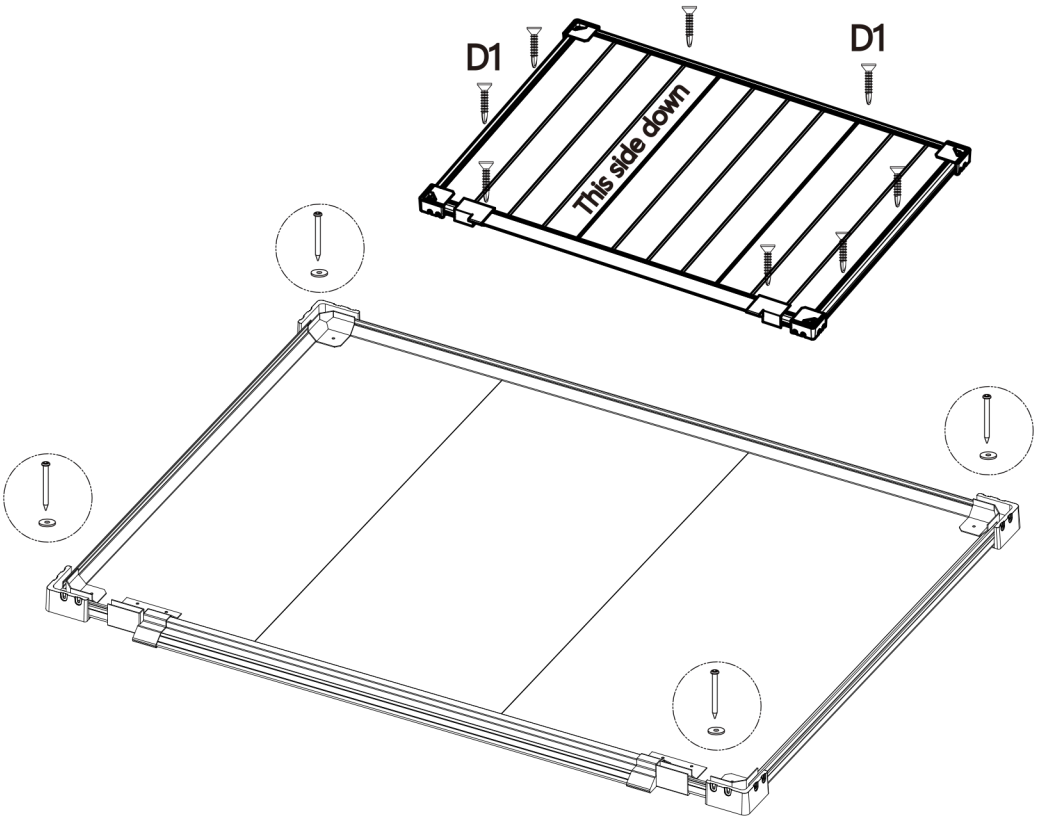



For concrete floors, please prepare 4 pieces of 8*80mm expansion screw,we don't provide them.


For wooden floors, please prepare 4 pieces of 4*60mm wood screws and washers,we don't provide them.

## Step 6



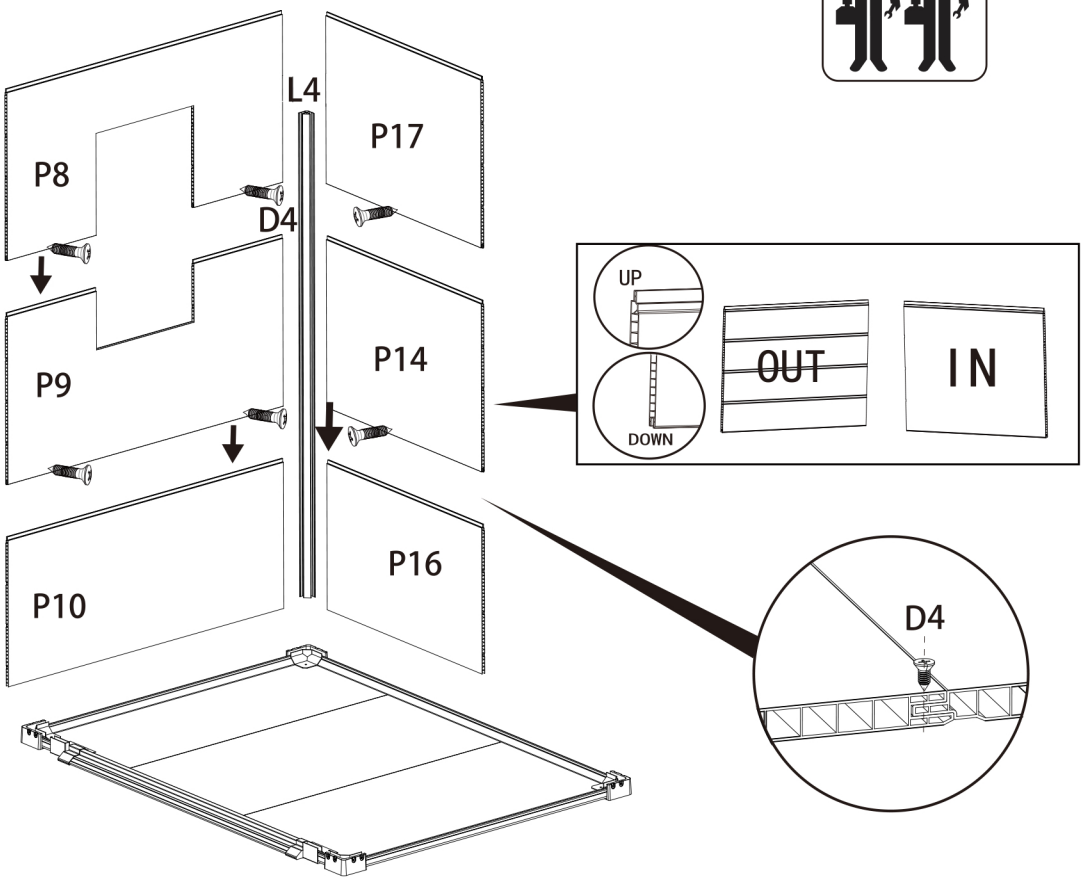


## Step 7

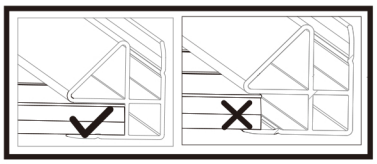



● Fully fit the panel inside the profile




## Step 8



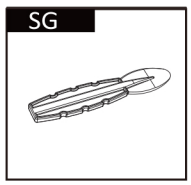


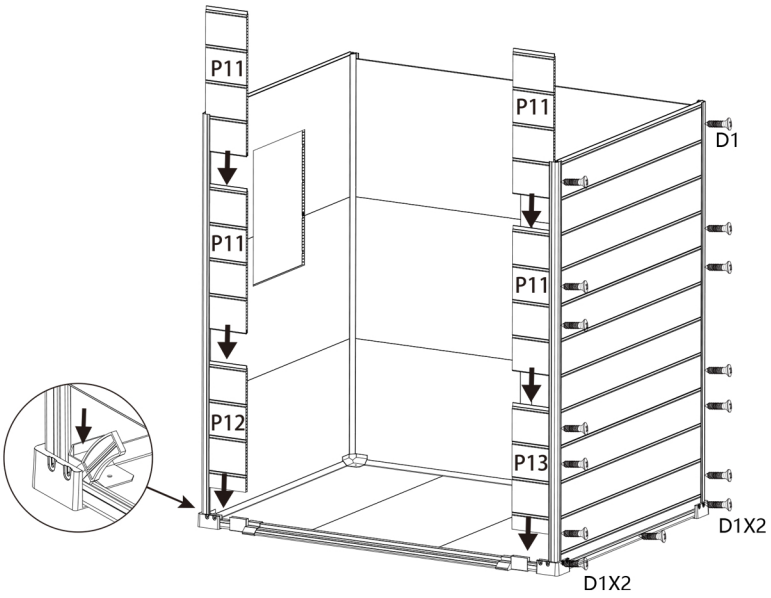


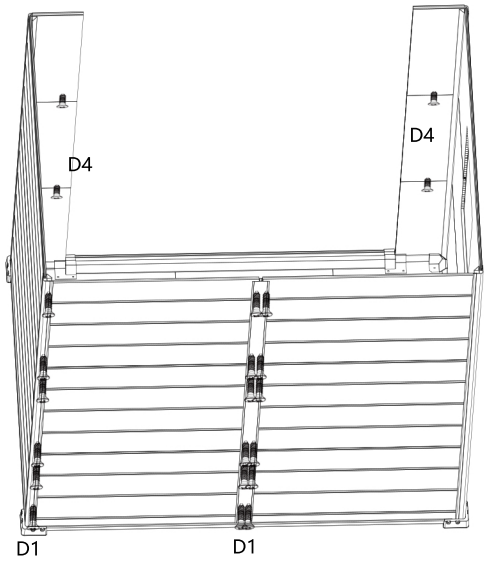

## Step 9



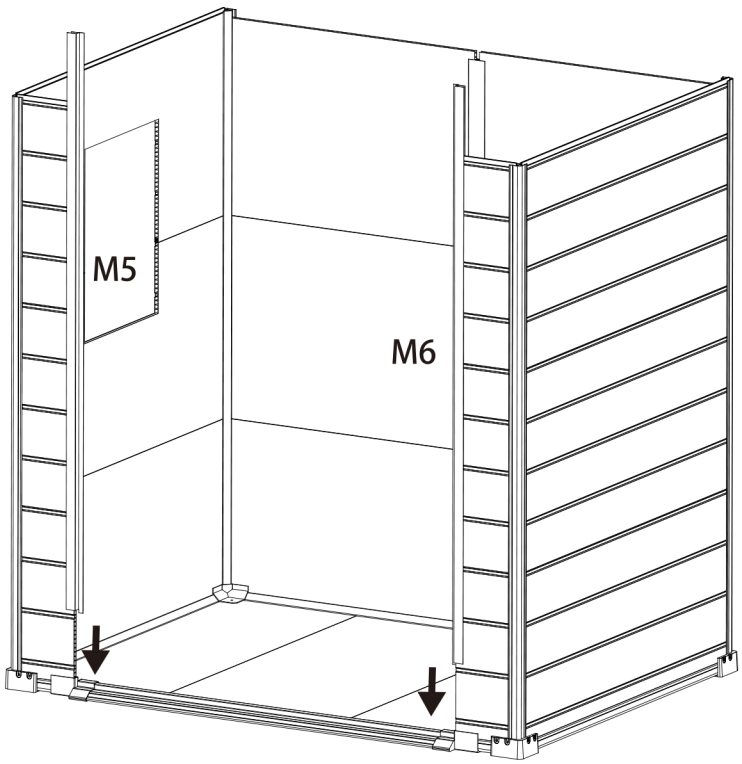


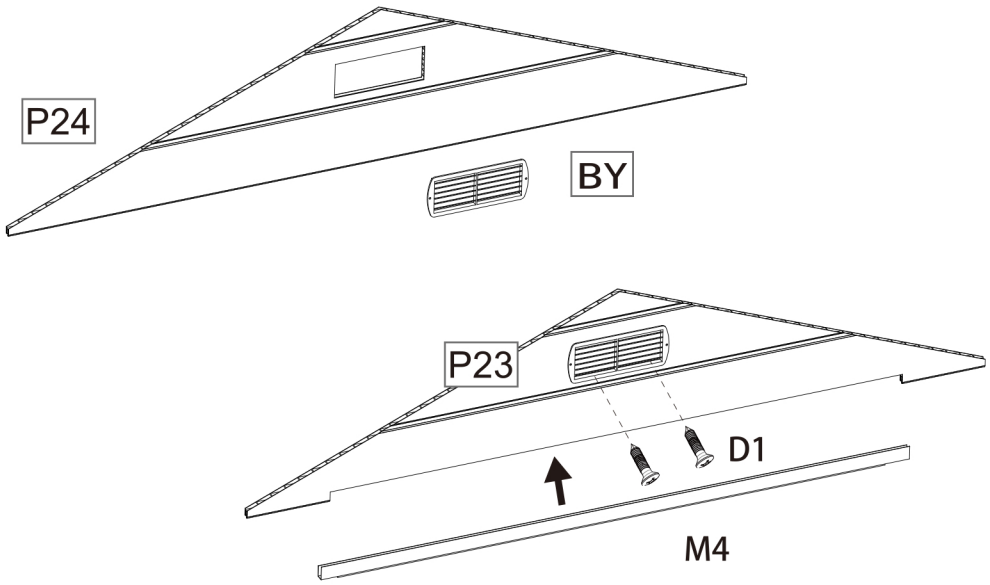
## Step 10





## Step 11




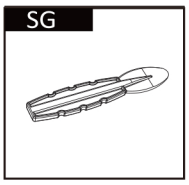

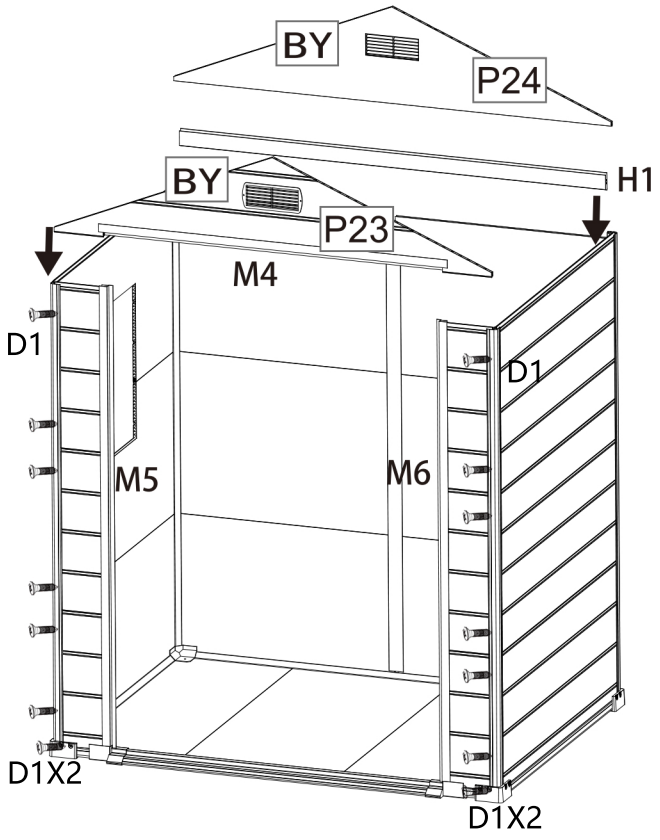


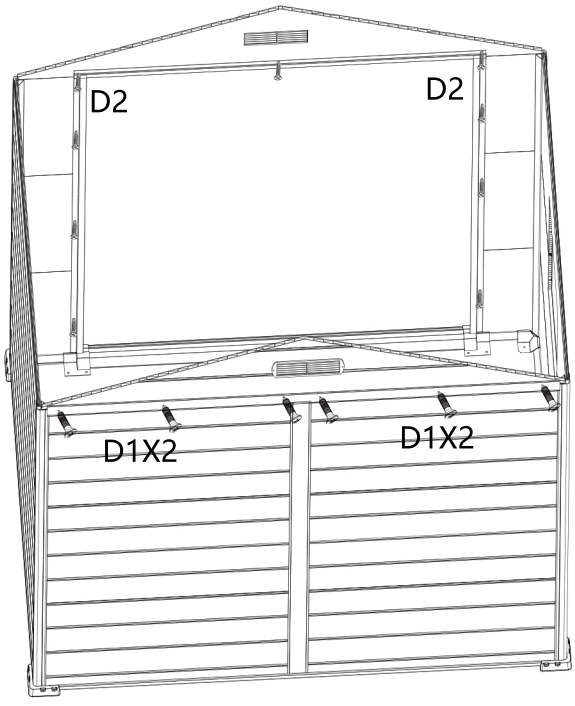
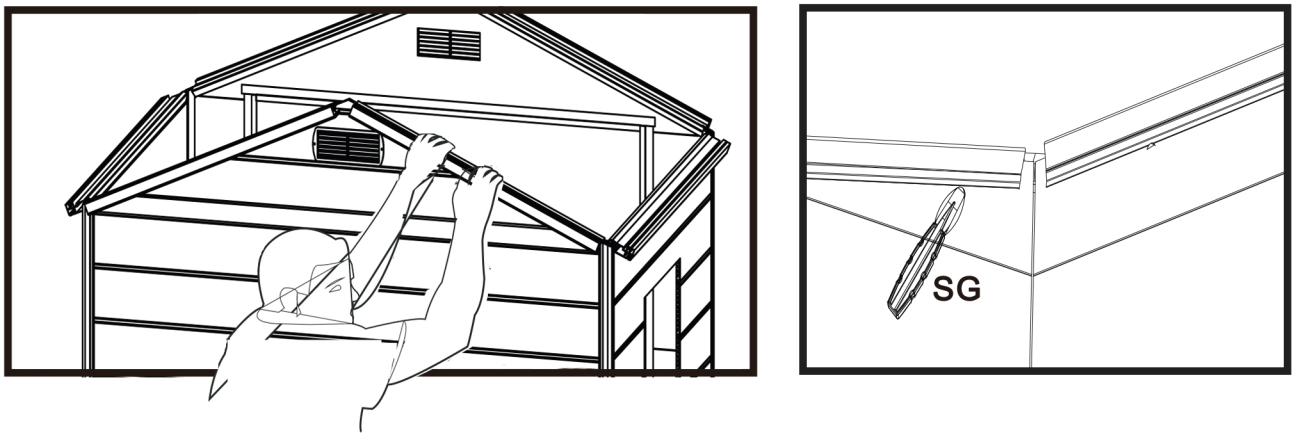
## Step 12

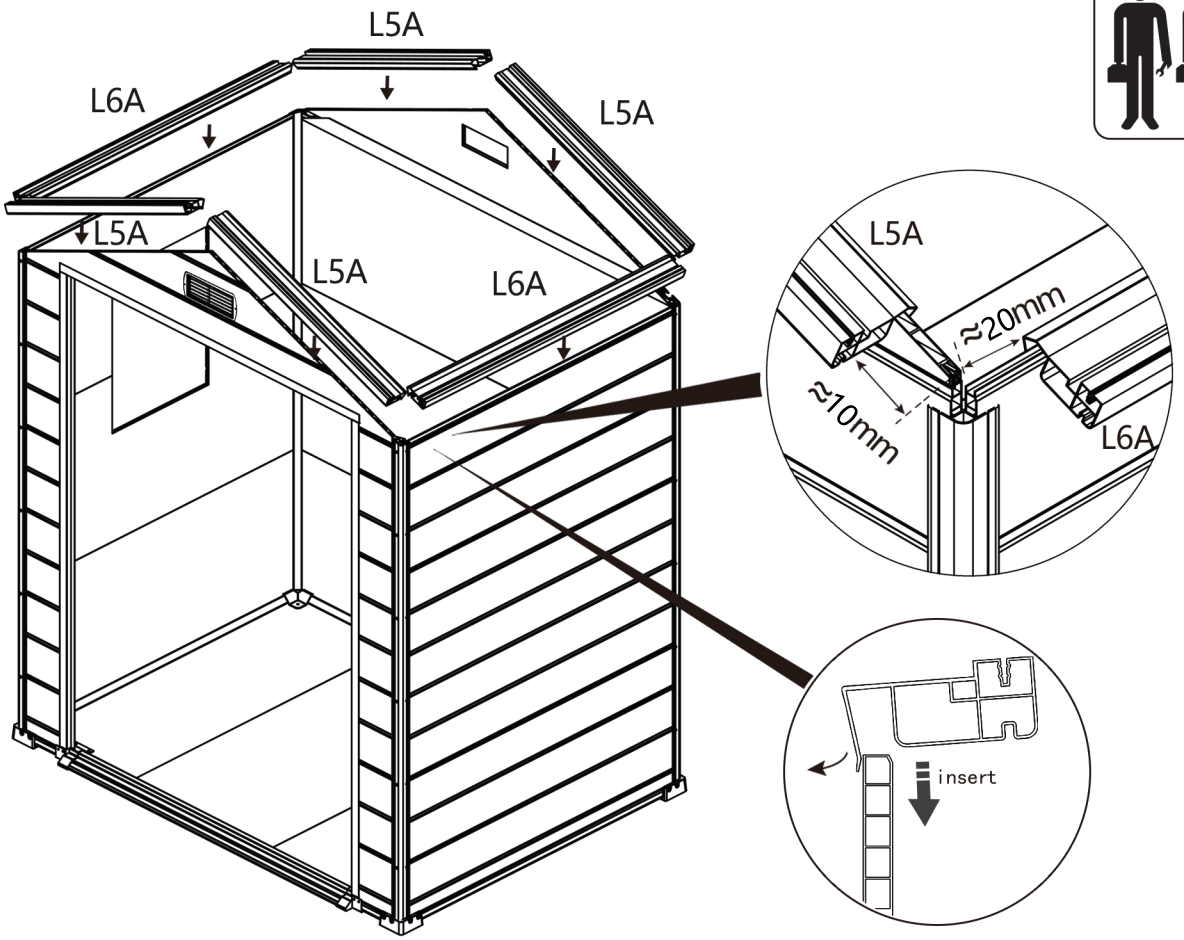


**Fully fit the panel inside the profile**


## Step 13

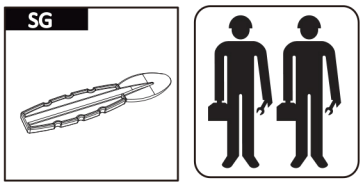






**Fully fit the panels inside the profiles of roof**

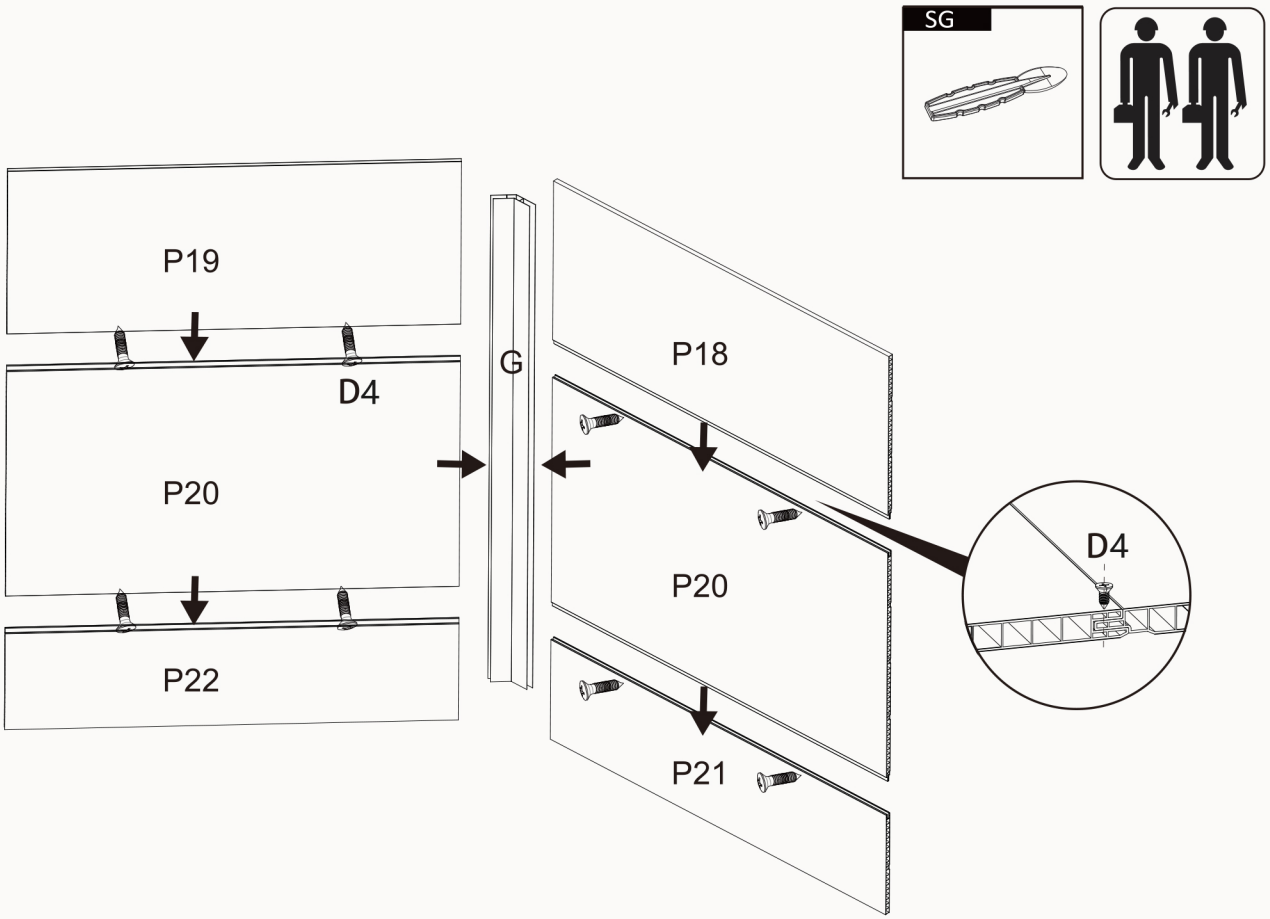
## Step 14

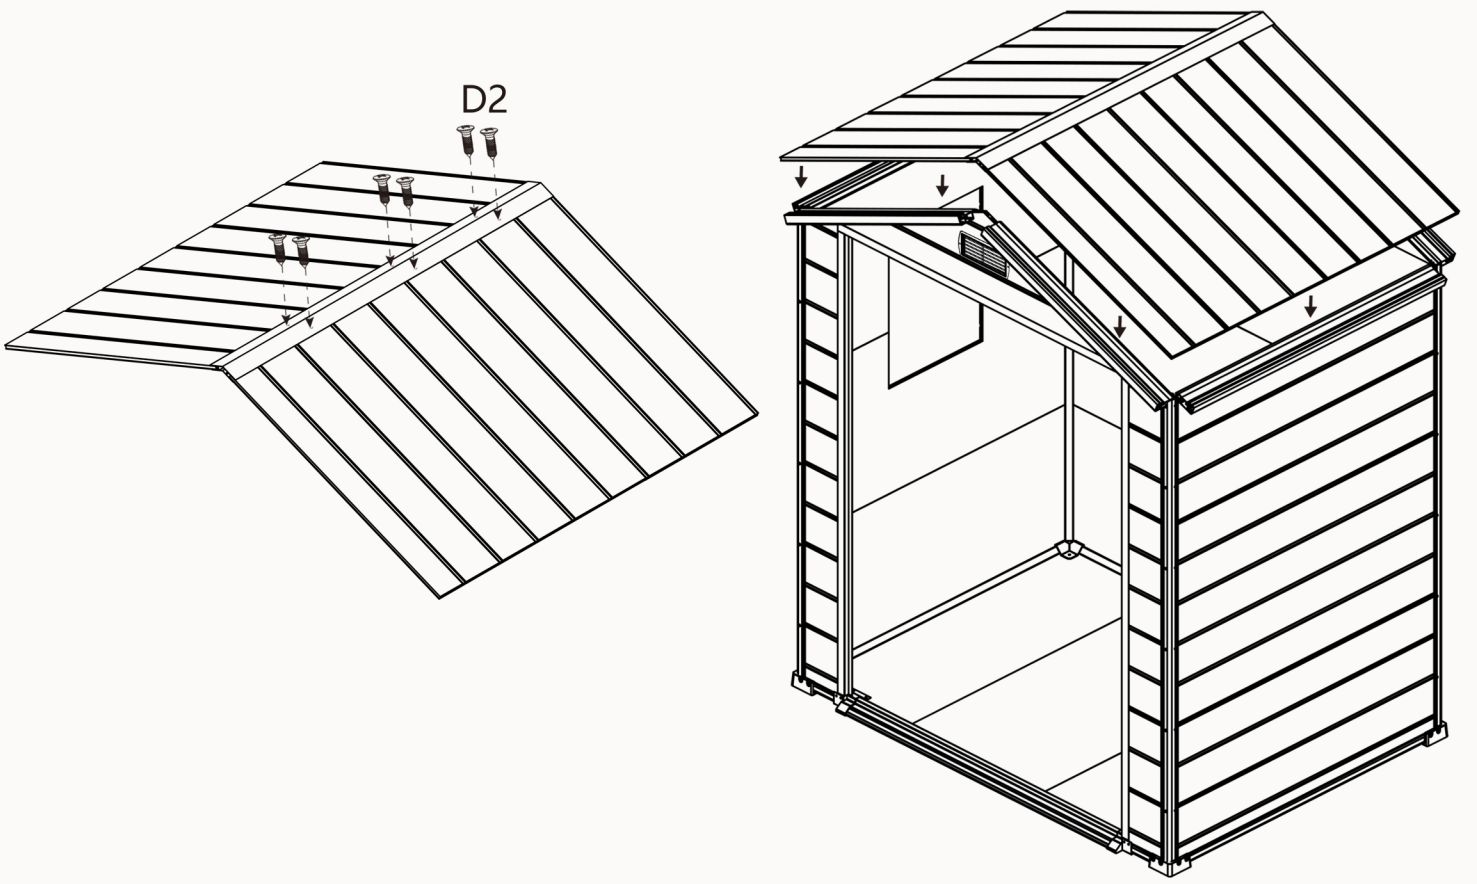



## Step 15




## Step 16

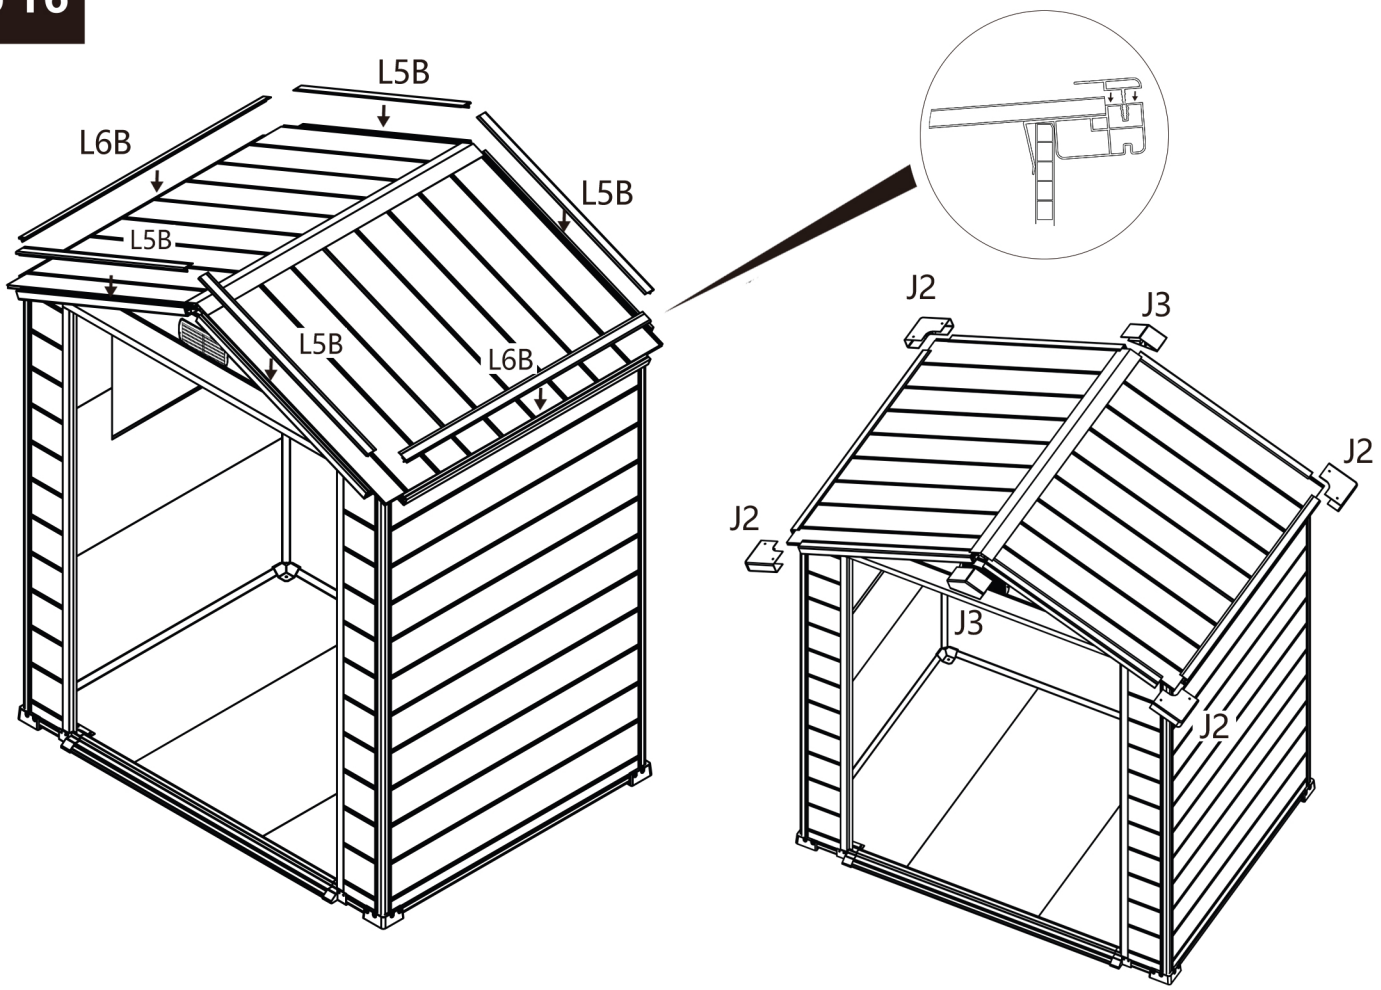



## Step 17

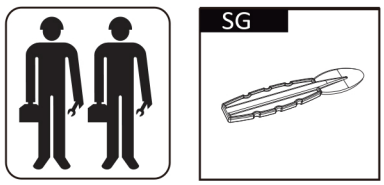

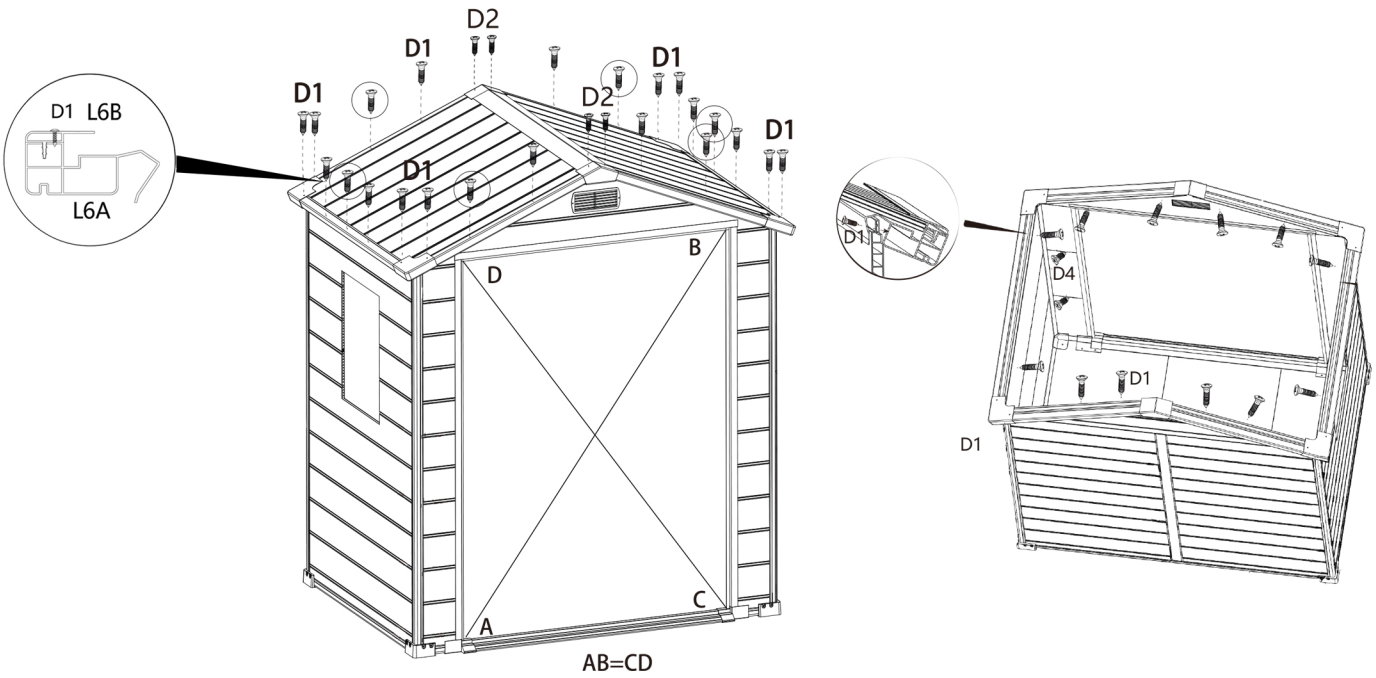




Fixing four-side wall plate by self-tapping

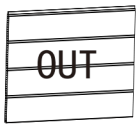
## Step18



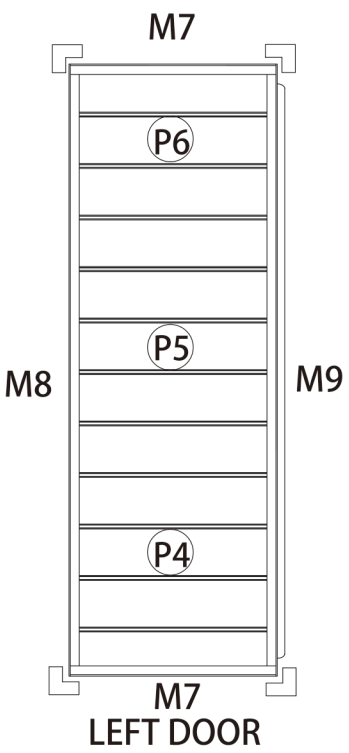



LEFT DOOR

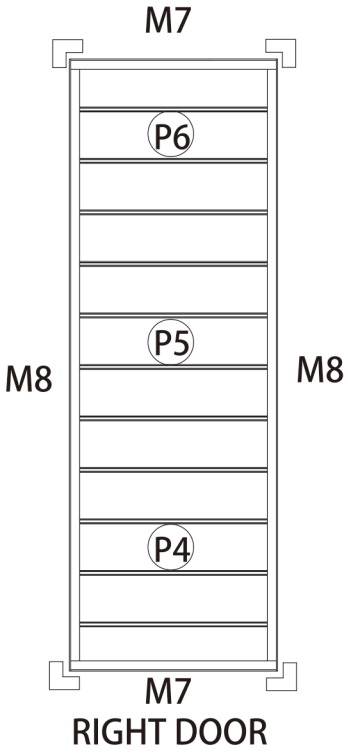



RIGHT DOOR

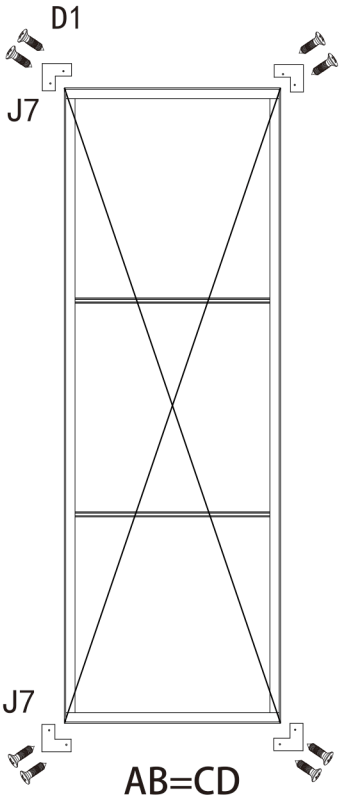


AB=CD


## Step19



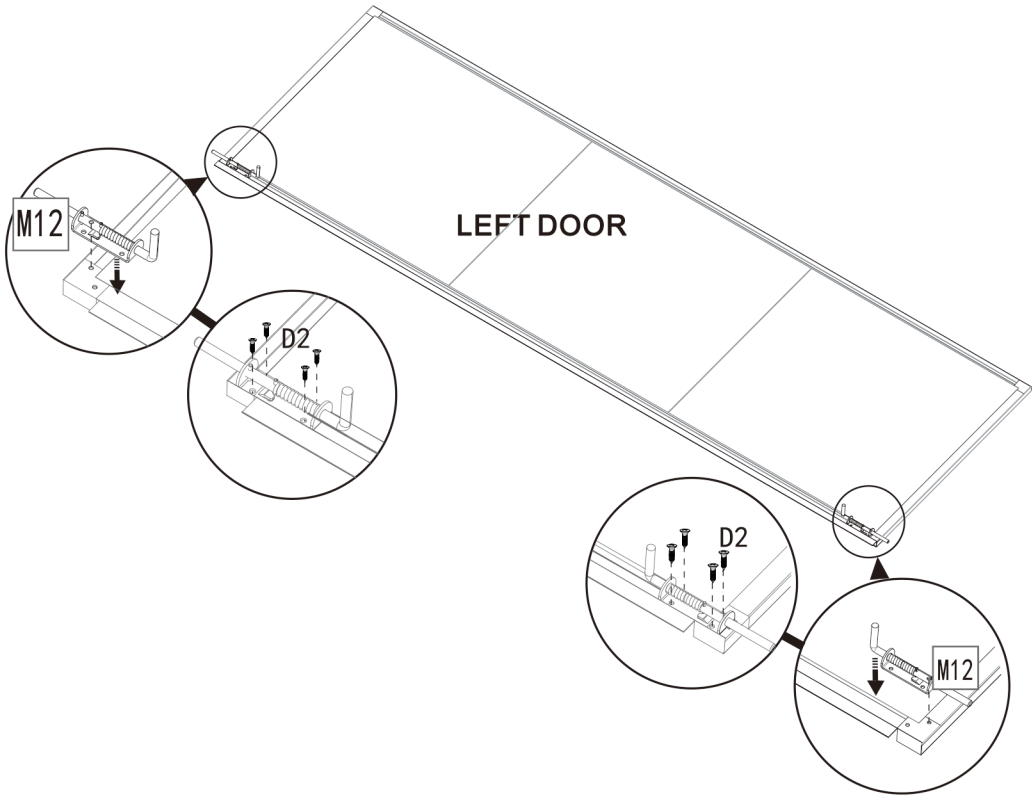





## Step 20

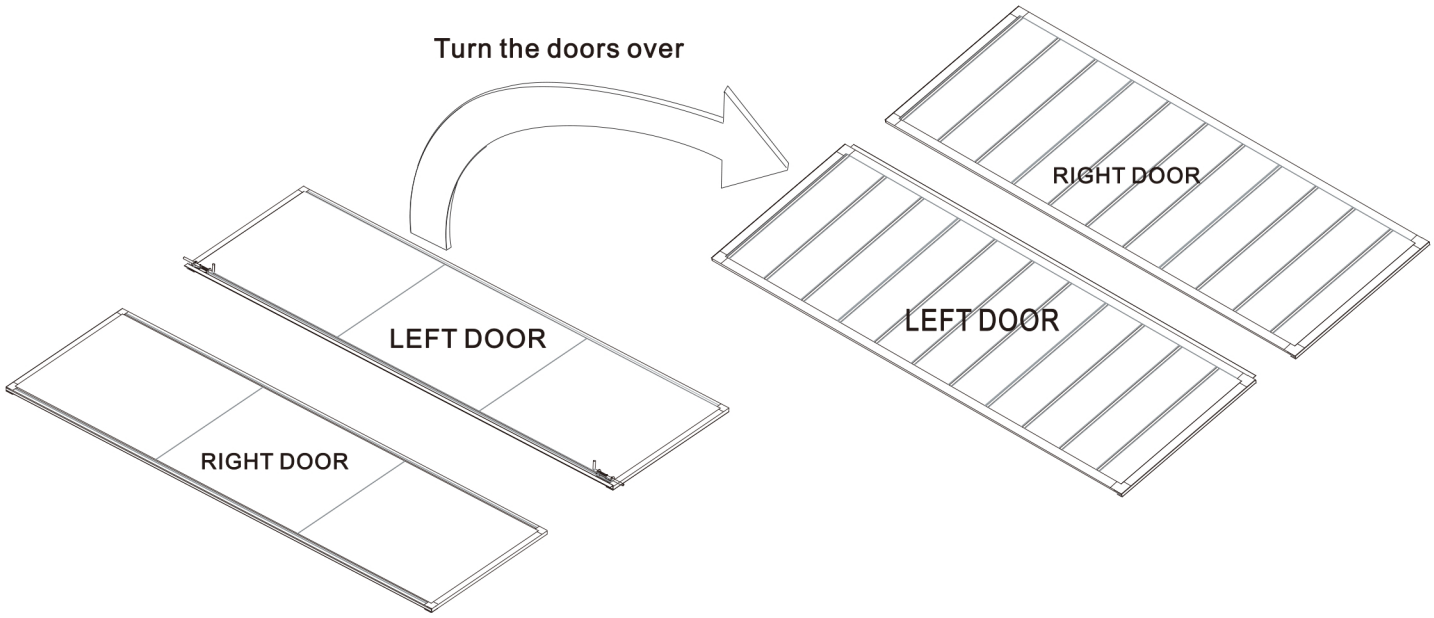




## Step 21

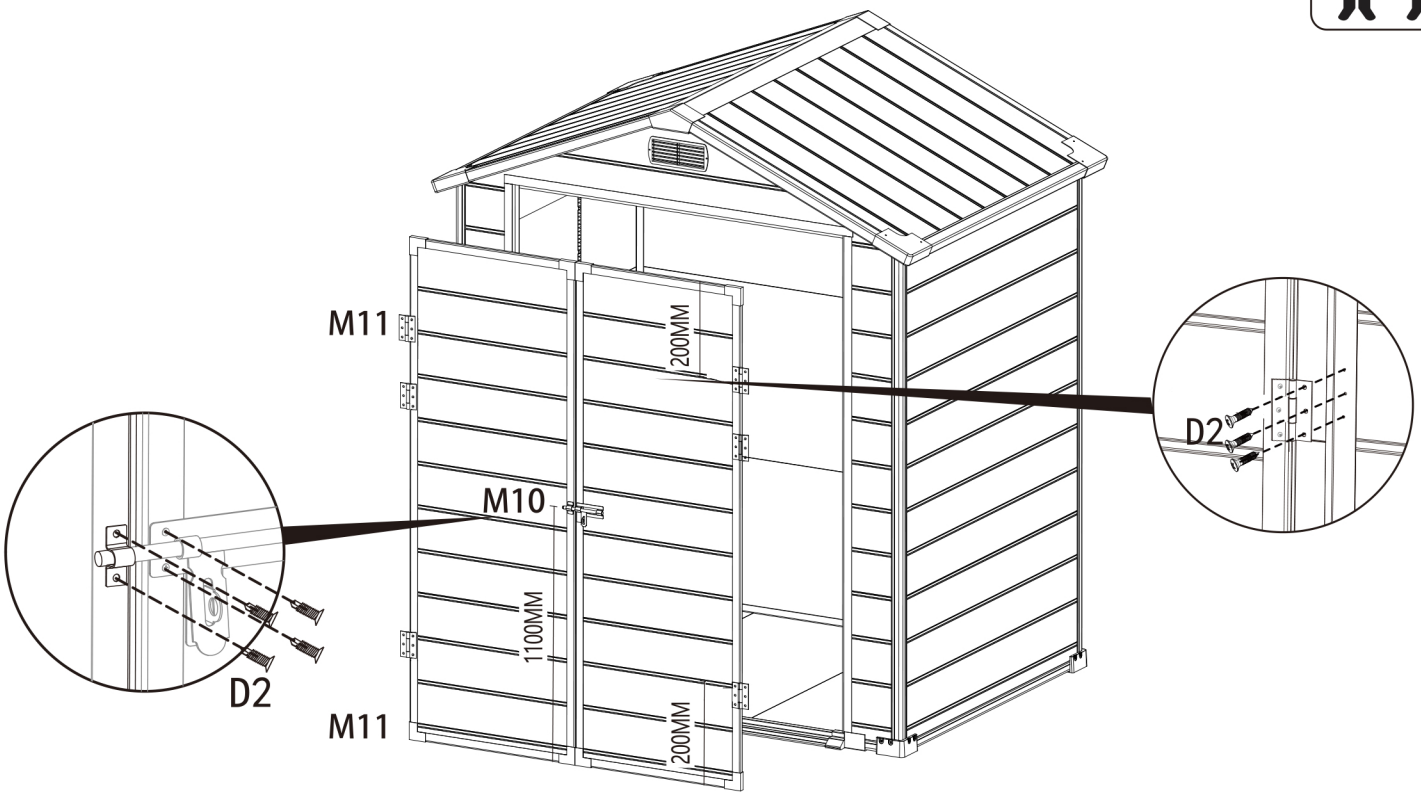


## Step 22


- Remove the film before fixing C2

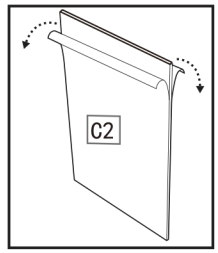

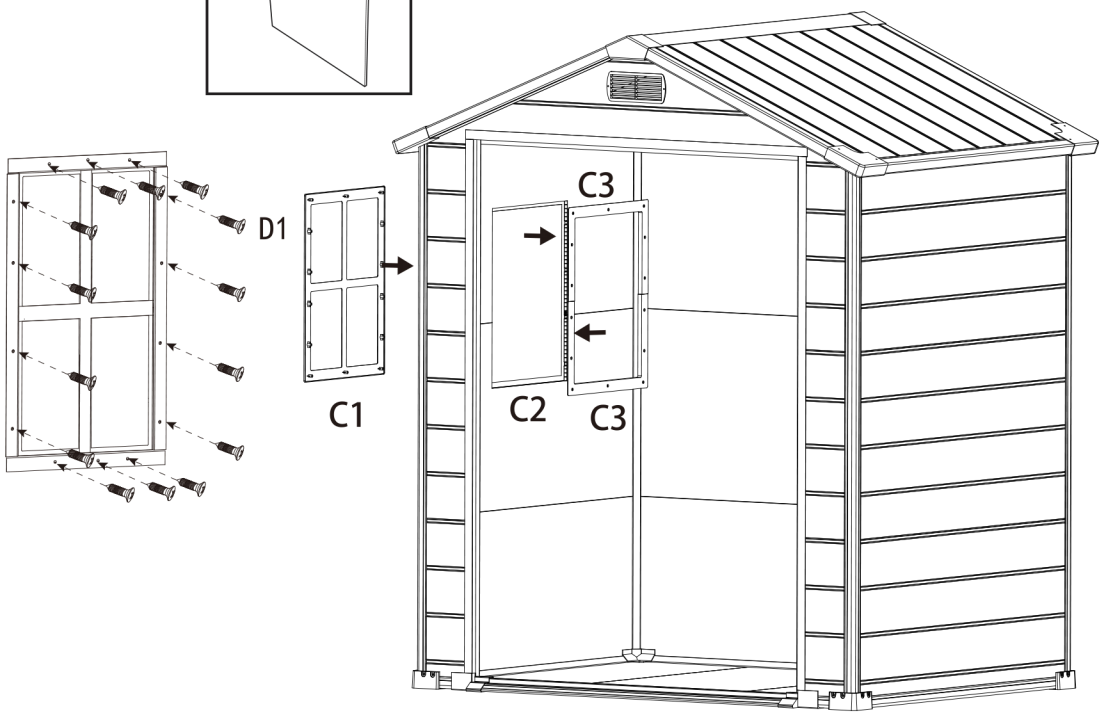
## Step 23




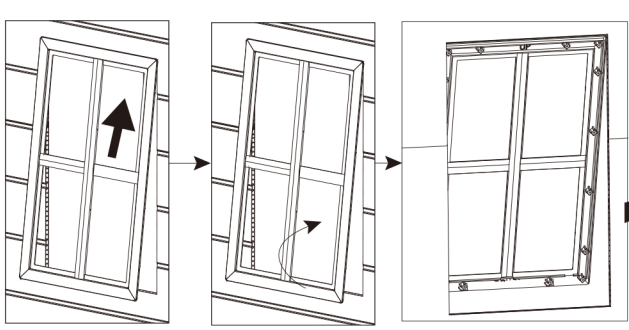

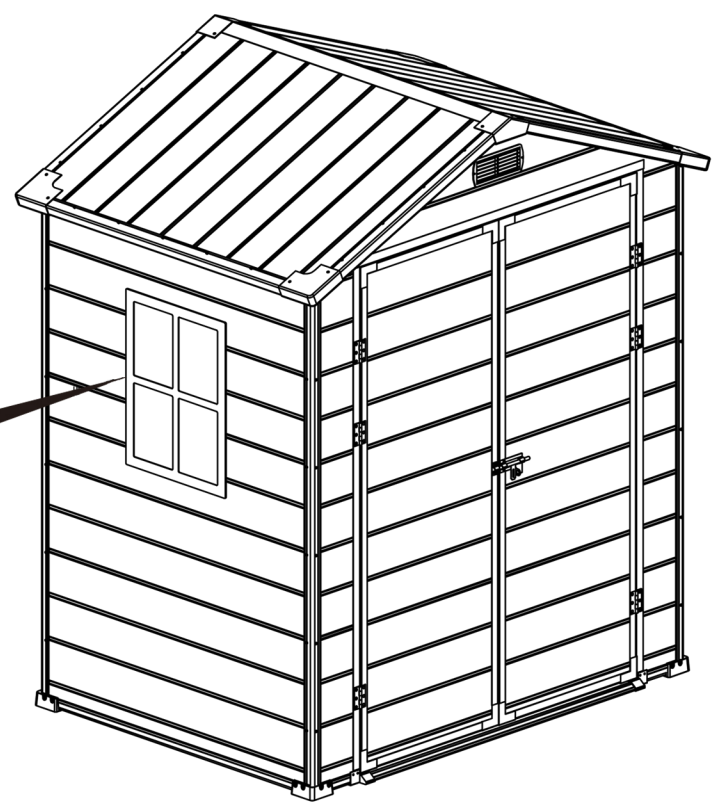- Need two persons to fix C2,
  one person presses it,
  and the other person assembles it.

# Step 24

| J 4 | J 5 | J 6 |
|---|---|---|
| 2 PCS | 2 PCS | 2 PCS |

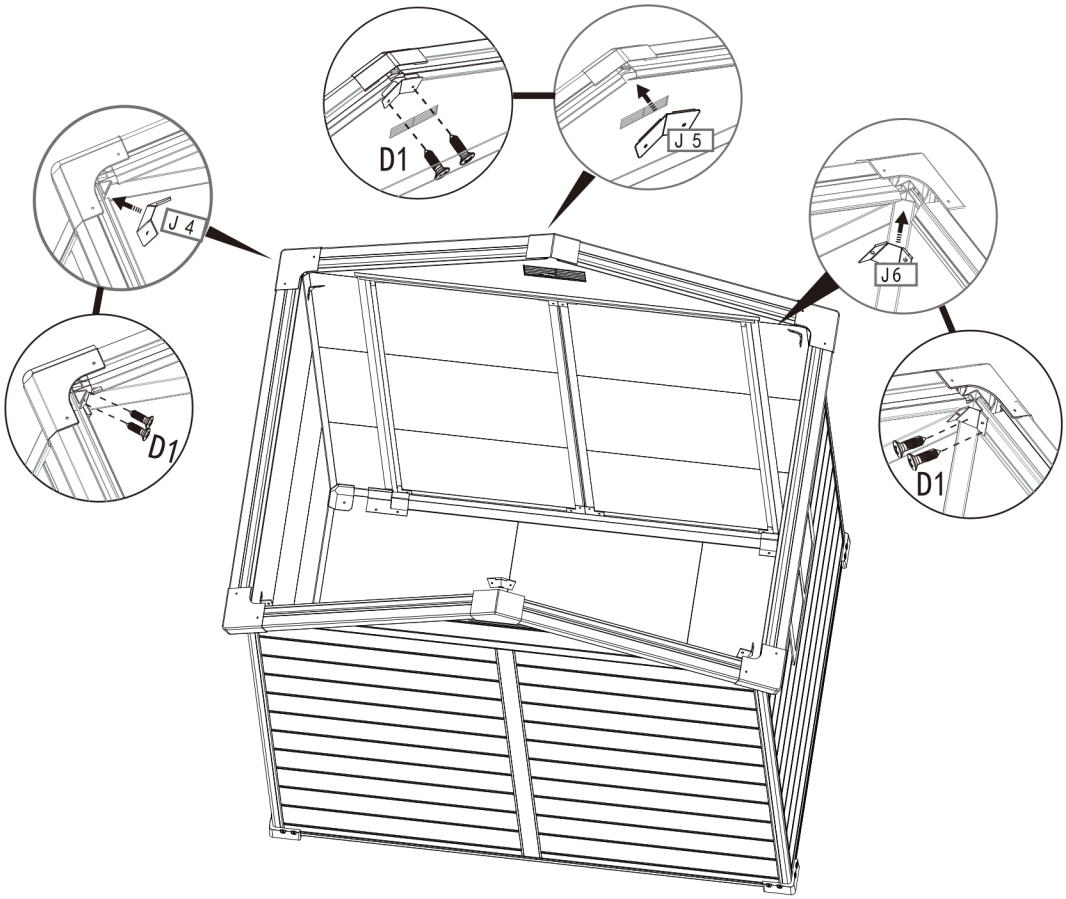




GARVEE

support@garvee.com