# Assembly Instructions

Caution : You must read this before you proceed



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in CABINET SINK for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.






# CABINET SINK : N765P514063 + S24002-30W(30")

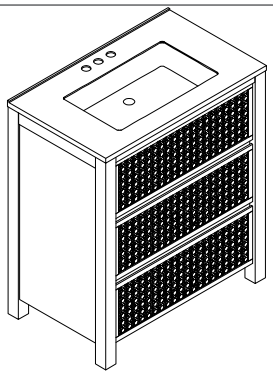









Parts List
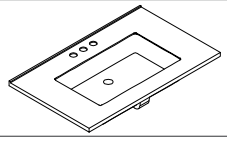
| Label | Picture | Description | QTY |
|---|---|---|---|
| S24002-30W(30") | | | |
| A |  | Sink | 1 |





Parts List
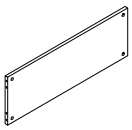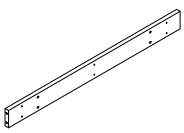
| Label | Picture | Description | QTY |
|---|---|---|---|
| N765P514063 | | | |
| B |  | Left Side Panel | 1 |
| C |  | Right Side Panel | 1 |
| D |  | Bottom Panel | 1 |
| E |  | Upper Back Panel | 1 |
| F |  | Lower Back Panel | 1 |
| G |  | Upper Front Rail | 1 |




Parts List
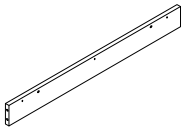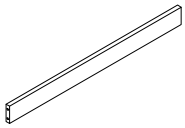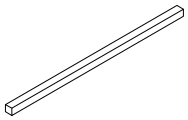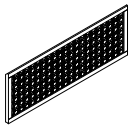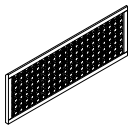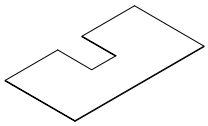
| Label | Picture | Description | QTY |
|---|---|---|---|
| N765P514063 | | | |
| H |  | Middle Front Rail | 1 |
| I |  | Lower Front Rail | 1 |
| J |  | Front Rail Support | 1 |
| K |  | Upper Front Baffle | 1 |
| L |  | Upper Drawer Front Panel | 1 |
| M |  | Drawer Left Side Panel | 2 |
| N |  | Drawer Right Side Panel | 2 |
| O |  | Center Drawer Back Panel | 1 |
| P |  | Side Drawer Back Panel | 2 |
| Q |  | Drawer Left Side Panel | 1 |
| R |  | Drawer Right Side Panel | 1 |
| S |  | Drawer Bottom Panel | 1 |




Parts List
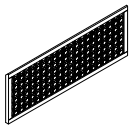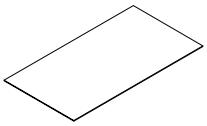
| Label | Picture | Description | QTY |
|---|---|---|---|
| N765P514063 | | | |
| T |  | Lower Drawer Front Panel | 1 |
| U |  | Drawer Back Panel | 1 |
| V |  | Drawer Bottom Panel | 1 |
| W |  | Drawer Bottom Support | 1 |

Hardware

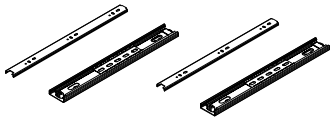
| Label | Picture | Description | QTY |
|---|---|---|---|
| N765P514063 | | | |
| ① |  | Slider (14") | 2set |
| ② |  | Screw<br>(Ø3.5 x 12mm) | 24<br>Extra 2 |
| ③ |  | Cam bolt<br>(Ø6 x 33mm) | 37<br>Extra 2 |
| ④ |  | Cam lock<br>(Ø15 x 10mm) | 37<br>Extra 2 |
| ⑤ |  | Wooden dowel<br>(Ø8 x 30mm) | 14<br>Extra 1 |
| ⑥ |  | Wooden dowel<br>(Ø8 x 20mm) | 6<br>Extra 1 |


Hardware
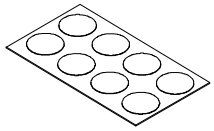
| Label | Picture | Description | QTY |
|---|---|---|---|
| N765P514063 | | | |
| ⑦ |  | Wooden dowel (Ø6 x 30mm) | 6 Extra 1 |
| ⑧ |  | Screw (Ø4 x 38mm) | 15 Extra 1 |
| ⑨ |  | Screw (Ø4 x 22mm) | 9 Extra 1 |
| ⑩ |  | Applique card | 5 |
| ⑪ |  | Anti-Tip | 2set |
| |  | Phillips screwdriver | 1 |

Assembly Preparation


Before Beginning Assembly:

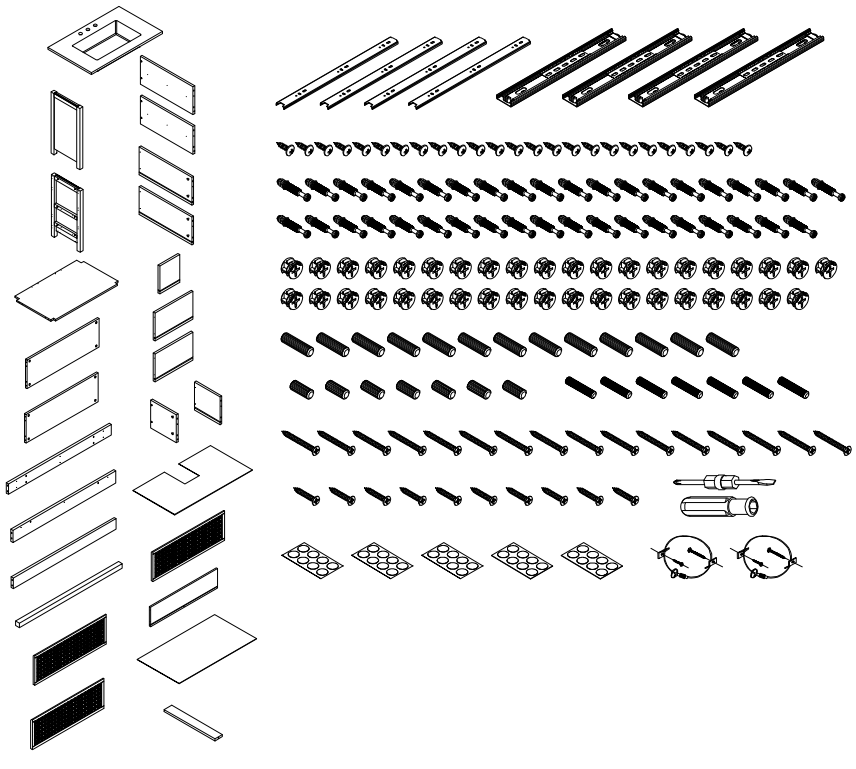

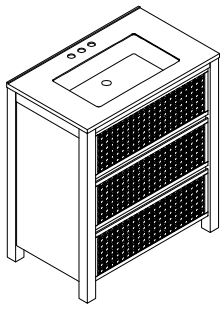


AssemblySteps

## Overview

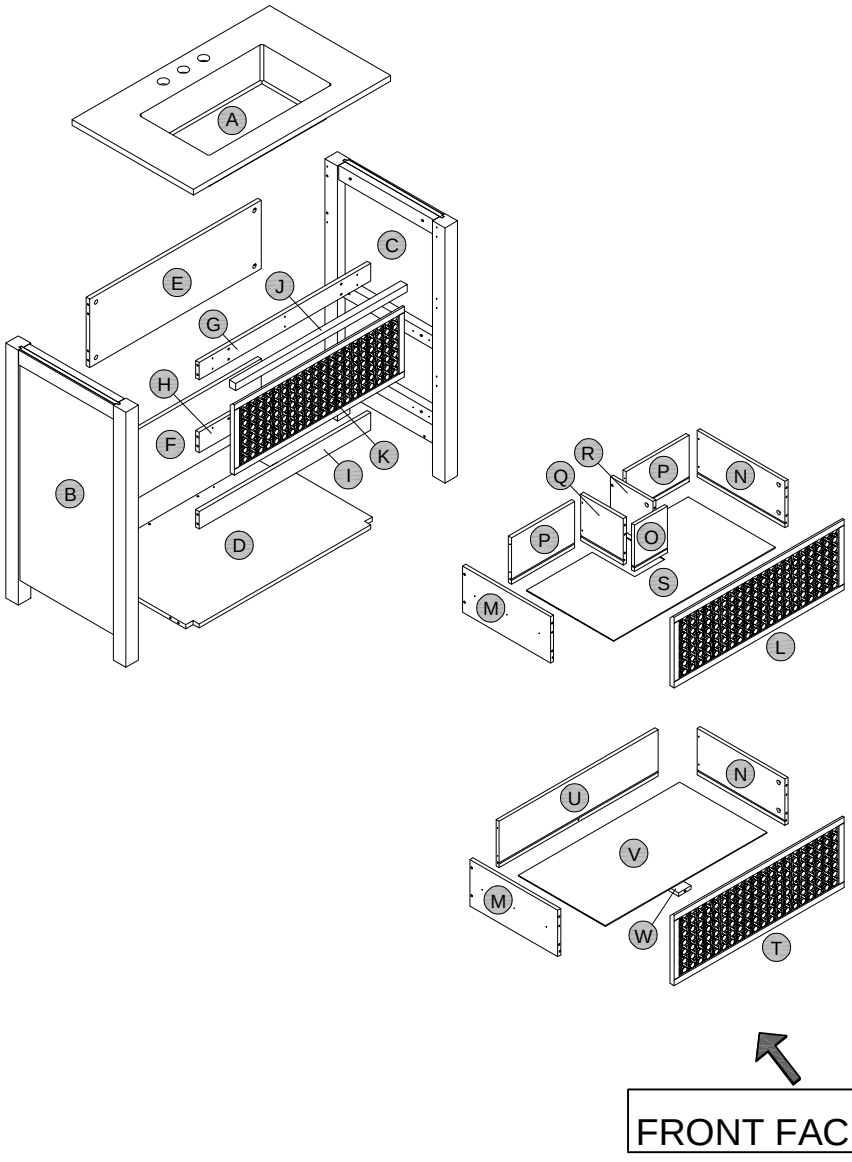


This CABINET SINK has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Lavabo 1 part, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.
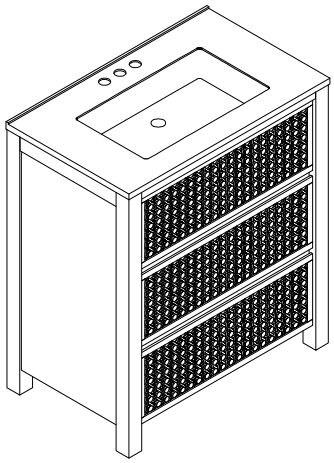
| Completed |  |
|---|---|

Turn the CABINET SINK right side up.

Place the CABINET SINK on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

To tighten the screws at the base of the backrest, have another adult assist you.

You may be required to turn the CABINET SINK, to gain easy access to the secure points.

Turn the CABINET SINK in a synchronised manner.

CAUTION 1: When tightening these screws, tighten sequentially.

DO NOT tighten any screw fully and then towards the next

one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this same process.


WARNING!! IF CABINET SINK IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.


Ensure all screws are fully locked into position.

The CABINET SINK is ready to be used.

Caution 2: This CABINET SINK can only be used on a flat, level surface.


## Step 1

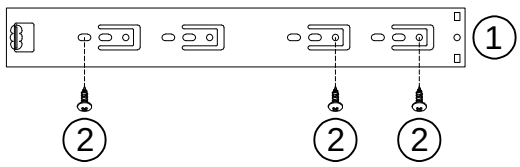

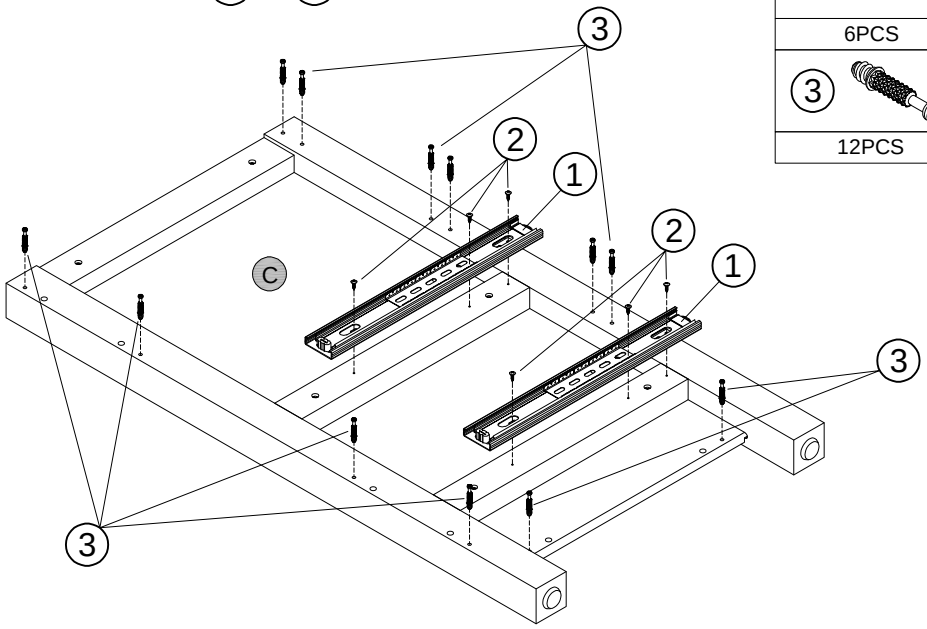

| | |
|---|---|
| 1 | 2PCS |
| 2 | 6PCS |
| 3 | 12PCS |

## Step 2

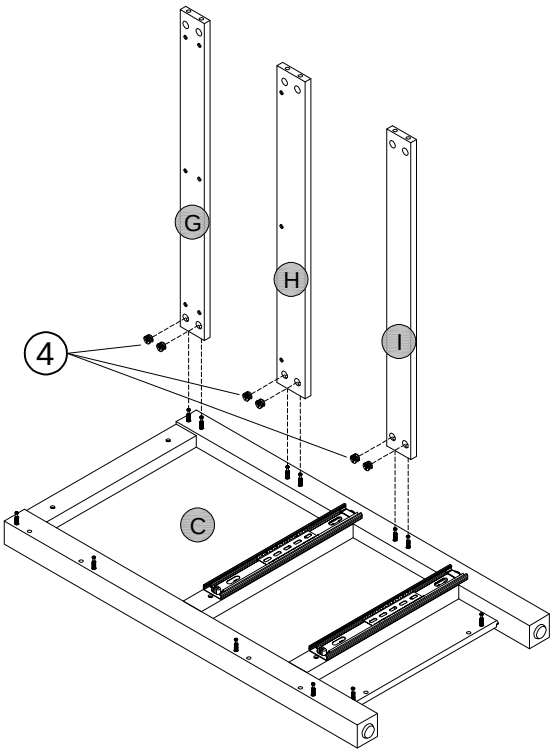


| | |
|---|---|
| 4 | 6PCS |


## Step 3

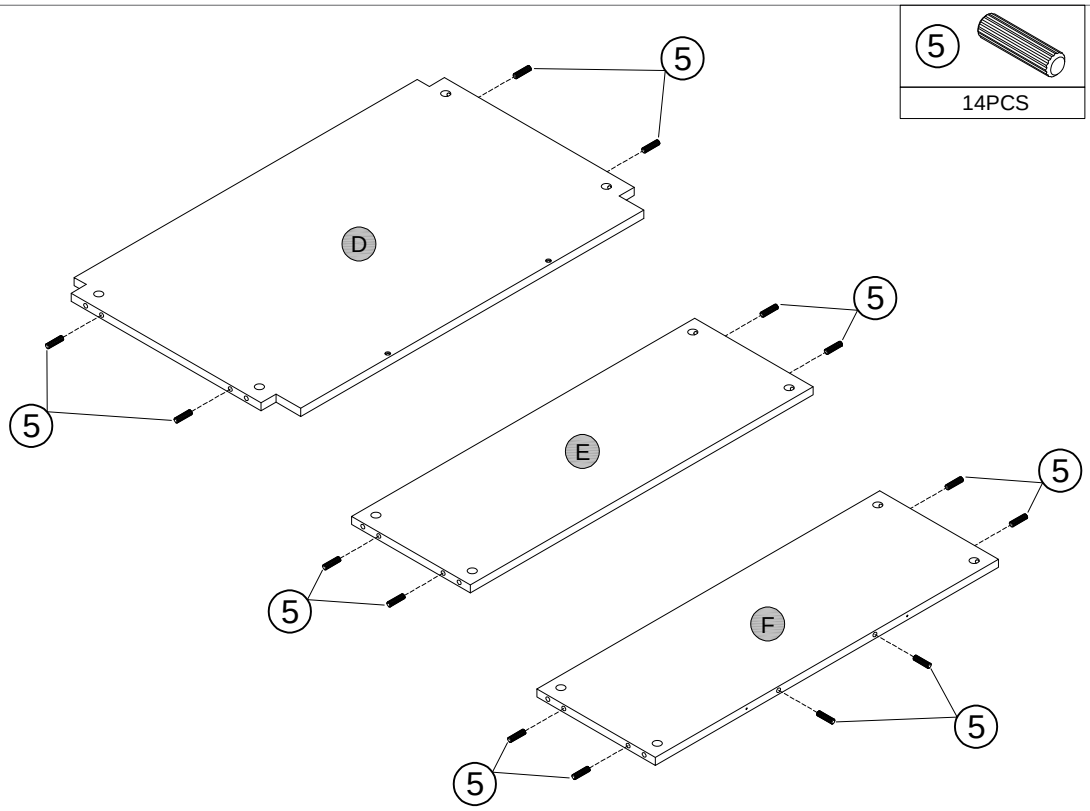


5

14PCS


## Step 4

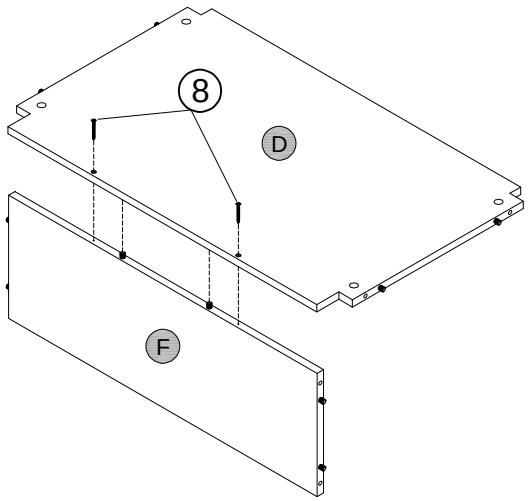



8

2PCS


## Step 5





4PCS

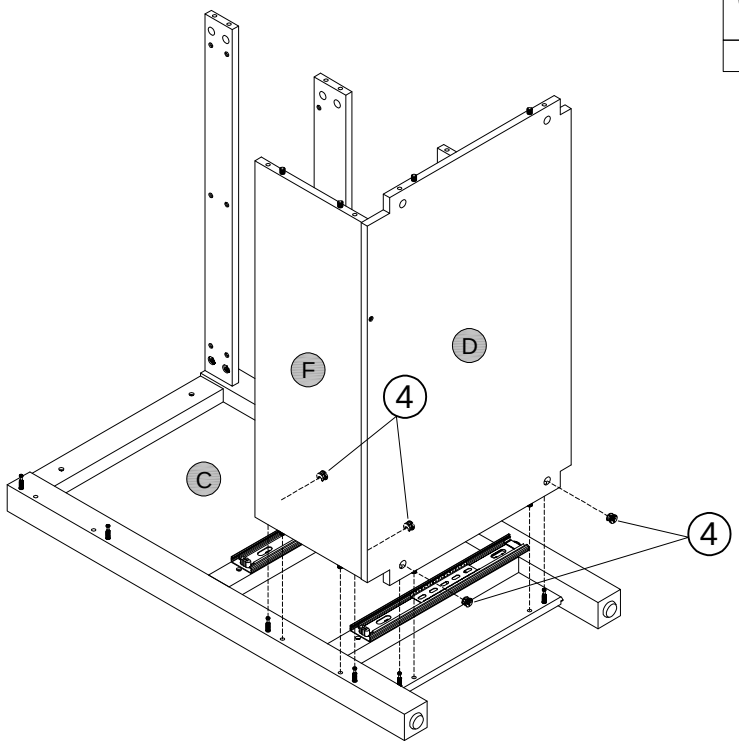



## Step 6




2PCS

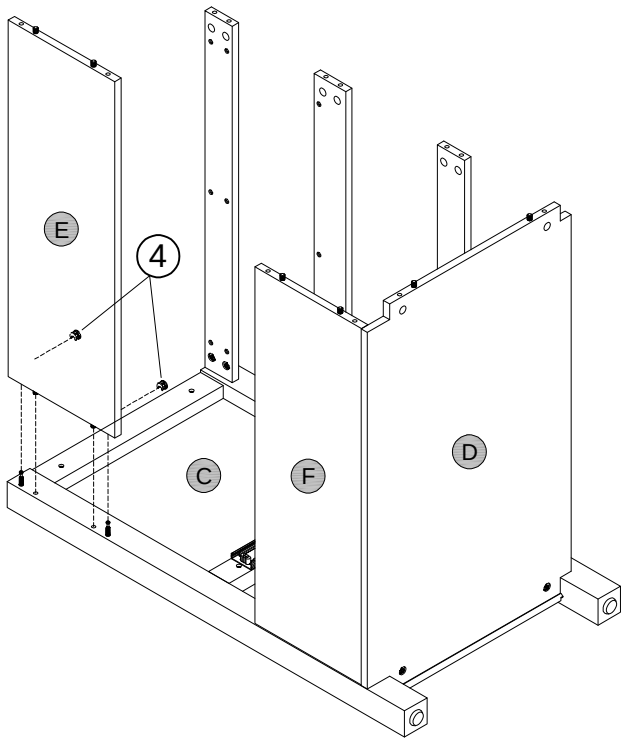


## Step 7

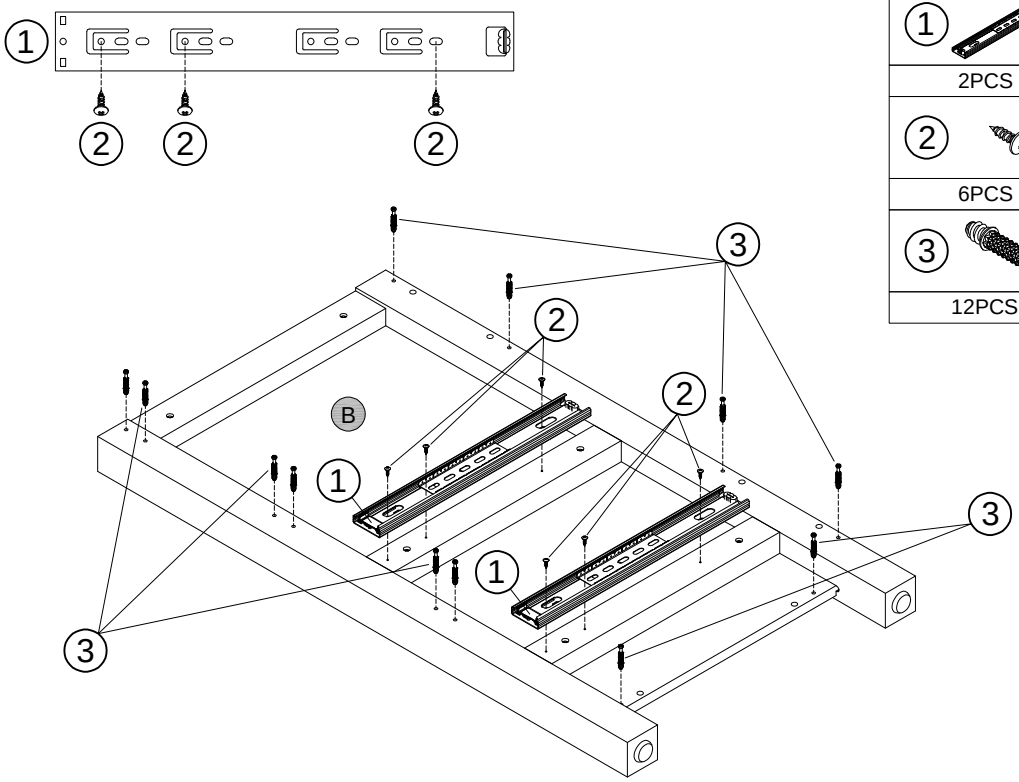







## Step 8

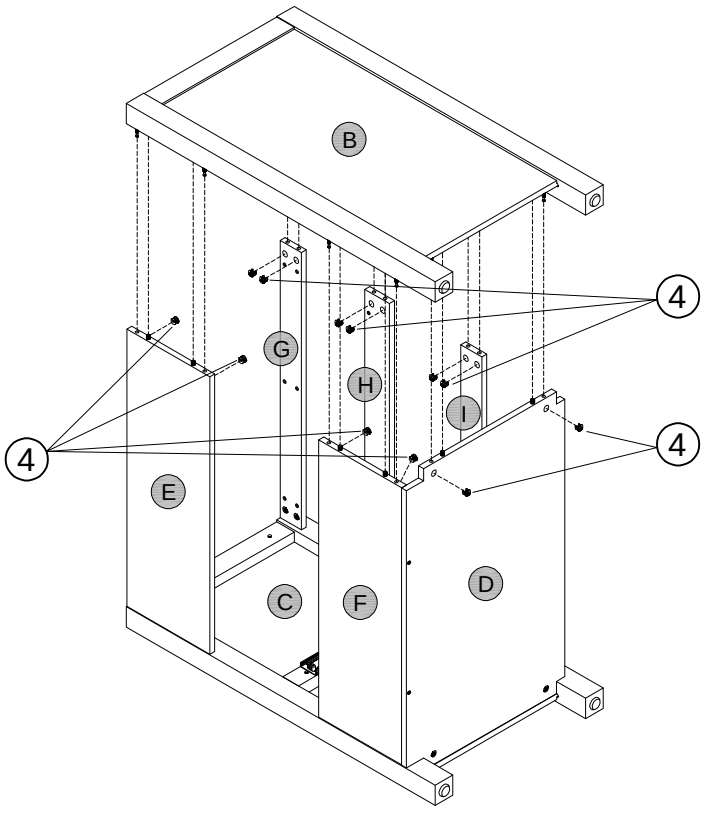

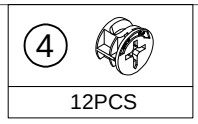



## Step 9

It is recommended that two people operate the device during the flipping process.

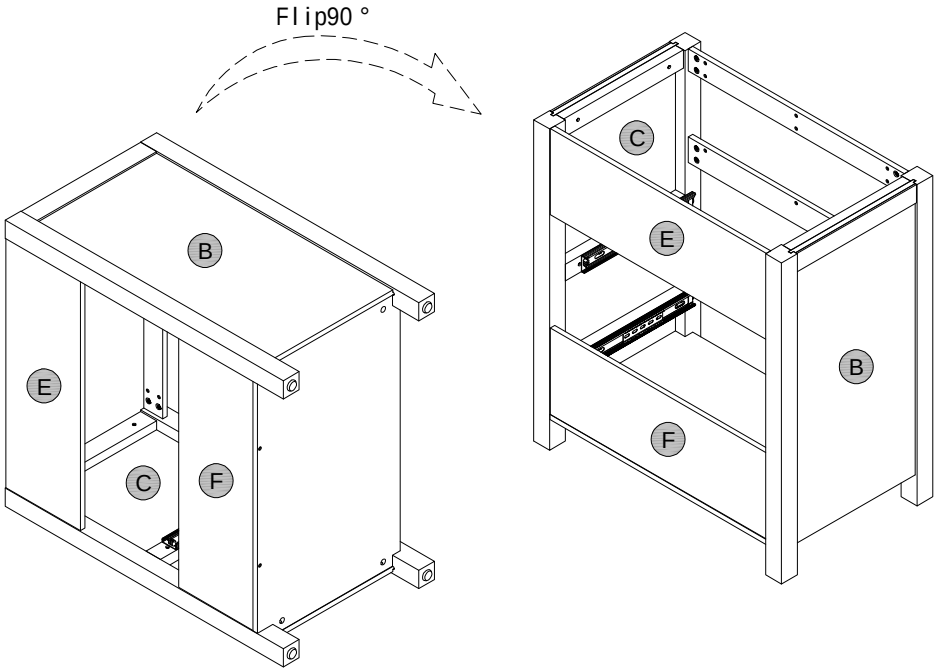



## Step 10

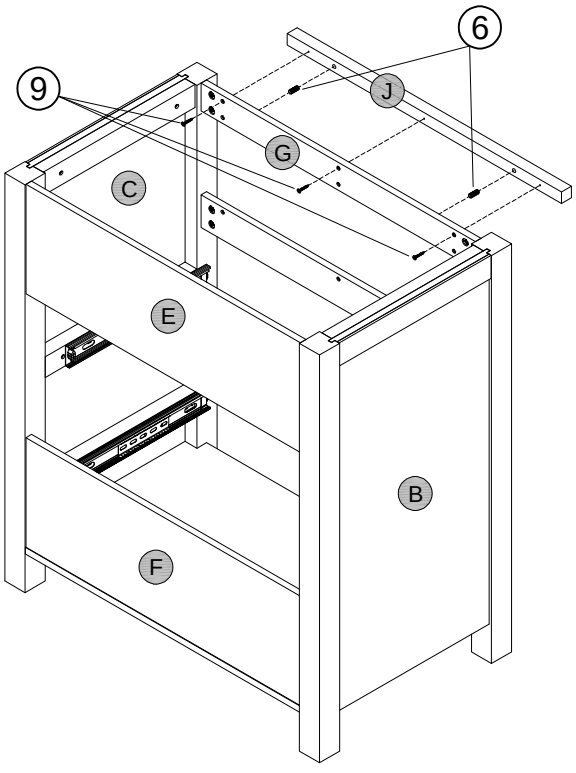



| | |
|---|---|
| 6 | 2PCS |
| 9 | 3PCS |

## Step 11

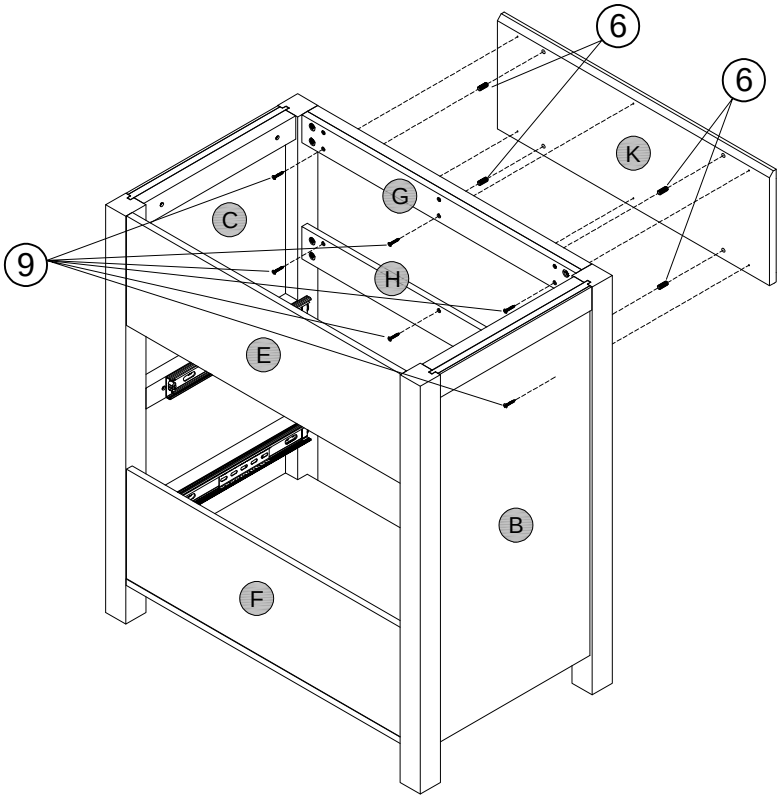


| | |
|---|---|
| 6 | 4PCS |
| 9 | 6PCS |


## Step 12

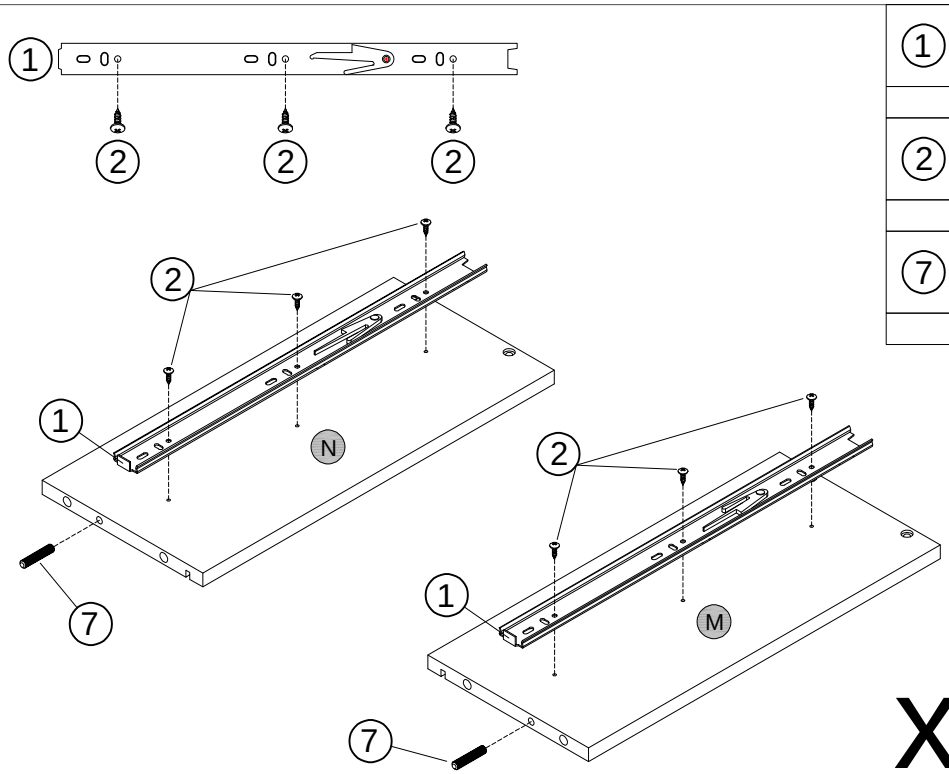



| | |
|---|---|
| 1 | 4PCS |
| 2 | 12PCS |
| 7 | 4PCS |


x2


## Step 13

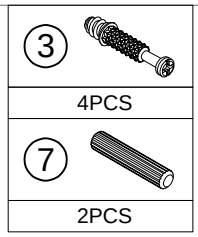

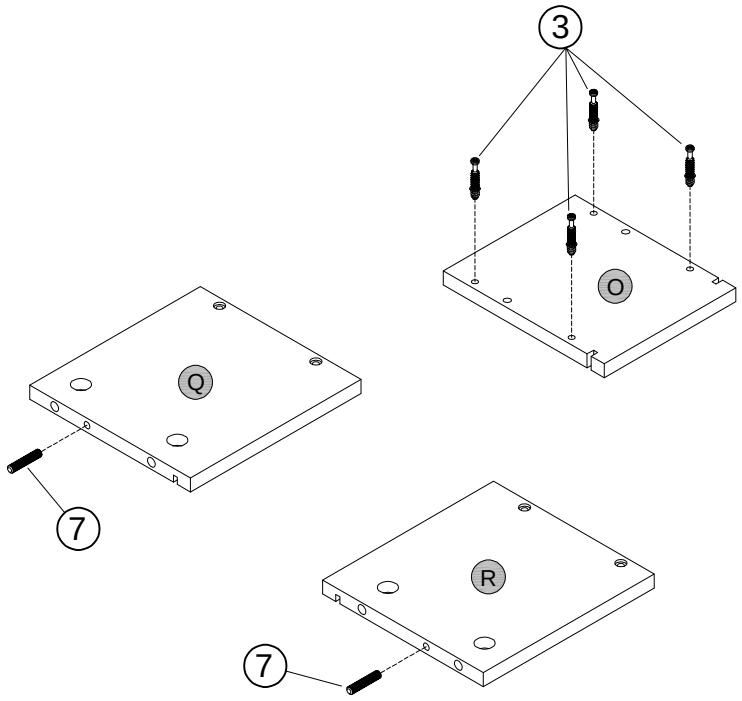


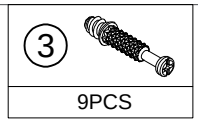

## Step 14

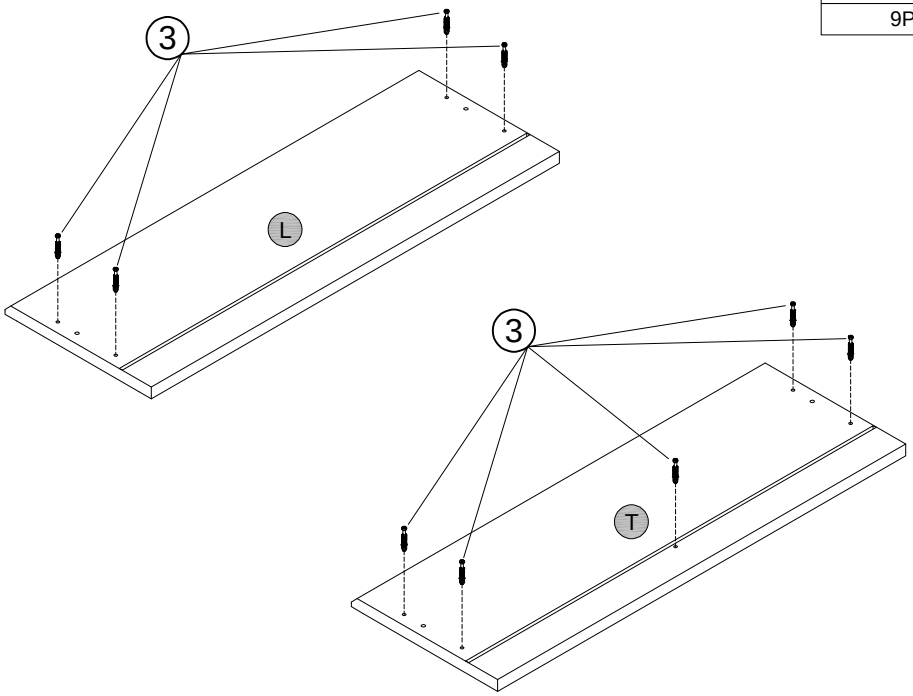



## Step 15

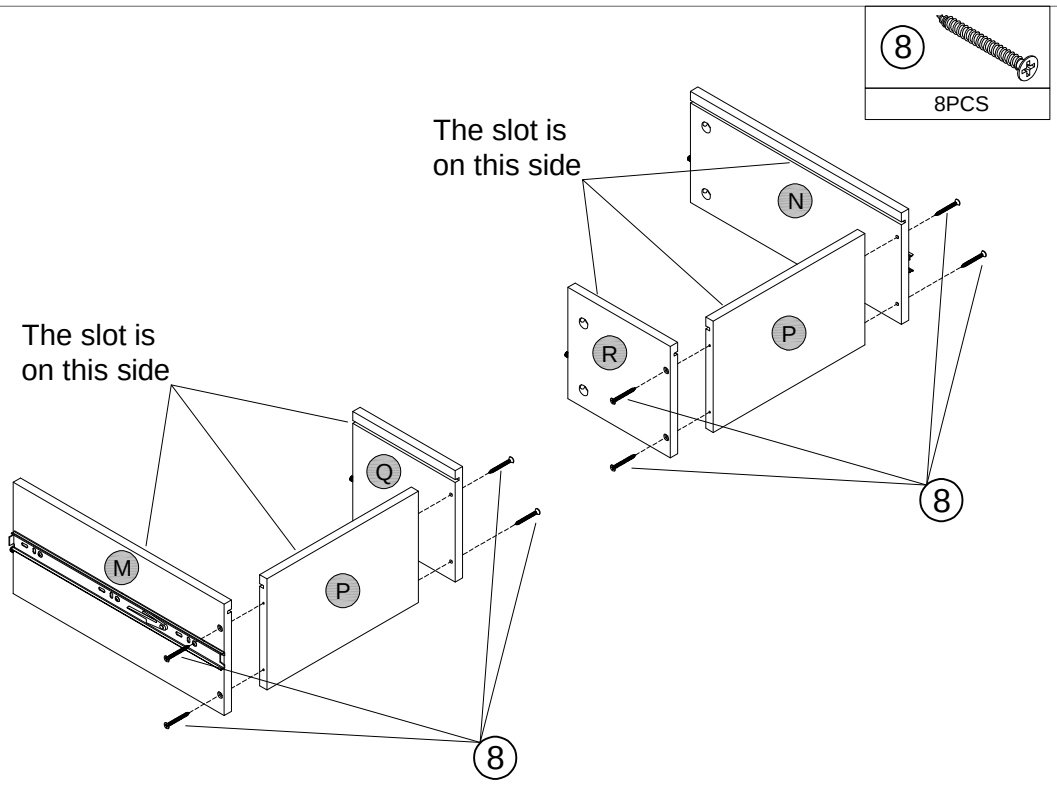



## Step 16

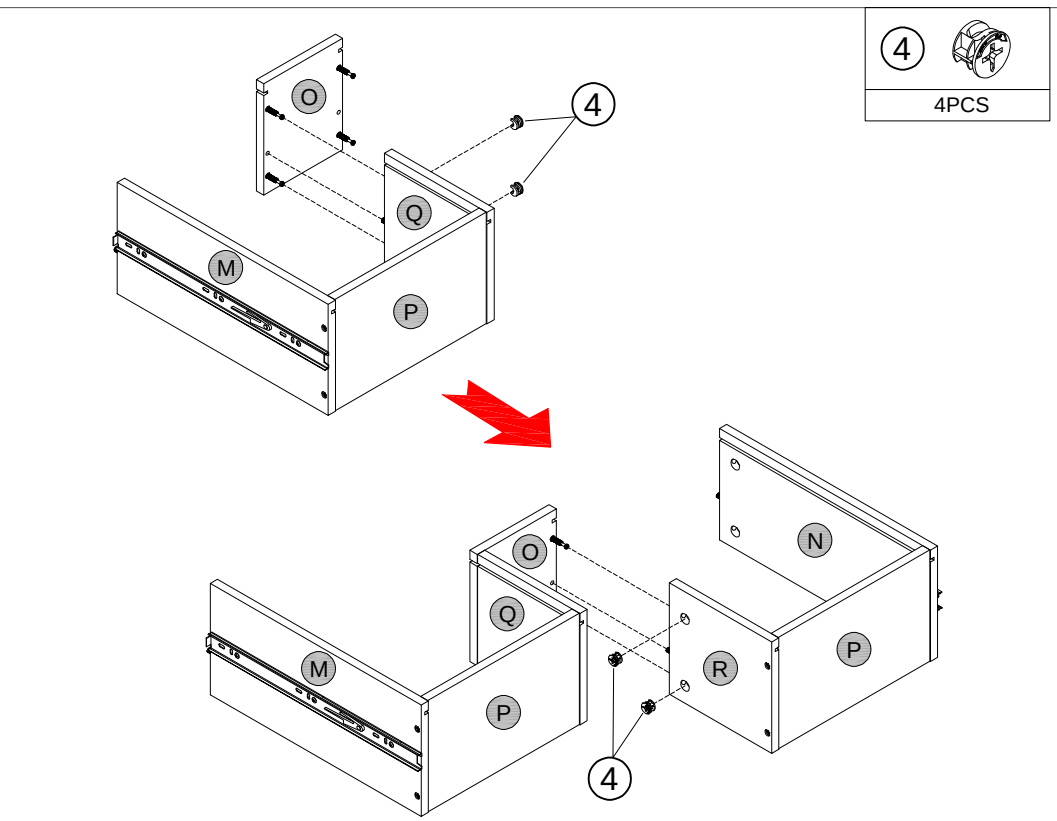


## Step 17

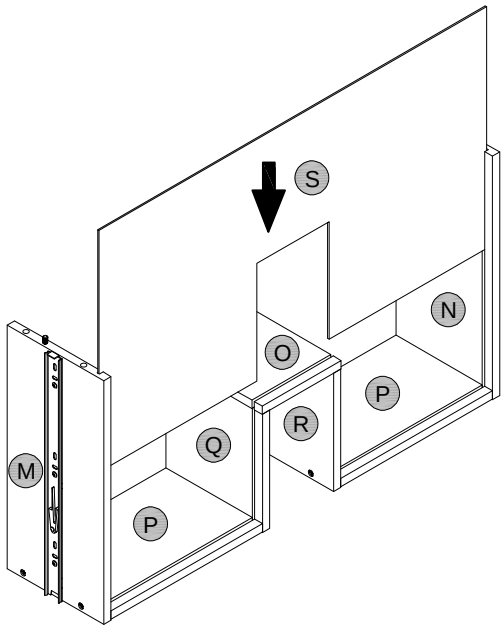



## Step 18

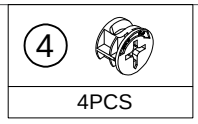


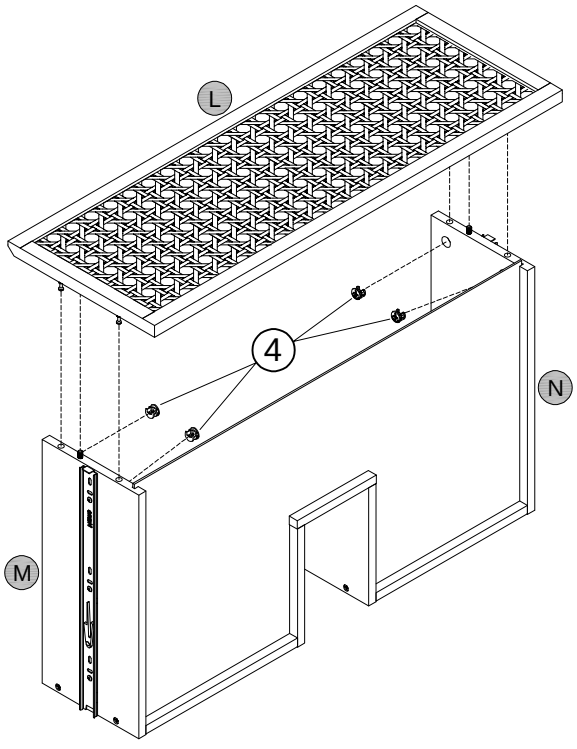
## Step 19

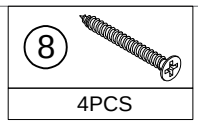



4PCS

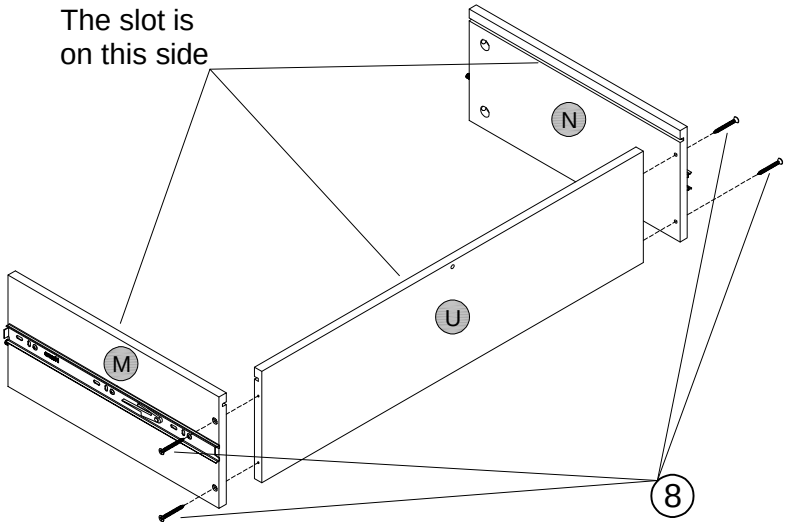



## Step 20

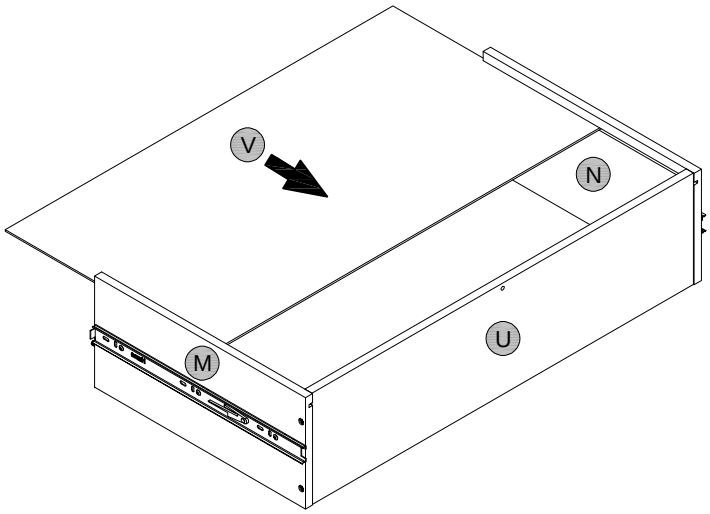


## Step 21





1PCS

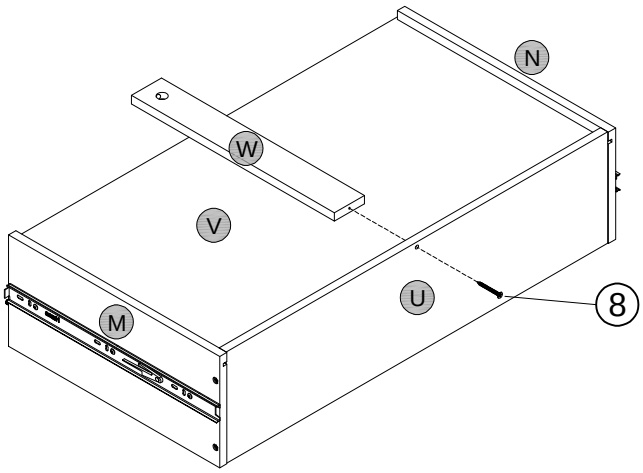



## Step 22





5PCS

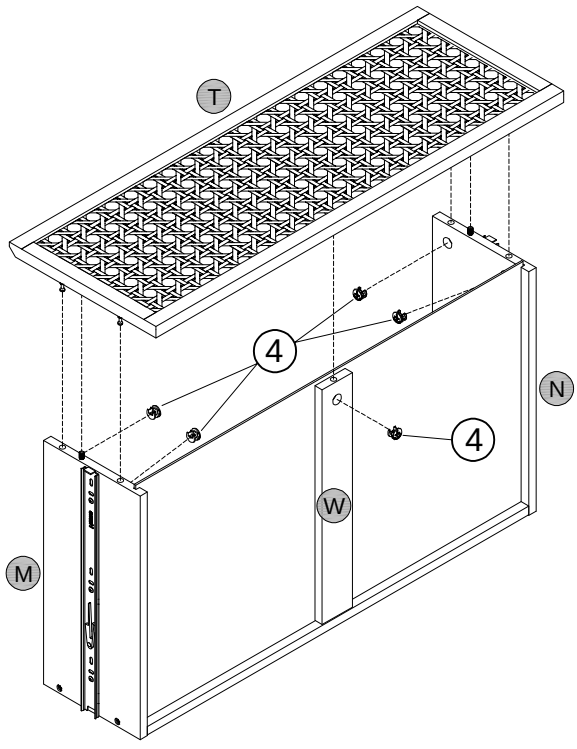


## Step 23

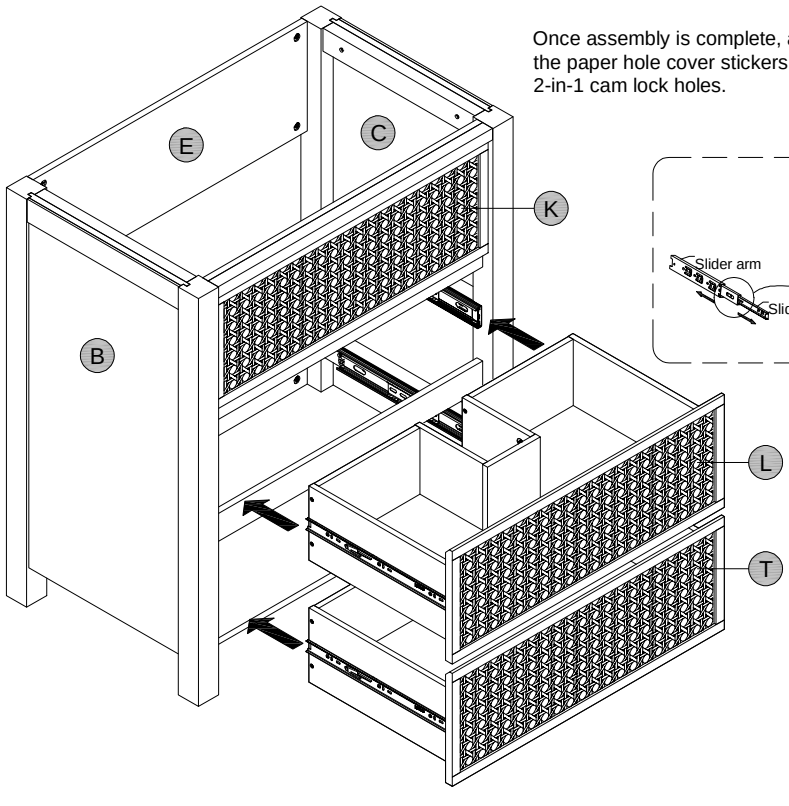




Once assembly is complete, apply the paper hole cover stickers to the 2-in-1 cam lock holes.





5PCS

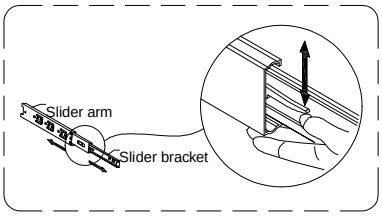

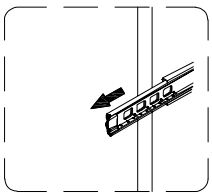


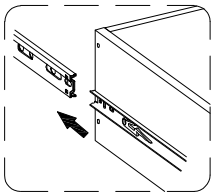


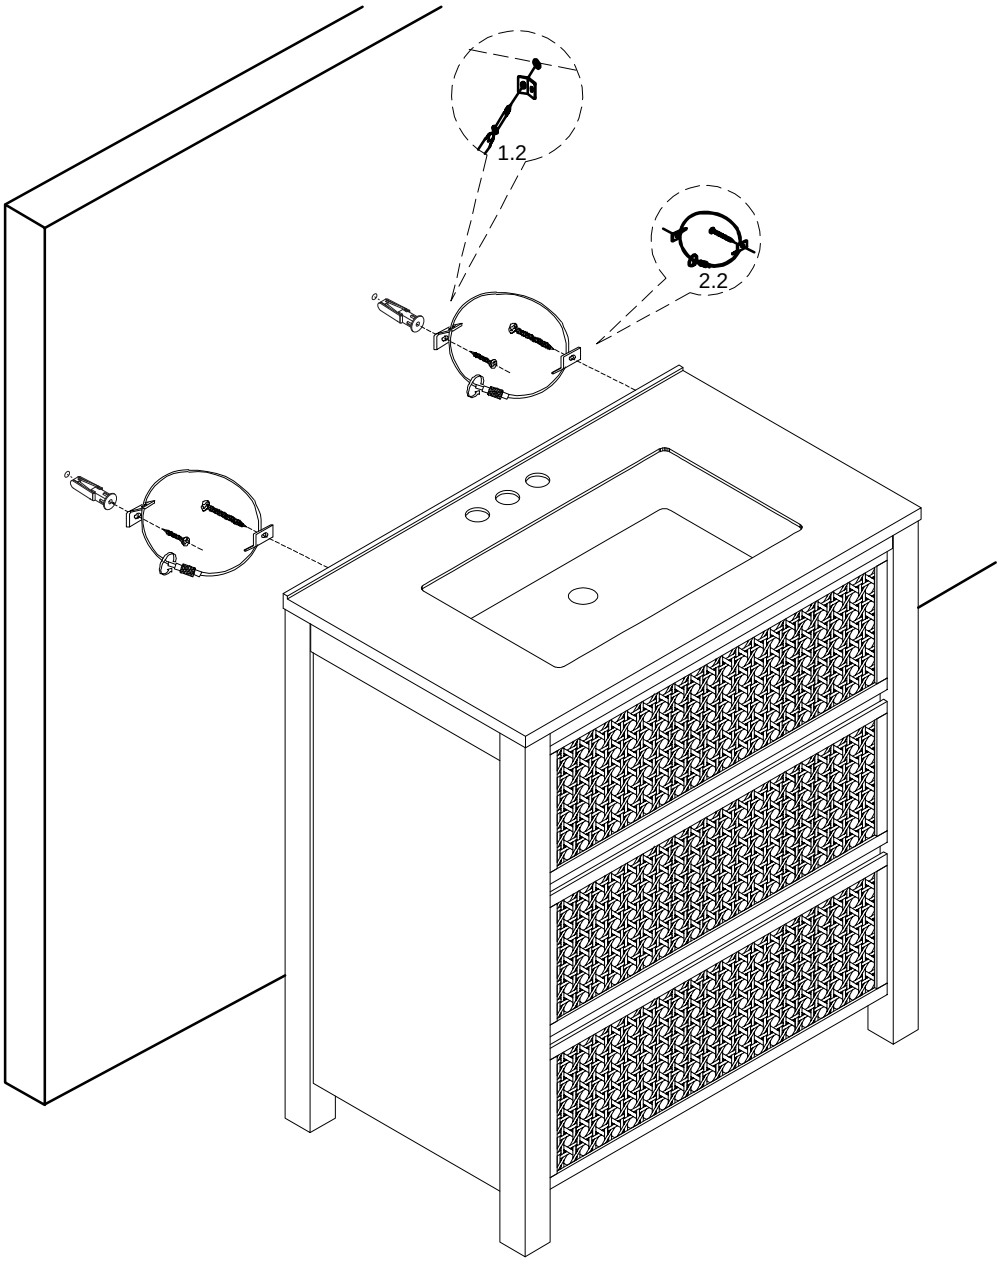
## Step 24

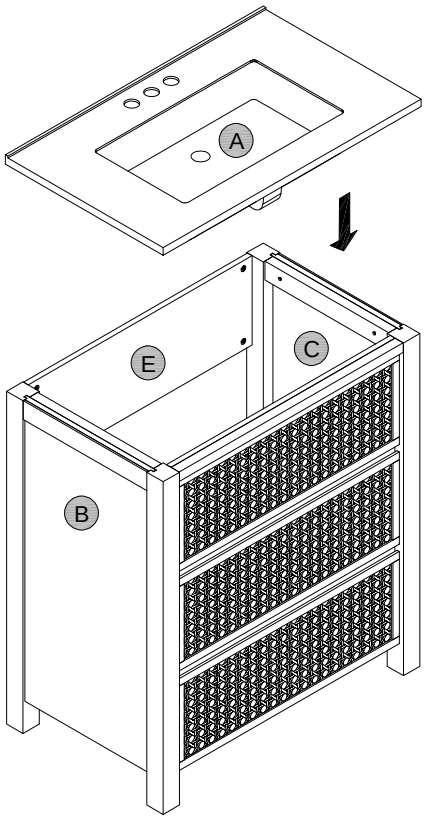

# Step 25

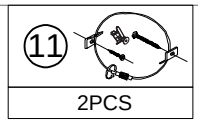


2PCS




1.2 Attach the Metal Brackets,to the Wall Plugs,using Pan Head Screws and a Screwdriver
2.2 Move the Cabinet Sink against the wall. Pull the anti-tip, through the Metal Bracket, on the wall and Cabinet Sink Base respectively and tighten the lock on the anti-dumping strap