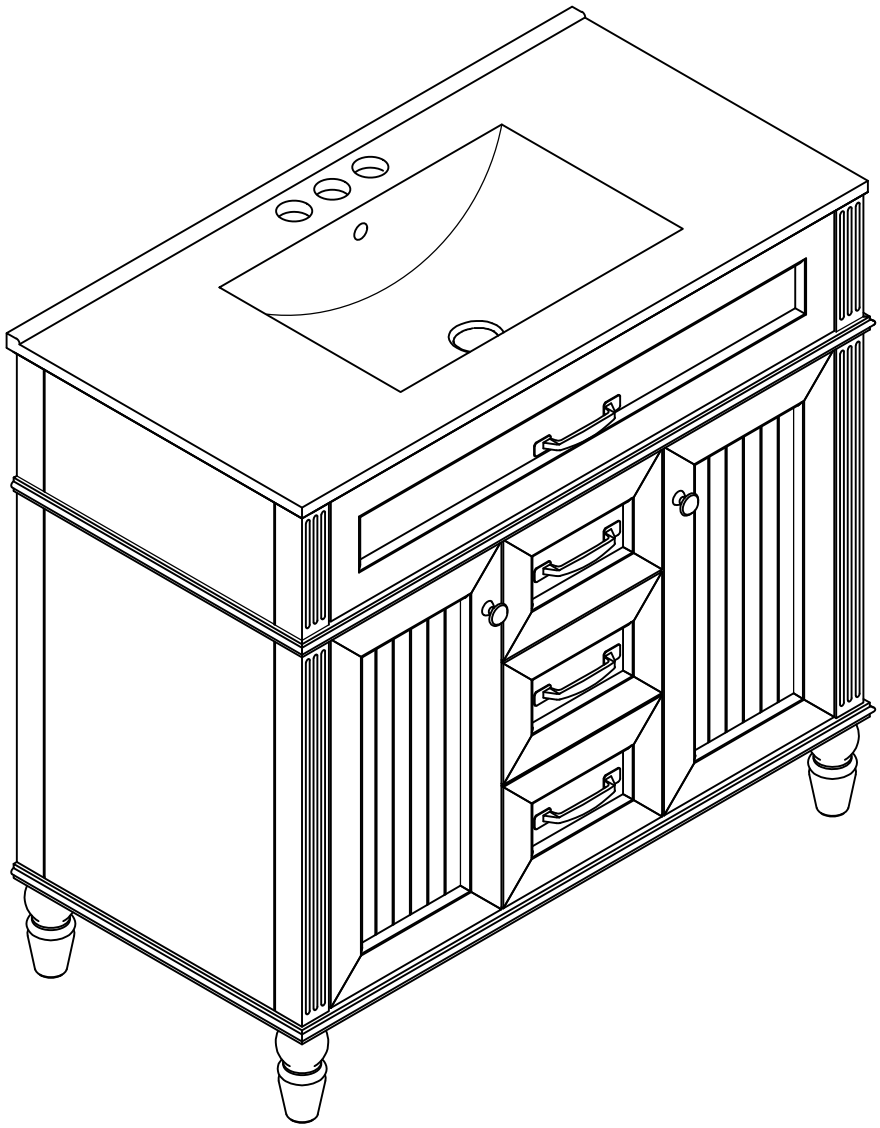
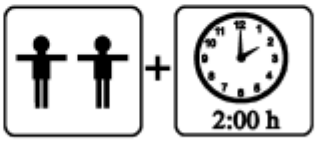
ASSEMBLY INSTRUCTION
36 INCH BATH VANITY




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.





Tools Required


(Not included)


(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,

do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,

I wish you a happy life.

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions


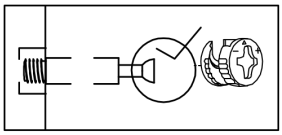


Diagram A



Insert Cam Bolt into hole as shown in diagram A.


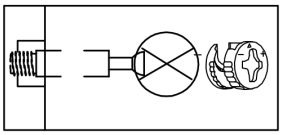


Diagram B



Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.


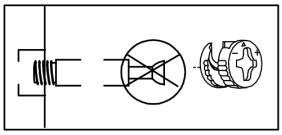
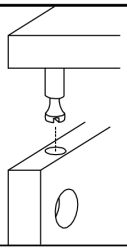


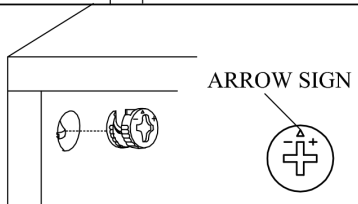
Diagram C



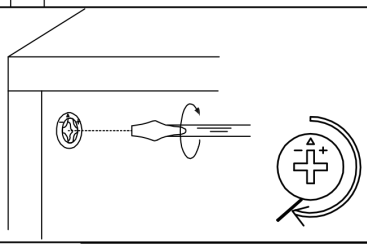
Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.



Connect the panels together.

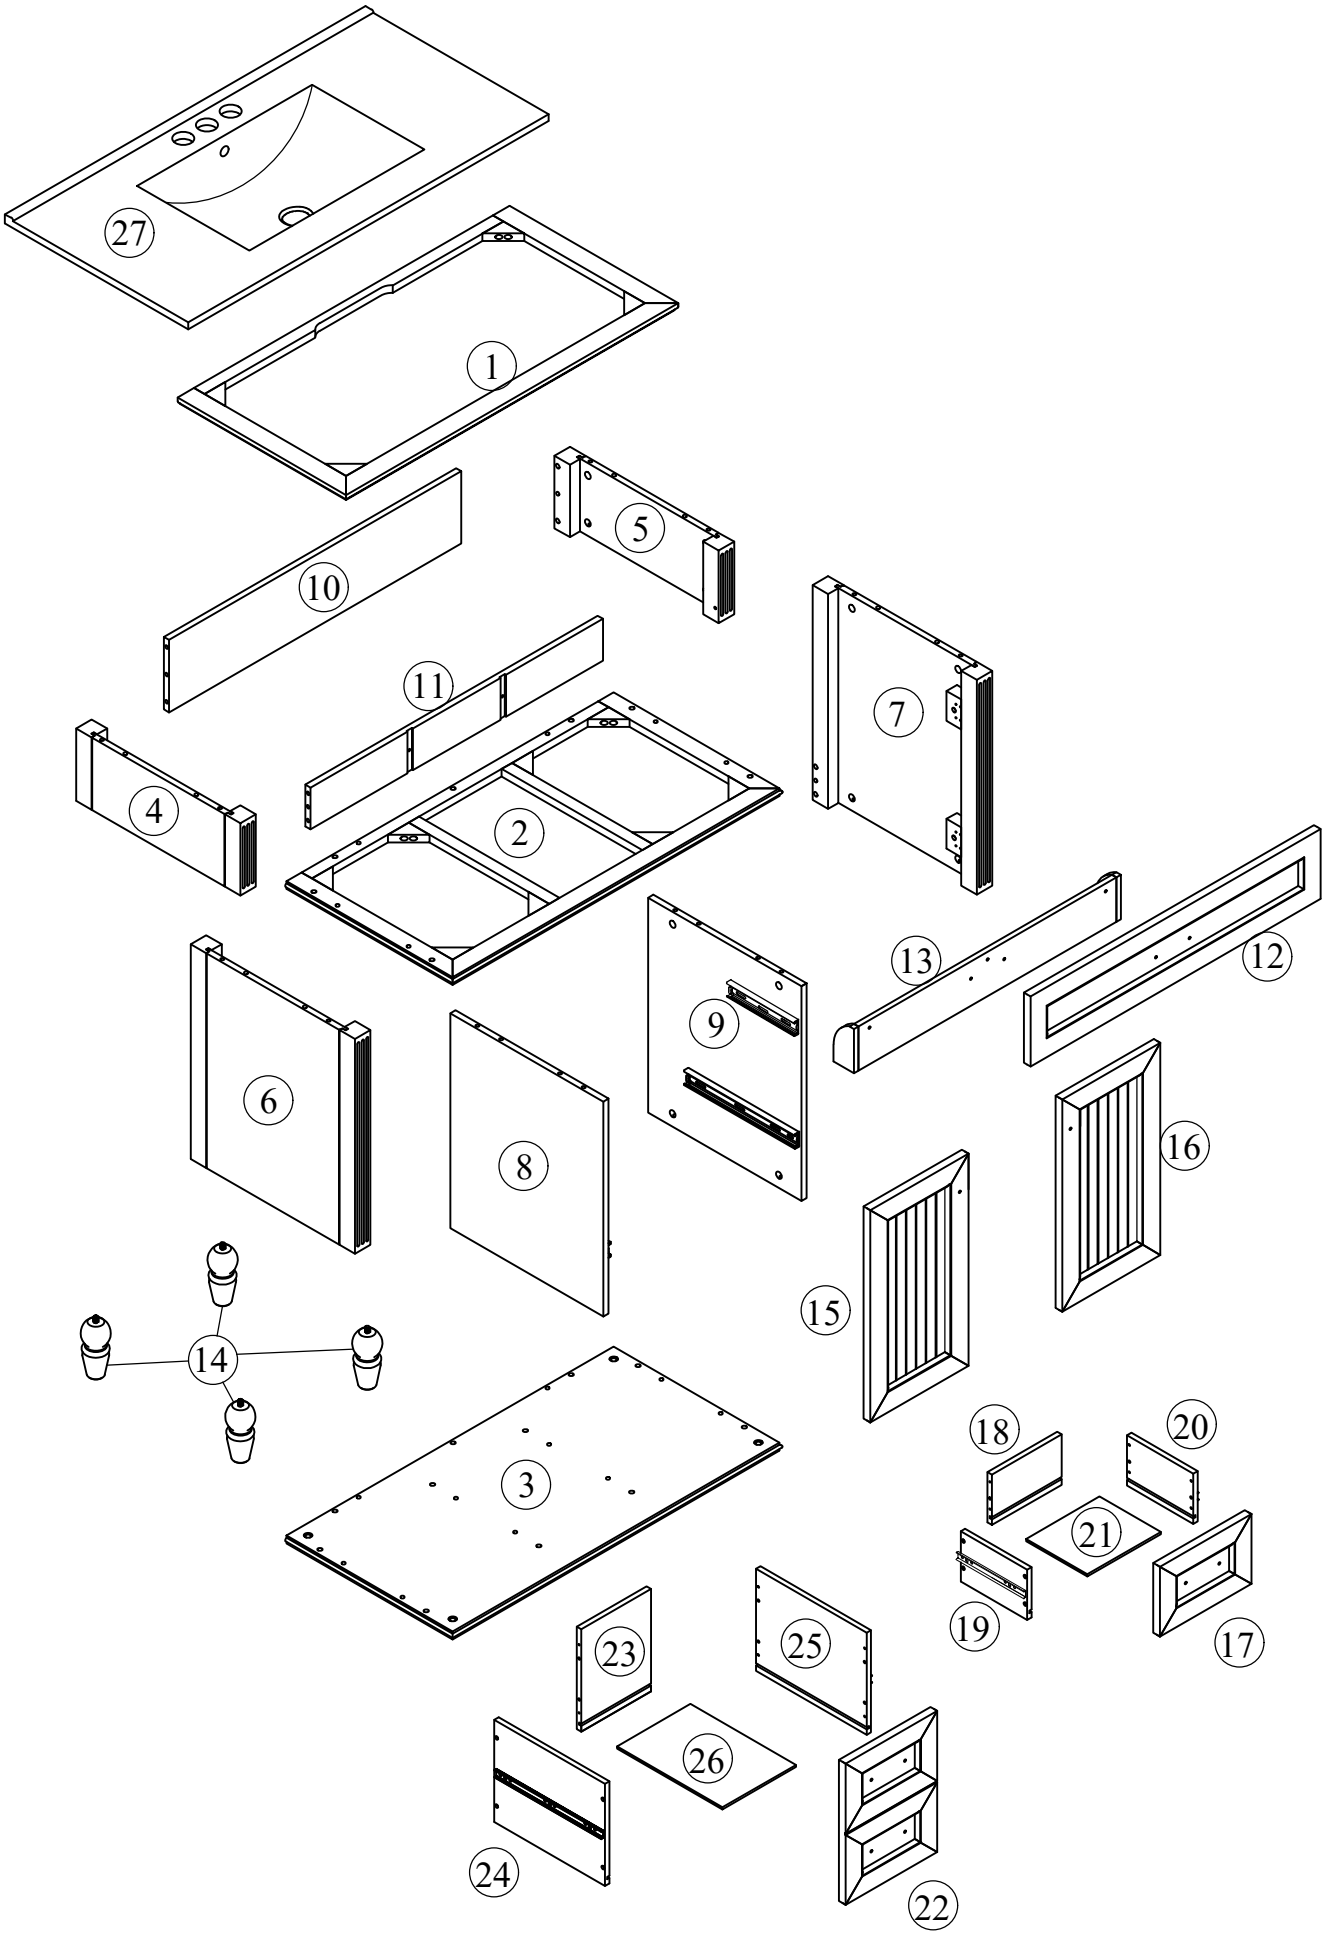


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.



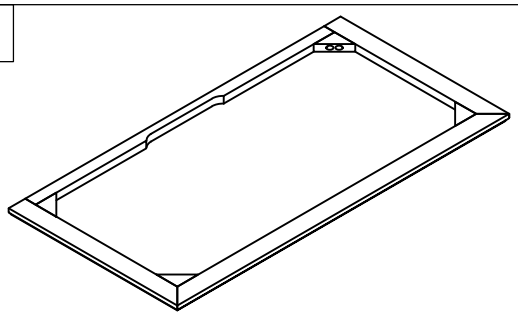
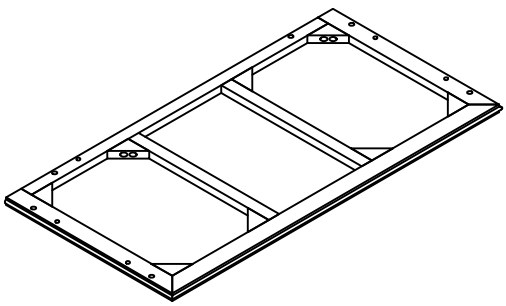
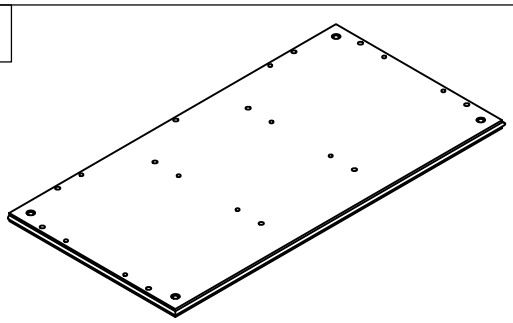
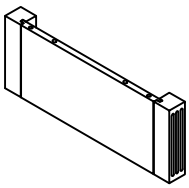
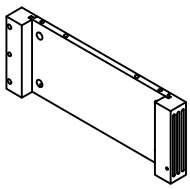
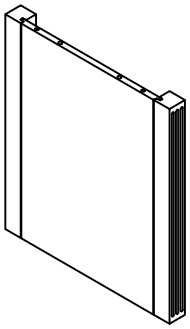
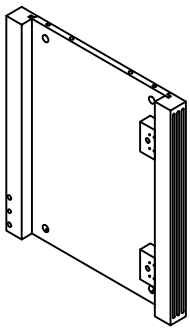
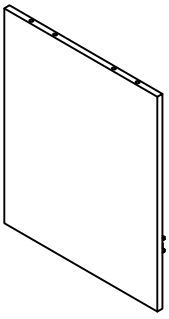
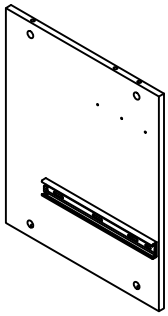
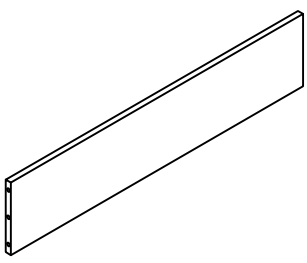
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View - VANITY

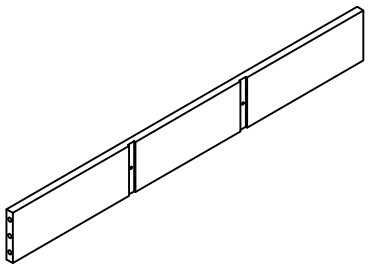
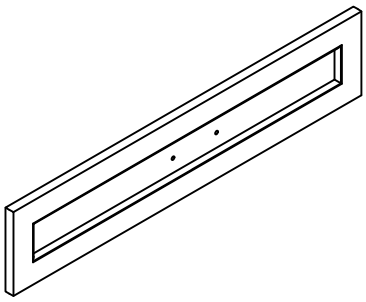
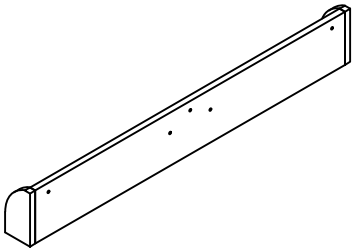

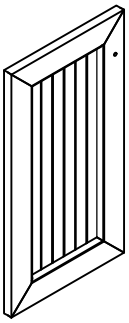
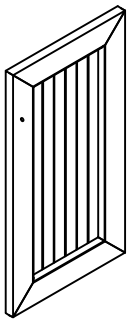
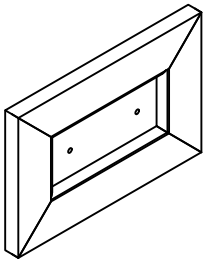
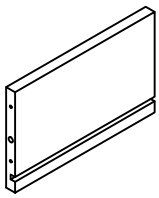
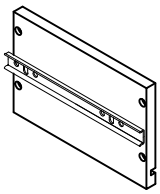
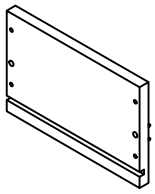


Identifying the Hardware -Indentify the hardware using the illustrations below.

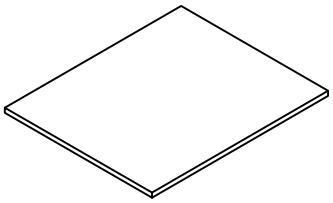
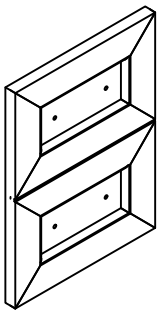
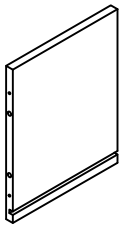
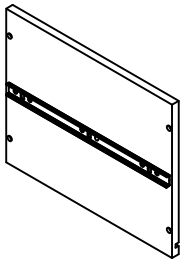
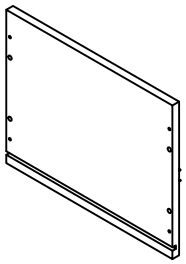
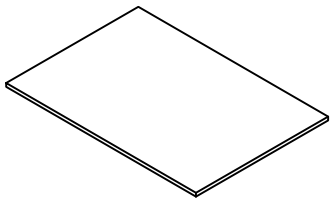
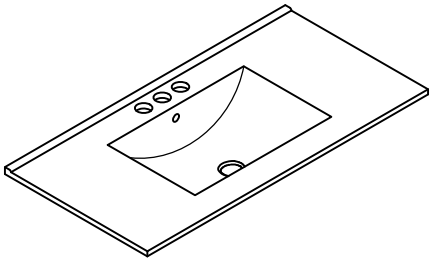
Part List

1  Frame Top - 1pc	2  Frame Mid - 1pc
3  Bottom Panel - 1pc	4  Top Side Panel (L) - 1pc
5  Top Side Panel (R) - 1pc	6  Bottom Side Panel (L) - 1pc
7  Bottom Side Panel (R) - 1pc	8  Mid Panel (L) - 1pc
9  Mid Panel (R) - 1pc	10  Top Rear Bar - 1pc


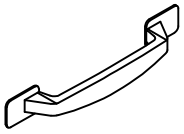



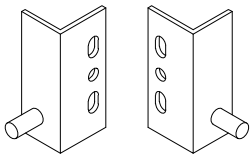


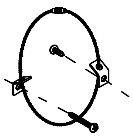
Part List

11  Bottom Rear Bar - 1pc	12  Flip Drawer Face - 1pc
13  Flip Drawer - 1pc	14  Legs- 4pcs
15  Left Door - 1pc	16  Right Door - 1pc
17  Top Drawer Face - 1pc	18  Top Back Drawer - 1pc
19  Top Side Drawer (L) - 1pc	20  Top Side Drawer (R) - 1pc

Part List

21  Top Bottom Drawer - 1pc	22  Bottom Drawer Face - 1pc
23  Bottom Back Drawer - 1pc	24  Bottom Side Drawer (1) - 2pc
25  Bottom Side Drawer (R) - 1pc	26  Bottom Bottom Drawer - 1pc
27  Sink - 1pc	

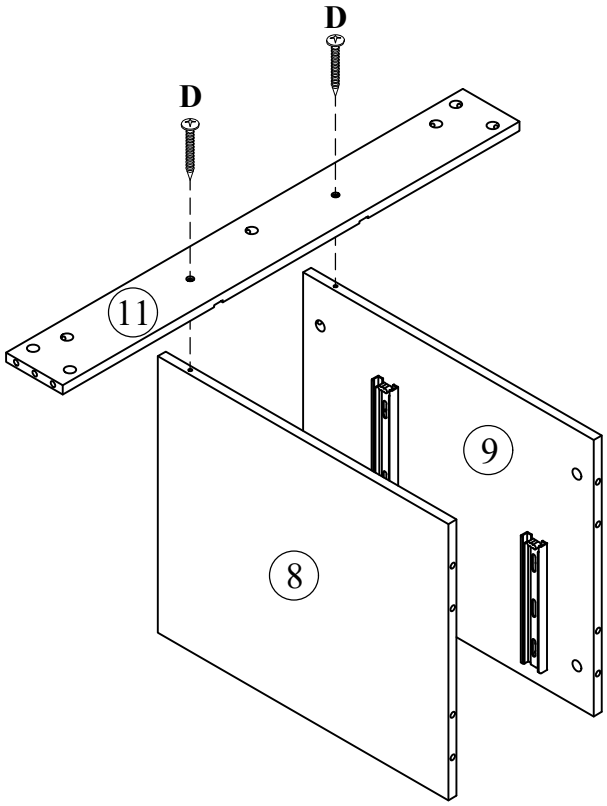
Hardware List

A  ø6x35mm	B  ø14.5x12mm	C  ø8xø4x15mm
Three in one bolts - 38pcs	Three in one lock - 38pcs	Round head screw - 3pcs
D  ø8xø4x25mm	E  ø8xø4x32mm	F 
Round head screw - 2pcs	Round head screw - 16pcs	Handle - 2pcs
G 	H  ø5/32"x25mm	I  ø5/32"x30mm
Handle - 4pcs	Handle screw - 8pcs	Handle screw - 2pcs
J 	K 	L  ø6xø3x12mm
Duo Forte (1pc)	Rotary Hinge(2pcs)	Round head screw(8pcs)
M 	N  ø7xø3.5x15mm	O  ø8x30mm
Damping hinge - 4pcs	Flat head screw - 24pcs	Wood dowel - 32pcs
P  ø6x30mm	Q 	
Wood dowel - 12pcs	Anti fall hardware (2sets)	



STEP: 1

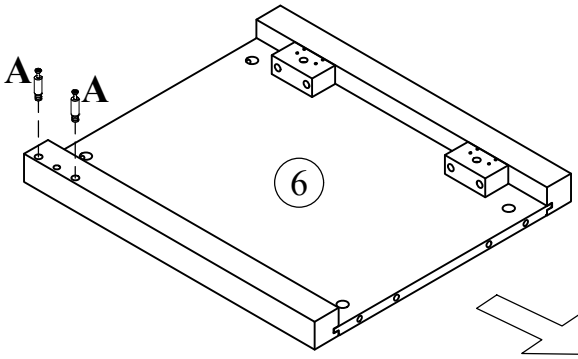
D

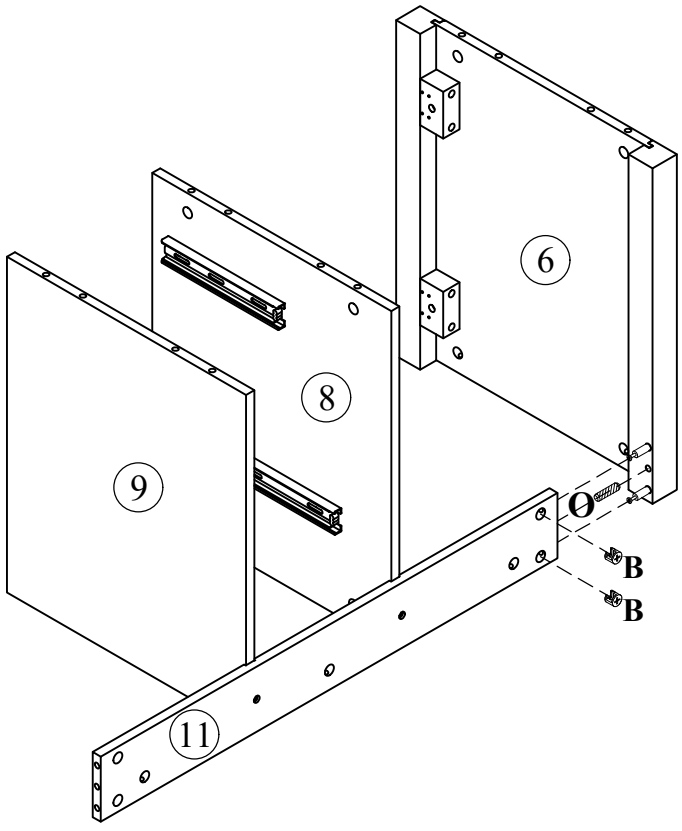
2PCS



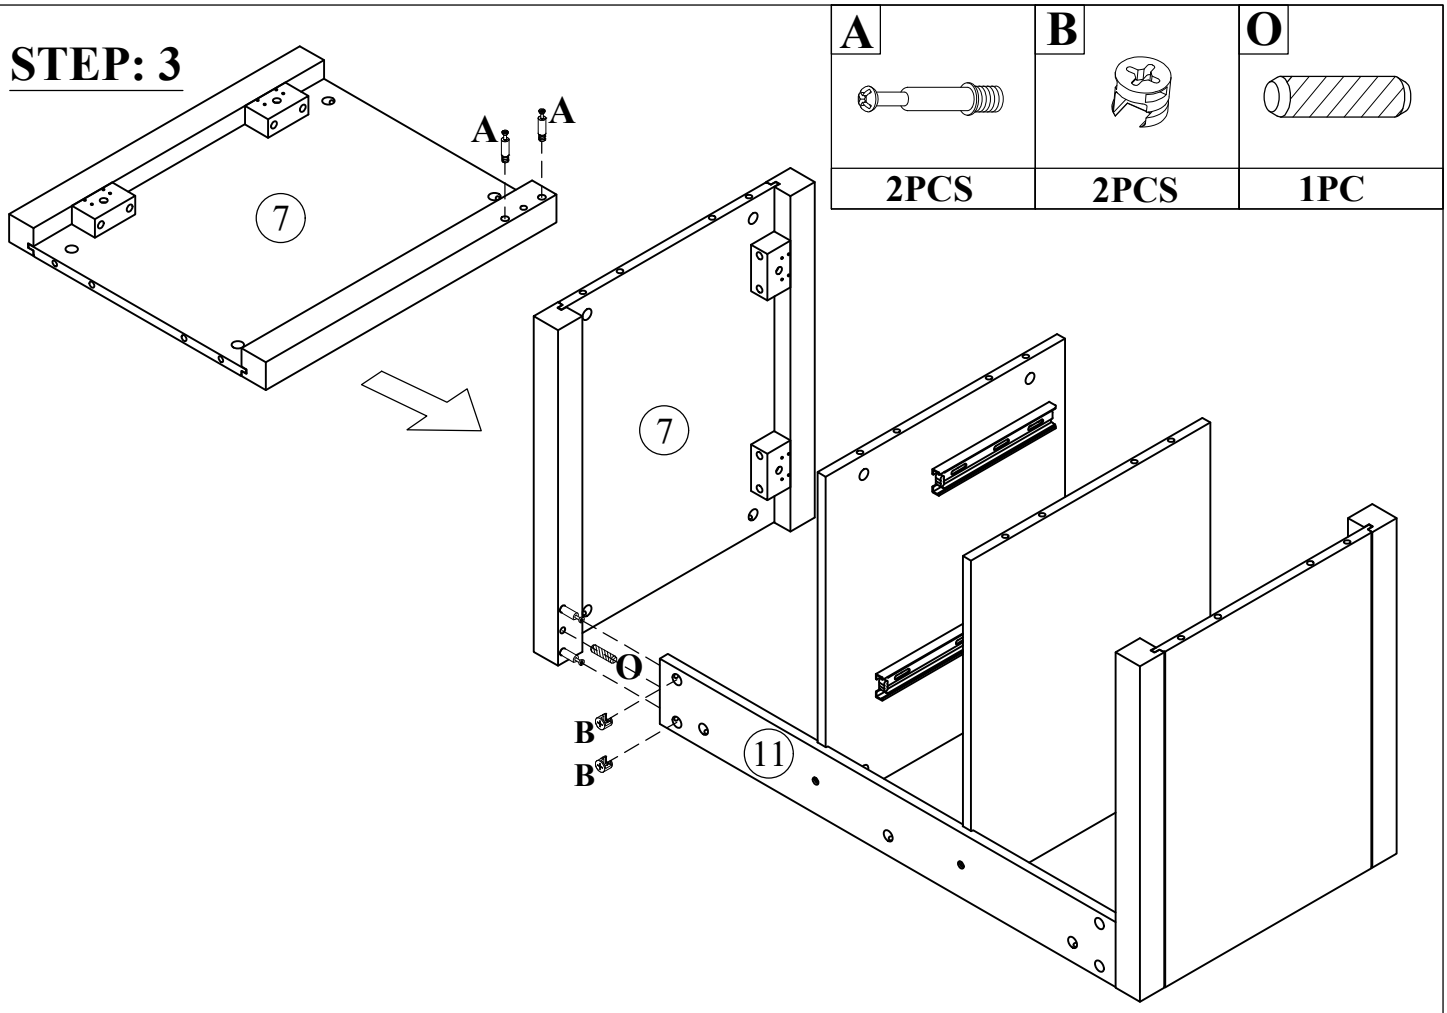
STEP: 2

A	B	O
		
2PCS	2PCS	1PC

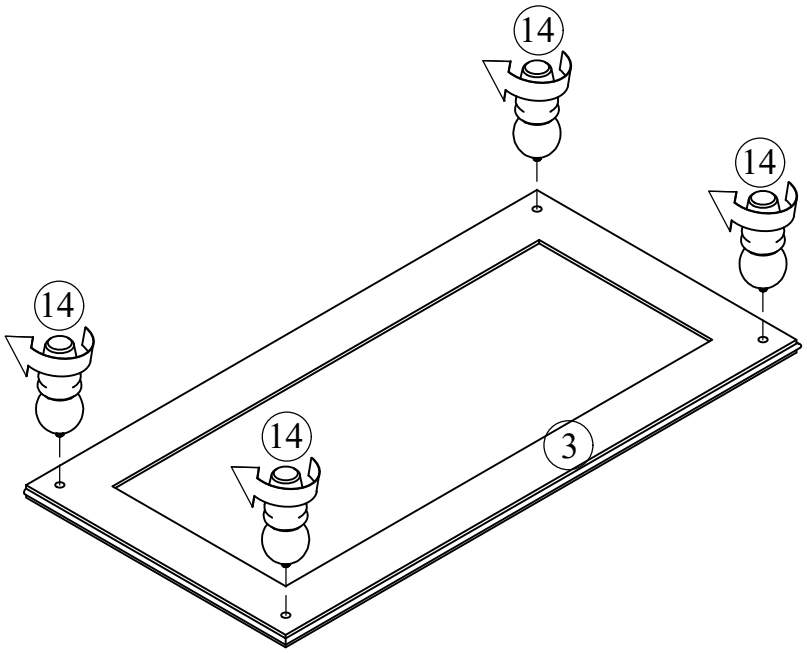




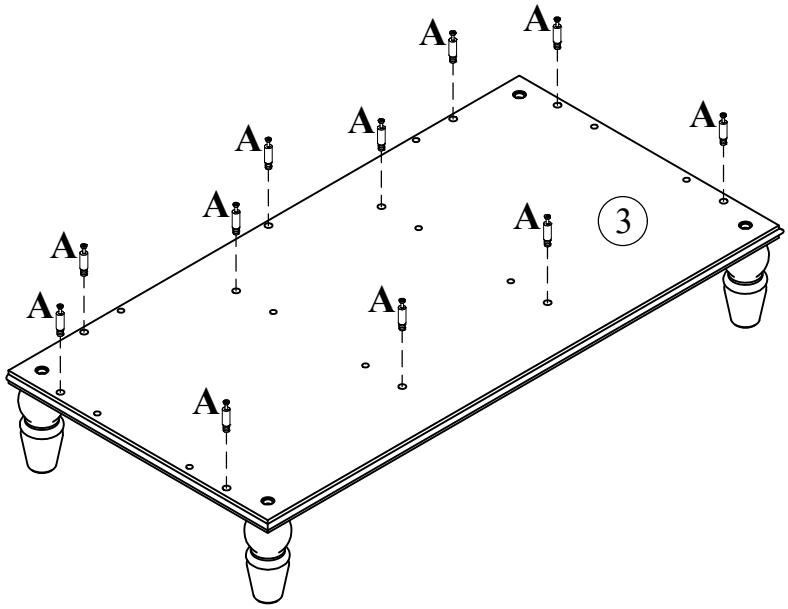
STEP: 3




STEP: 4

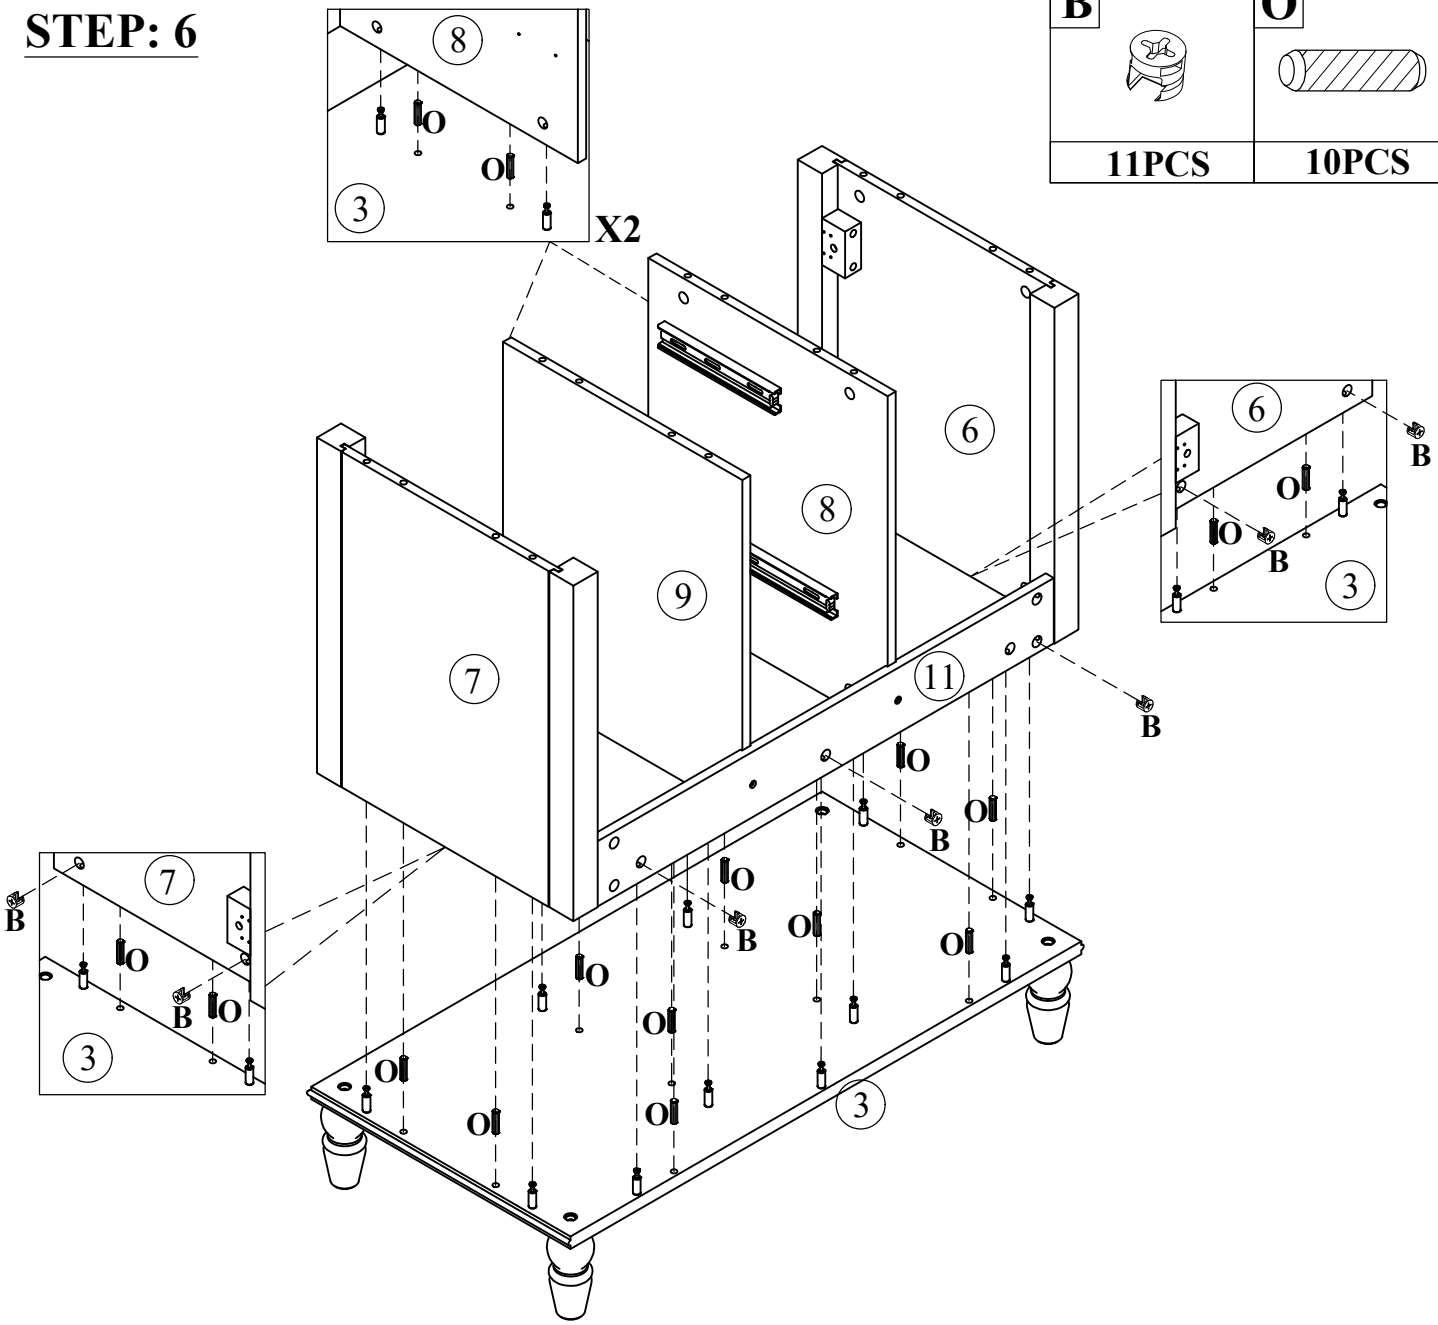


STEP: 5





A

11PCS


STEP: 6

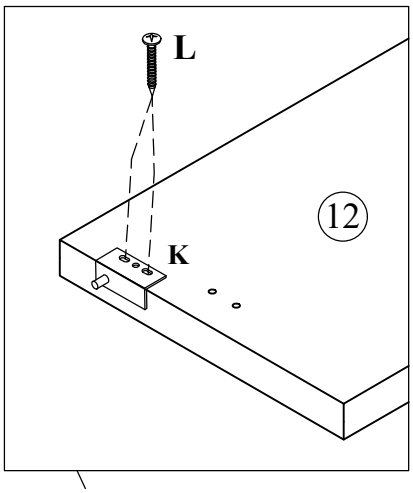


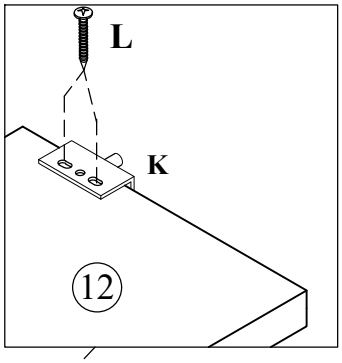
B	O
11PCS	10PCS

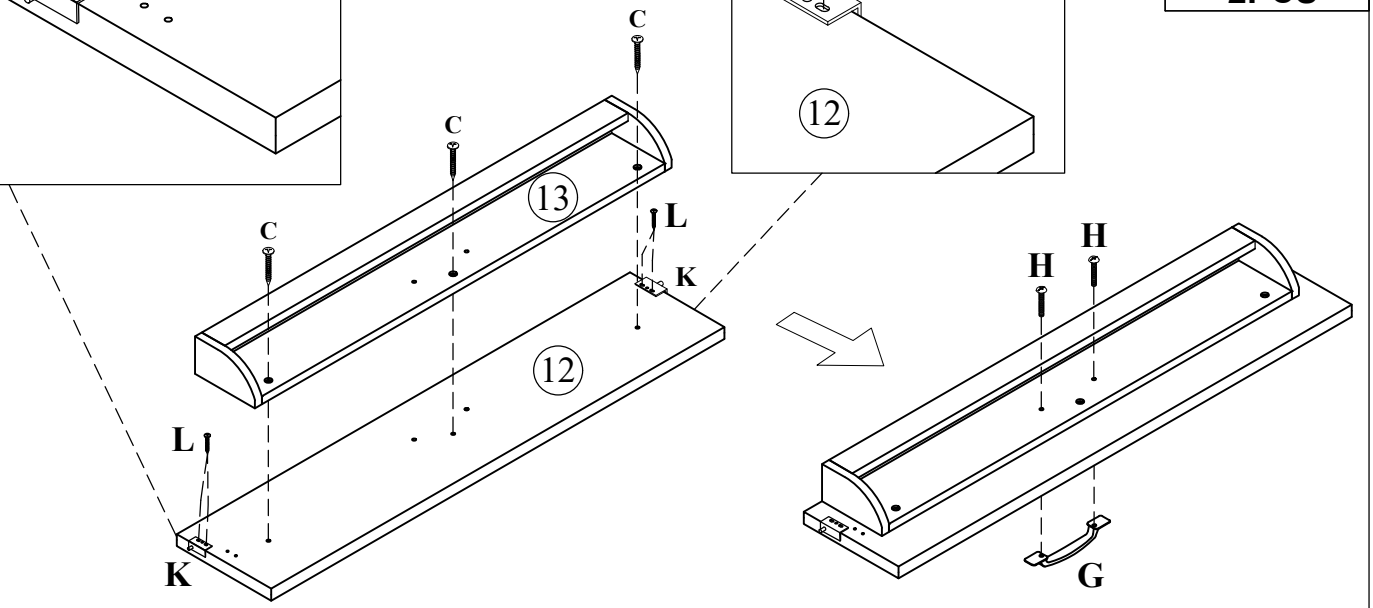
STEP: 7

L	H	G	C
			
4PCS	2PCS	1PC	3PCS



K

2PCS

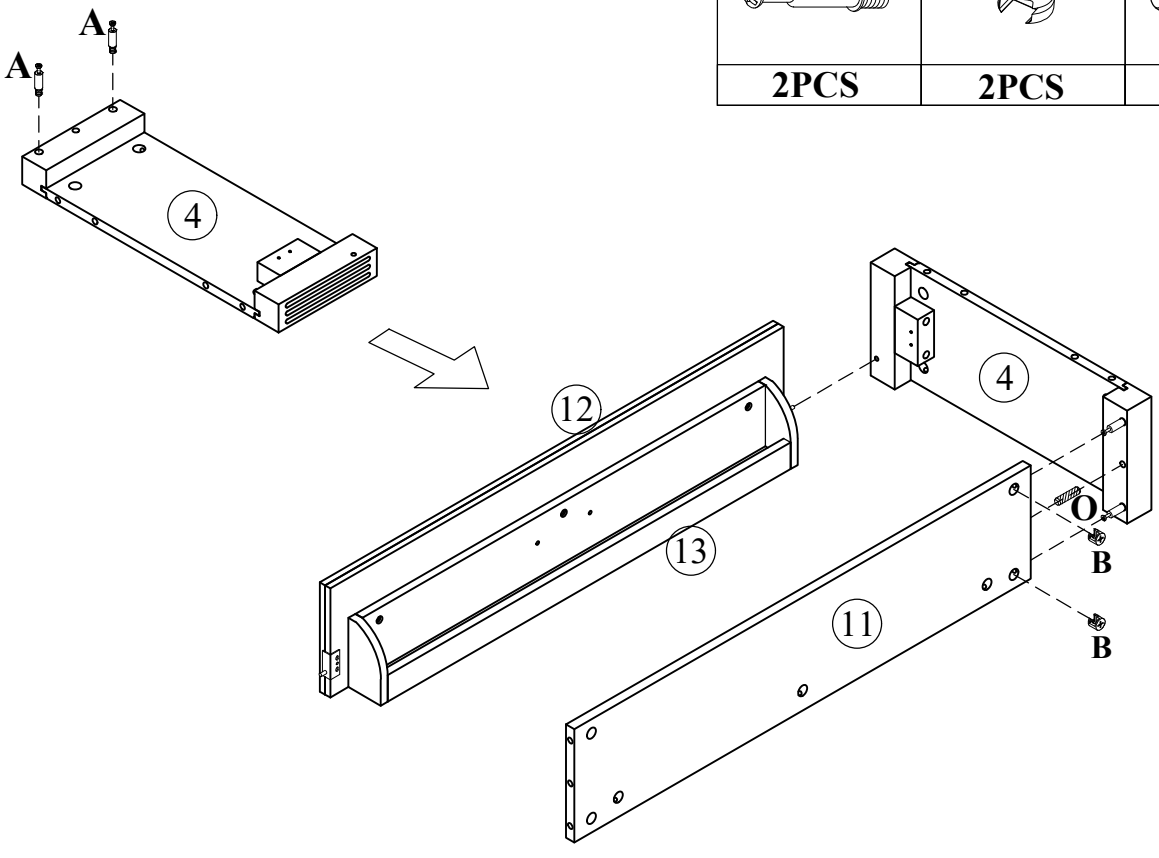








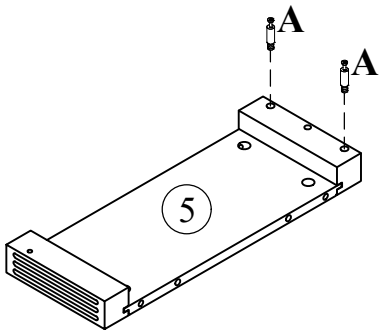
STEP: 8

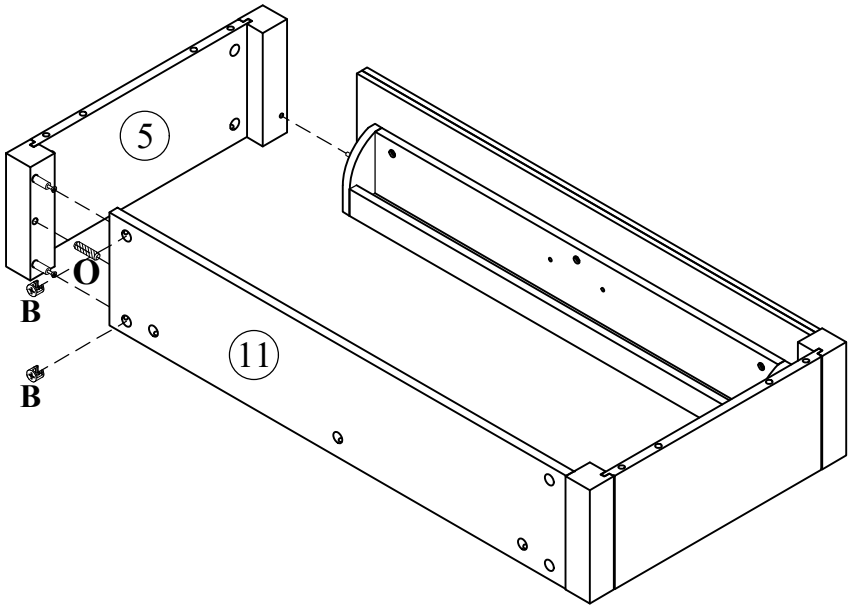
A	B	O
		
2PCS	2PCS	1PC




STEP: 9

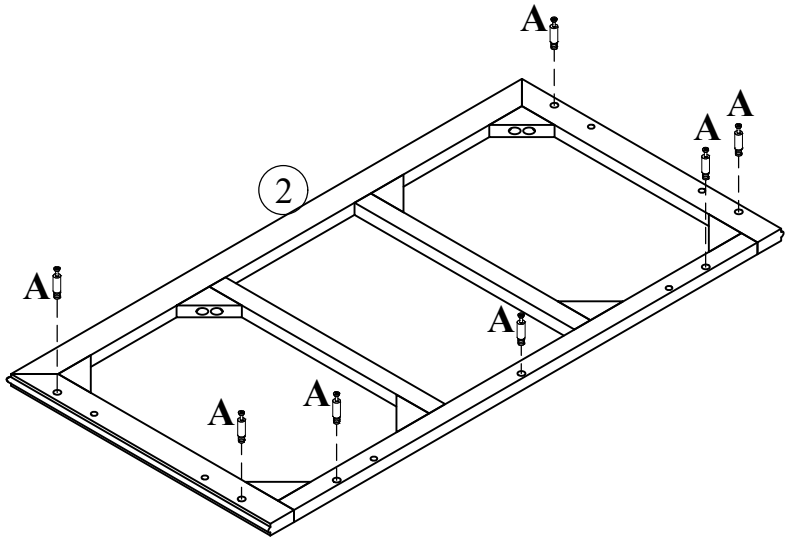
A	B	O
		
2PCS	2PCS	1PC





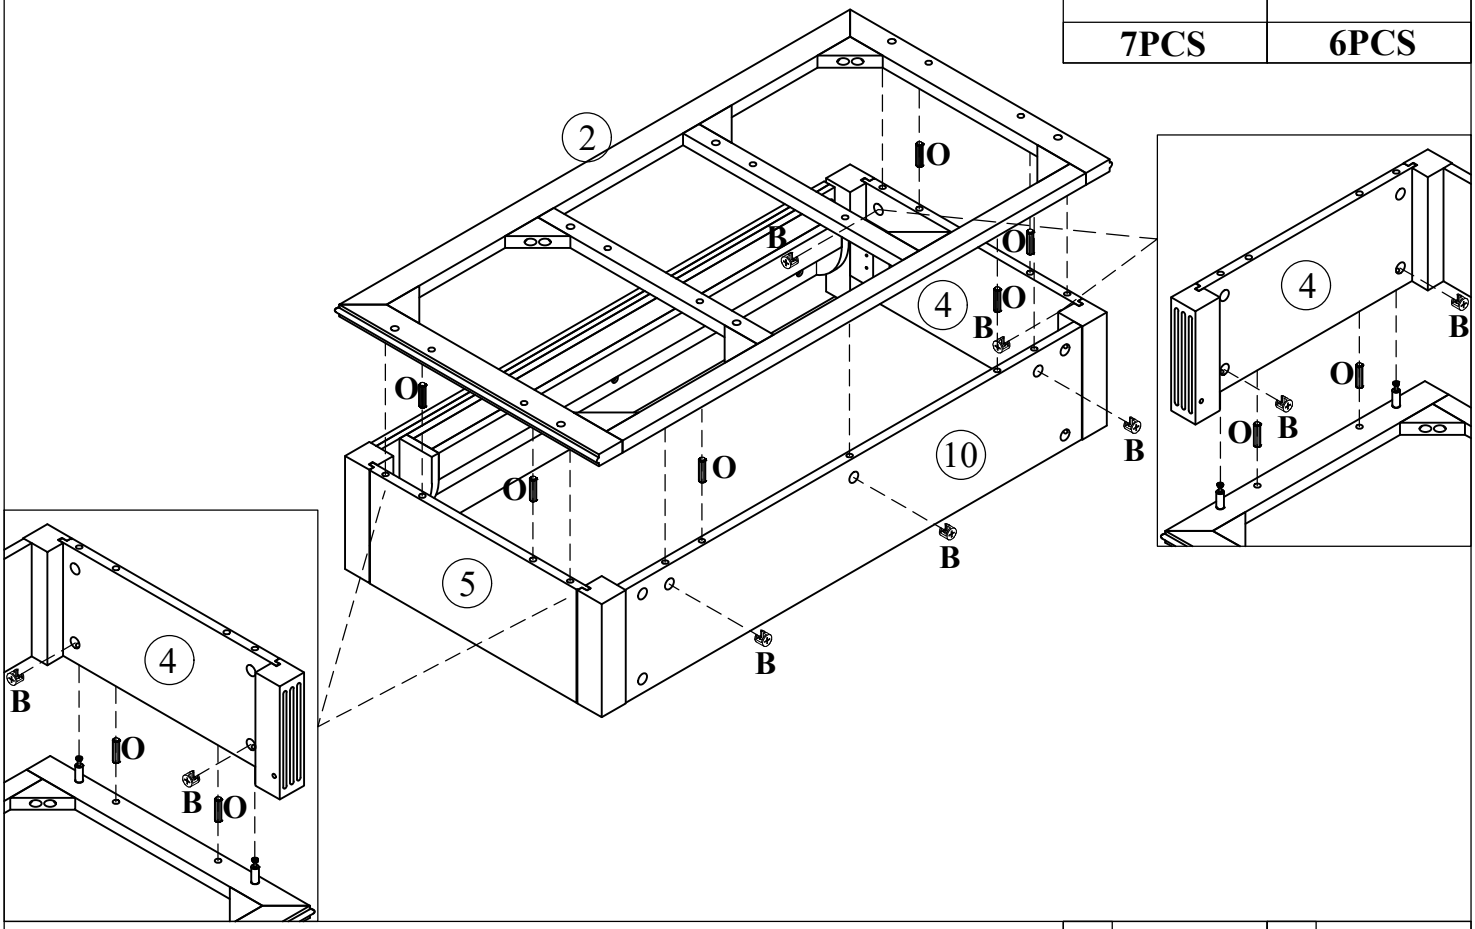
STEP: 10

A

7PCS



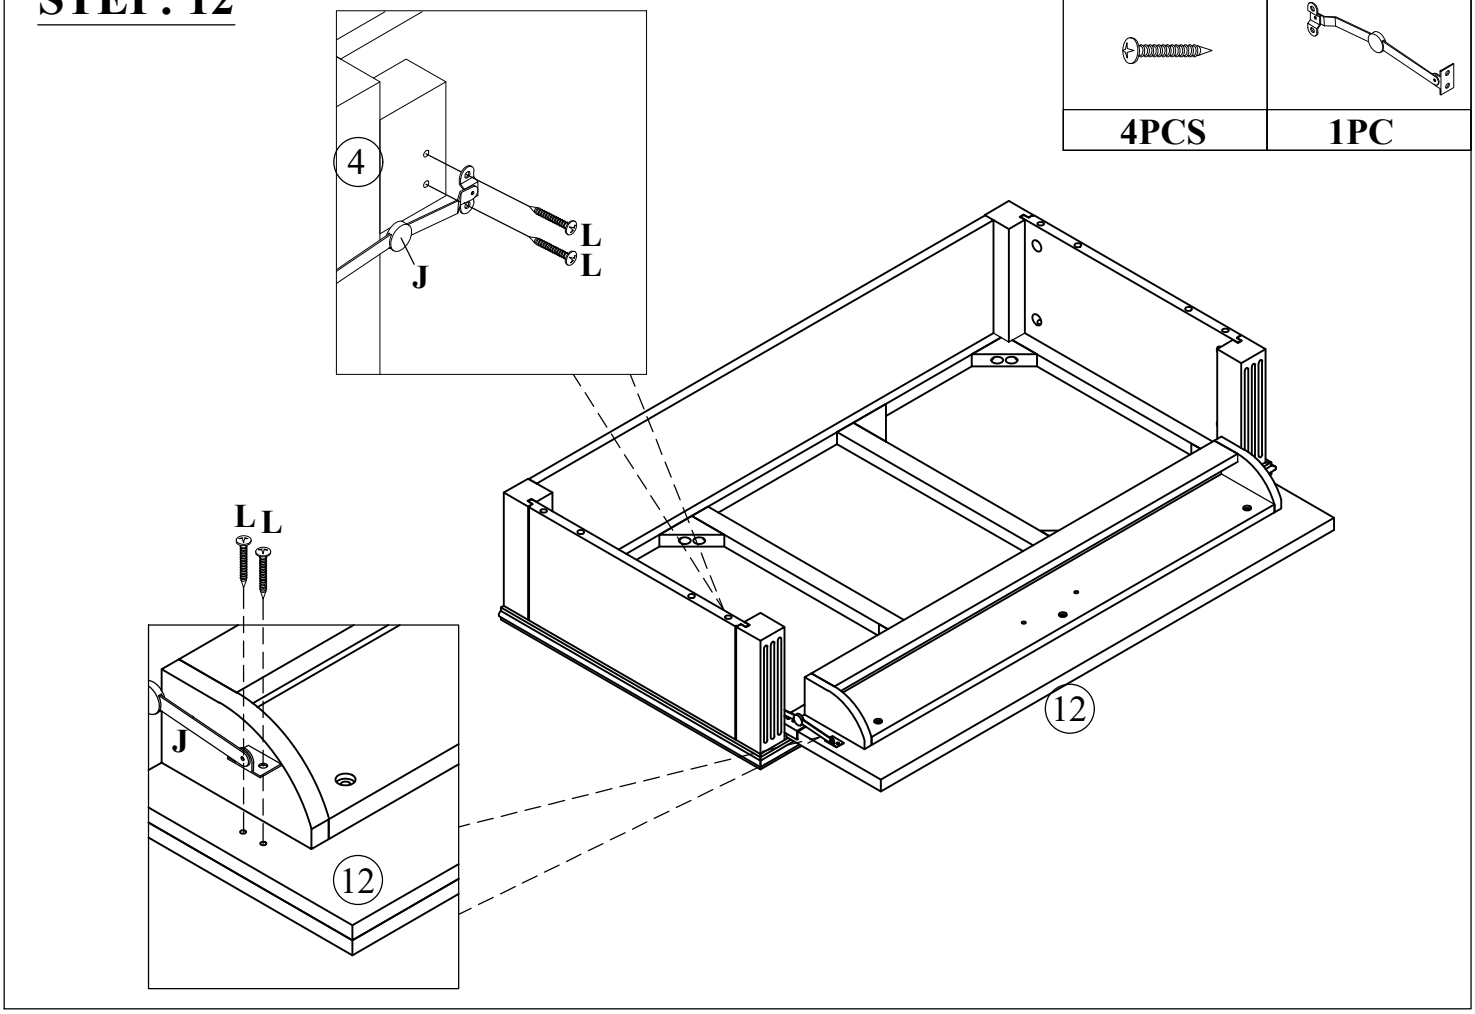
STEP: 11

B	O
7PCS	6PCS




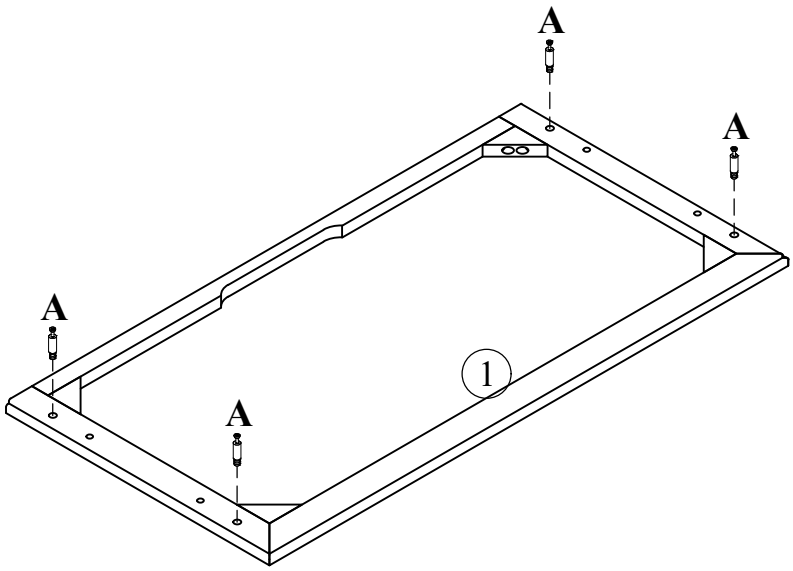
STEP: 12

L	J
4PCS	1PC




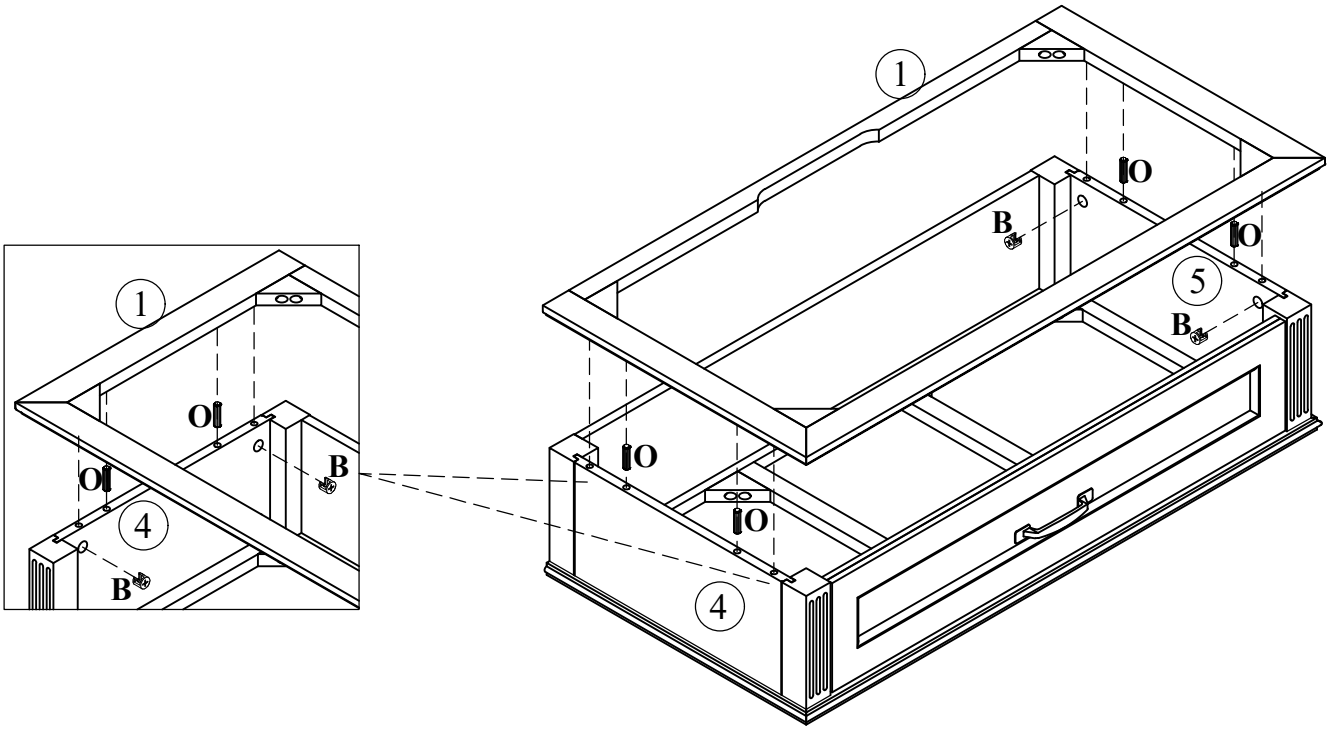
STEP: 13

A

4PCS




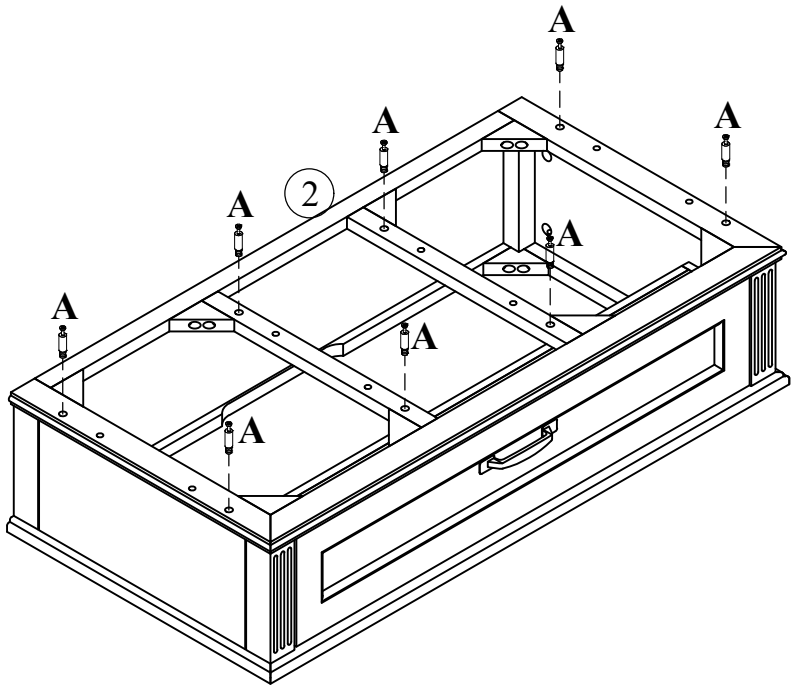
STEP: 14

B	O
	
4PCS	4PCS




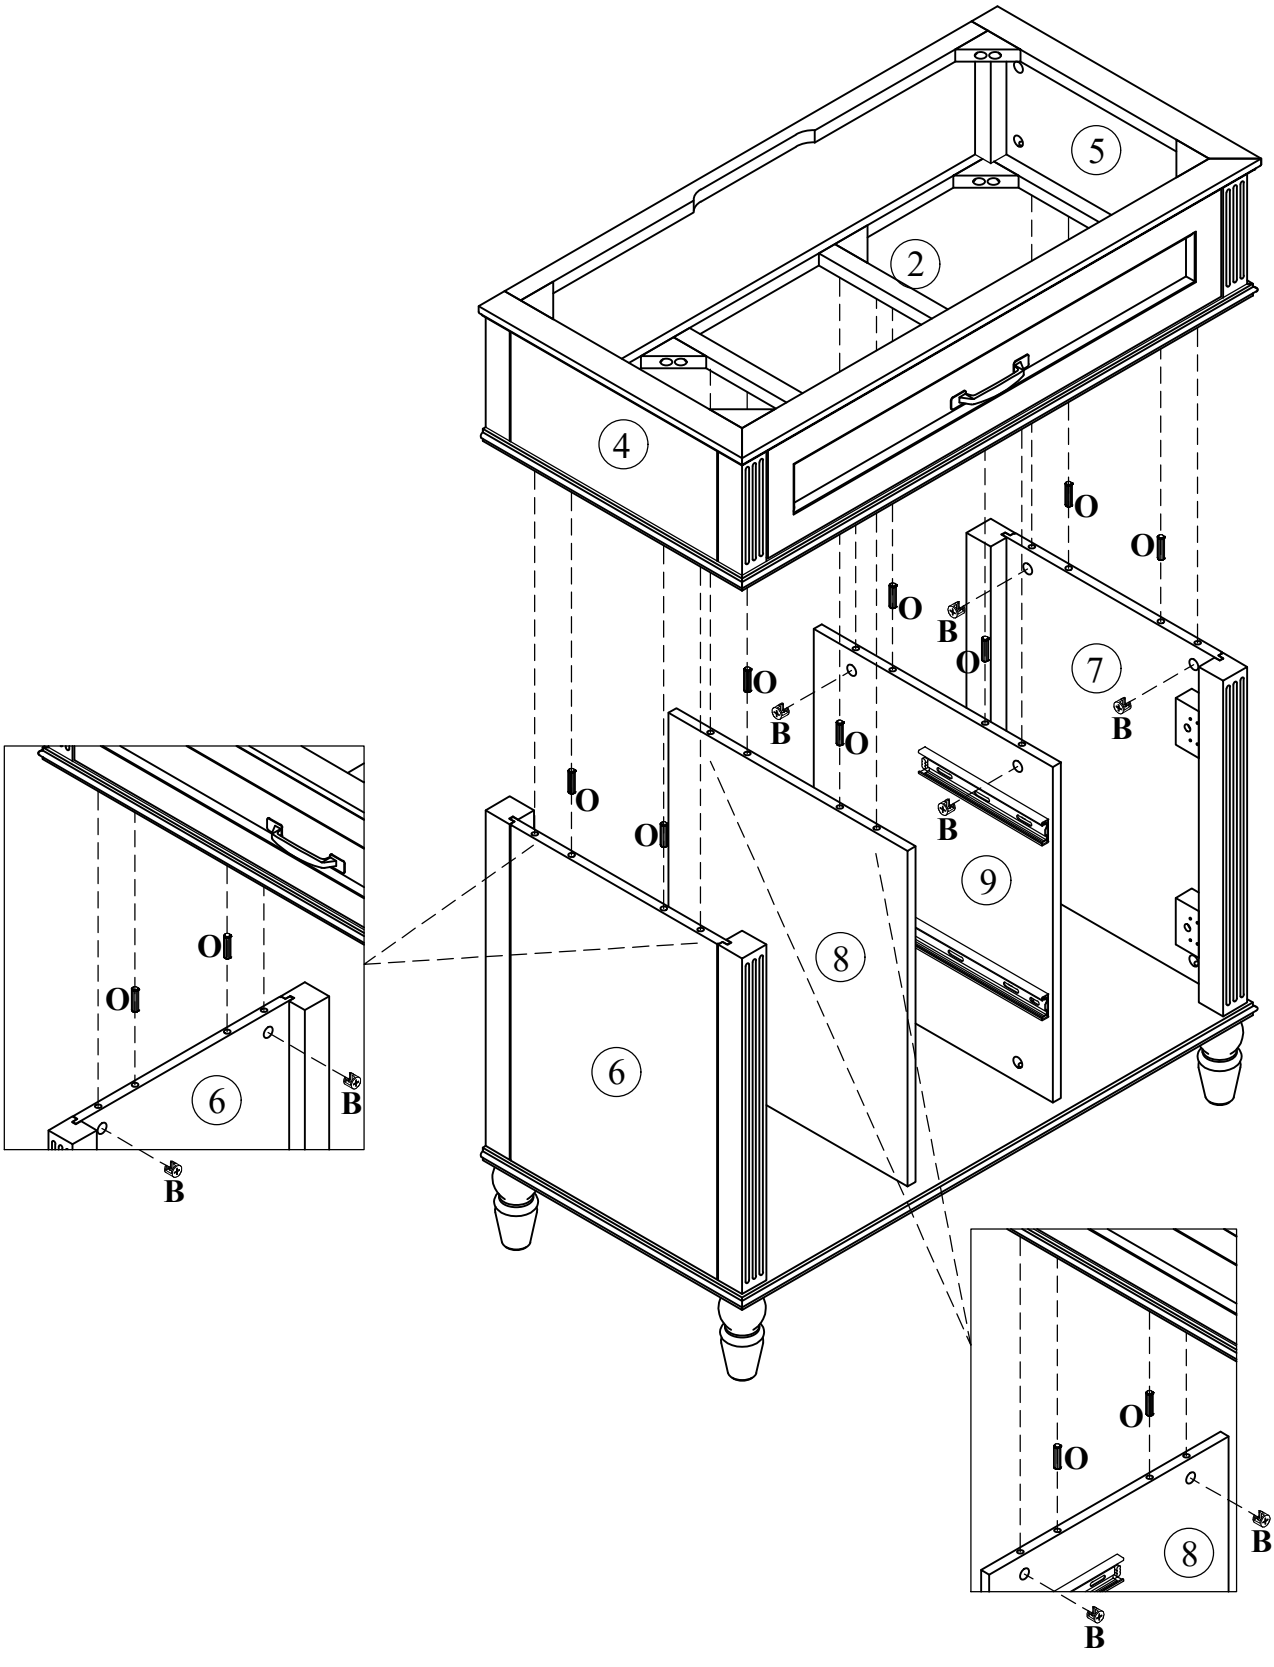
STEP: 15

A

8PCS



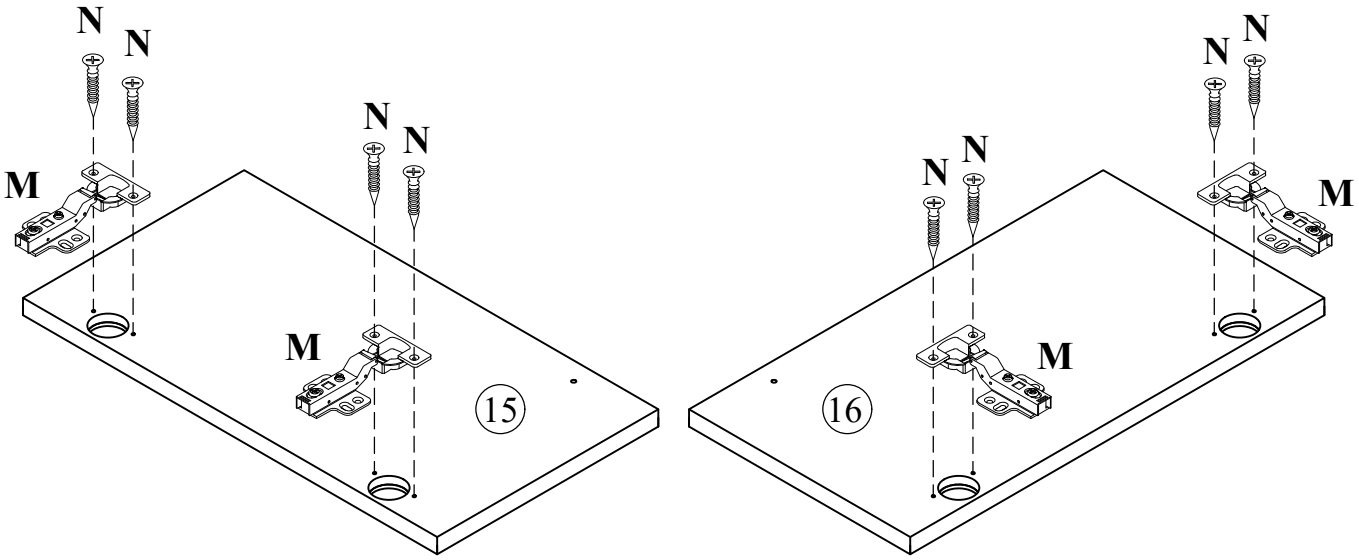
STEP: 16

B	O
	
8PCS	8PCS



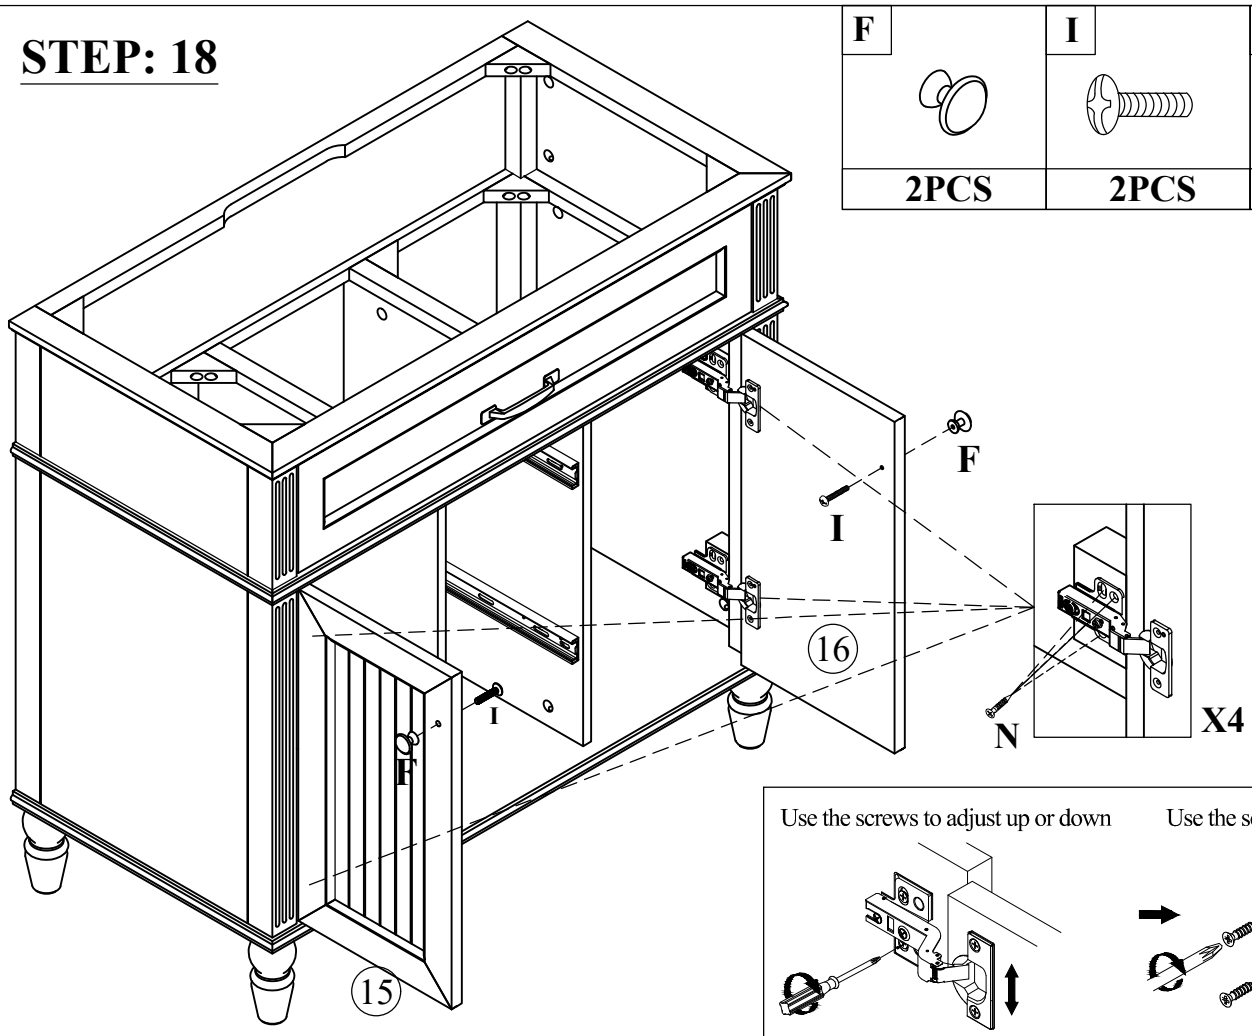
STEP: 17

N	M
8PCS	4PCS



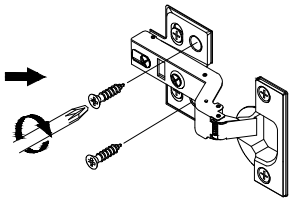
STEP: 18

F	I	N
2PCS	2PCS	16PCS

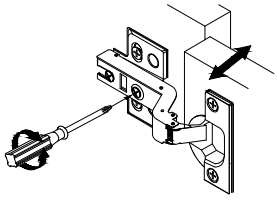


Use the screws to adjust up or down

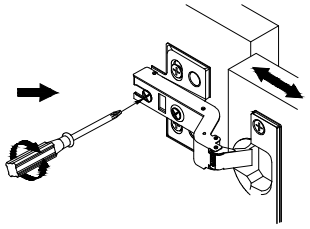
Use the screws to permanent



Use the screws to adjust left or right

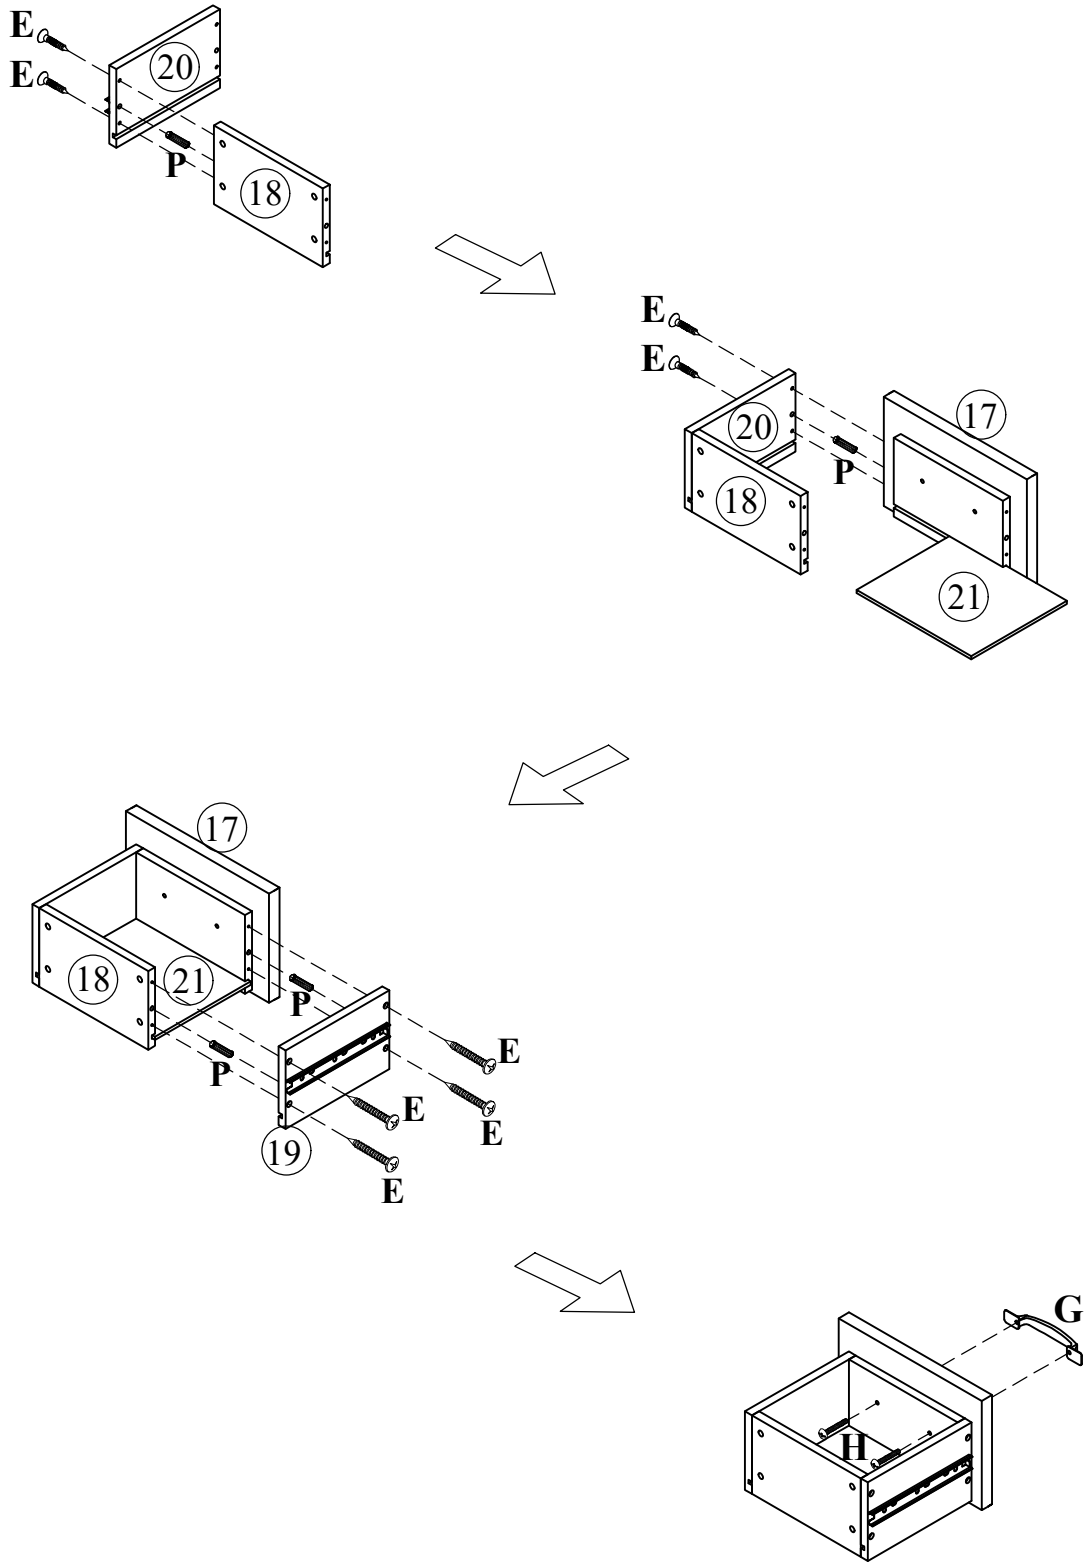


Use the screws to adjust in or out



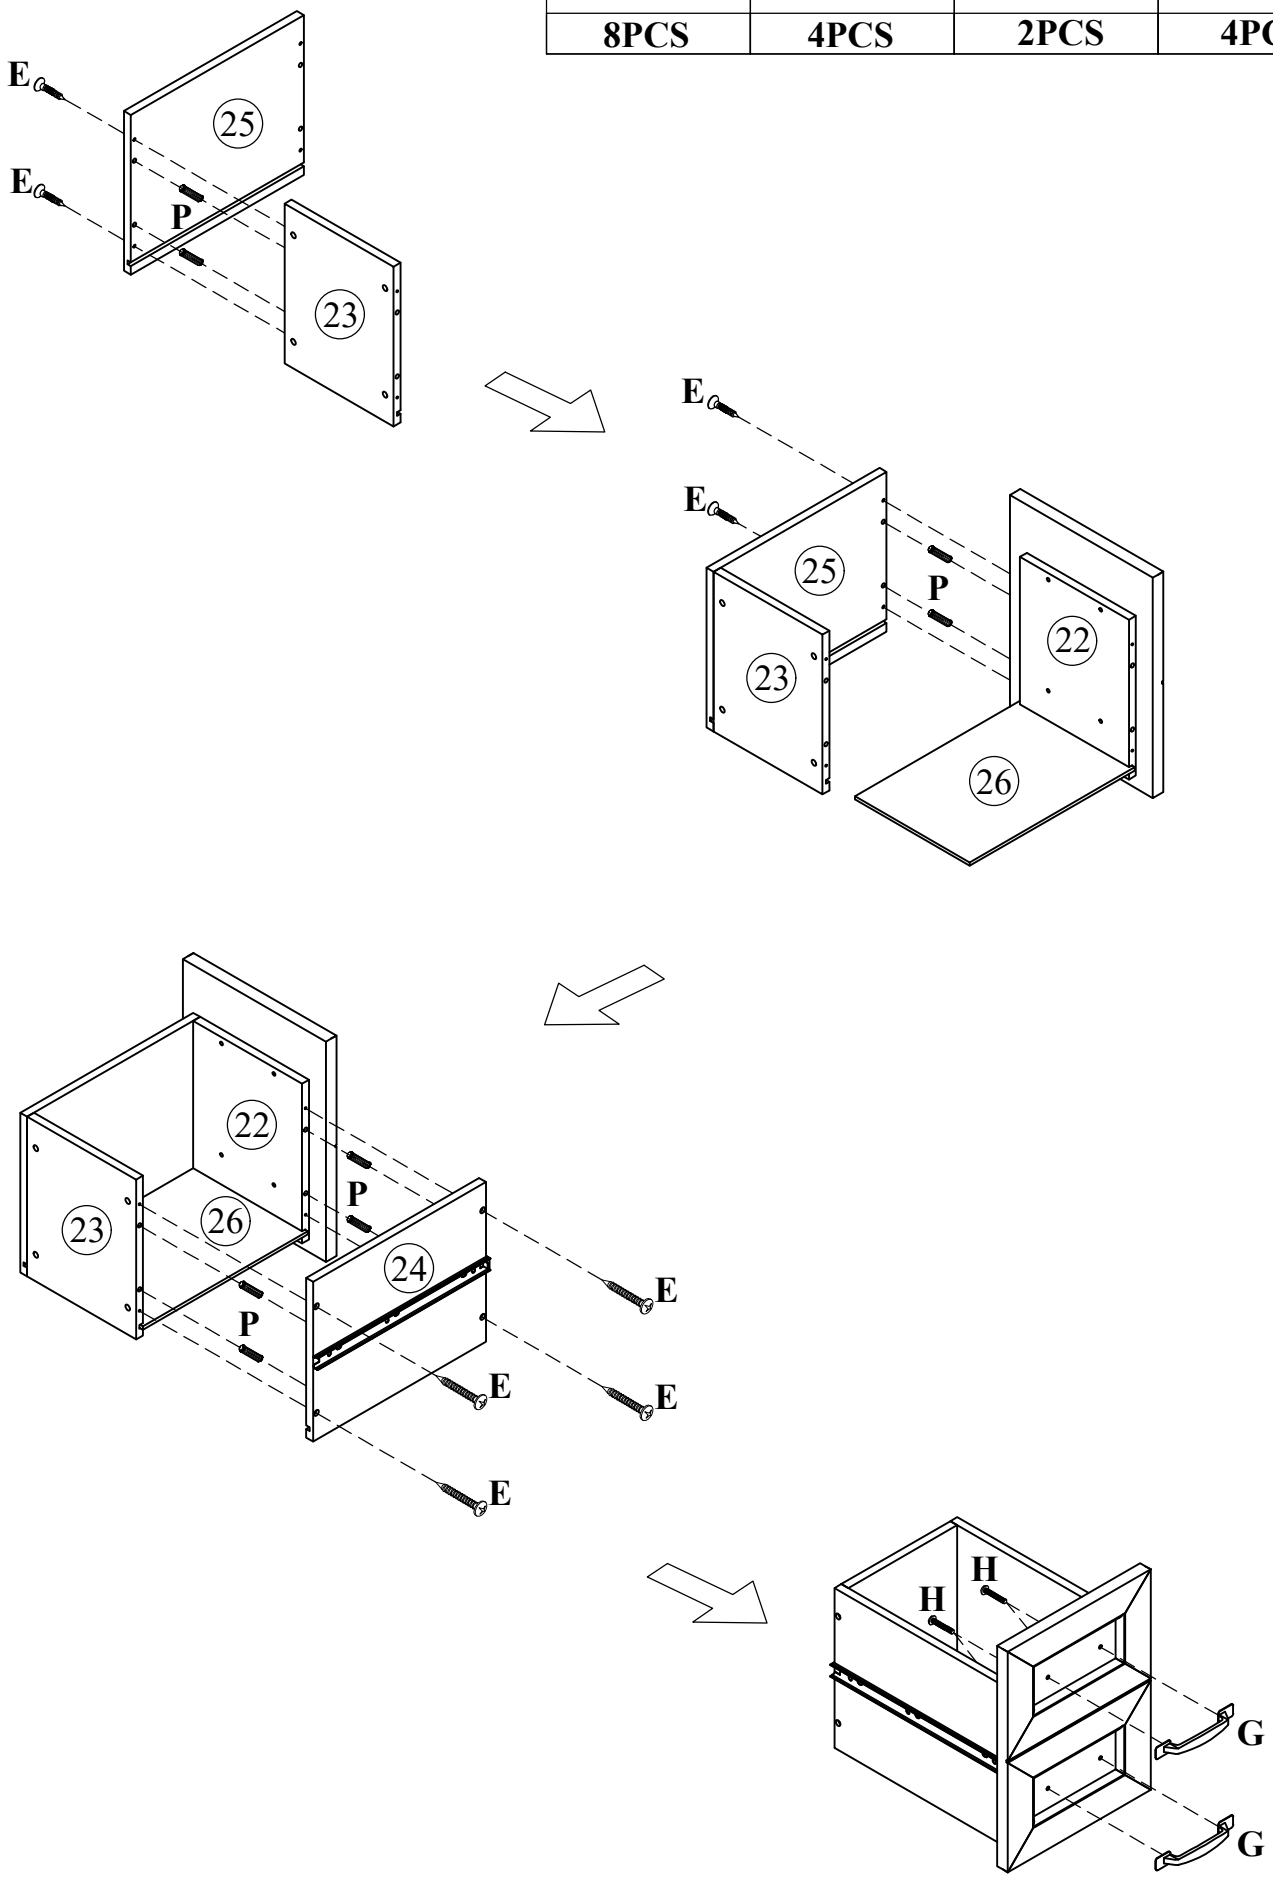
STEP: 19

E	P	G	H
8PCS	4PCS	1PC	2PCS

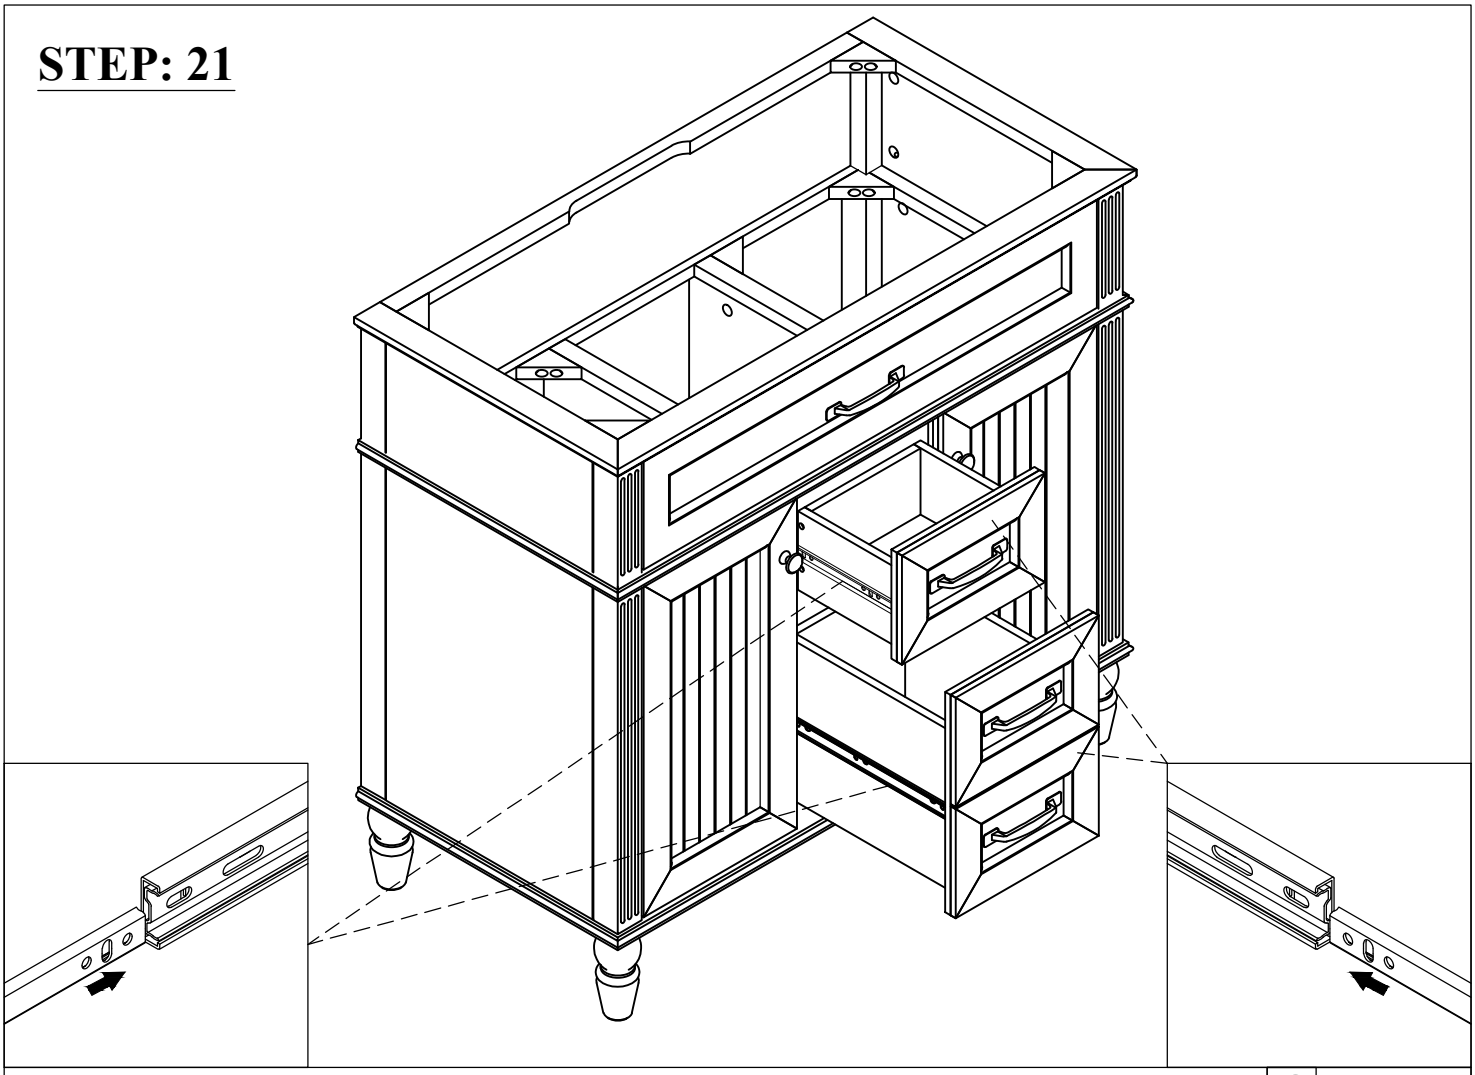


STEP: 20

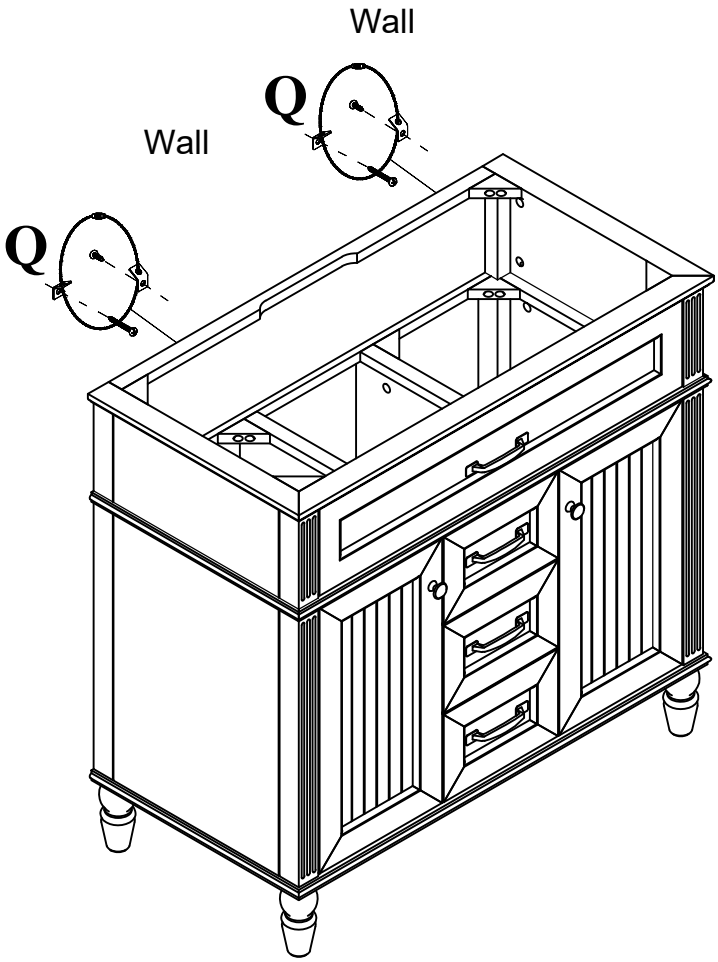
E	P	G	H
8PCS	4PCS	2PCS	4PCS

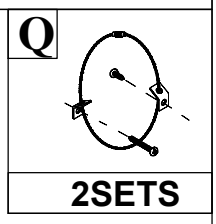


STEP: 21



STEP: 22

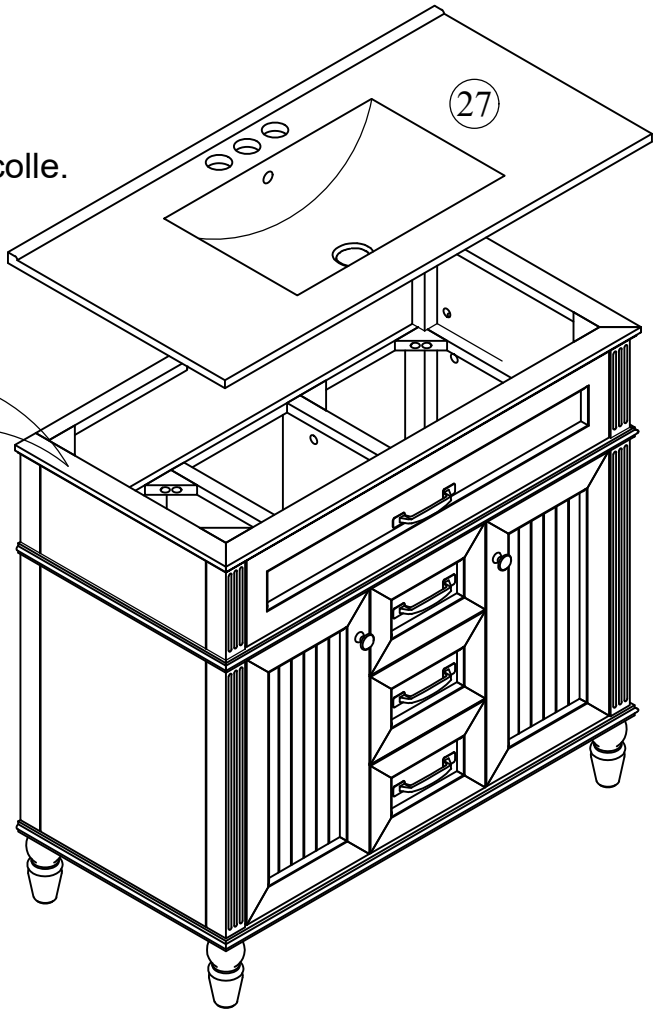




STEP: 23

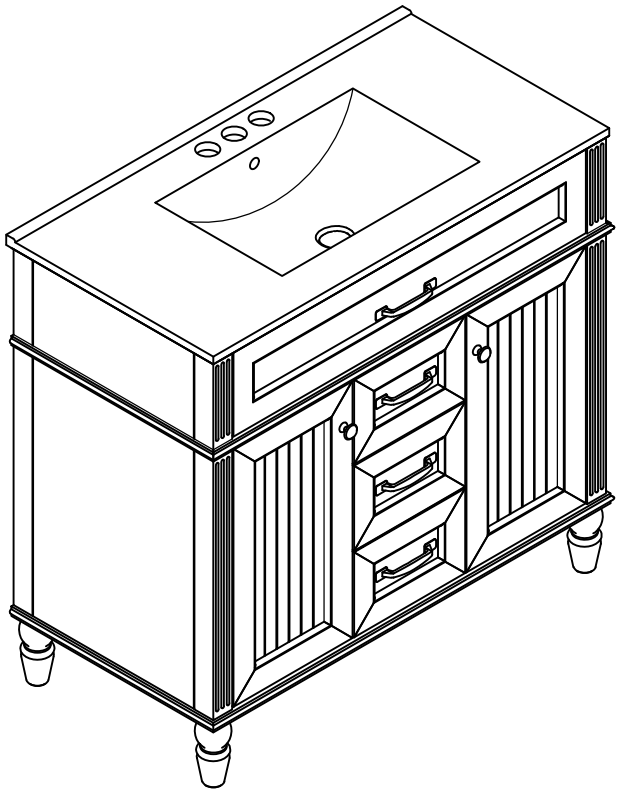
Install the sink on the cabinet with glue.
Let stand for 24 hours
(Installez l'évier sur le meuble avec de la colle.
Laisser reposer 24 heures)

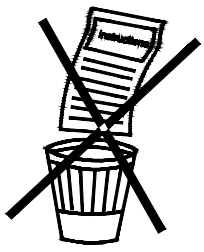




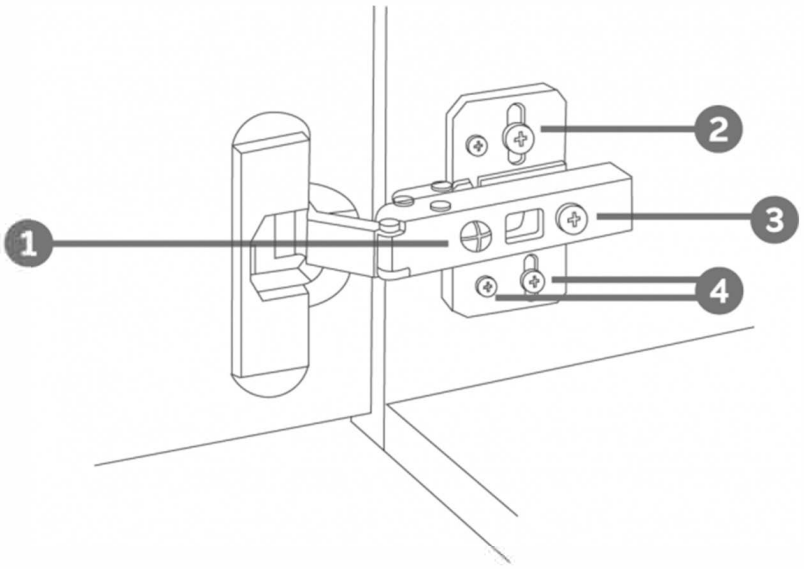
*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.
*La colle silicone n'est pas incluse dans le colis afin de respecter les règles de sécurité dans certaines conditions d'expédition.

STEP: 24



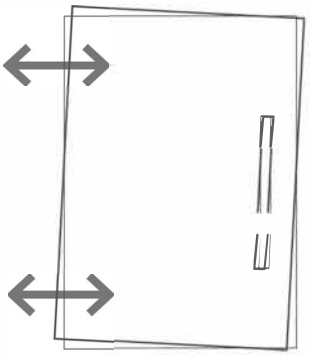


HINGE ADJUSTMENTS



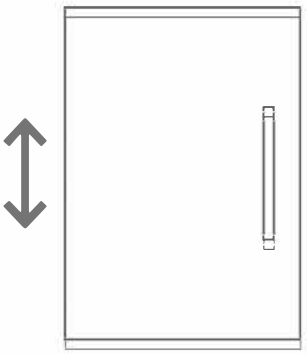
1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet



2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down



3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

