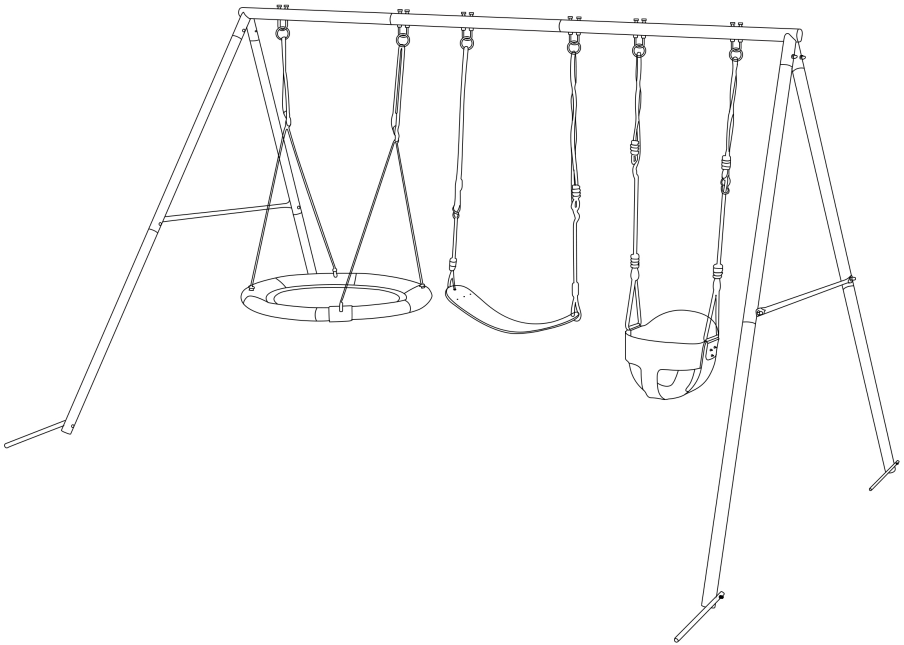


# OUTDOOR BEACH SWING - 3-SEAT







Scan the QR code on the right to watch the installation video












Note: Best assembled by two people for ease.


Any problems, please contact at: [furniture@supportme.email](mailto:furniture@supportme.email)

## SCREW PARTS

|                                                                                                                                  |                                                                                                                             |                                                                                                                                 |                                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b>  <p>U-bolts x6</p>                      | <b>B</b>  <p>Open-end wrench x1</p>        | <b>C</b>  <p>Fixing Plate x2</p>               | <b>D</b>  <p>White Screw with Wave Washer x4</p> |
| <b>E</b>  <p>White Screw with Flat Washer x4</p> | <b>F</b>  <p>Short White-Head Screw x6</p> | <b>G</b>  <p>Slender Hexagon Head Screw x4</p> | <b>H</b>  <p>Allen Wrench x2</p>                 |

## MAIN COMPONENTS
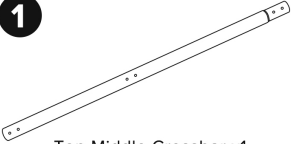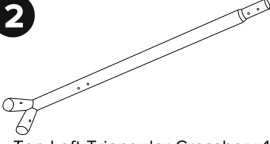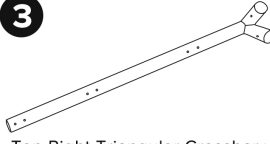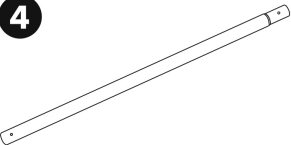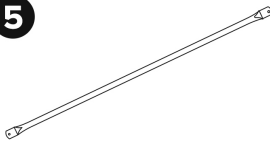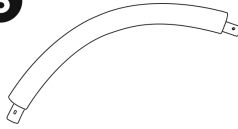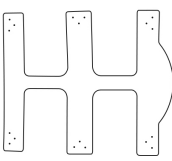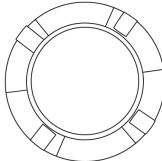
|                                                                                                                         |                                                                                                                                   |                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b>  <p>Top Middle Crossbar x1</p> | <b>2</b>  <p>Top Left Triangular Crossbar x1</p> | <b>3</b>  <p>Top Right Triangular Crossbar x1</p> |
| <b>4</b>  <p>Standard Base Legs x8</p>  | <b>5</b>  <p>Side Support Bars x2</p>            | <b>6</b>  <p>Curved Steel Tubes x4</p>            |
| <b>7</b>  <p>Swing Seat x1</p>        | <b>8</b>  <p>Black Head Ropes x2</p>           | <b>9</b>  <p>Triangular Head Ropes x2</p>       |
| <b>10</b>  <p>Blue Seat Pad x1</p>   | <b>11</b>  <p>In-Ground Mounting Pole x4</p>   | <b>12</b>  <p>Round Seat Cushion Cloth x1</p>   |

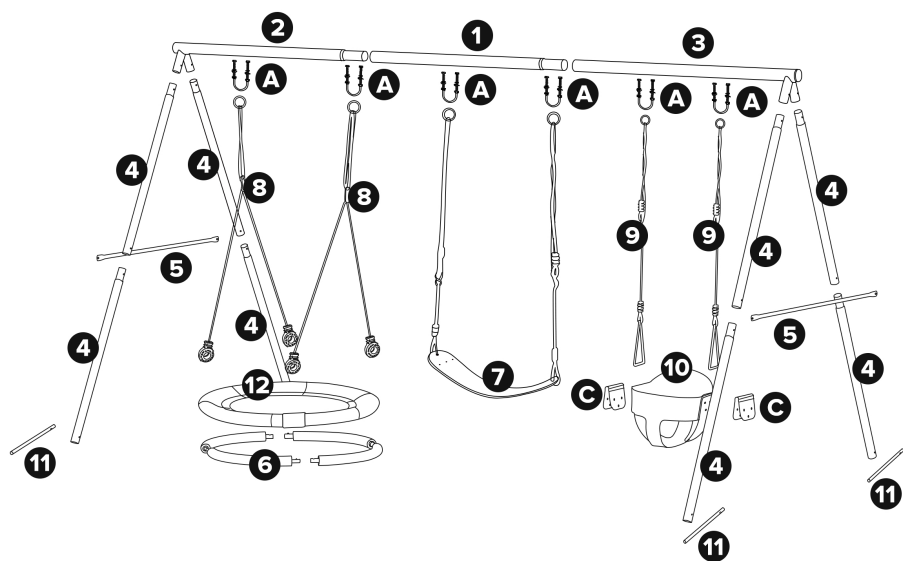


**STEP 1**

**1** x 1PCS


**2** x 1PCS


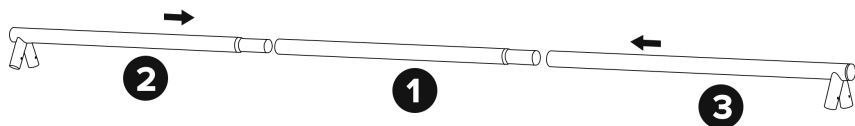
**3** x 1PCS




**STEP 2**

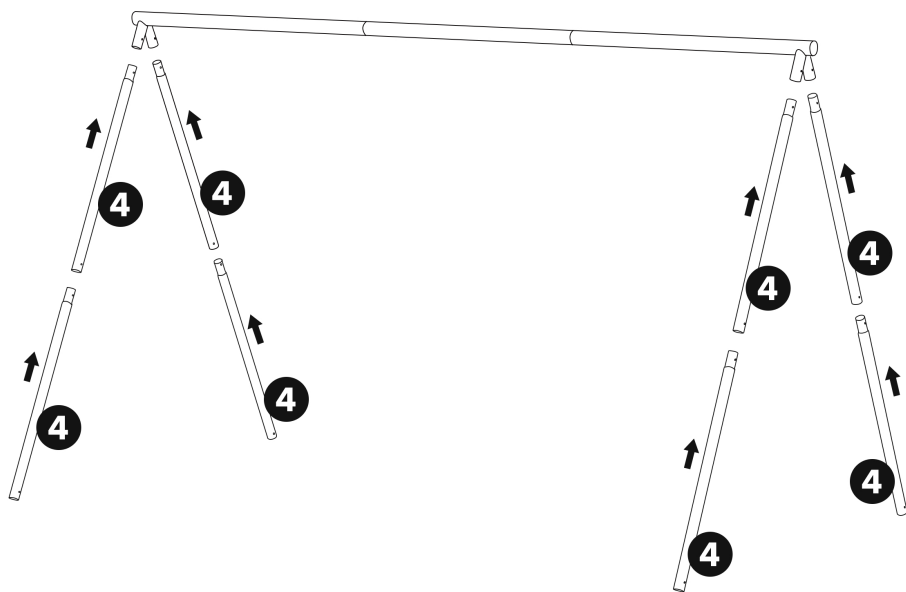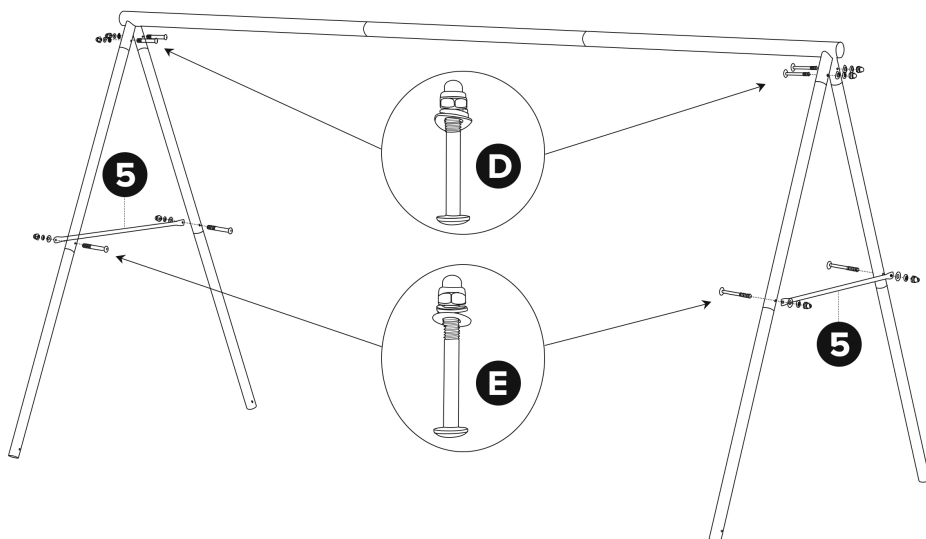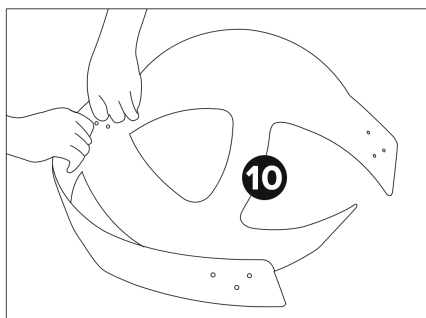**4** x 8PCS




**STEP 3****D** x 4PCS**E** x 4PCS**5** x 2PCS**STEP 4****9** x 2PCS**10** x 1PCS**C** x 2PCS**F** x 6PCS**STEP 1**

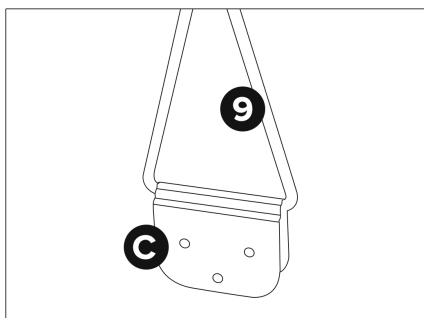Bend Part 10 and align the holes on both ends.

**STEP 2**


Slide Part C over the triangular end of Part 9.

### STEP 3

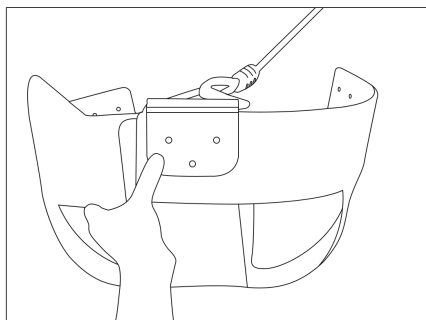

Align the three holes of Part C with those of Part 10.

### STEP 4

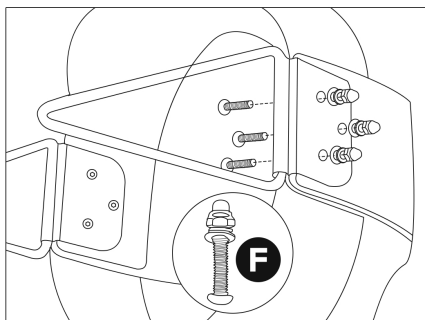


Install the screws from Part F at the joint of Part C and Part 10 as shown in the diagram.

### STEP 5

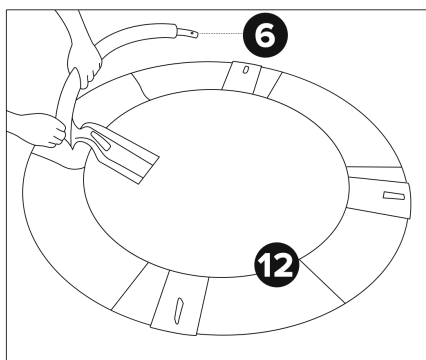
**6** x 4PCS **8** x 2PCS **12** x 1PCS

### STEP 1




Insert Part 6 through the opening of Part 12. (Note Part 6: one side has a hole, and the other has a protrusion.)

### STEP 2

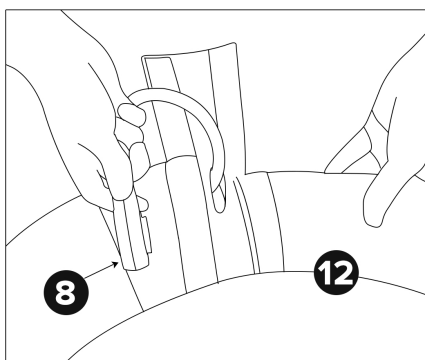


Pass the head of Part 8 through the strap of Part 12.

**STEP 3**

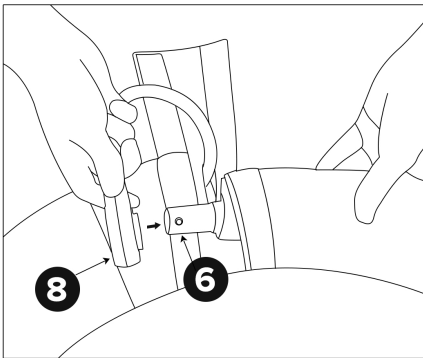


Assemble part 8 onto part 6.

**STEP 4**


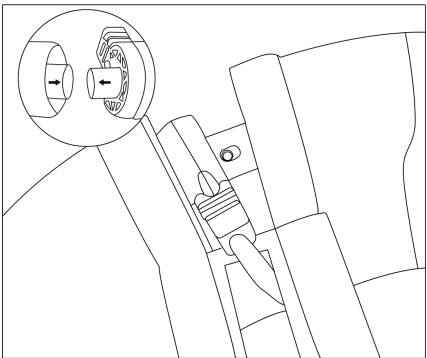


Snap the two Part 6 connectors together.

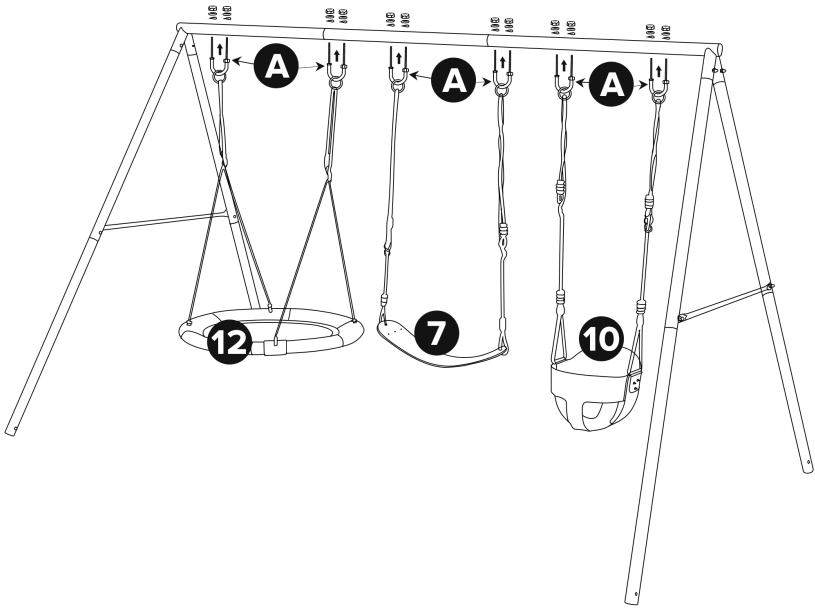**STEP 6** **A** x 6PCS



**STEP 7** **G** x 4PCS **11** x 4PCS

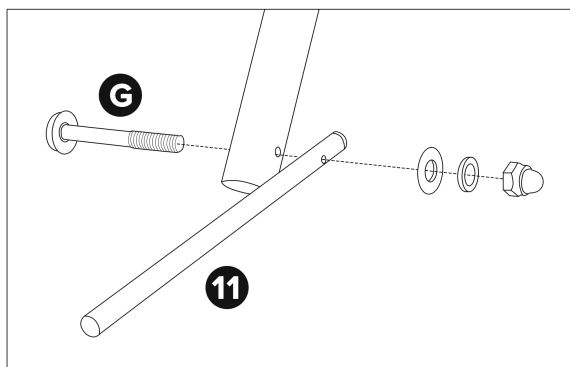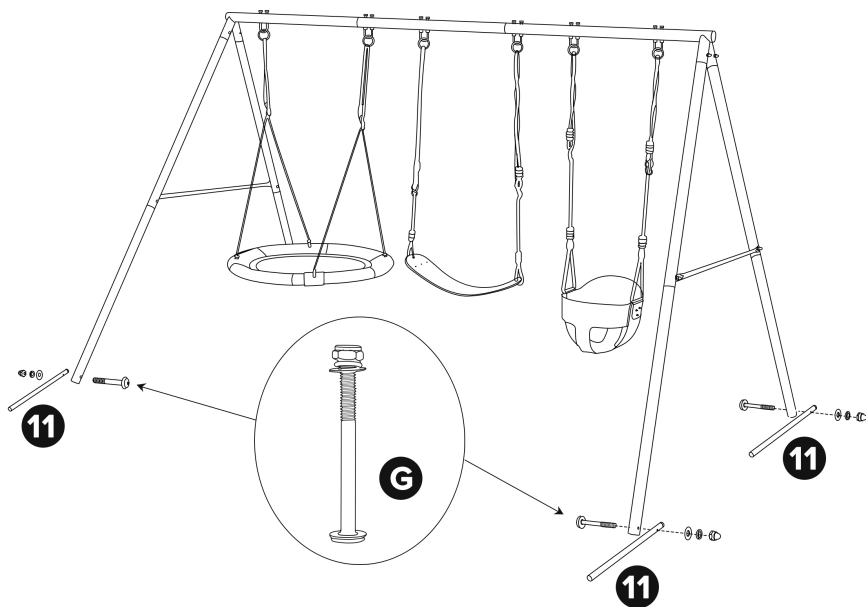



**INSTALLED**

