


ASSEMBLY INSTRUCTION

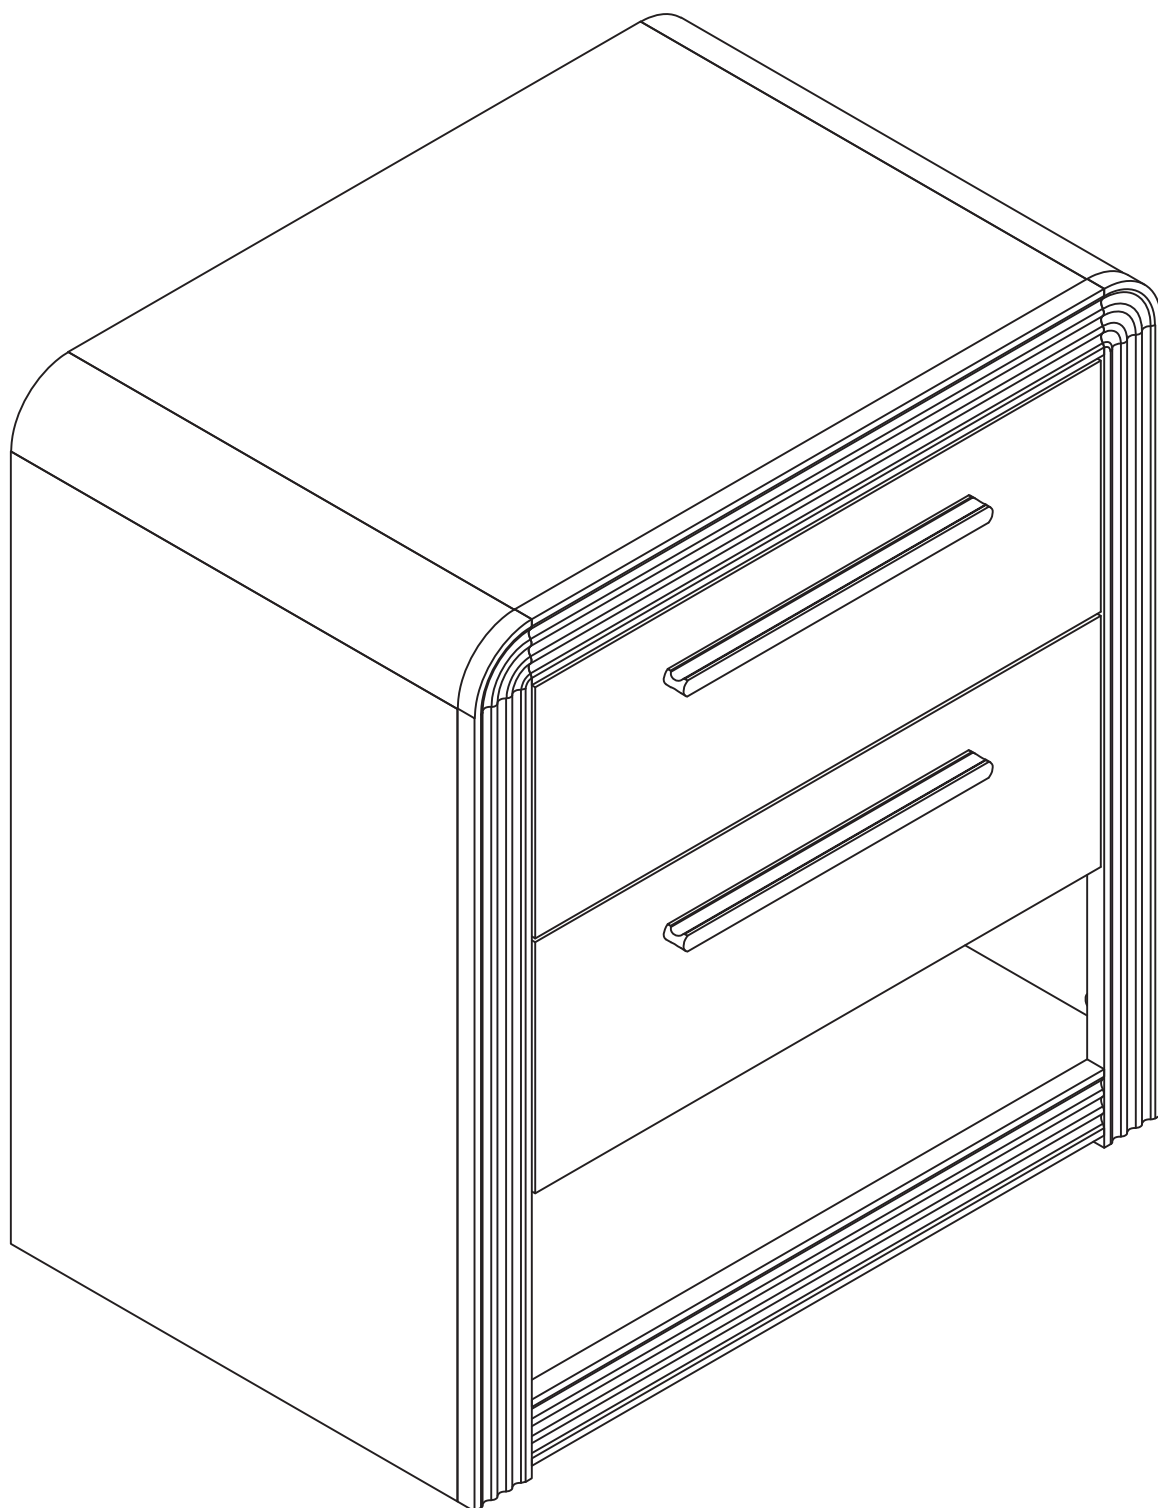

INTRODUCTION

Thank you for choosing our product. To ensure a smooth and successful installation, please read this manual carefully before you begin. Keep it in a safe place for future reference.

Should you have any questions or require assistance during setup, our customer support team is here to help. Please reach out to us. For faster and more accurate support, we encourage you to include a short video and a brief description of the issue you're encountering—this will allow us to assist you more effectively.

PRECAUTIONS

1. Contents of the Package

The package includes multiple components and accessories, each clearly labeled with a letter or number. Please verify all parts are present before use and keep them out of reach of children to prevent accidents.

2. Installation Surface

To avoid scratching or damaging the product, please assemble it on a clean, soft surface, such as a carpet or piece of cardboard.

3. Stability During Assembly

The product may be unstable prior to full assembly. Please do not move the product until installation is complete.

4. Tool Usage


We recommend using the tools provided in the package. If you choose to use a power tool, please set it to a low power and torque setting to avoid damage.

IMPORTANT:

Please follow the installation steps in the order shown in this manual. Improper installation may result in difficulties during assembly or damage to the product and its components.

Need more help?

Our online customer service team is always ready to assist. Feel free to contact us — we're here to help.

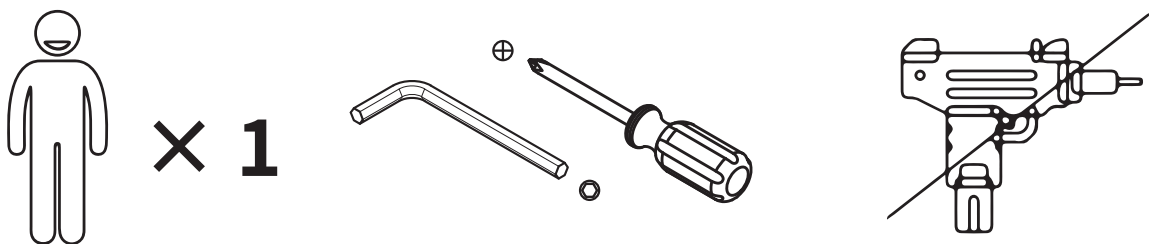

Before You Begin

One person is recommended for the assembly.

Use the included tools.

If using a power tool, use low power and torque.




Installation of Eccentric Unit




Bolt





Connecting piece

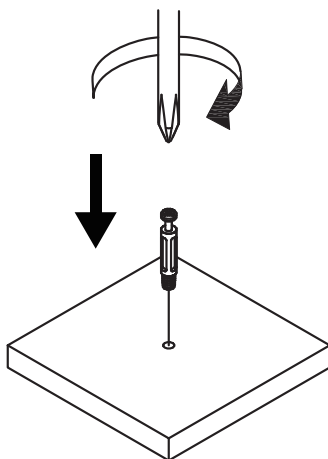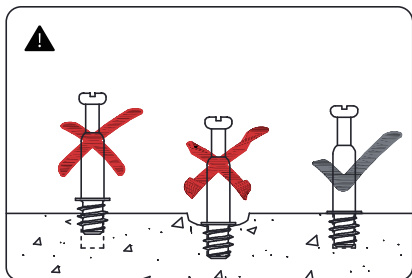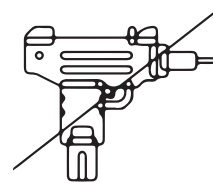


1

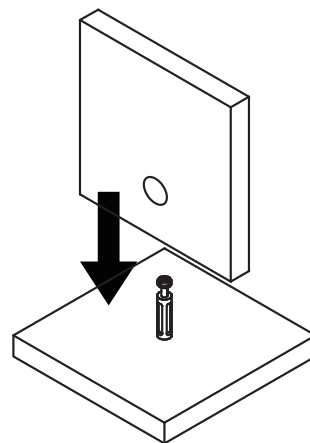

2

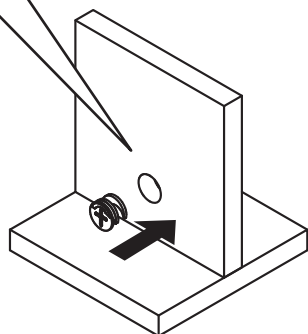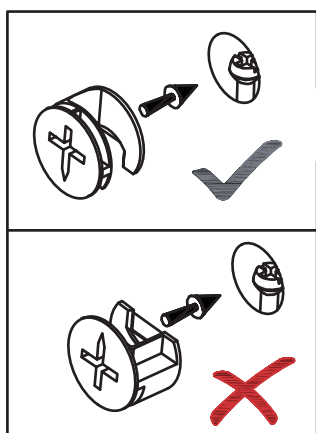


3

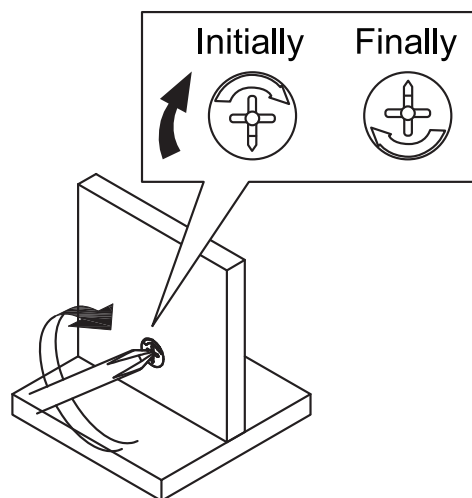


4



NOTE: When inserting the cam lock, ensure the open slot of the cam lock faces the cam screw entry.

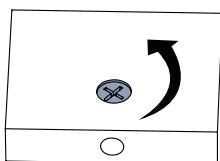


✗


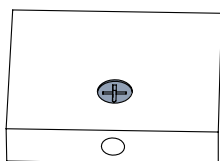


✓

• To tighten, turn the cam lock clockwise until the arrow points away from the connected panel.

• To loosen, turn the cam lock counterclockwise.

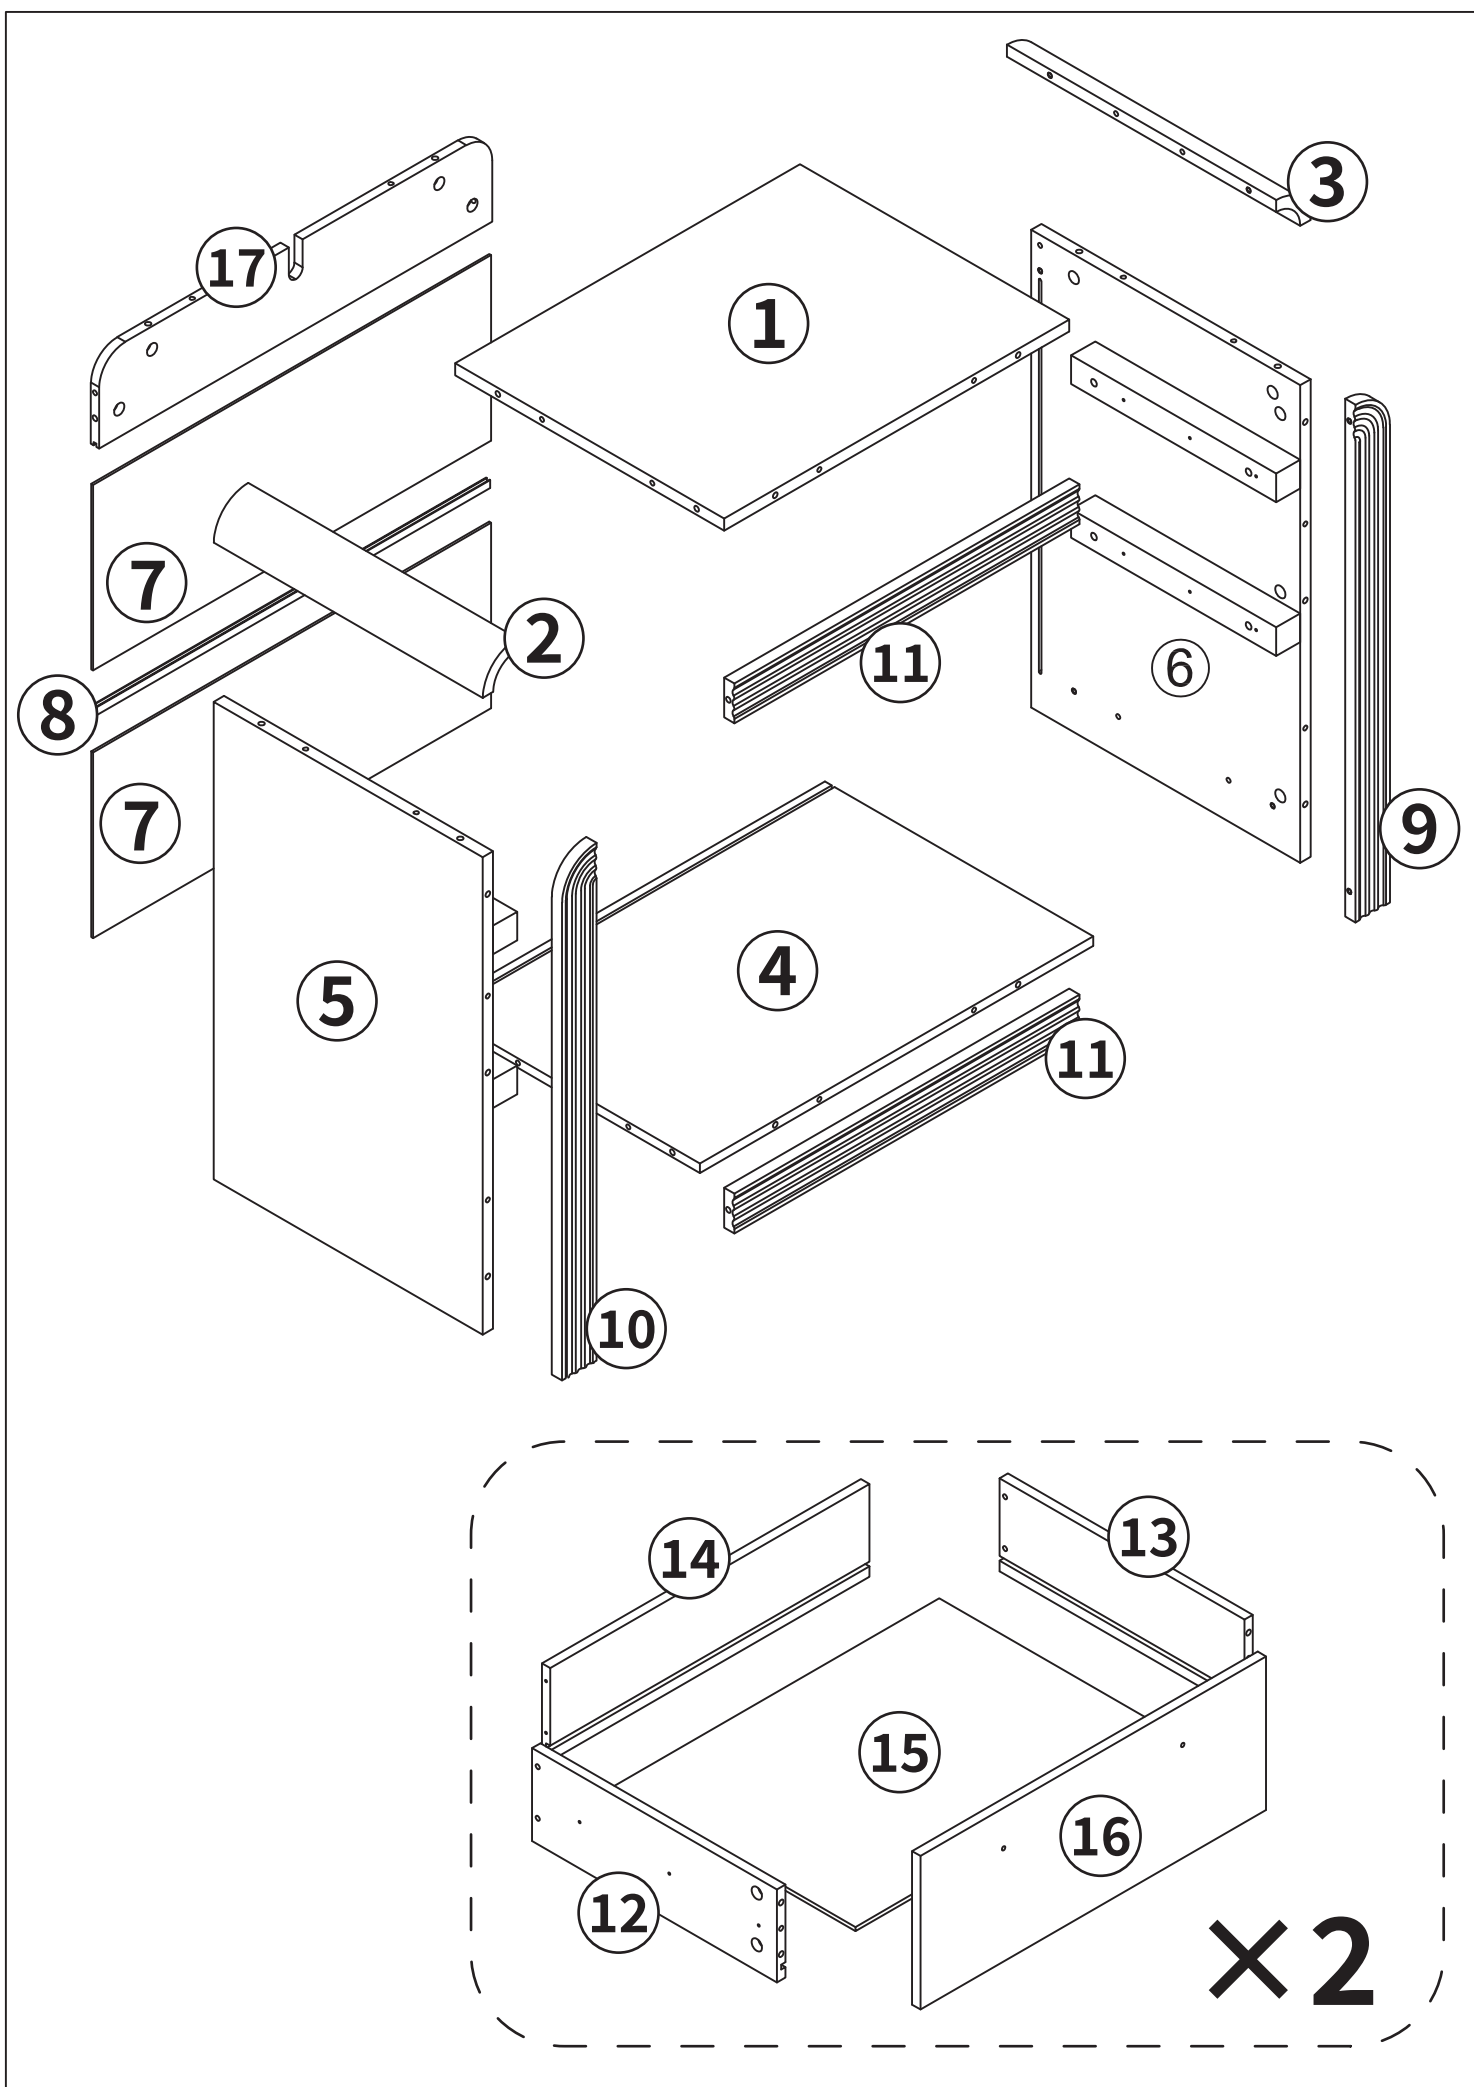

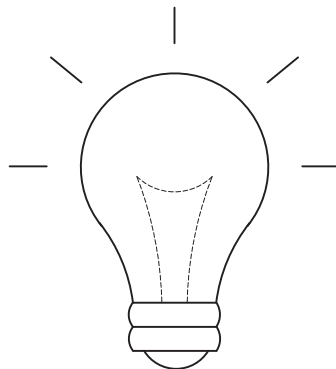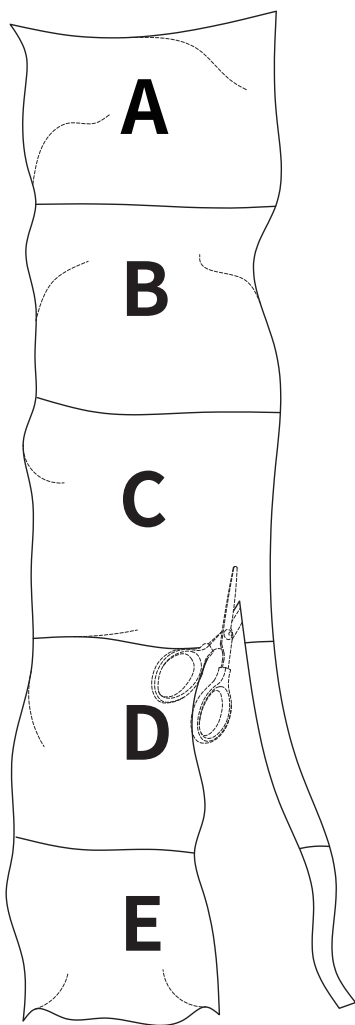

friendly reminder

To avoid confusion during assembly, please do not open all hardware bags at once.

Some screws may look similar, so please follow these steps:











Check each bag against the parts list to confirm the type and quantity match before use.

Open each bag only when prompted by the corresponding installation step.


This will keep your hardware organized and make assembly smoother.

Package Contents: Hardware

Please count and verify all parts before assembly.

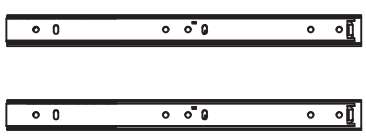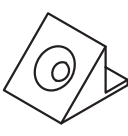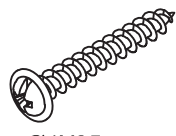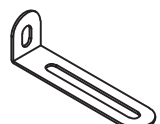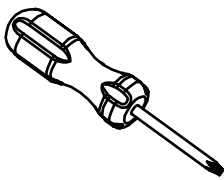A×38+2	B×38+2	C×28+2	D×8+2	E×4+2	F×24+2	G×2
 Ø15X9.5mm	 Ø6X28mm	 Ø6X30mm	 Ø4X30mm	 M4X18mm	 M3.5x12mm	 275X11X17mm
H×2	I×8+2	J×8+2	K×38+2	L×1+2	M×1+2	
		 Ø3X16mm	 Ø20mm	 Ø4X15mm	 Ø4X35mm	
N×1	O×1+2					
						

1

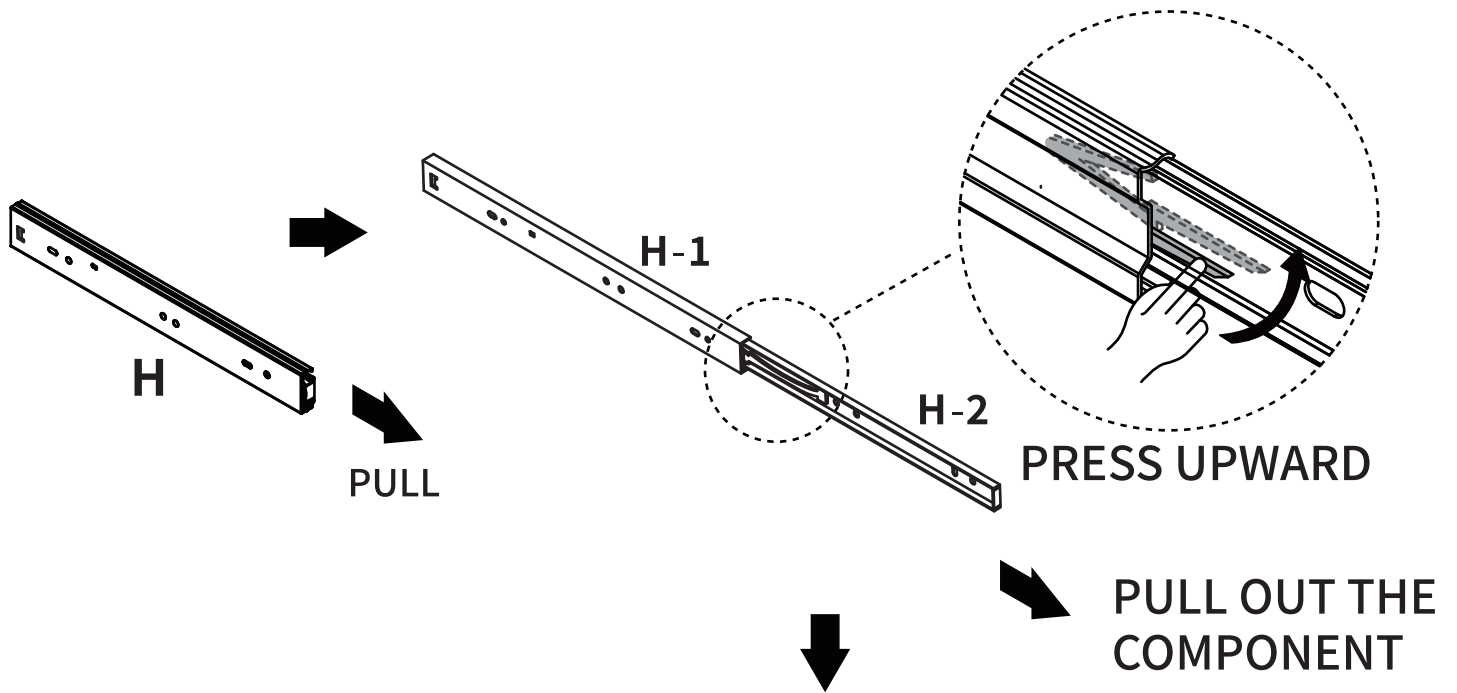



H-1 X4	
H-2 X4	

H x 2




Separate (H) into (H-1) and (H-2).

2

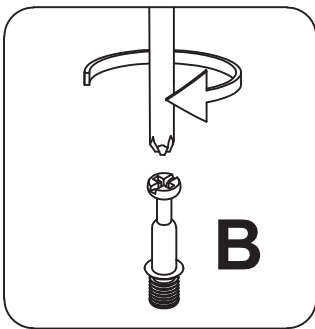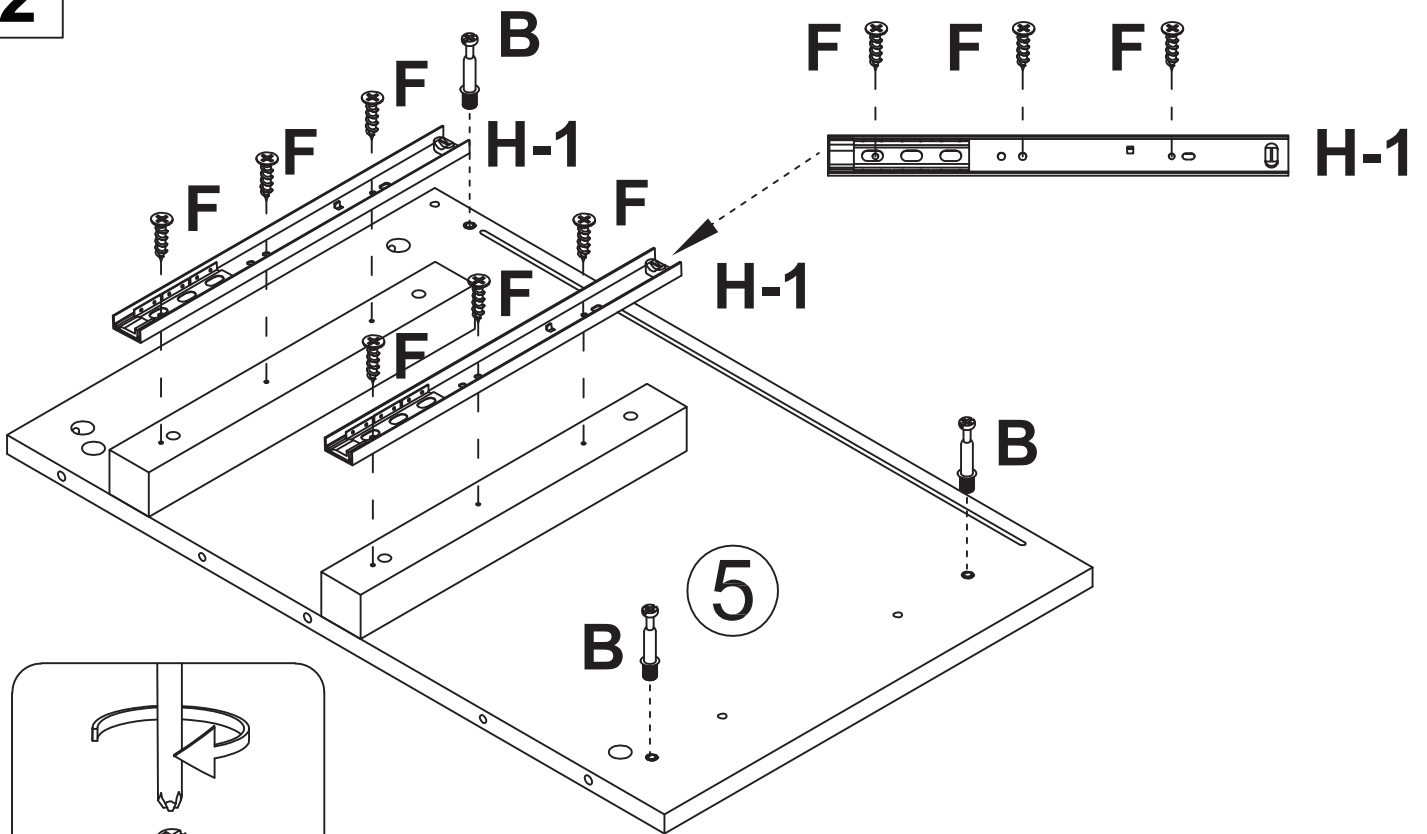


Make sure to screw the bolt in vertically.

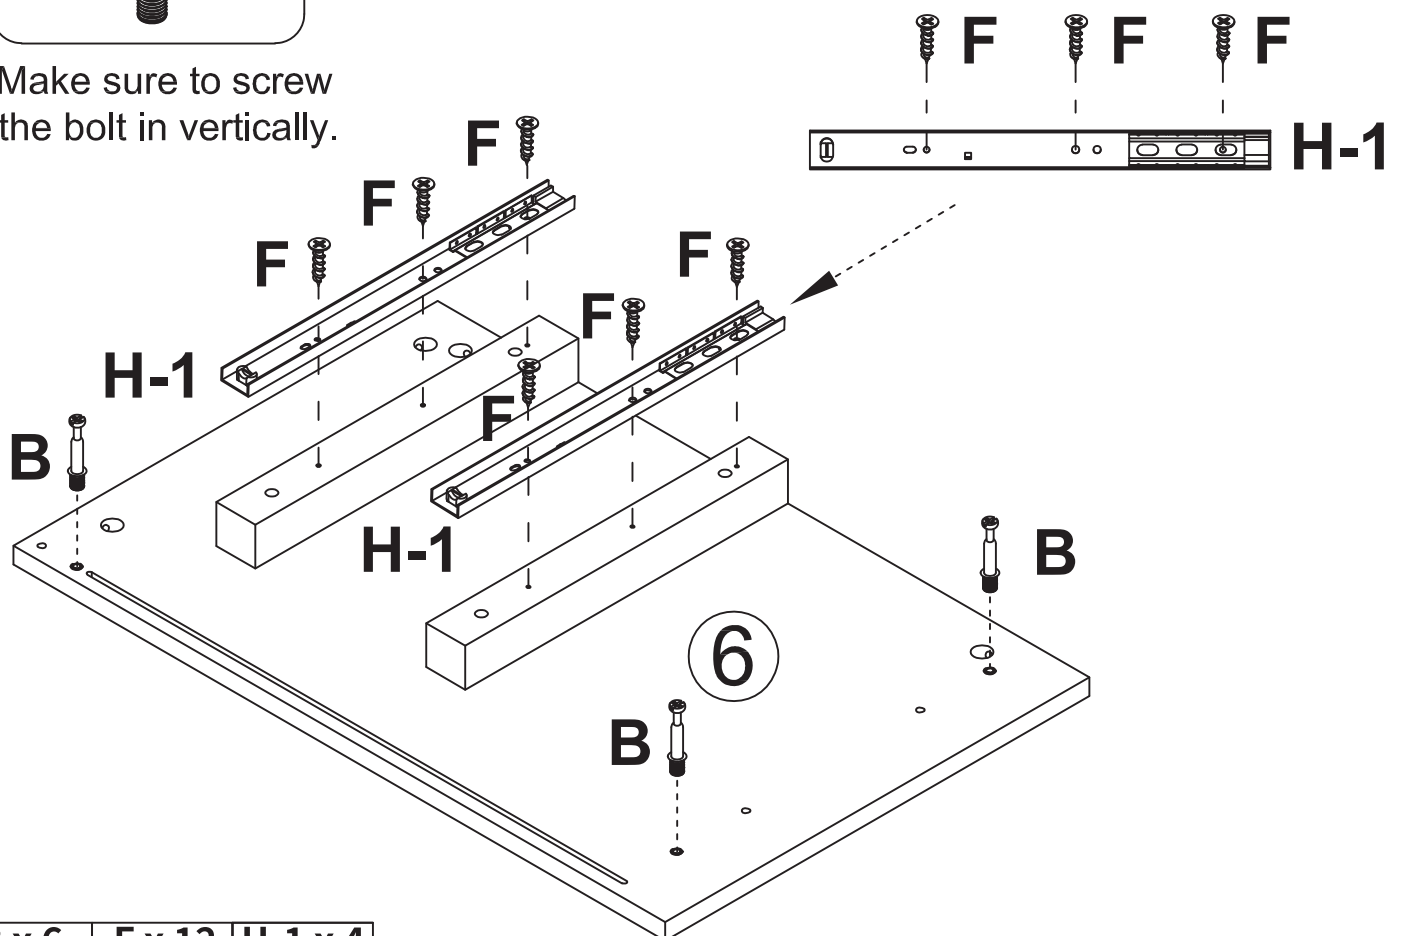

B x 6	F x 12	H-1 x 4
	 M3.5x12mm	

Twist (B) into the holes on (5) (6).
Twist (F) through (H-1) into (5) (6).

3

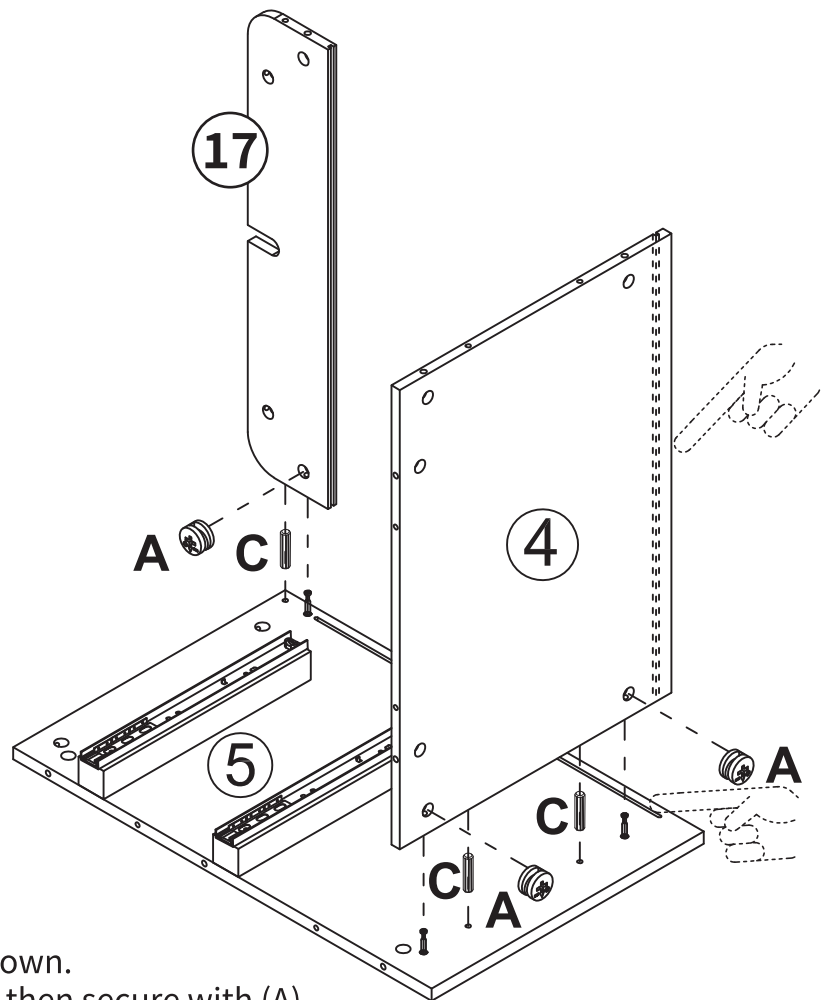

A x 3 C x 3




Insert (C) into (5) as shown.

Connect (4) (17) to (5), then secure with (A).

Note: Please ensure the grooves of (4) (5) are properly aligned.

4


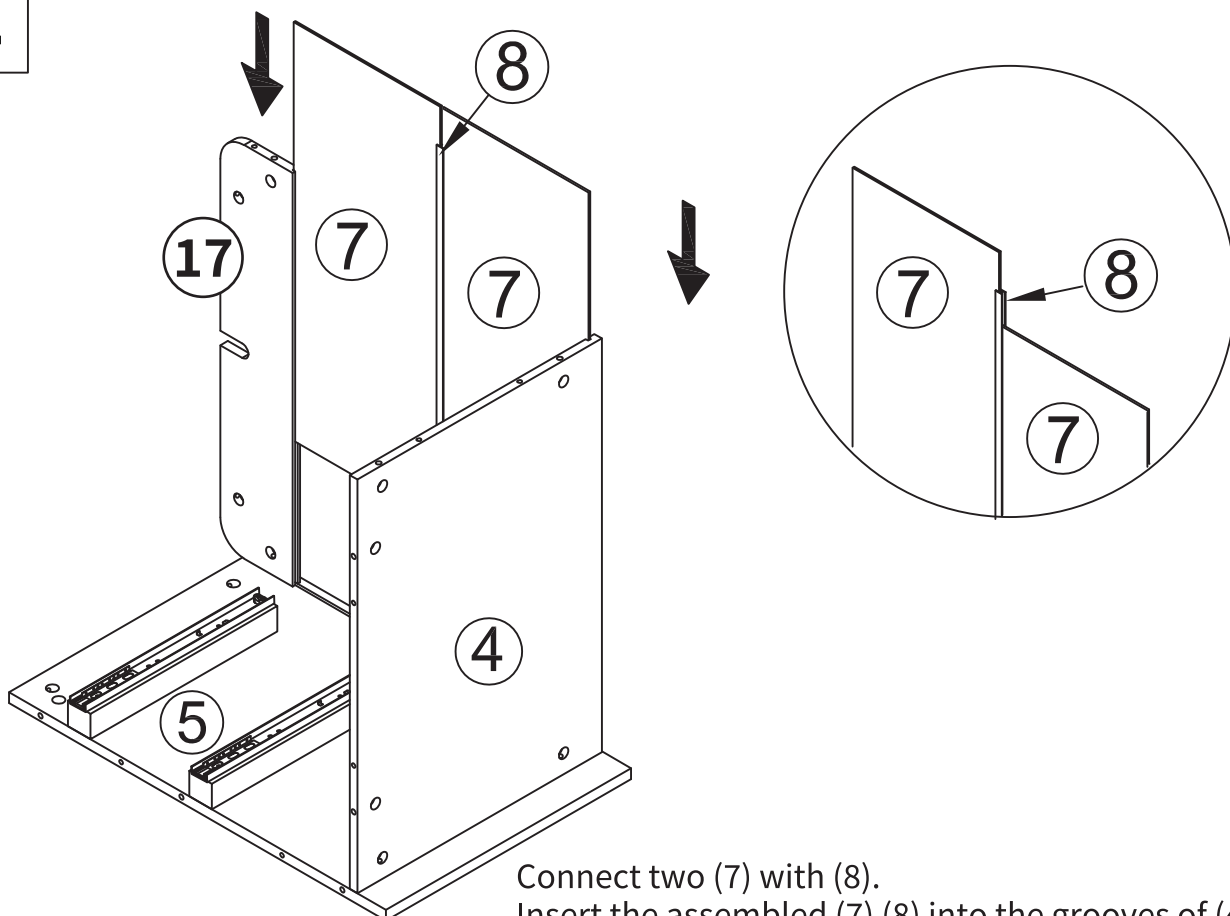


Connect two (7) with (8).

Insert the assembled (7) (8) into the grooves of (4) (5) (17).

Ensure they are fully seated in the grooves.

5

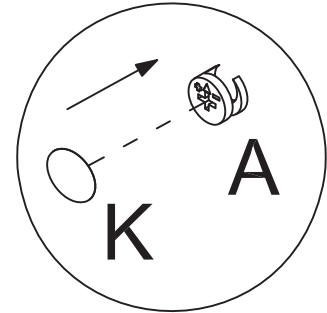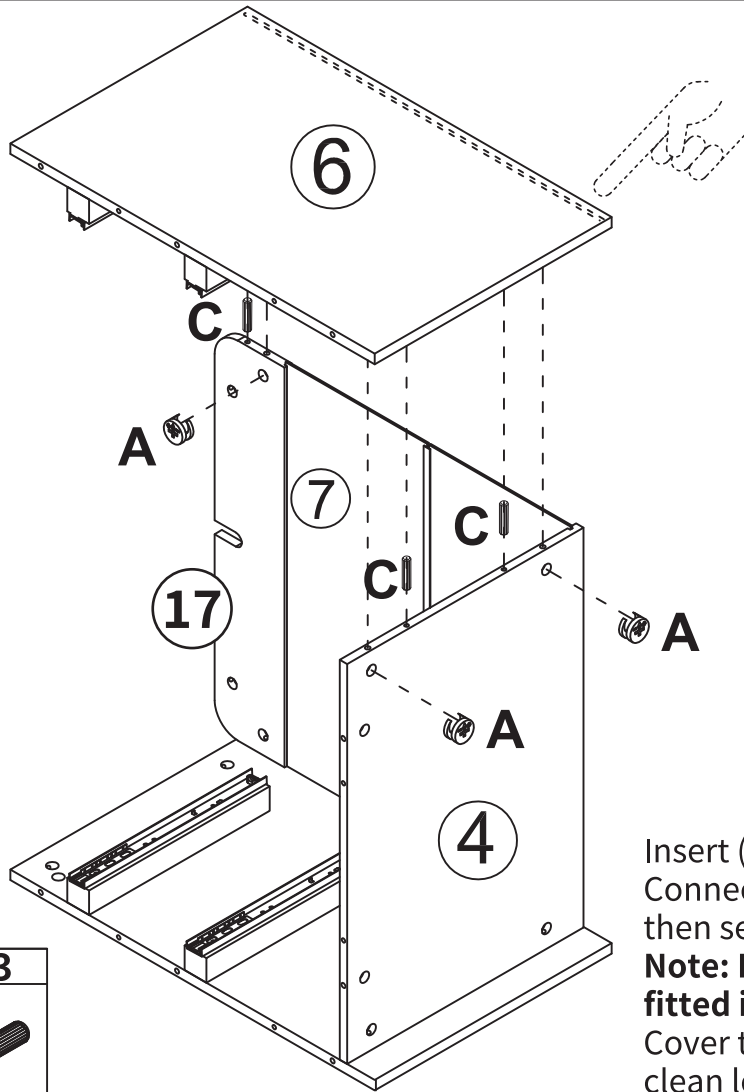

Cover the exposed holes with (K) for a clean look.

K x 6



A x 3




C x 3



Insert (C) into (4) (17).
Connect (6) to the unfinished frame,
then secure with (A).
**Note: Please ensure that two (7) are
fitted into the groove of (6).**
Cover the exposed holes with (K) for a
clean look.

6

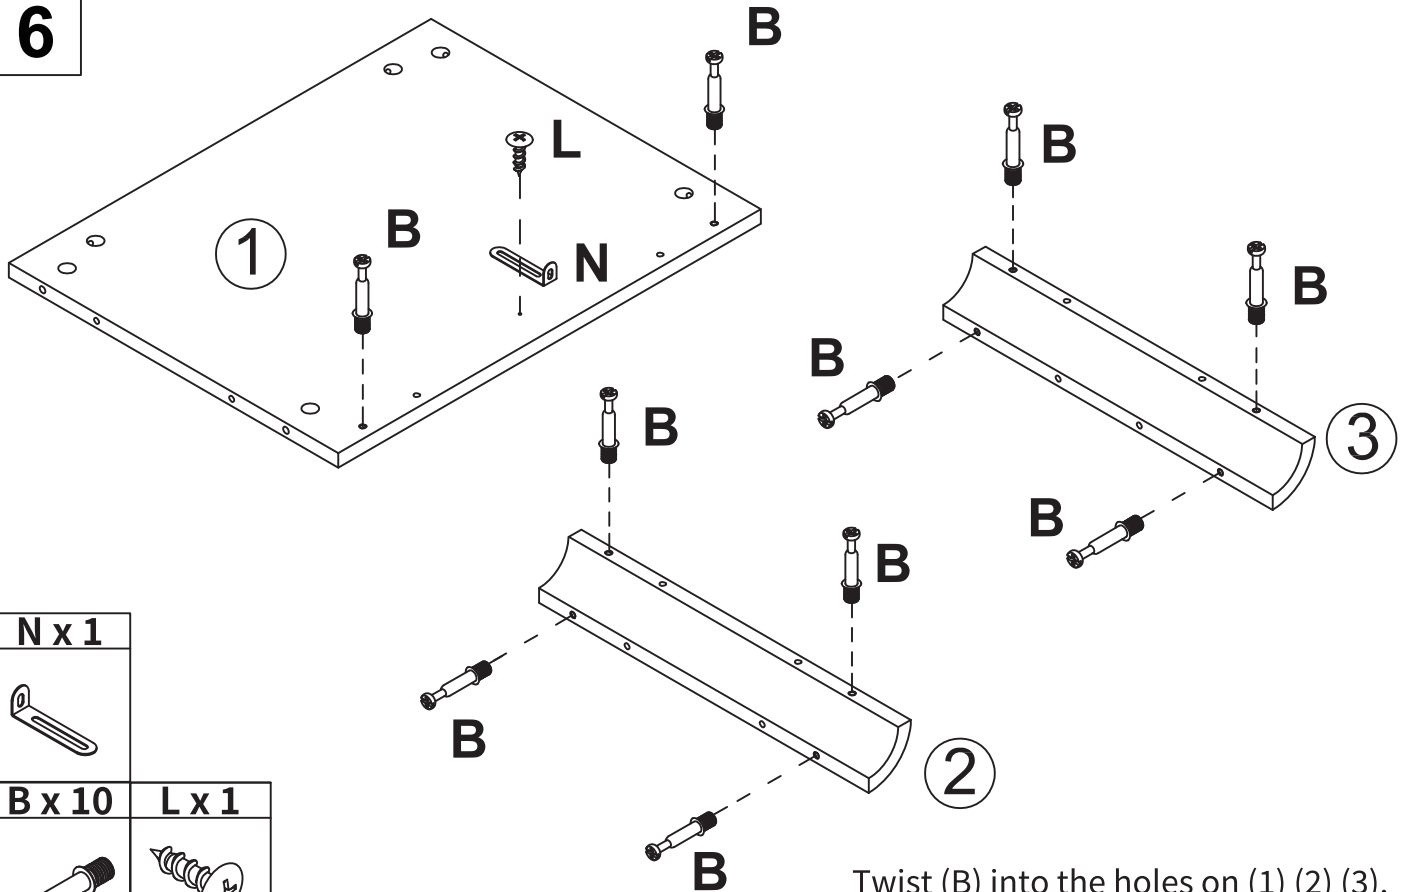

N x 1



B x 10




L x 1



Ø4X15mm


Twist (B) into the holes on (1) (2) (3).
Twist (L) through (N) into (1).

7

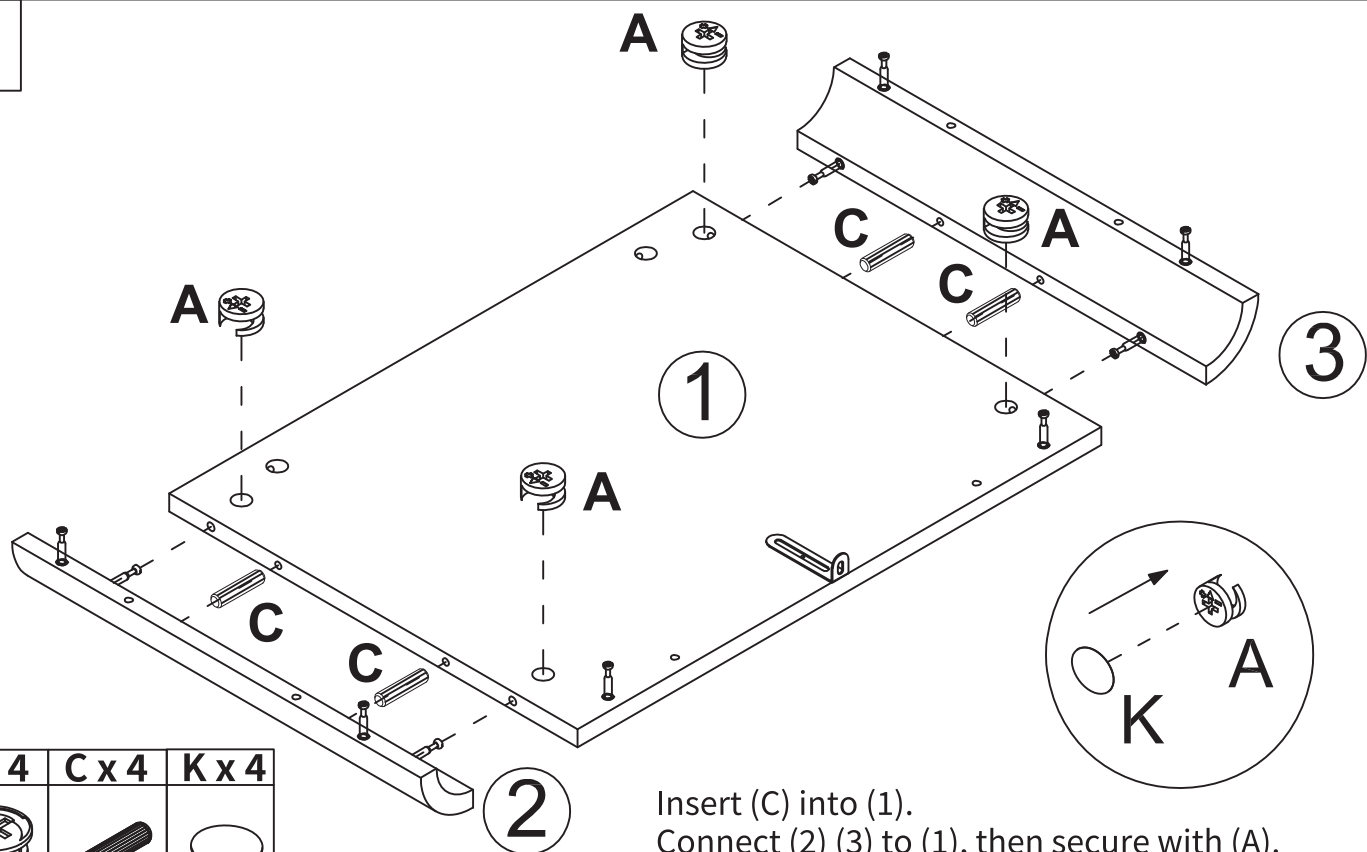


Insert (C) into (1).
Connect (2) (3) to (1), then secure with (A).
Cover the exposed holes with (K).

8

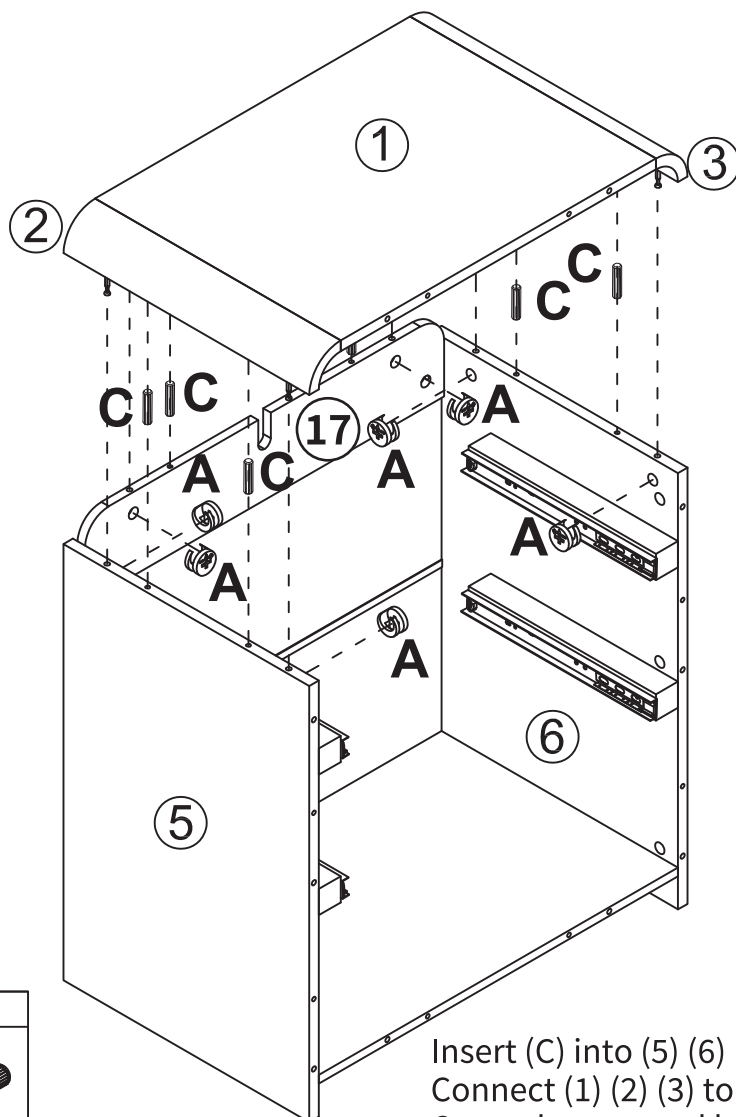

Insert (C) into (5) (6) (17).
Connect (1) (2) (3) to (5) (6) (17), then secure with (A).
Cover the exposed holes with (K).

9

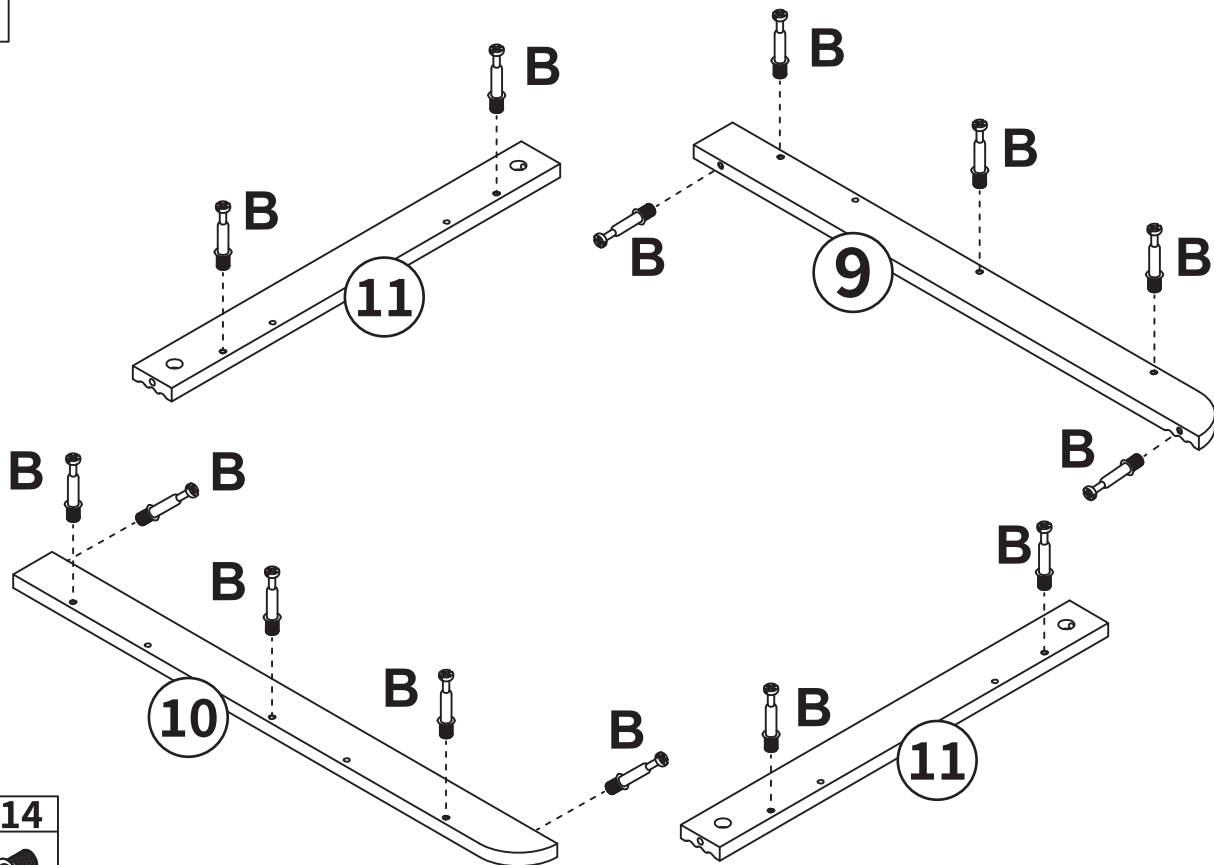


B x 14



Twist (B) into the holes on (9) (10) and two (11) as shown.

10

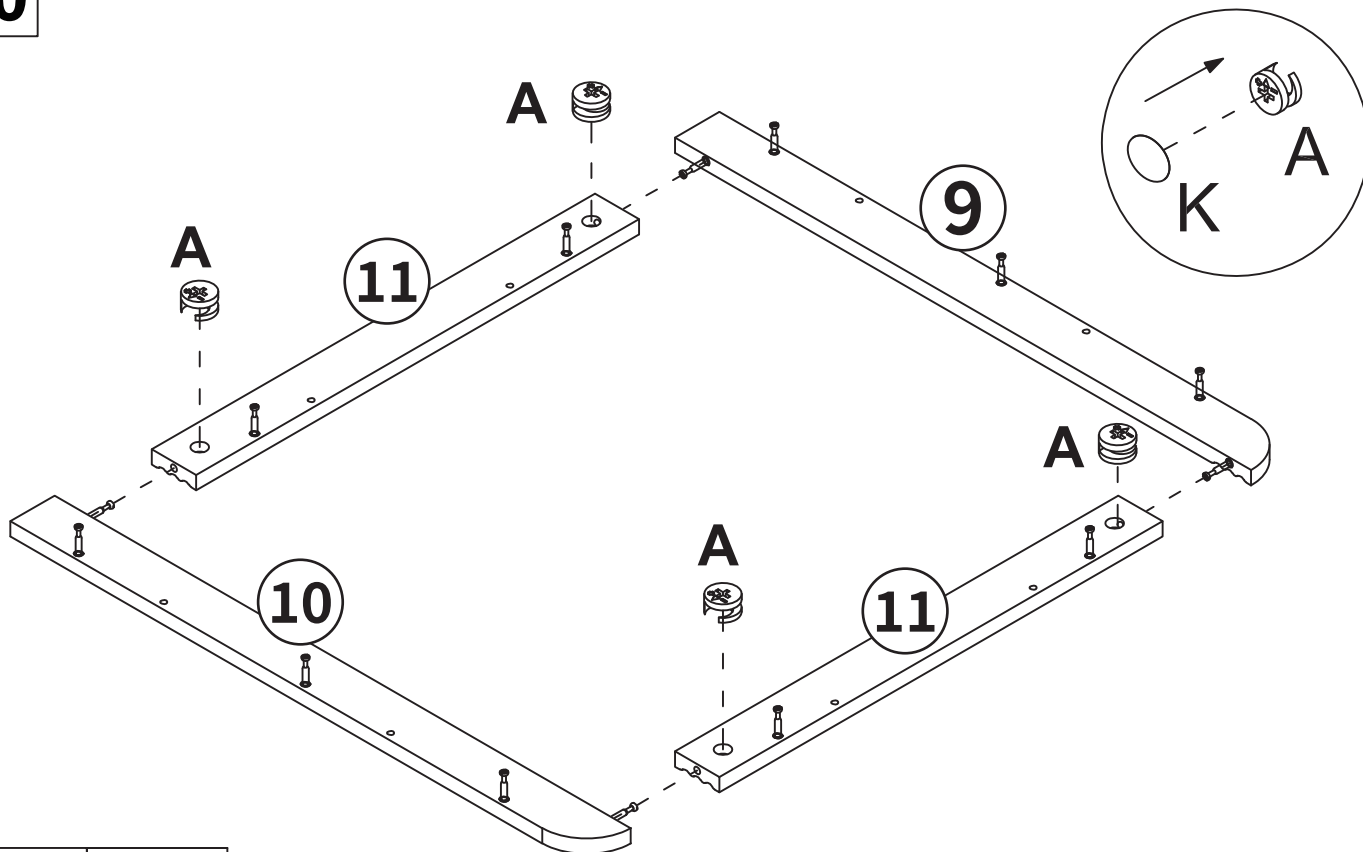


A x 4

K x 4



Connect two (11) to (9) (10), then secure with (A)
Cover the exposed holes with (K).

11

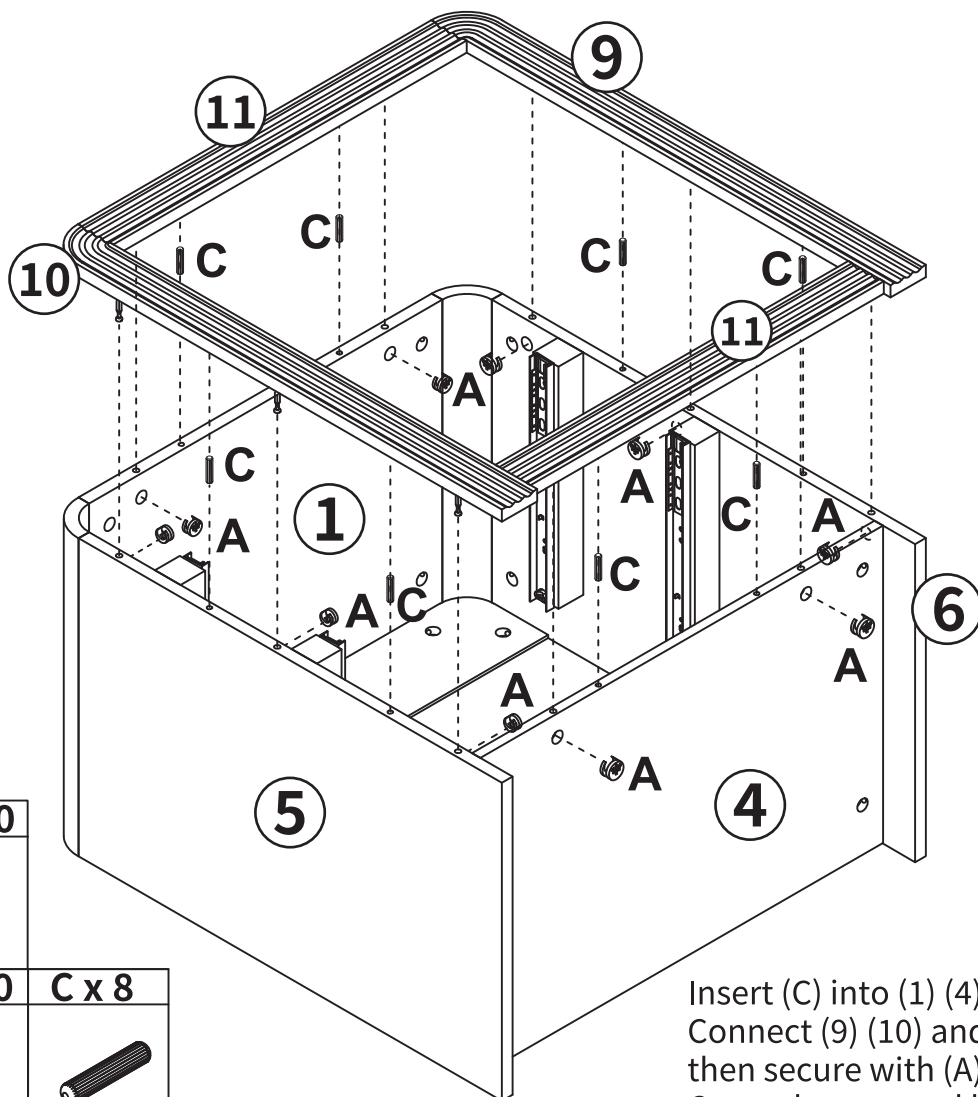

K x 10



A x 10




C x 8





Insert (C) into (1) (4) (5) (6).
Connect (9) (10) and two (11) to (1) (4) (5) (6),
then secure with (A).
Cover the exposed holes with (K).

12

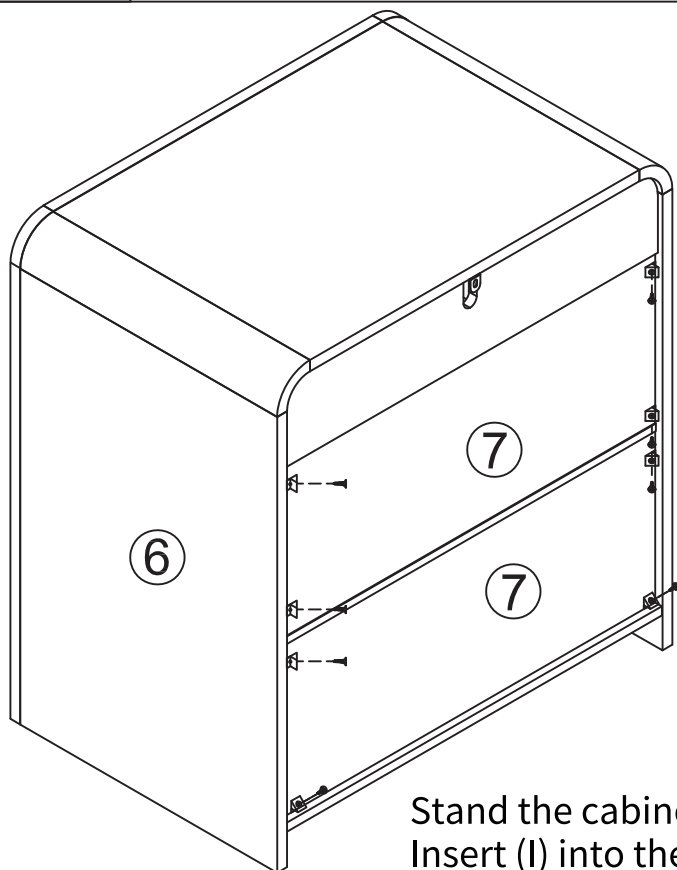

Turn

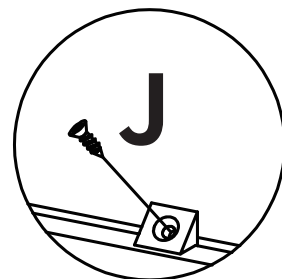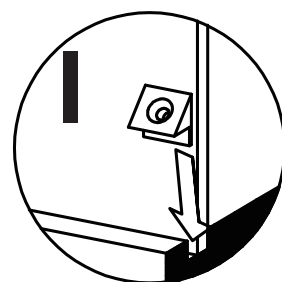

J x 8



Ø3X16mm

I x 8




Stand the cabinet upright.
Insert (I) into the gaps between the boards as shown.
Twist (J) into (I) to secure.

13

D x 8




Ø4X30mm

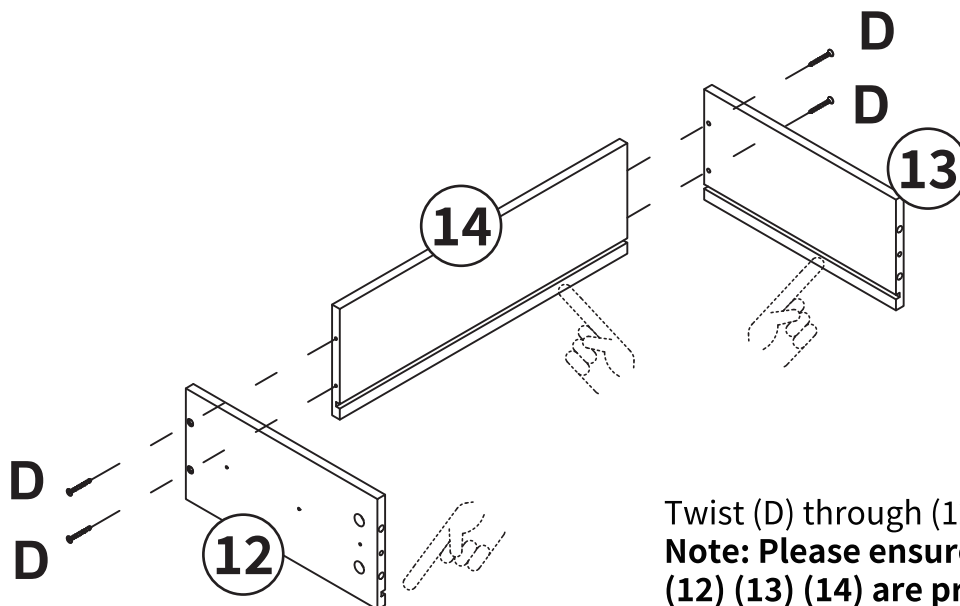

x2

Twist (D) through (12) (13) into (14)
Note: Please ensure the grooves of (12) (13) (14) are properly aligned.

14

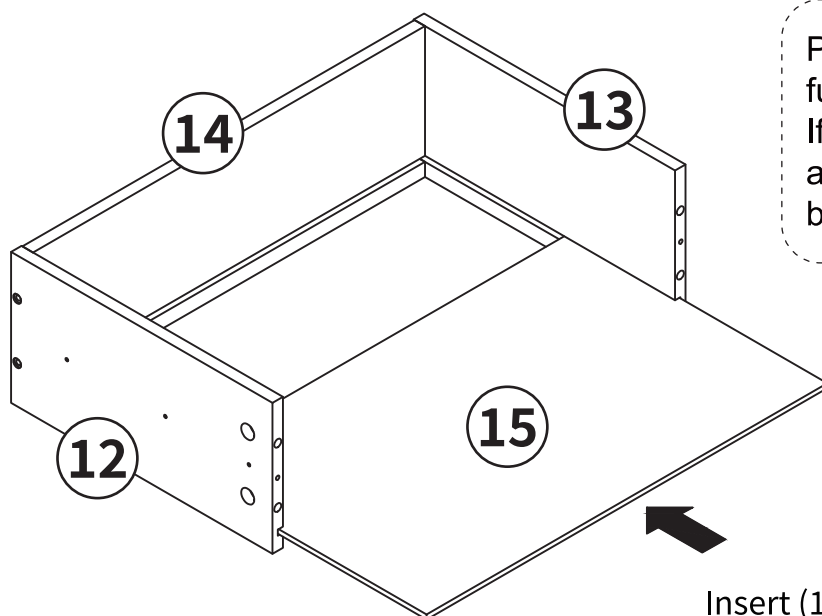


Please ensure the insert board is fully fitted into the grooves.
 If insertion is not smooth, gently adjust by pushing from the front or back until the board is fully seated.

x2

Insert (15) into the grooves of (12) (13) (14).

15

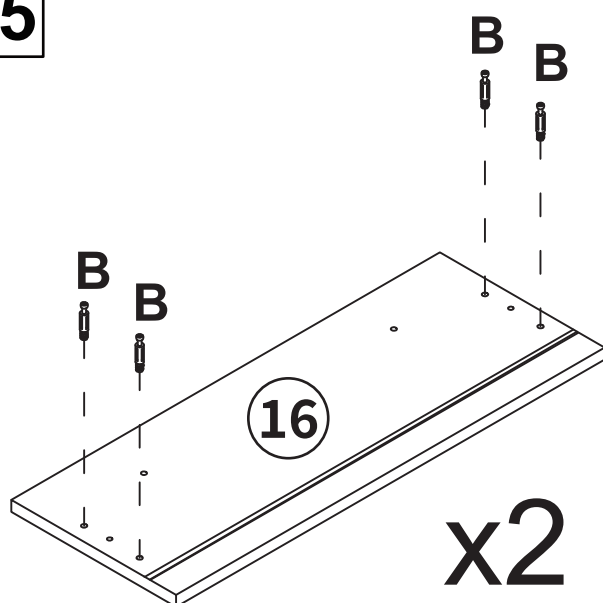


x2

B x 8



Twist (B) into the holes on (16).

16

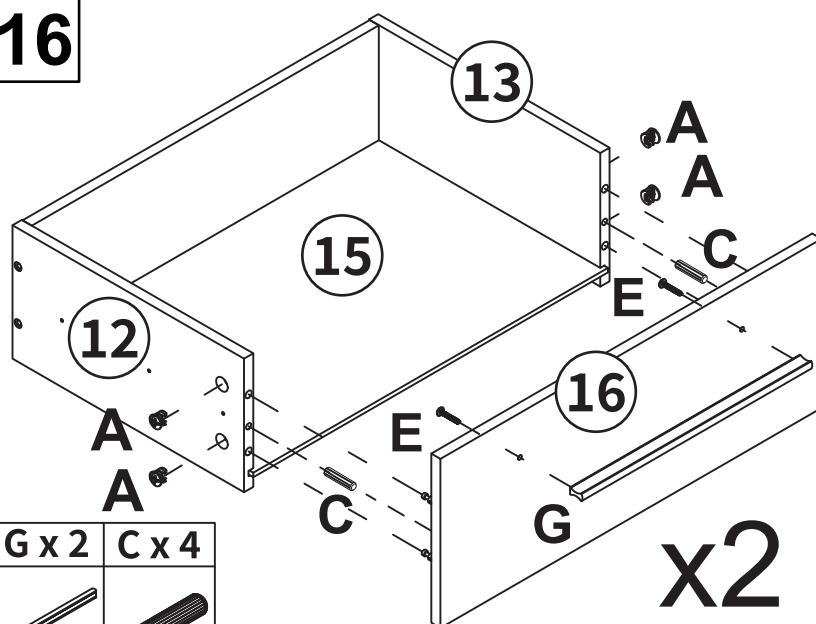

x2

G x 2 C x 4




A x 8 E x 4





M4X18mm


Insert (C) into (16) as shown.
 Connect (16) to (12) (13), then secure with (A).
 Twist (E) through (16) into (G).
Note: Please ensure that (15) is fitted into the groove of (16).

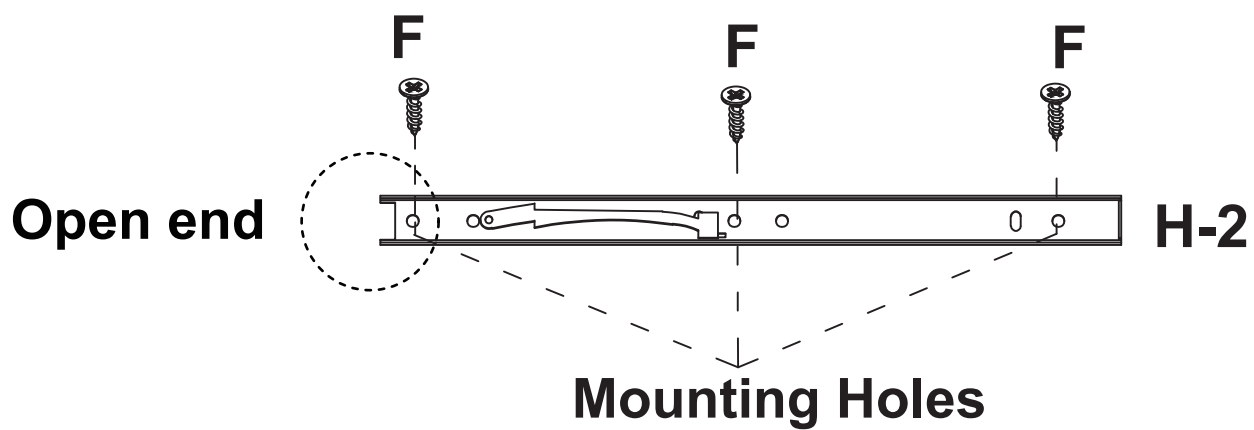

180°

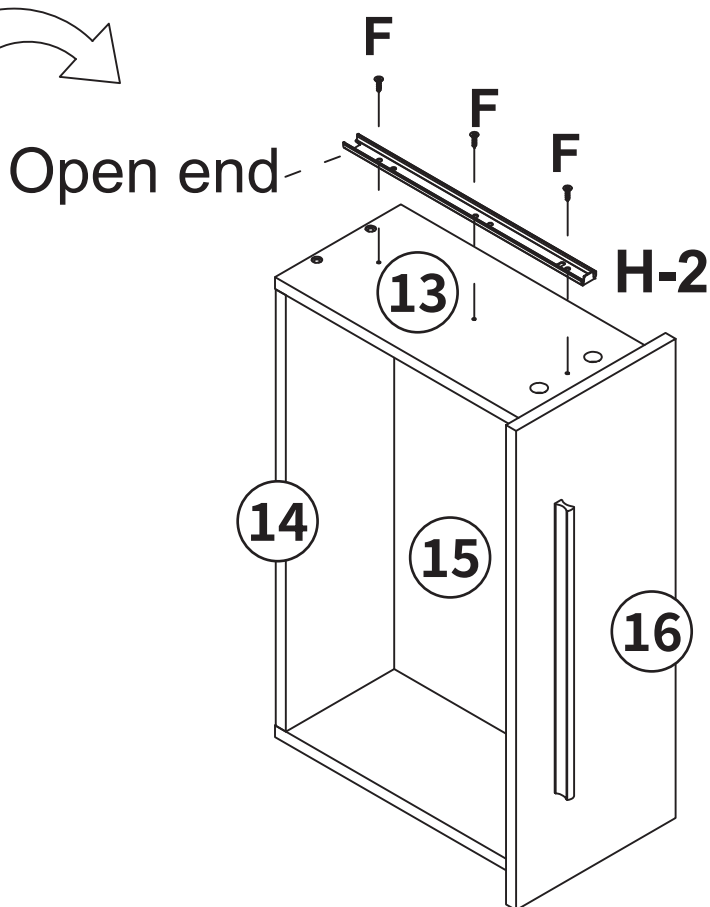
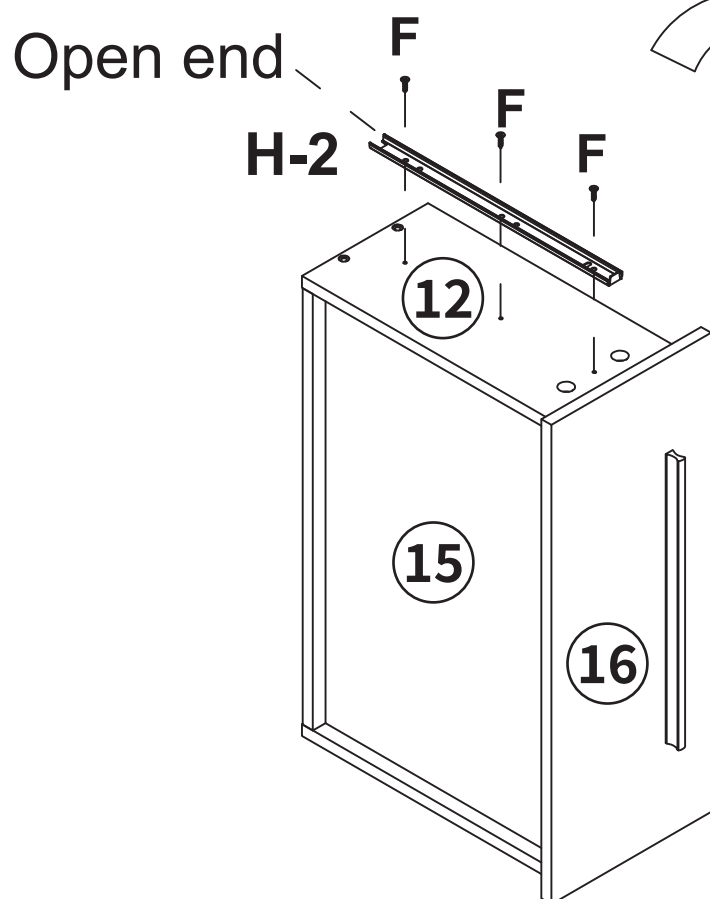



x2

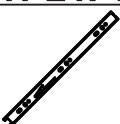F x 12	H-2 x 4
	
M3.5 x 12mm	

Twist (F) through (H-2) into (12) (13).



18

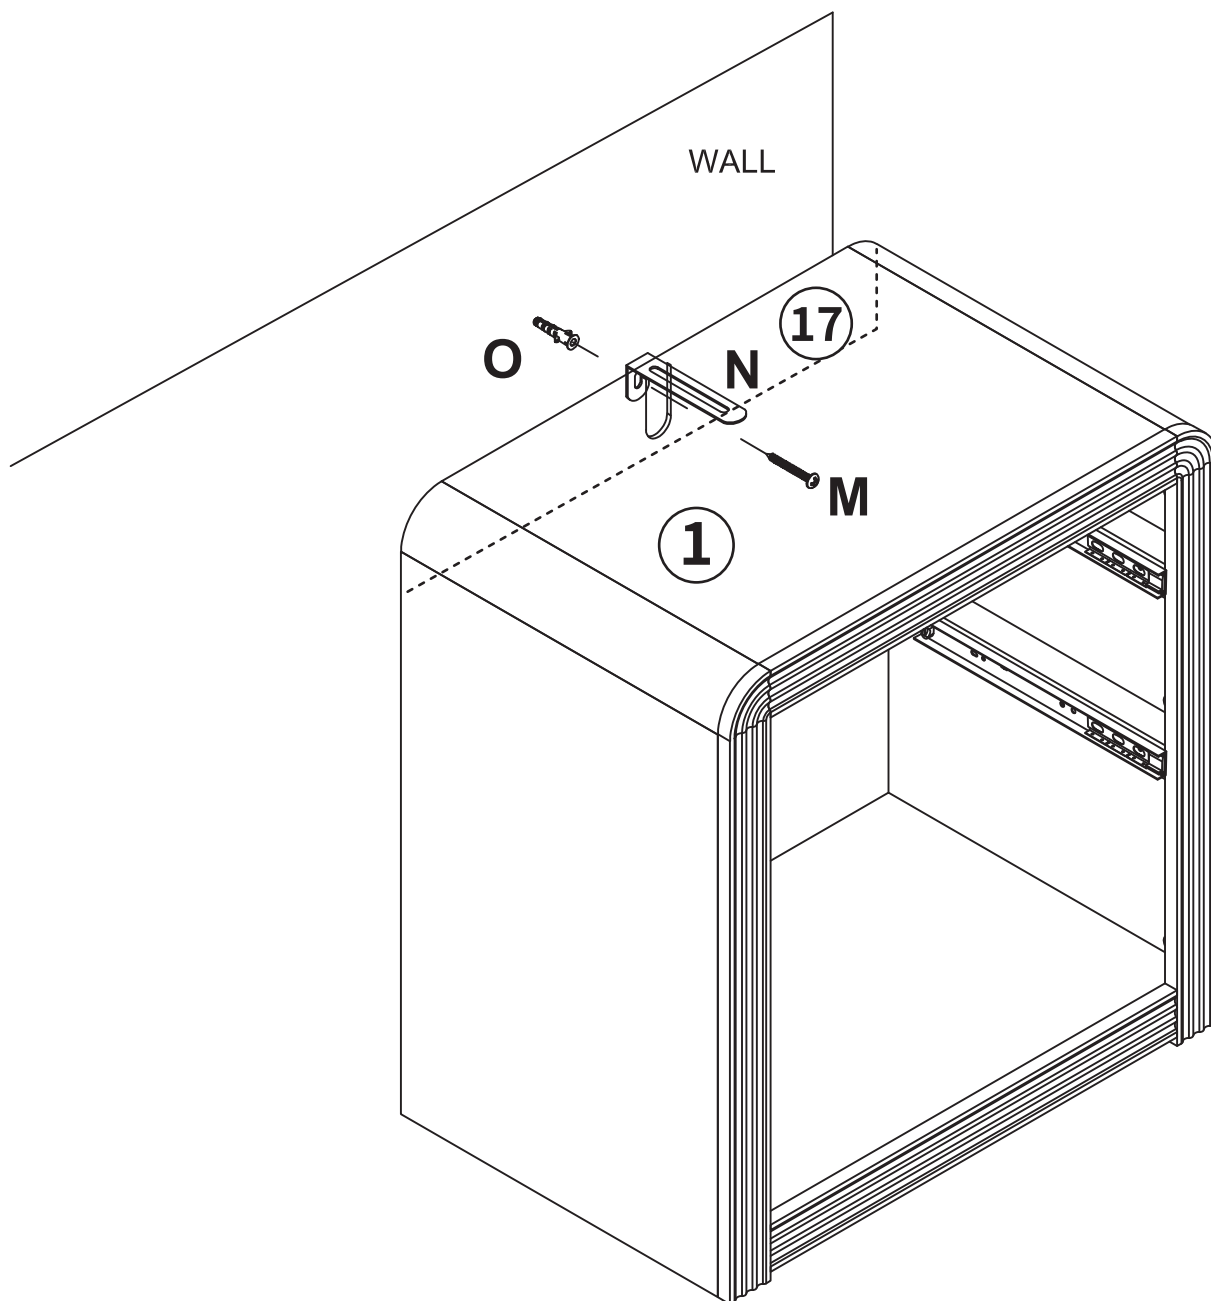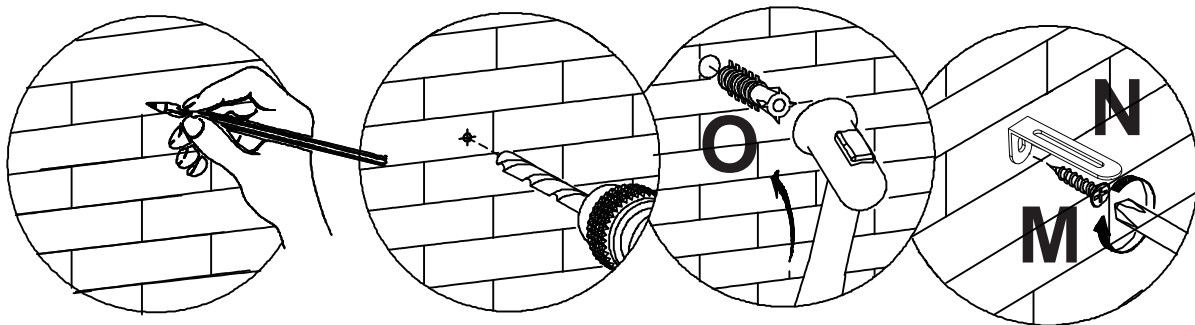

M x 1	O x 1
	
Ø4X35mm	

Mark and pre-drill the hole location for securing the cabinet.
Insert (O) into the drilled hole.
Twist (M) through (N) into (O) to secure.

19

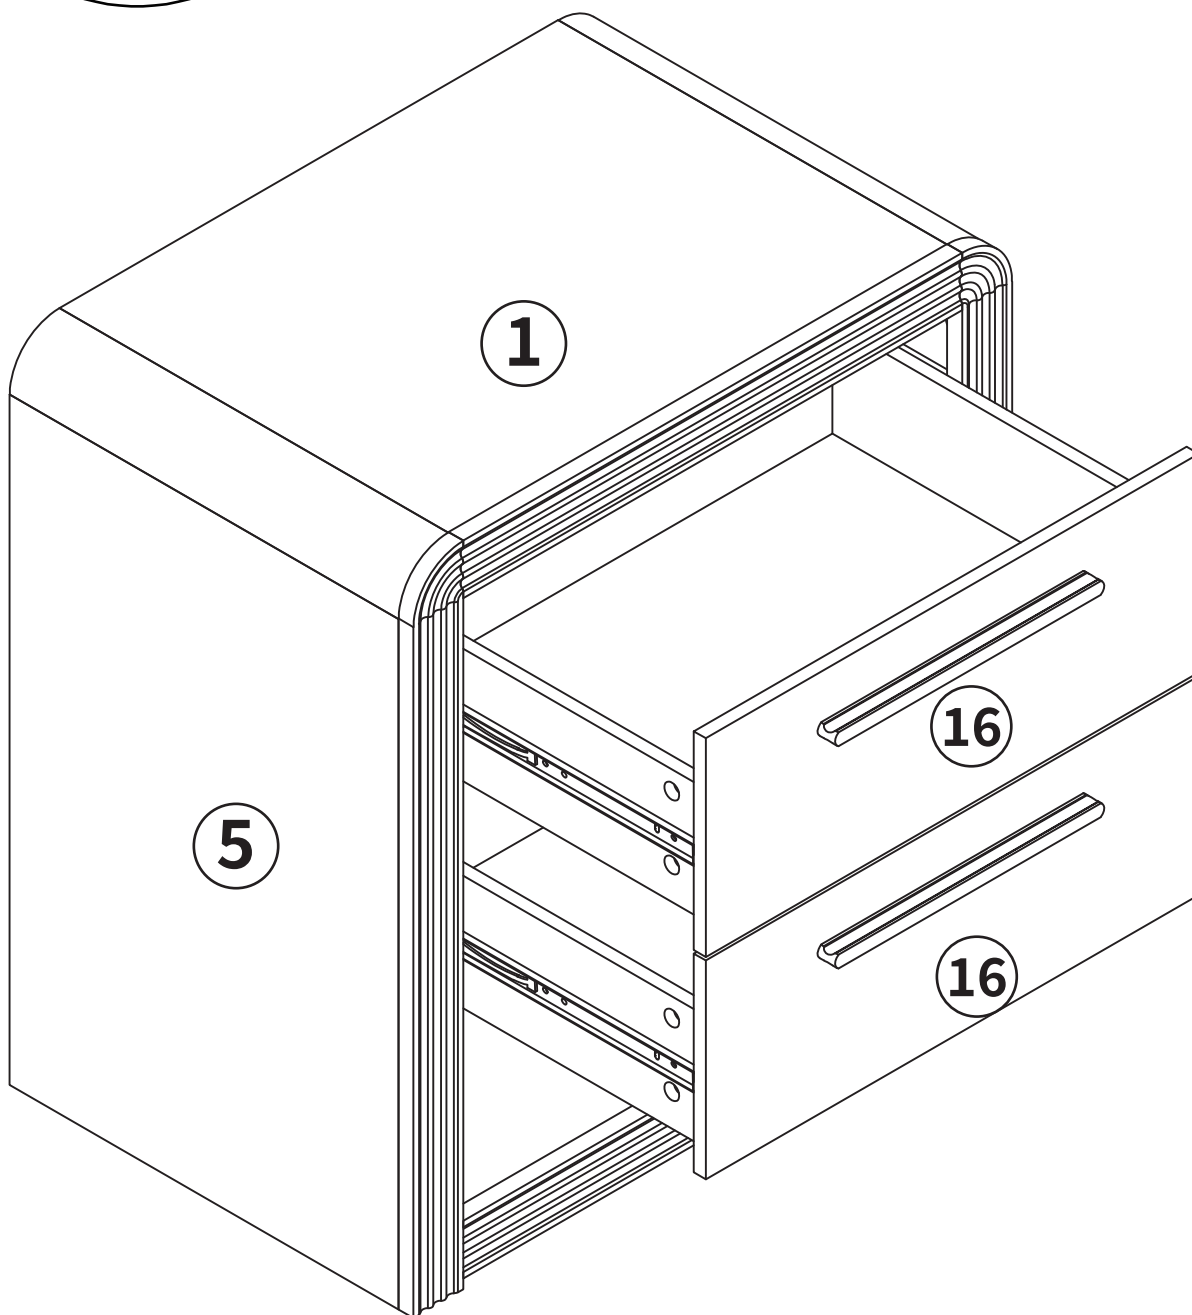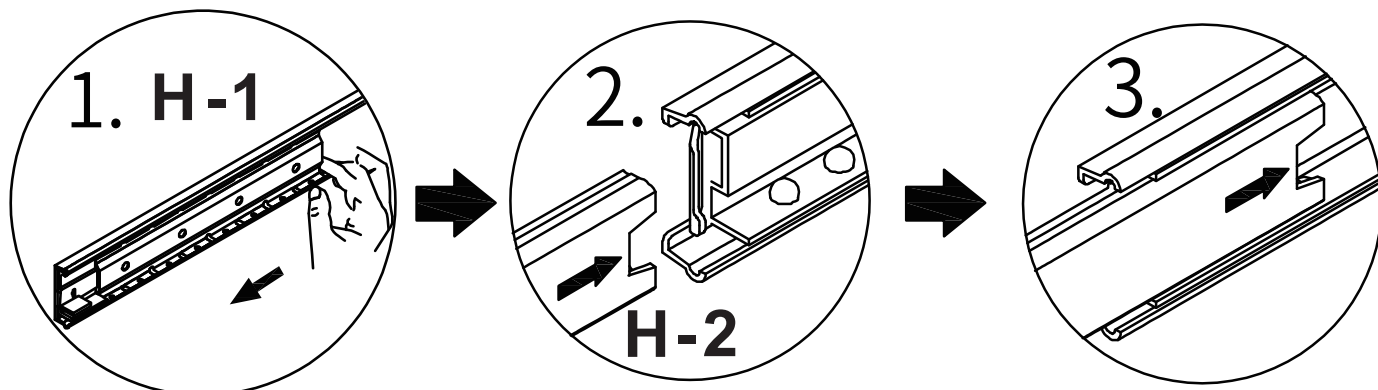

K x 8



Extend the open end of (H-1).

Align (H-1) with (H-2), and snap them together.


Open and close the drawer several times to ensure (H-1) and (H-2) are fully engaged.
Cover the exposed holes on drawers with (K) for a clean look.



NOTE: The included tipping restraint is designed for wooden stud walls only and requires attachment to a stud. If the provided hardware doesn't fit your wall, please purchase suitable expansion anchors from your local hardware store.



WARNING: Furniture tipping can cause serious injury or death, especially to children. Install restraint to reduce risk. It is a deterrent only, not a substitute for supervision, and not for earthquake protection (buy seismic restraints separately). Inspect periodically for security.

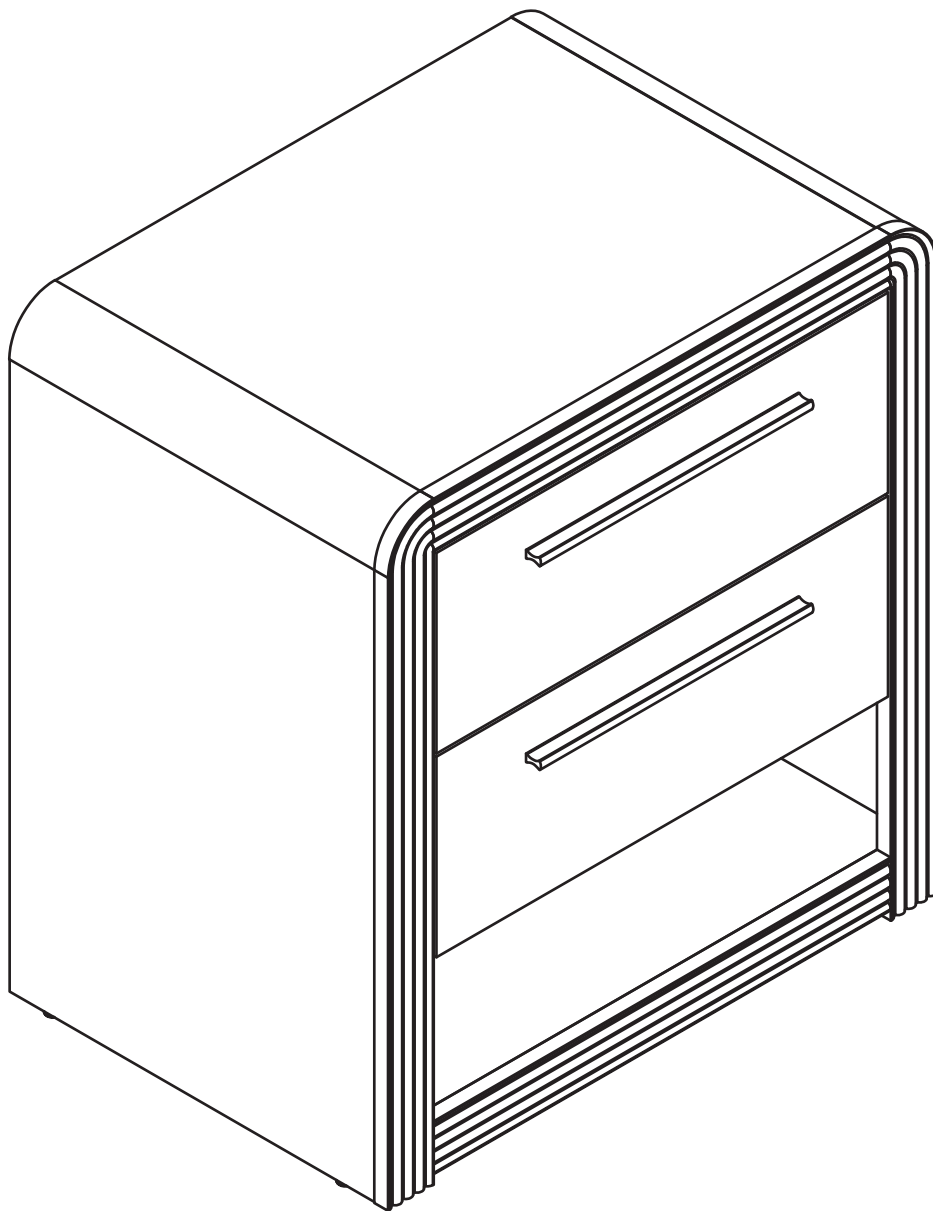

DONE!