



ASSEMBLY INSTRUCTION


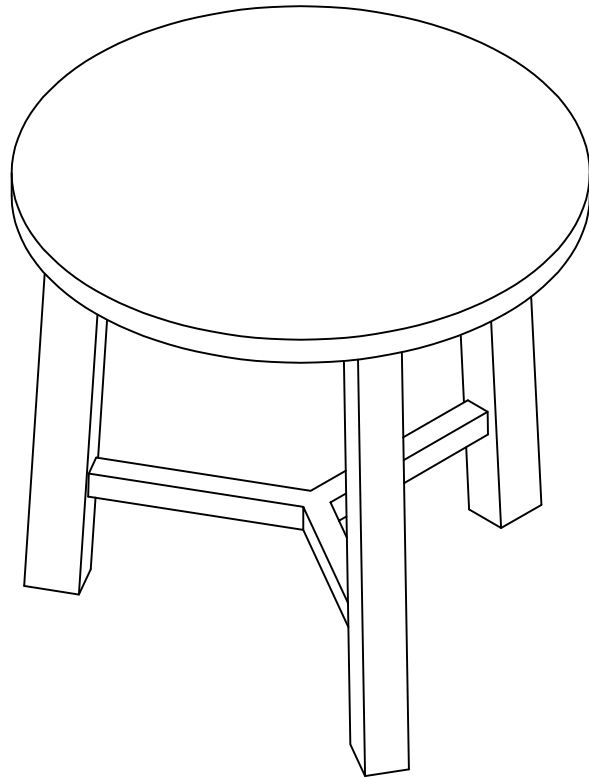


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware

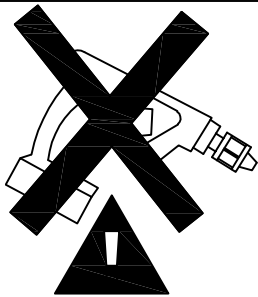


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

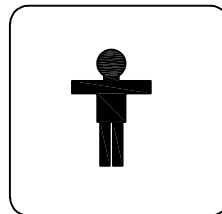





Tools Required

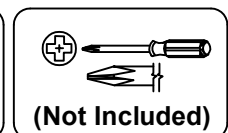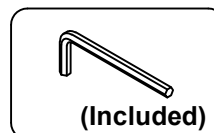


Part list - 20" Dia. End Table

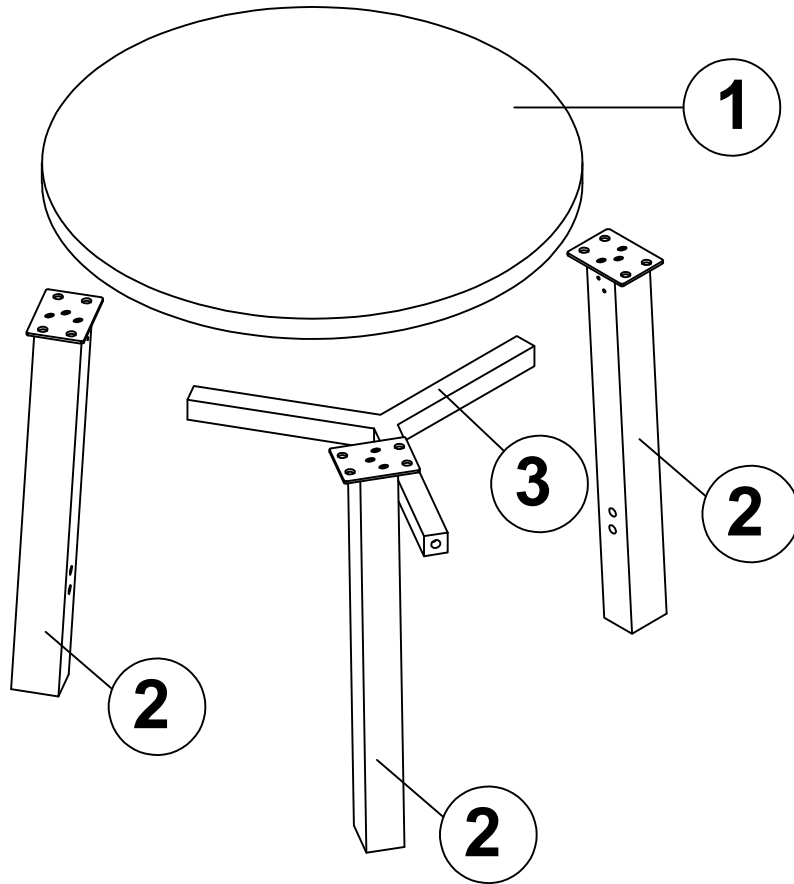


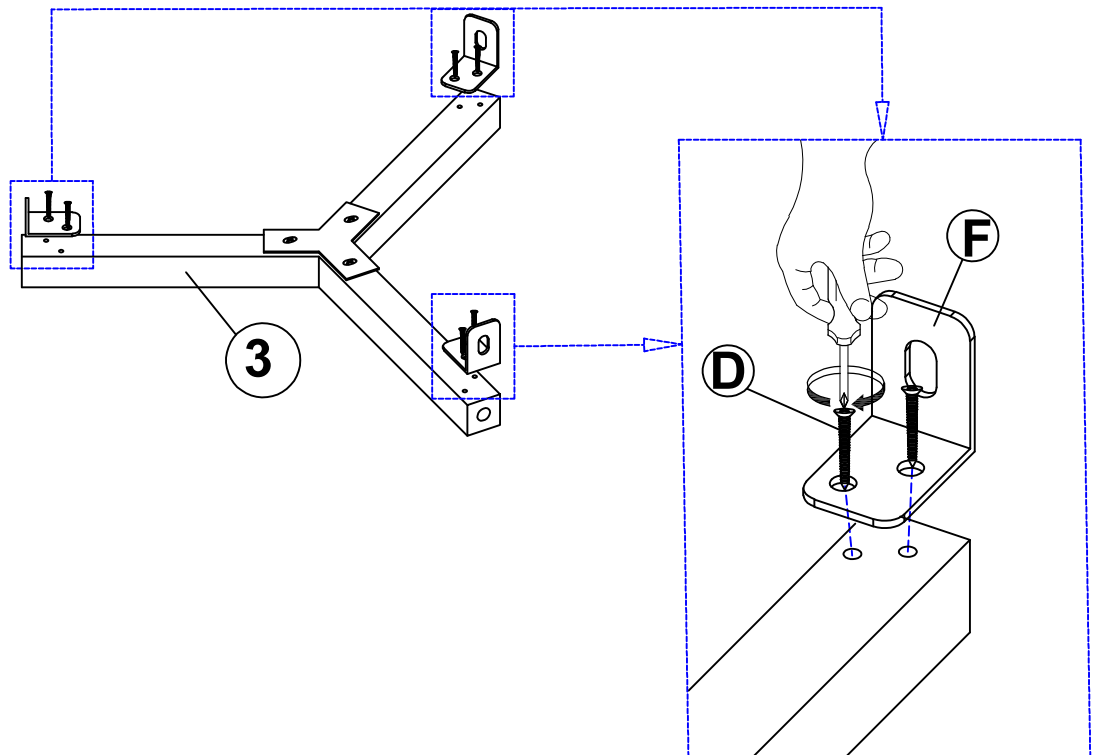
Identifying the hardware-Identify the hardware using the illustrations below

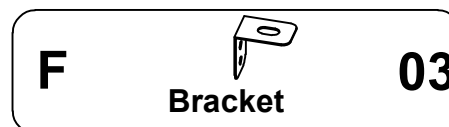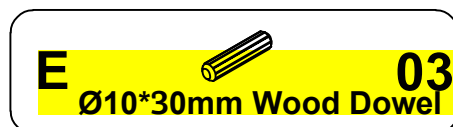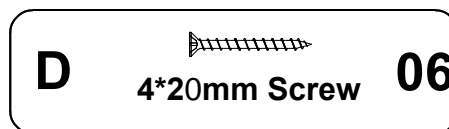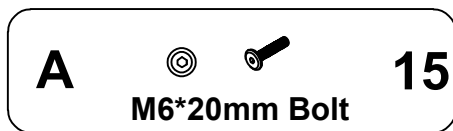

Step 01


D  **06**

F  **03**
Bracket







Step 02

E  **03**
Ø10*30mm Wood Dowel

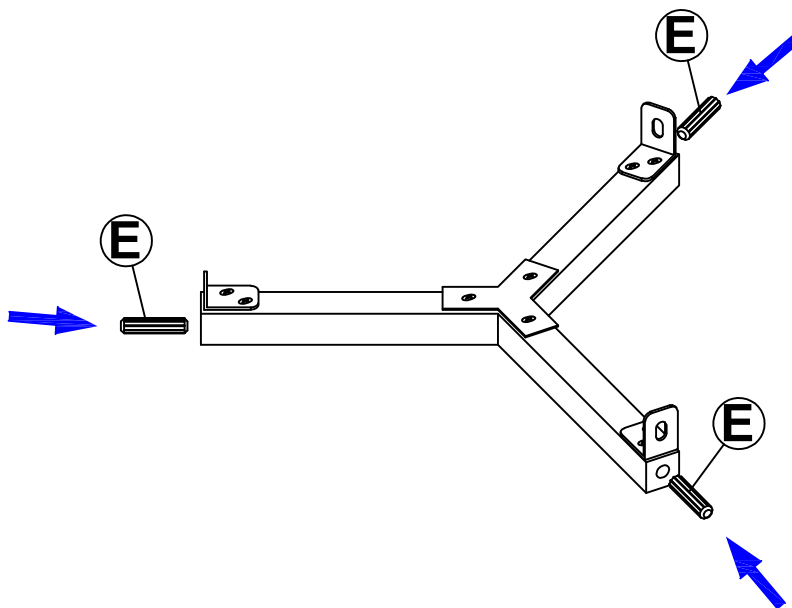




Step 03

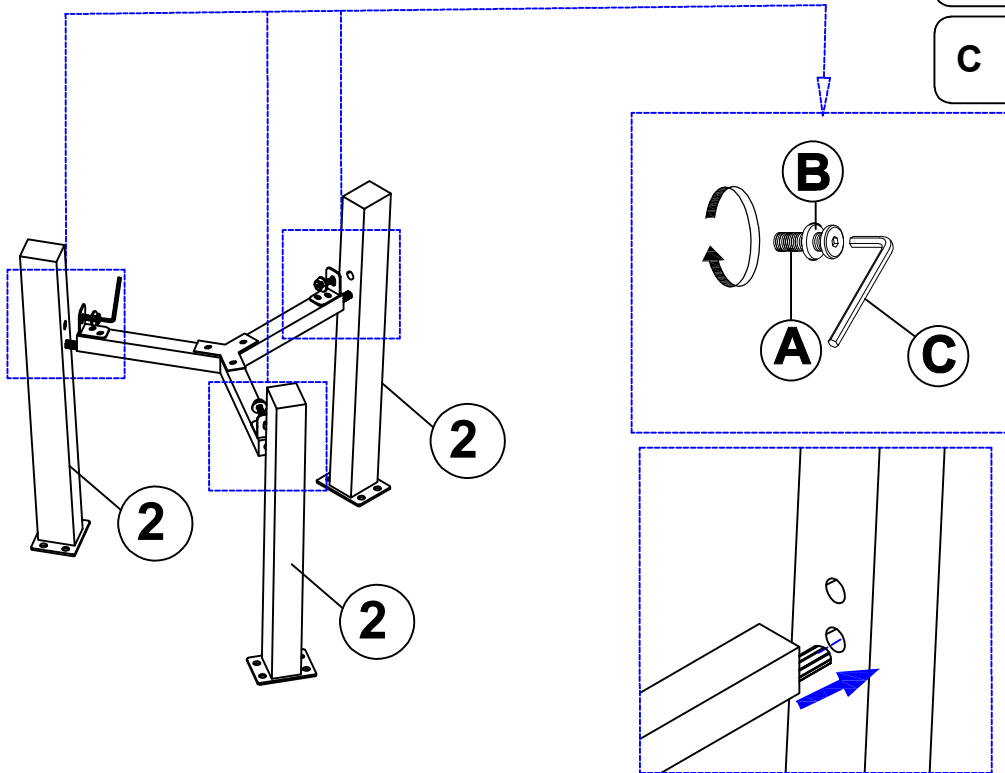
- A**  **03**
M6*20mm Bolt
- B**  **03**
M6 Washer
- C**  **01**
Allen Key




Note: Do not tighten bolts firmly at this time

Step 04

- A**  **12**
M6*20mm Bolt
- B**  **12**
M6 Washer
- C**  **01**
Allen Key

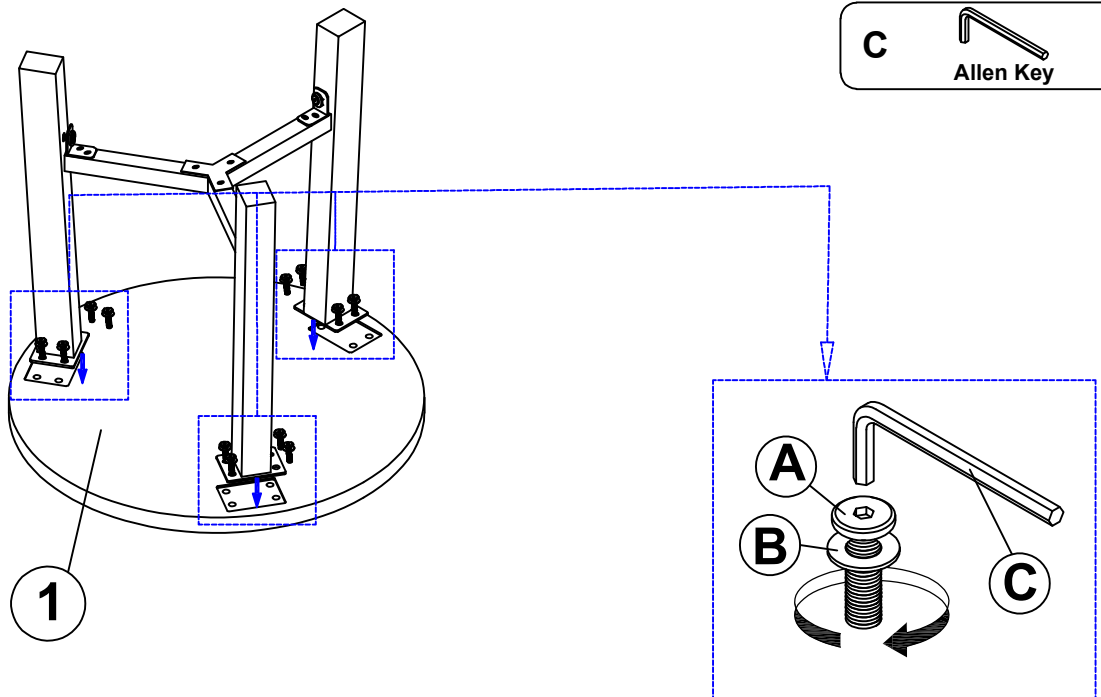

Note: Tighten all bolts at this time

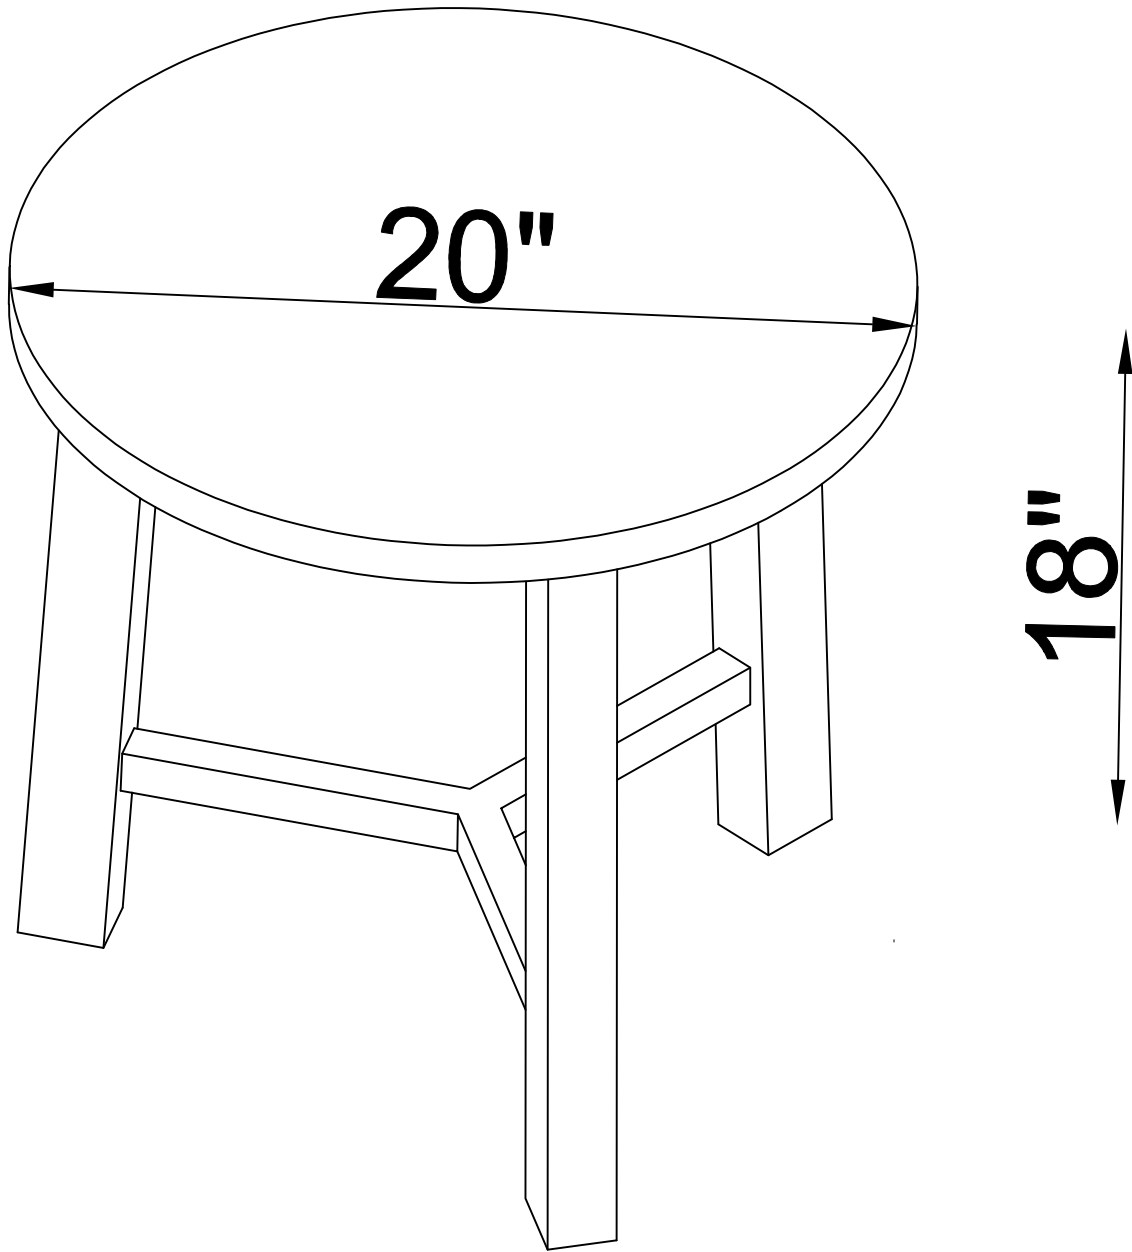

20" Diameter End Table