

Awnings

Assembly Instructions



General Information

Read Instructions through carefully before beginning assembly.


When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.

You should not need to use excessive force when assembling components.

The DVP Awnings have supports that can be attached to each other. By installing two or more Awnings in a line, it is possible to cover a larger linear area.



Components

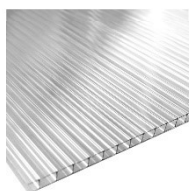

4mm Polycarbonate Sheet (1 pc)



Anchor bolts (4 pcs)



Dowels and screws. (4 pcs)



Brackets



Start and finish trim

Curved Awnings



1 Attach one of the brackets to the wall in the desired location, using the anchor bolts.



2 Snap the start and finish trim into the foam polycarbonate sheet.



3 Attach the iron to the already installed support, using the corresponding dowels and screws.




4 Attach the other end of the iron to the second bracket, use the corresponding dowels and screws.




5 Finally attach the second bracket to the wall, using the anchor bolts included in the Kit.

Straight Awnings

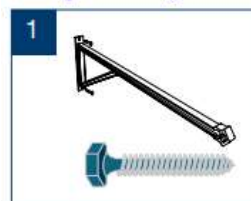


1 First attach one of the brackets in the desired location, using the lag screws.

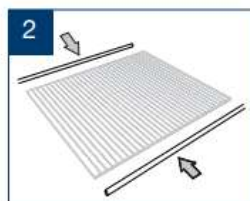

2 Install the start and finish trim on the foam polycarbonate sheet.



3 Fix the iron to the already installed support, using the corresponding dowels and screws.

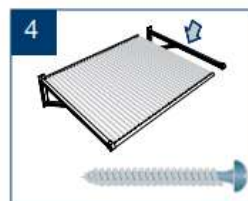

4 Attach the other end of the iron to the second bracket, use the corresponding dowels and screws.



5 Finally attach the second support, using the lag screws.

Awnings

Assembly
Instructions



Installed Product

