


# Installation Instruction

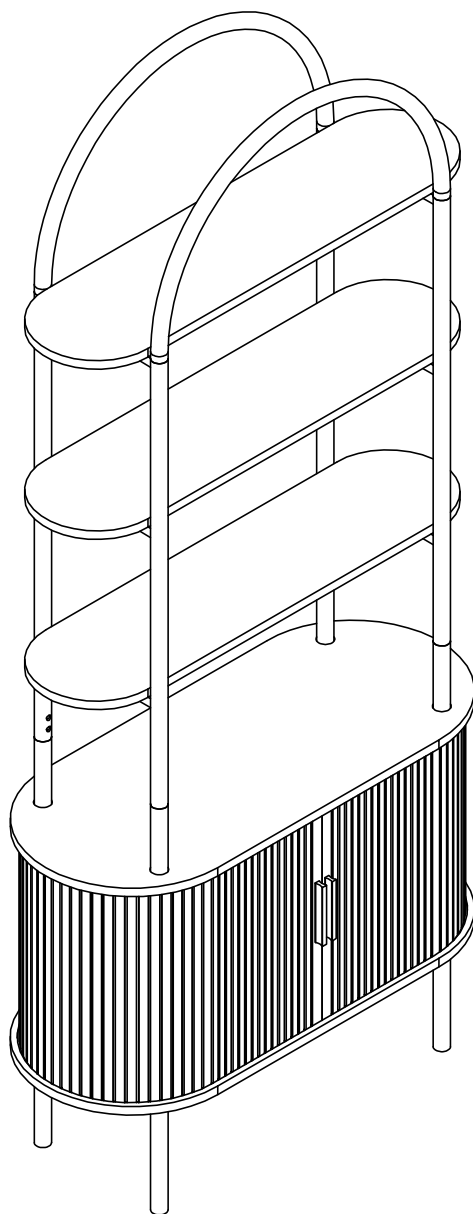

# Assembling


Estimated time for assembly



**45 : 00**

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



**100** | **35**  
lbs table top    lbs per

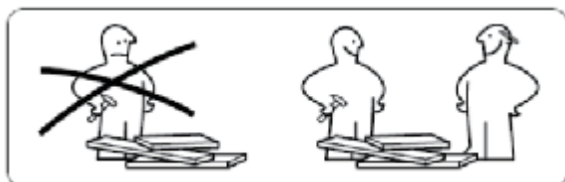


# What' included

Code Description	Qty
A Cam Bolt M6X35MM	3
B Cam Lock 15X9MM	3
C Wooden Dowel M8X30MM	4
D Screw M4X40MM	5
E Screw M6X40MM	6
F Metal shake handhandle	2
G Nylon Strap	2
H Screw M6X25MM	22
I Screw M6X12MM	12
J Adjustable Leveler	4
K Anchor	2
L Cam Bolt M4X8MM	4
M Screw M7X50MM	4
N Wrench M4X90MM	1
O Hole position sticker	3

# The Hardwares


A




B




C



D




E



F



G



H



I



J




K



L




M



N



O



## IMPORTANT:


1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.

# Included Accessories




---


Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Backboard	1
4	Laminate	3
5	Coaming panel	2
6	Arc tube	2
7	Intermediate iron frame	2
8	Connecting rod	2
9	Lower left iron frame	1
10	Lower right iron frame	1
11	Cross bar	1

# The Accessoriess

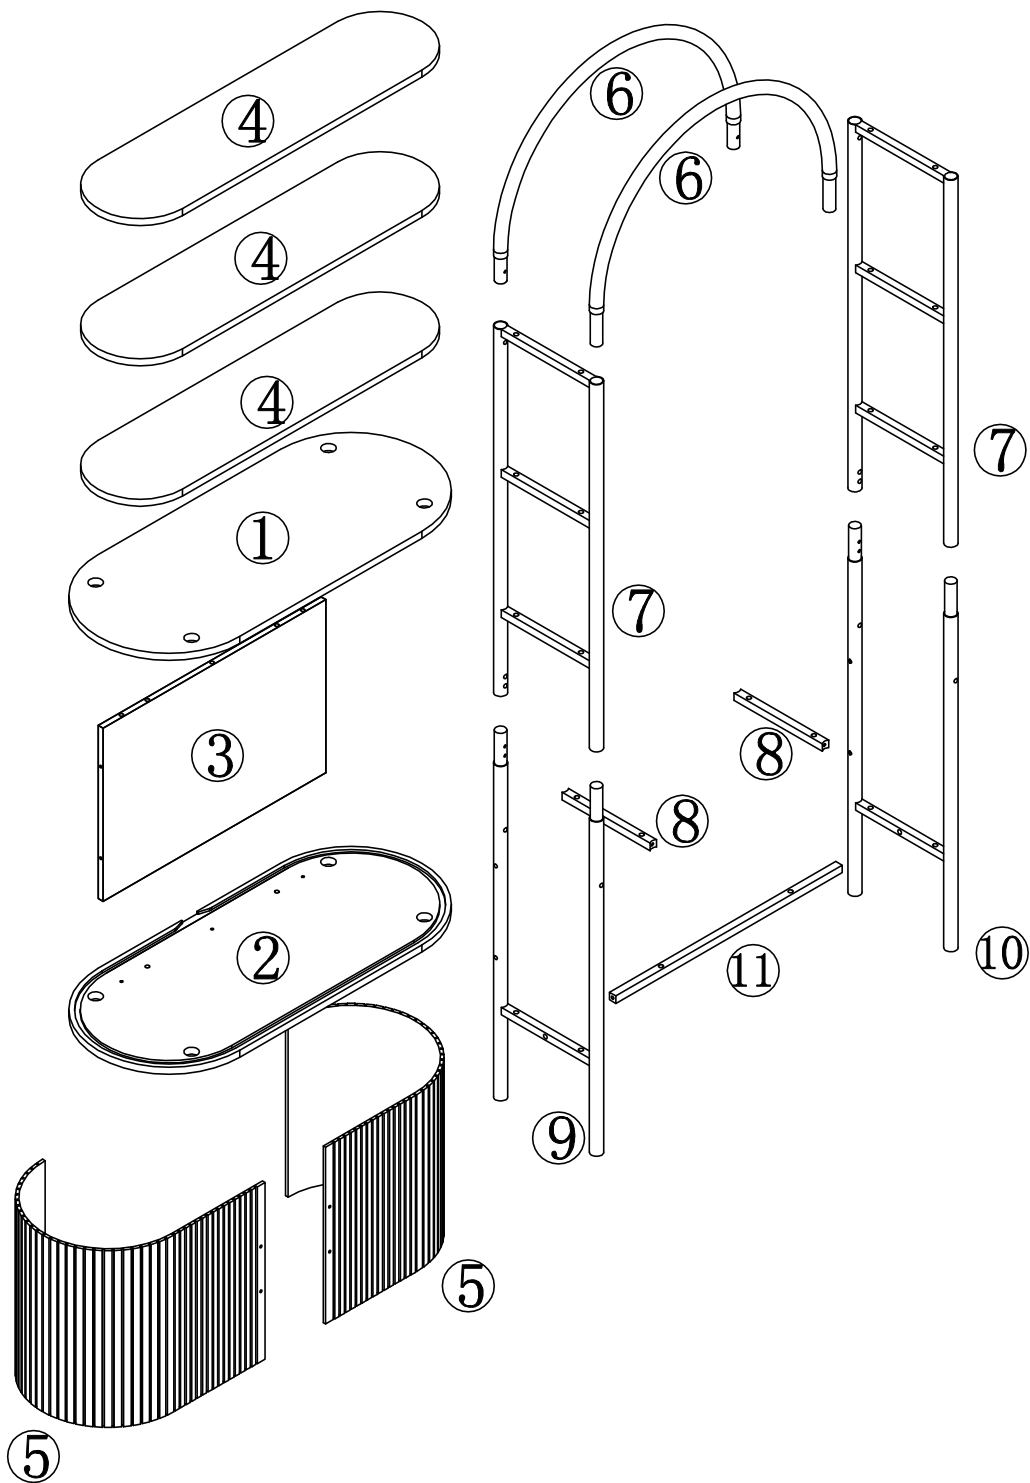


Step 1

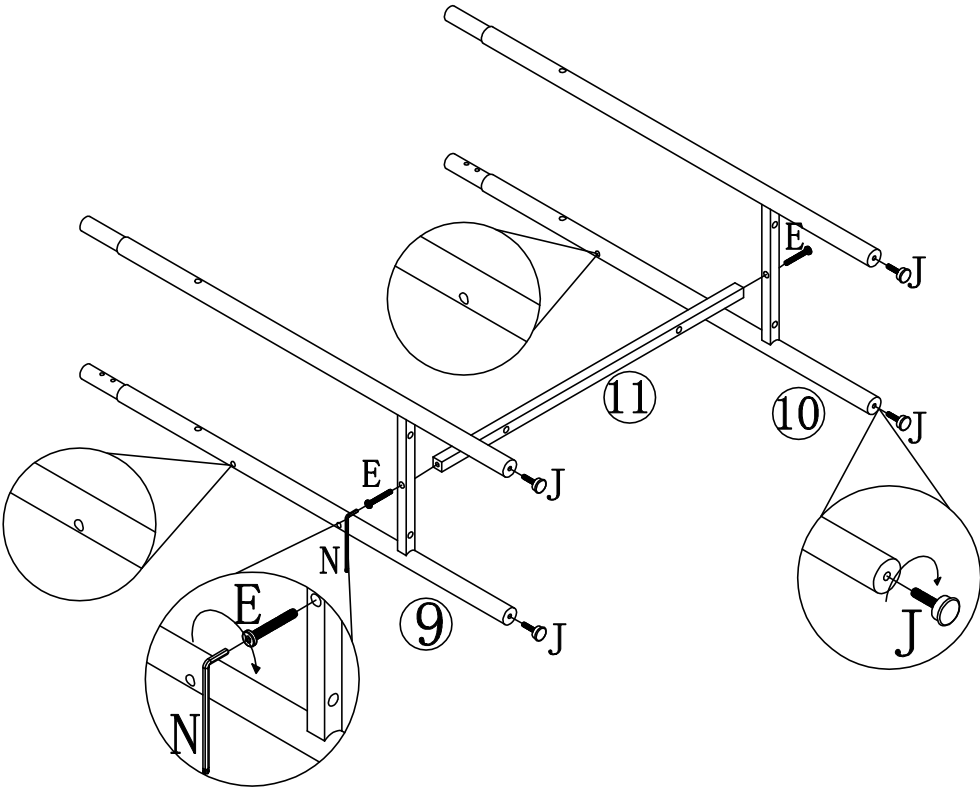

E	x 2	J	x 4	N	x 1
					

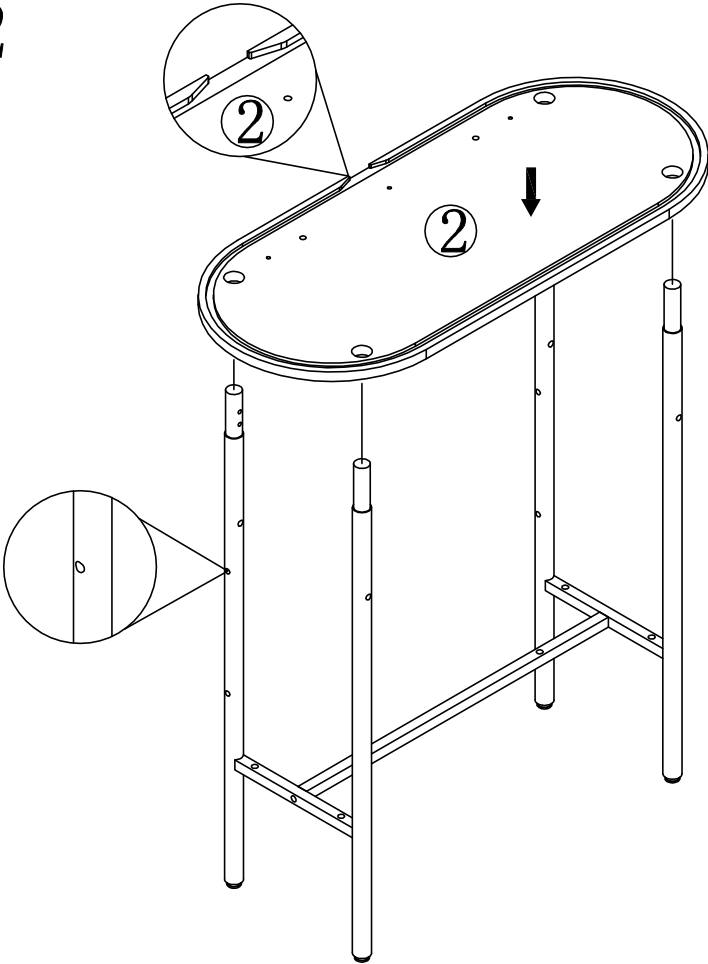


Step 2





# Step 3

H	x 6	N	x 1
			

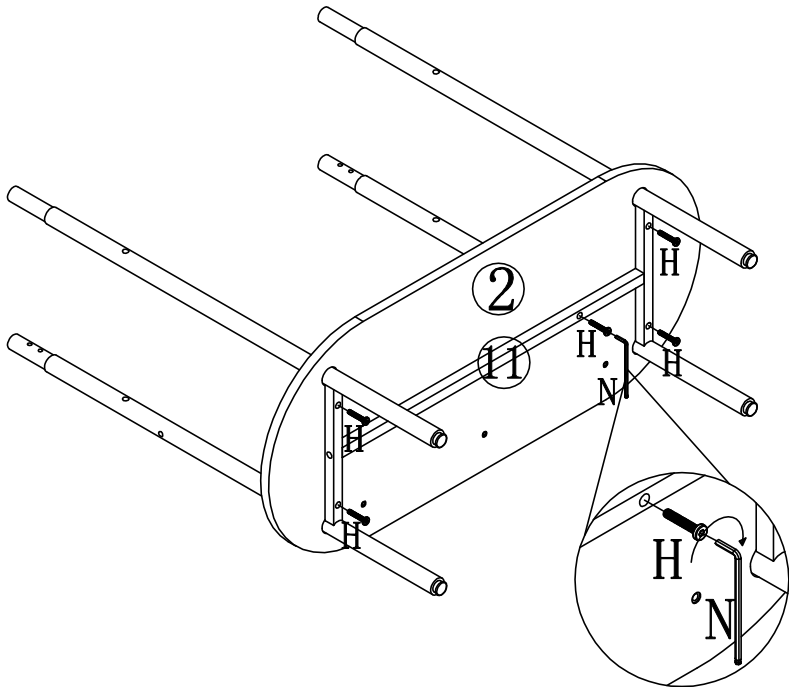


# Step 4


C	x 2
	

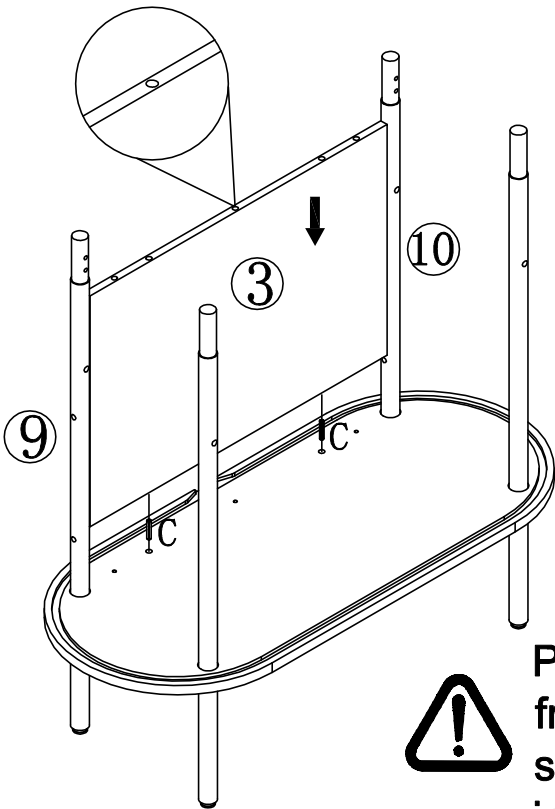


Please swing the lower side frames of No. 9 and No. 10 straight to facilitate the installation of No. 3 backplane


# Step 5


M	x 4
	

N	x 1
	

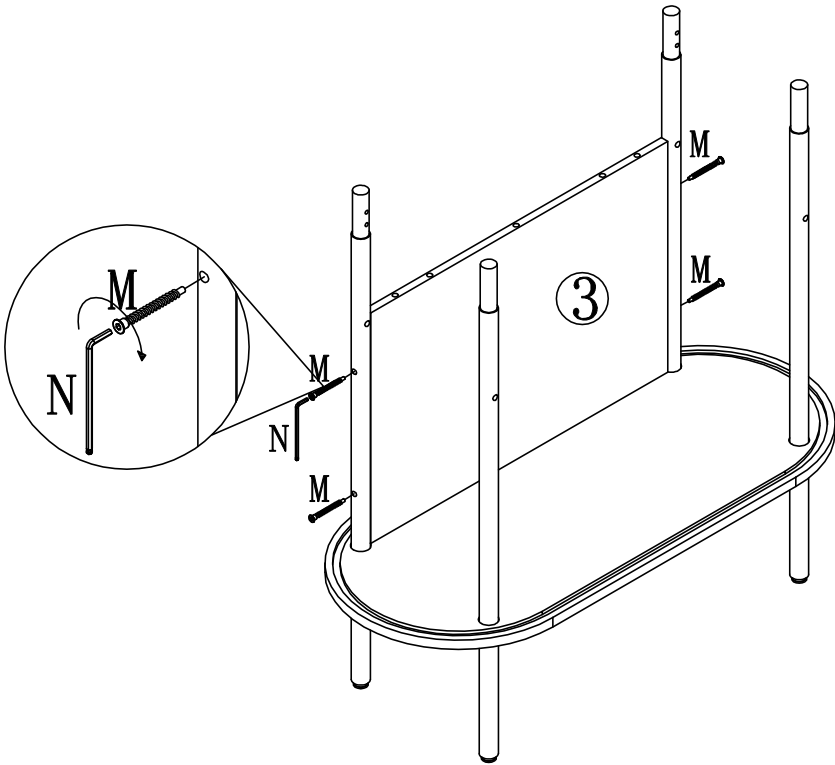



# Step 6

D	x 3
	


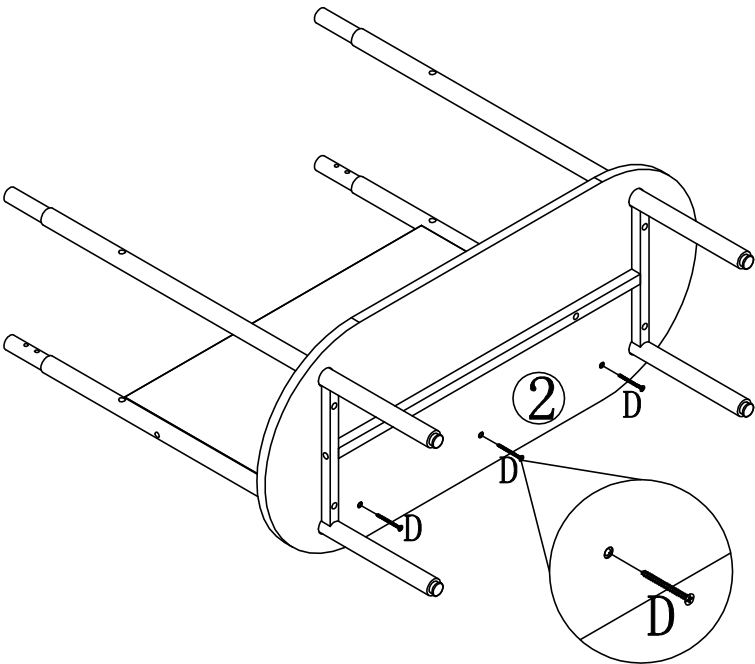





## Step 7

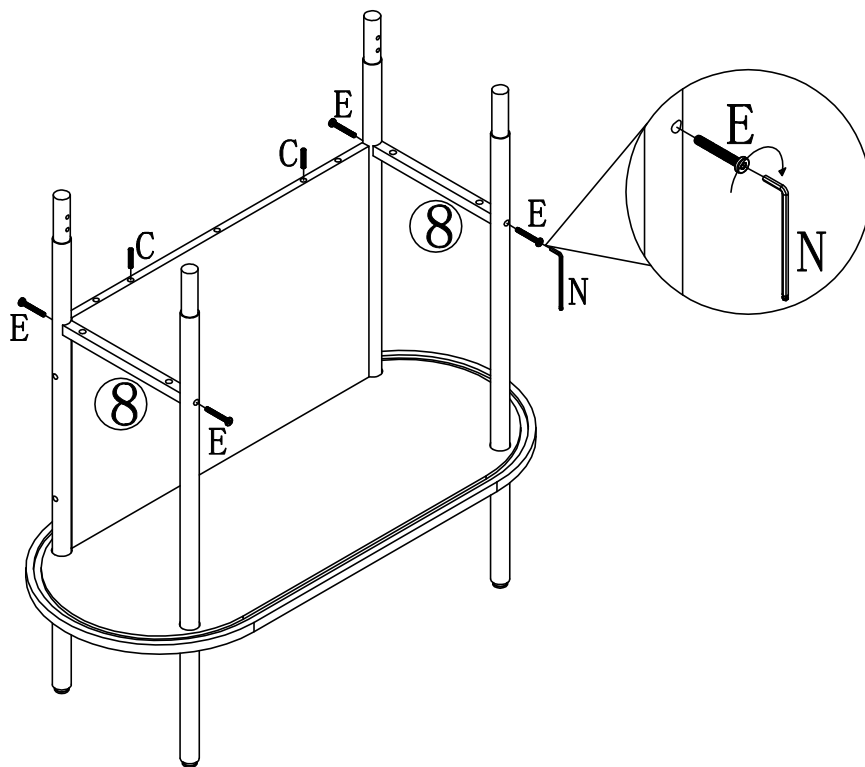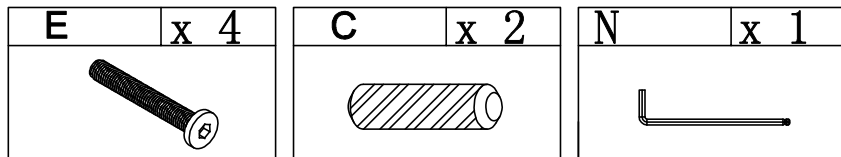

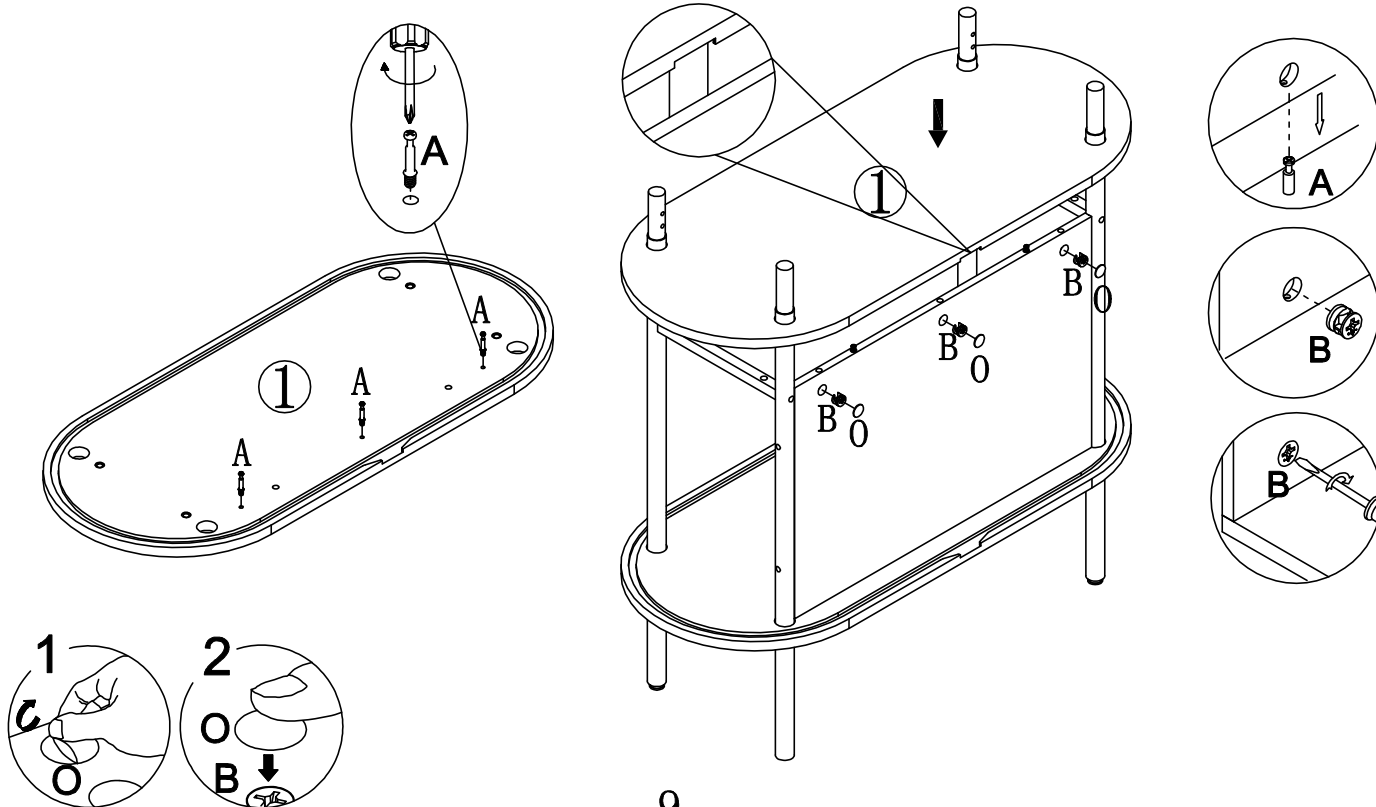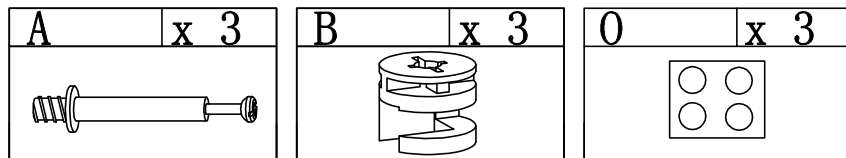

## Step 8

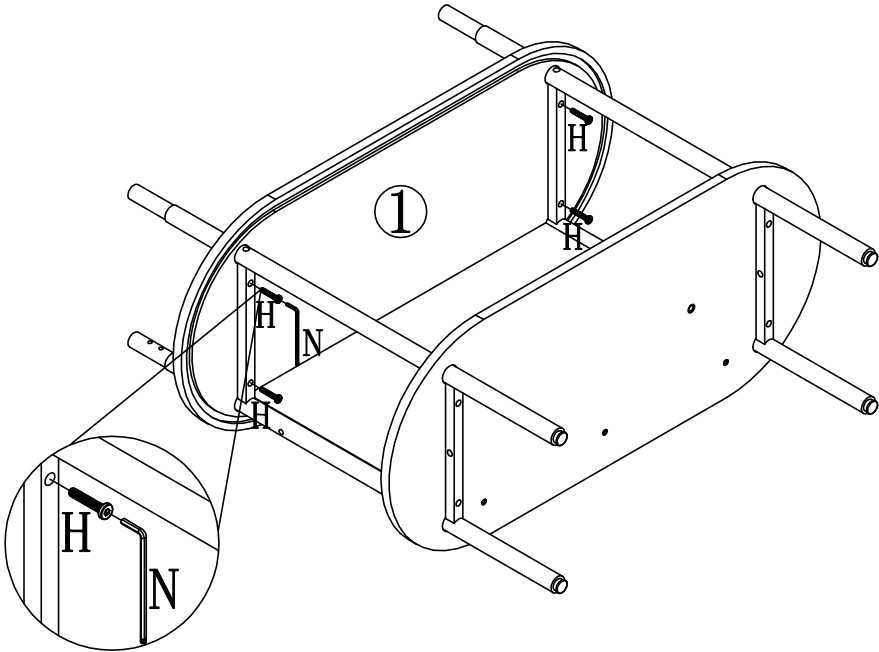



# Step 9





H	x 4
	

N	x 1
	
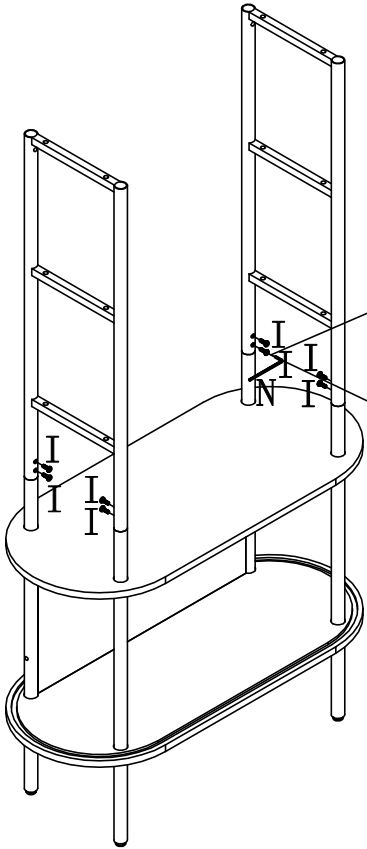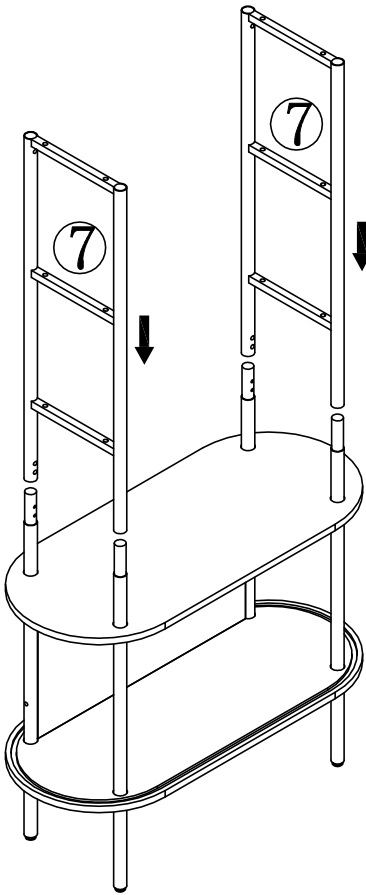
# Step 10






I	x 8
	

N	x 1
	

# Step 11







Hexagonal screw  
lock 80%

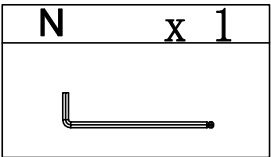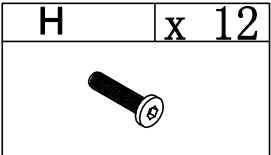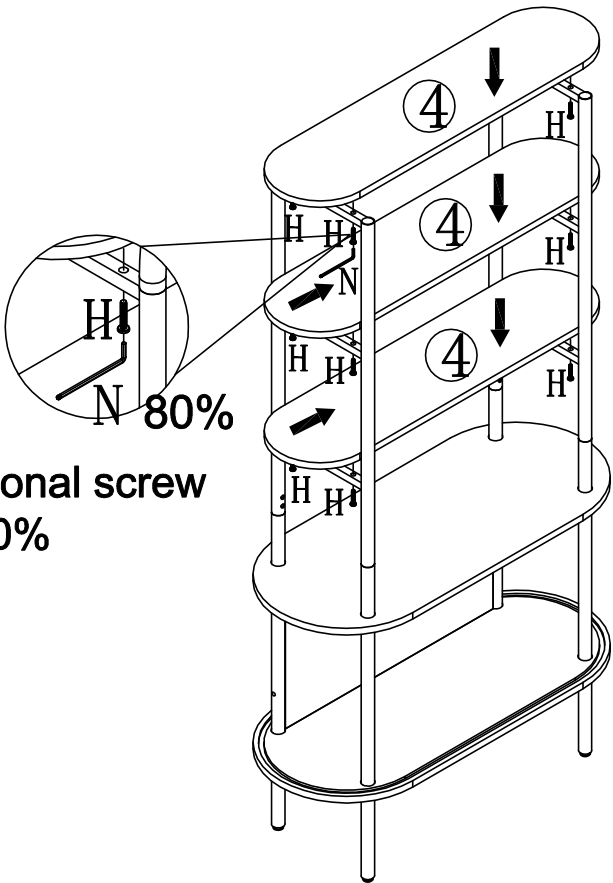


# Step 12




The perforated  
side faces inward

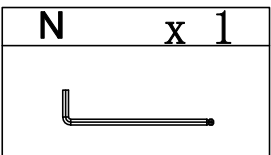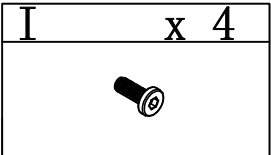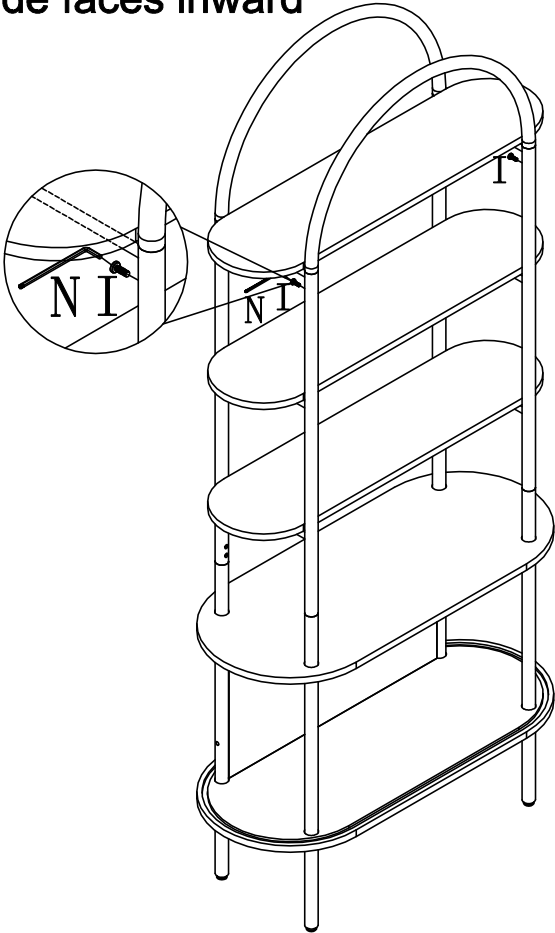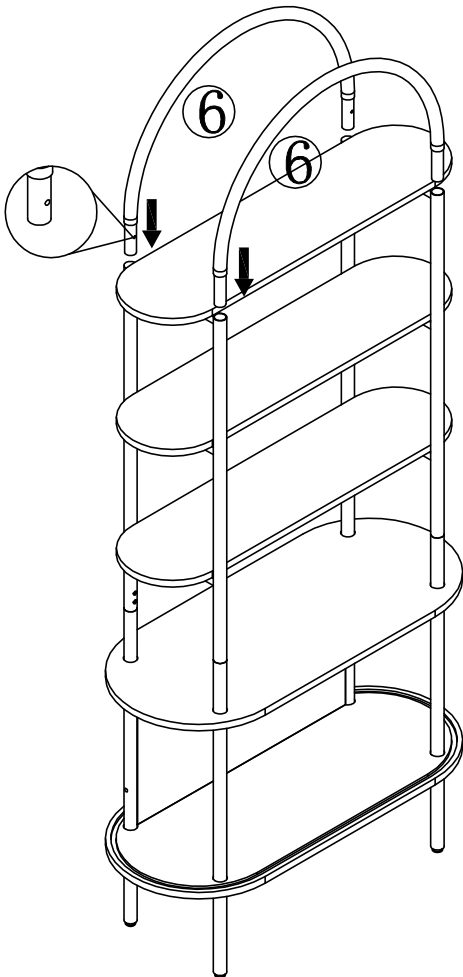


# Step 13


N	x 1
	

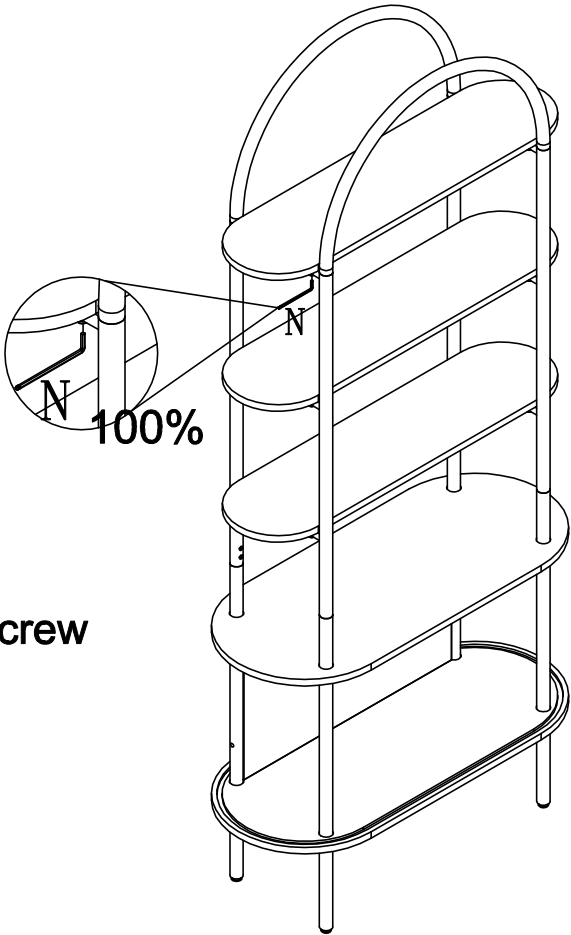


Hexagonal screw  
lock 100%


# Step 14

F	x 2
	


L	x 4
	

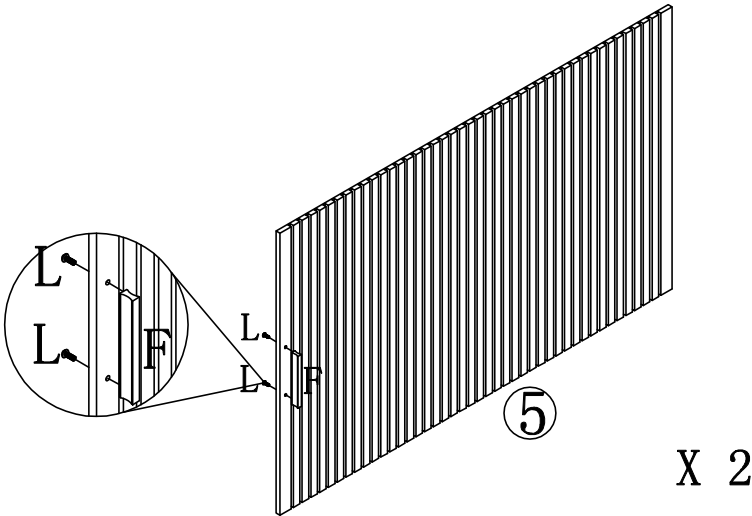


# Step 15

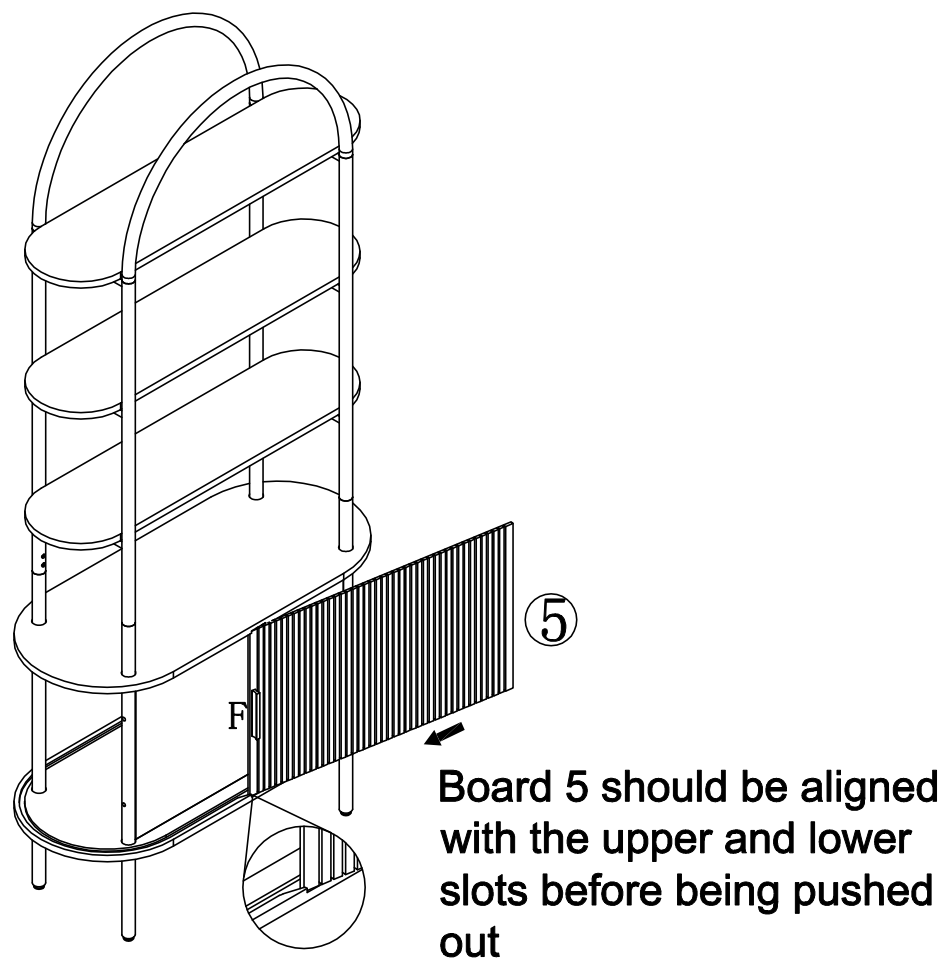



# Step 16

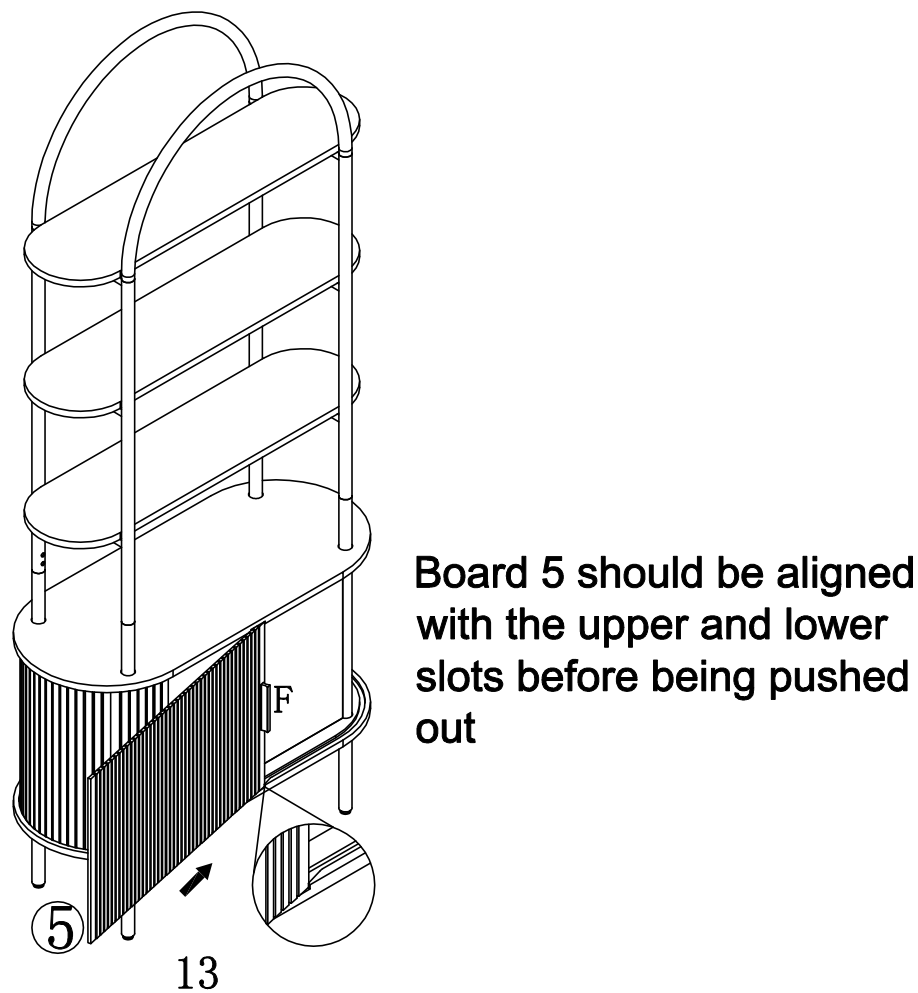


# Step 16

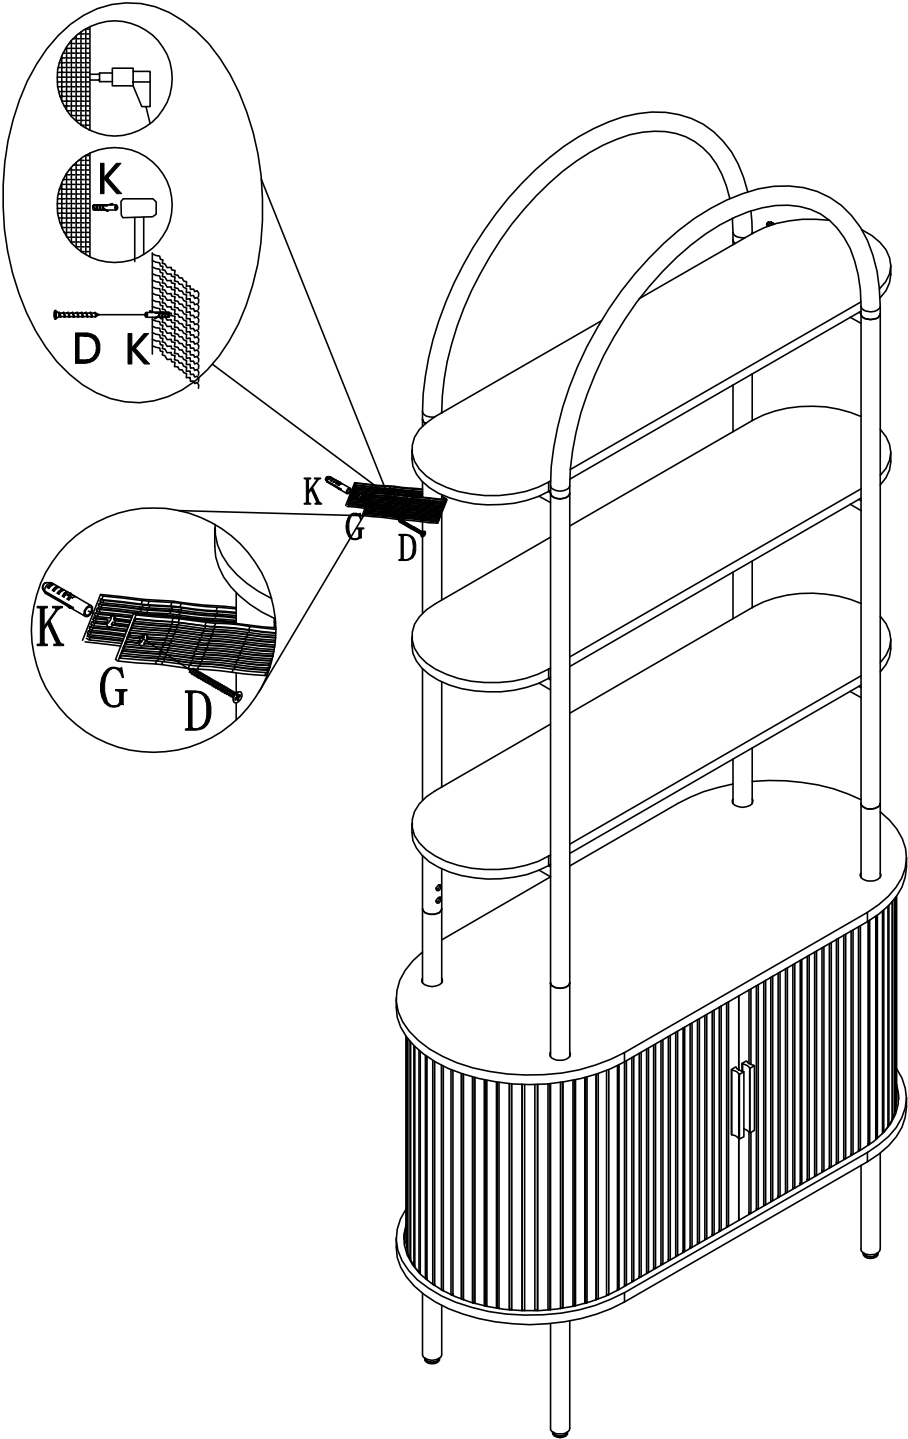

D	x 2
	

G	x 2
	

K	x 2
	

Step 17

