
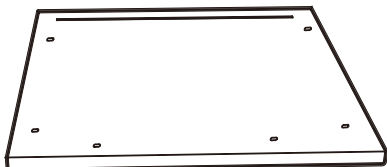
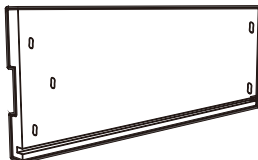
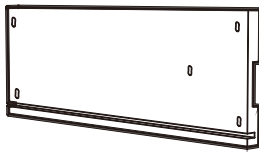
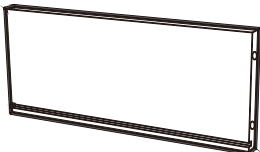
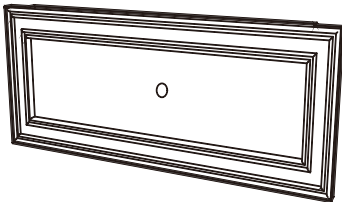
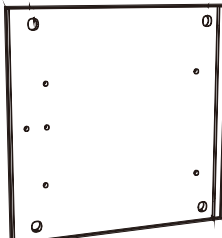
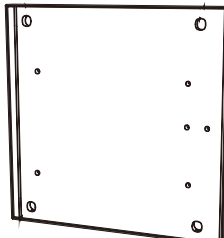
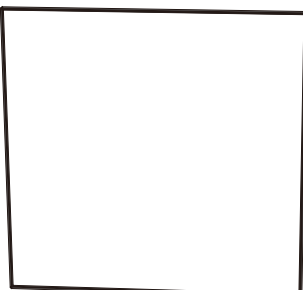
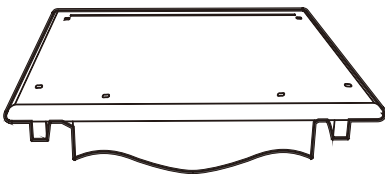
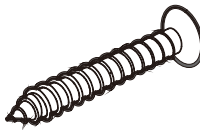
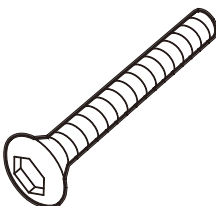
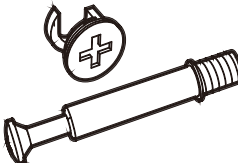



A 1×	B 2×	C 2×	
			
D 2×	E 2×	F 2×	
			
G 2×	H 1×	I 1×	U 1×
			
J 4×	K 1×	L 1×	
			
M 4×	N 2×	O 20×	P 4×
			
Q 4×	R 8×	S 8×	T 4×
			


The diagram shows the assembled frame with four corner braces (P) and four corner fasteners (M) in place. The corner braces (P) are positioned at the corners of the frame, and the corner fasteners (M) are used to secure the frame to the base (L). The base (L) is shown at the bottom of the diagram.

[illegible]


3

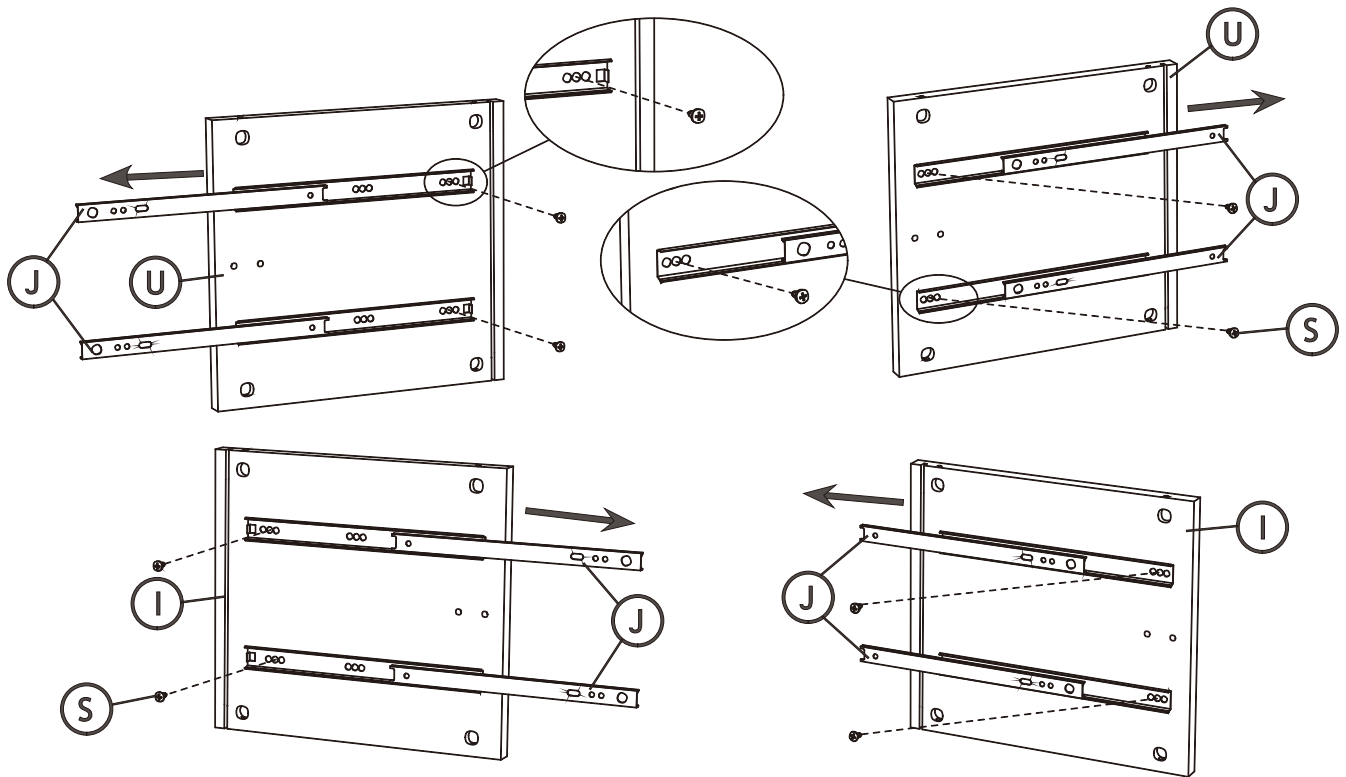

4

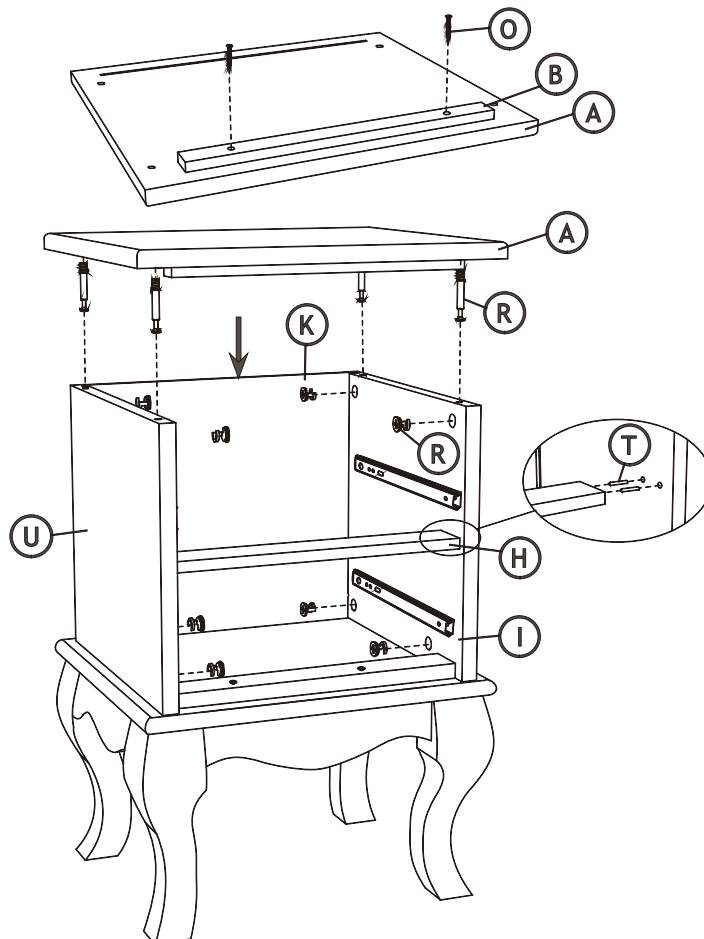

5

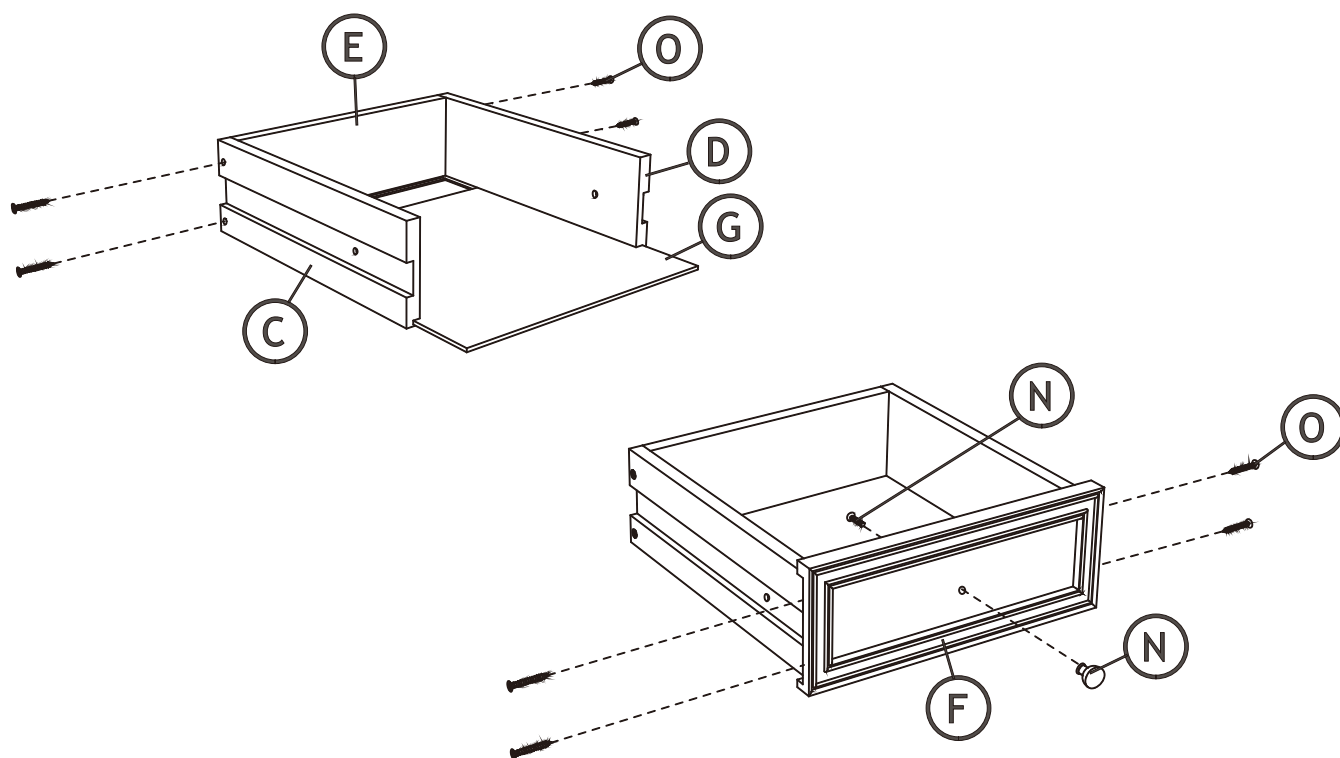

6

