

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#:SC-6133LCH、SC-6133RC、SC-6133WWSC-6133BE

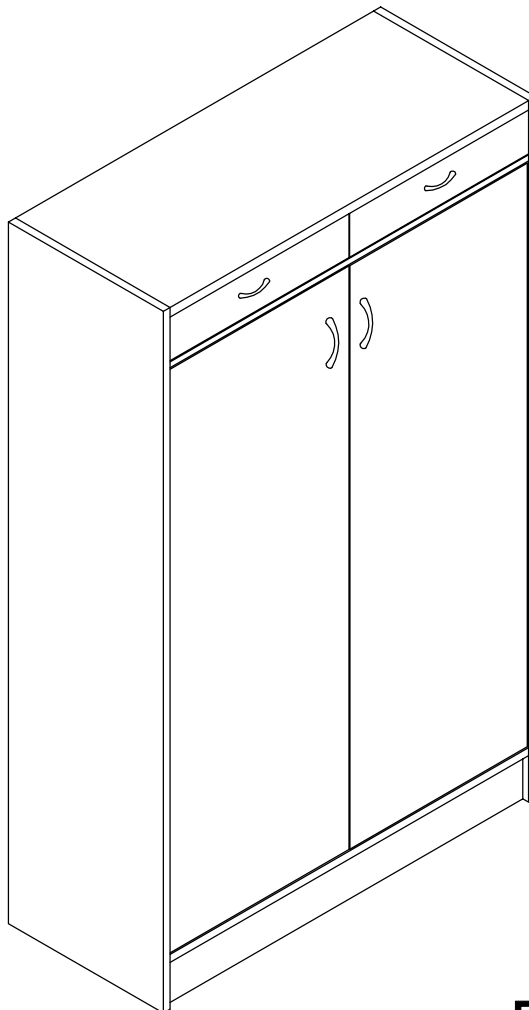

PARTS IDENTIFICATION




ITEM#: SC-6133LCH、SC-6133RC、SC-6133WWSC-6133BE

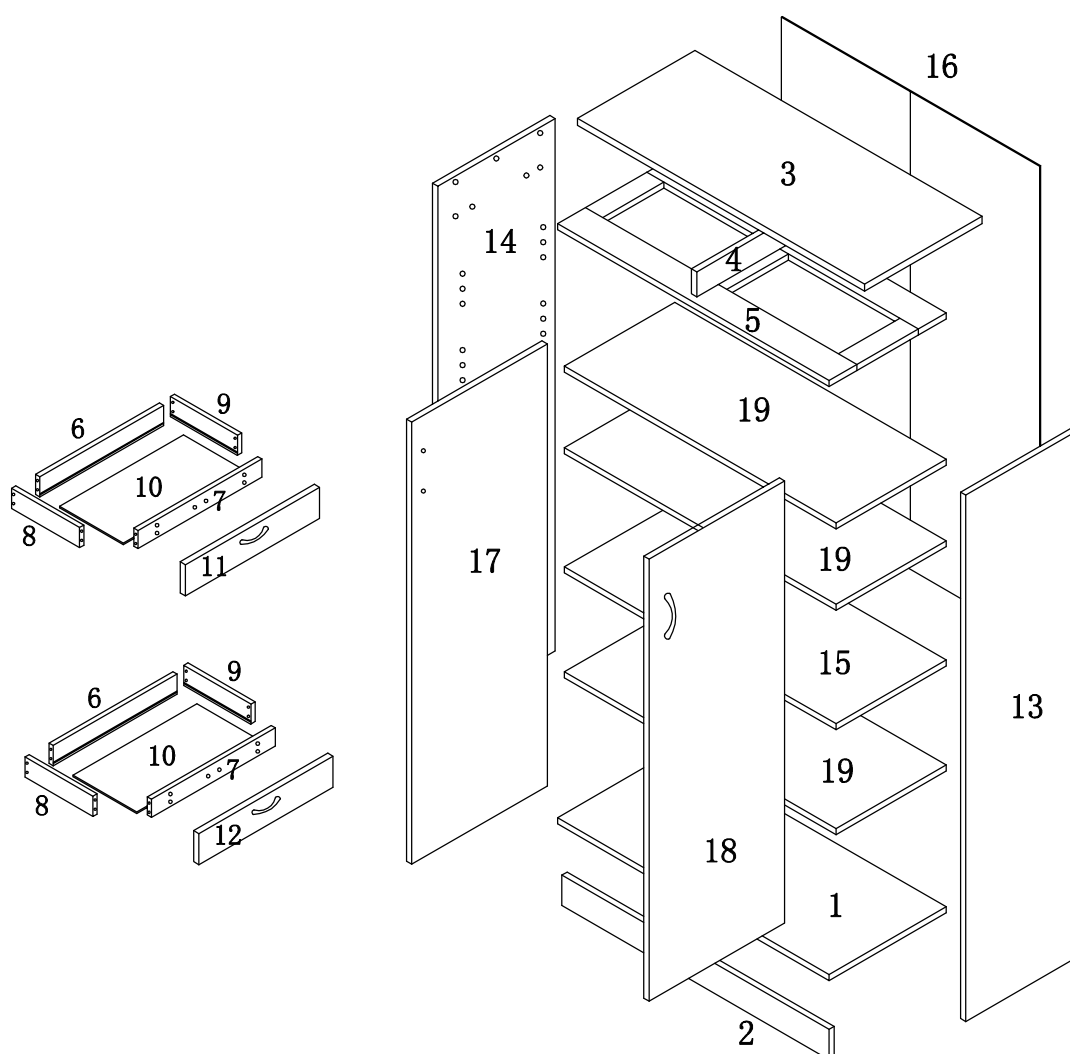

(1)	1pc	(8)	2pcs	(15)	1pc
(2)	1pc	(9)	2pcs	(16)	1pc
(3)	1pc	(10)	2pcs	(17)	1pc
(4)	1pc	(11)	1pc	(18)	1pc
(5)	1pc	(12)	1pc	(19)	3pcs
(6)	2pcs	(13)	1pc		
(7)	2pcs	(14)	1pc		


HARDWARE IDENTIFICATION

ITEM#:SC-6133LCH、SC-6133RC、SC-6133WWSC-6133BE


A		L29	4pcs
B		ø15	4pcs
C		ø4 x 40	20pcs
D		ø4 x 30	16pcs
E		ø4 x 25	8pcs
F		ø4 x 30	4pcs
G		64MM	2pcs
H			1pcs
I		ø3 x 16	2pcs
J			30pcs
K			1pc
L		ø35	4pcs
M		ø5 x 14	8pcs
N		ø4 x 16	8pcs
O		96MM	2pcs
P		ø4 x 20	4pcs
Q		ø5	12pcs
R		ø8x25	13pcs
S		197x5x1	1pc
T		ø5x40	1pc
U		ø16	5pcs
V		12x12x1	2pcs
W		ø4 x 25	1pc
X		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#: SC-6133LCH、SC-6133RC、SC-6133WWSC-6133BE

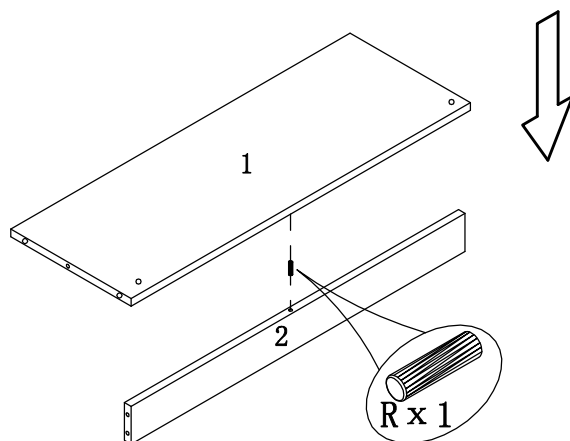


STEP1

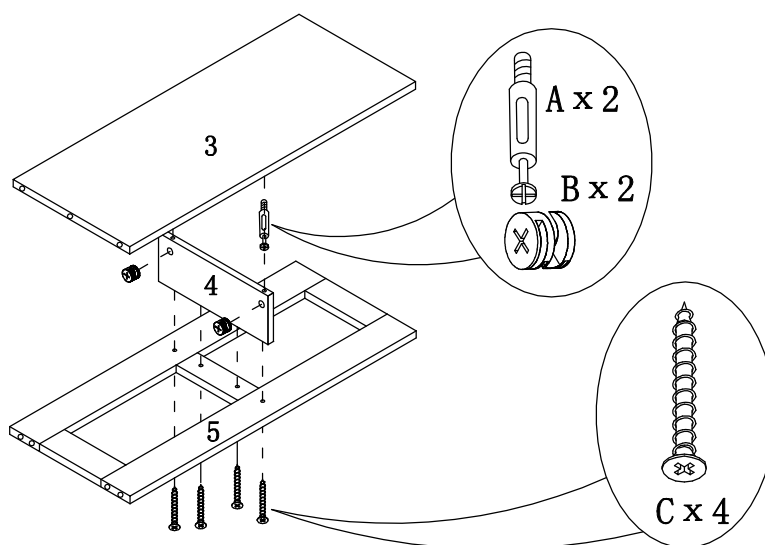

STEP2


STEP3

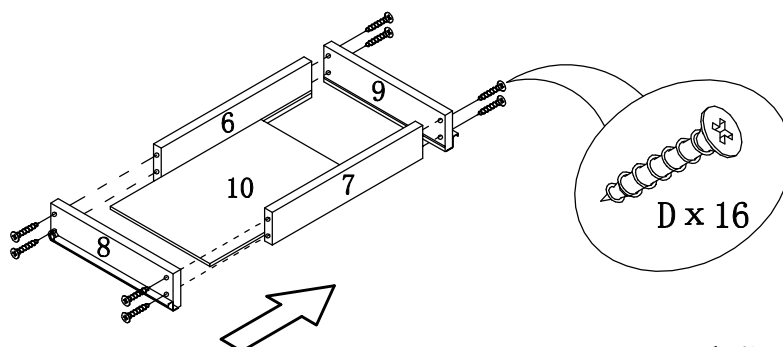


PAGE:4 OF 6

ASSEMBLY INSTRUCTION

ITEM#:SC-6133LCH、SC-6133RC、SC-6133WWSC-6133BE

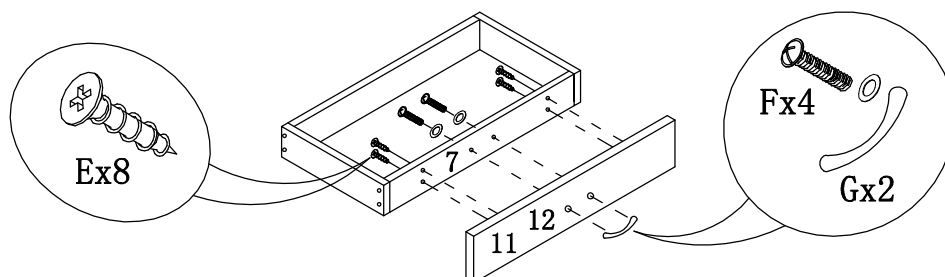


STEP4

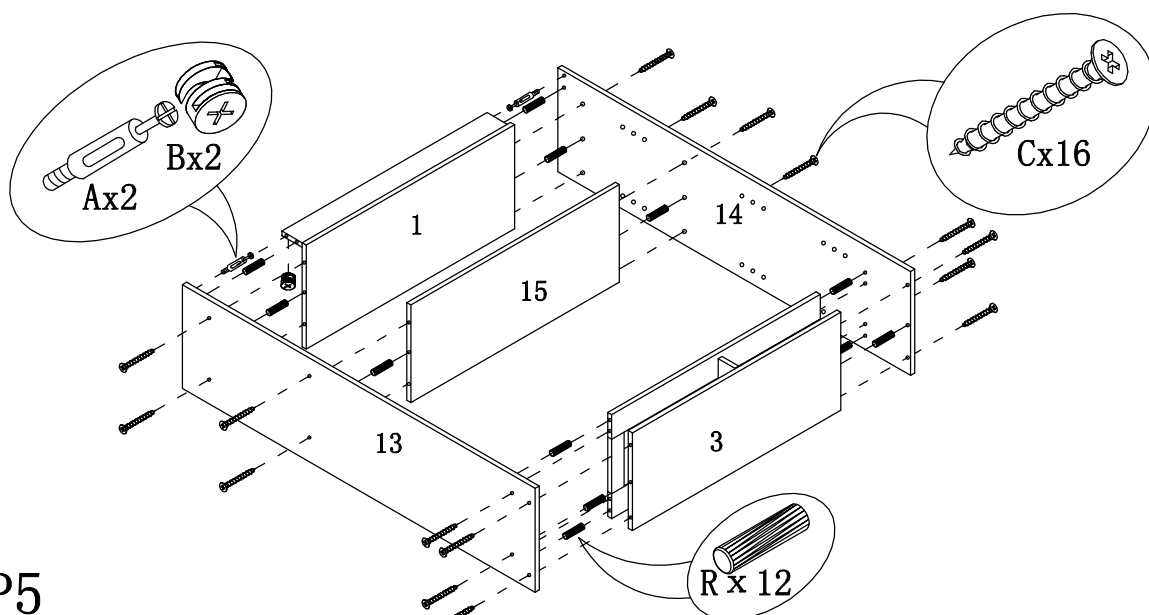


STEP5

STEP6

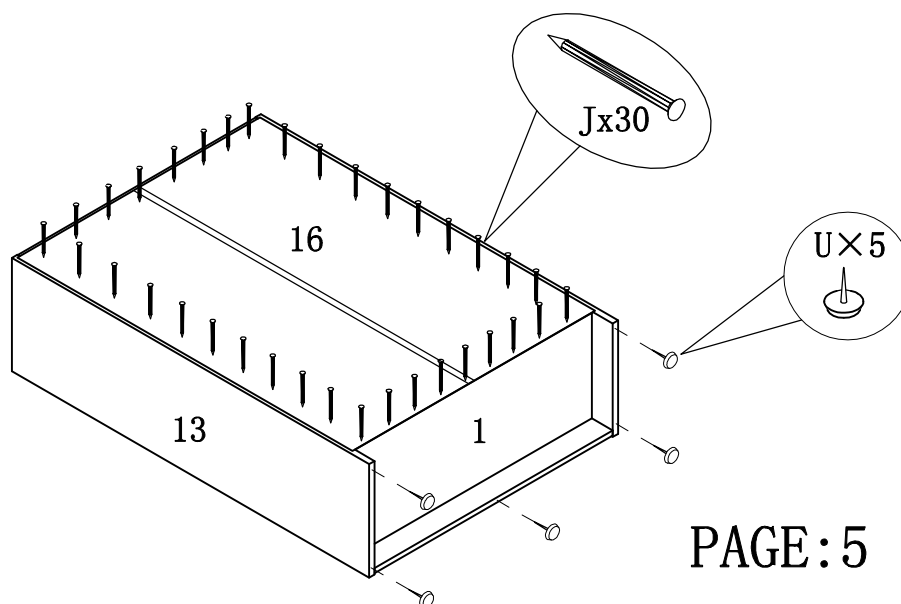


ASSEMBLY INSTRUCTION

ITEM#: SC-6133LCH、SC-6133RC、SC-6133WWSC-6133BE

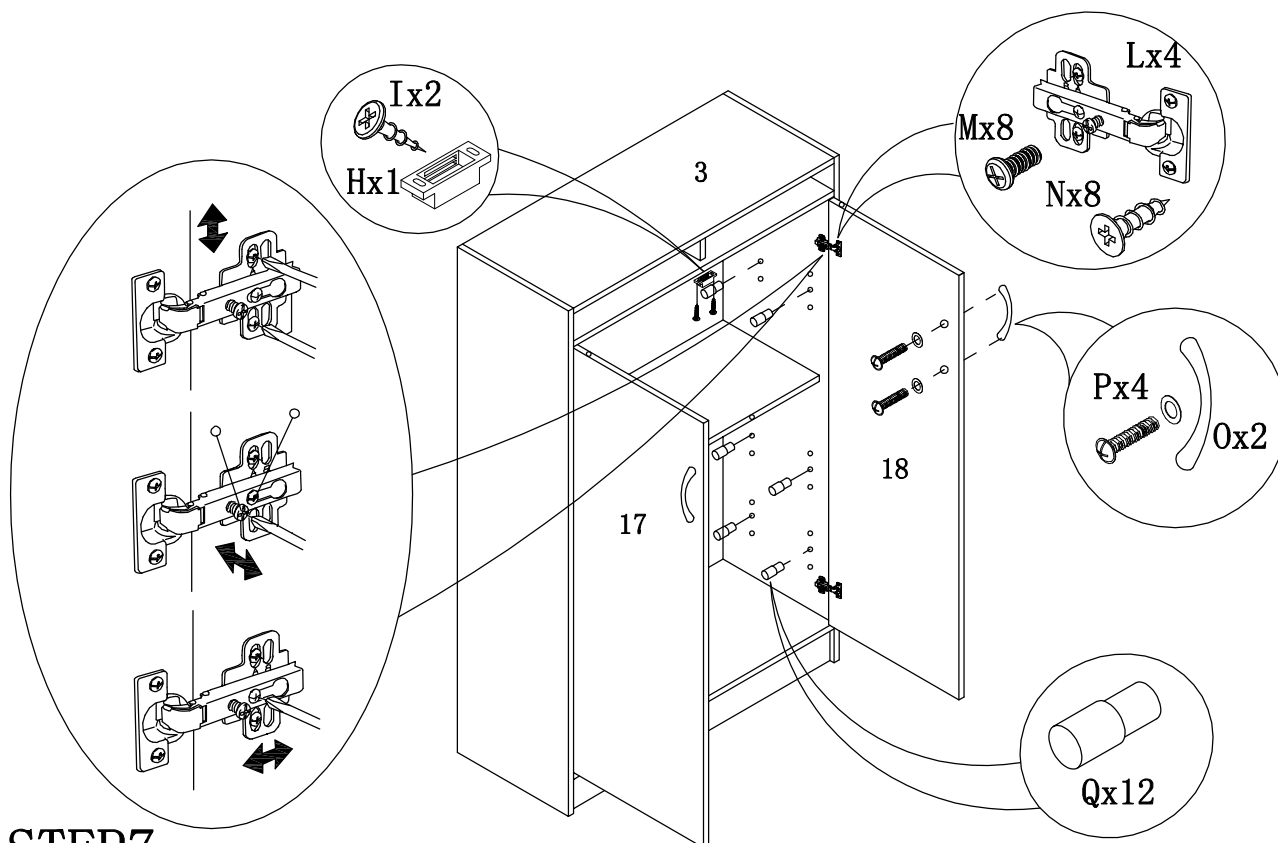


STEP7

STEP8

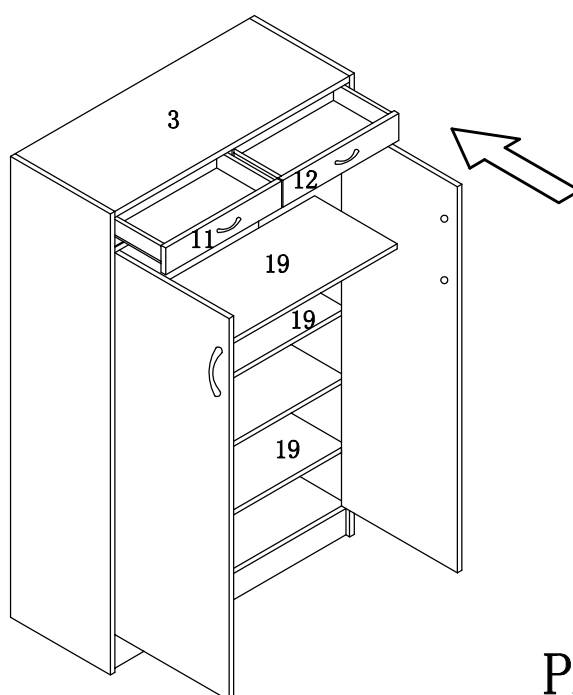


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

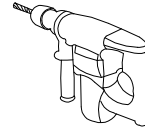


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

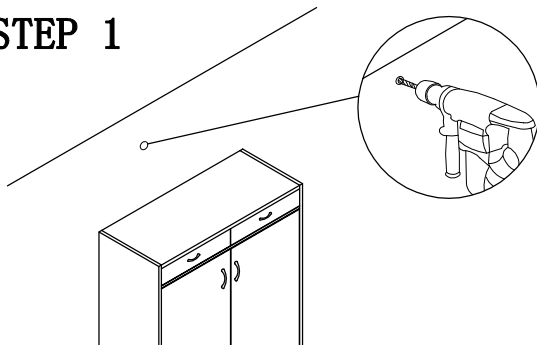


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

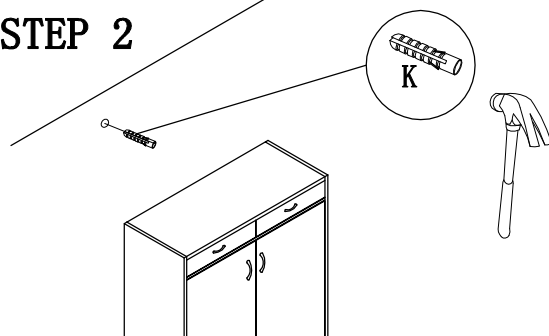


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

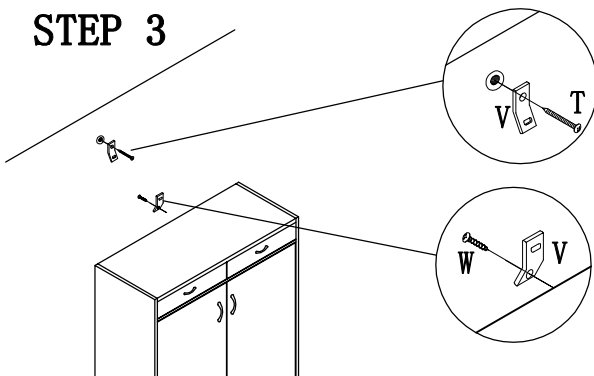

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

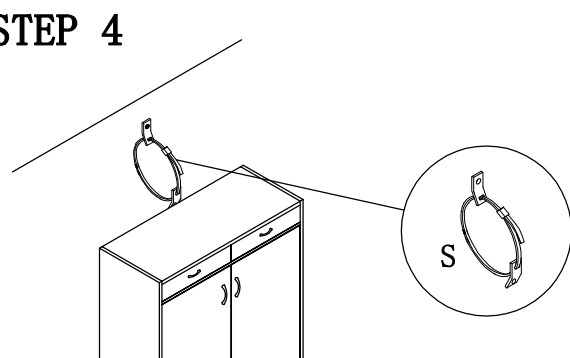

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.