

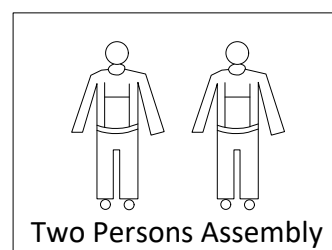
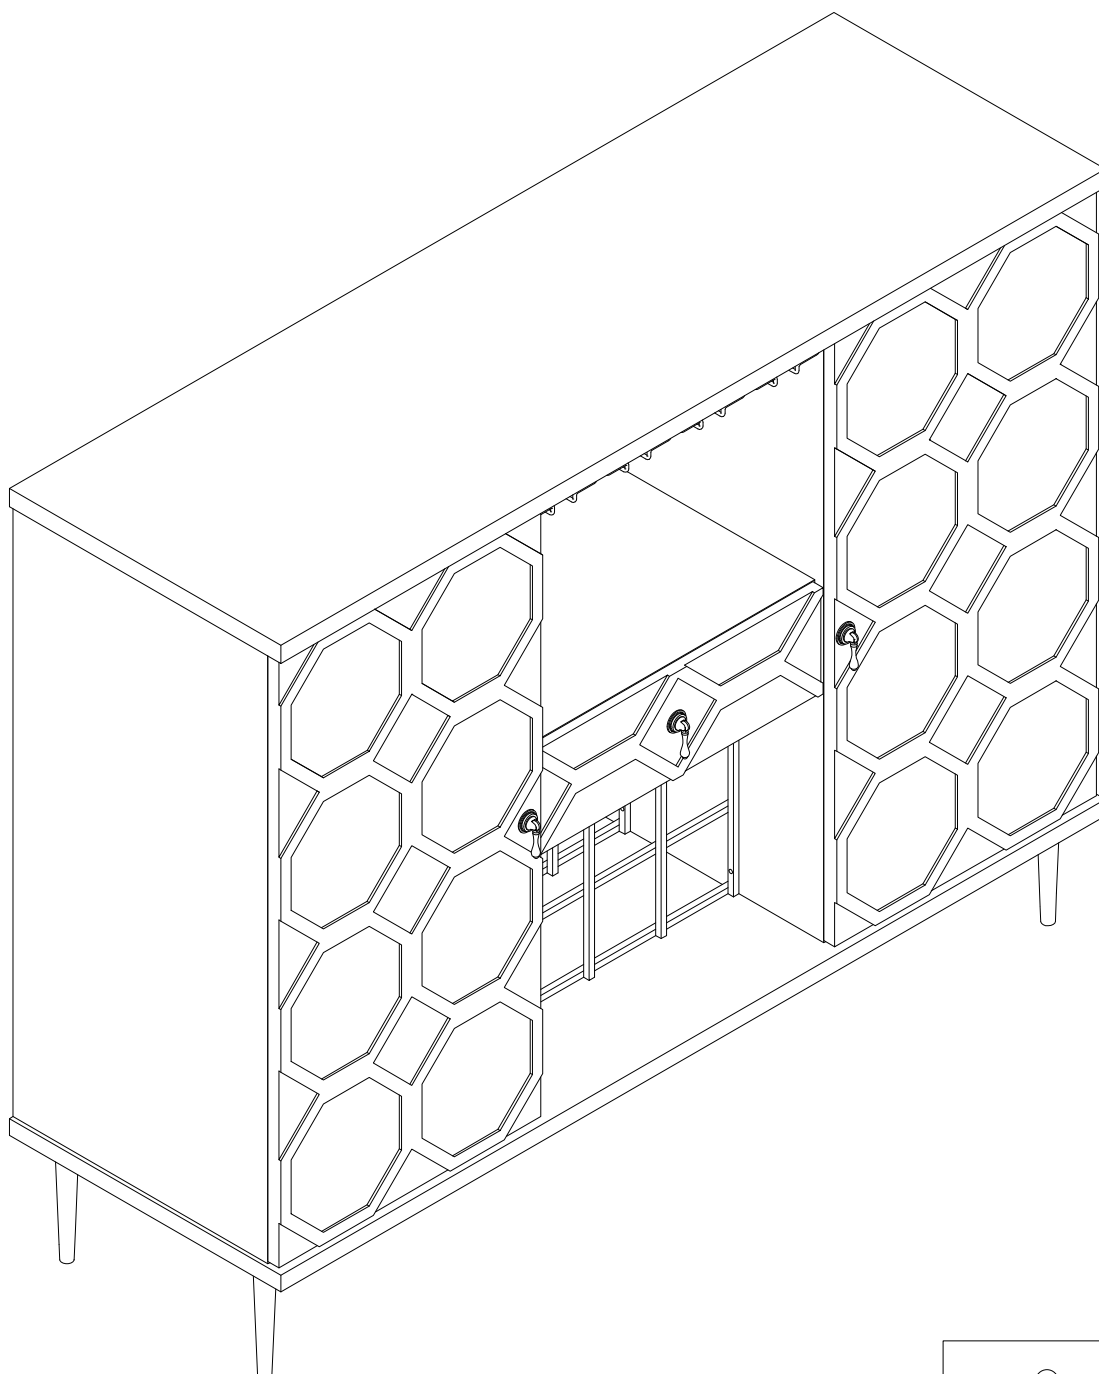
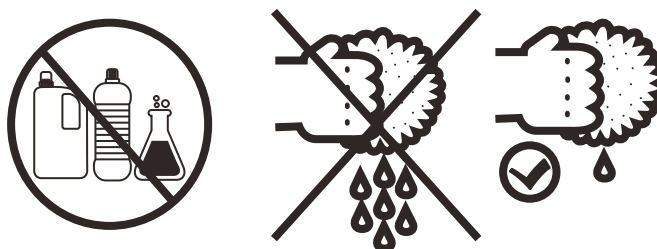
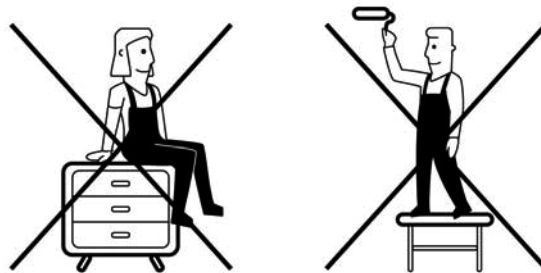
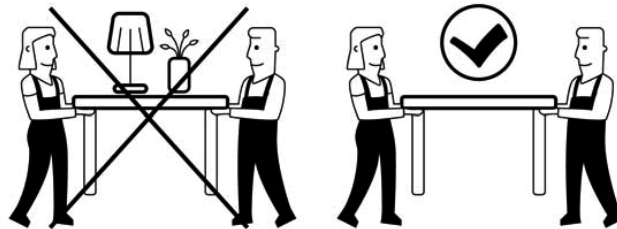



ASSEMBLY INSTRUCTIONS

Item NO.: YJJ260002

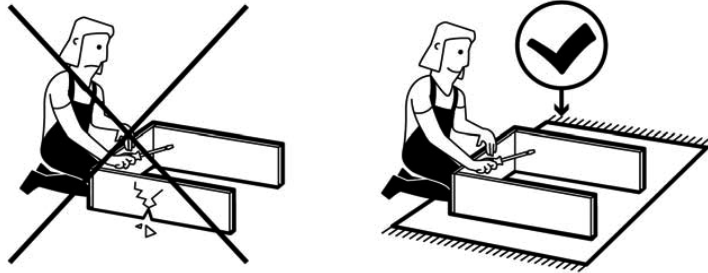

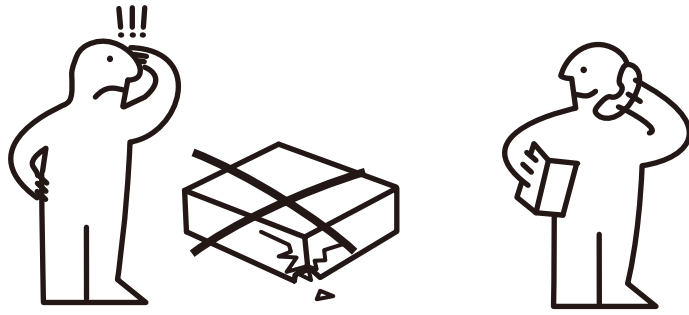


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

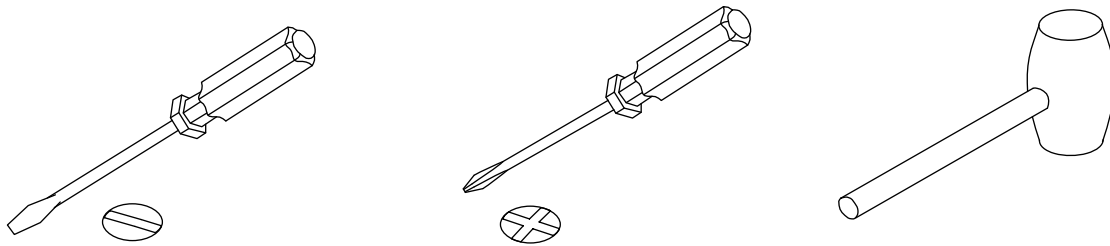

- * Before discarding packing materials, please check all parts and hardware are presented.
- * Please follow the instructions closely.
- * After few days of initial assembly, the product may has acclimated to new environment, please tighten all hardware again.




Dowel Installation

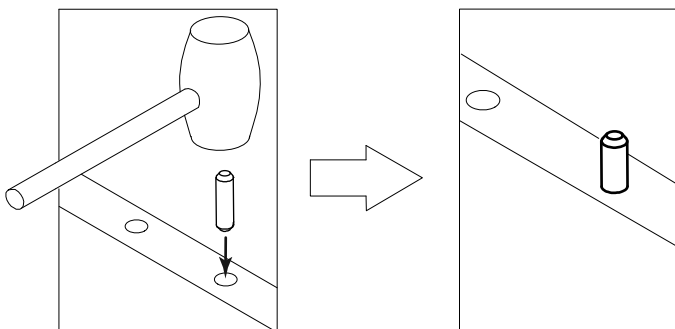

Gently tap dowel into hole with rubber mallet.





CAM-LOCK

Tighten until shoulder is flush with panel. Do not over-tighten or under-tighten.

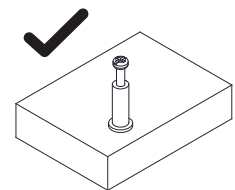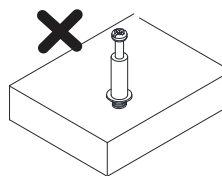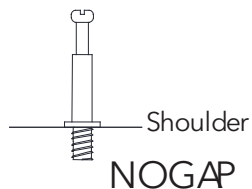


WHEN FITTING CAMS










ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM-PILLAR. TURN CLOCKWISE UNTIL SECURE.

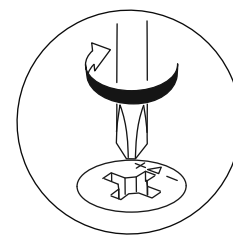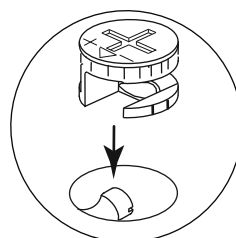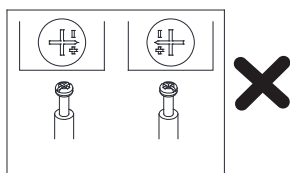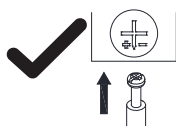


Laying out all the parts and hardware and identifying each part as shown below. It may help you when you assemble the item.

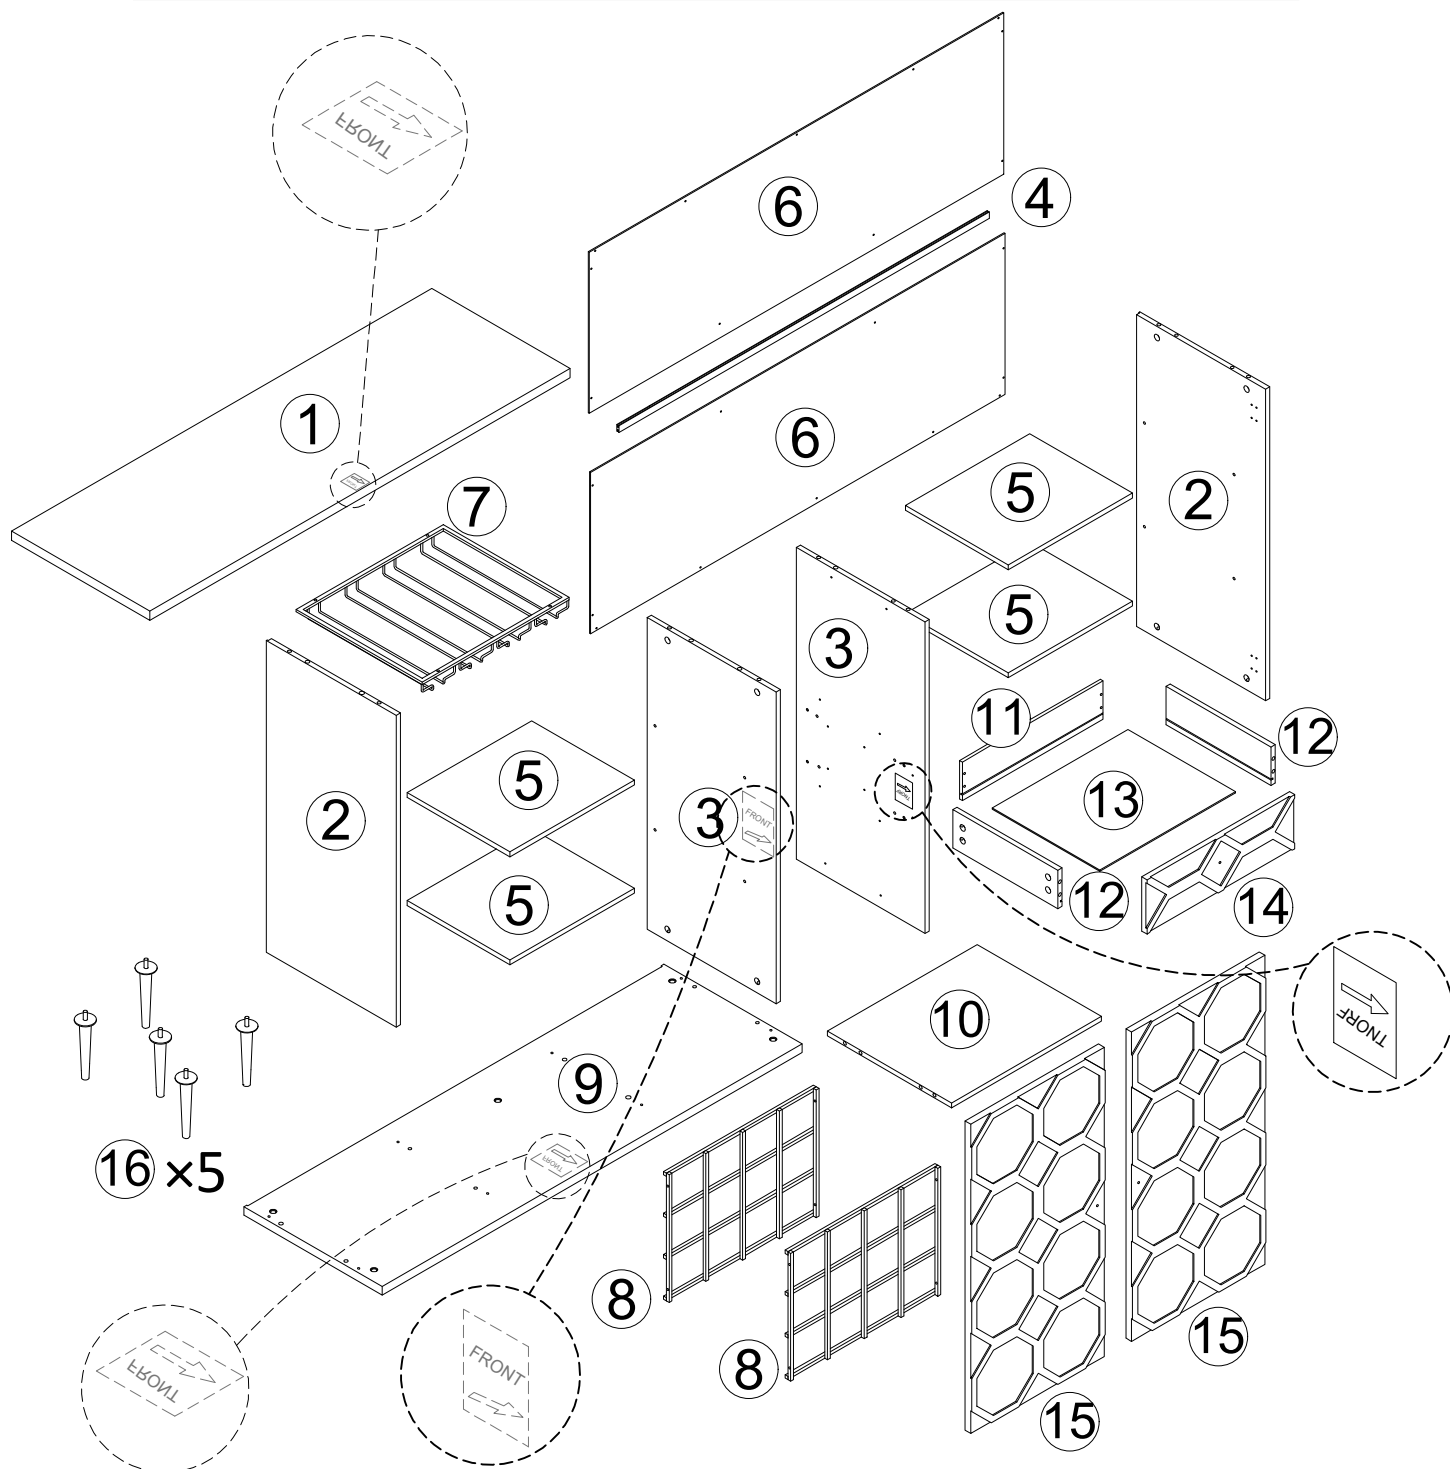


① × 1	② × 2	③ × 2	④ × 1	⑤ × 4	⑥ × 2	⑦ × 1	⑧ × 2
⑨ × 1	⑩ × 1	⑪ × 1	⑫ × 2	⑬ × 1	⑭ × 1	⑮ × 2	⑯ × 5

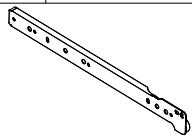


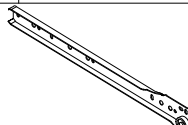




A	×28+2(Spare)		B	×28+2(Spare)		C	×1		D	×3		E	×12+1(Spare)	
ø6×27mm			ø15×9.5mm			M4×16mm						FA3×12mm		
CL	×1		DL	×1		DR	×1		CR	×1		F	×12+1(Spare)	
300mm			300mm			300mm			300mm			FA4×18mm		
G	×1		H	×5		J	×20+2(Spare)		K	×16+1(Spare)		L	×4	
			M6×15L-ø15×7T			FA3×10mm			M5×14mm			ø26mm		
M	×2		N	×24+2(Spare)		O	×2		P	×4		Q	×5+1(Spare)	
FA4×40mm/FA4×12mm			FA4×12mm			M4×18mm			ø8×2mm			ø21 Sticker		
R	×20+1(Spare)													
ø6×30mm														

1

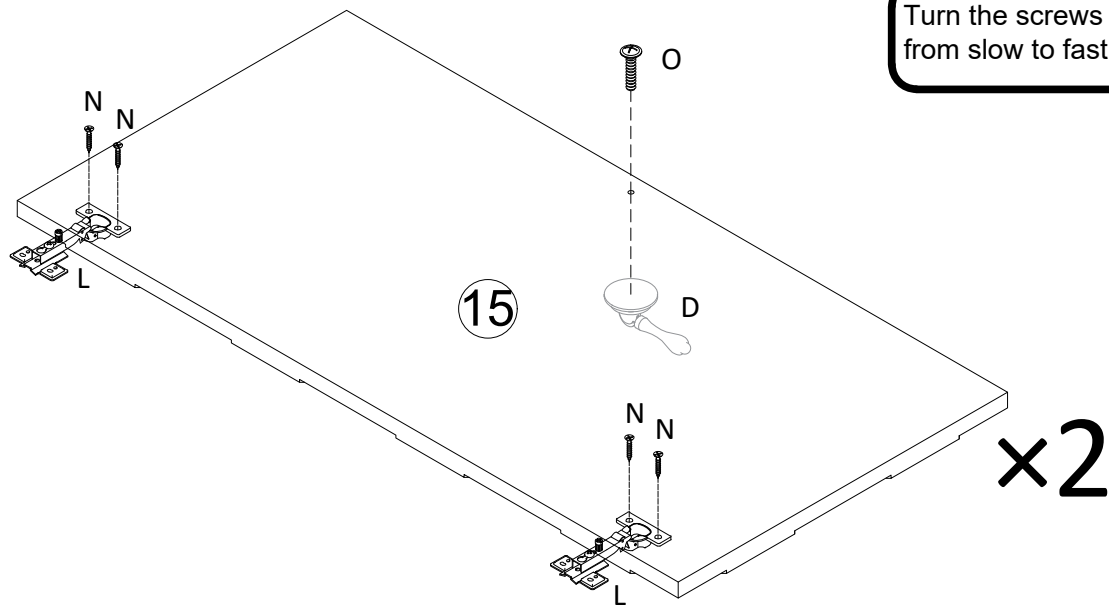


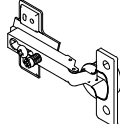N	L	O	D
			
×8	×4	×2	×2


Turn the screws vertically
from slow to fast.

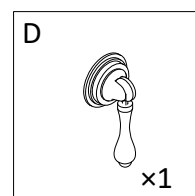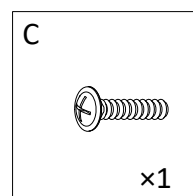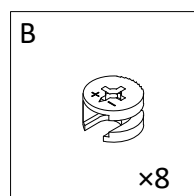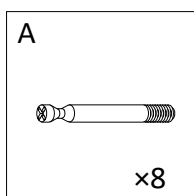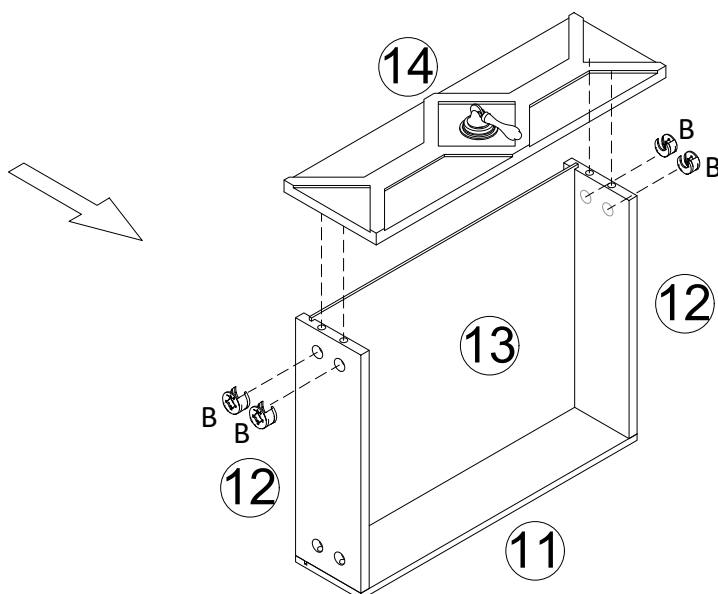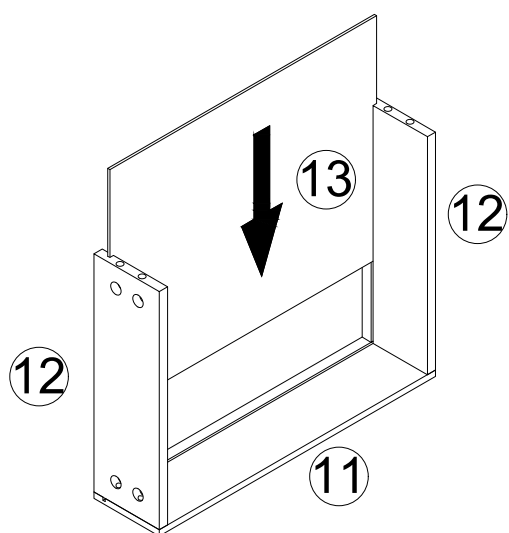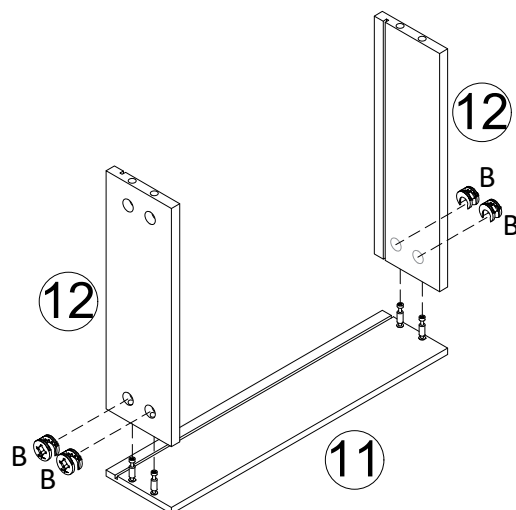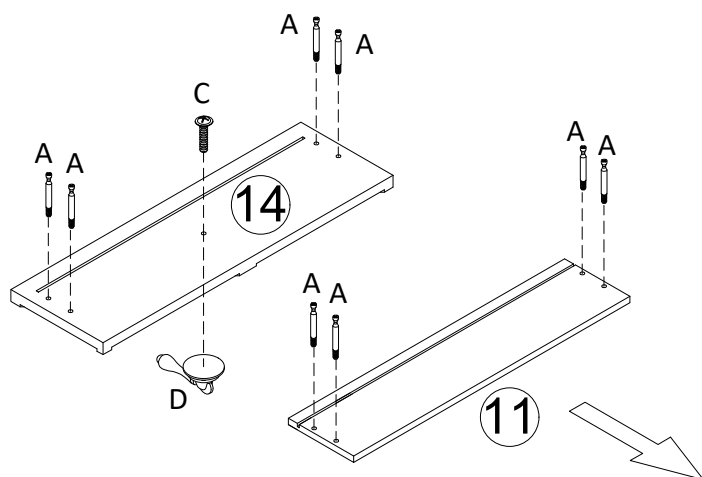










Turn the drawer upside down.

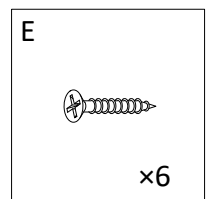




Turn the screws vertically from slow to fast.

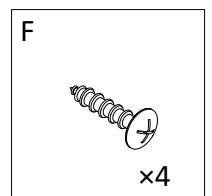




5

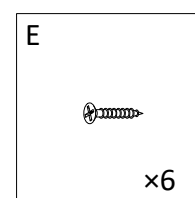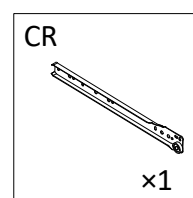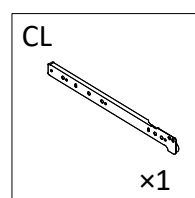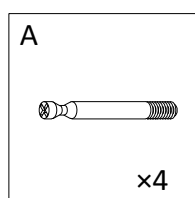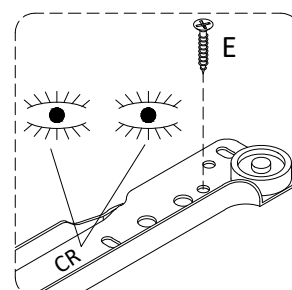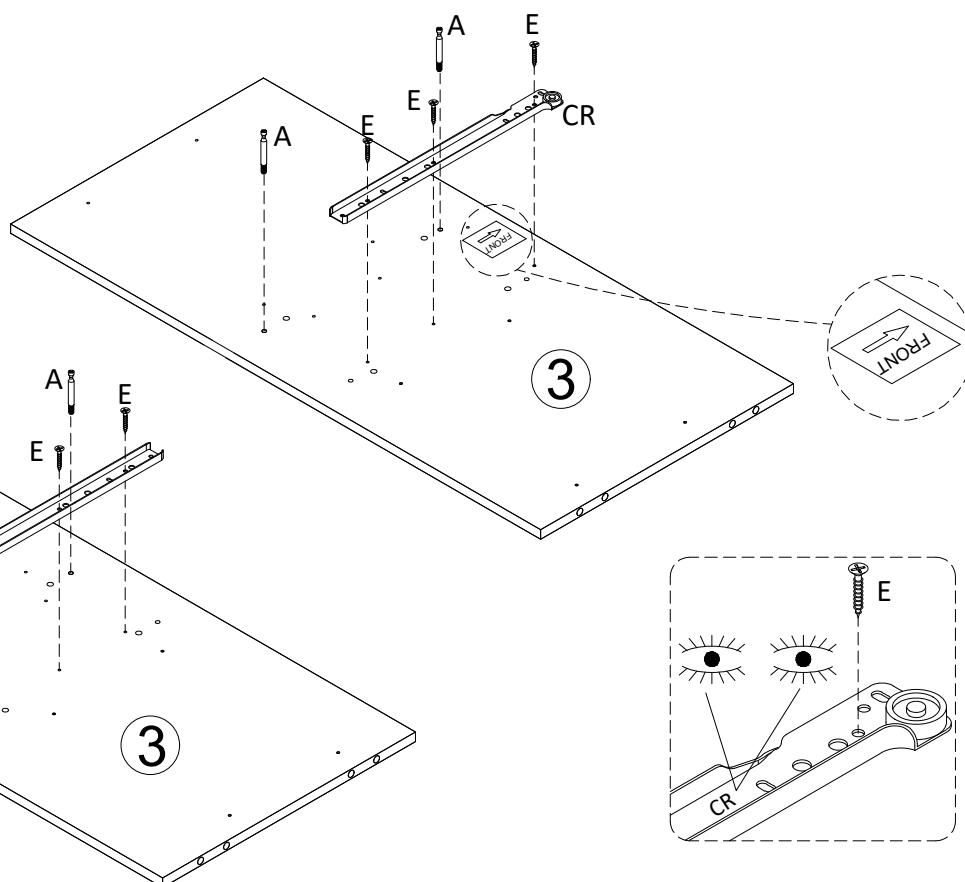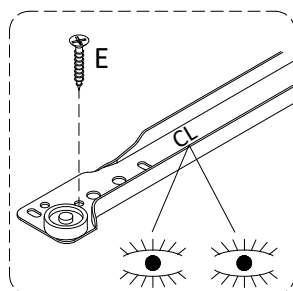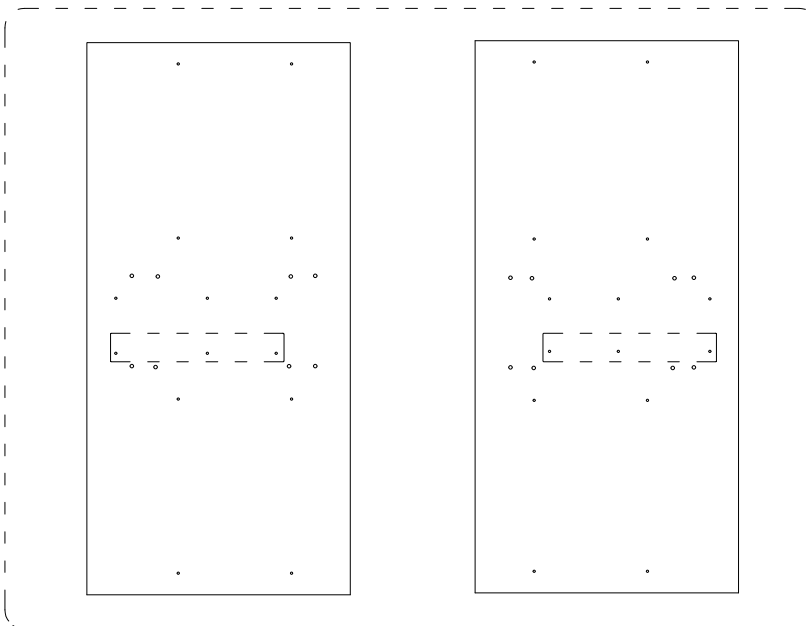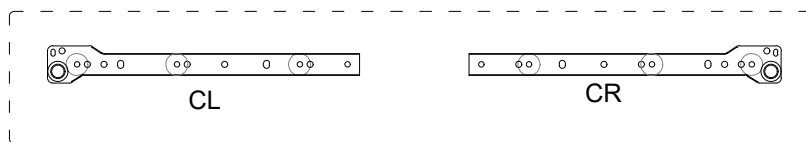

6


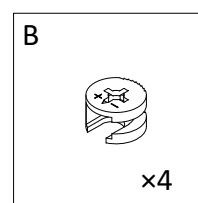
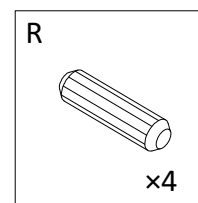
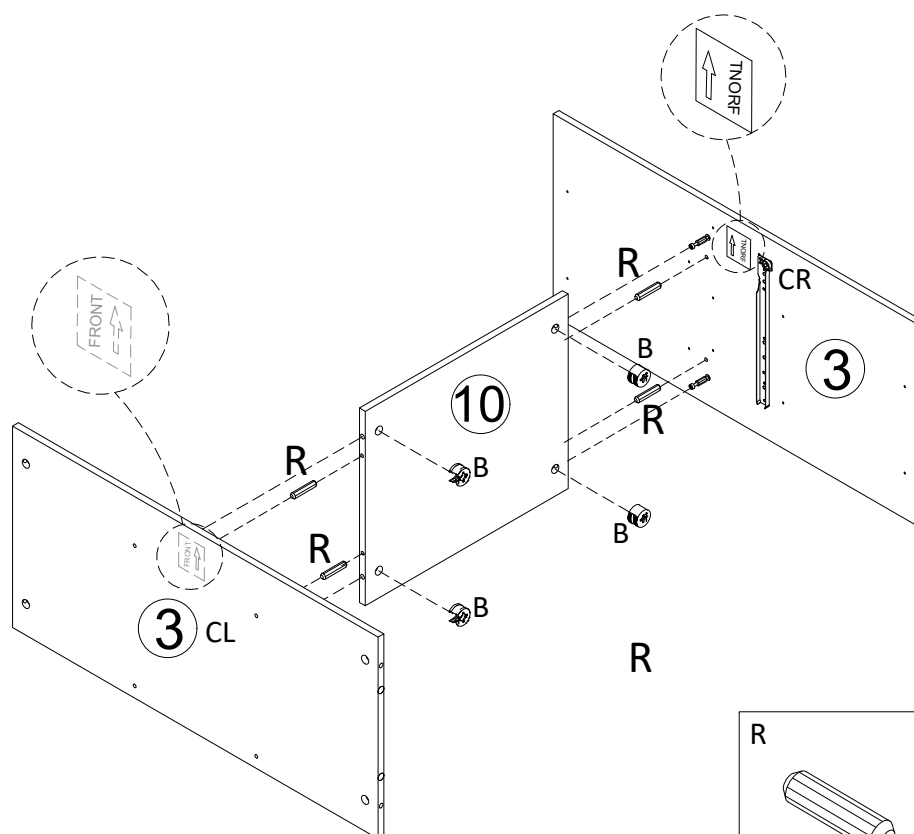


7

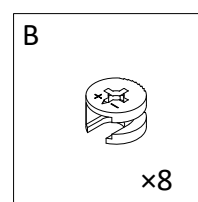
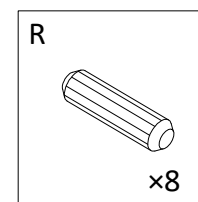
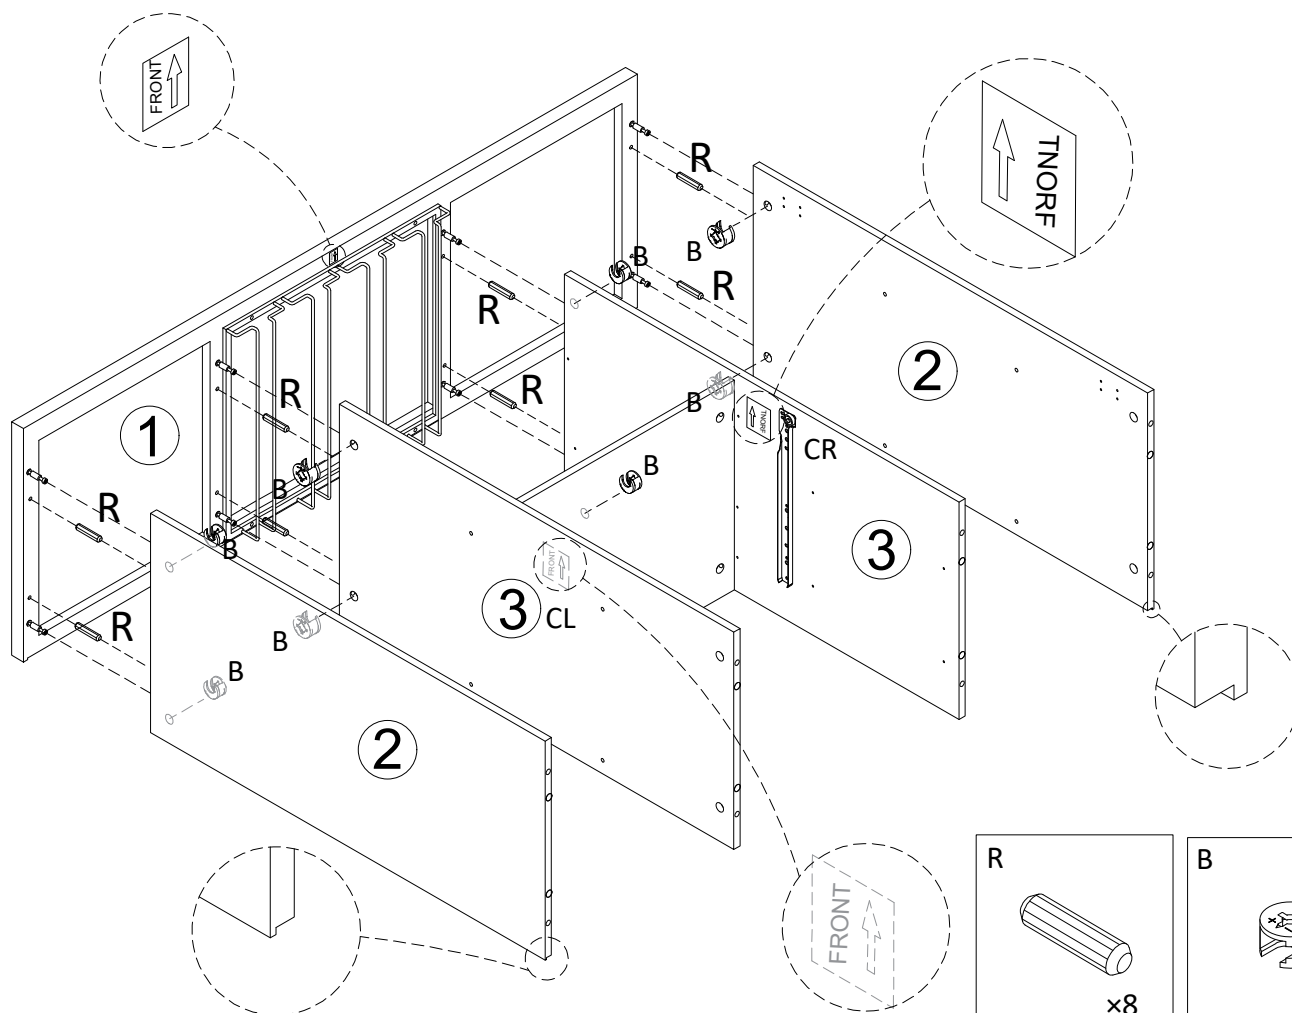


8

Turn the screws vertically
from slow to fast.

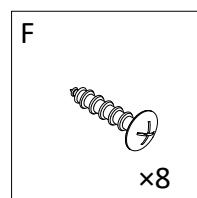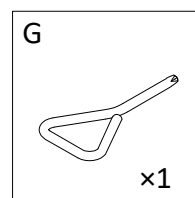
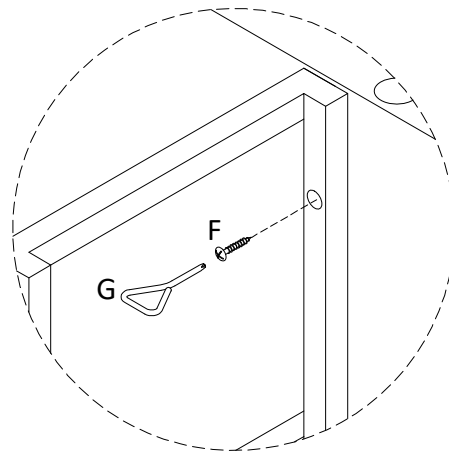
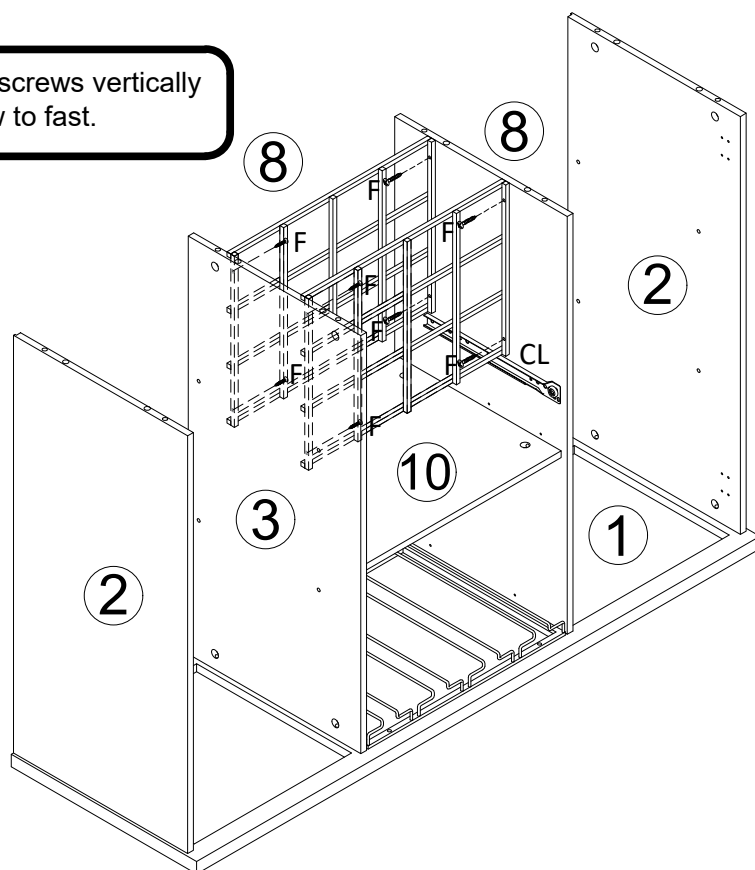


9

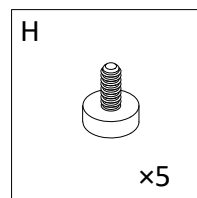
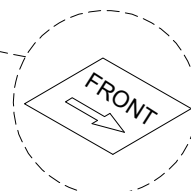
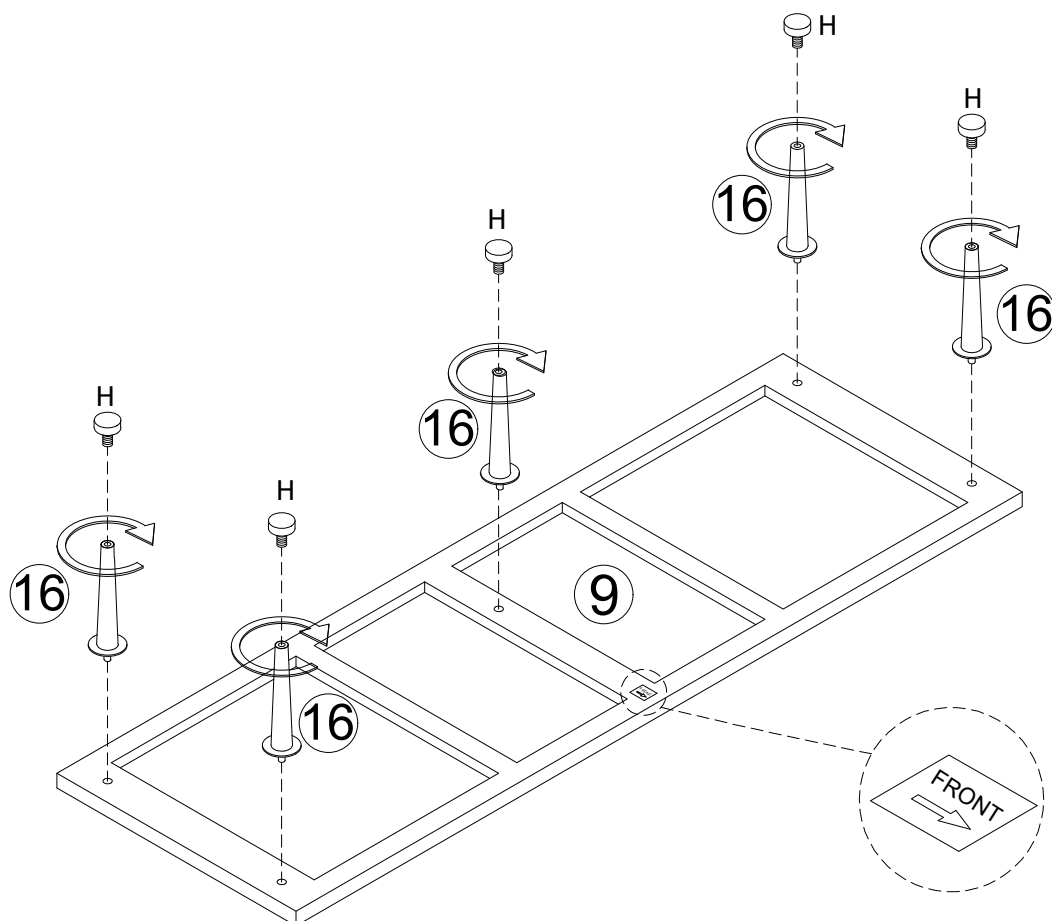


10

Turn the screws vertically
from slow to fast.

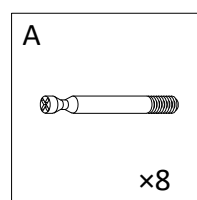
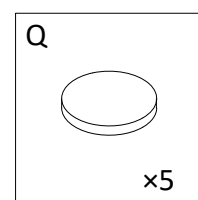
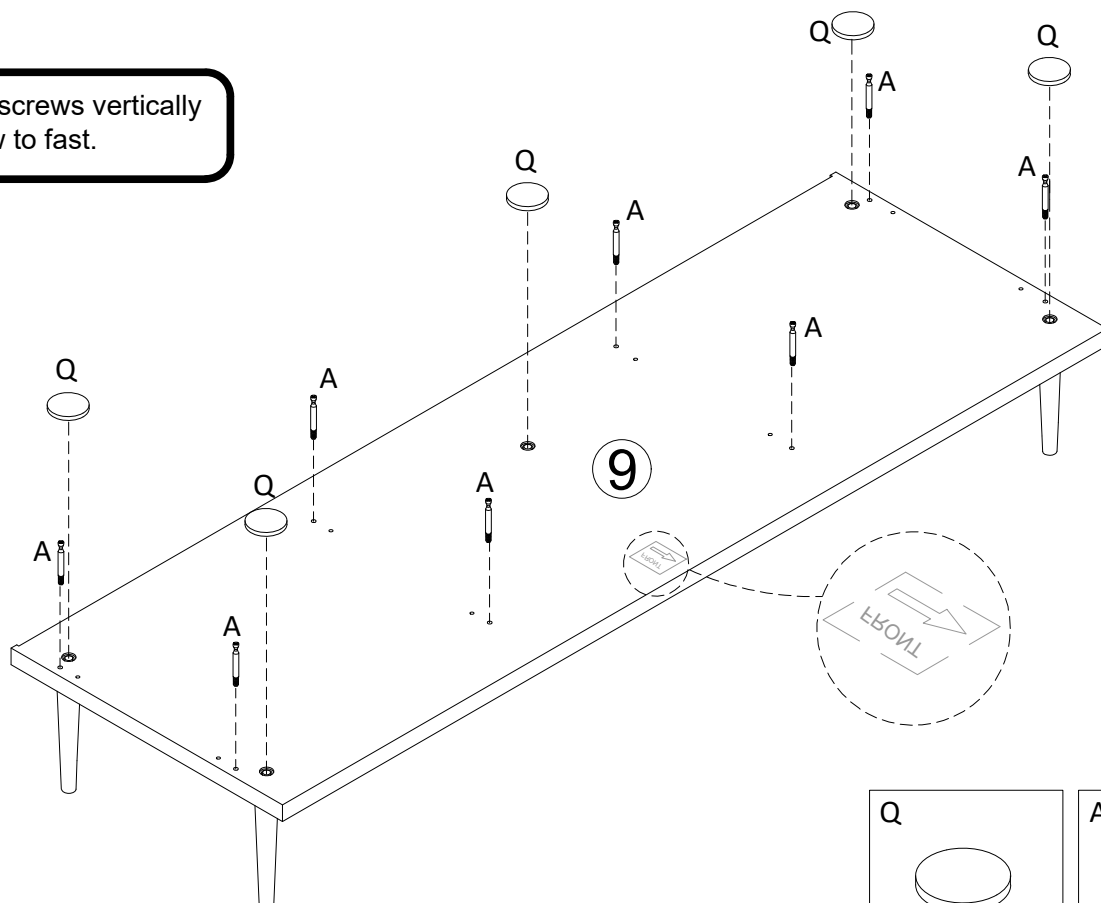


11

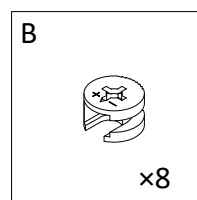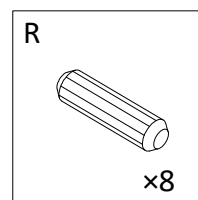
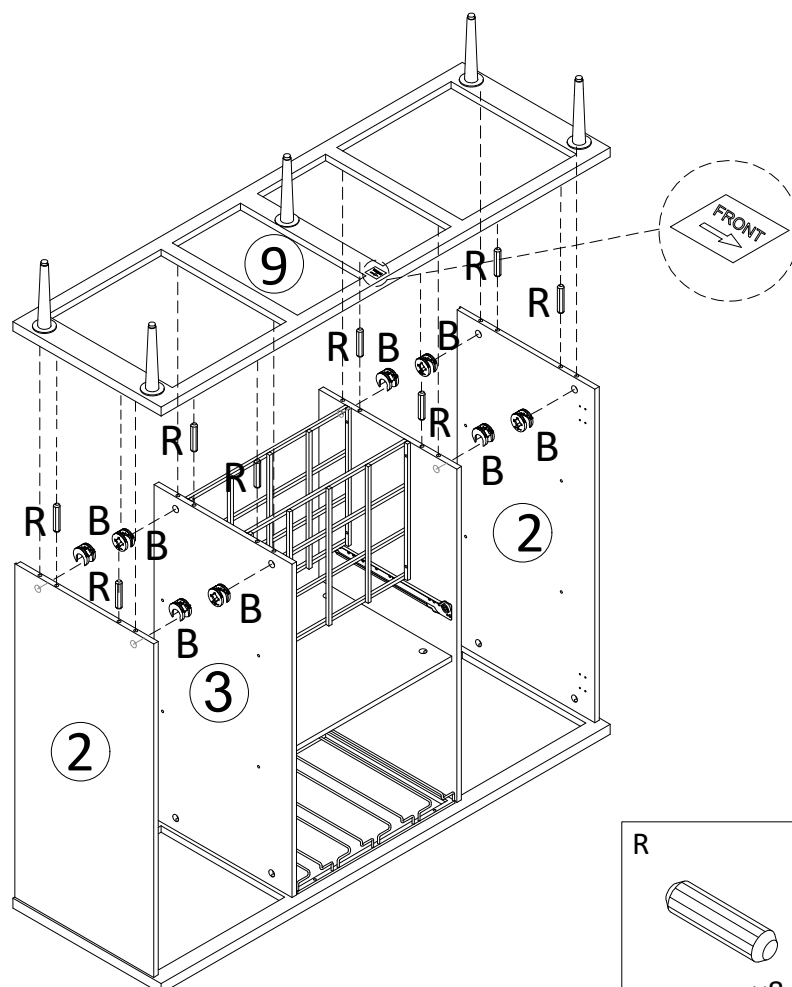


12


Turn the screws vertically
from slow to fast.

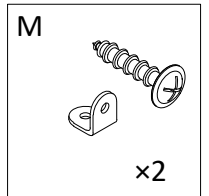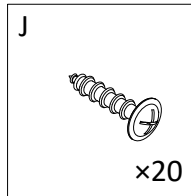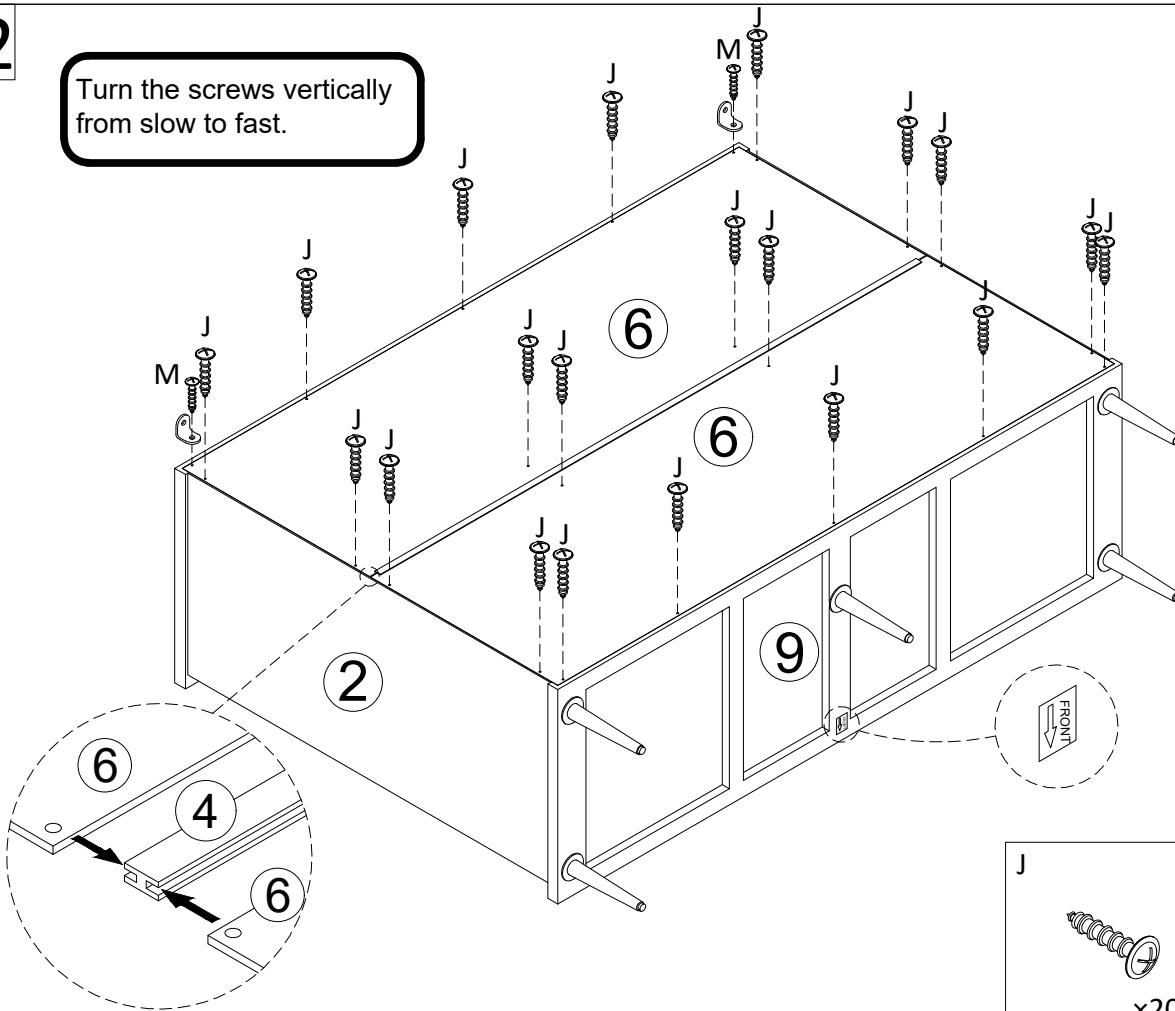

13

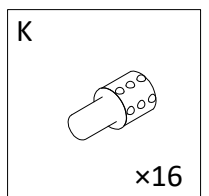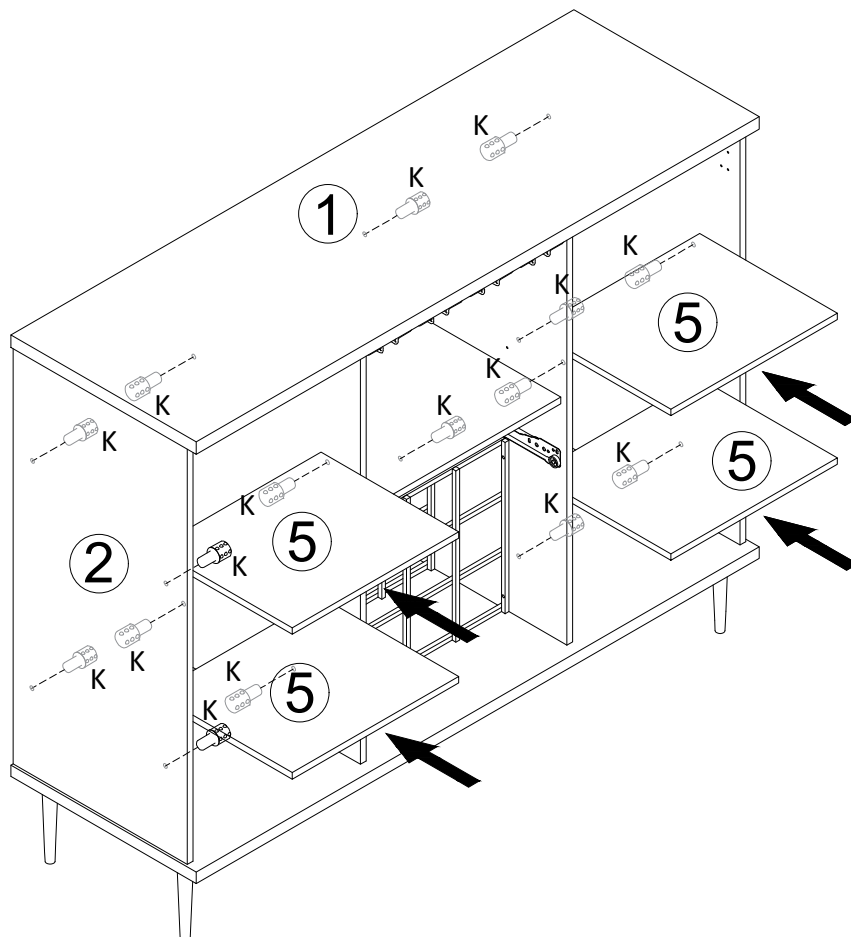


STEP (1)

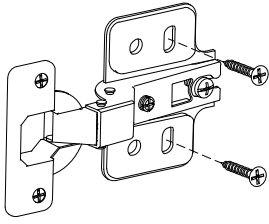


Tips: Turning the screw to approx 50% tightness, don't be fully tight.

STEP (2)

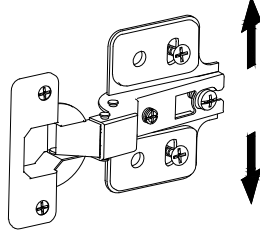


Tips: Moving the hinges up or down appropriately to adjust the gap between the door with the cabinet top and bottom.

STEP (3)

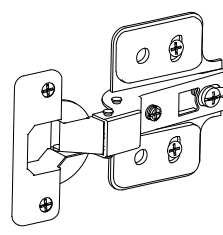




Tips: Tightening the screws completely.

STEP (4)

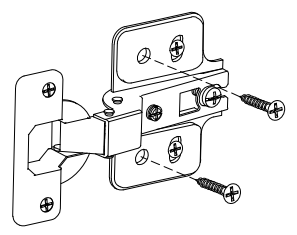




Tips: Tightening the other screws completely.

Turn the screws vertically from slow to fast.

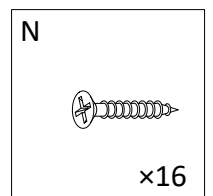
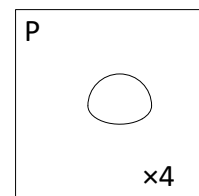
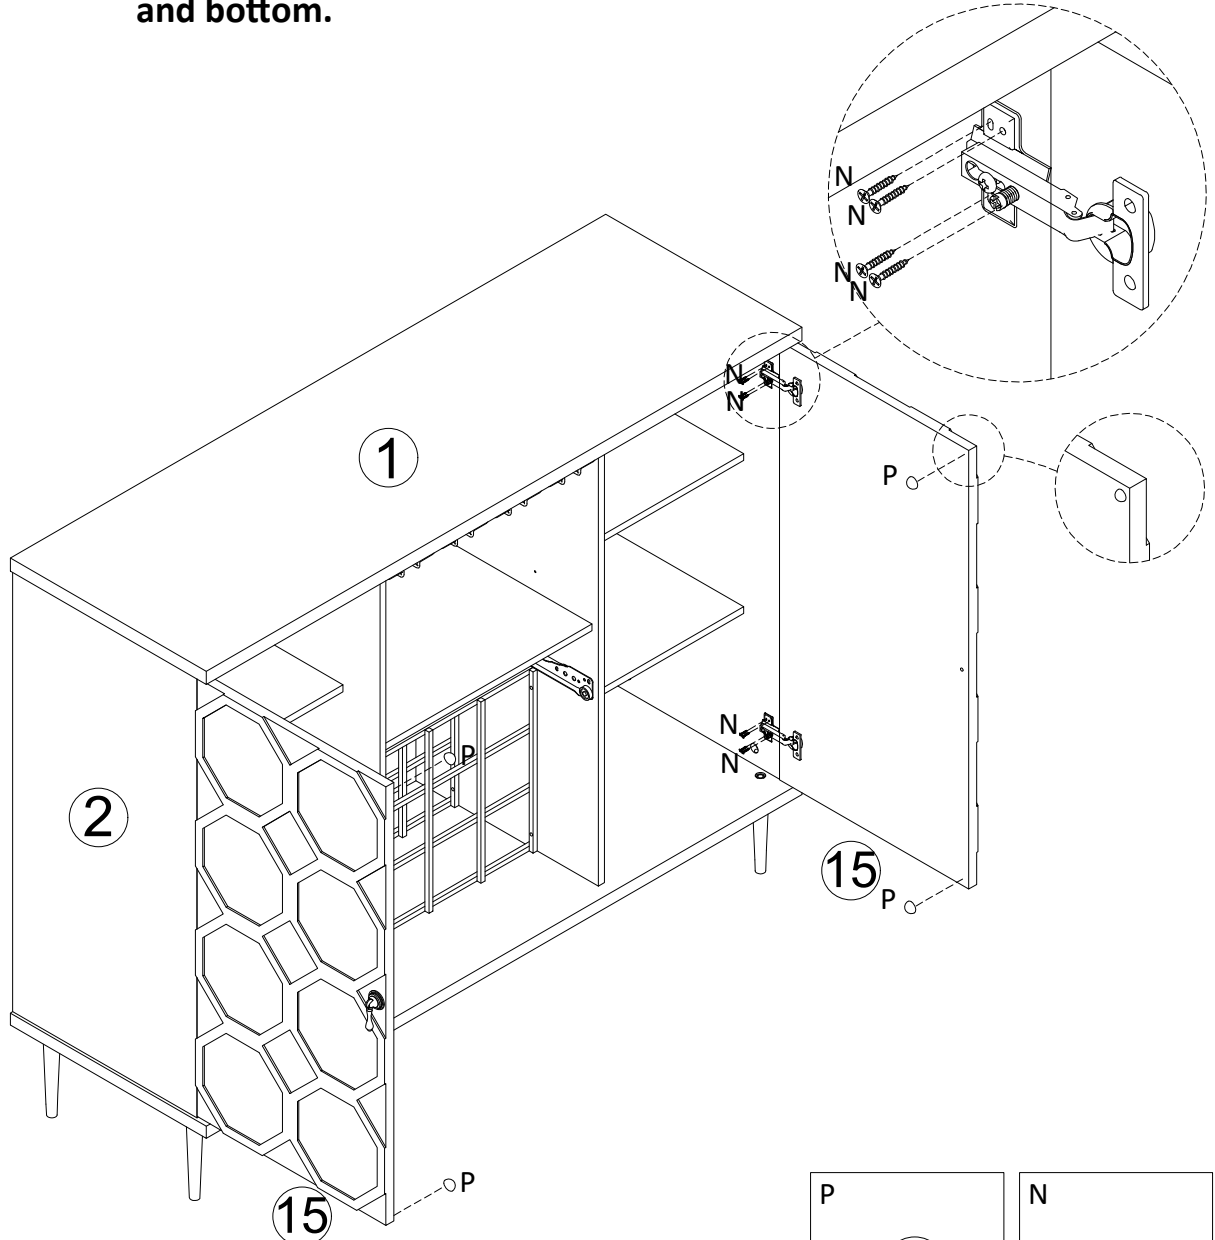


15





Tips: If the gap between two doors is too far or close, please turning the screw as shown below.

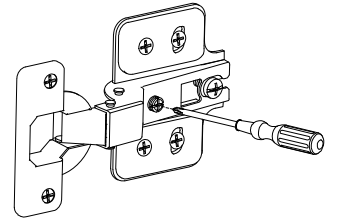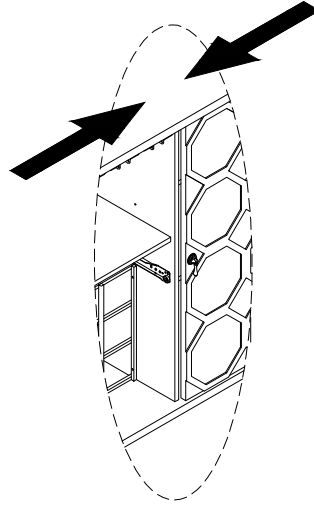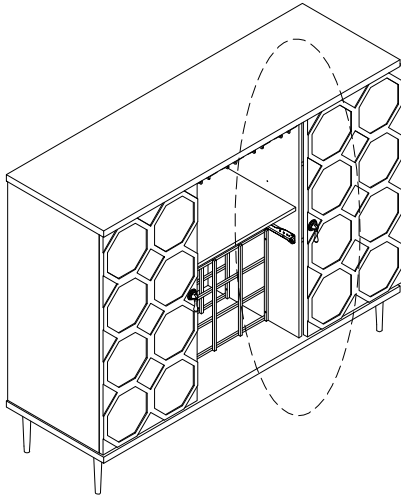


Tips: Adjusting the screw as shown in the following picture can make the door move forward or backward.

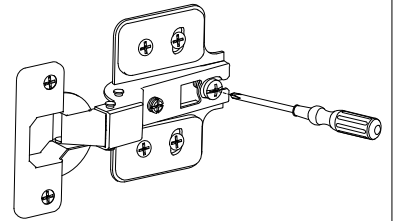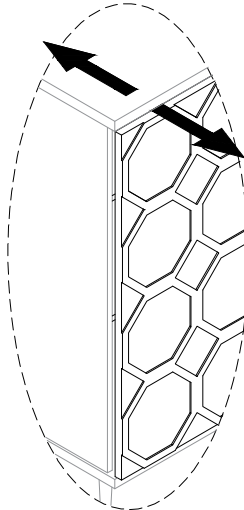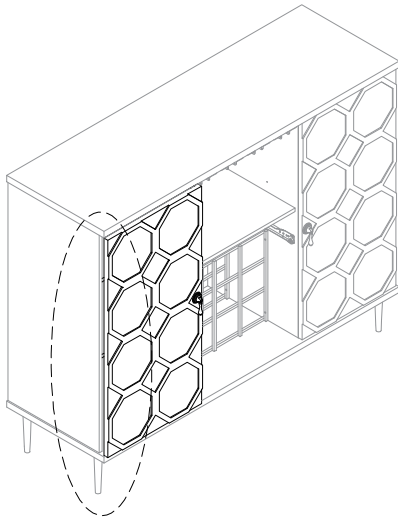

Tips: Adjusting the levelers appropriately underneath the bottom of the foot can make the gaps between the door and frames of cabinet even.

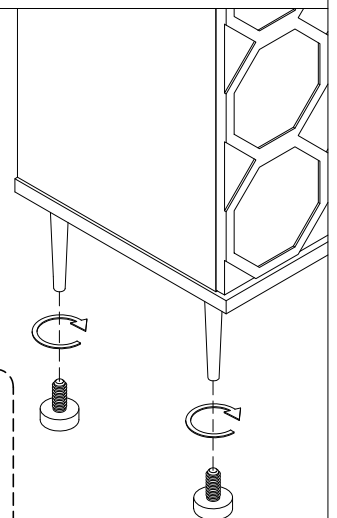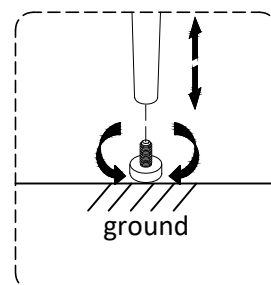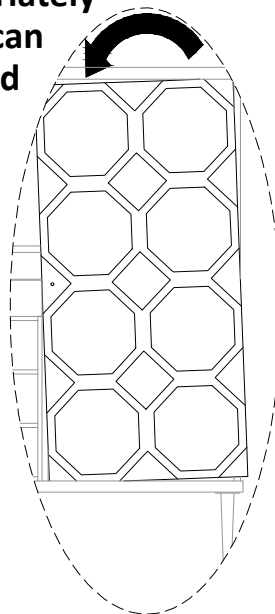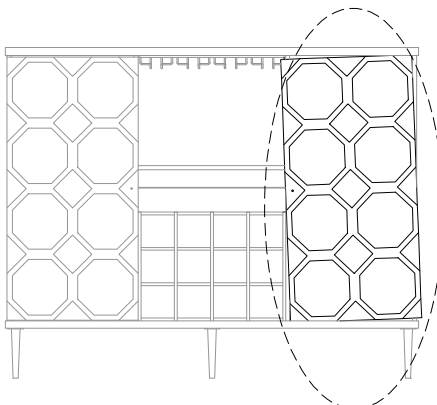

16

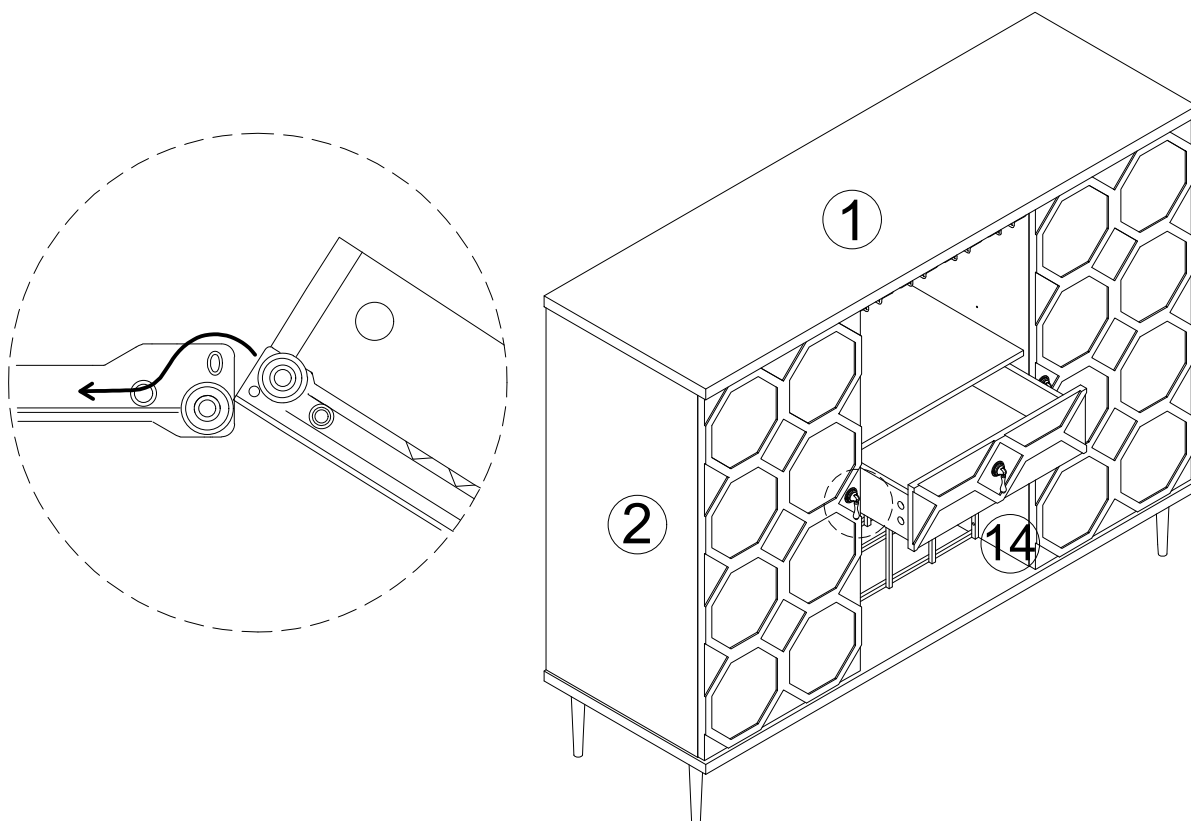

17

