


# Twin Bed


## ASSEMBLY INSTRUCTIONS

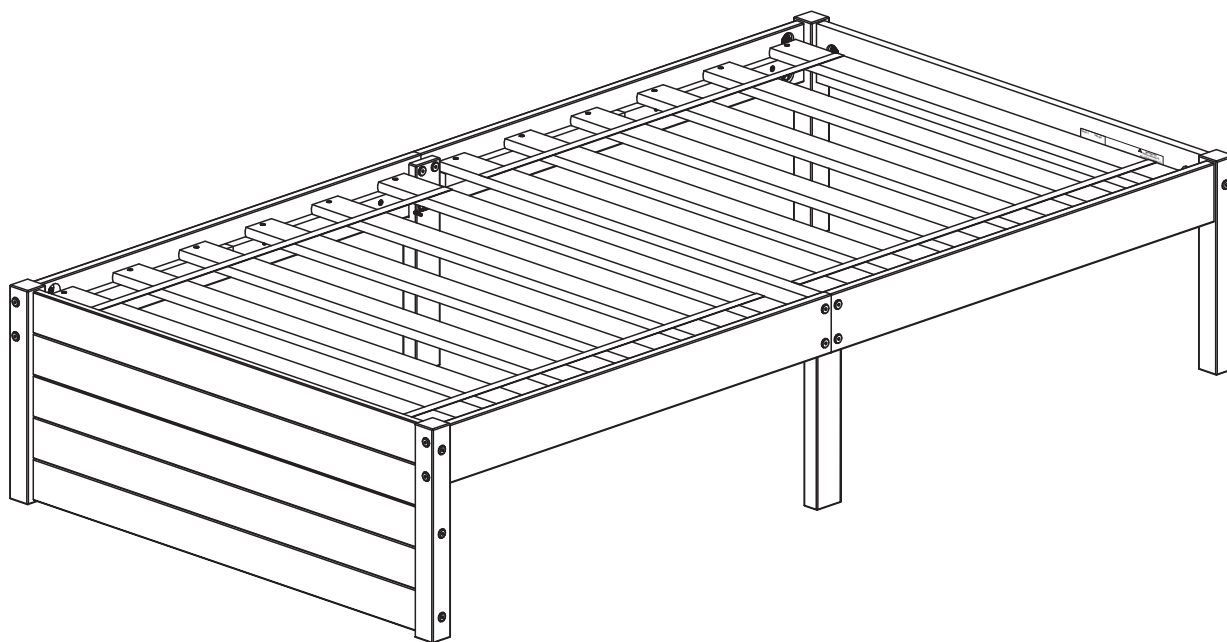


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**

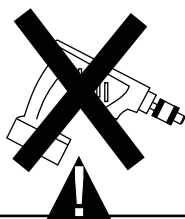


- \* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
- \* Please assemble on a clean soft surface to avoid damage.

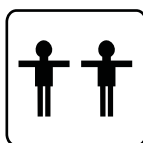


+

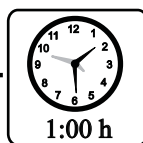

### Tools Required



(Not included)



(Not included)

### IMPORTANT:


**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

Part list: Twin Bed











PRODUCT: TWIN BED	<b>WARNING</b> California Proposition 65 This product can expose you to chemicals, including formaldehyde which is known to the State of California to cause cancer. For more information, go to <a href="http://www.P65Warnings.ca.gov/furniture">www.P65Warnings.ca.gov/furniture</a>
MADE IN BRAZIL	FOR RESIDENTIAL USE ONLY NOT FOR COMMERCIAL USE MADE IN BRAZIL

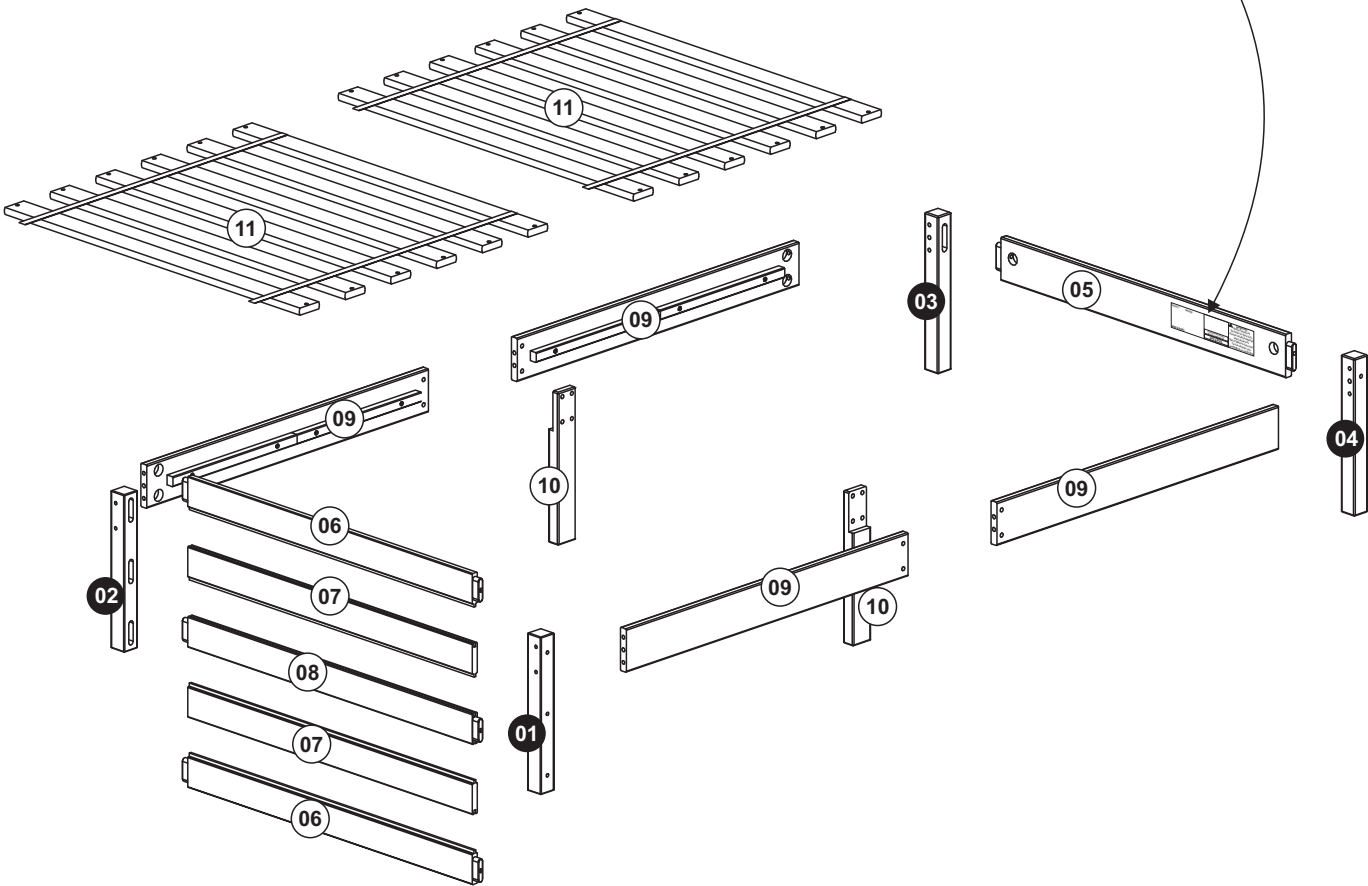**MANUFACTURER LABEL**




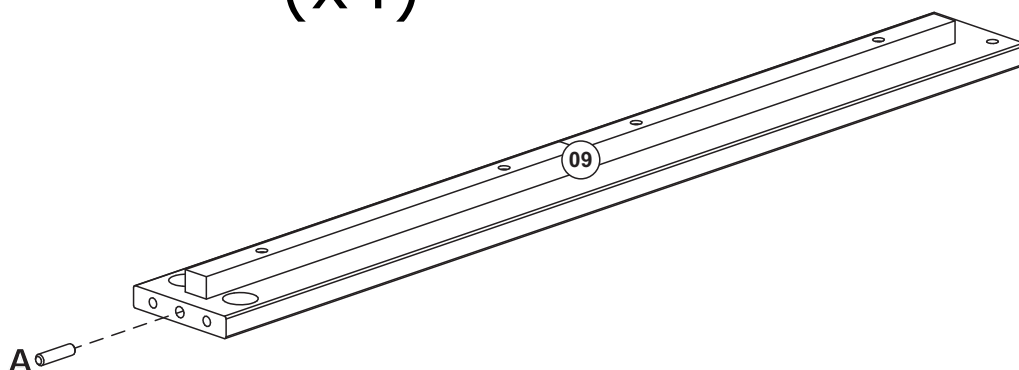
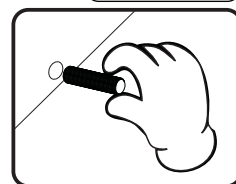

**Identifying the Hardware**-Identify the hardware using the illustrations below.

<b>A</b>	 Ø10x40mm	<b>08</b>	<b>E</b>	 1/4" HALF MOON	<b>10</b>
<b>B</b>	 Ø7x70mm	<b>06</b>	<b>F</b>	 1/4	<b>16</b>
<b>C</b>	 1/4x90mm	<b>10</b>	<b>G</b>		<b>08</b>
<b>D</b>	 Ø4x30mm	<b>24</b>	<b>H</b>		<b>02</b>





# 01


(x4)

<b>A</b>	 Ø10x40mm	<b>04</b>
----------	--	-----------





# 02




<b>B</b>	 Ø7x70mm	<b>06</b>	<b>E</b>	 1/4" HALF MOON	<b>02</b>
<b>C</b>	 1/4x90mm	<b>02</b>	<b>H</b>		<b>01</b>

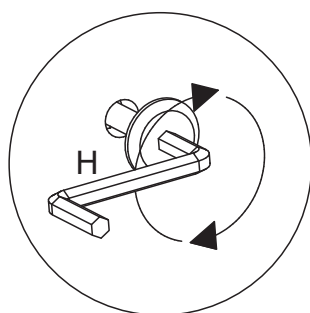


**TOP**

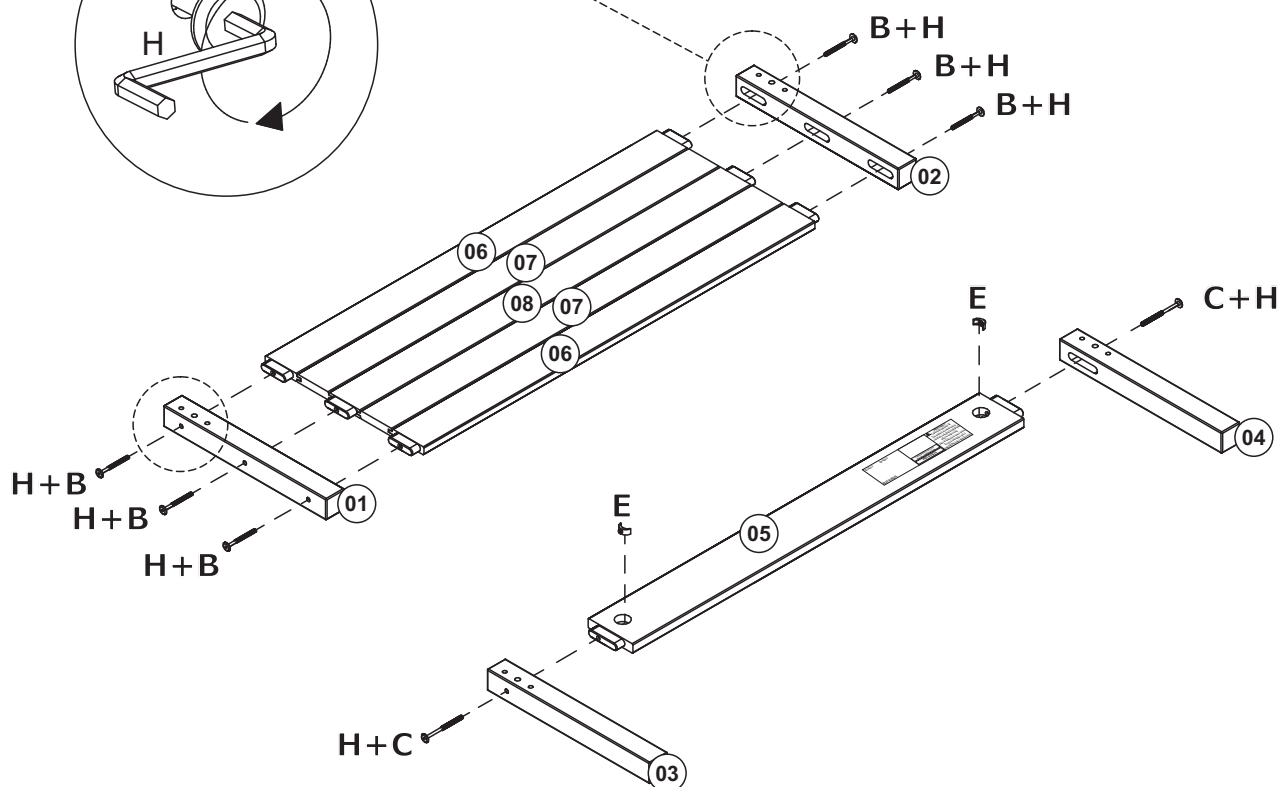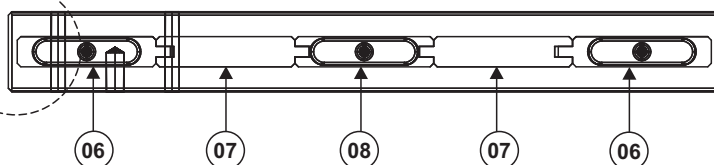



# 03

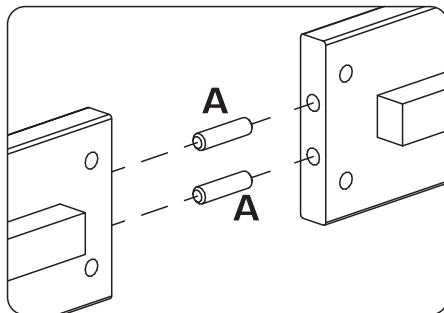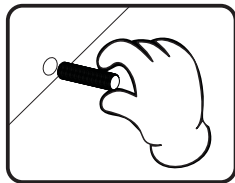


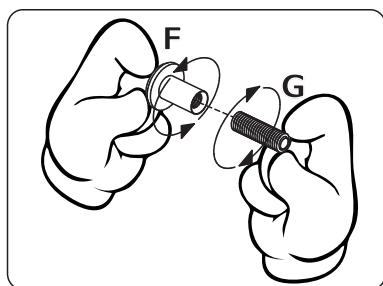


(x2)




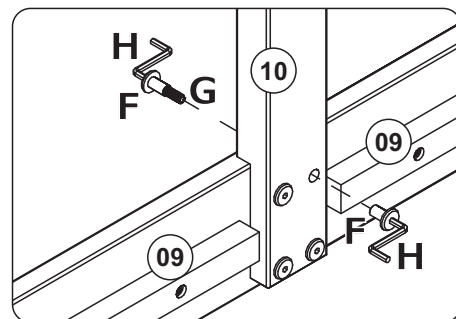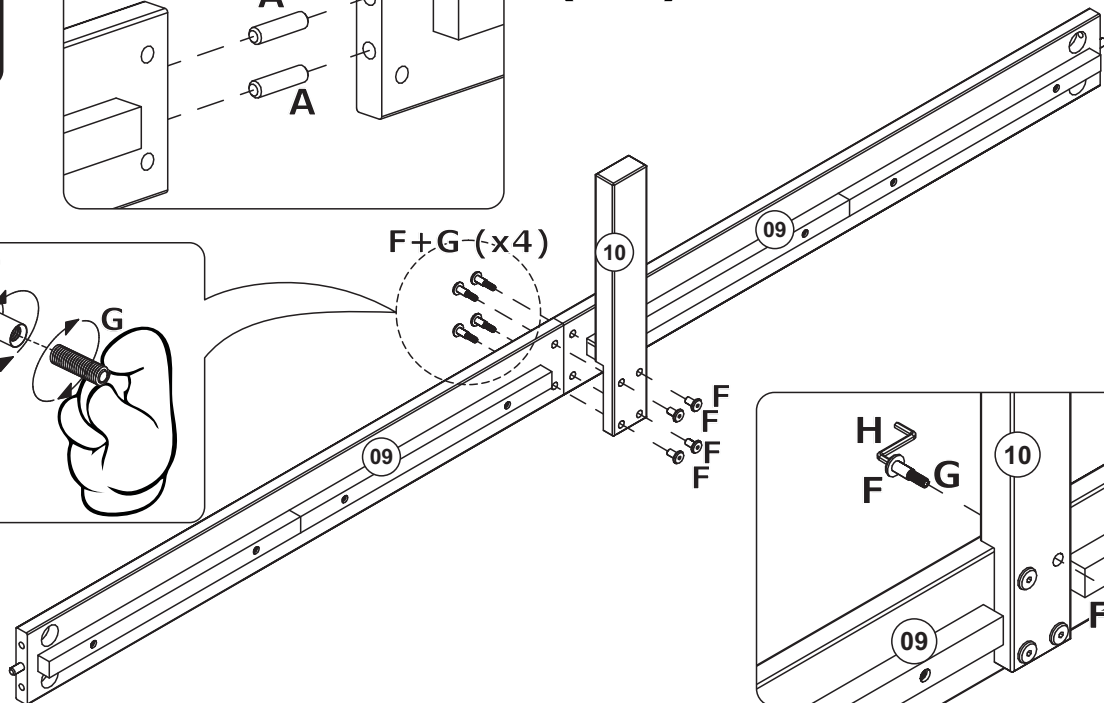


F+G-(x4)




<b>A</b>	 Ø10x40mm	<b>04</b>	<b>G</b>		<b>08</b>
<b>F</b>	 1/4	<b>16</b>	<b>H</b>		<b>02</b>
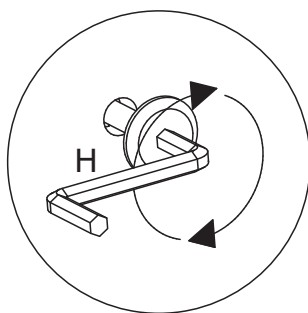
# 04



<b>C</b>	 1/4x90mm	<b>04</b>	<b>E</b>	 1/4" HALF MOON	<b>04</b>
			<b>H</b>		<b>01</b>

H+C  
H+C

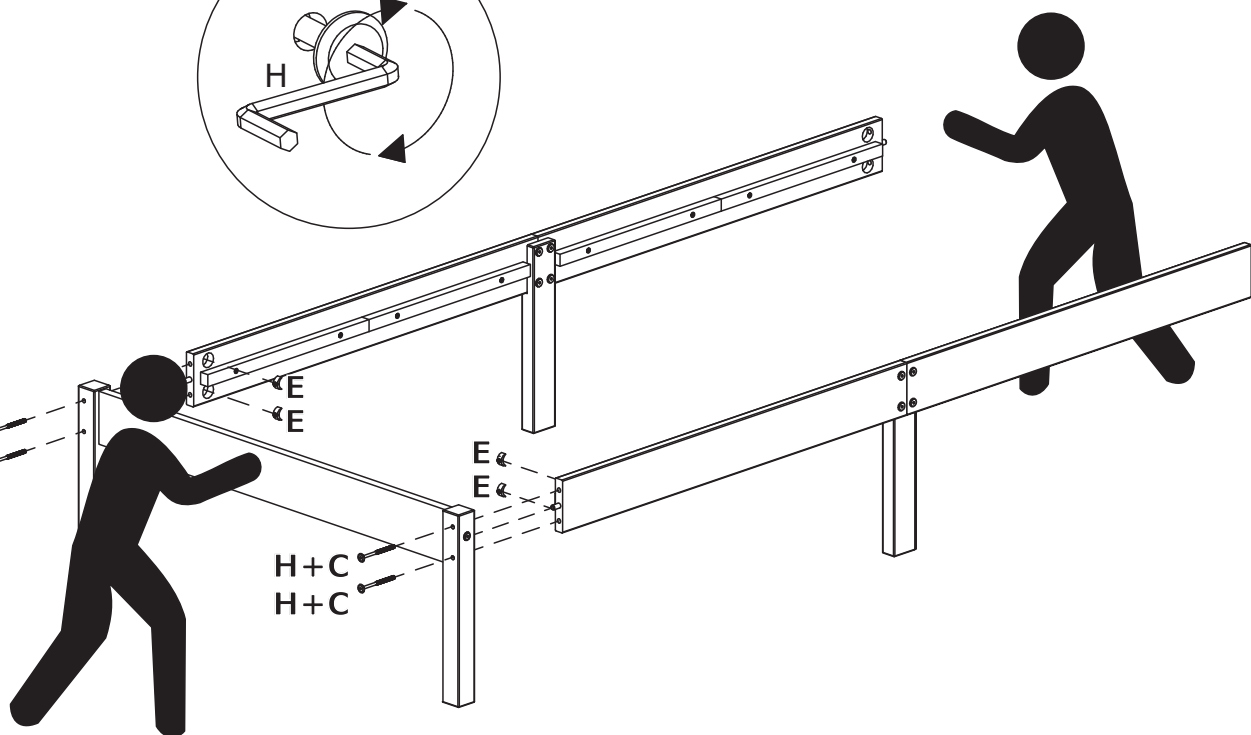


H+C  
H+C

E  
E

# 05

**C**



**04**


**E**





1/4"  
HALF MOON

**04**

**H**



**01**

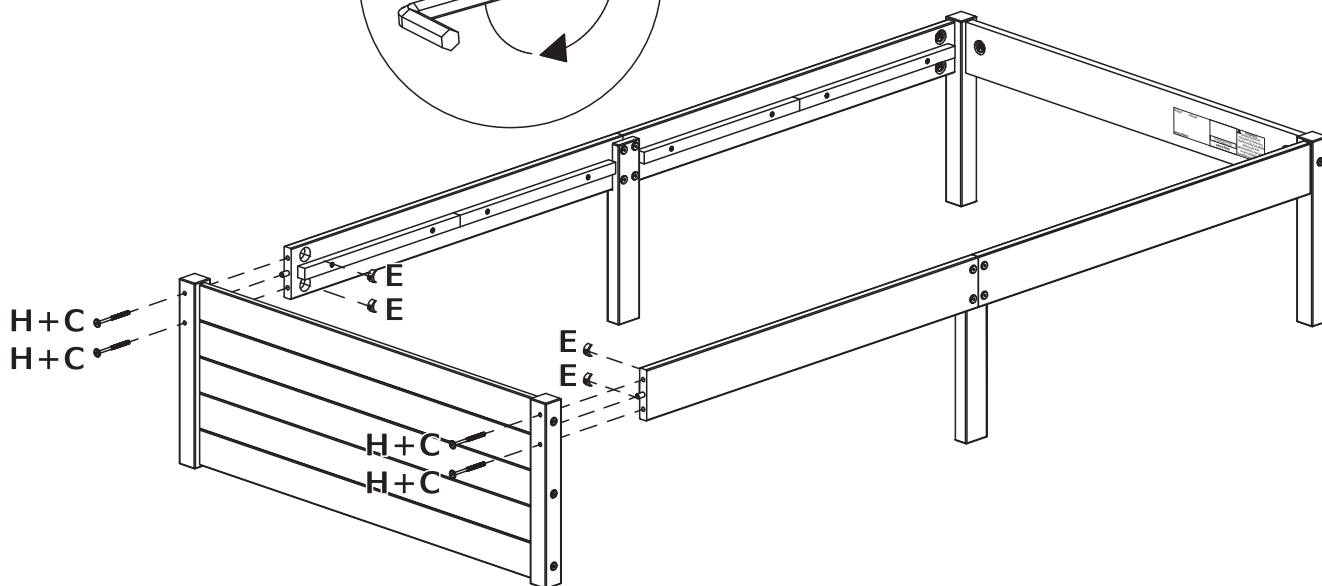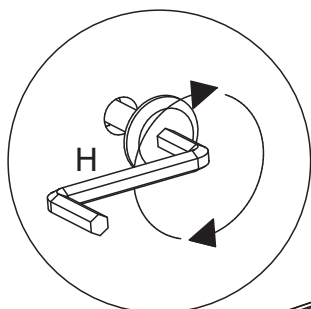





# 06

**D**



Ø4x30mm

**24**

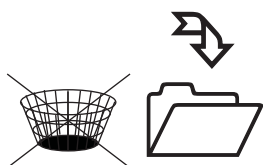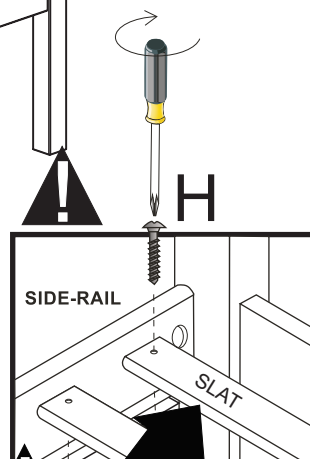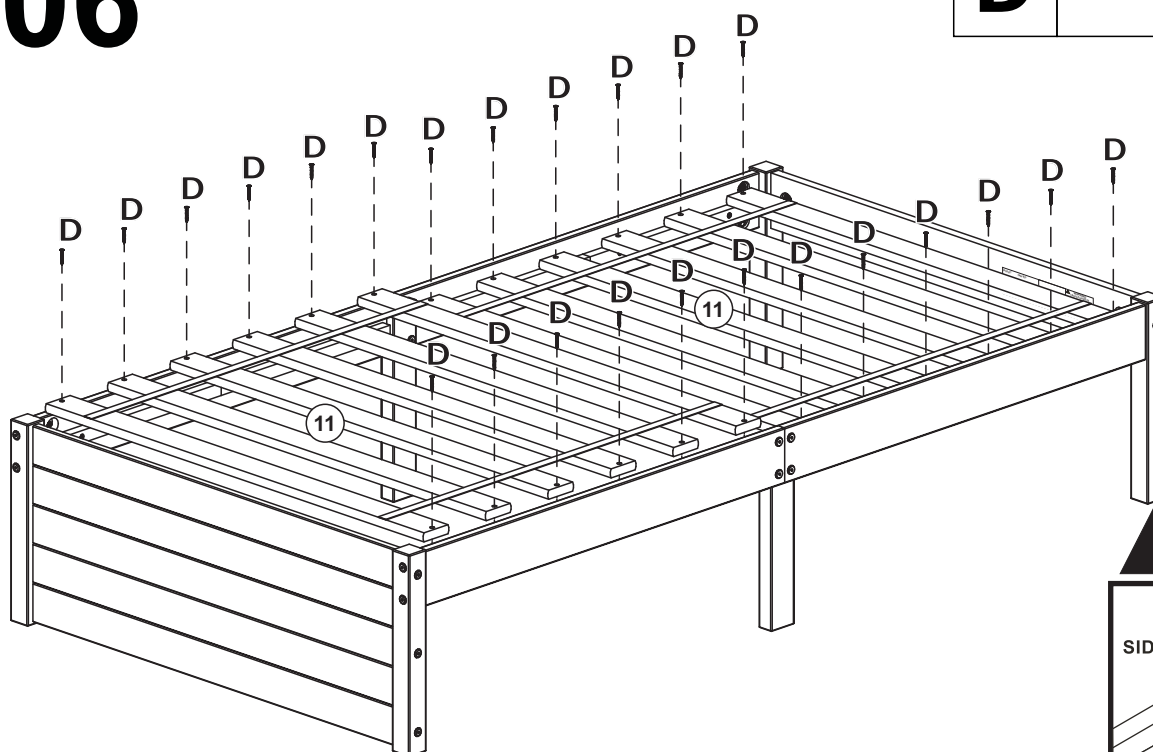

“INSTALL SLAT KIT WITH SPACER  
TAPE ON TOP(FACING UP)”

The first slats must be fixed at  
3" from each headboard end.