



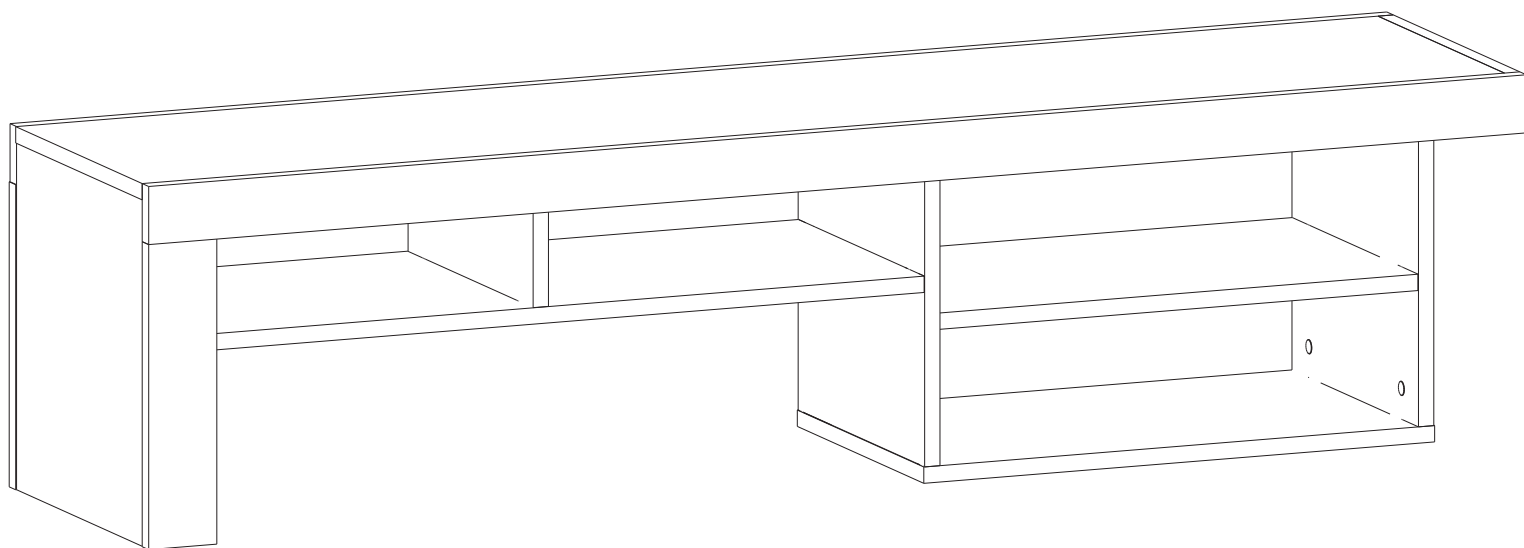


Assembly guide

# Prepare To Start

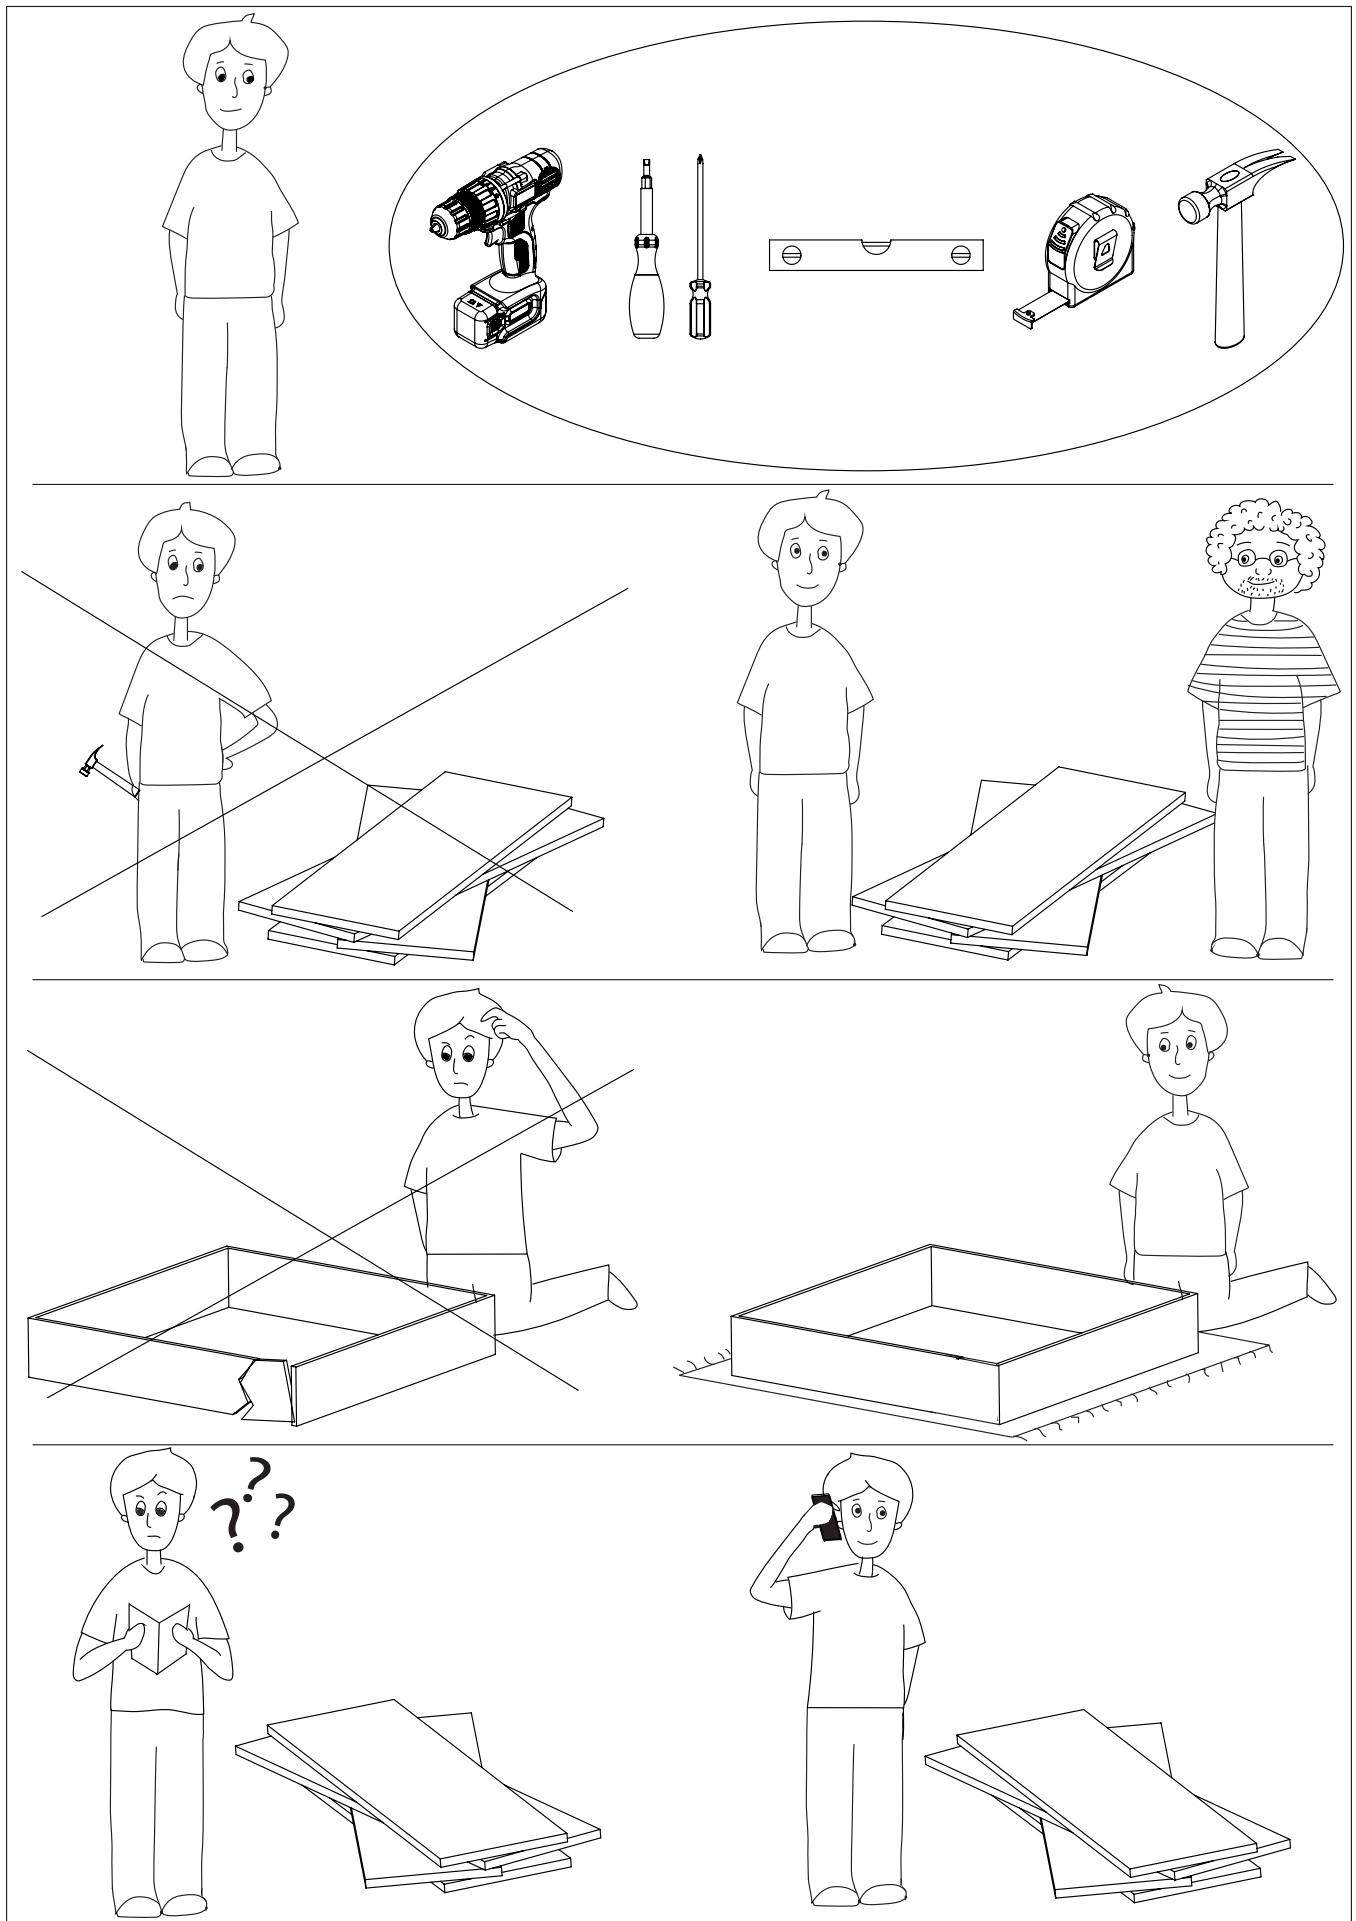


# Components

|        |     |
|--------|-----|
| Part1  | 1x  |
| Part2  | 1x  |
| Part3  | 1x  |
| Part4  | 1x  |
| Part5  | 1x  |
| Part6  | 1x  |
| Part7  | 1x  |
| Part8  | 1x  |
| Part9  | 1x  |
| Part10 | 1x  |
| Part11 | 1x  |
| Part12 | 1x  |
| Part13 | 1x  |
| Total  | 13x |

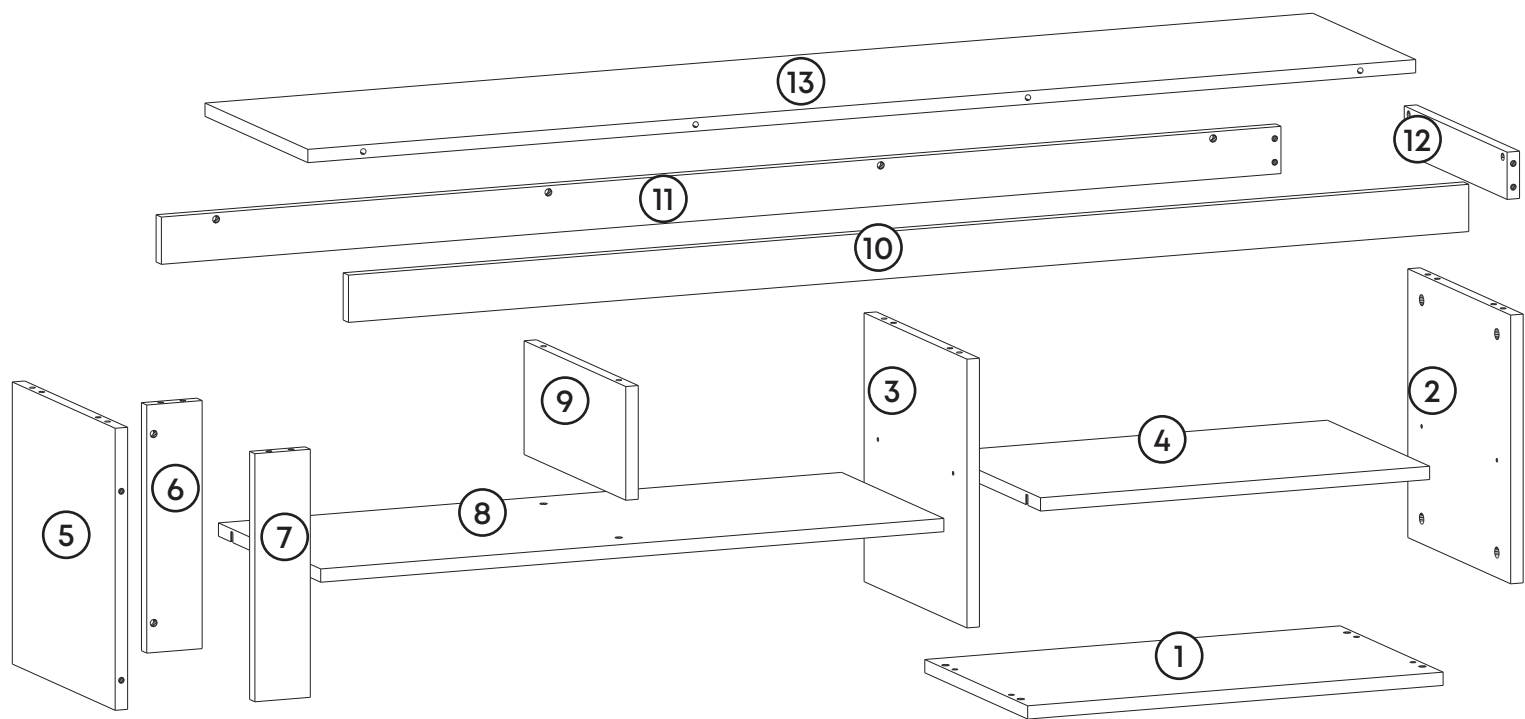


# Accessory Parts

A01

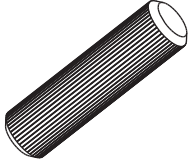

Dowel Q818x

A02

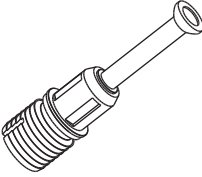

Screw28x

A03




Head28x

A04



Rafix Screw8x

A05

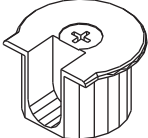


Rafix Head8x

A06



Pvc Sticker28x


A09




Allen1x

# How to instal Components

\*Before starting, please check the below figures



HEAD




SCREW




DOWEL


If the dowel is not required during the installation phase, it is not included in the package.

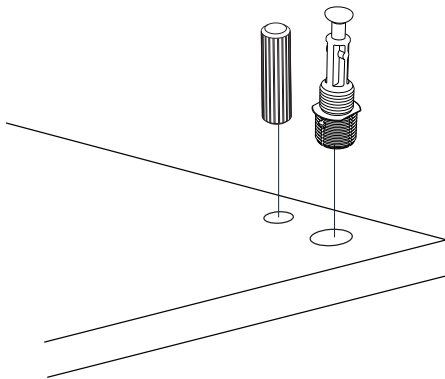


\*Please notice that there is an small arrow on A03 (head). This arrow should show the direction of upper hole.

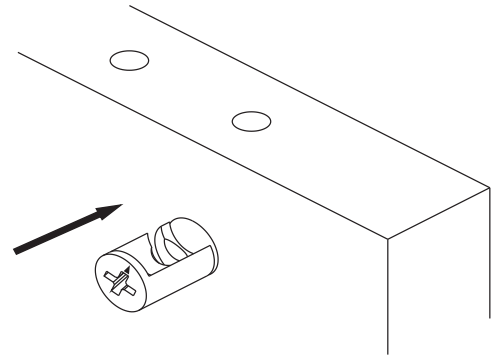


\*After attaching two pieces please turn the A03 (head) clockwise direction with the help of a screwdriver.

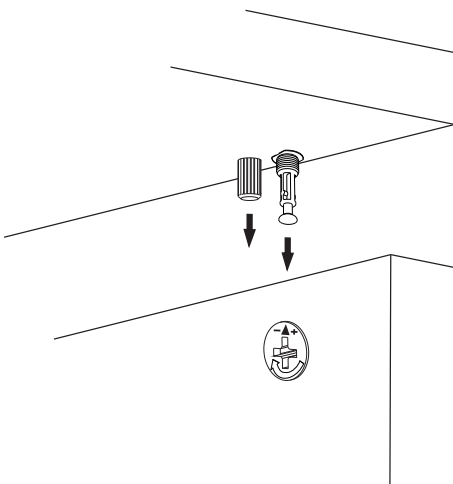


\*Please do not over screw the head since it may be broken if too much power is imposed. Just make sure that it is screwed to the direction "+" do not go any further.

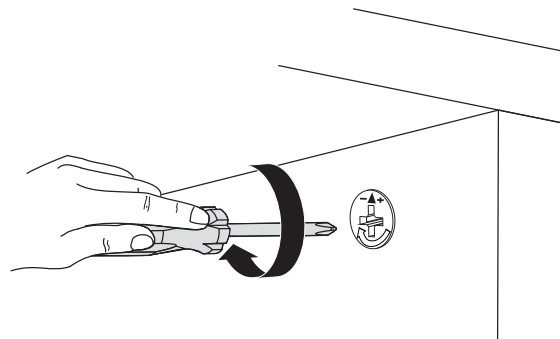


1.

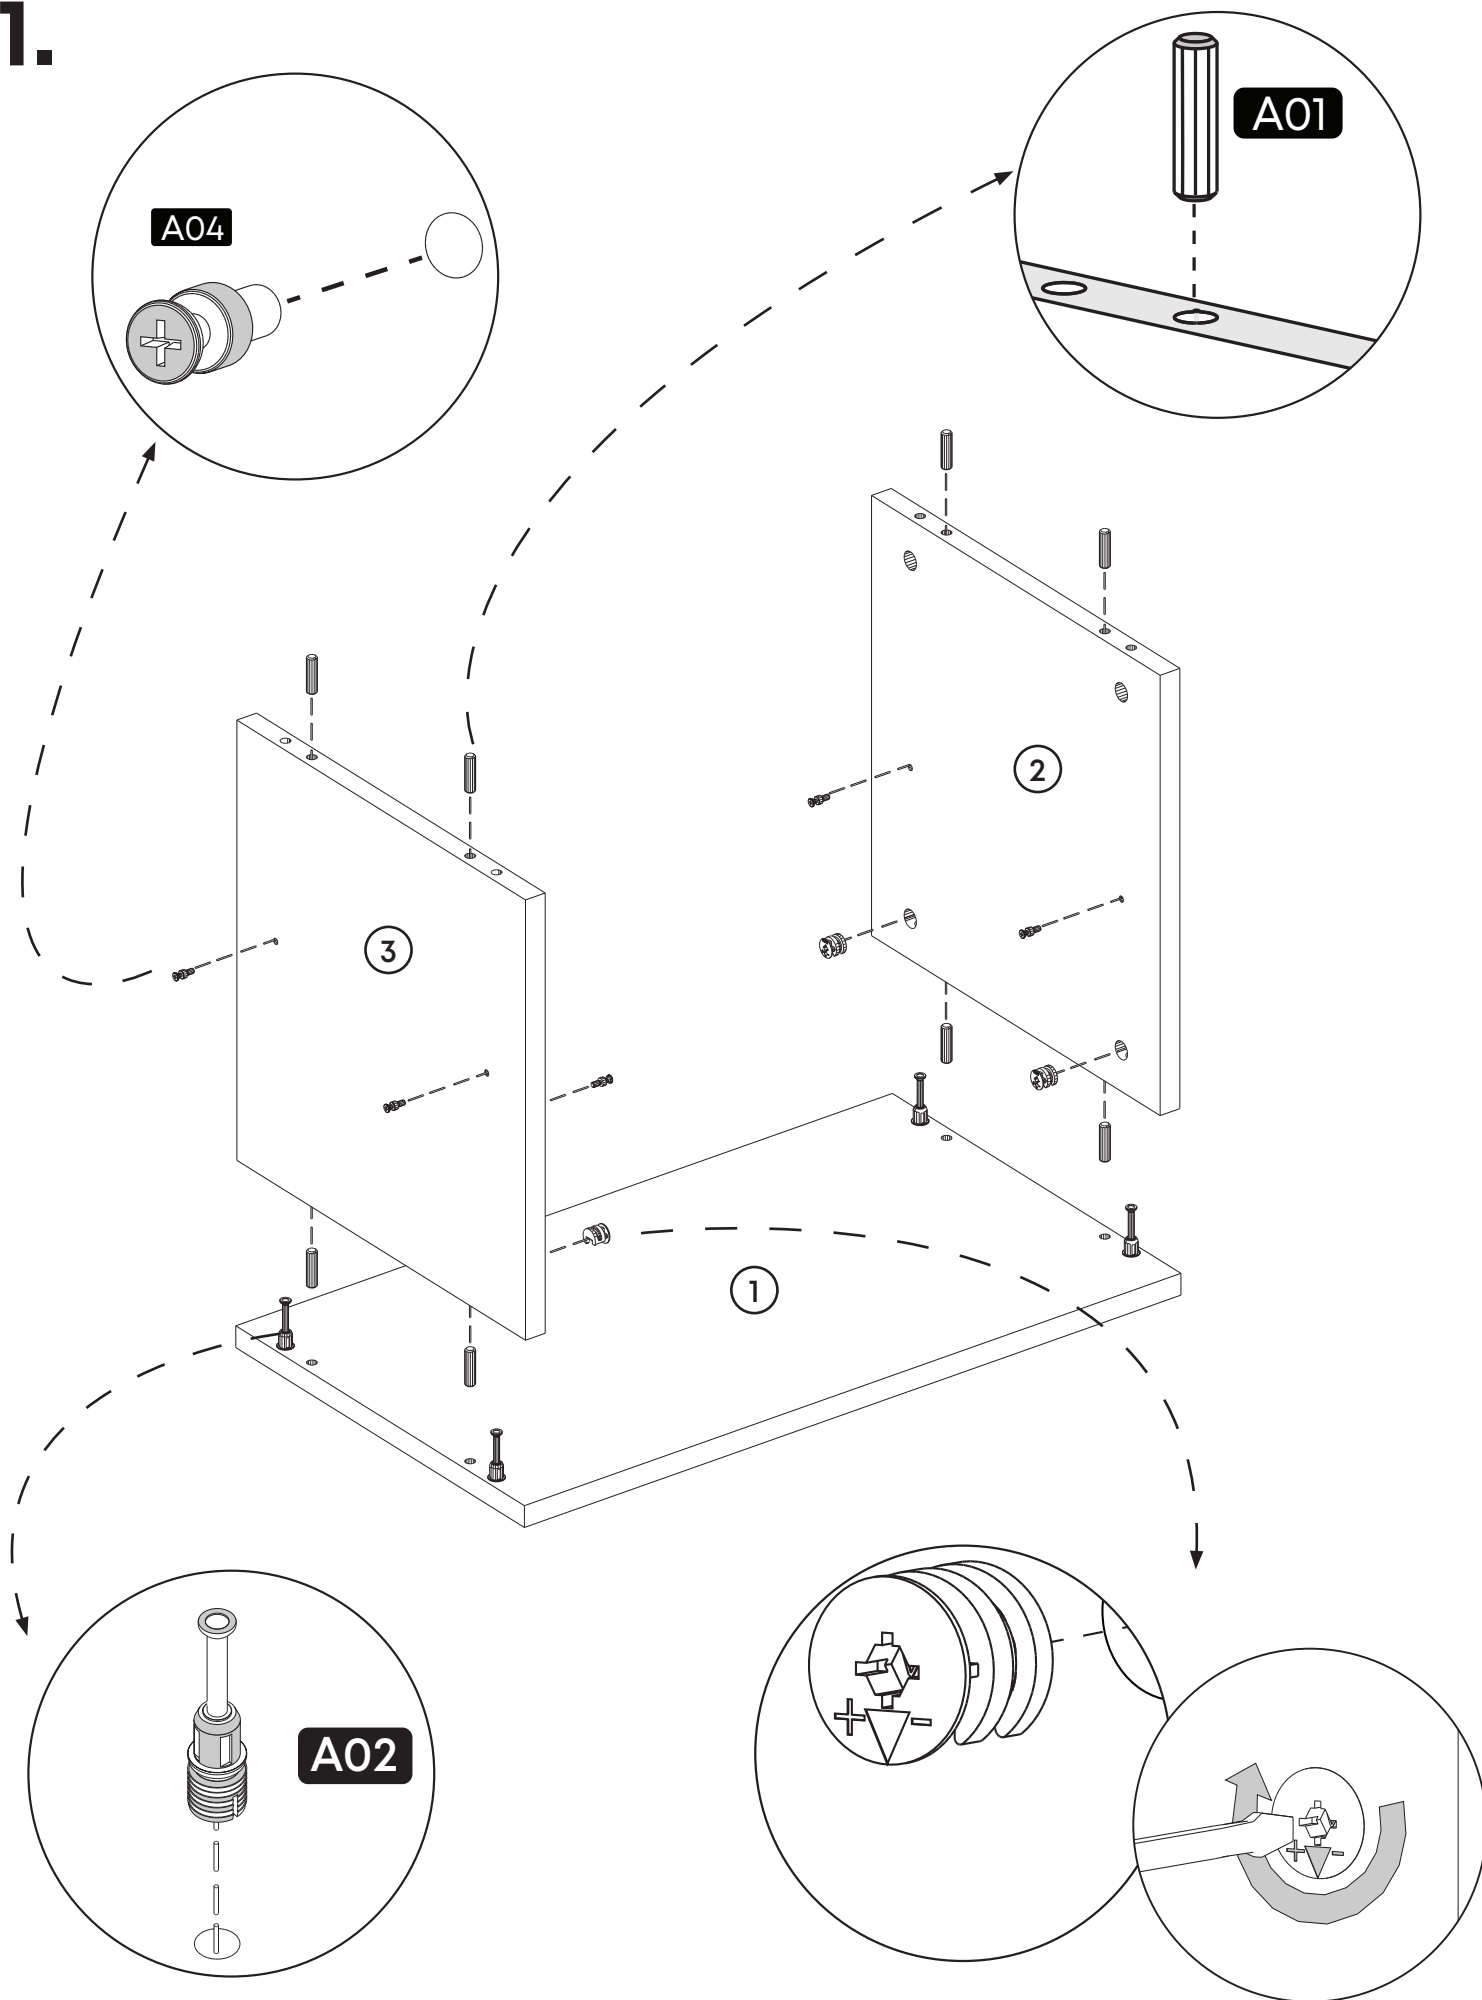


2.

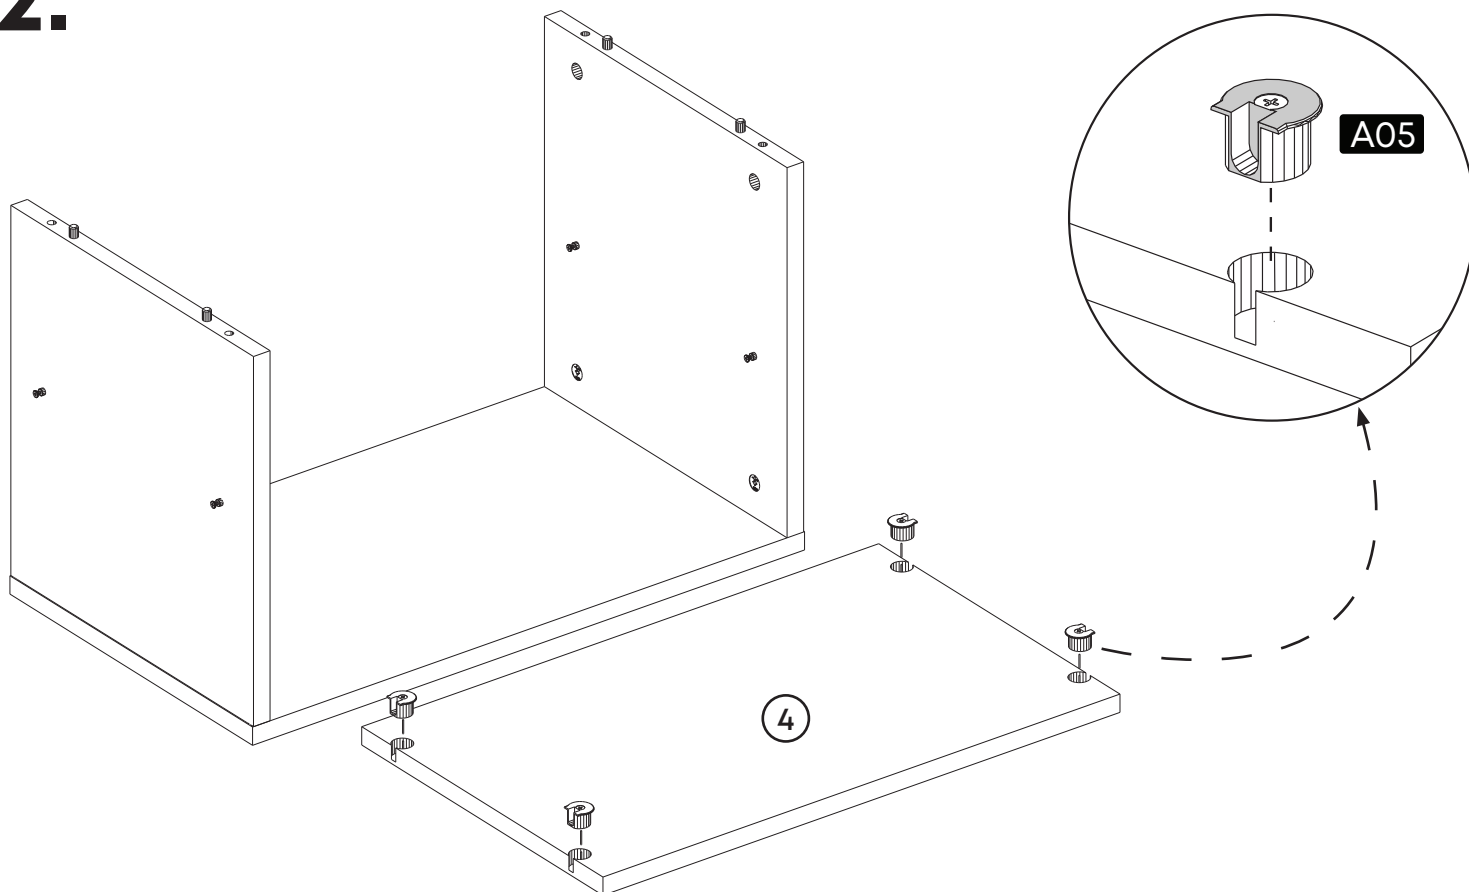


3.

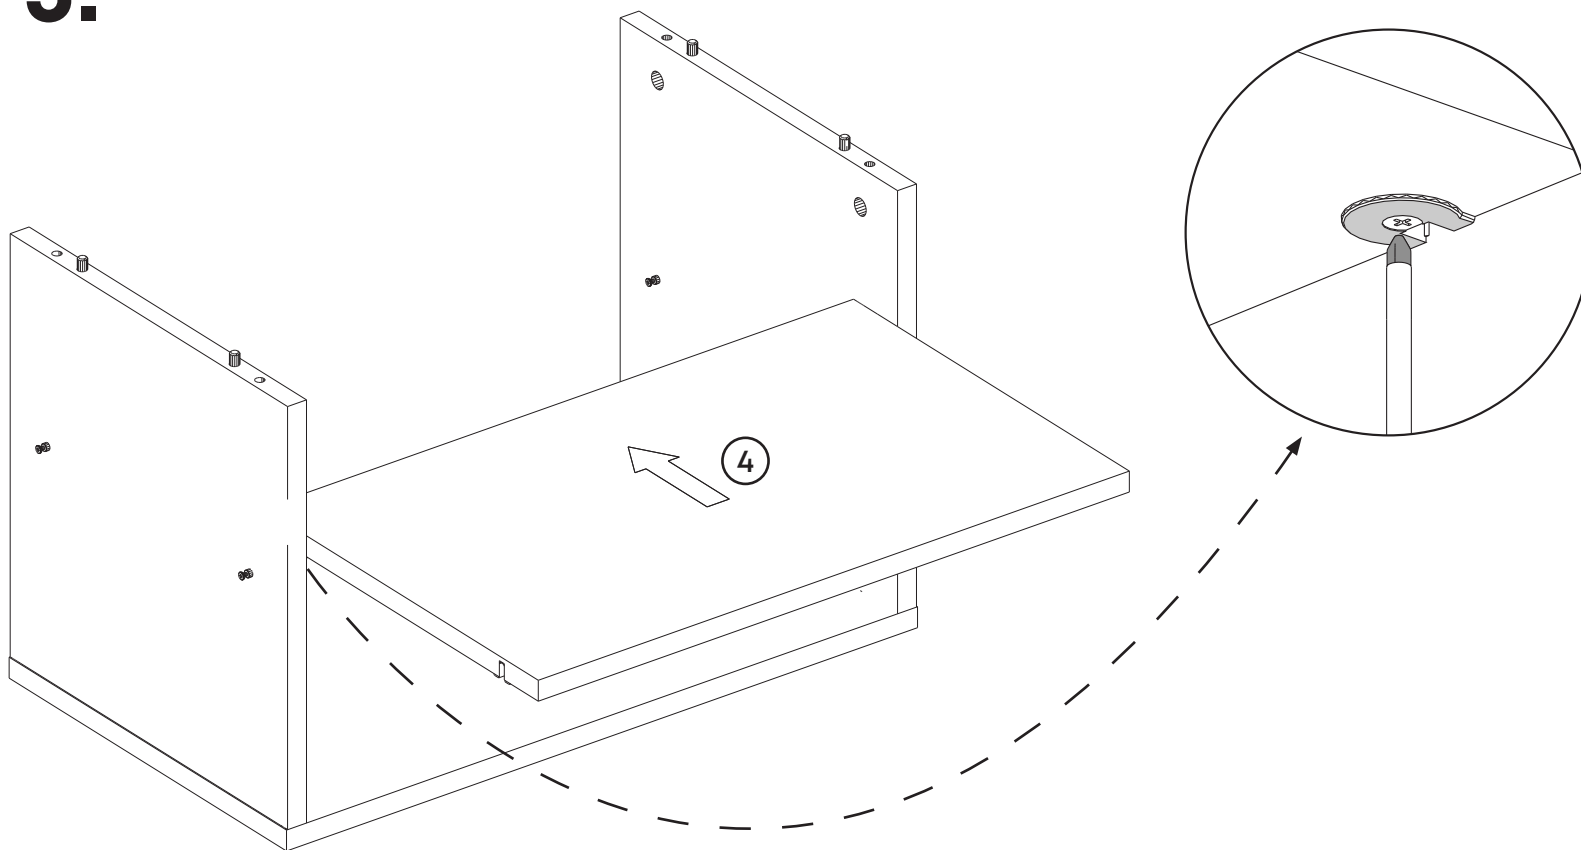


4.

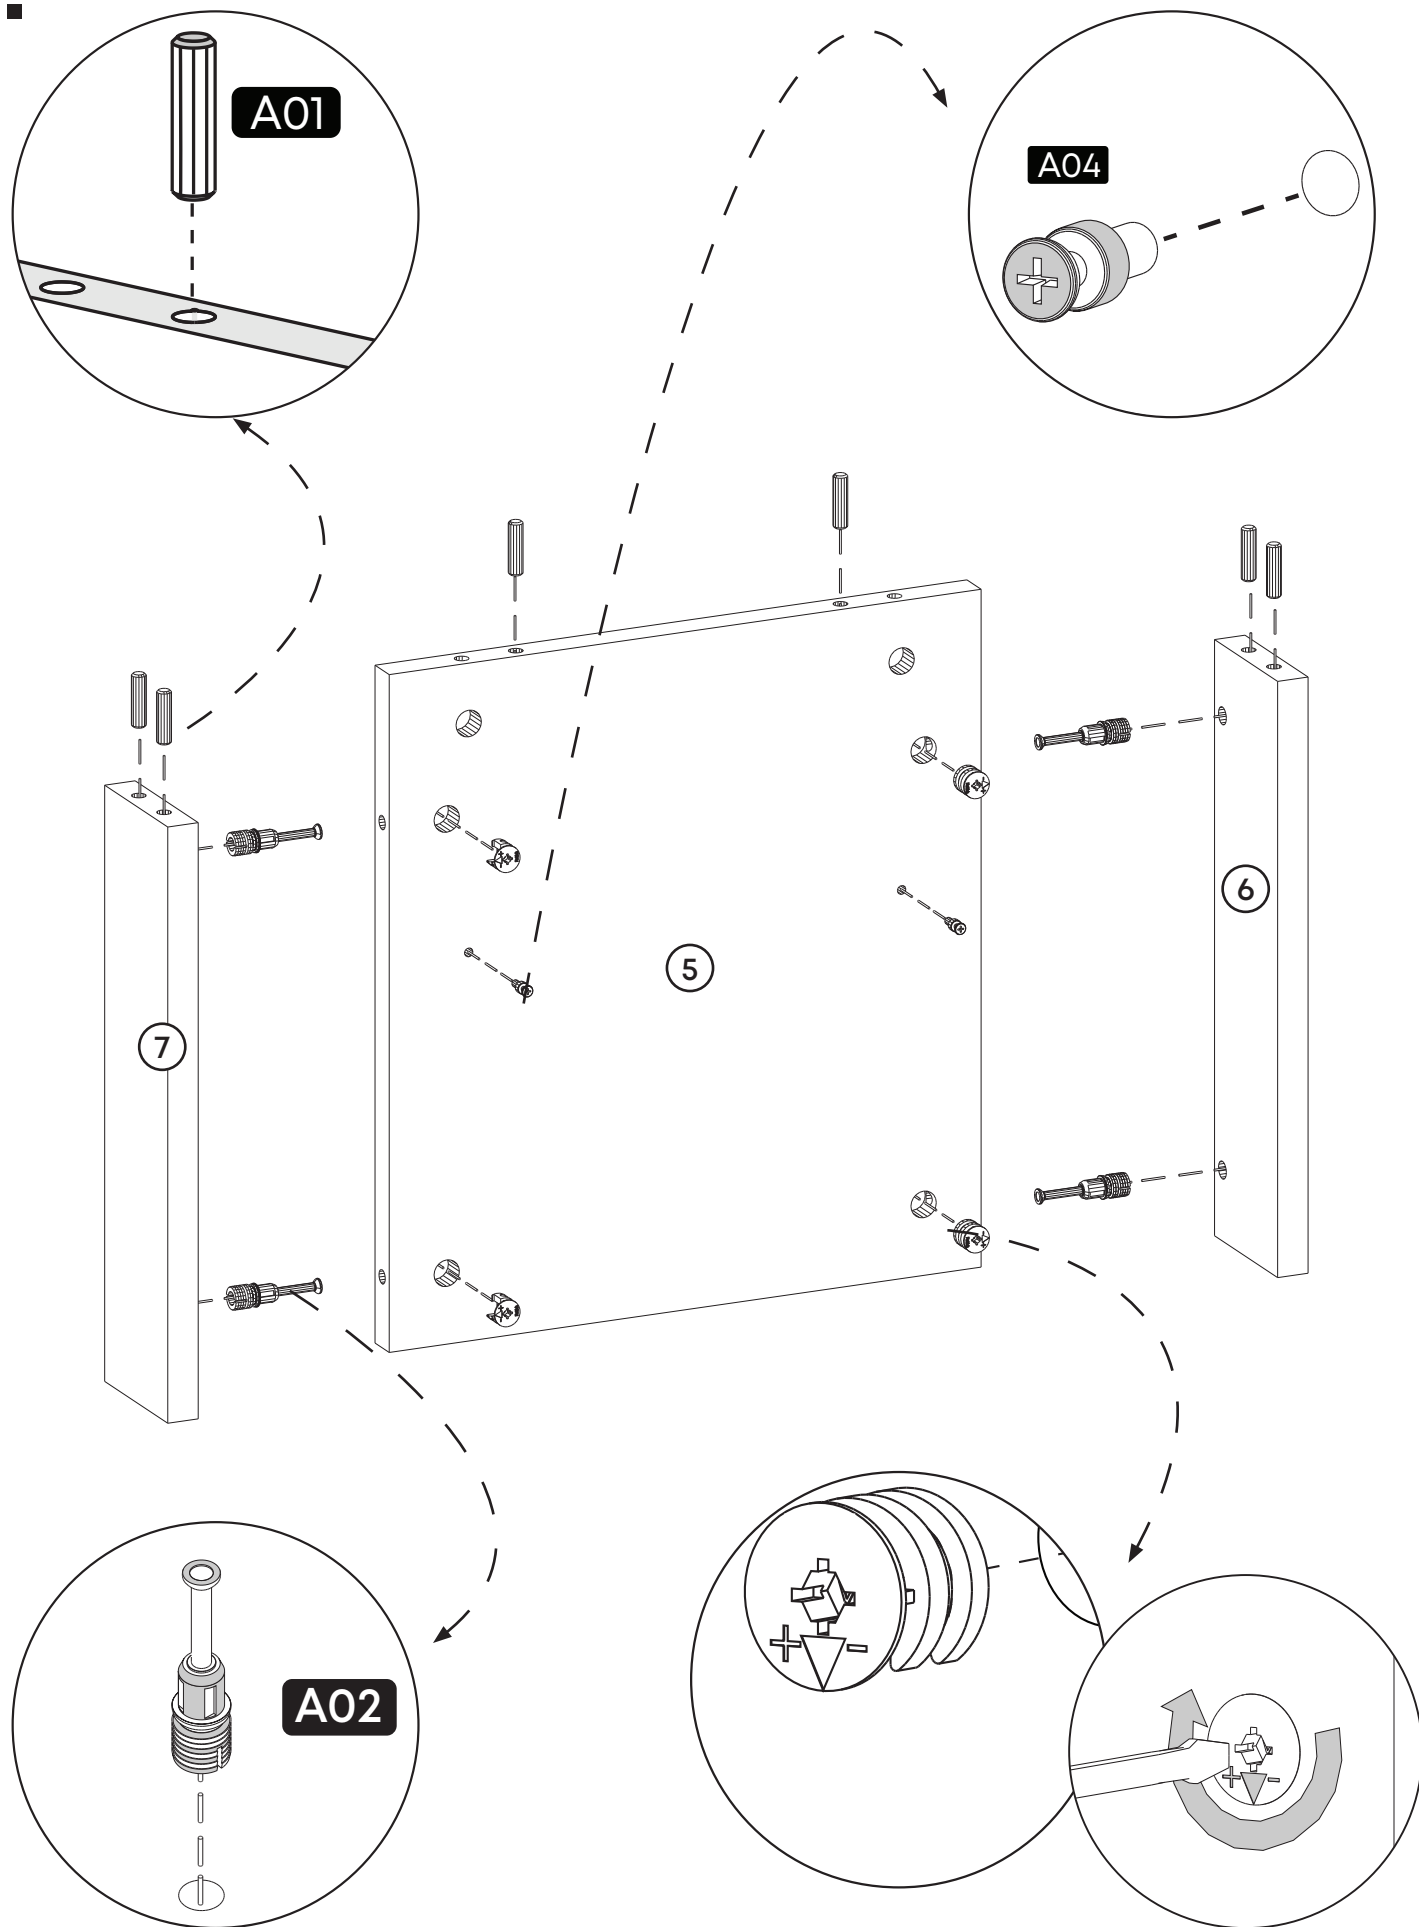


5.

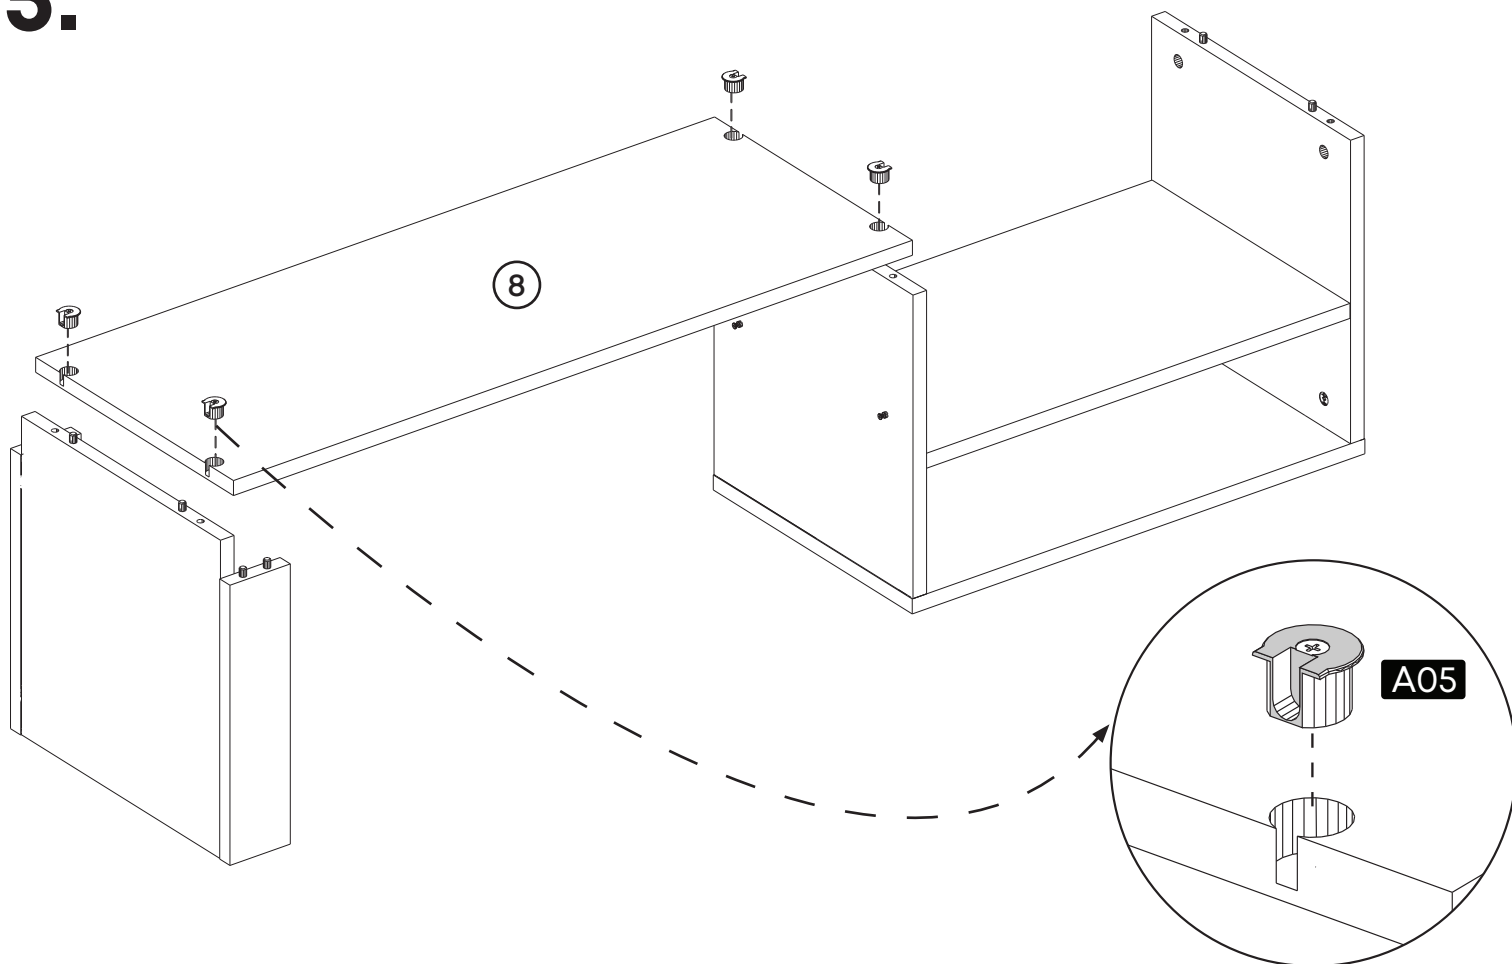


6.

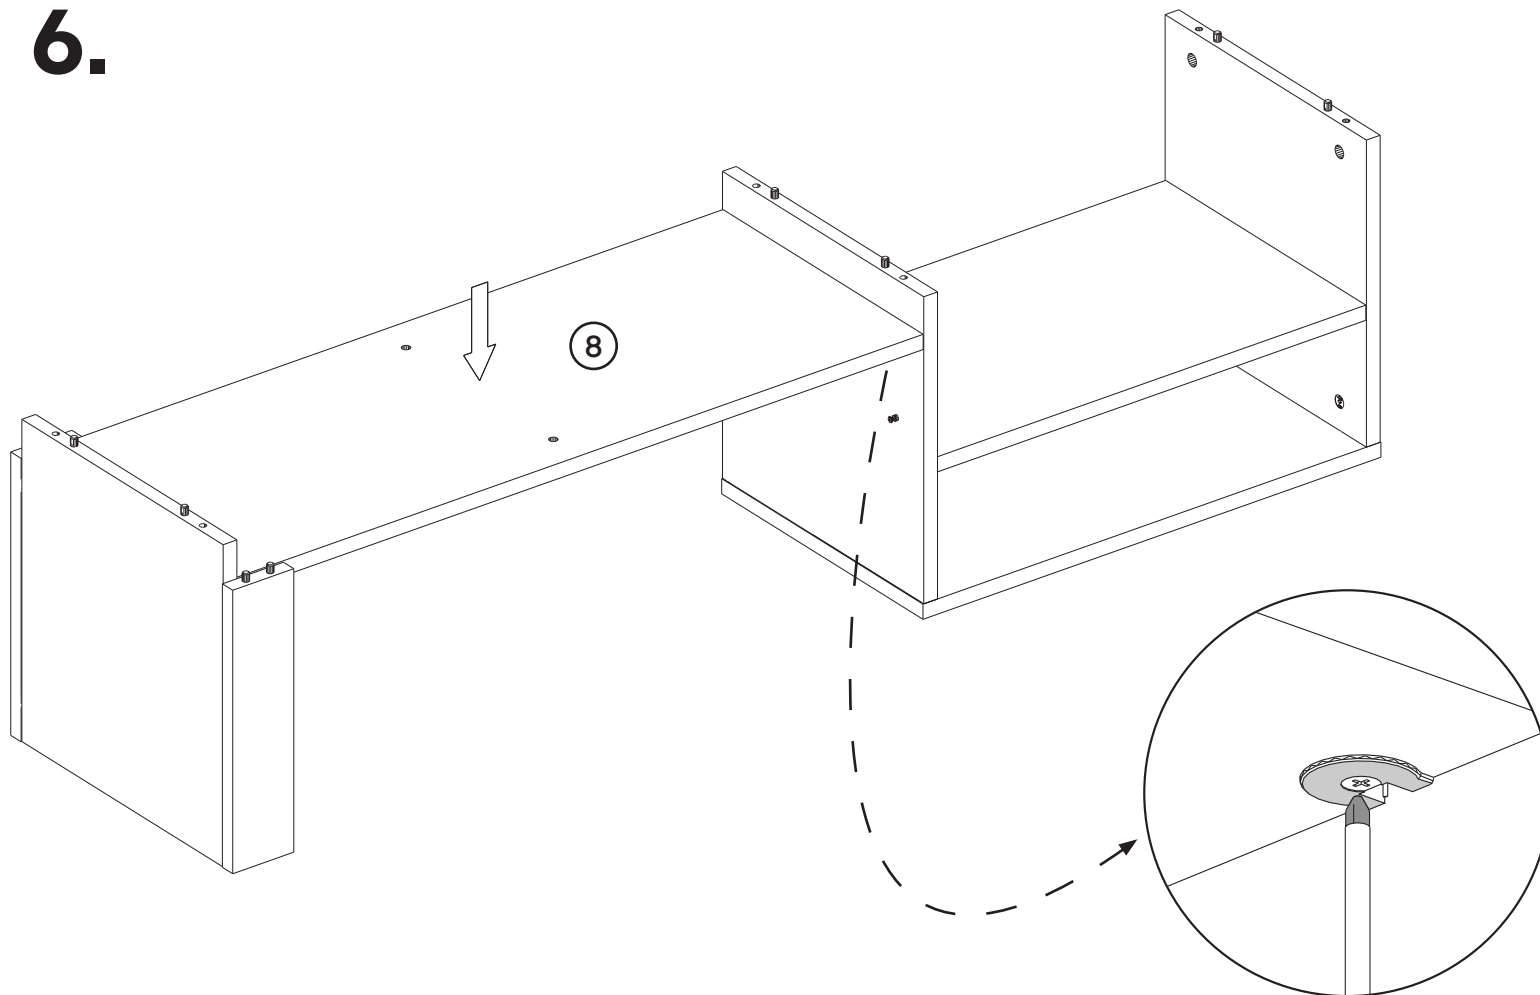


7.

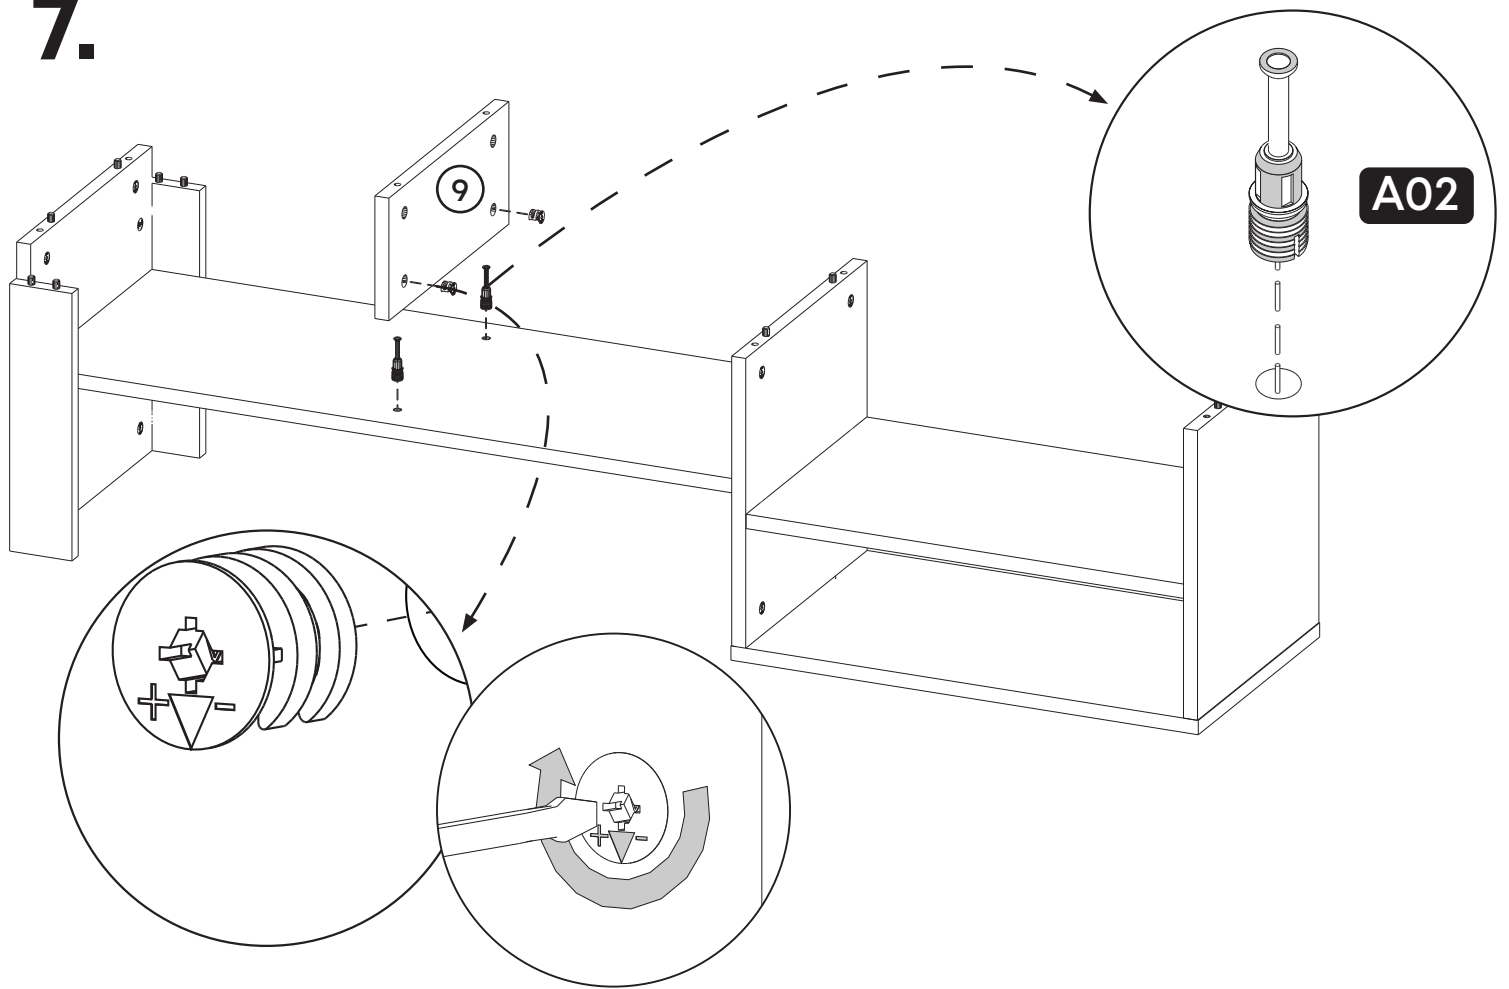


8.

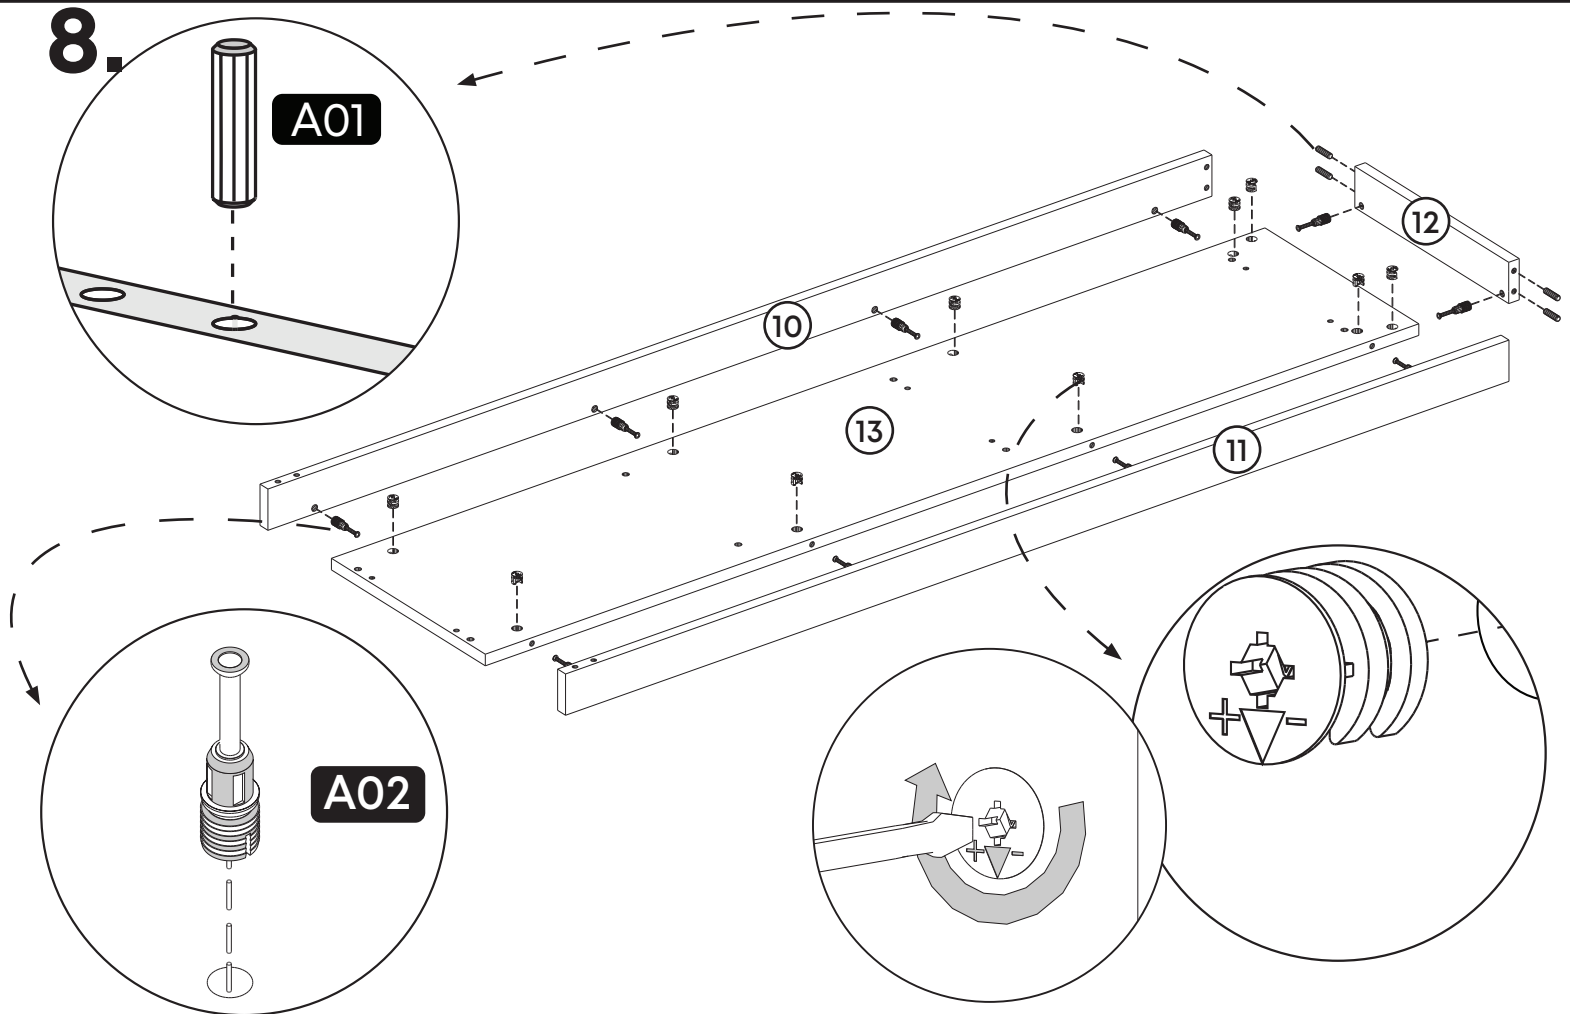

9.

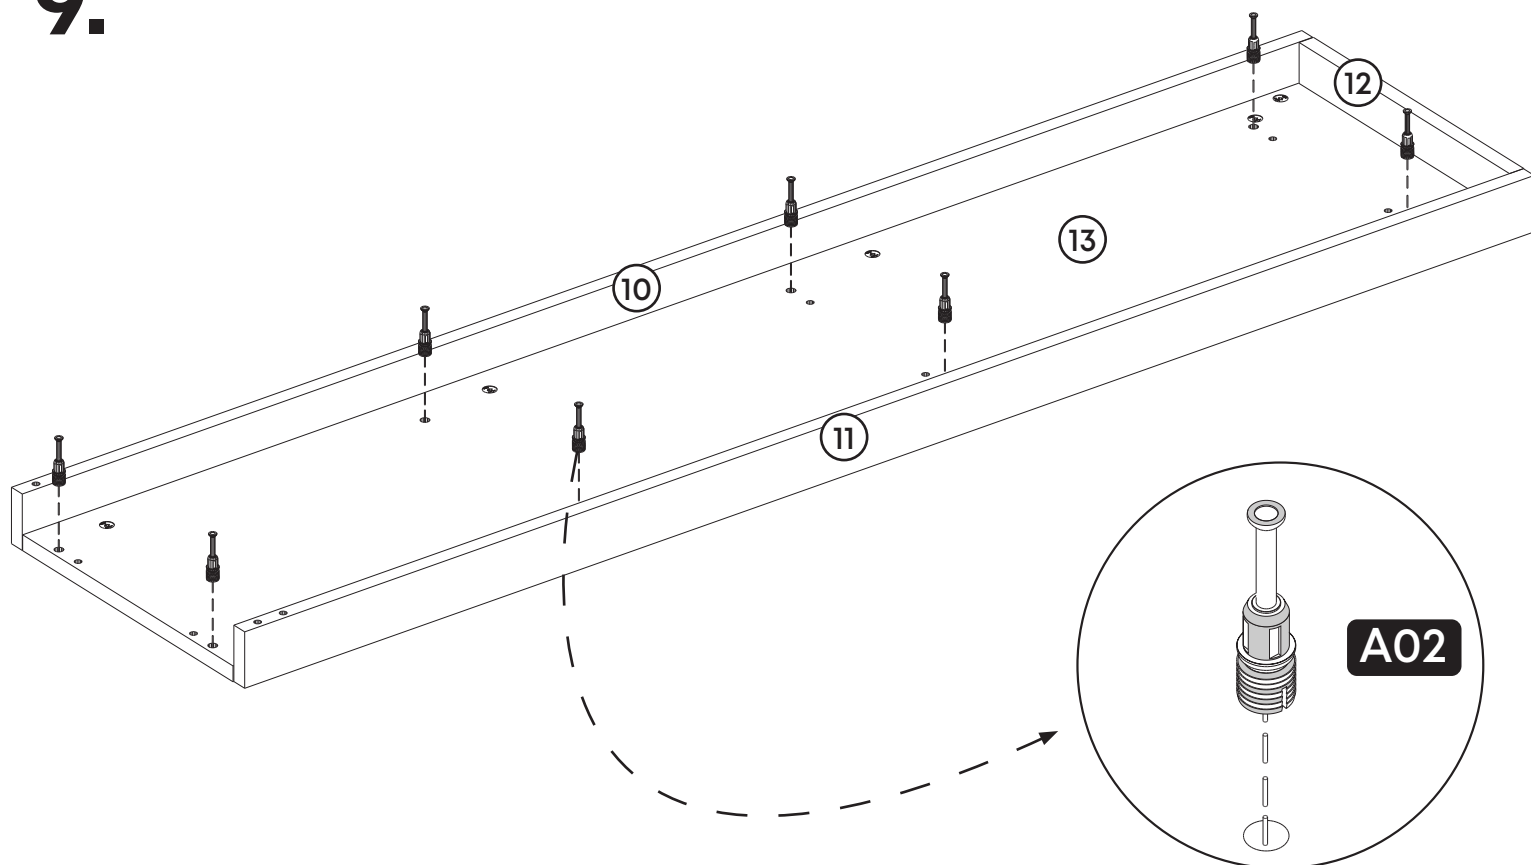

10.

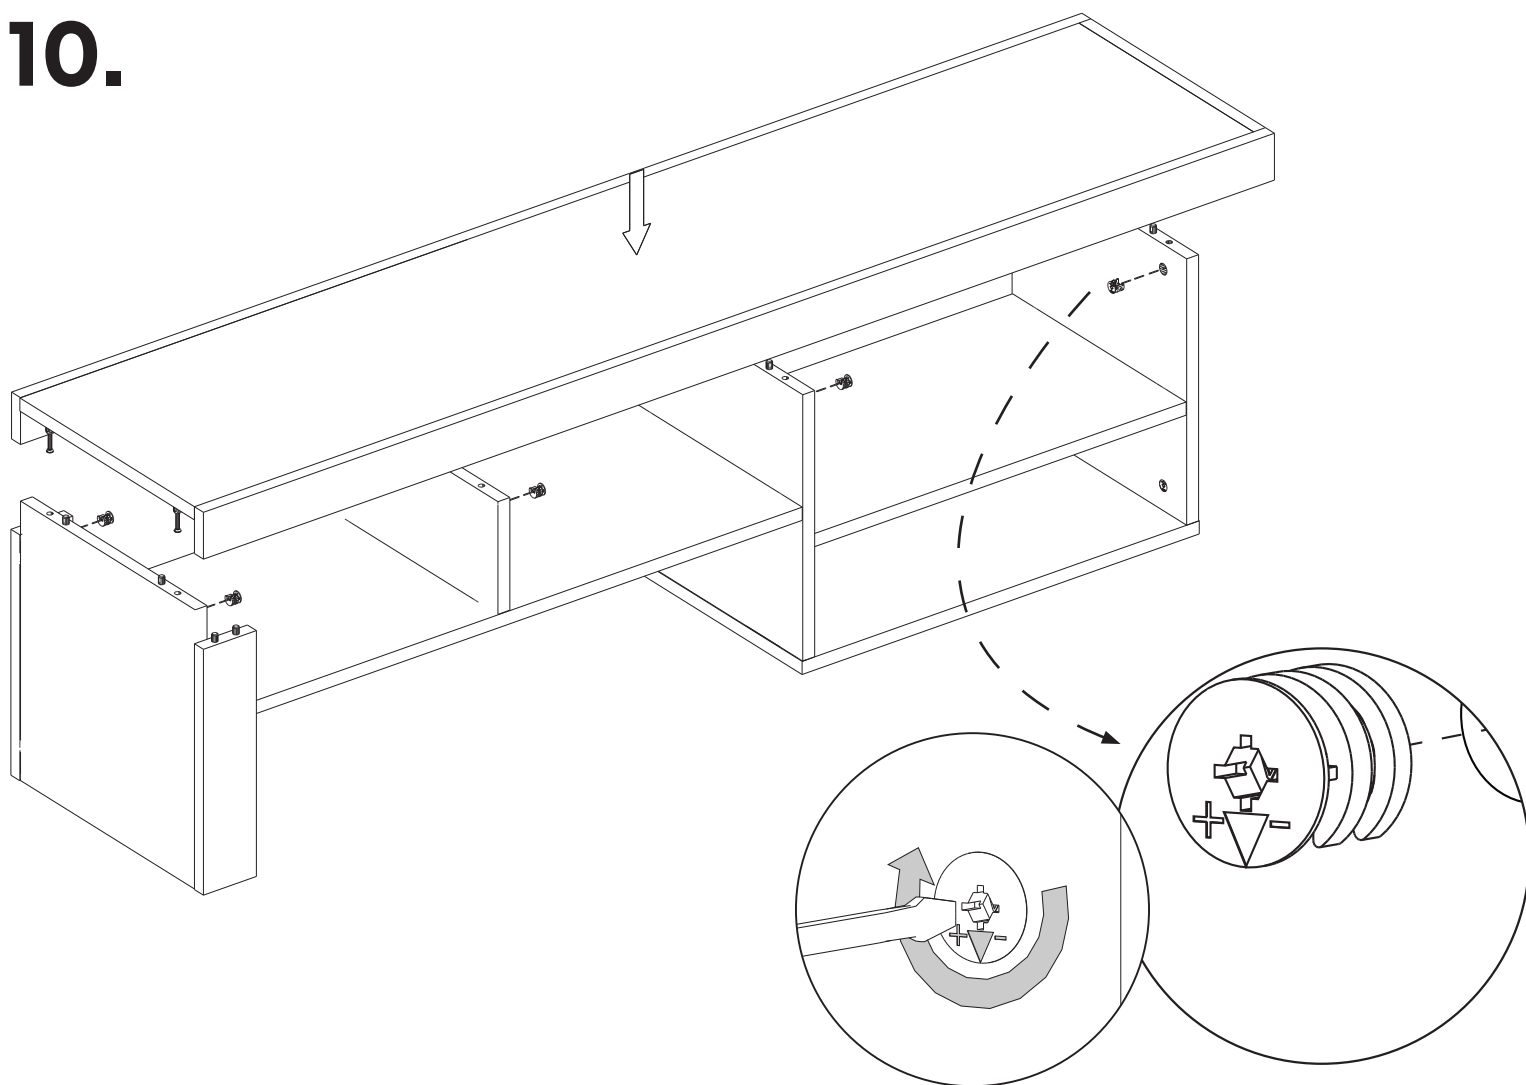

11.

