

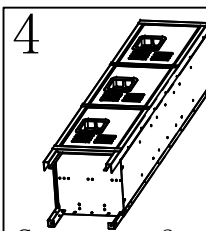


Connect hook G
to laminate D
with bolt H and
nut

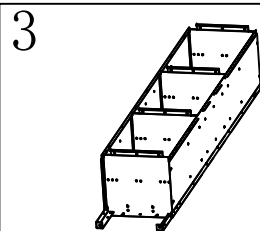


Connect front
frame C with H
bolts and I
nuts and 2
side plates A

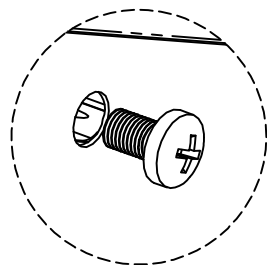

x14



x14

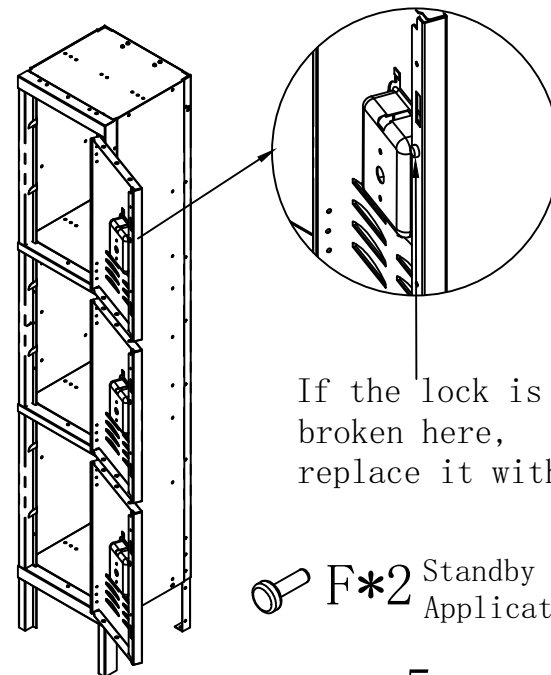

If the lock is broken here, replace it with F

 F*2 Standby
Application

5