
domi
outdoor living

12'x18' Metal Patio Gazebo with Resin Roof

ASSEMBLY MANUAL

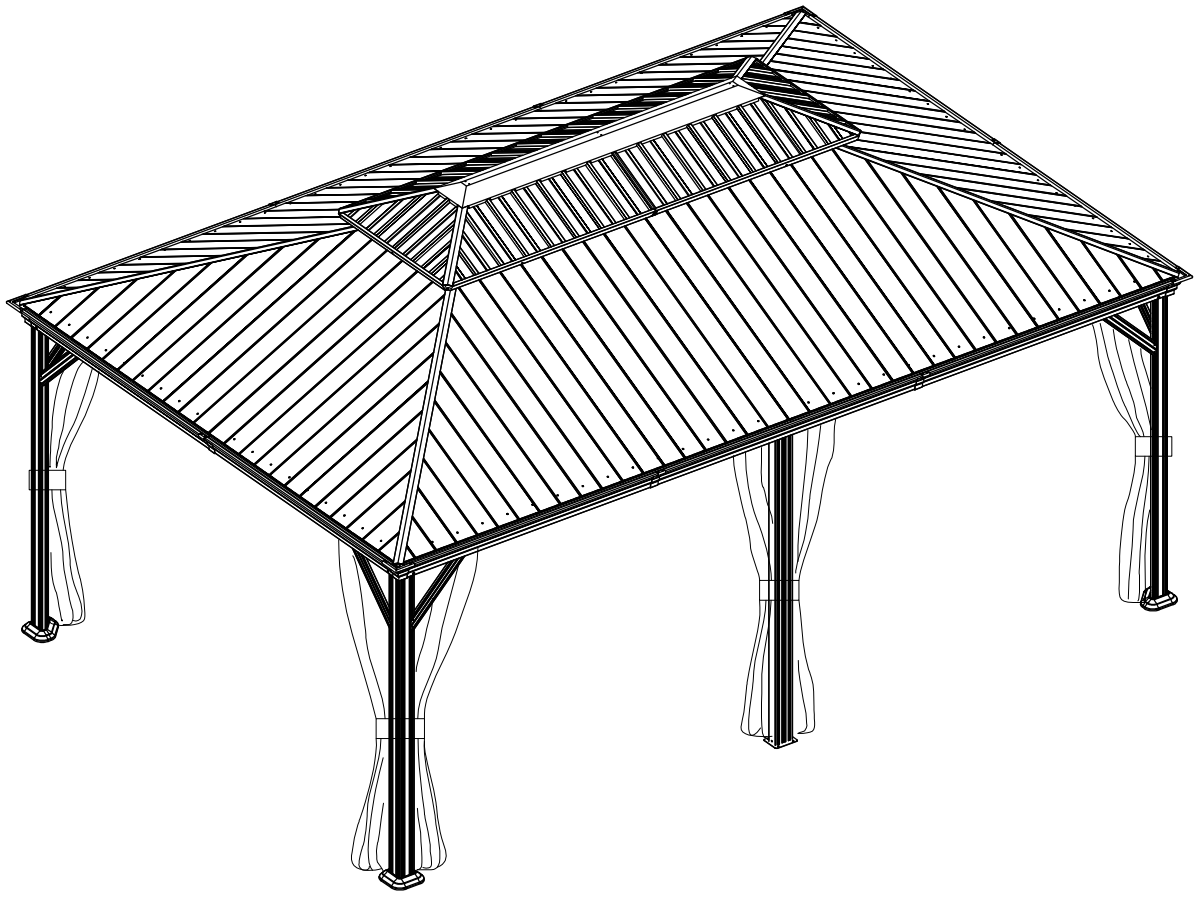

MODEL#:LGMZ1720

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domioutdoorliving LLC. All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

⚠Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.


1

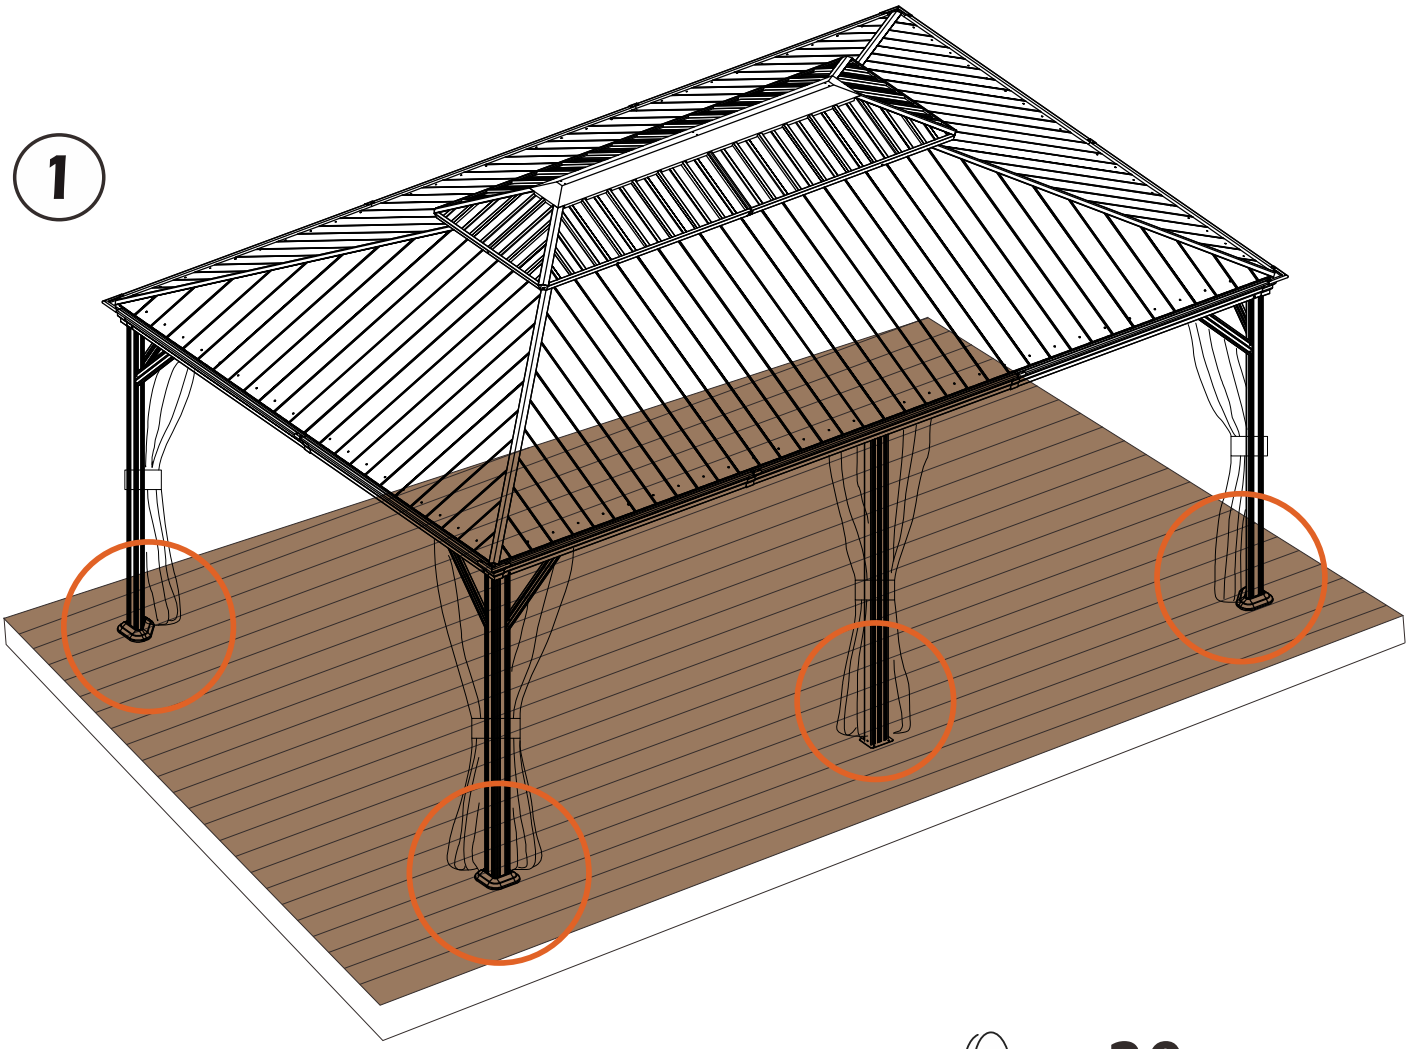





x20


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

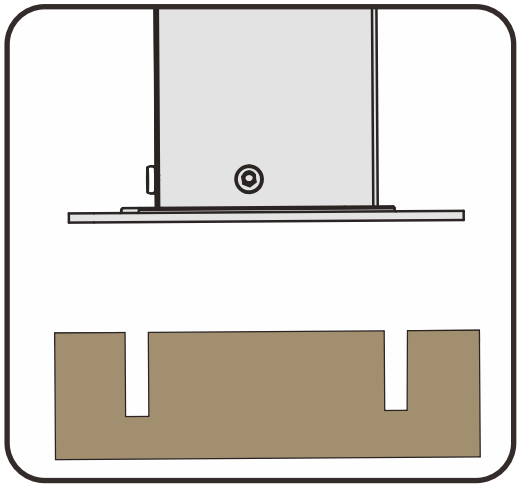

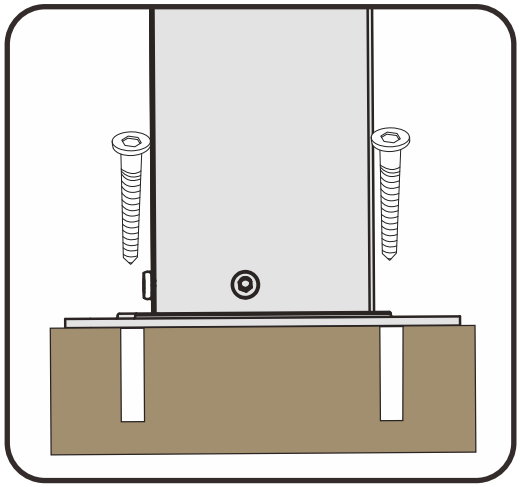

2

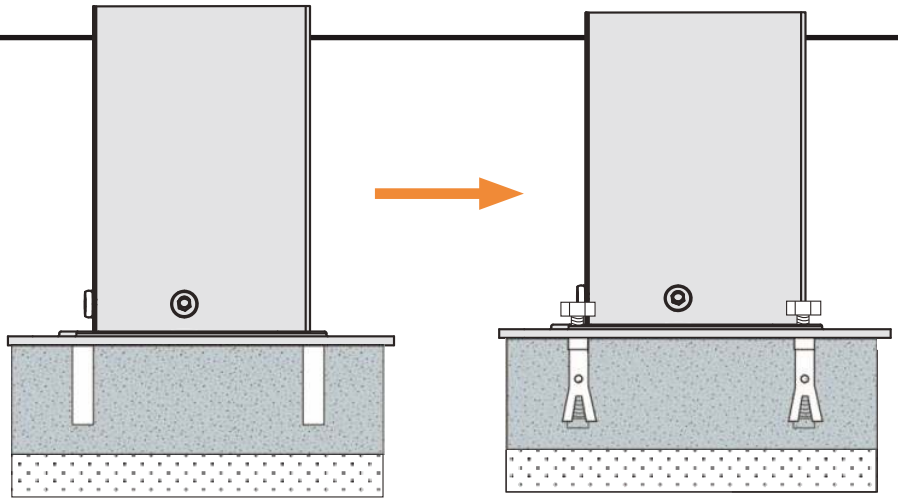


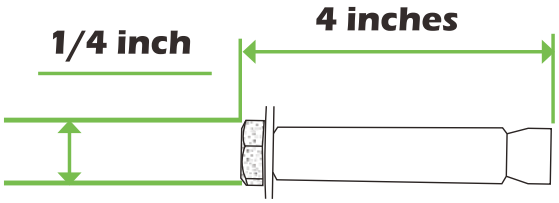


x20

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo


3

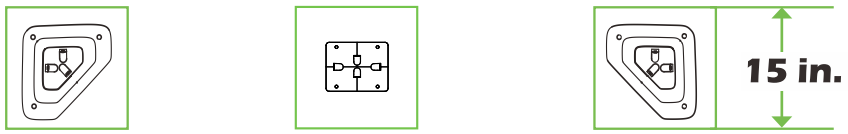


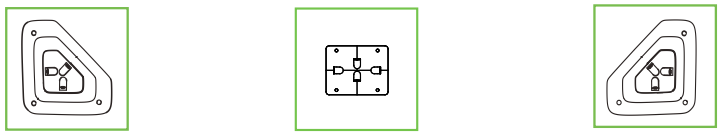



Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.


IMPORTANT:
Anchor is not recommended

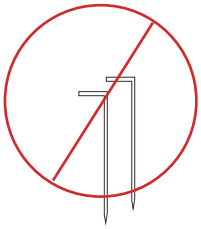

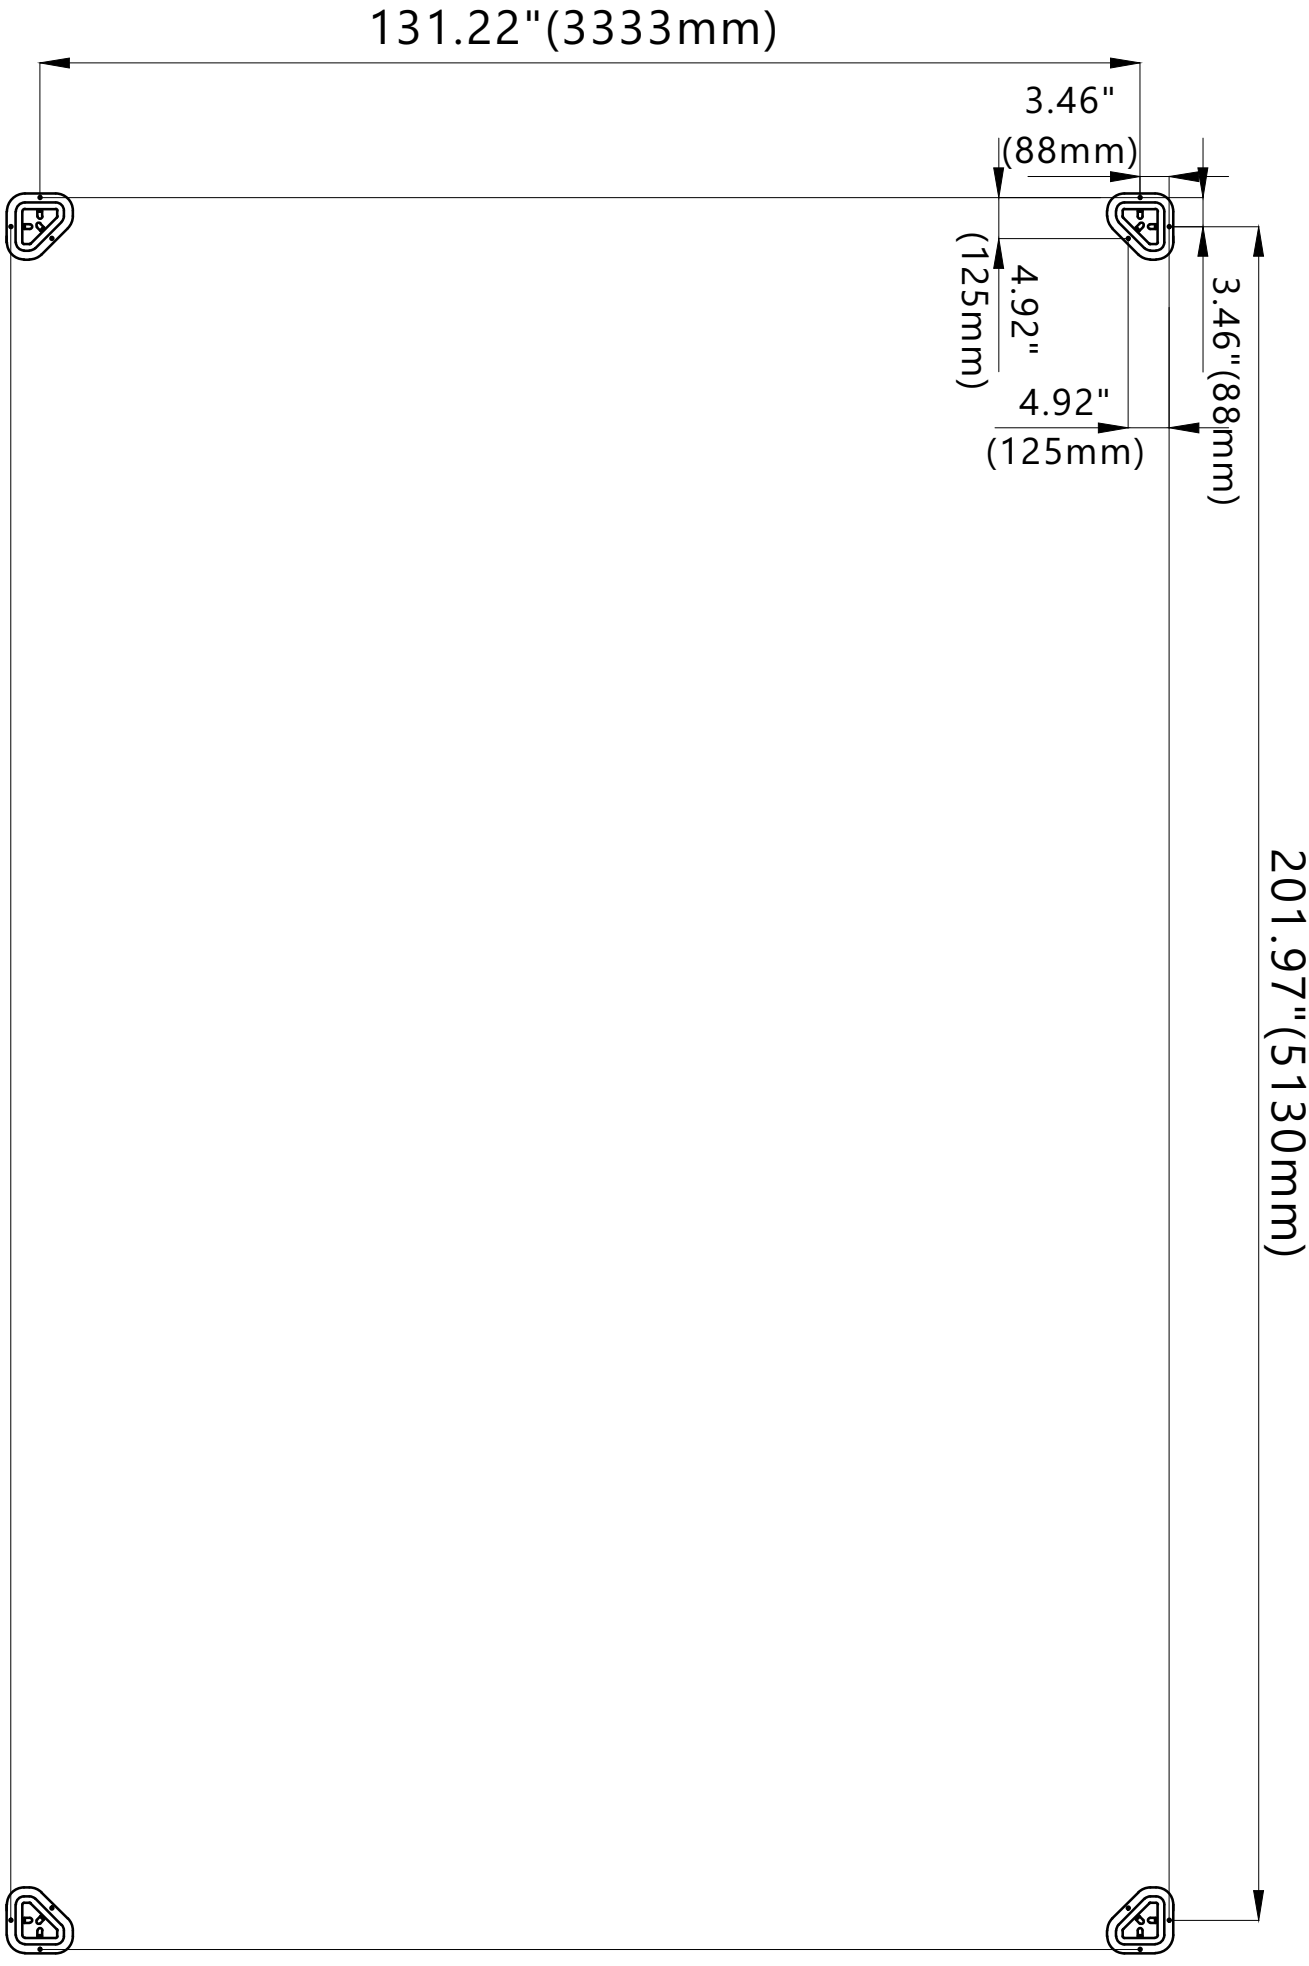
131.22"(3333mm)
3.46"
(88mm)
4.92"
(125mm)
4.92"
(125mm)
3.46"(88mm)
201.97"(5130mm)

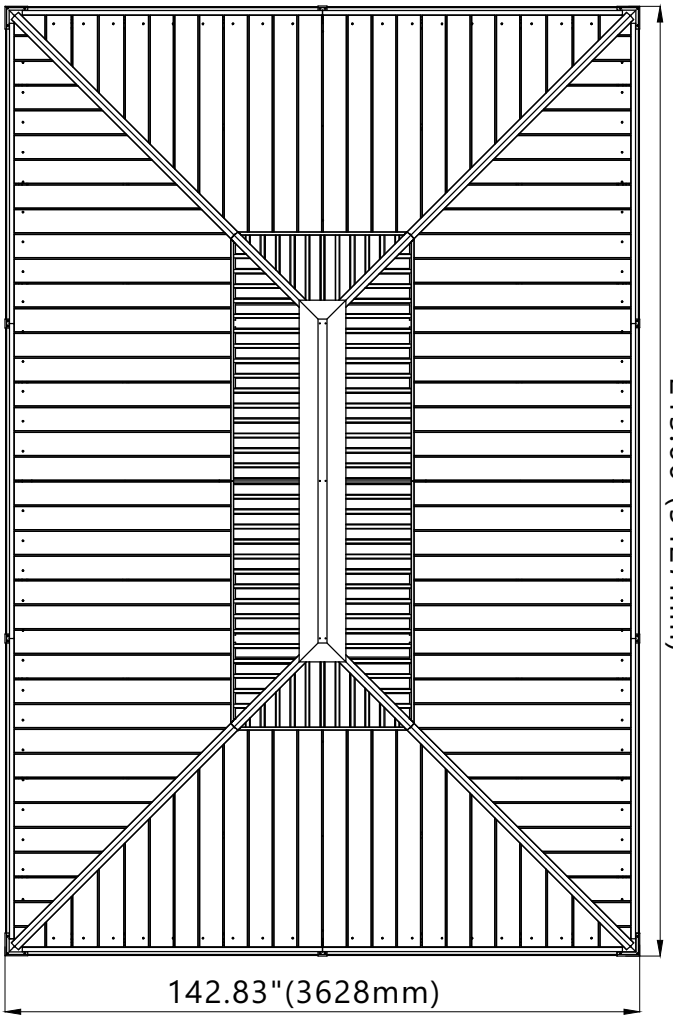
213.66"(5427mm)
142.83"(3628mm)

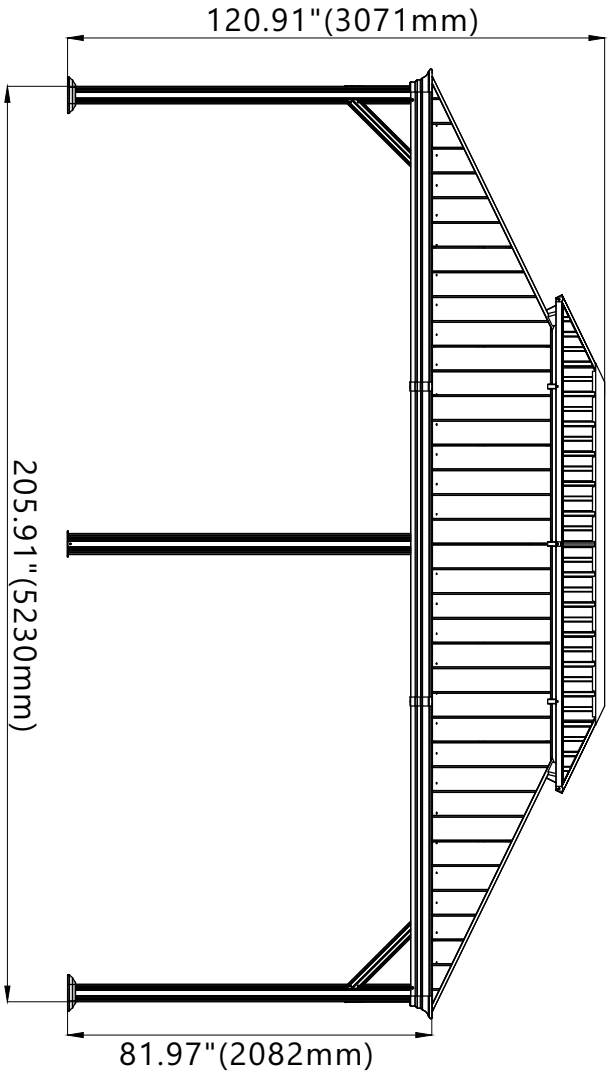
120.91"(3071mm)
205.91"(5230mm)
81.97"(2082mm)

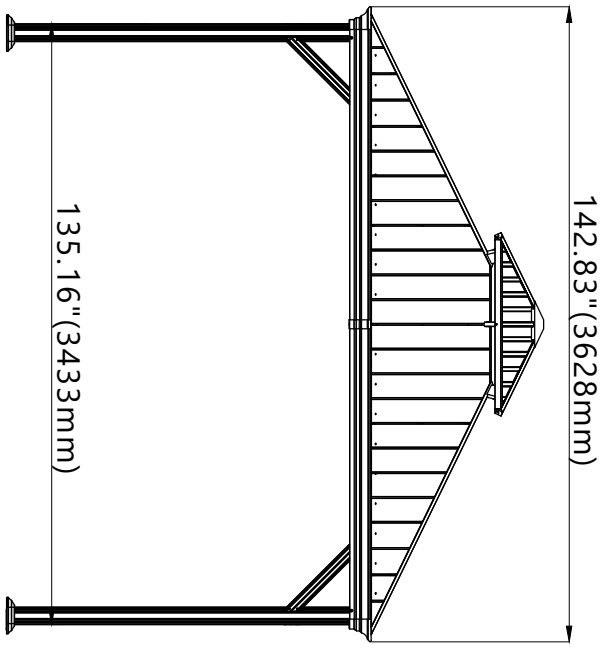
135.16"(3433mm)
142.83"(3628mm)



Pole 2080MM A x4



Track 814MM D2 x2




Pole 2080MM B x2



Track 814MM D3 x2




Beam 1715MM C x2



Outside Roof Cover E0 x1



Beam 1715MM C1 x2



Union Bar 600MM E x6



Beam 1800MM C2 x2



Corner Cover F x4




Beam 1715MM C3 x2



Joint Cover G x6



Beam 1715MM C4 x2



Silicone Sealant H x1




Track 1583MM D x4



578MM

Corner Solidifying Bar I1 x4




Track 1583MM D1 x4




578MM

Corner Solidifying Bar I2 x4



1989MM

Inside Roof Cover J x1



Roof Tube 1905MM N2 x2



Base K x4




Finishing Bar 740MM P x2



Base Cover K1 x4



Finishing Bar 1285MM L1 x2



Bracket K2 x8




Finishing Bar 1285MM L2 x2




K3 x2

Base



K4 x2

Base Cover




Finishing End Q x8



690MM

Corner Roof Tube Connector M x4




Finishing End Q1 x2




2130MM

Corner Roof Tube M1 x4



1021MM

Finishing Bar T x2




Roof Tube 1927MM N x2



1424MM

Finishing Bar T1 x2



Roof Tube 1927MM N1 x4




1424MM

Finishing Bar T2 x2



J-Hook R1 x3




1085MM


Solidifying Bar U1 x8



Allen Key x1




Bracket U3 x4



Wrench x1



Bracket U4 x6



Wrench x1




1758MM


Solidifying Bar U5 x2



Plastic Clips Z x12



Small Mesh O x1



Plastic Clips Z1 x4




Plastic Bar 1240MM O1 x4




Plastic Clips Z2 x4












Plastic Bar 620MM O2 x2




Plastic Clips Z3 x2




Plastic Clips Z4 x2

	M6x16	1# x240		4x12	10# x16
	M6x20	2# x36		M6x12	11# x16
		3# x16		ST6.3*18	12# x20
	Plastic Hooks	4# x144			
	M6x28	5# x92			
	ST4.8x30	6# x48			
	ST4.8x35	7# x72			
	M5x16	8# x6			
	ST4.8x13	9# x28			

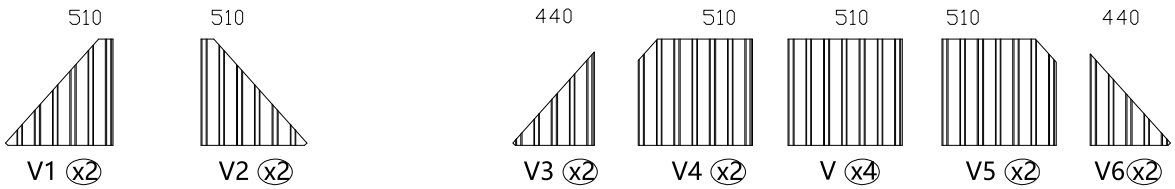


Metal Roof Panels


Resin Roof Panels

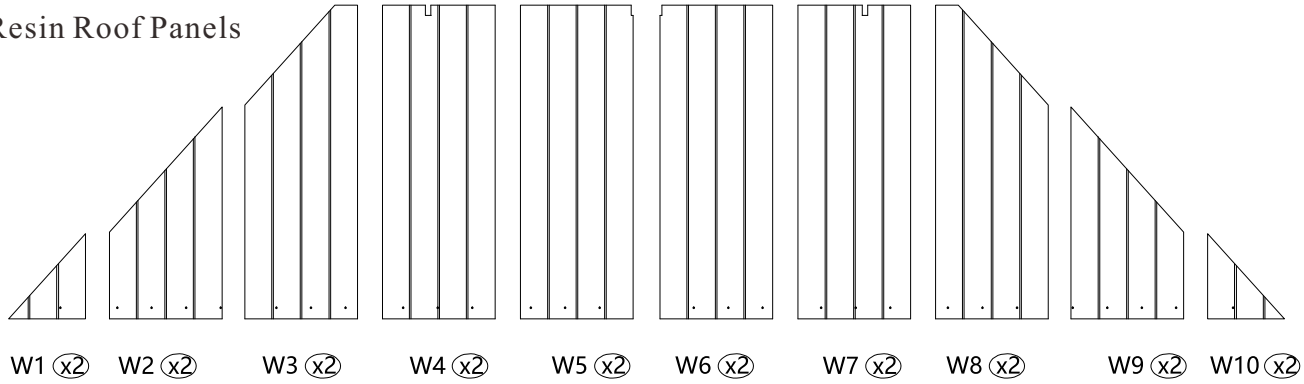


Resin Roof Panels

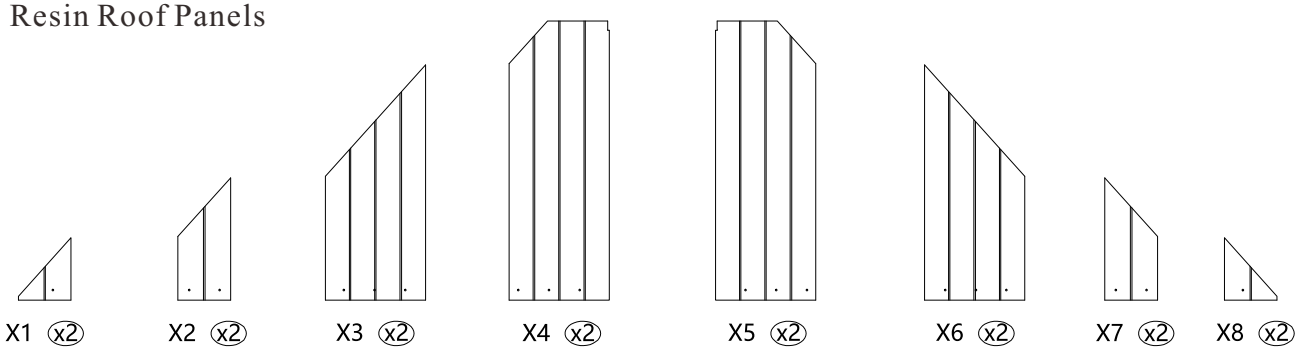


Connecting Rods

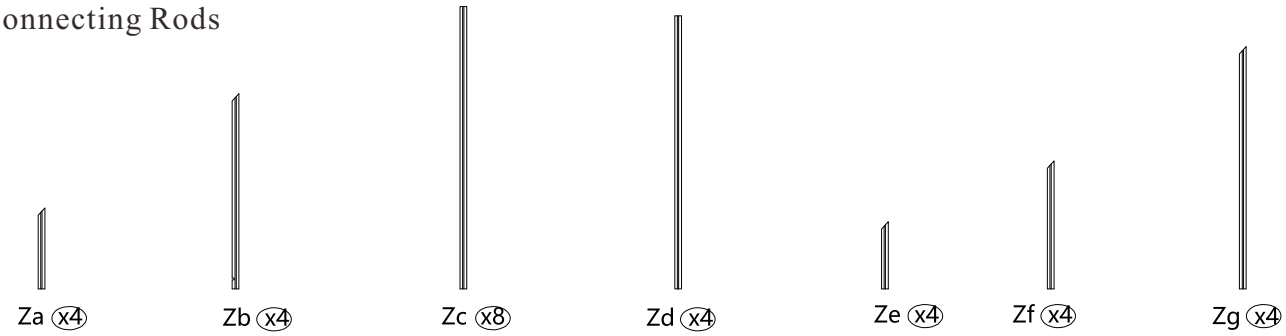


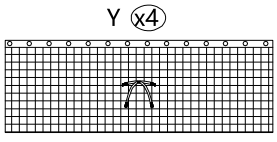


Mosquito Netting

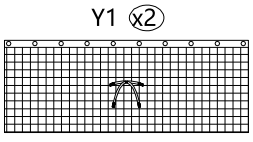


Mosquito Netting




Strap

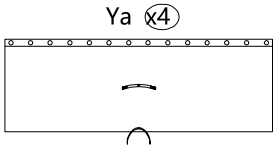


Curtain

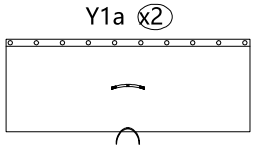

Curtain

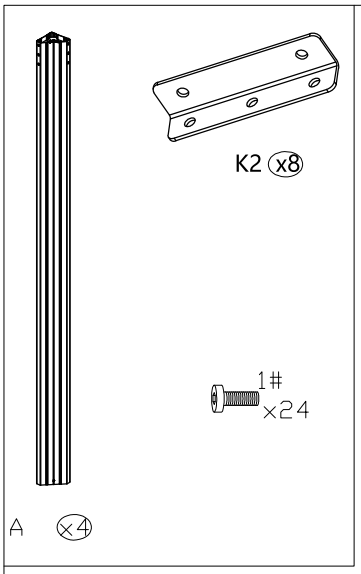


POST ASSEMBLY:

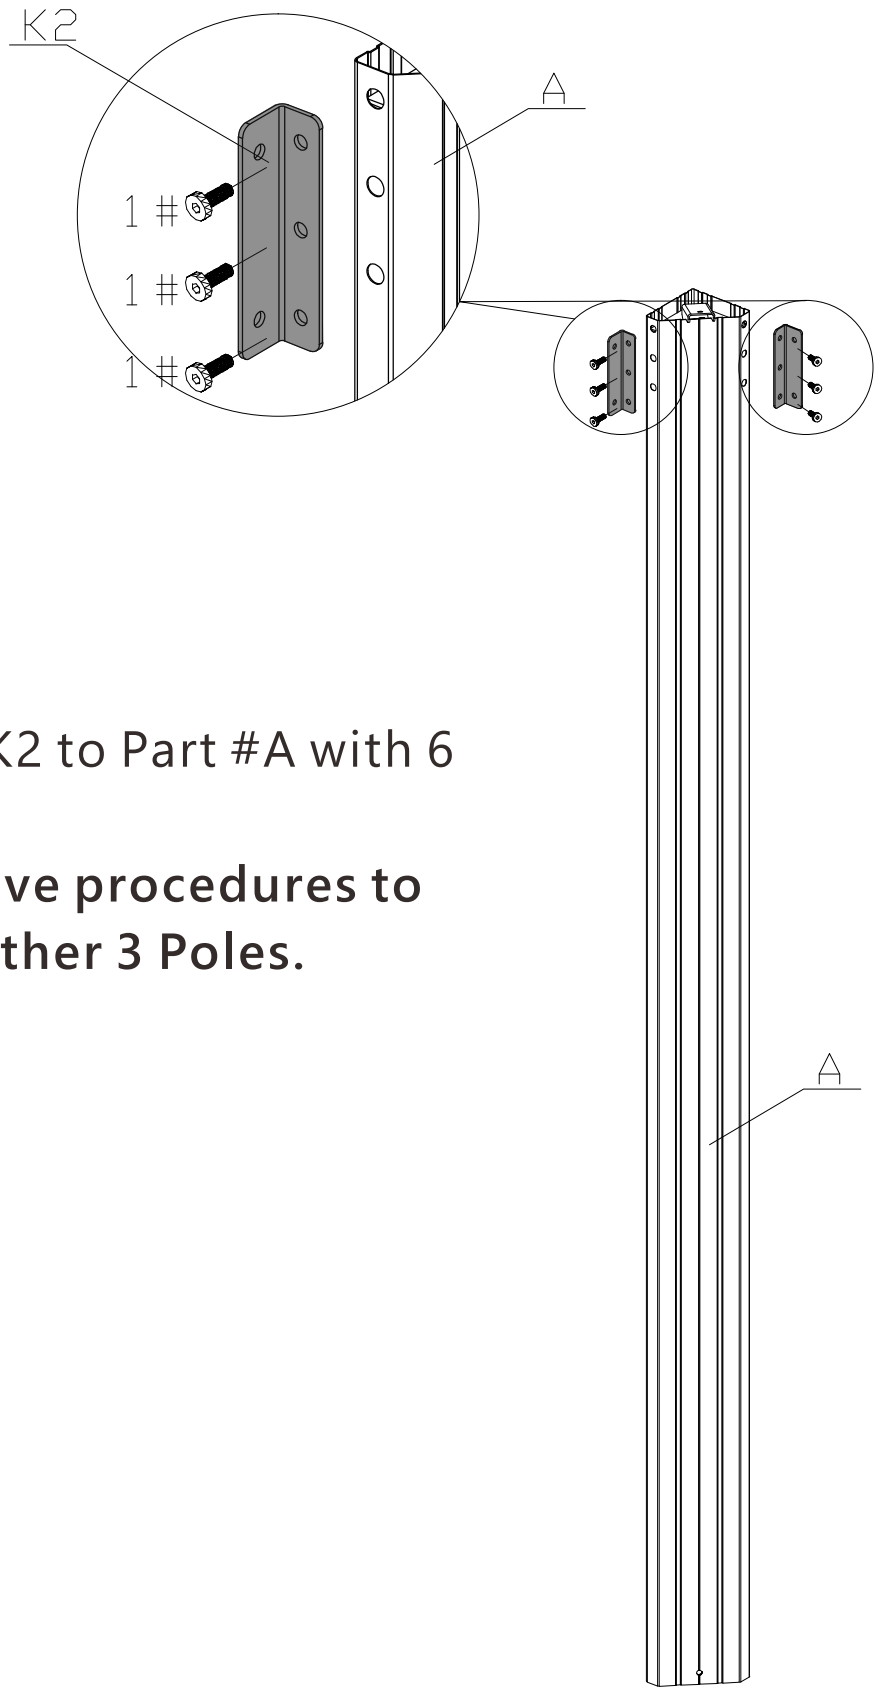


Attach 2 Part #K2 to Part #A with 6 Bolts #1.

Repeat the above procedures to assemble the other 3 Poles.

X4










(1) Put on Base Cover #K1 first ;


(2) Attach Base #K to Pole #A with 3 Bolts #1.

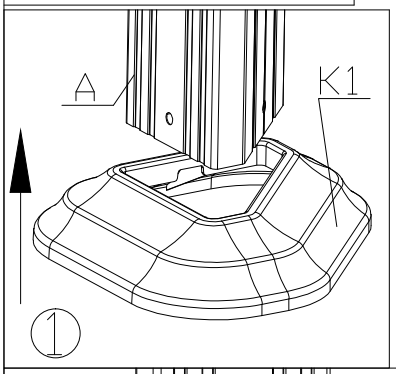

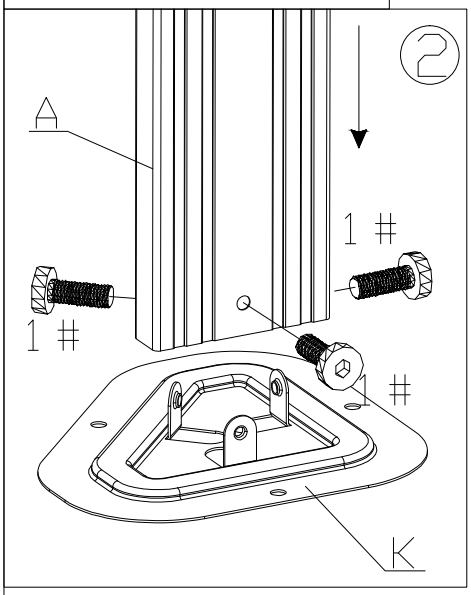

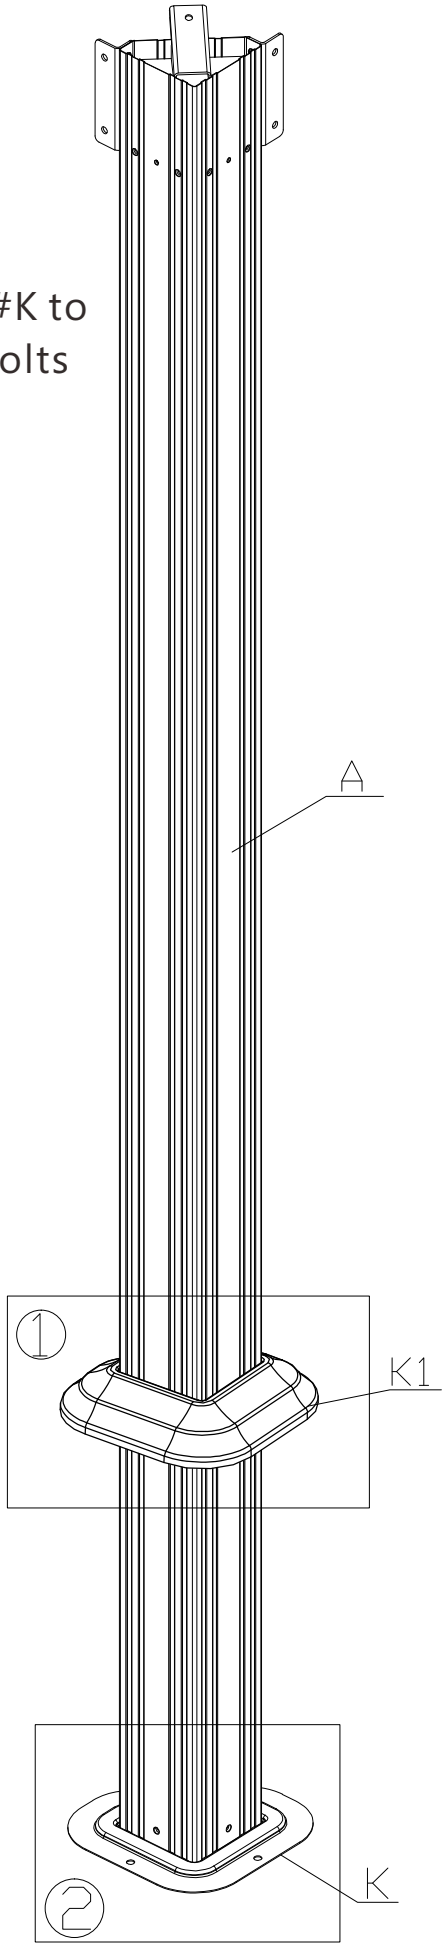


X4

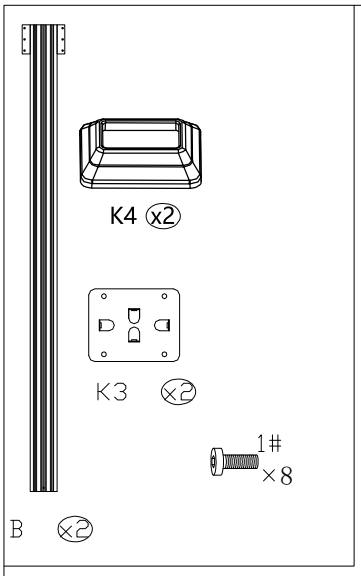



(1) Put on Base Cover #K4 first;


(2) Attach Base #K3 to Pole #B with 4 Bolts #1.

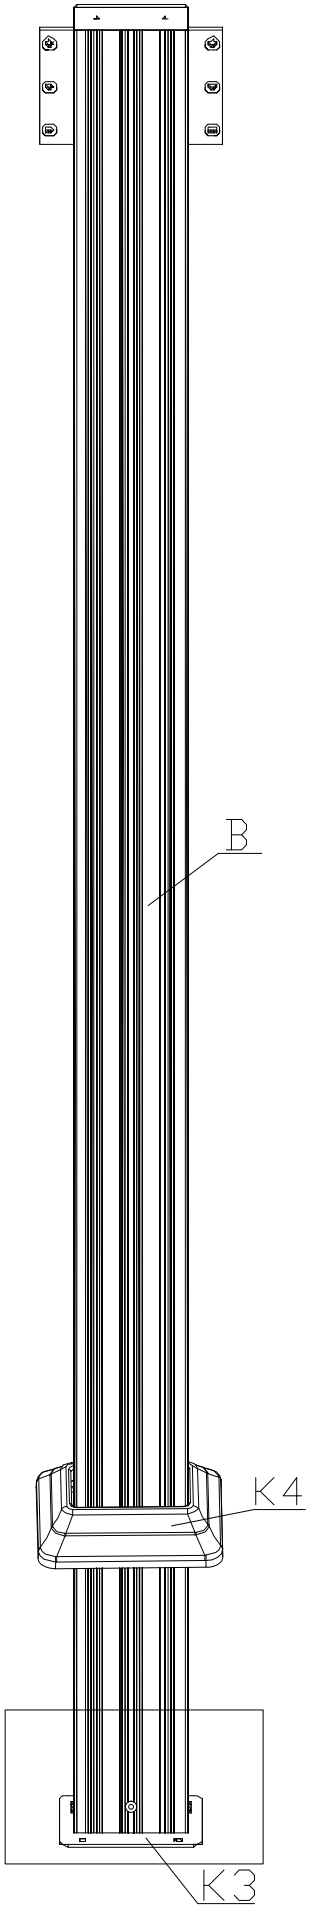

×2

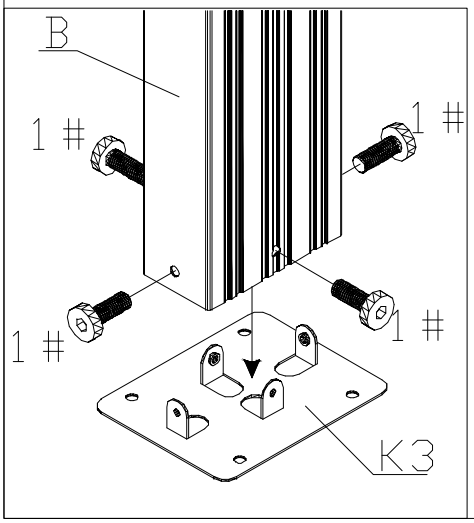

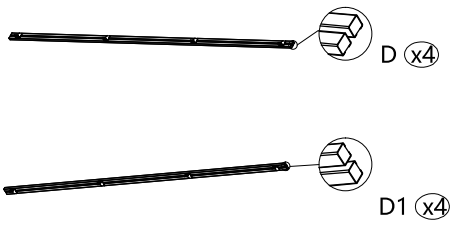




4#
x112


(1) Slide the Plastic Hooks #4 to the double-rail track #D (each slot should slide 7 plastic hooks).


(2) Repeat the above procedures for other 3 tracks D.

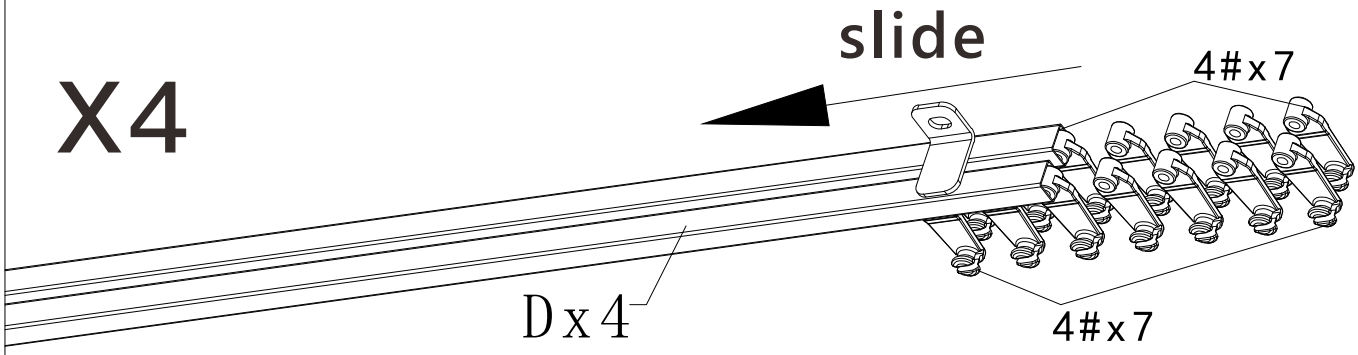


(1) Slide the Plastic Hooks #4 to the double-rail track #D1 (each slot should slide 7 plastic hooks).

(2) Repeat the above procedures for other 3 tracks D1.

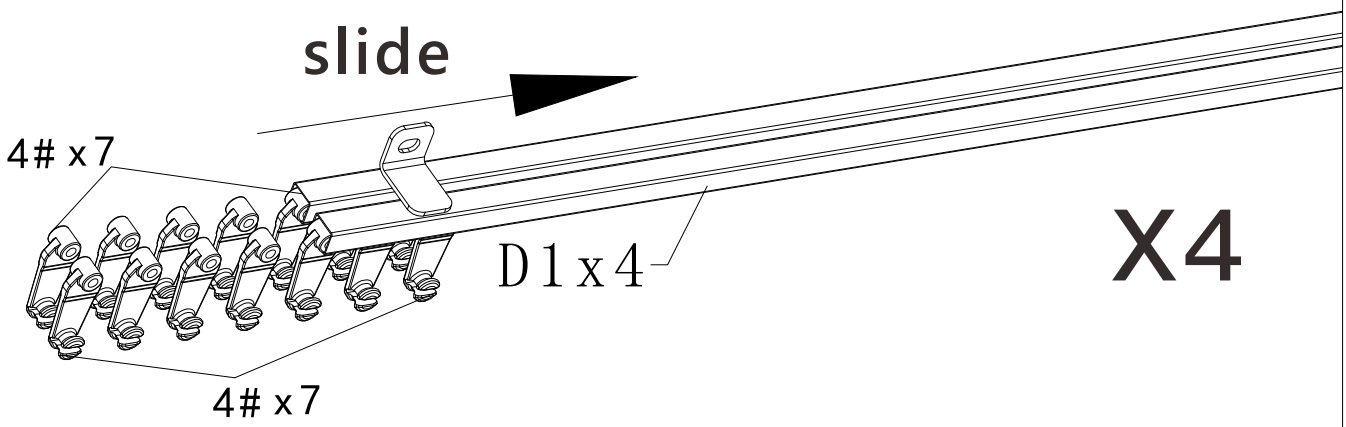

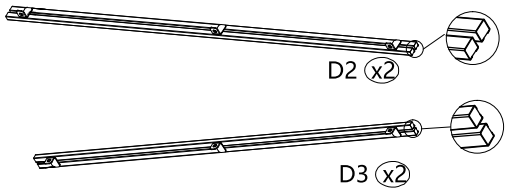




4#
x 32


(1) Slide the Plastic Hooks #4 to the double-rail track #D2 (each slot should slide 4 plastic hooks).

(2) Repeat the above procedures for the other track D2.

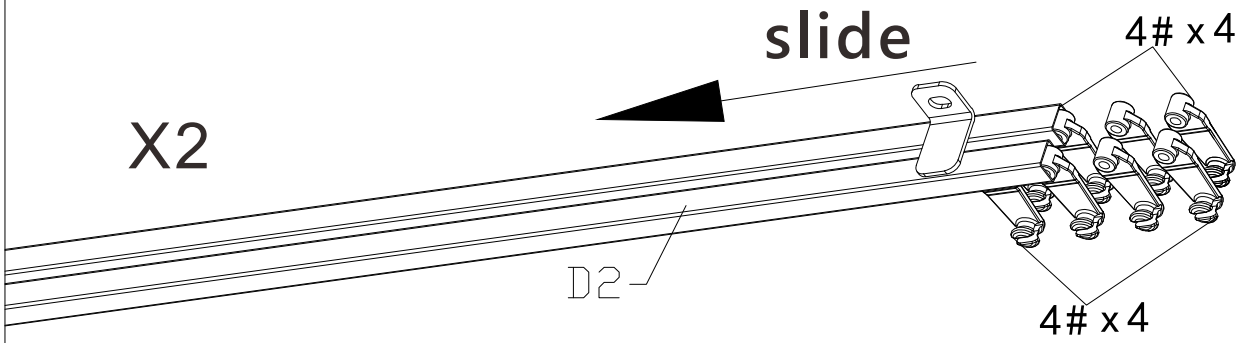

(1) Slide the Plastic Hooks #4 to the double-rail track #D3 (each slot should slide 4 plastic hooks).

(2) Repeat the above procedures for the other track D3.

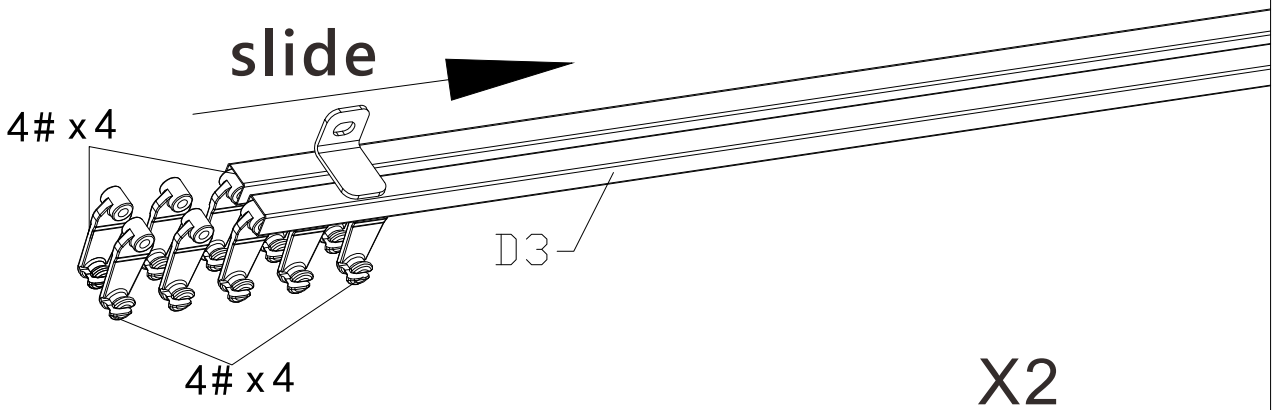




C ⓧ2



C4 ⓧ2




E ⓧ2




1#
x16

BEAM ASSEBMLY:

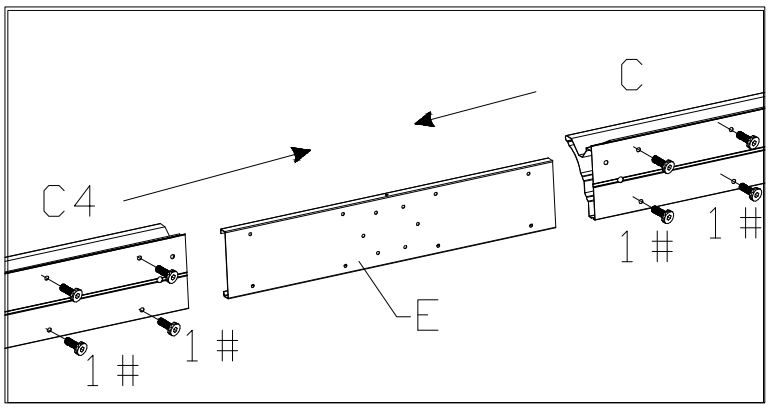


(1) Insert Part #E into Part #C4, and secure with 4 Bolts #1.
(2) Insert the other side of Part #E into Part #C and secure with 4 Bolts #1.

Repeat the above procedures to assemble the other Part#C4 and #C.

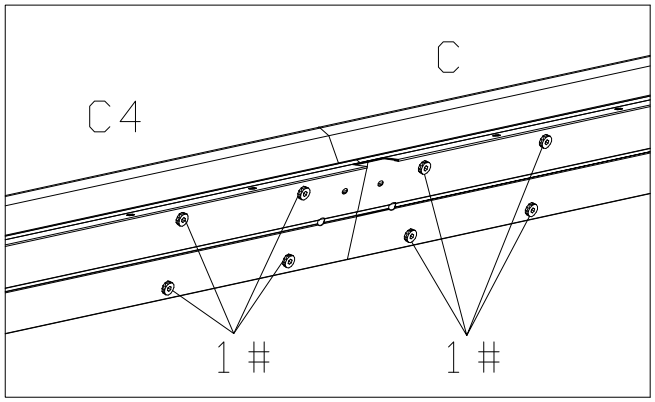


TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H) and Joint Cover #G to affix the gap. (See P9)

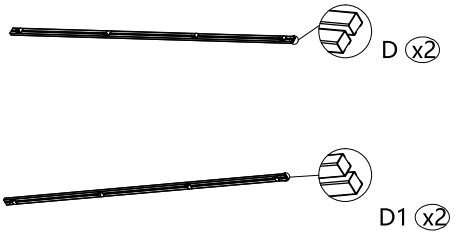






Use 8 Bolts #1 to fix the track D & D1 to the beam C4 & C.


Repeat the above procedures for another beam C4 &C.

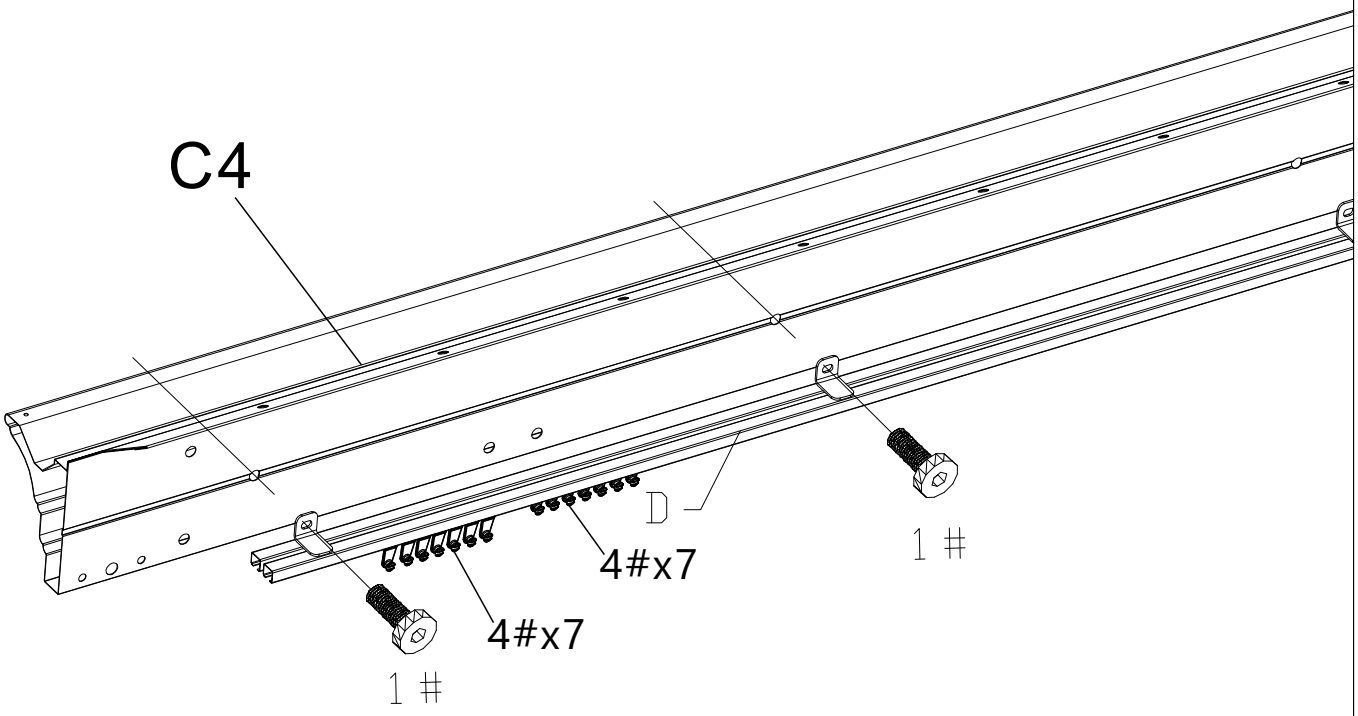


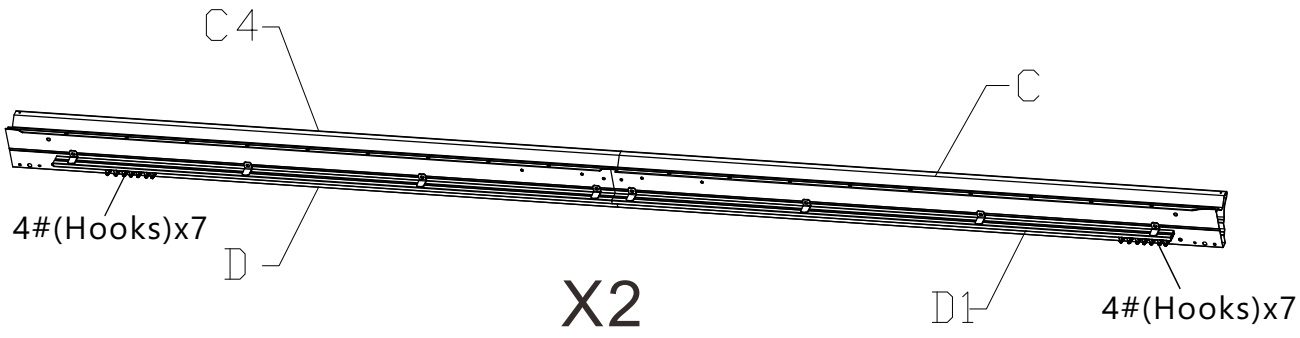


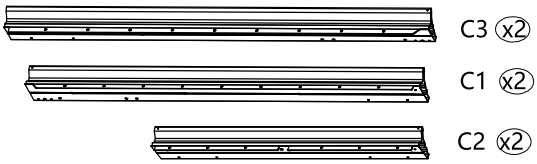






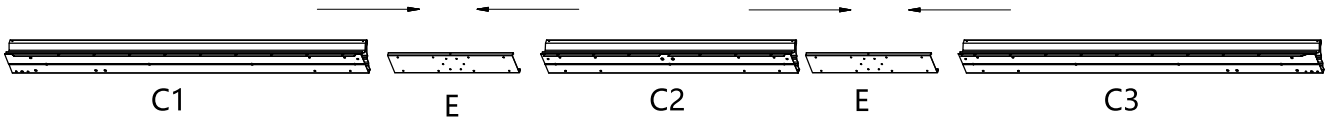

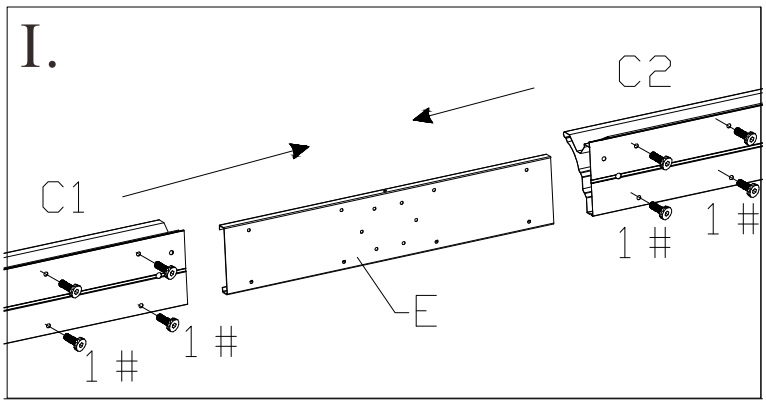


(1) Insert Part #E into Part #C1, and secure with 4 Bolts #1.
(2) Insert the other side of Part #E into Part #C2 and secure with 4 Bolts #1.

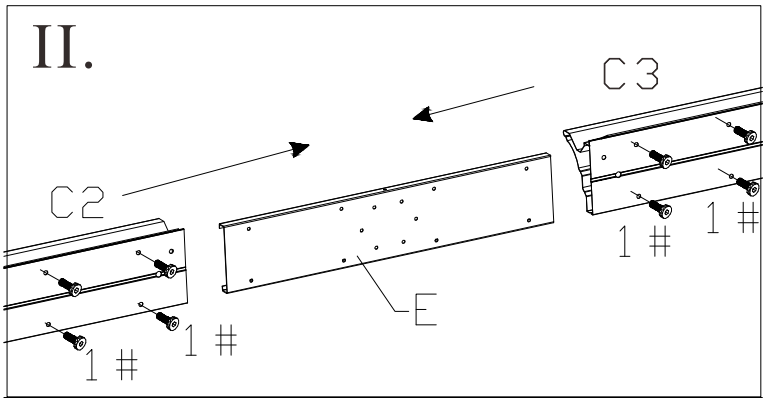


(3) Insert Part #E into Part #C2, and secure with 4 Bolts #1.
(4) Insert the other side of Part #E into Part #C3 and secure with 4 Bolts #1.

Repeat the above procedures to assemble the other Part#C1, C2 & C3.

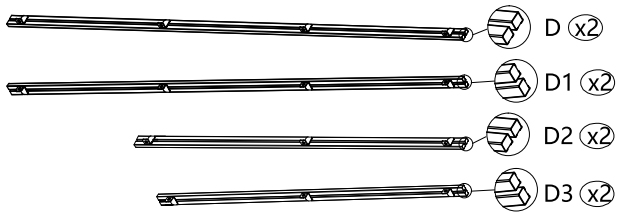





1#
x 28

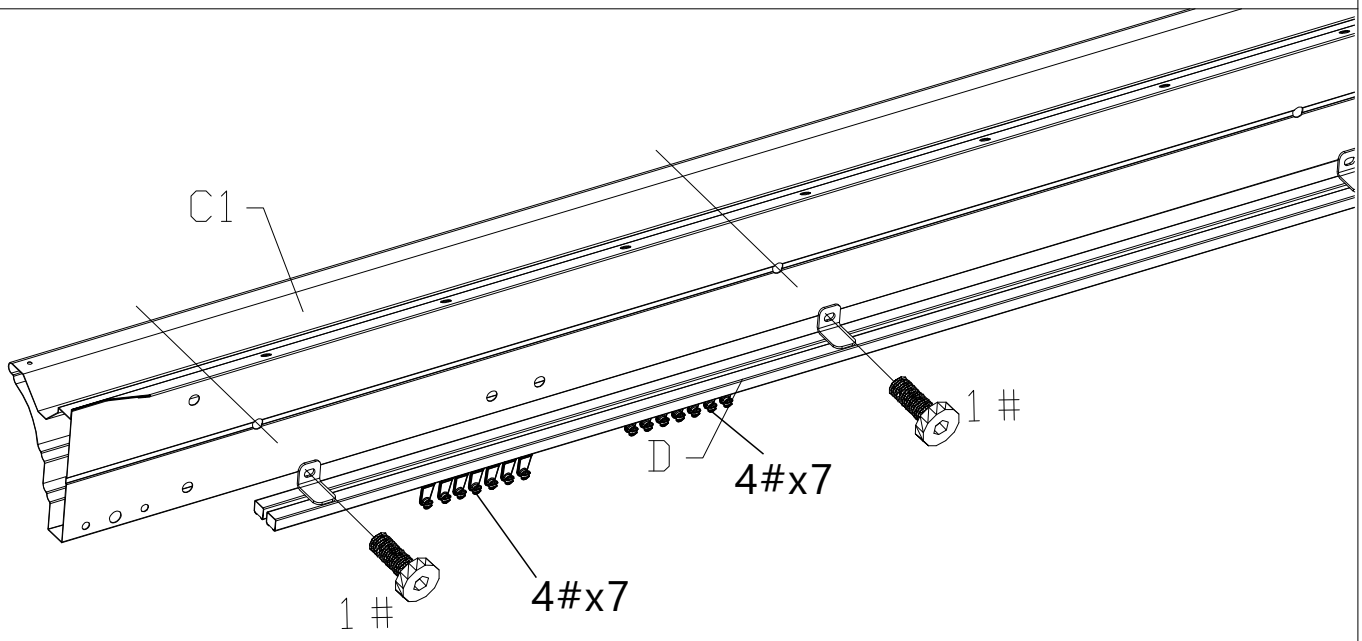


(1)Use 14 Bolts #1 to fix the track D, D1,D2& D3 to the beam C1, C2 & C3.

Repeat the above procedures to assemble the other Part#C1, C2 & C3.

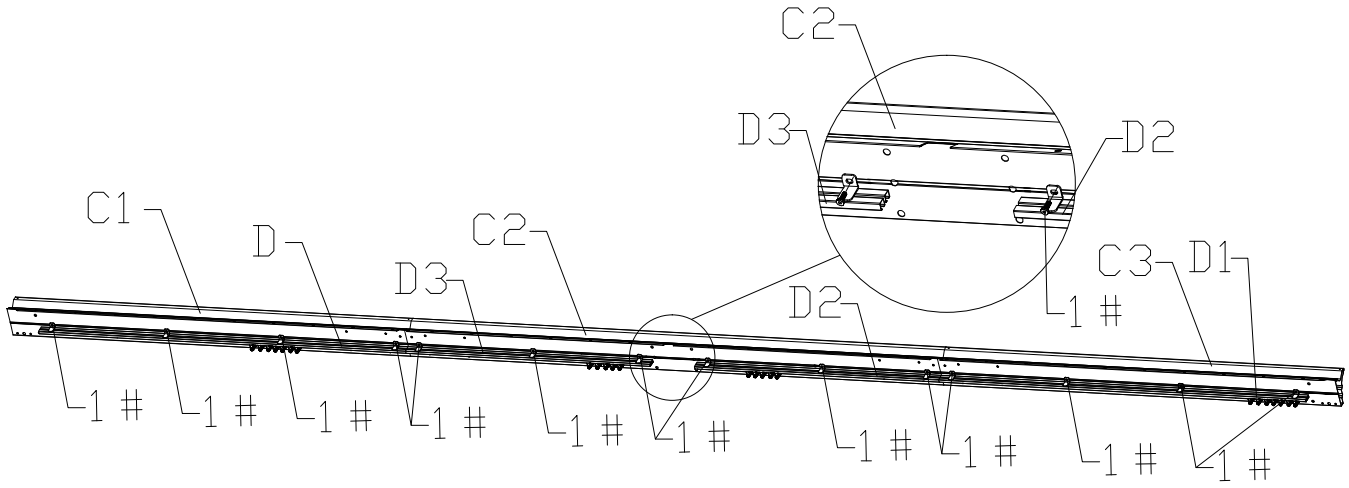


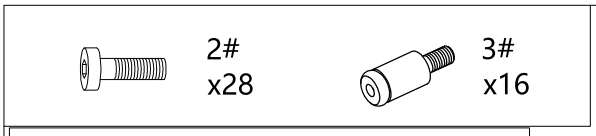


FRAME ASSEMBLY:

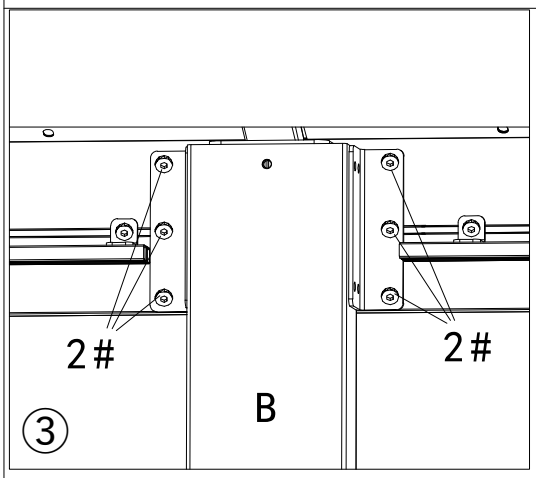


Inside View

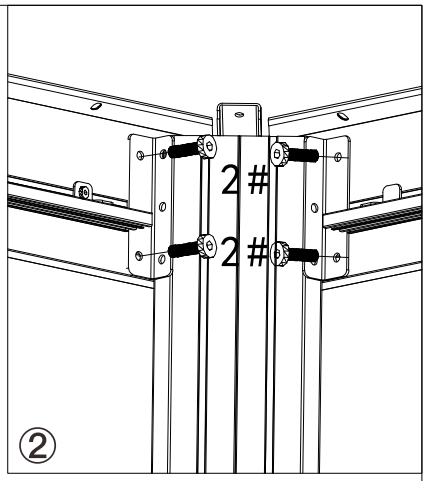


Inside View

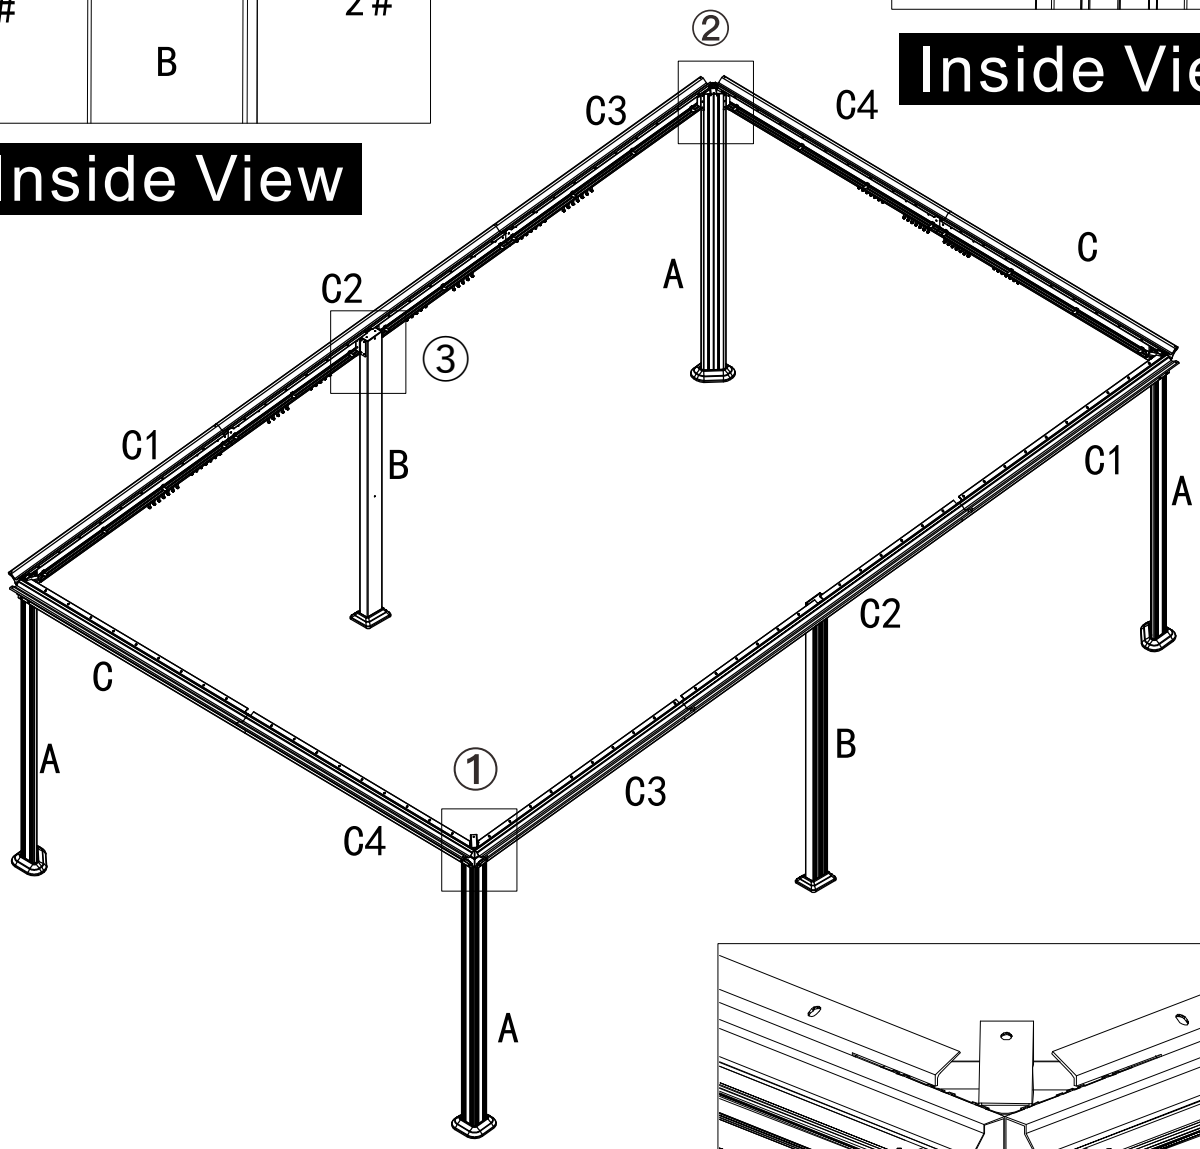


Please don't tighten all bolts.

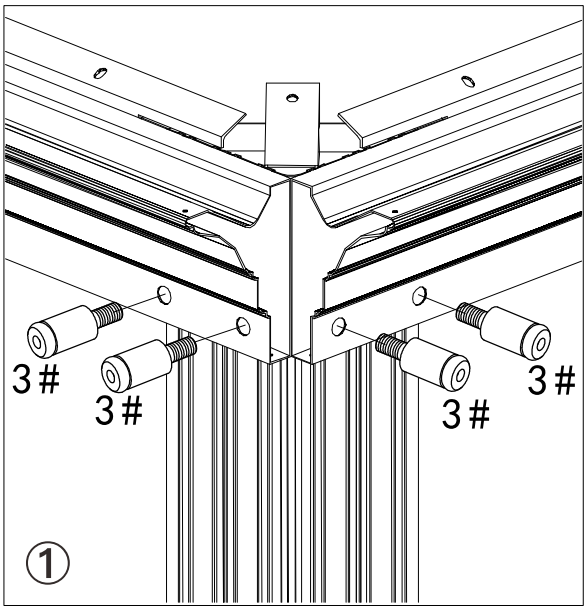

Outside View

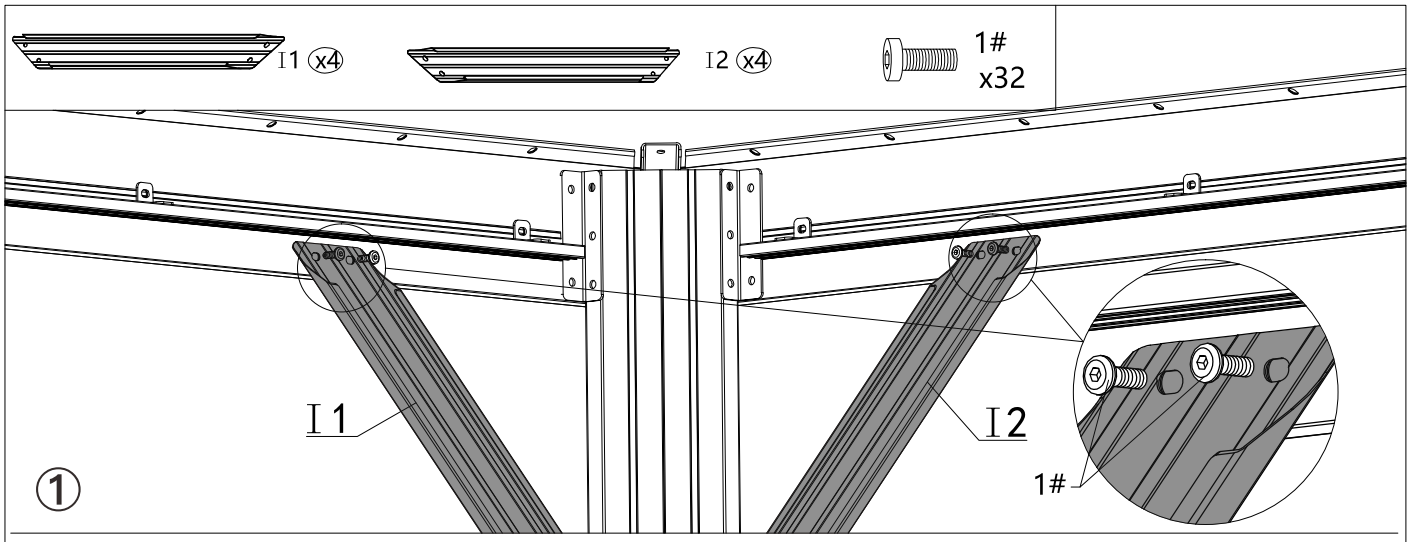


CORNER SOLIDIFYING BAR ASSEMBLY:

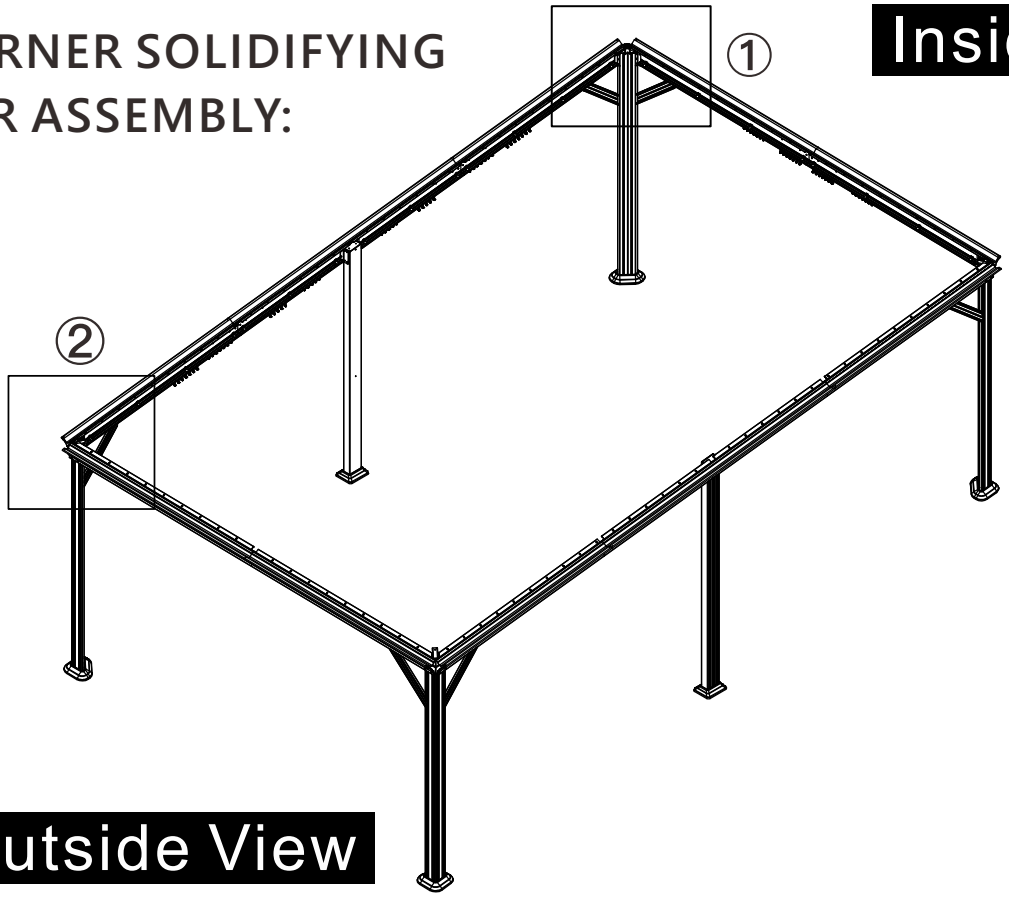

Inside View

Outside View

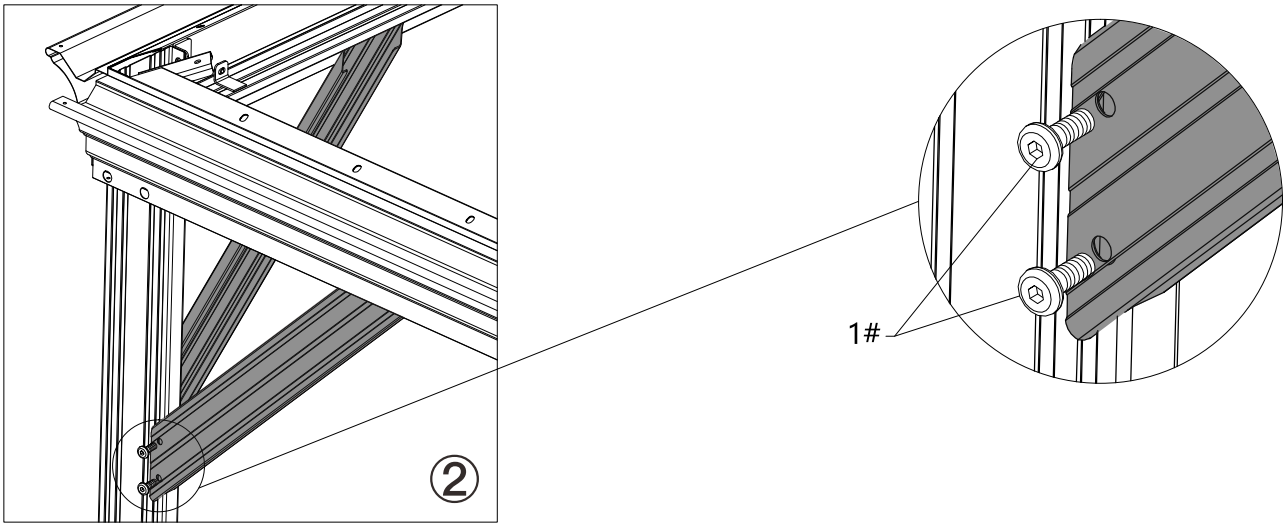



F x4



G x6


8#
x6



9#
x28


H x1


CORNER COVER & JOINT COVER ASSEMBLY:

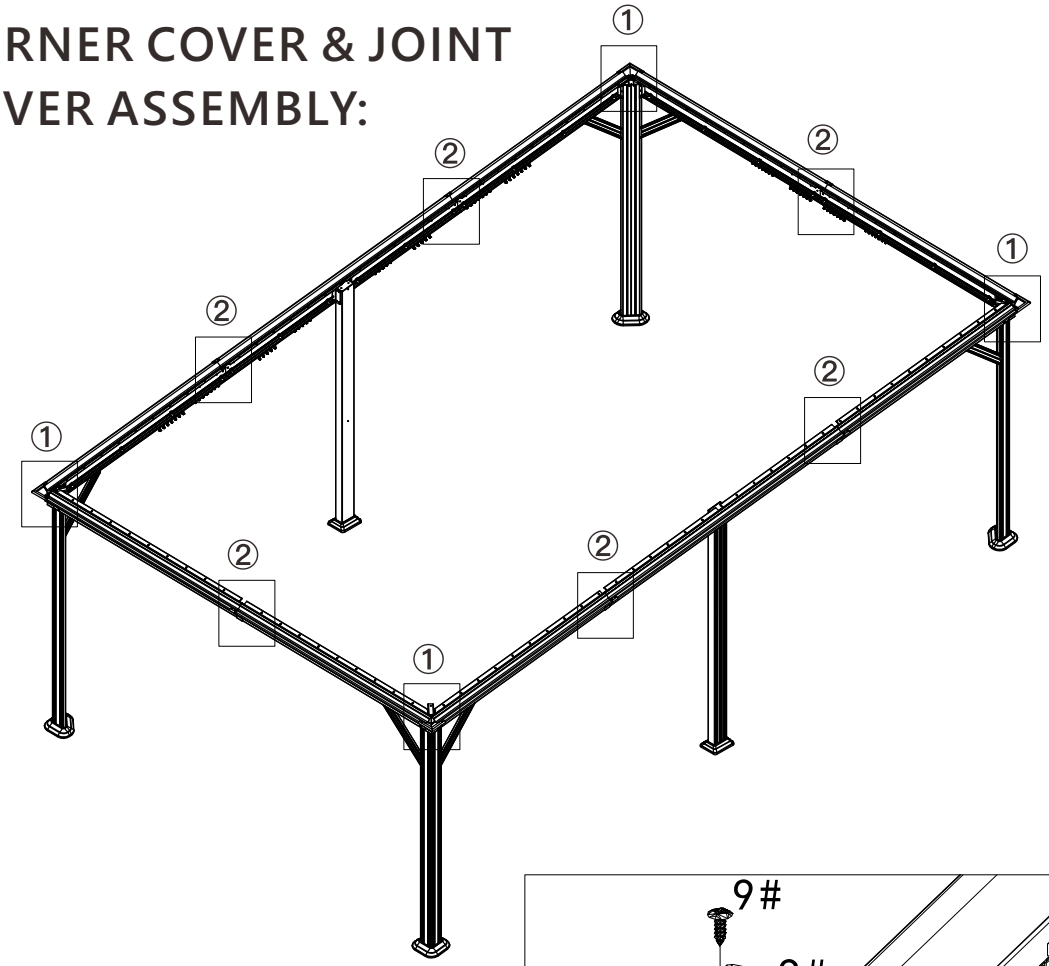



Use 5mm silicone sealant (part #H) and Joint Cover #G to affix the gap.

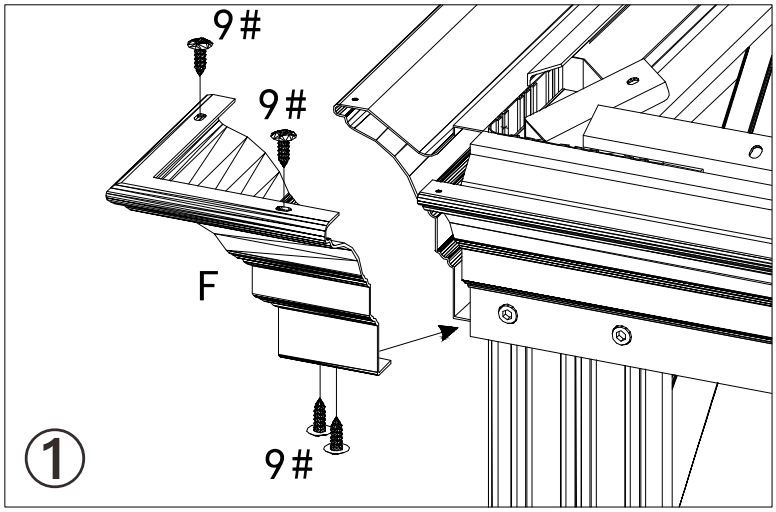

②

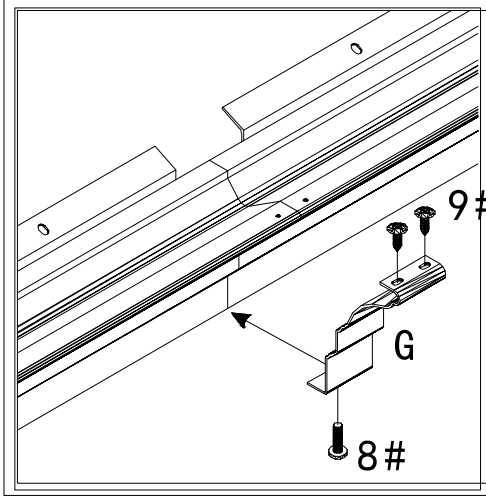


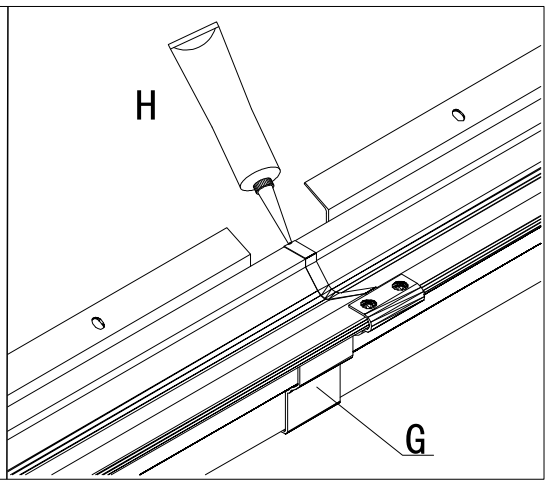

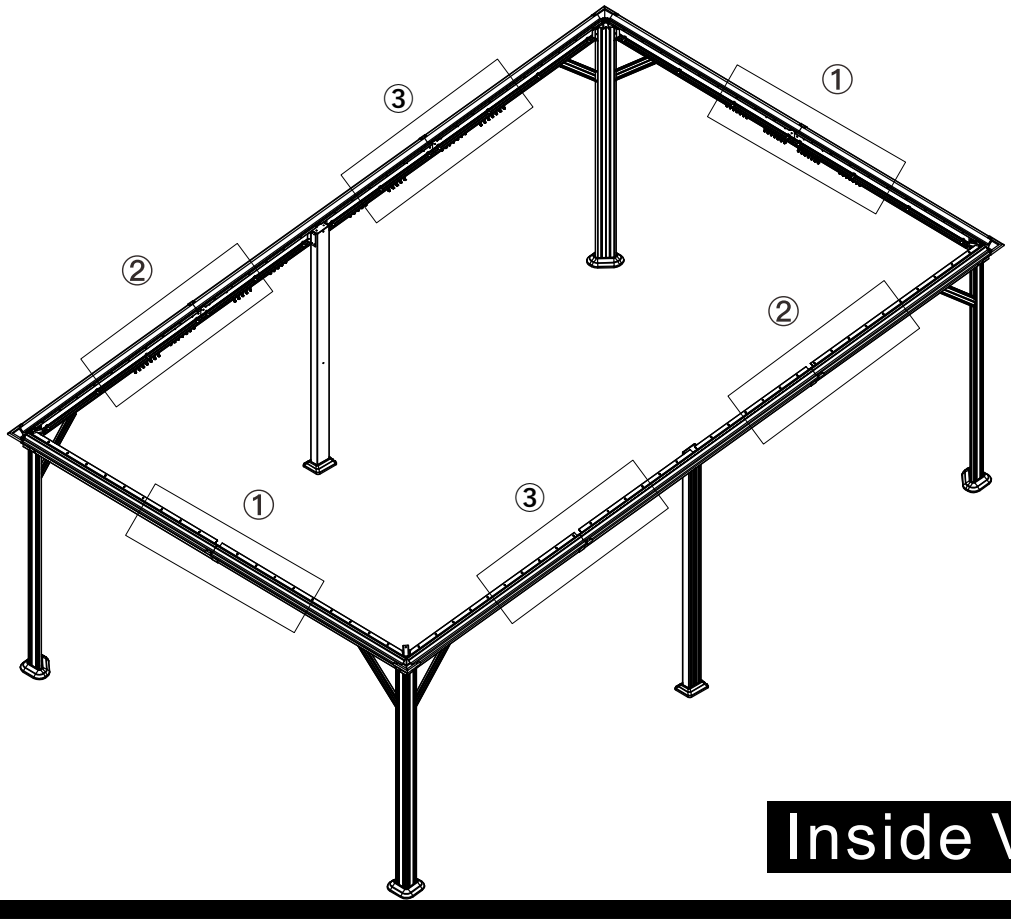


Inside View


①

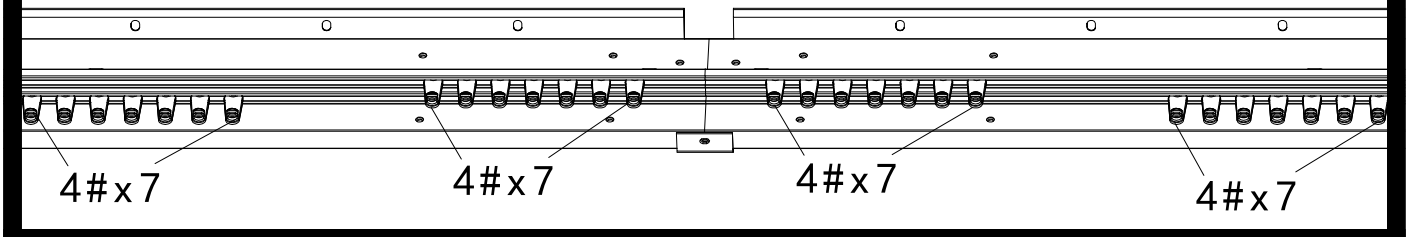

②

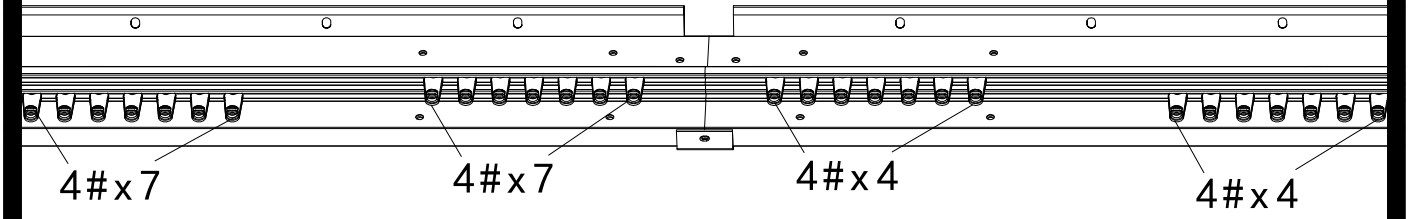

③

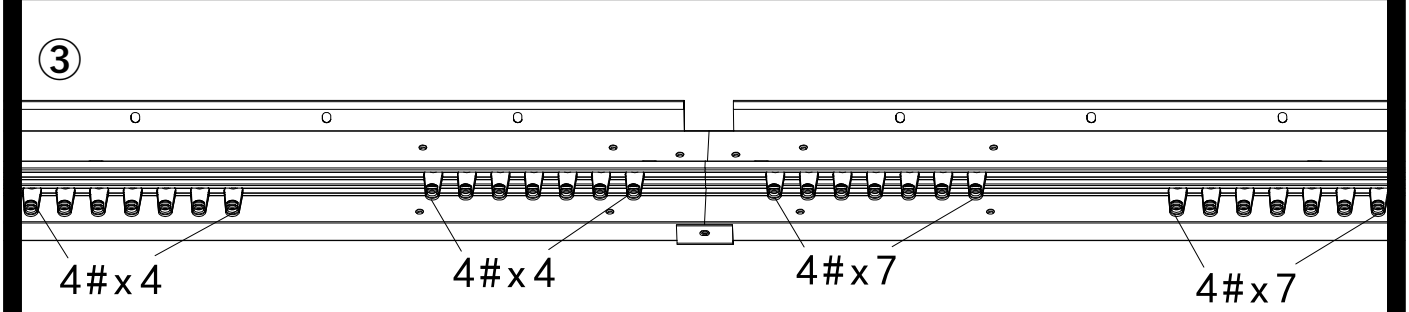




M x4




M1 x4



2#
x8

CORNER ROOF TUBE ASSEMBLY:

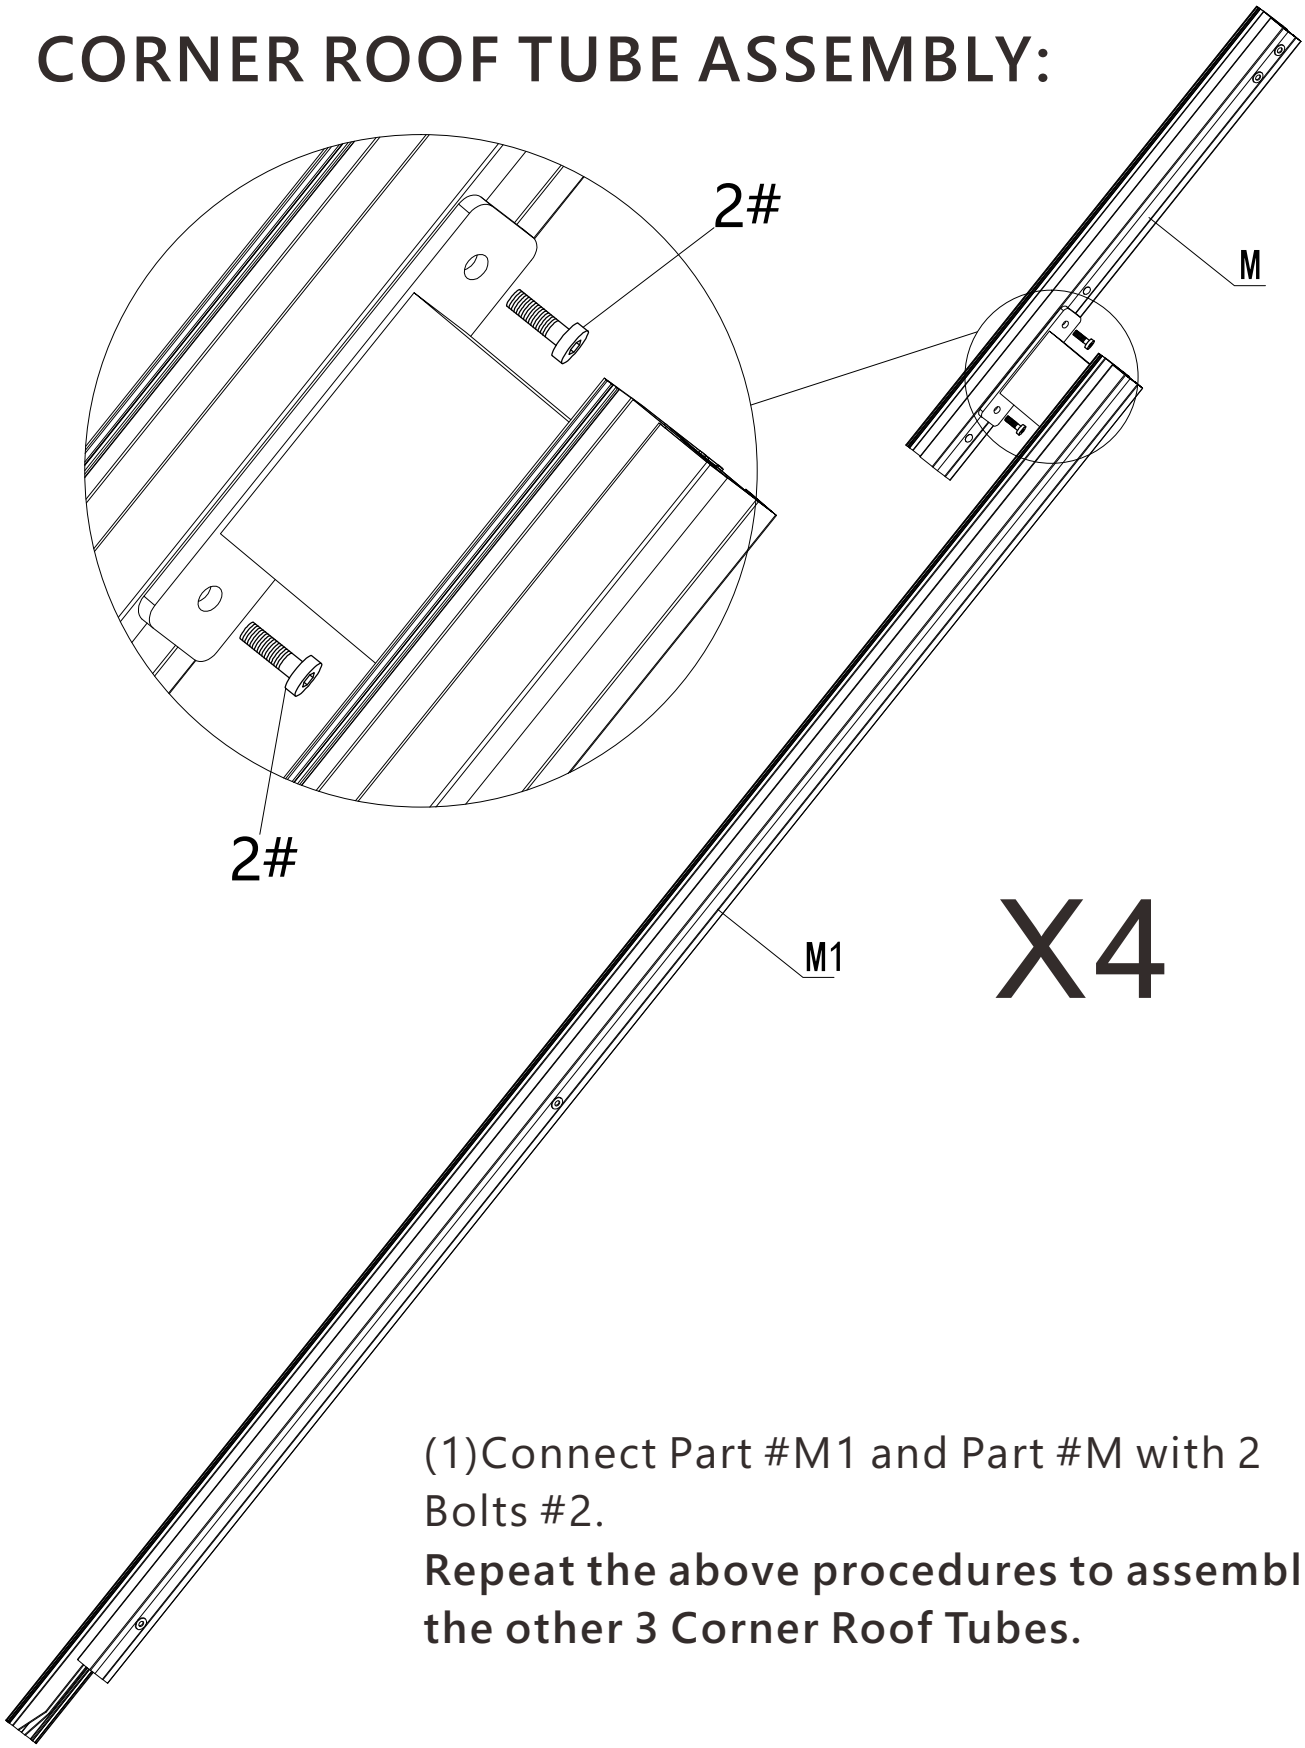

X4


(1)Connect Part #M1 and Part #M with 2 Bolts #2.


Repeat the above procedures to assemble the other 3 Corner Roof Tubes.




J x1

CORNER ROOF TUBE AND INSIDE ROOF CONNECTOR ASSEMBLY:

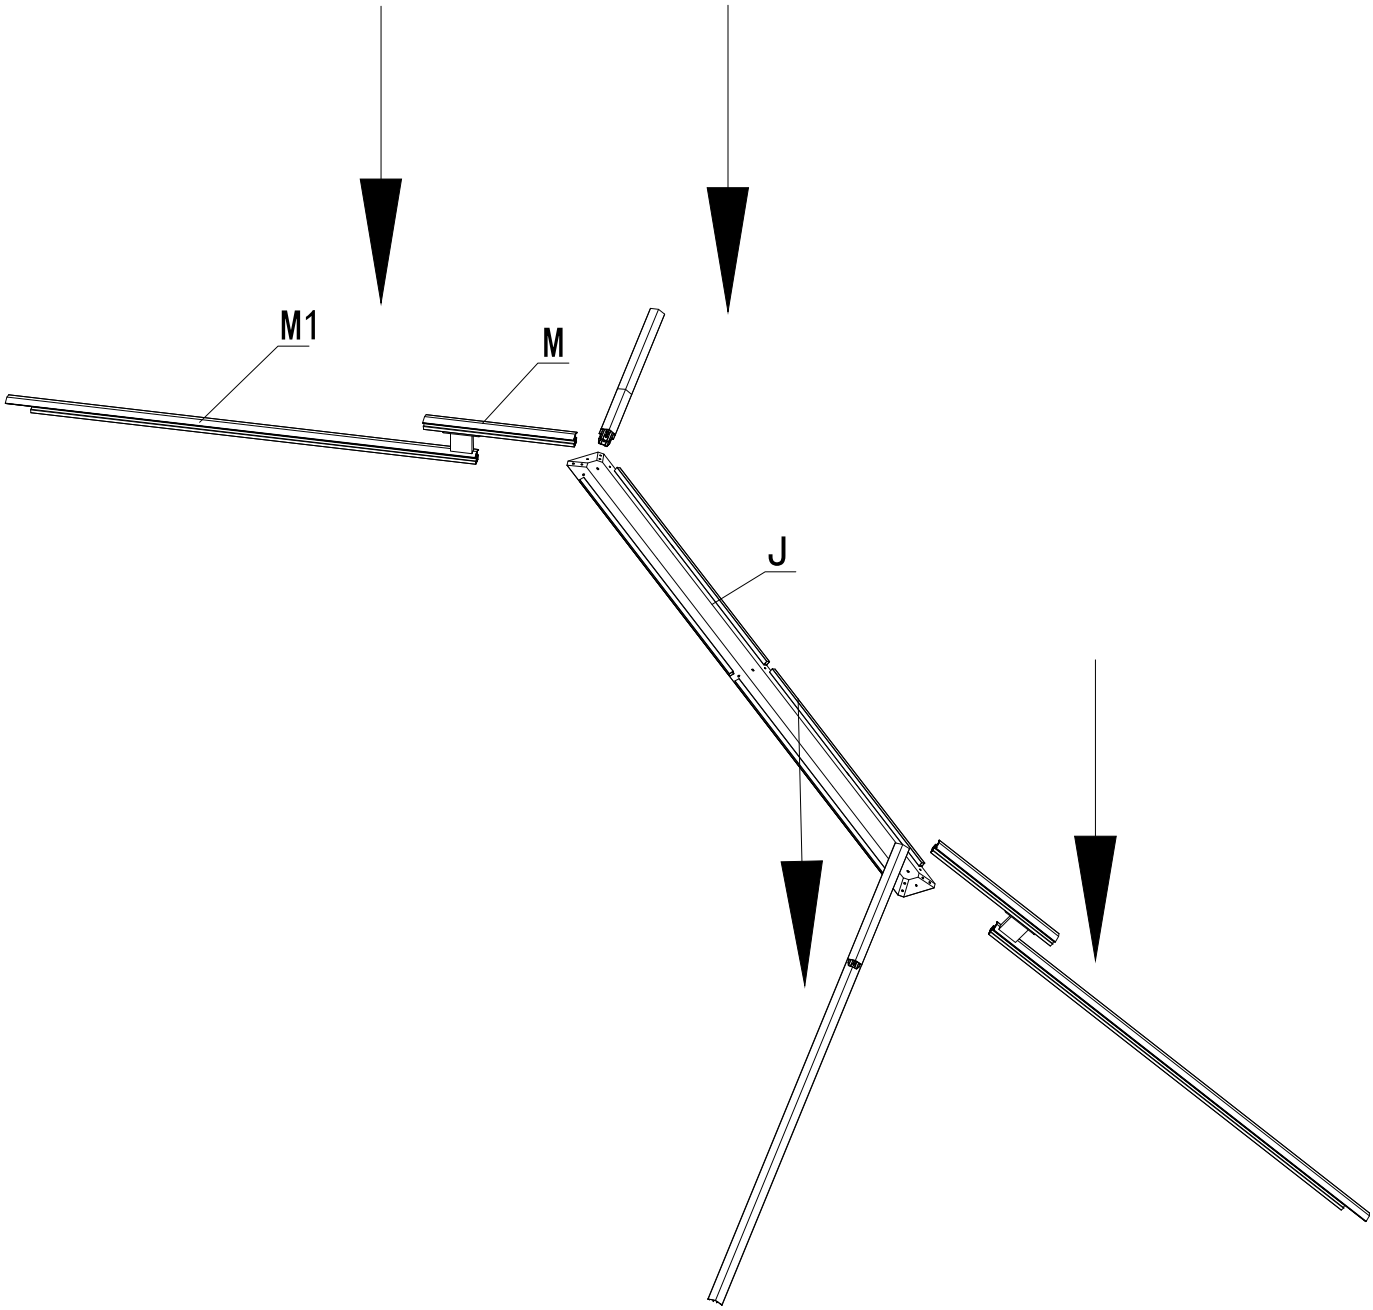





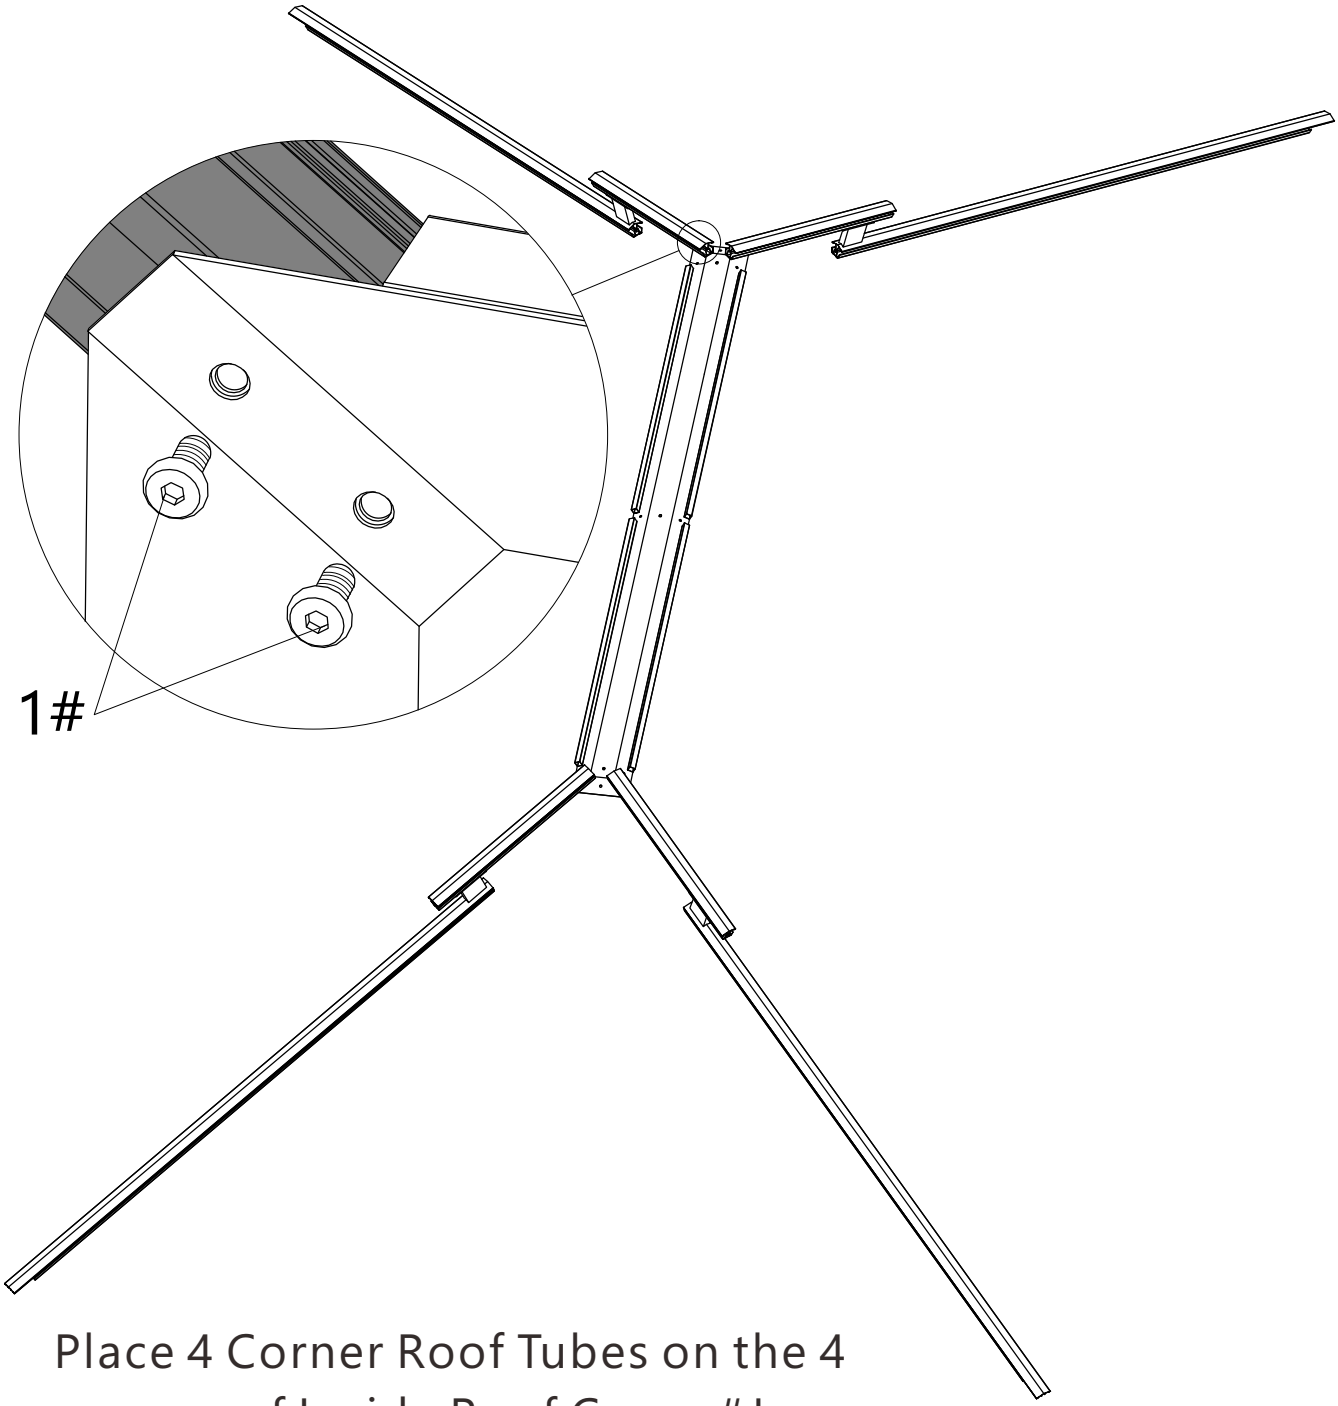


Place 4 Corner Roof Tubes on the 4 corners of Inside Roof Cover #J, secure with 8 Bolts #1. (From bottom to top)

Lift 4 corner roof tubes and inside roof connector to the top of the frame. (You may need 2 people and 2 ladders.)

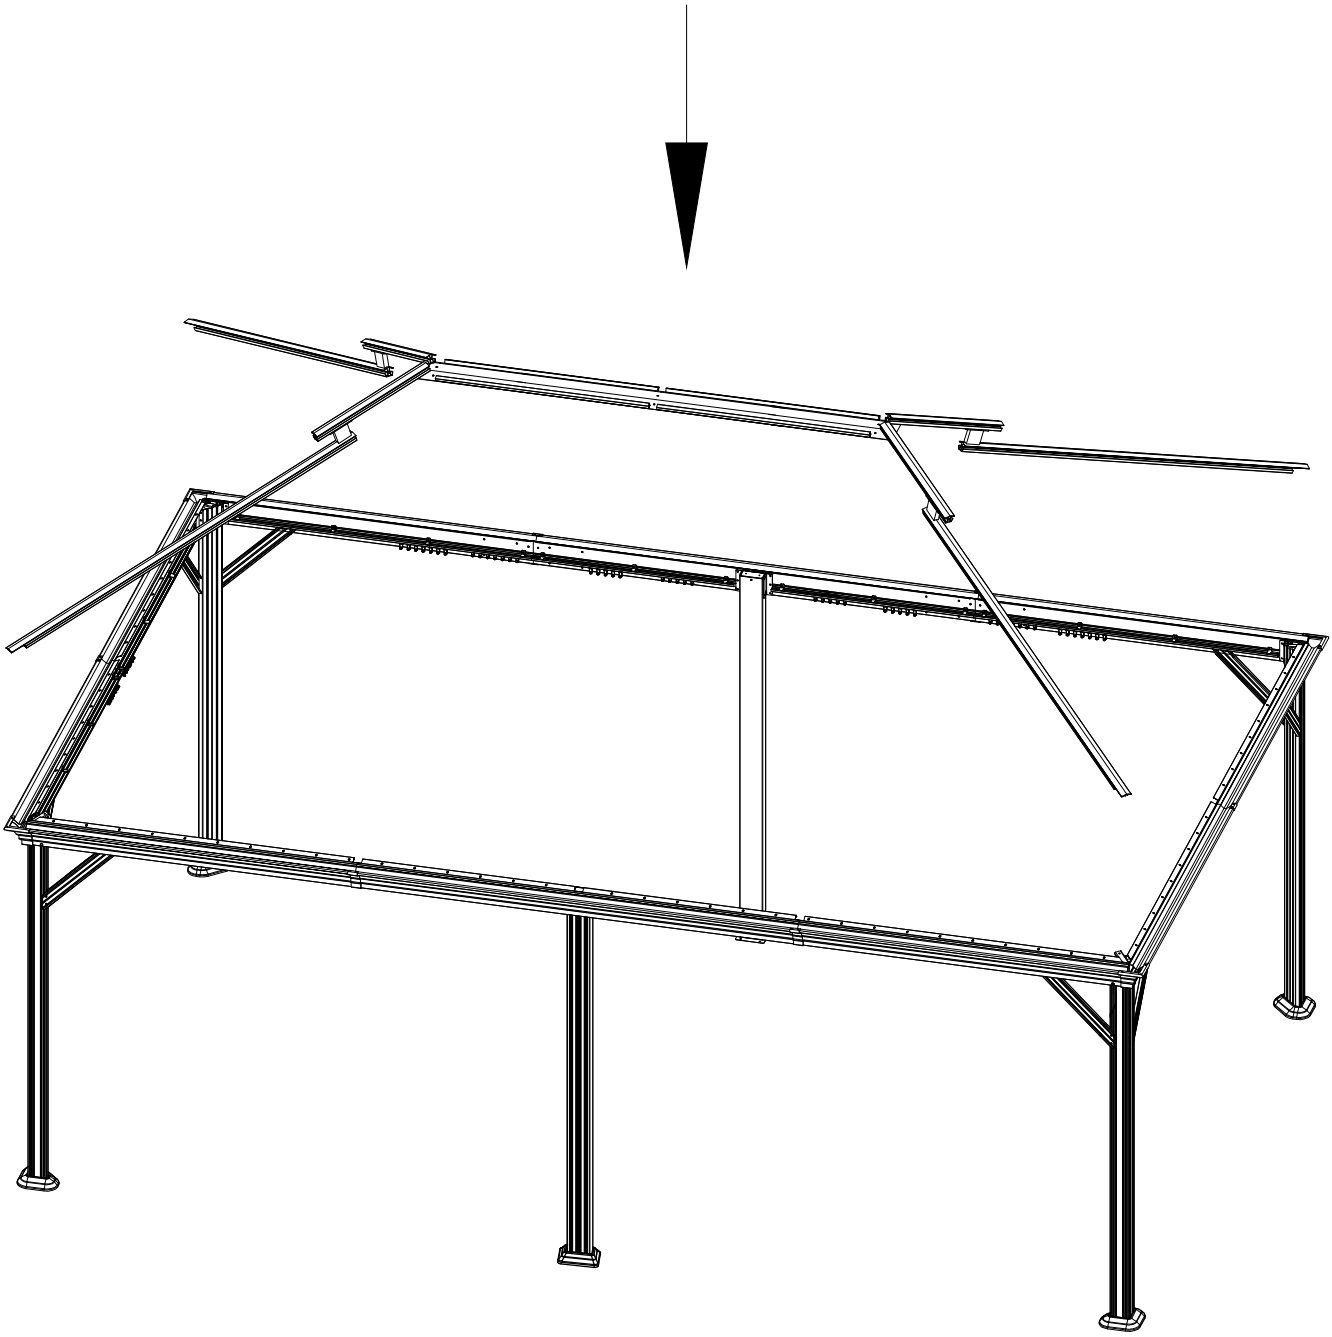





Secure with 4 Bolts #1.

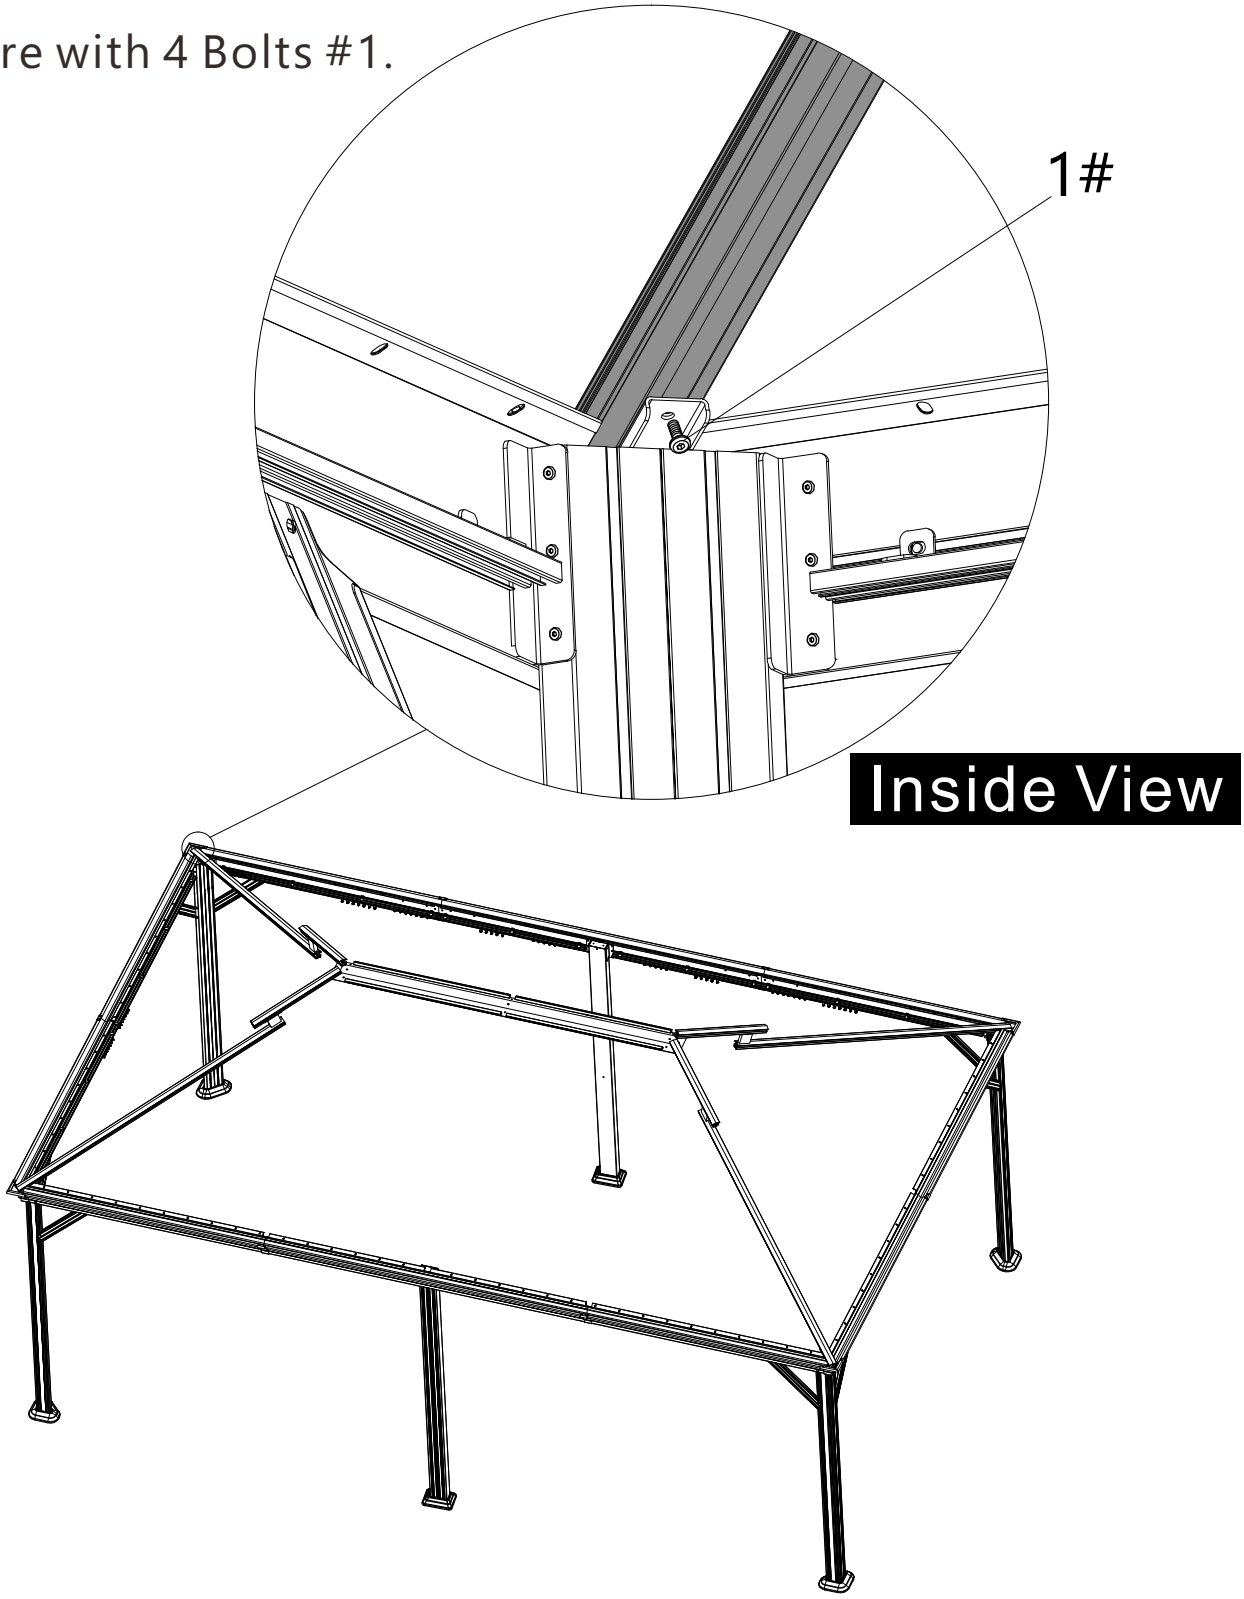





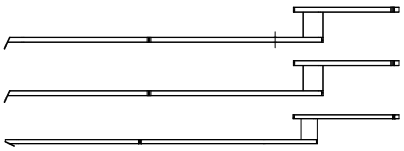


MIDDLE ROOF TUBE ASSEMBLY:

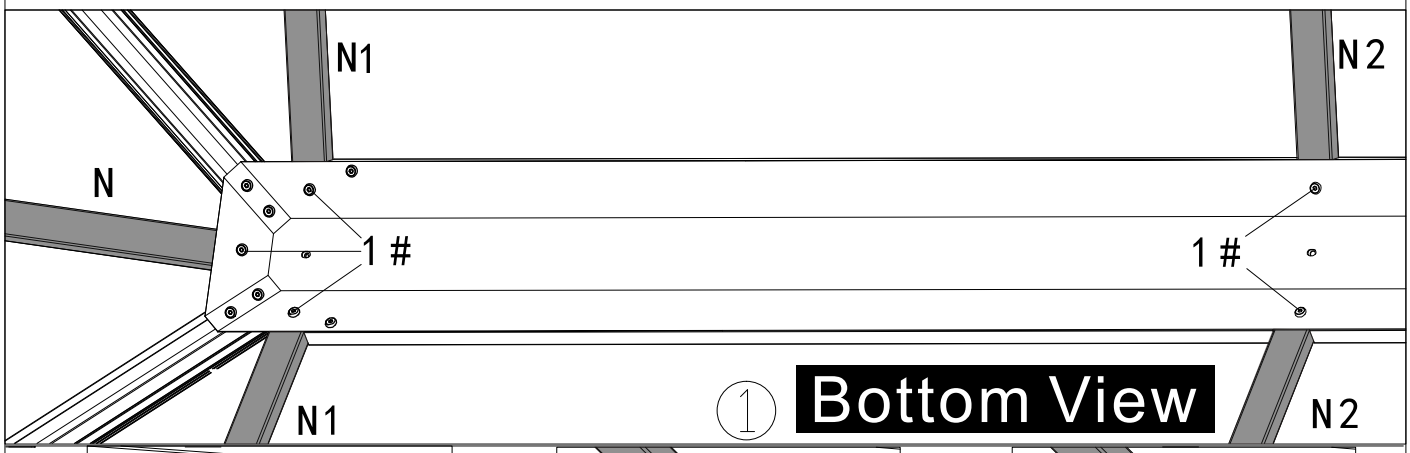


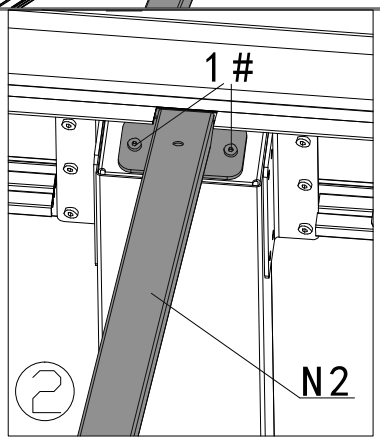

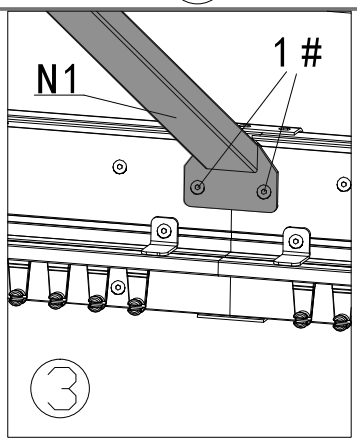


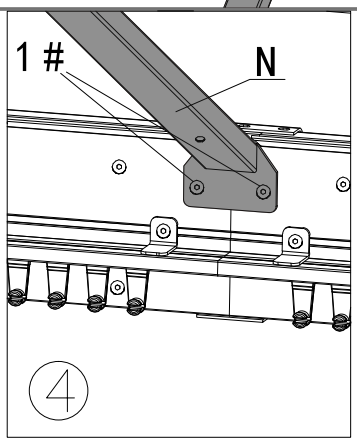


Inside View

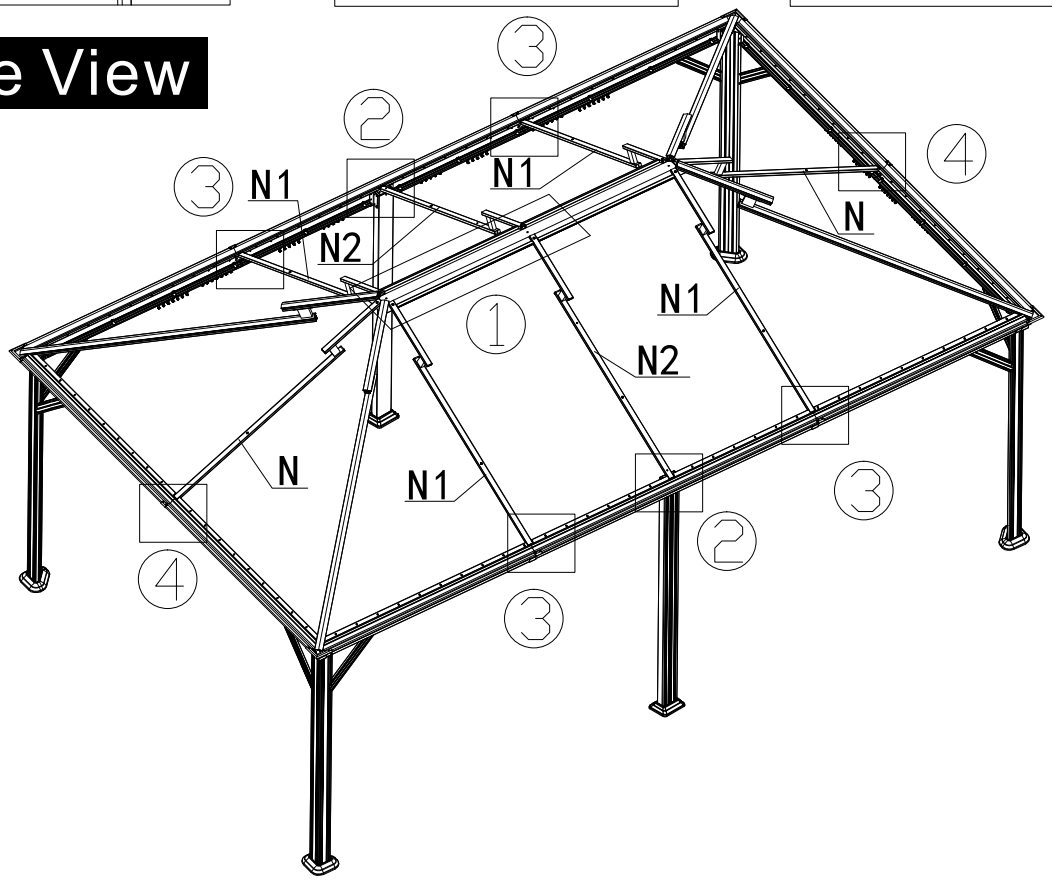


Check the the frame as pictures below shows.

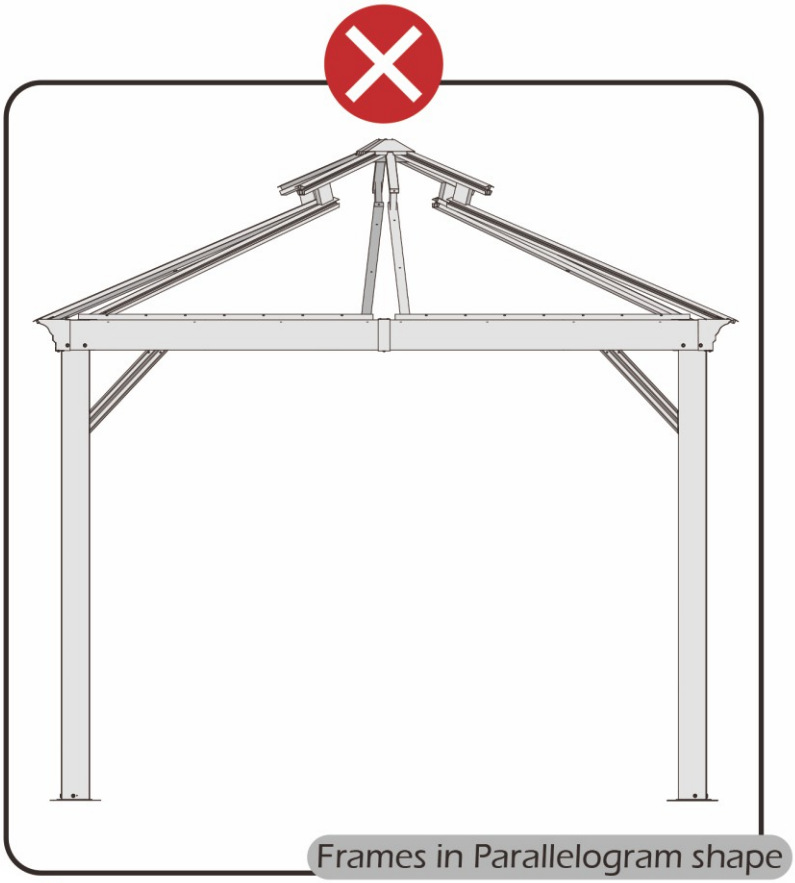


Frames in Parallelogram shape

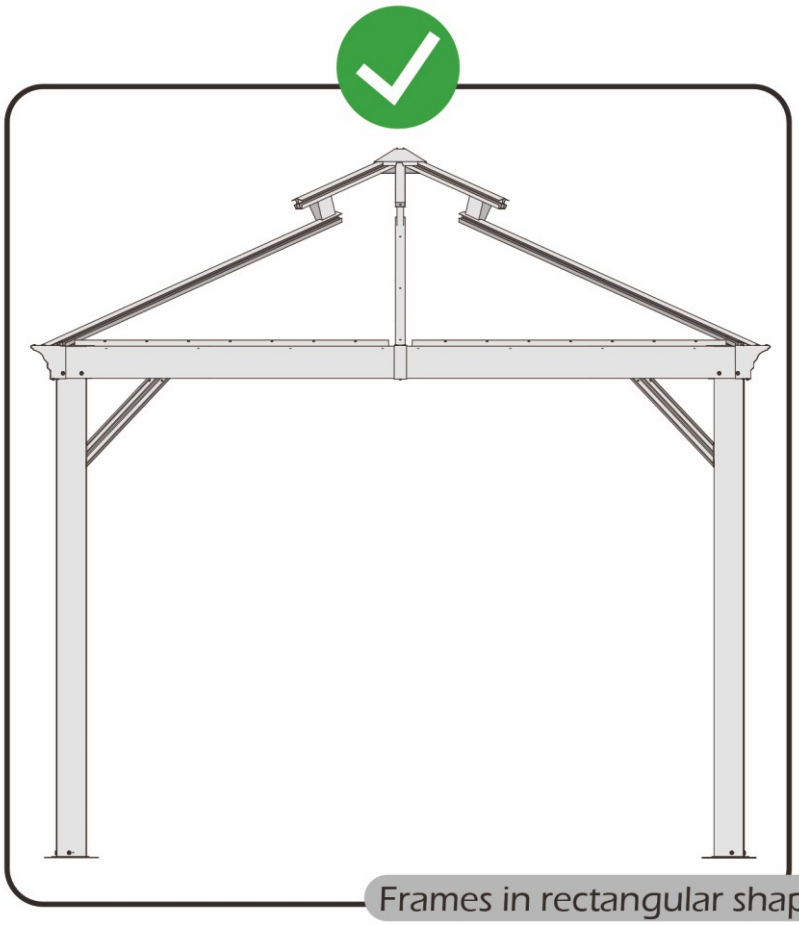



Frames in rectangular shape

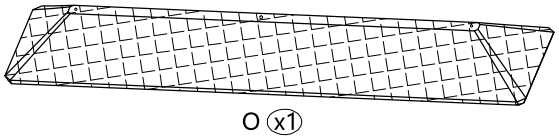

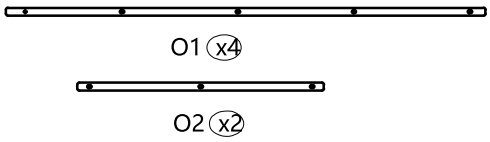



PLASTIC BAR ASSEMBLY:

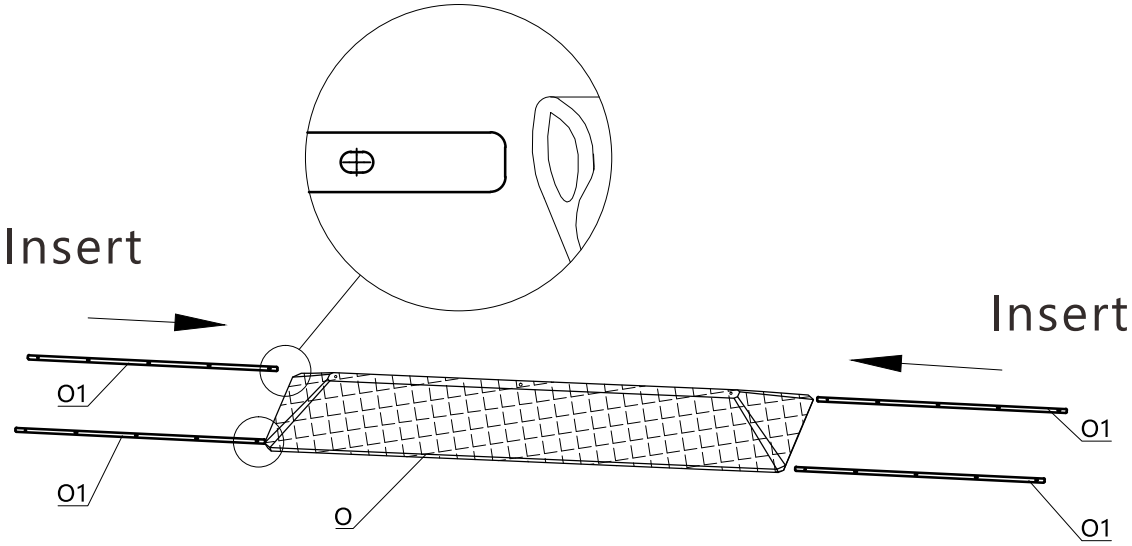

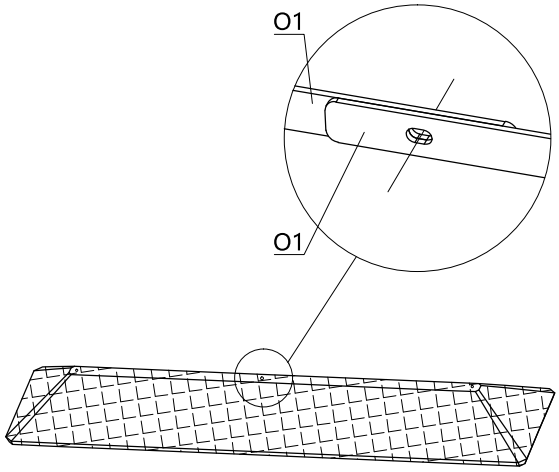


Align the holes

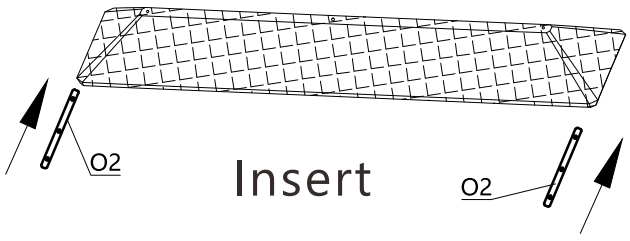



E0 (x1)





R1 (x3)


OUTSIDE ROOF COVER AND MESH ASSEMBLY:

(1)Place the Outside Roof Cover on the Inside Roof Cover.


(2)Align the holes and use 3 Hooks #R1 to secure Mesh #O to the Inside Roof Cover. (From Bottom to Top)

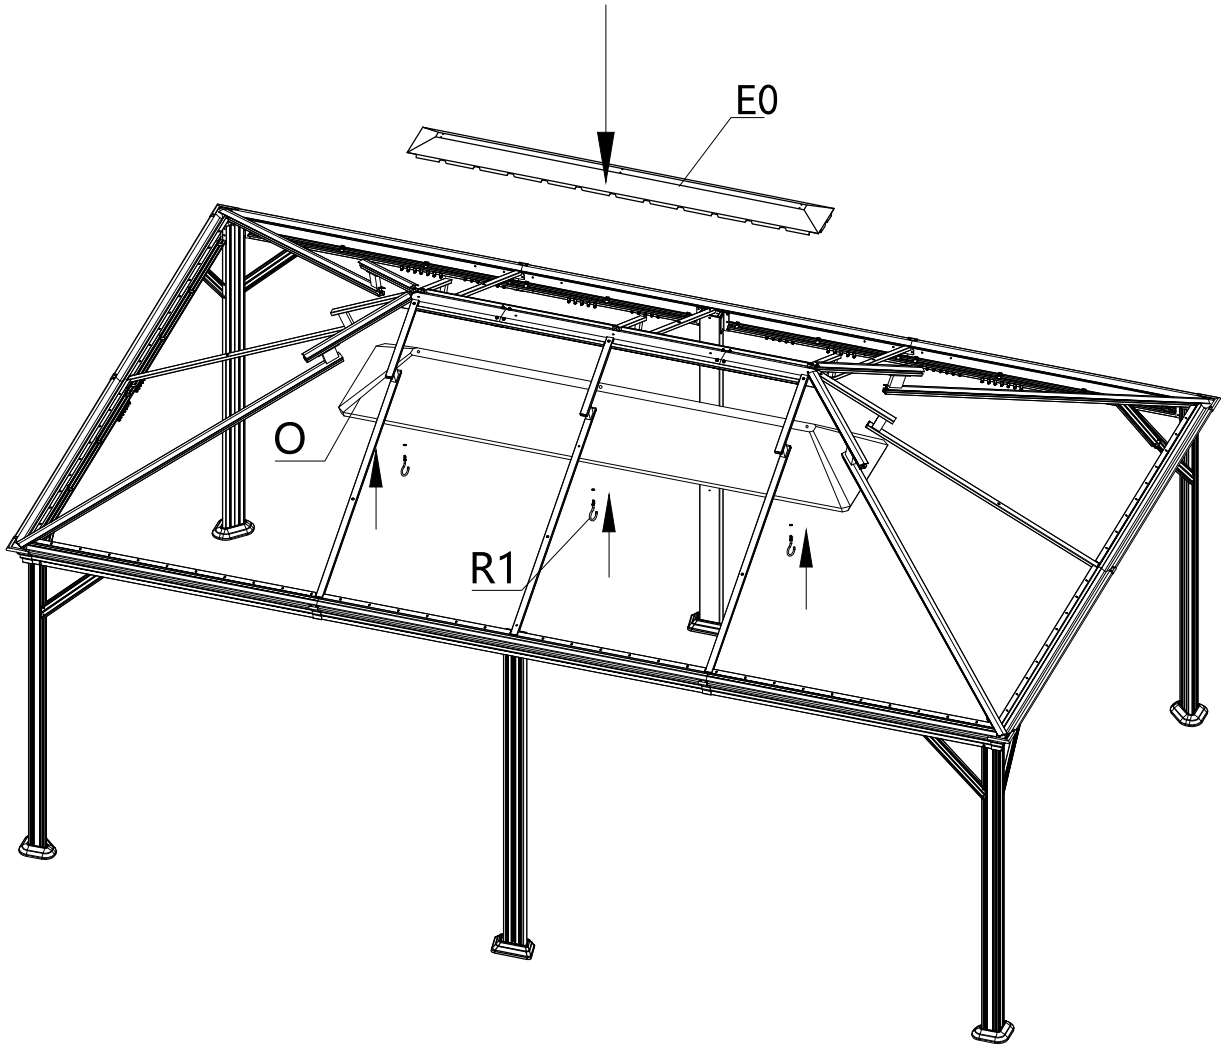

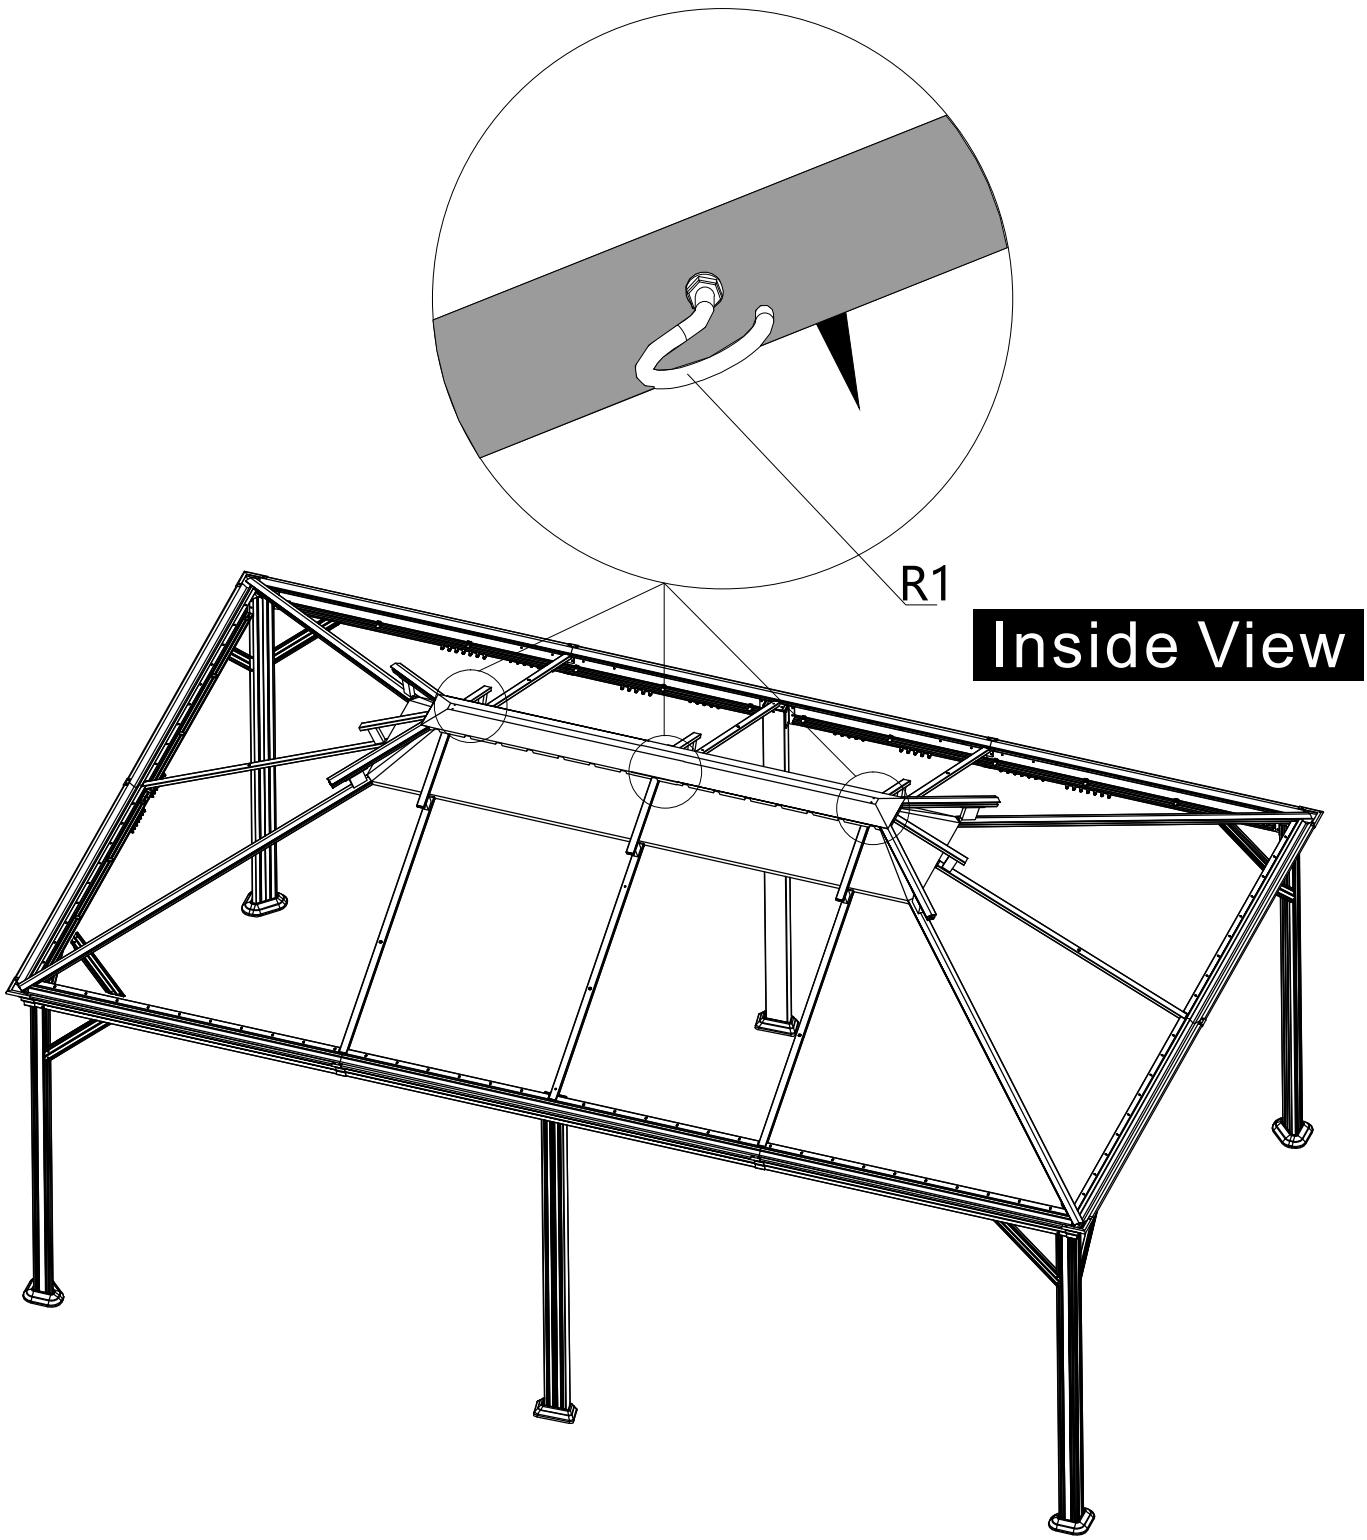
R1
Inside View

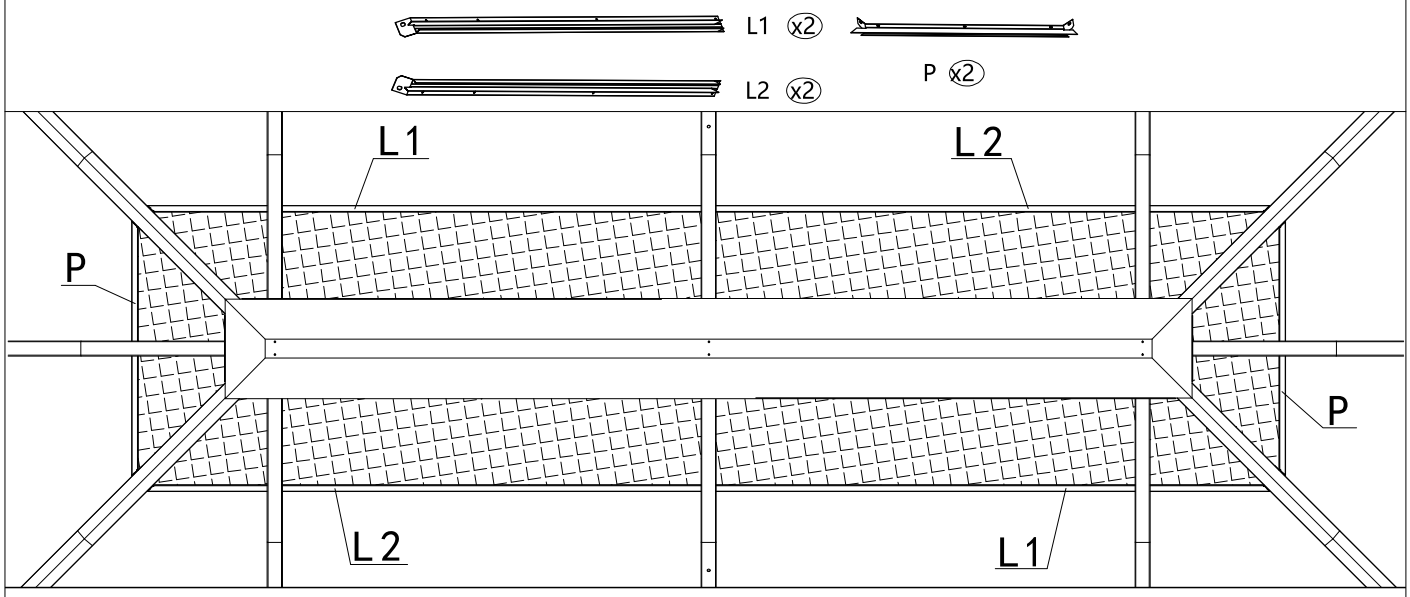


TOP VIEW

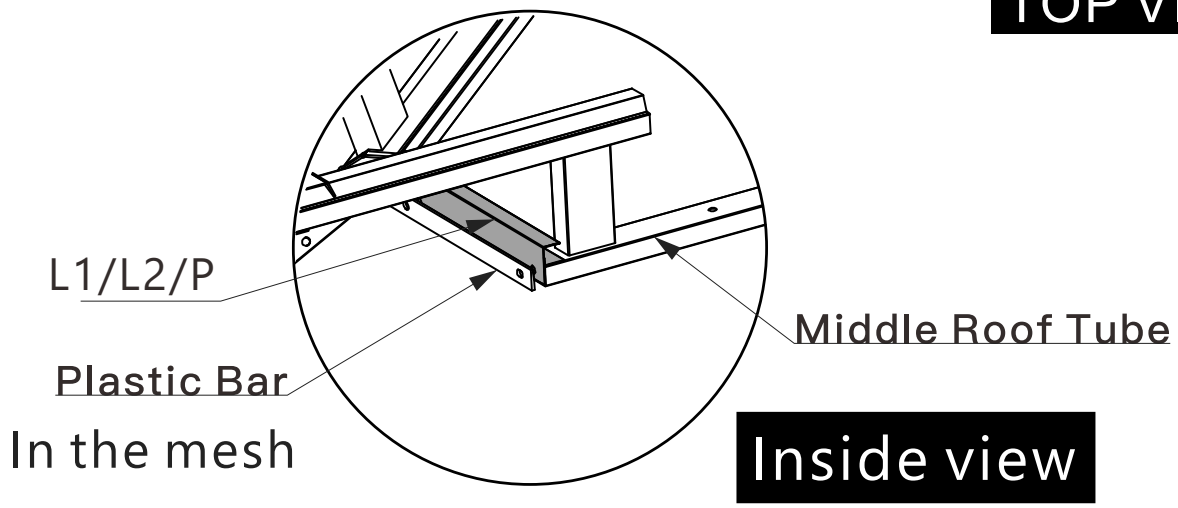


Inside view

Please do not pull plastic bar out when installing it with #L1,L2&P on the middle roof tube.


Extend the Small Mesh #O.

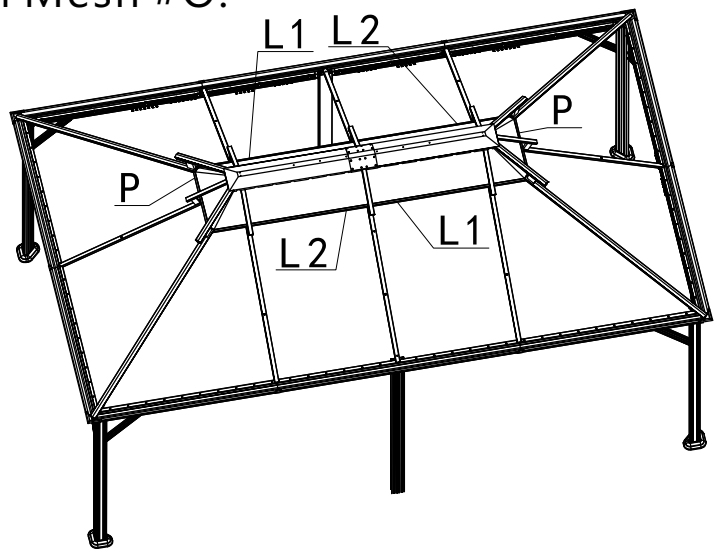


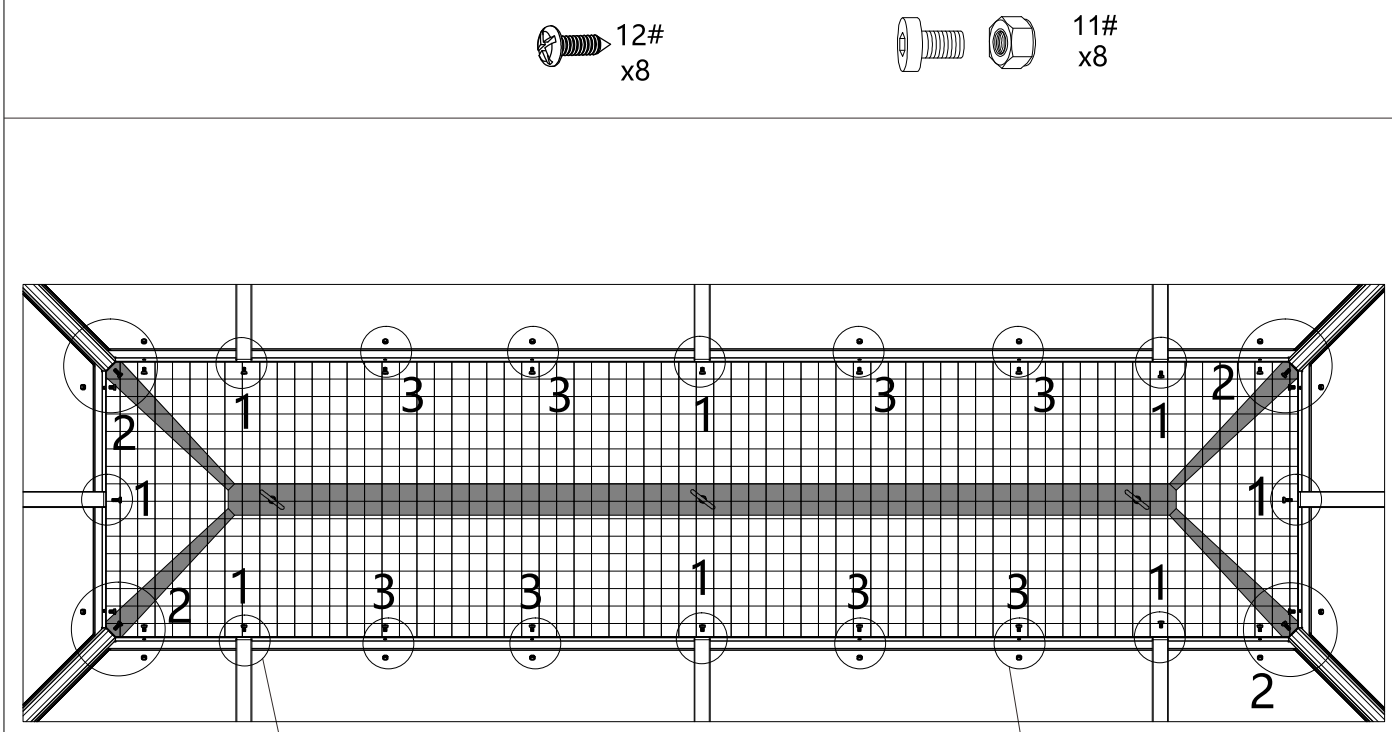


Plastic Bar
in the mesh


Secure the small mesh, plastic bar and finishing bar to the middle roof tube.








FINISHING END #Q ASSEMBLY:

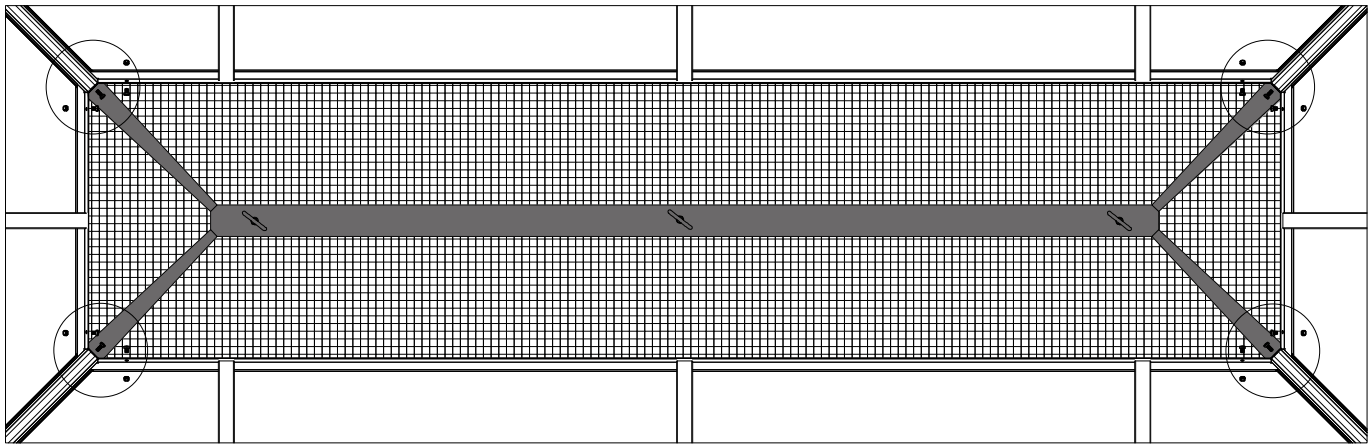



Bottom View

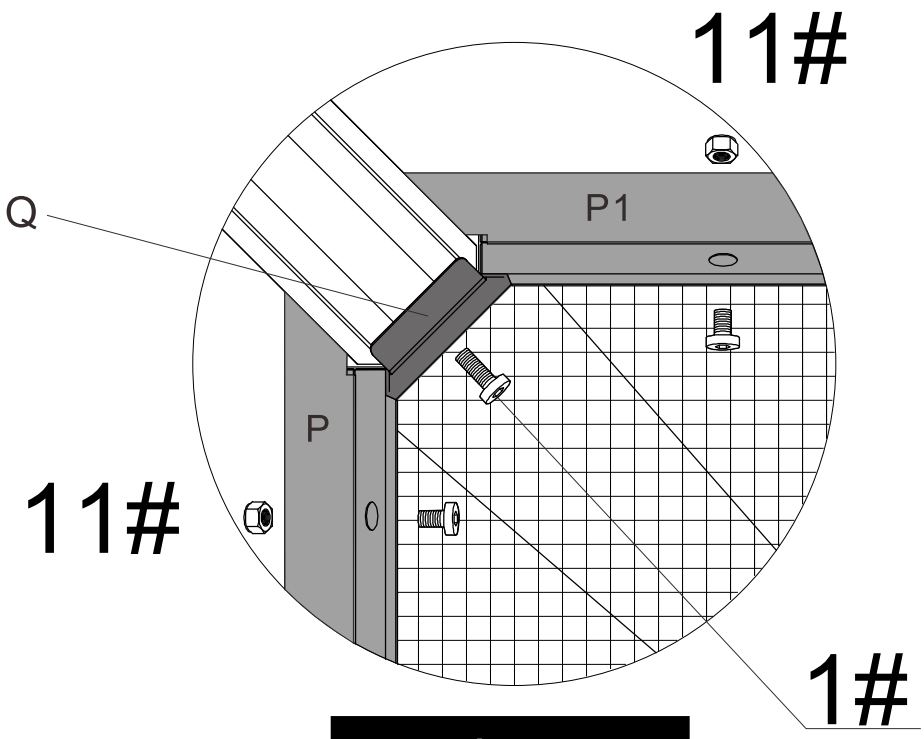


Inside view

(1)use 2 bolts and nuts #11 to secure the small mesh, plastic bar to finishing bar.
(2)Use bolt #1 to secure the small mesh and finishing end #Q to the corner roof tube.
(3)Repeat above procedures to assemble the other 3 sides.

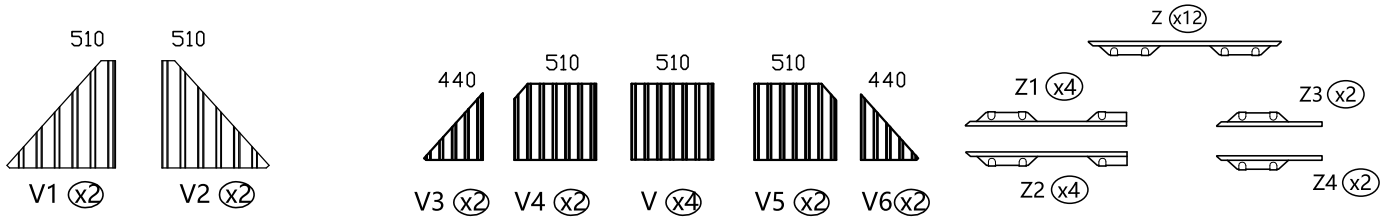


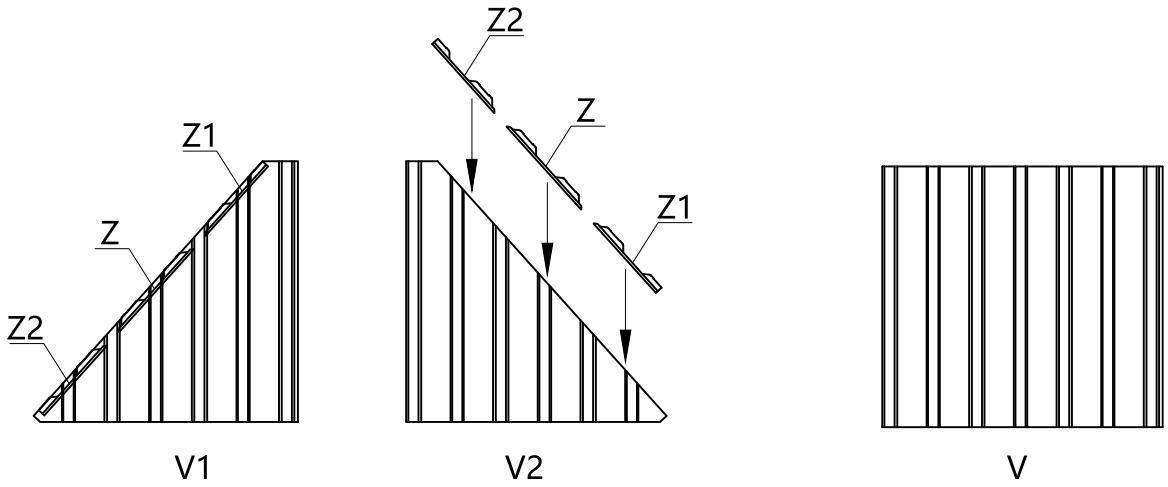


Remove the protective film of the panels before installing the roof panels.
Please install Plastic Clips in strict accordance with the instructions.

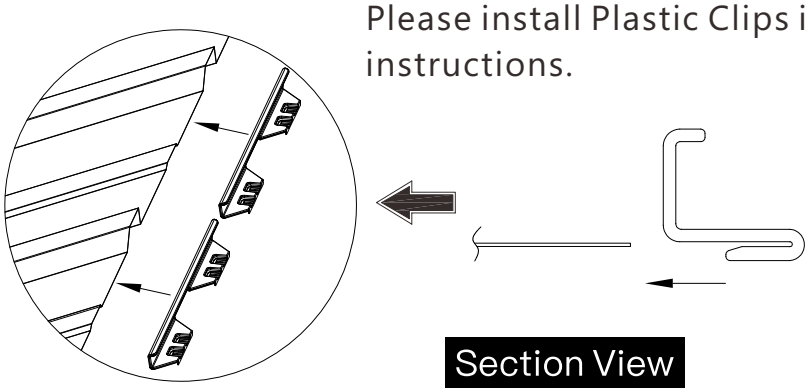


Section View

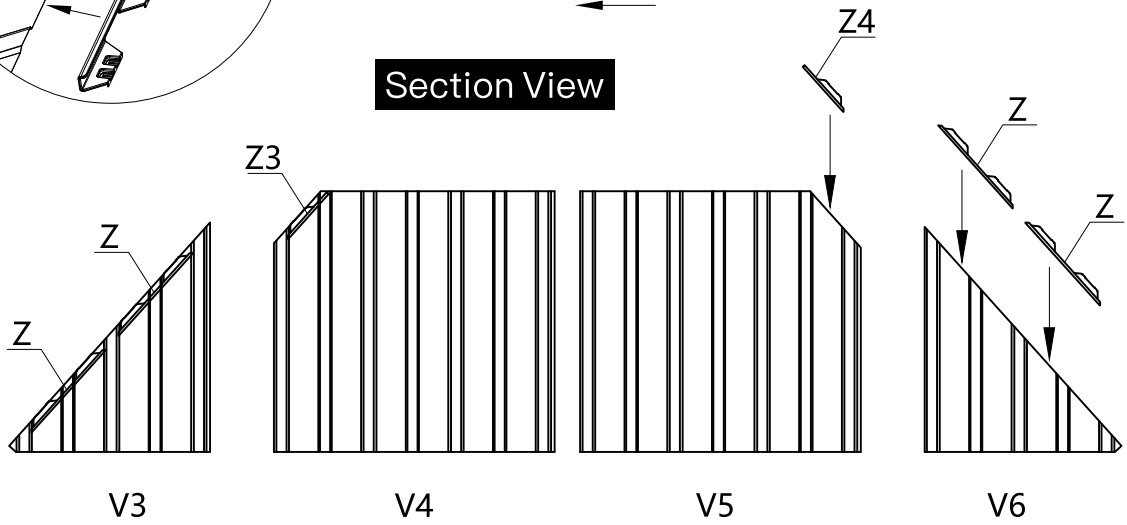


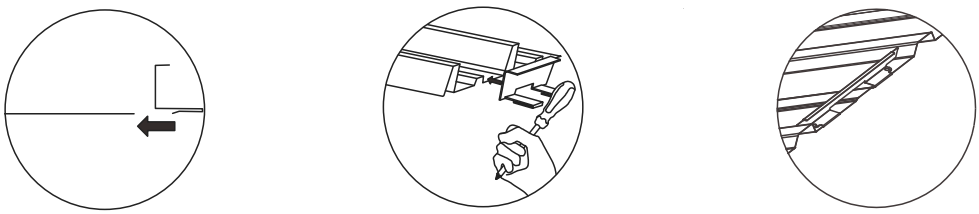


Attach Part #Z, #Z1, #Z2, #Z3&#Z4 by lightly tapping with screwdriver.

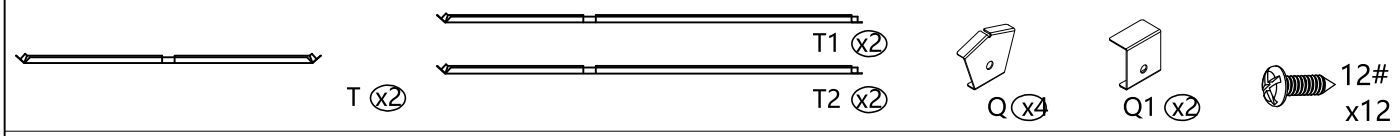



SMALL ROOF PANEL AND FINISHING BAR ASSEMBLY:

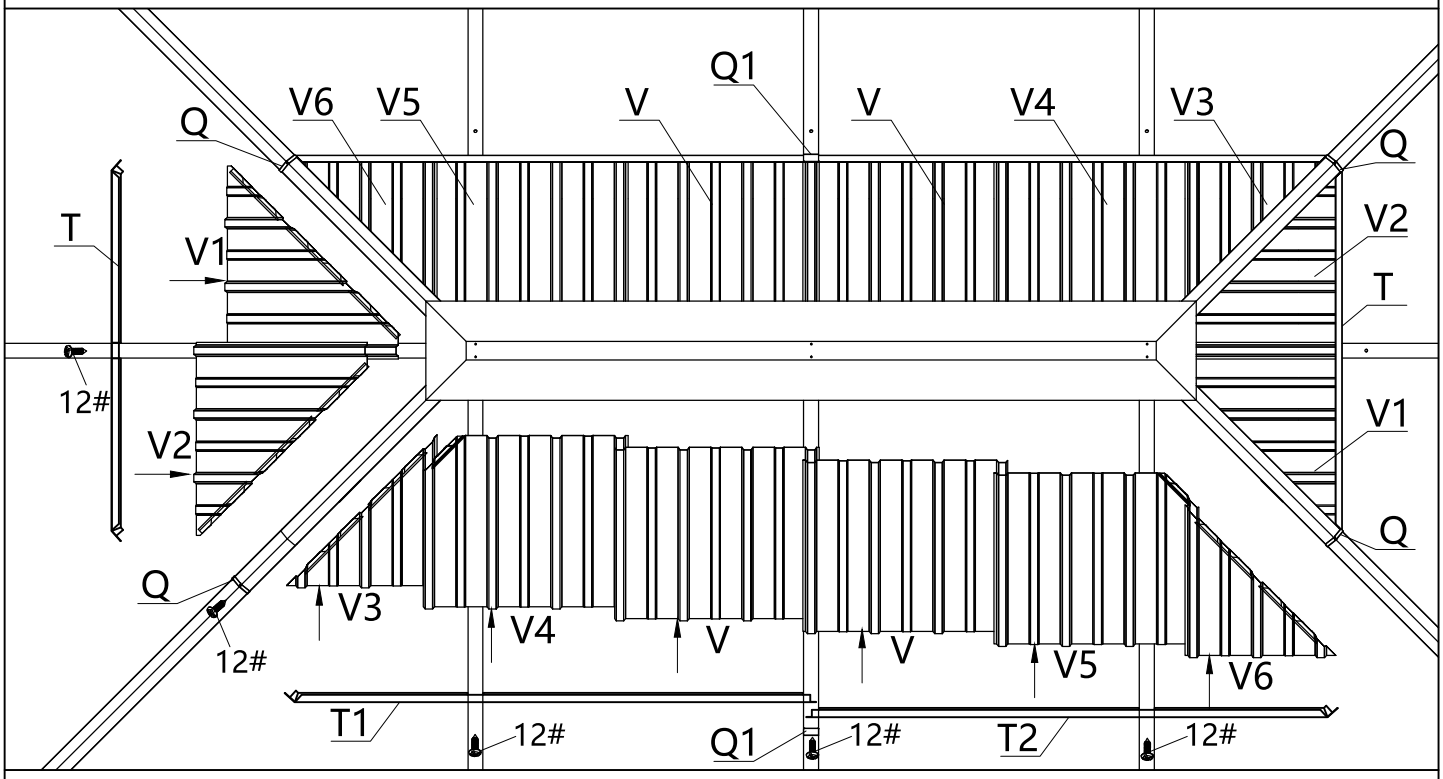

If you can't install #V, push the Outside Roof Cover up and try to insert them again.

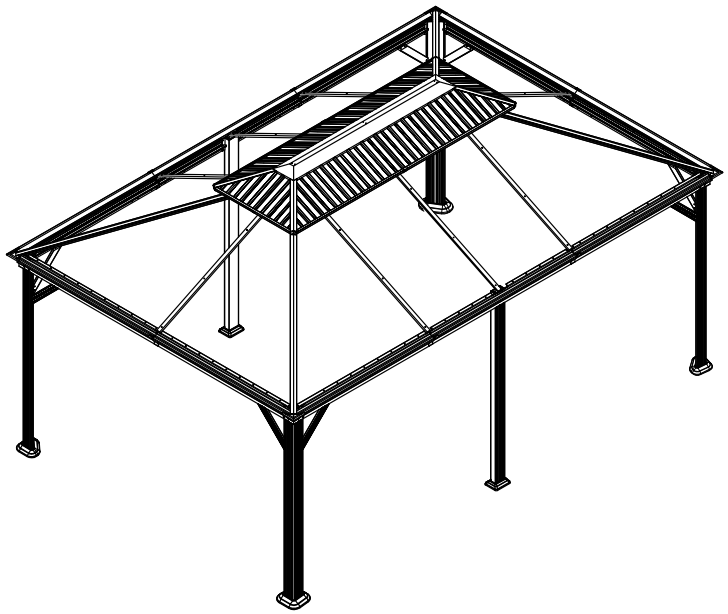


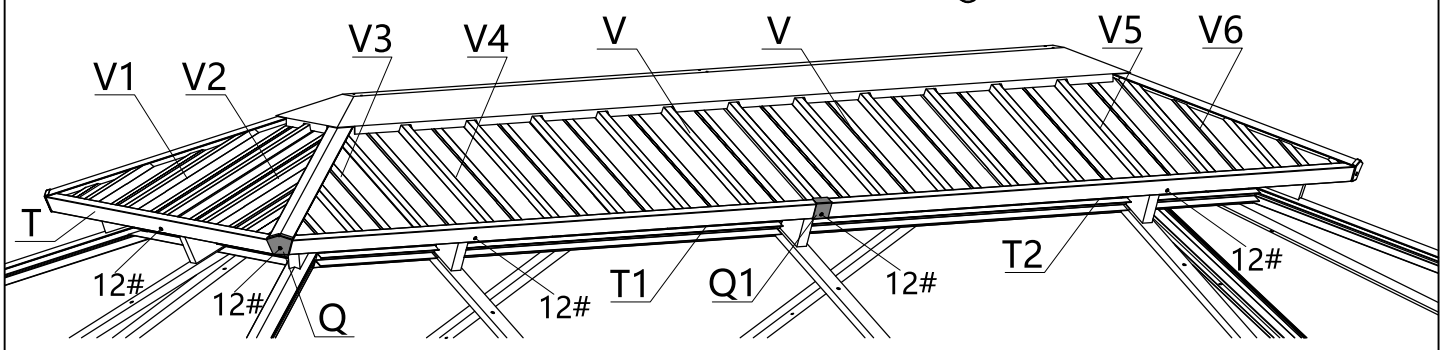













SOLIDIFYING BAR ASSEMBLY:

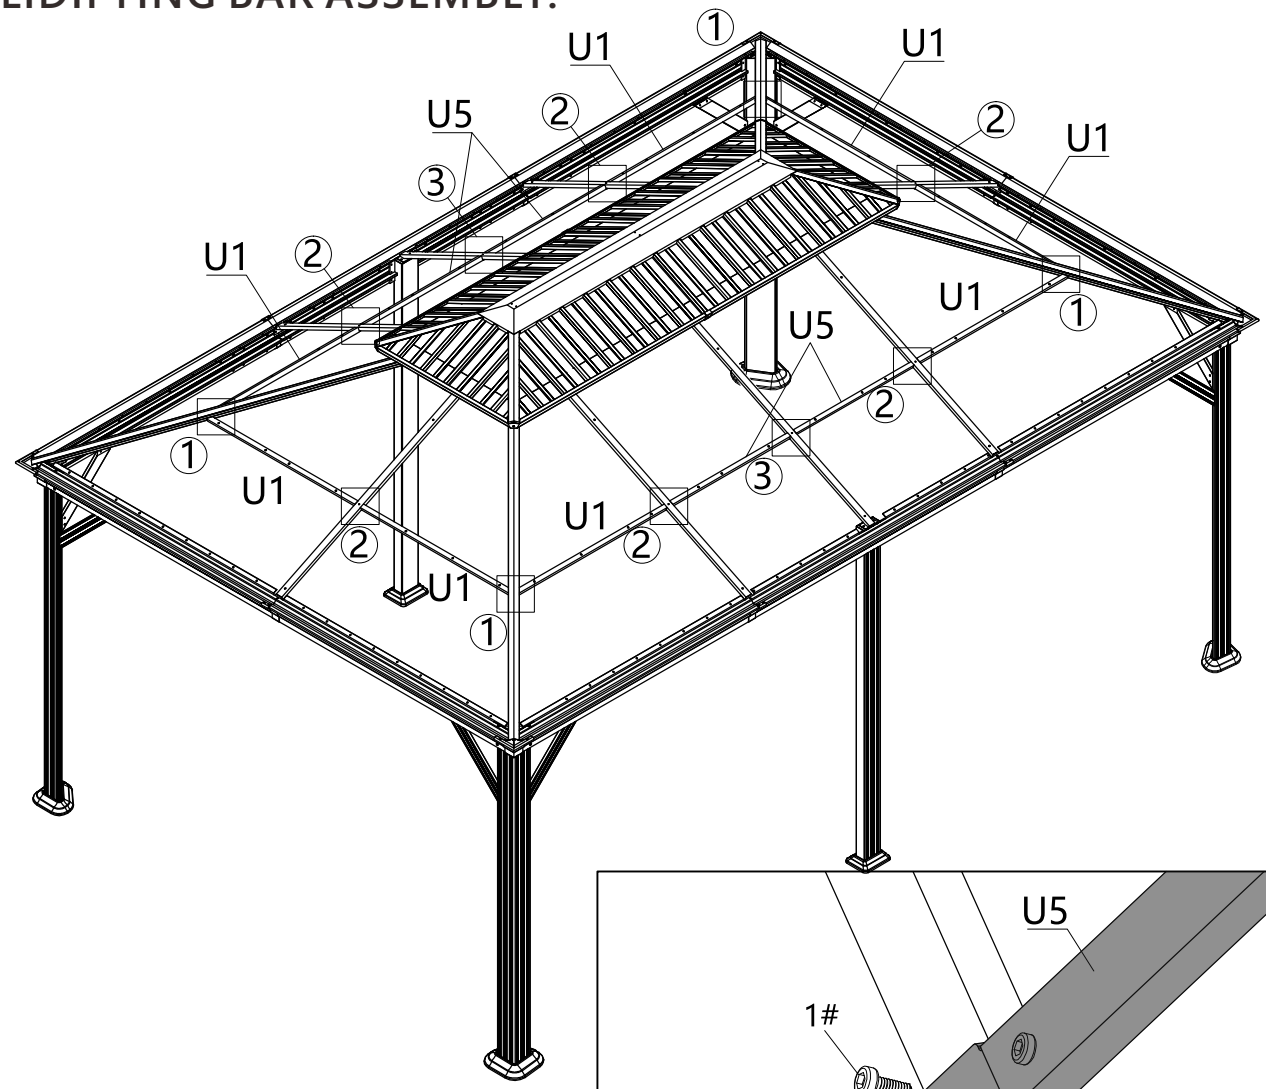


Inside View

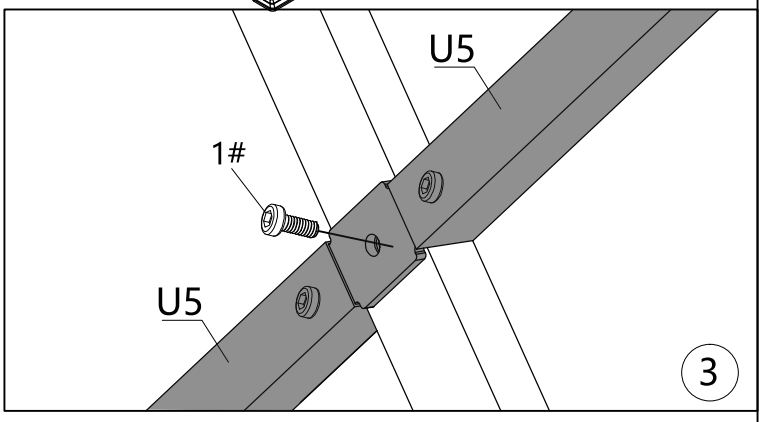


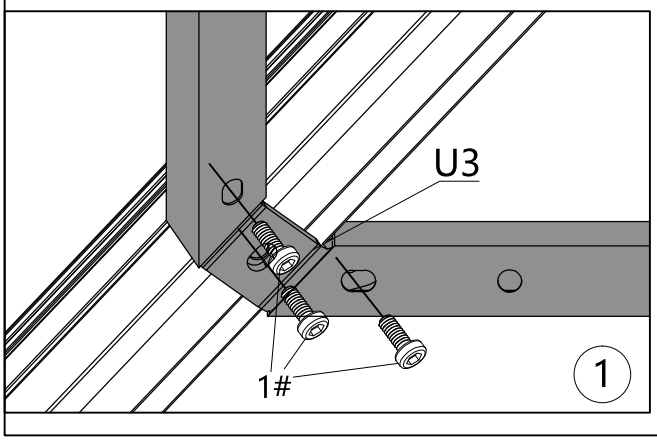


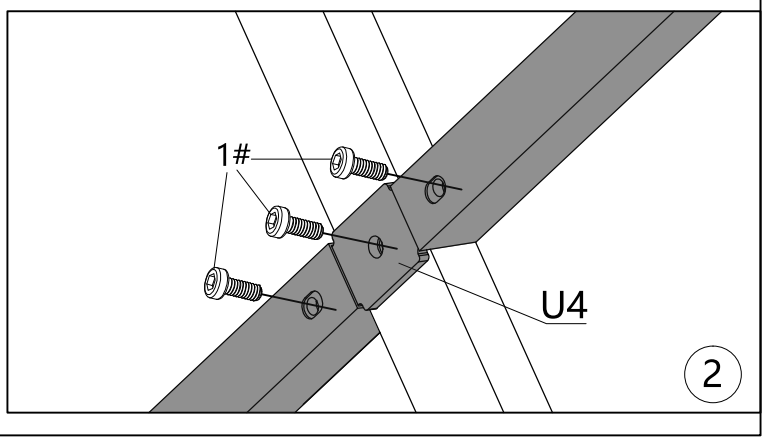


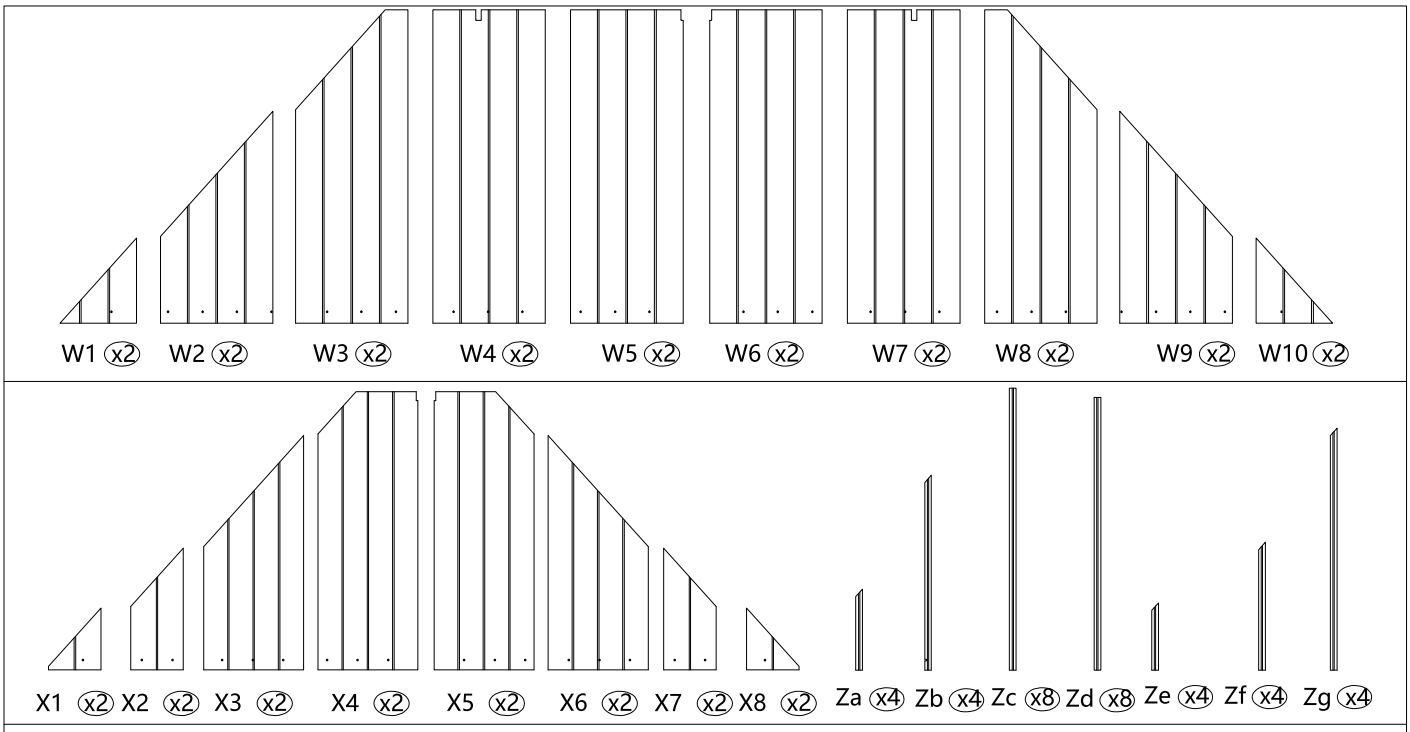


RESIN ROOF ASSMEBLY:

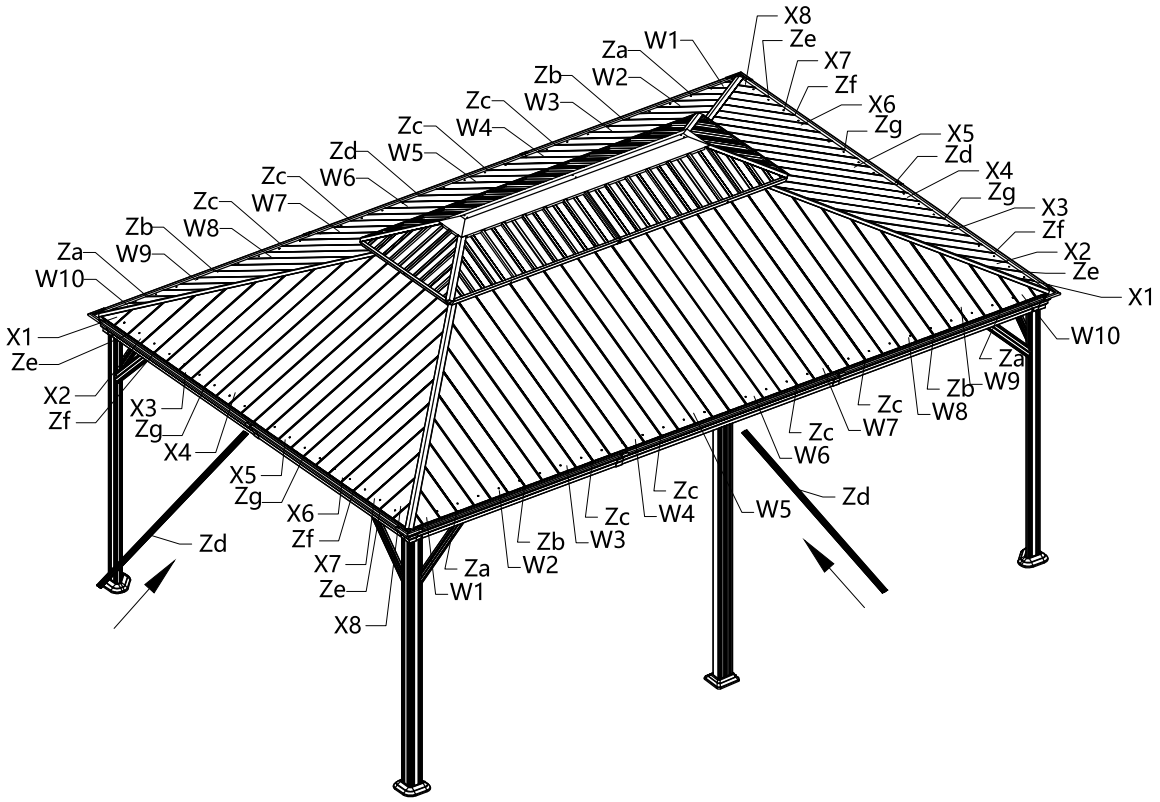


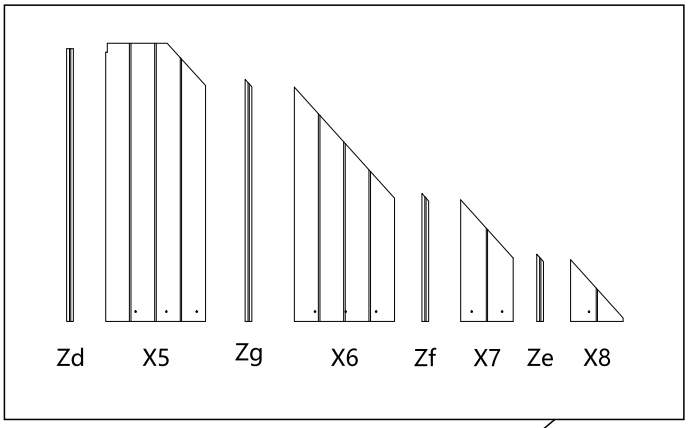


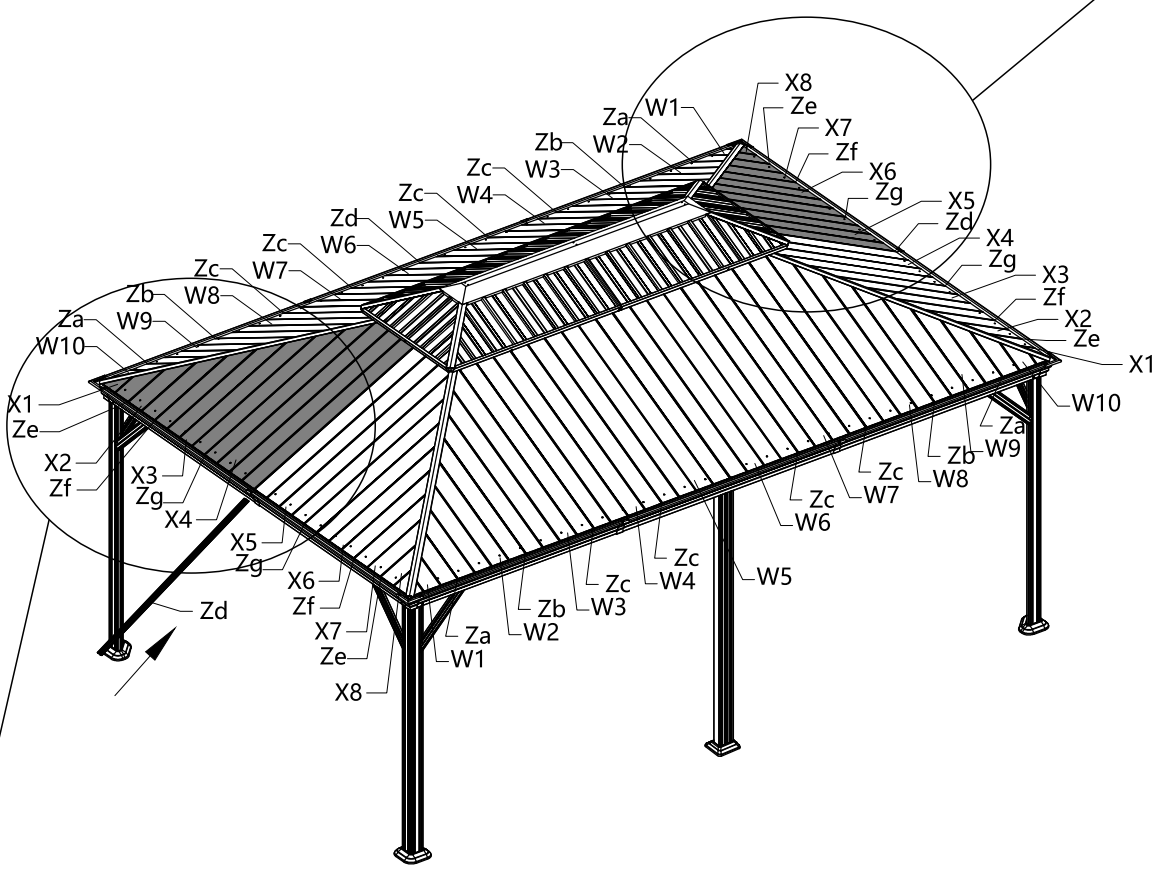


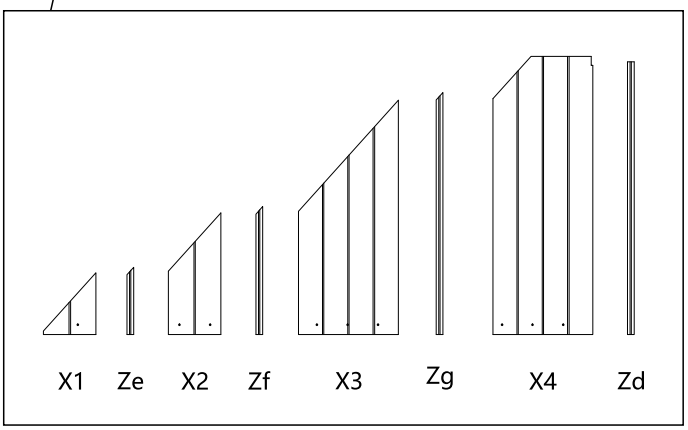



After installing both sides simultaneously, #Zd will be inserted last.
Repeat the above procedures to assemble the opposite side.

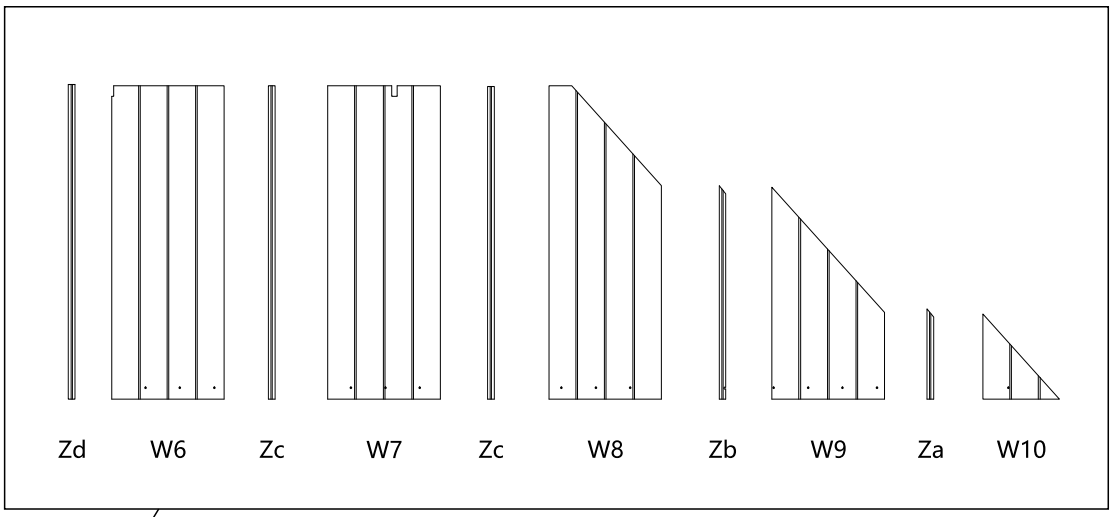


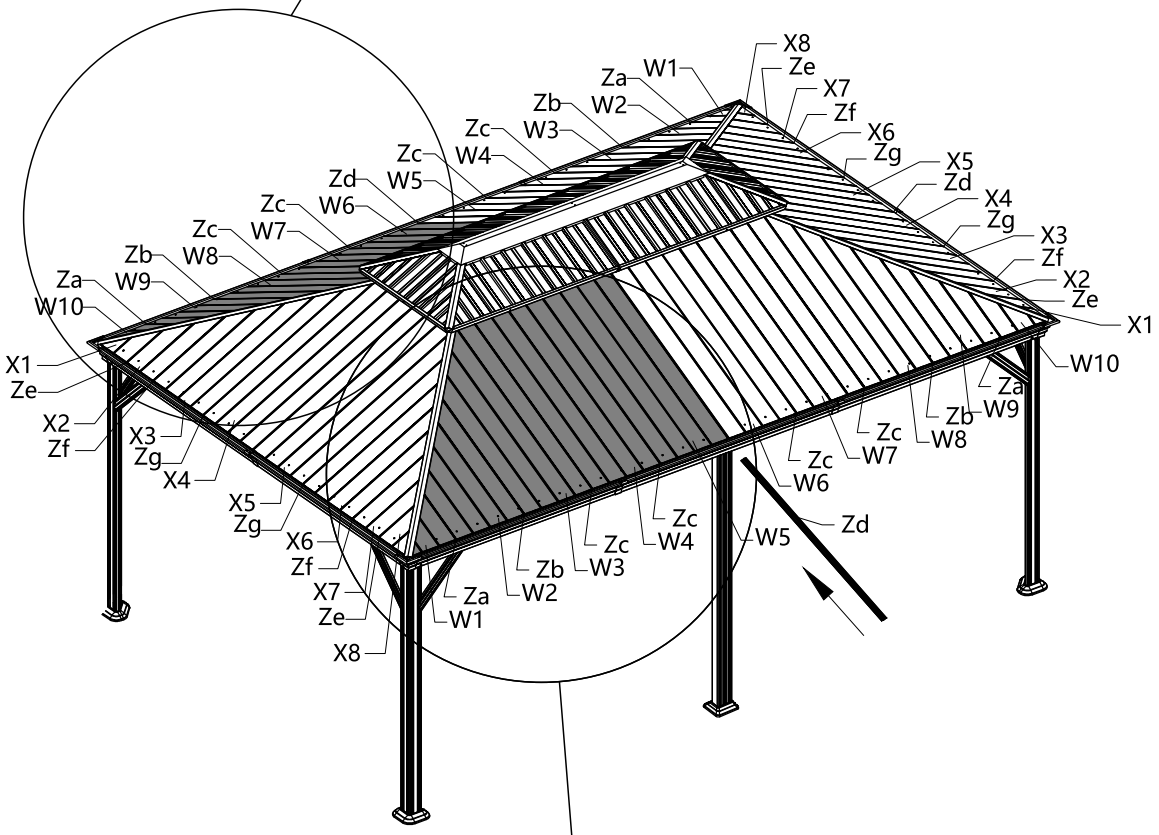
X8
Ze
X7
Zf
X6
Zg
X5
Zd
X4
Zg
X3
Zf
X2
Ze
X1
W10
Za
W9
Zb
W8
Zc
W7
Zc
W6
Zd
W5
Zc
W4
Zc
W3
Zb
W2
Za
W1






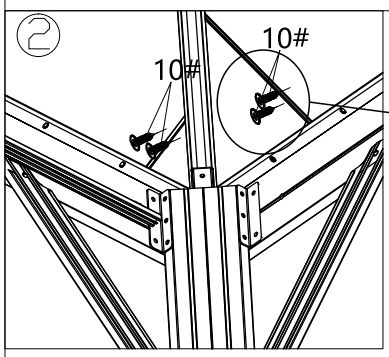


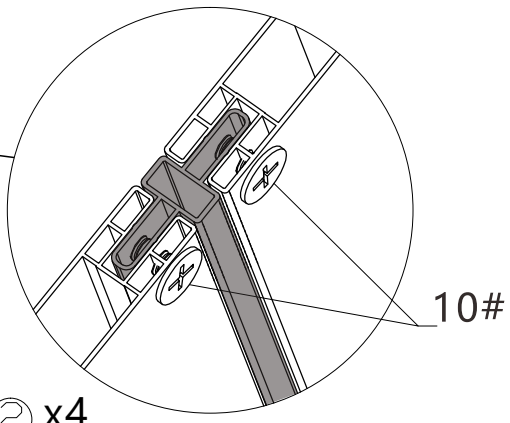


Inside View

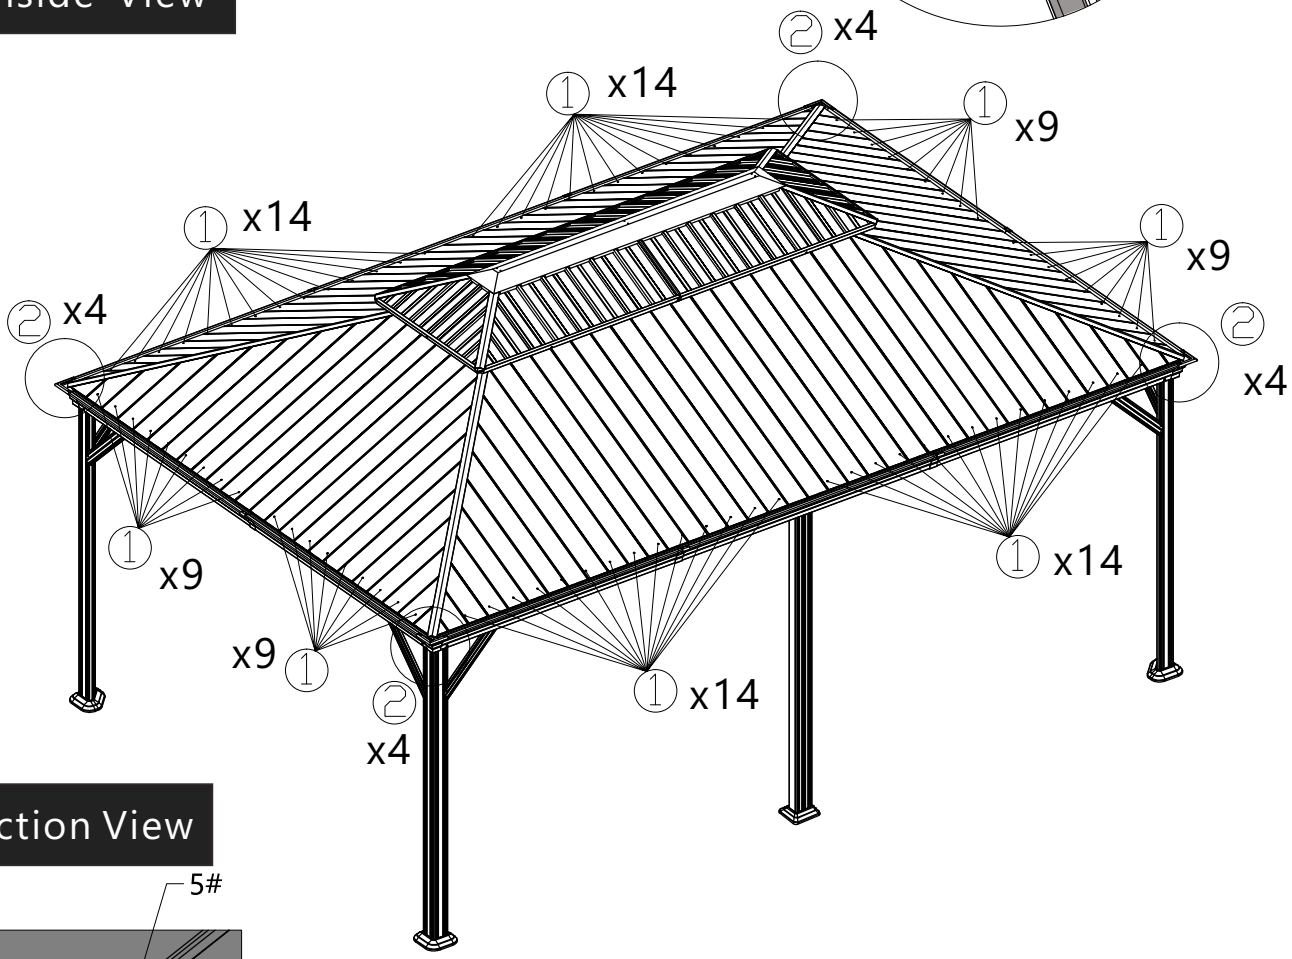


Section View

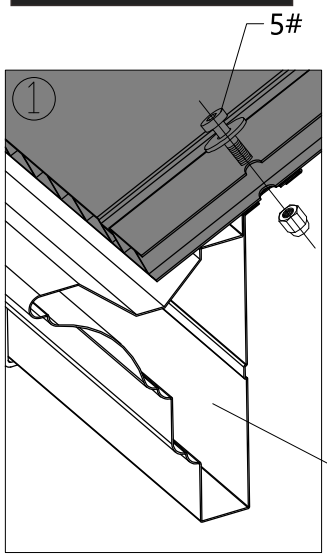


①: Use bolts #5 to secure the roof panel to the beam.
②: Use 4 screws #10 to secure the roof panels to the connecting rods #Za/Ze.
Repeat the above procedures to assemble the other 3 sides.



6# x16




7# x28

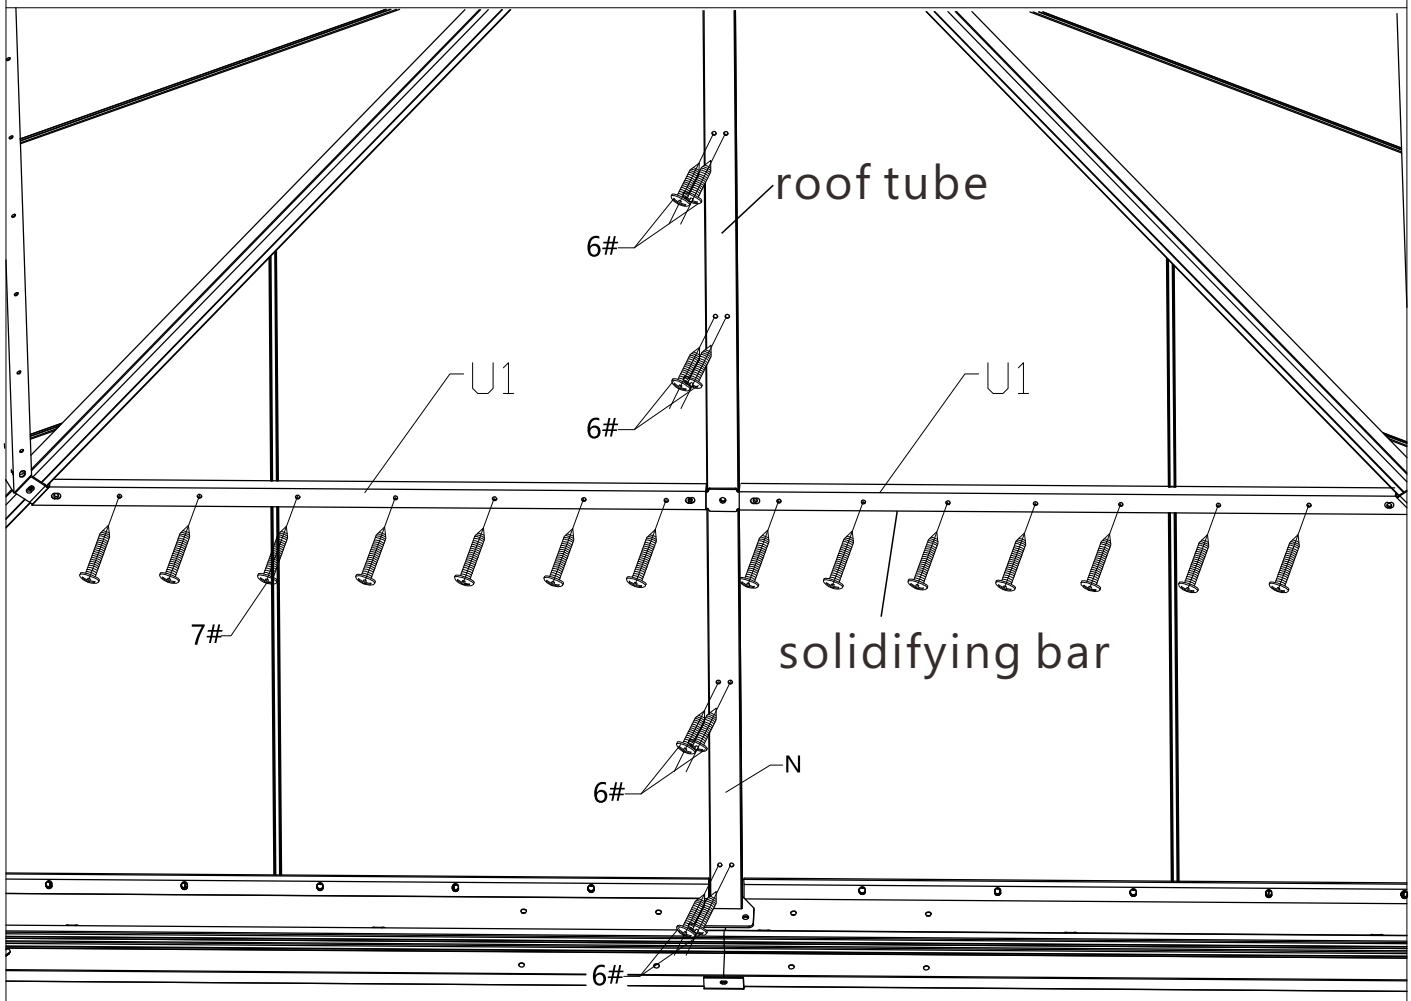




Inside View


Use Screws #7(the longer one) to secure the solidifying bar and Screws #6(the shorter one) to secure roof tube to the roof panels.



6# x32





7# x44

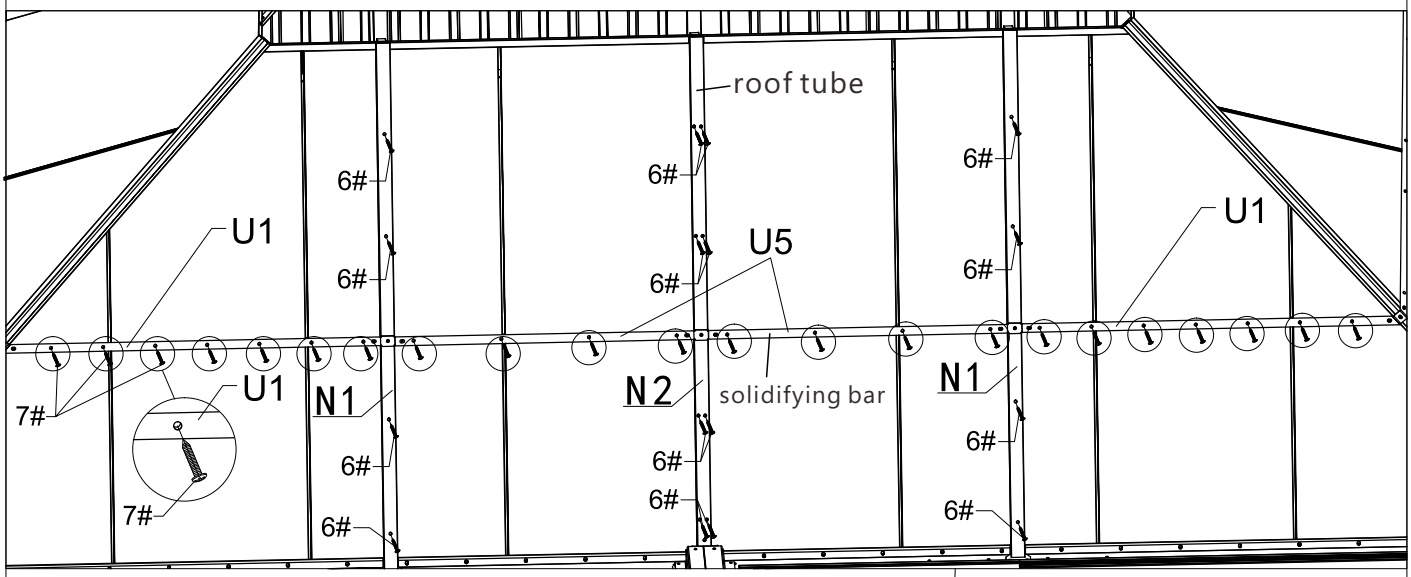


Inside View


Use Screws #7(the longer one) to secure the solidifying bar and Screws #6(the shorter one) to secure roof tube to the roof panels.

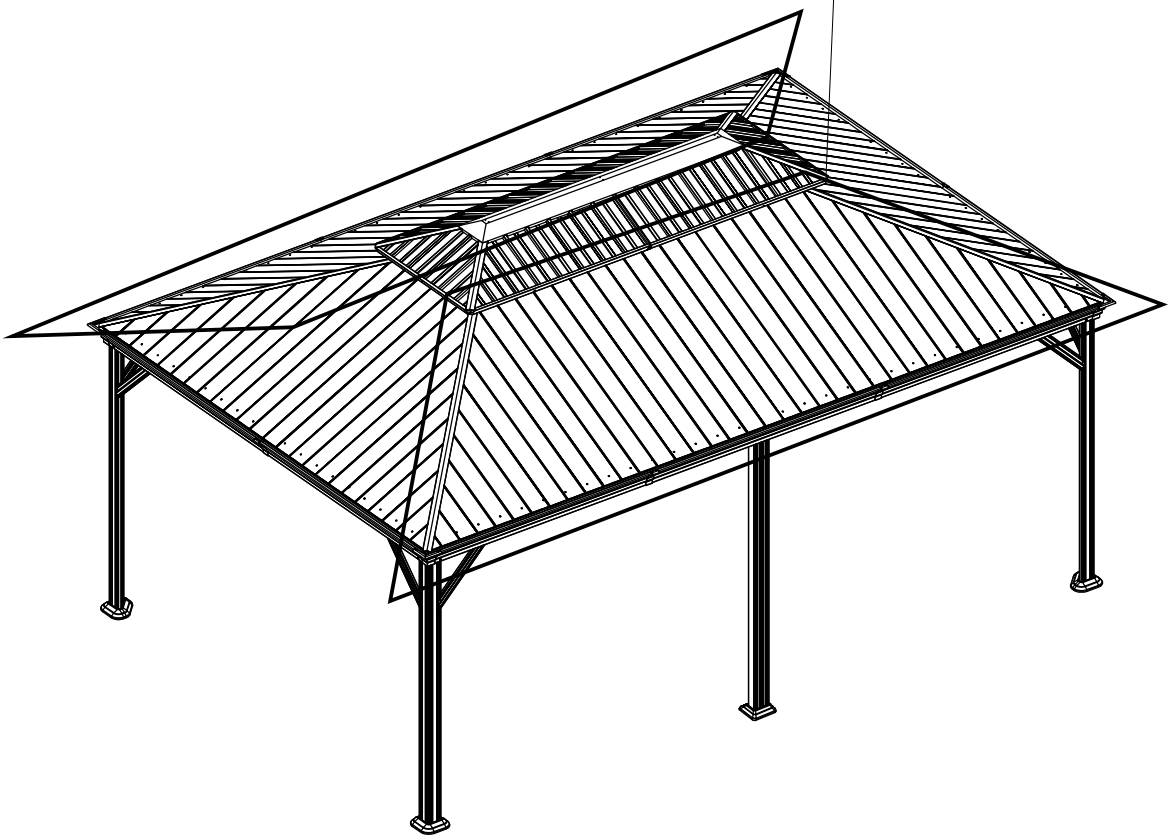


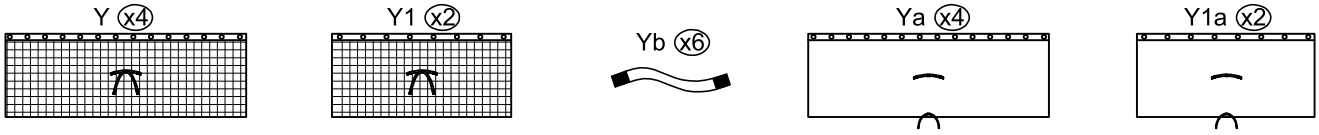


MOSQUITO NETTING AND CURTAINS ASSEMBLY:

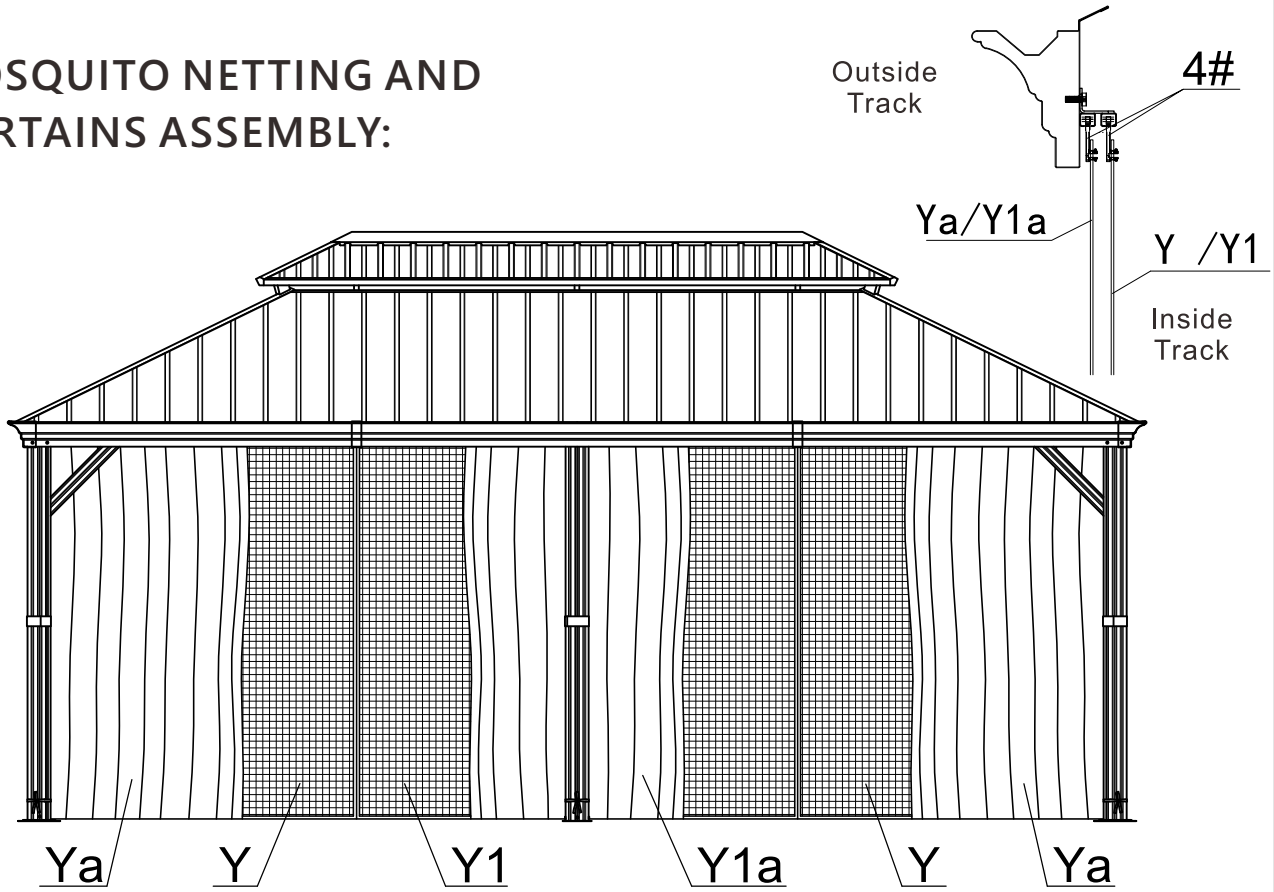

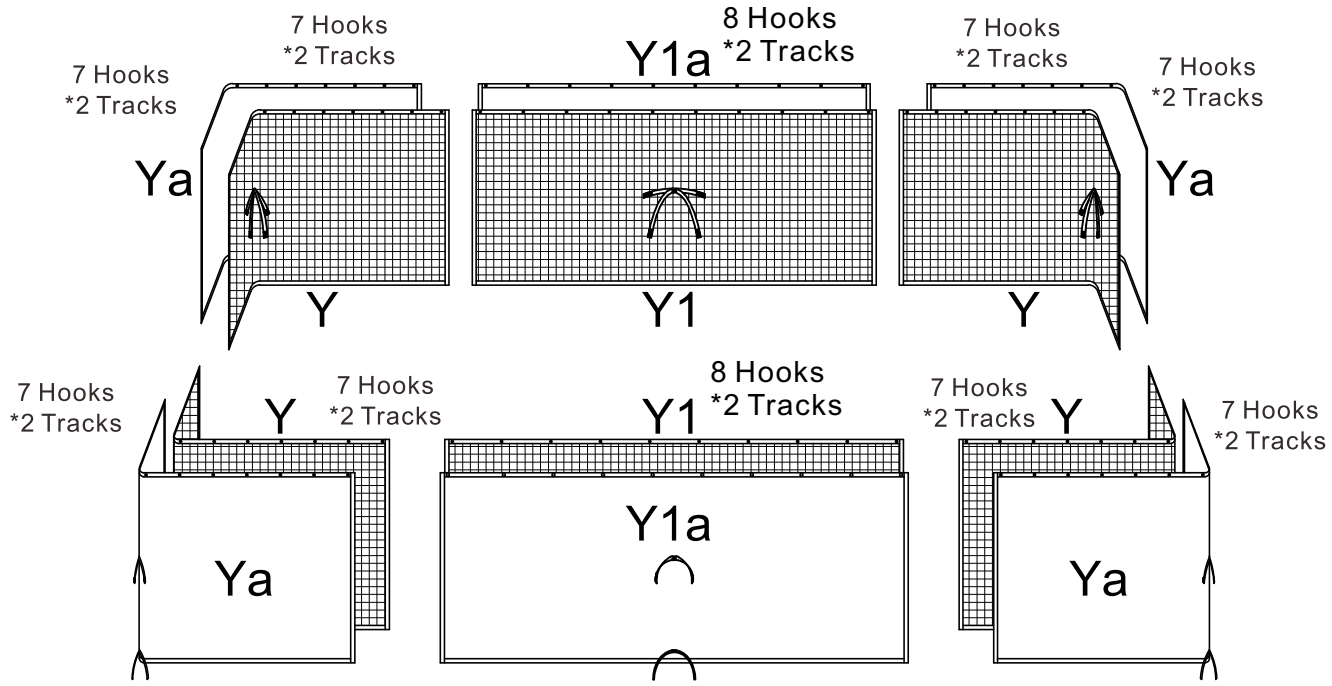

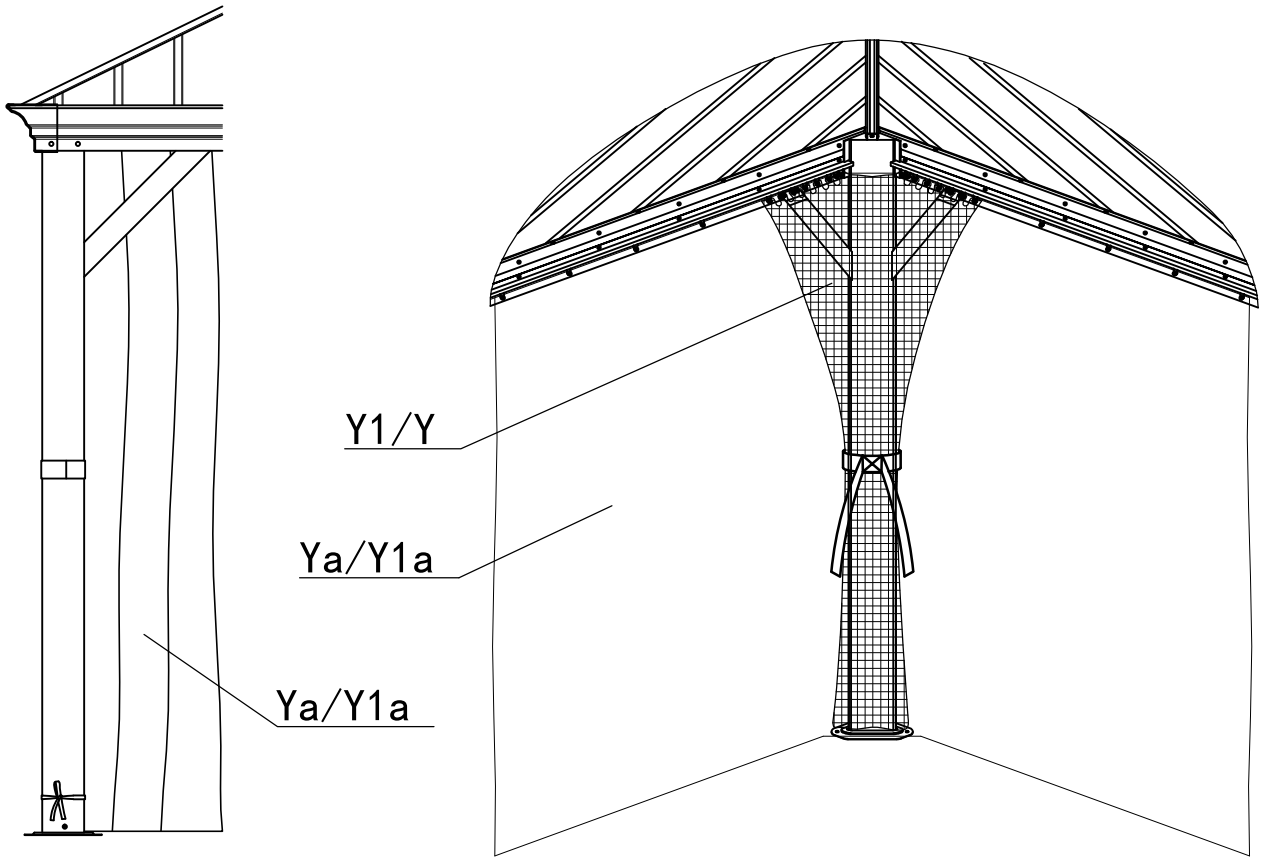

Please open your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap #Yb.

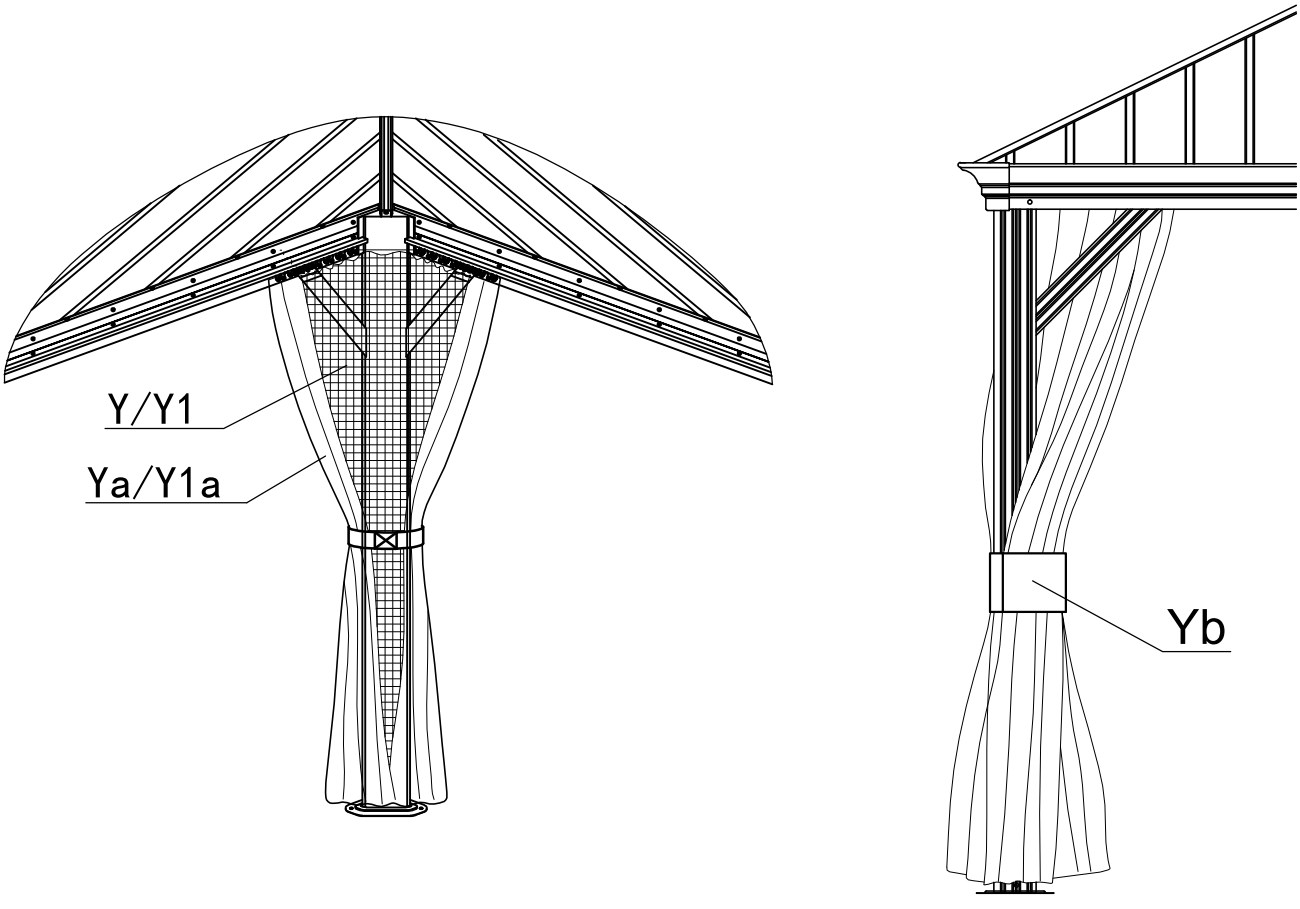

domi
outdoor living

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So,if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:

After-sales contact email:
service@domioutdoorliving.com

Business cooperation contact email:
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2023–2025 domi LLC. All Rights Reserved.