


Kitchen Cart

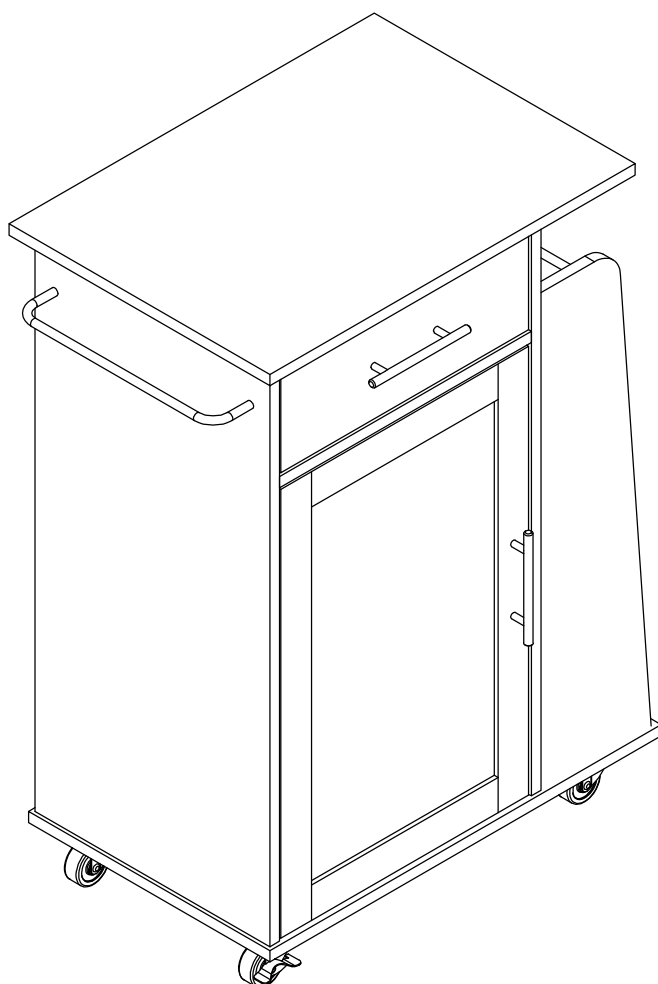

Instruction Manual

Thank you for shopping with us!



















We appreciate your purchase and are ready to be at your service!

If you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!

We will definitely give you a satisfactory solution or answer then!

Contact us at our after-sales service email :

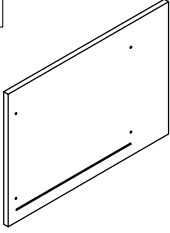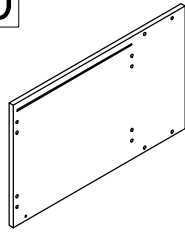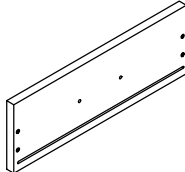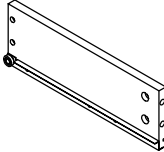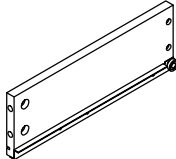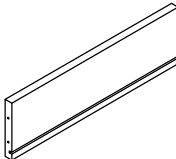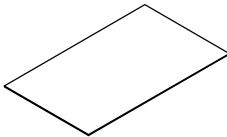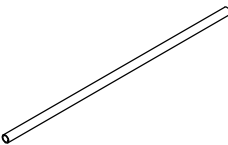
PART LIST

A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf Panel 1 PC
F 	G 	H 	I 	J 
Upper Cross Slab 1 PC	Lower Cross Slab 1 PC	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	Drawer Right Panel 1 PC
K 	L 	M 	N 	O 
Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC	Iron Pipe 3 PCS	Back Panel 1 PC	Adjustable Shelf 1 PC
P 	Q 	R 		
Right Front Vertical Plate 1 PC	Right Back Vertical Plate 1 PC	Door 1 PC		

HARDWARE LIST

#1		#2		#3		#4		#5	
	Ø7*38mm		Ø8*30mm		Ø3.5*25mm		Ø6*35mm		Ø15*9mm
	Screw		Wood Dowel		Screw		Cam-bolt		Cam-lock
	8PCS (Extra 2)		12PCS (Extra 4)		4PCS (Extra 2)		24PCS (Extra 4)		24PCS(Extra 4)
#6		#7		#8		#9		#10	
	2"		2"		Ø4.5*13mm				Ø3.5*14mm
	Caster With Lock		Caster		Screw		Back Bracket		Screw
	2 PCS		2 PCS		16 PCS (Extra 2)		6 PCS		8 PCS (Extra 2)
#11		#12		#13		#14		#15	
	150*32*Ø12mm		310*60*Ø10mm		M4*22mm		M5*25mm		Ø3*12mm
	Handle		Towel Bar		Round Head Bolt		Bolt		Screw
	2 PCS		1 PC		4 PCS (Extra 1)		2 PCS		1 PC
#16		#17		#18					
	Ø6.5mm		45*17*12mm		30*22*1mm				
	Shelf Holder		Door Magnet		Door Small Plate				
	4 PCS (Extra 1)		1 PC		1 PC				

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required

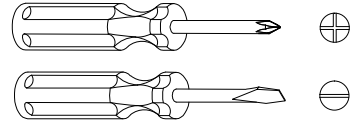


INSERTING AND TIGHTENING CAM-BOLT

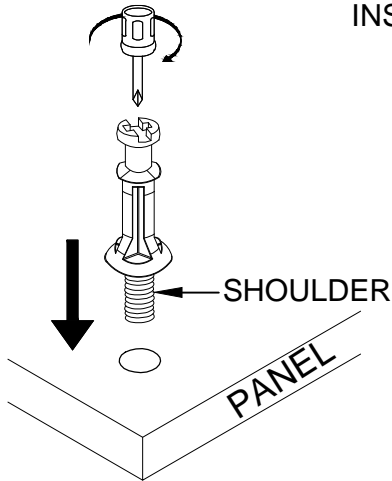

Place Cam-bolt on pre-drilled hole and screw in vertically

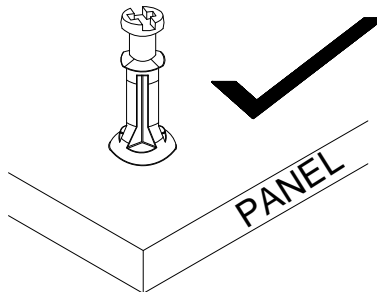


Shoulder is flushed (on the same level) with the panel.

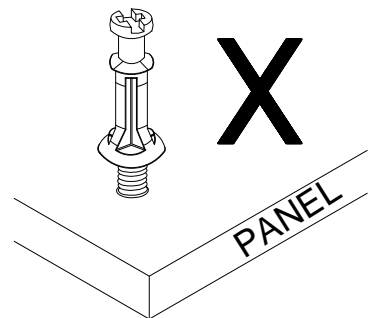


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

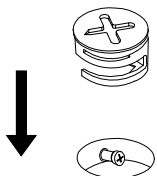

Insert Cam-lock with arrow align to Cam-bolt head

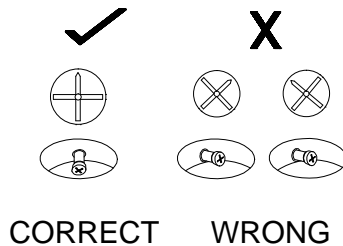


CORRECT

WRONG




Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK





Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.




Step 1.

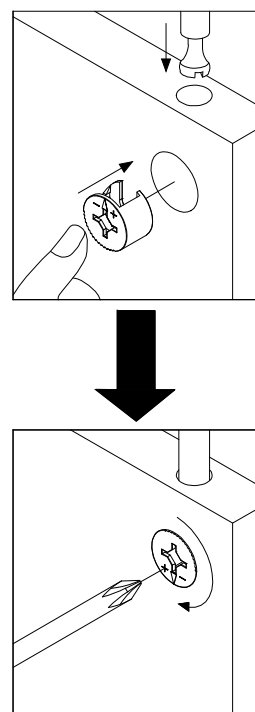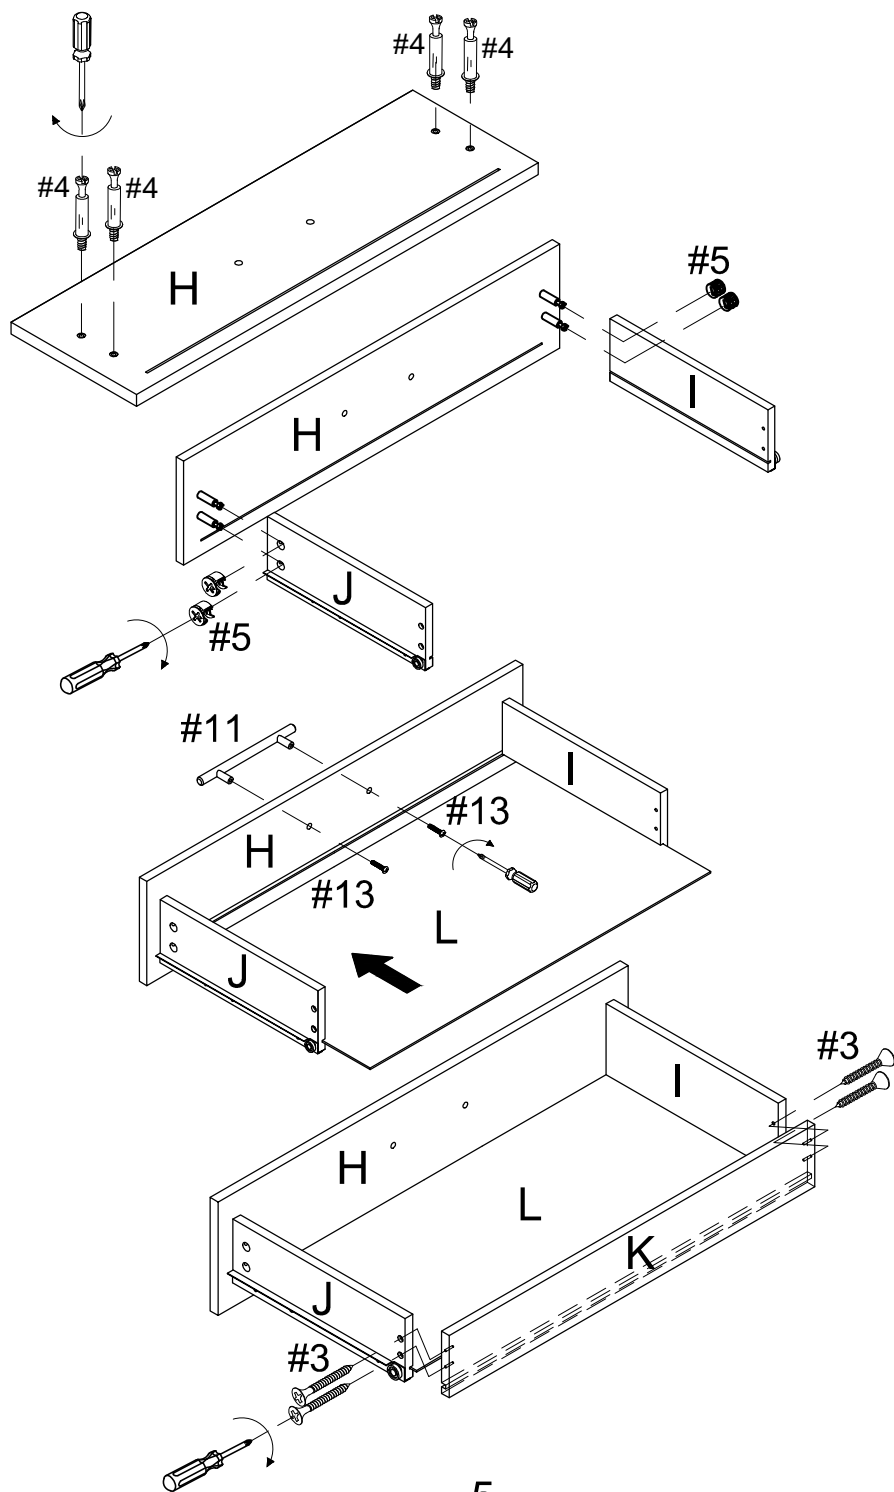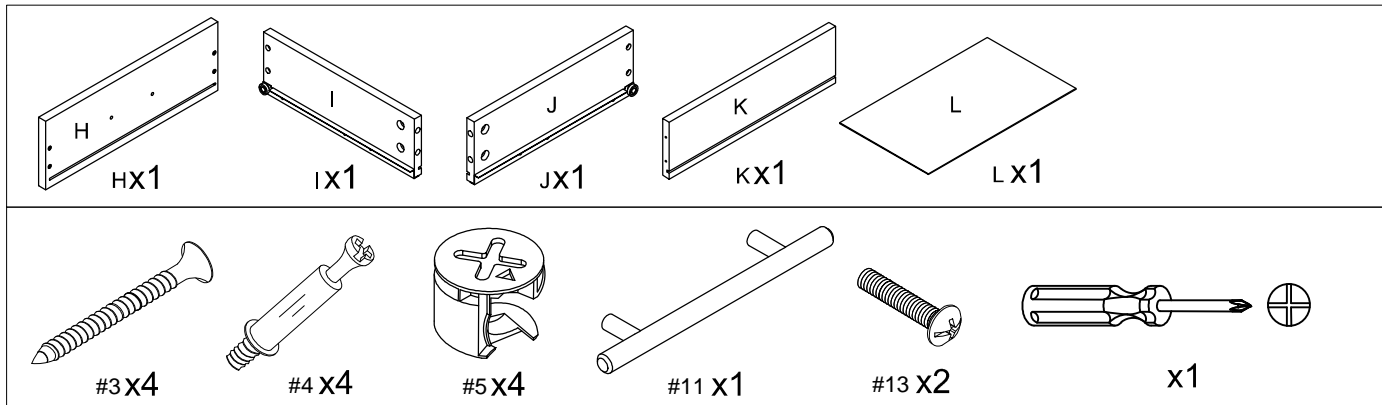




Step 2.

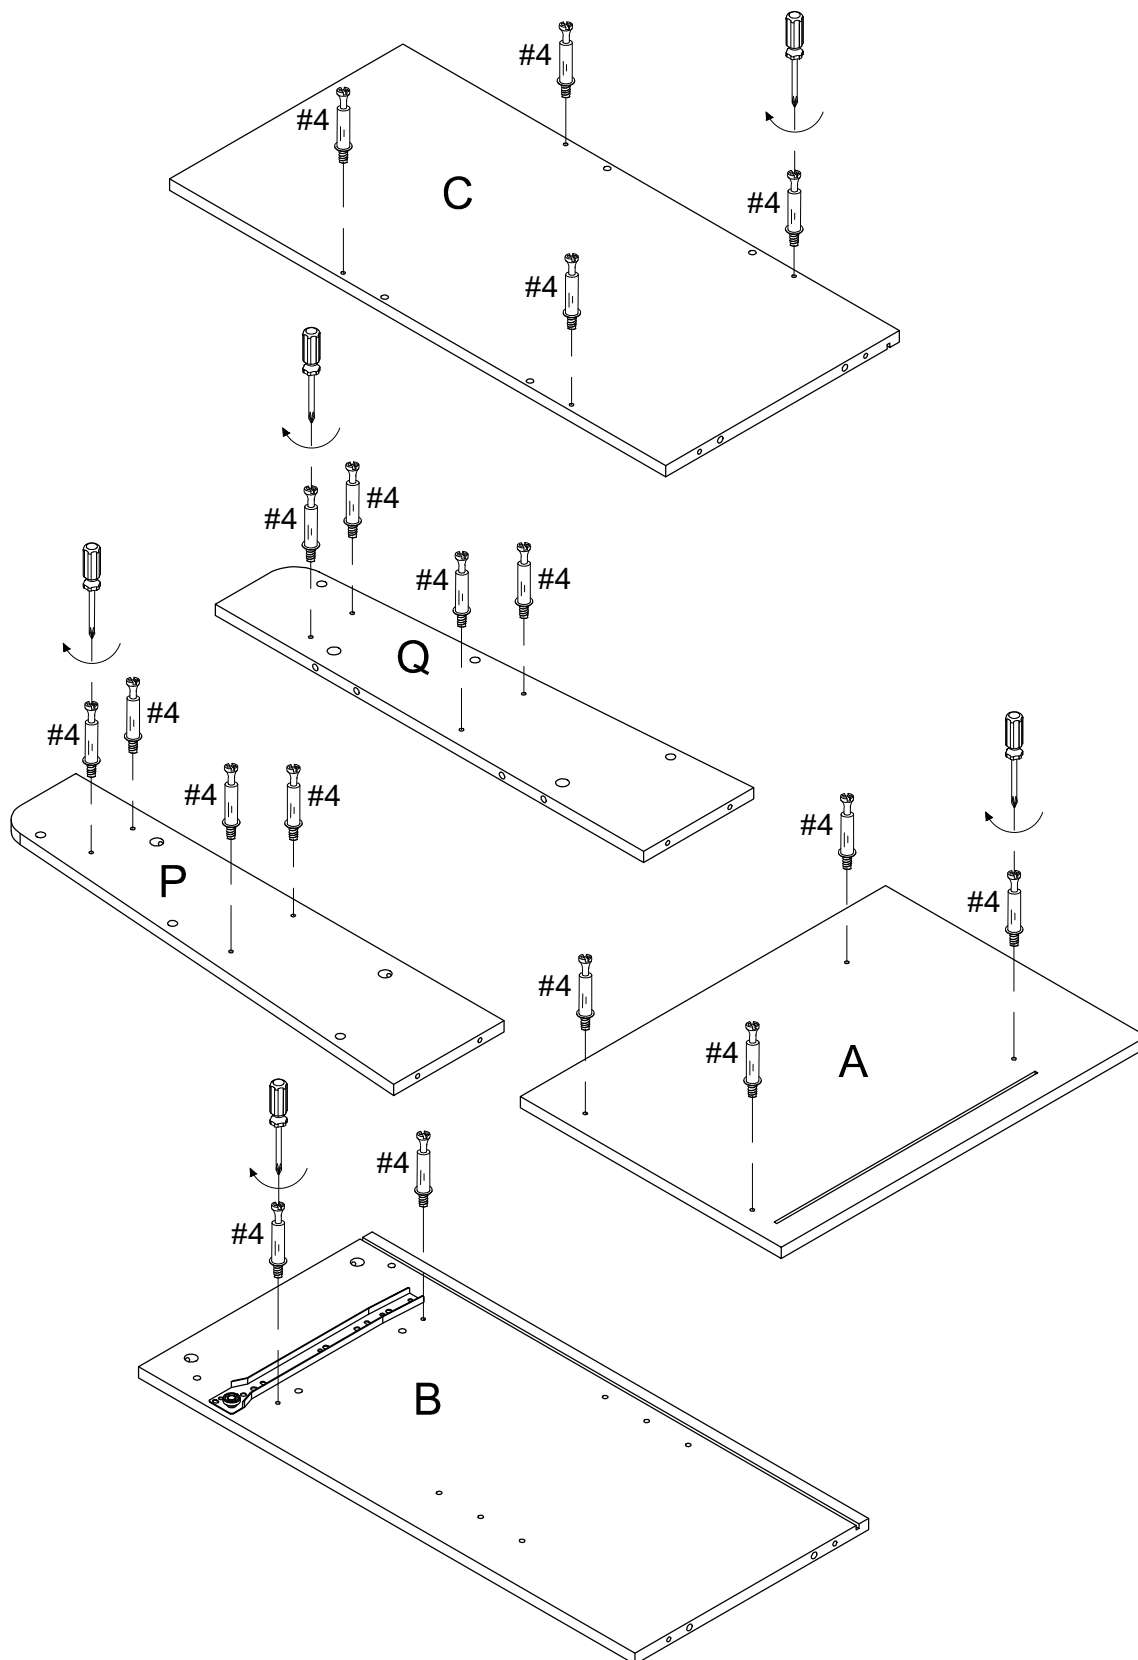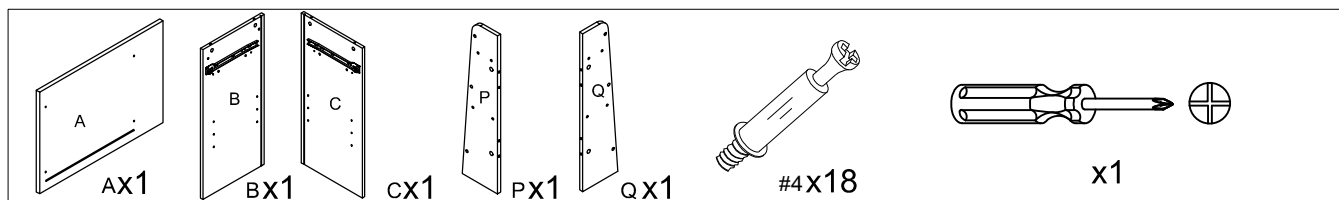




Step 3.

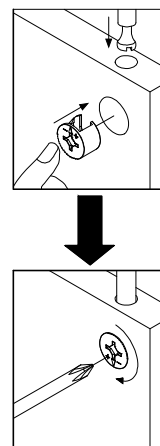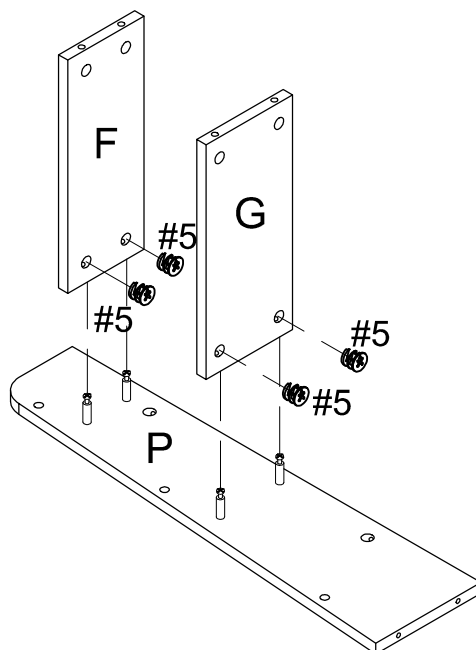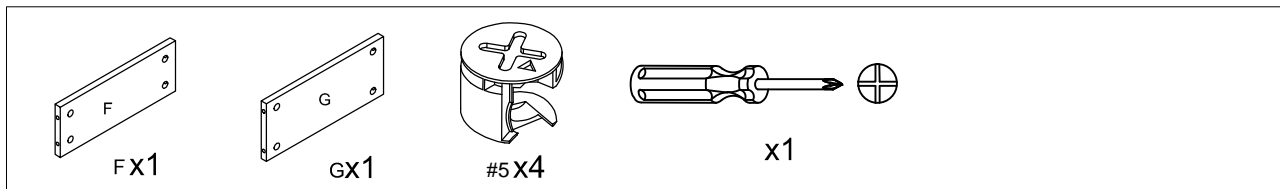


Step 4.

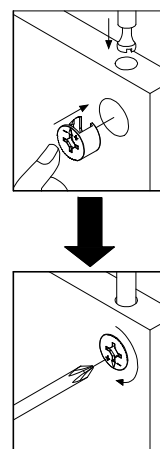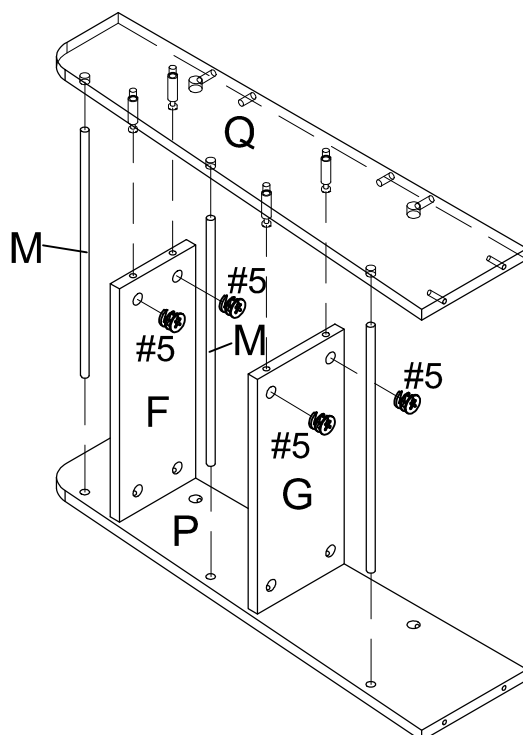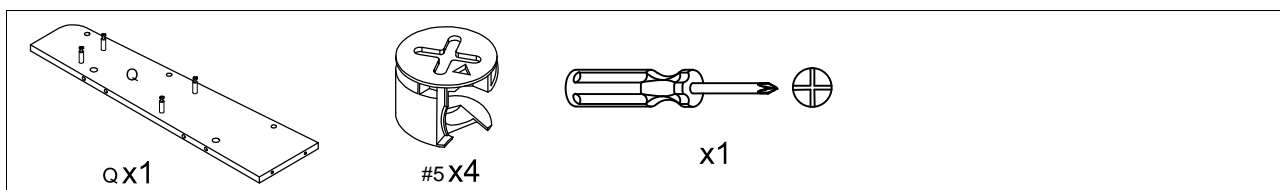


Step 5.

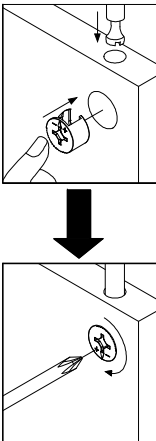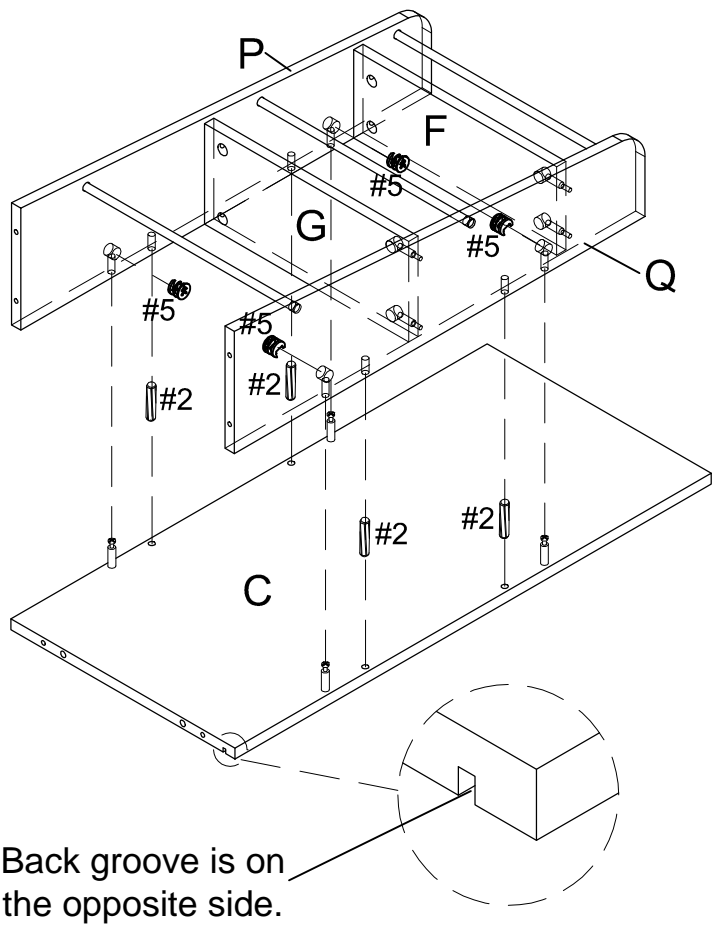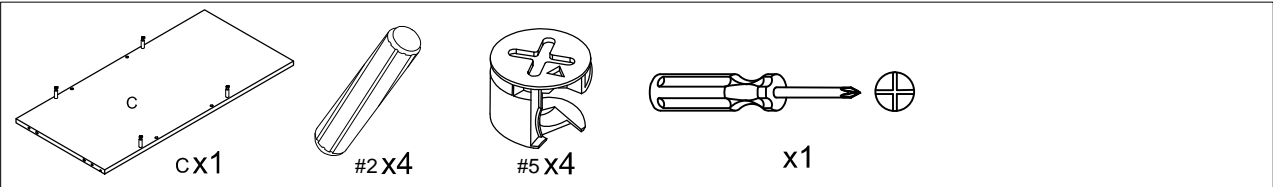


Step 6.

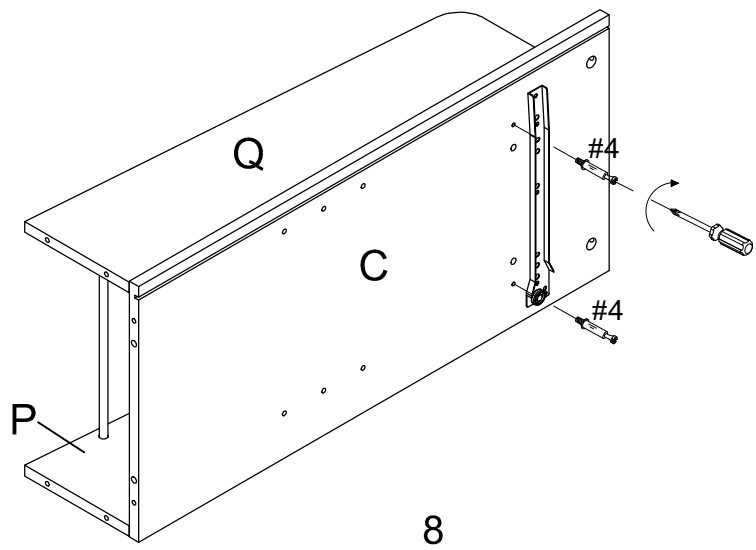



Step 7.

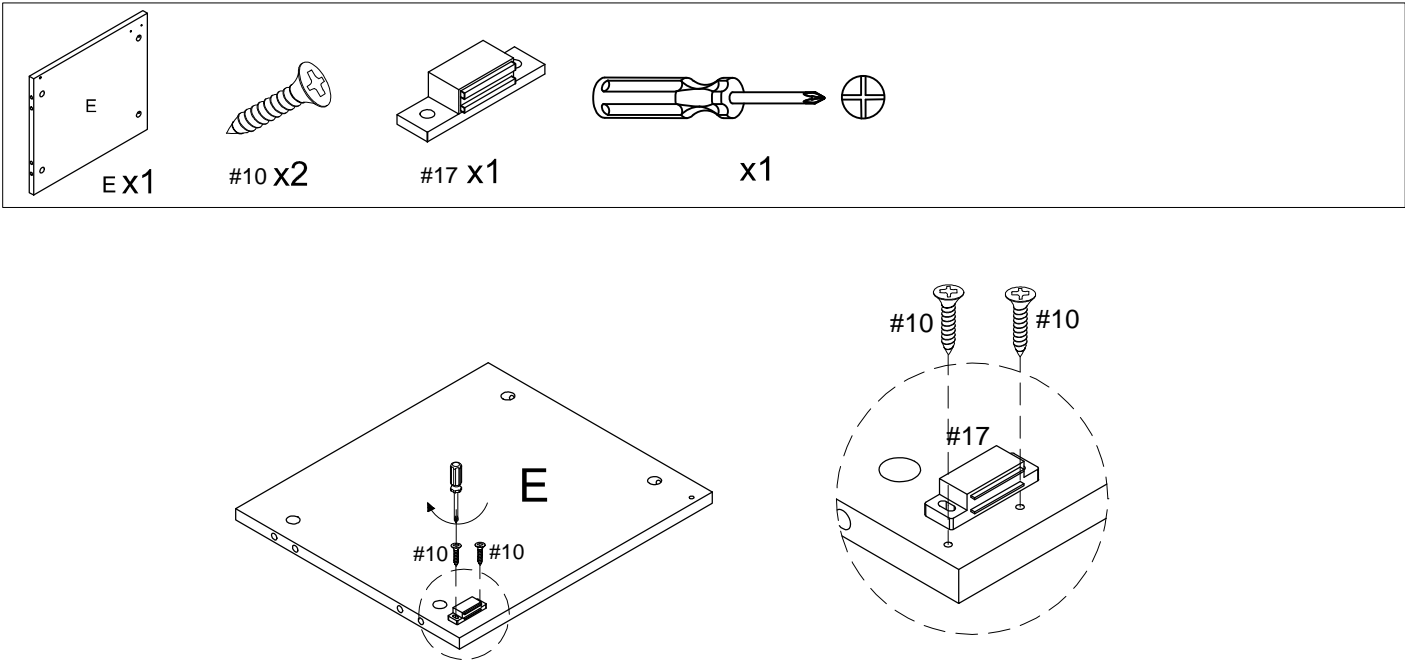



Step 8.

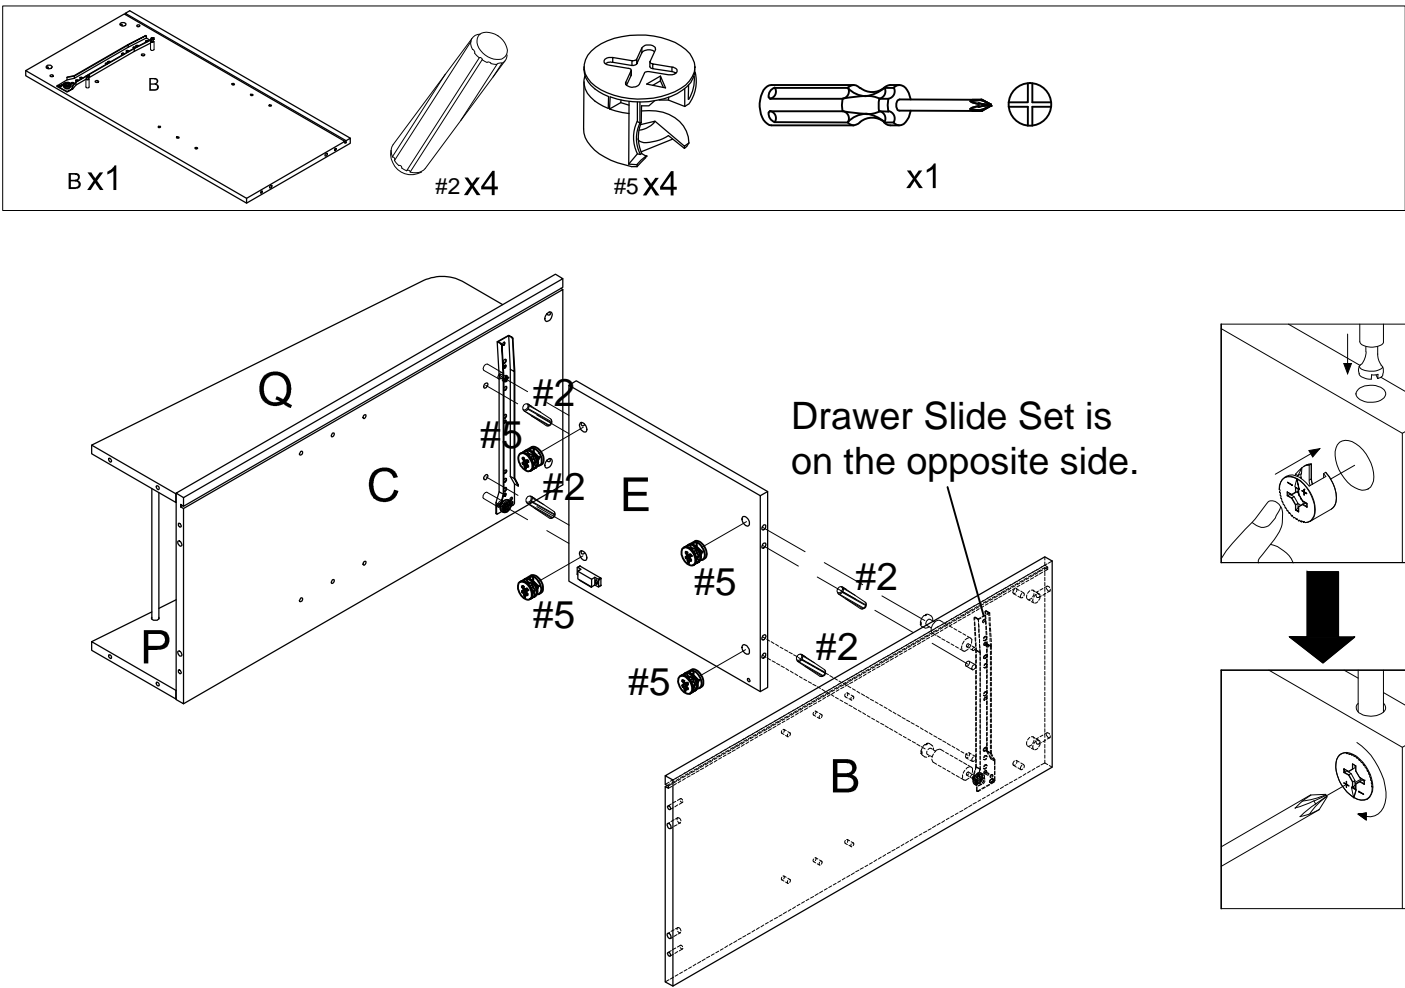



Step 9.

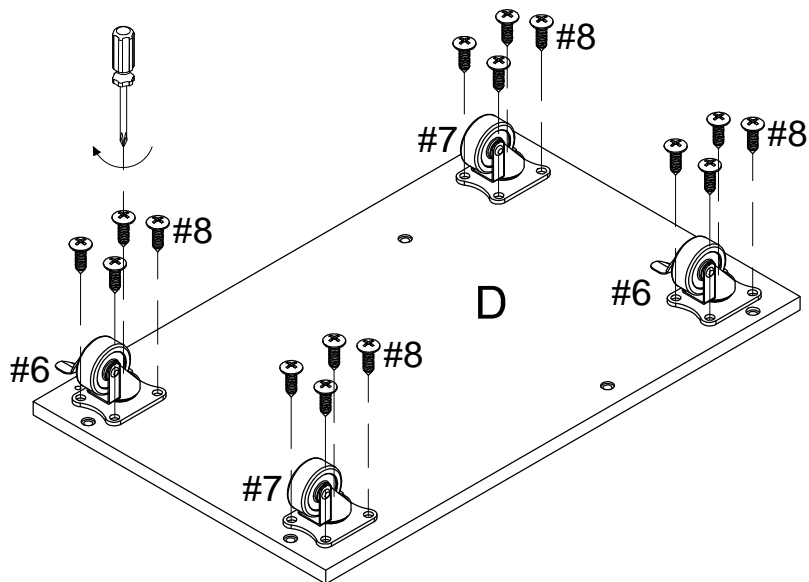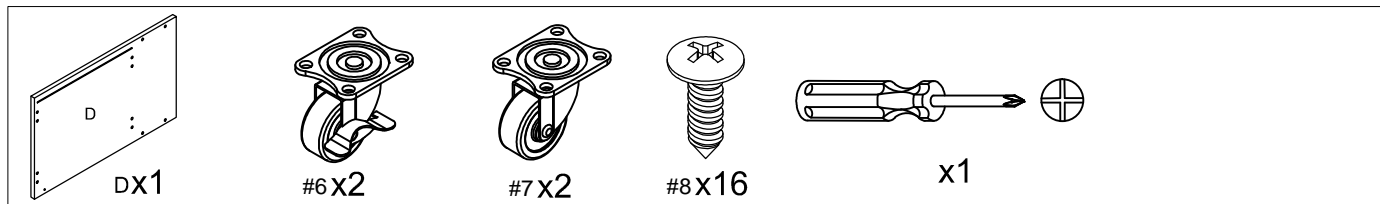




Step 10.

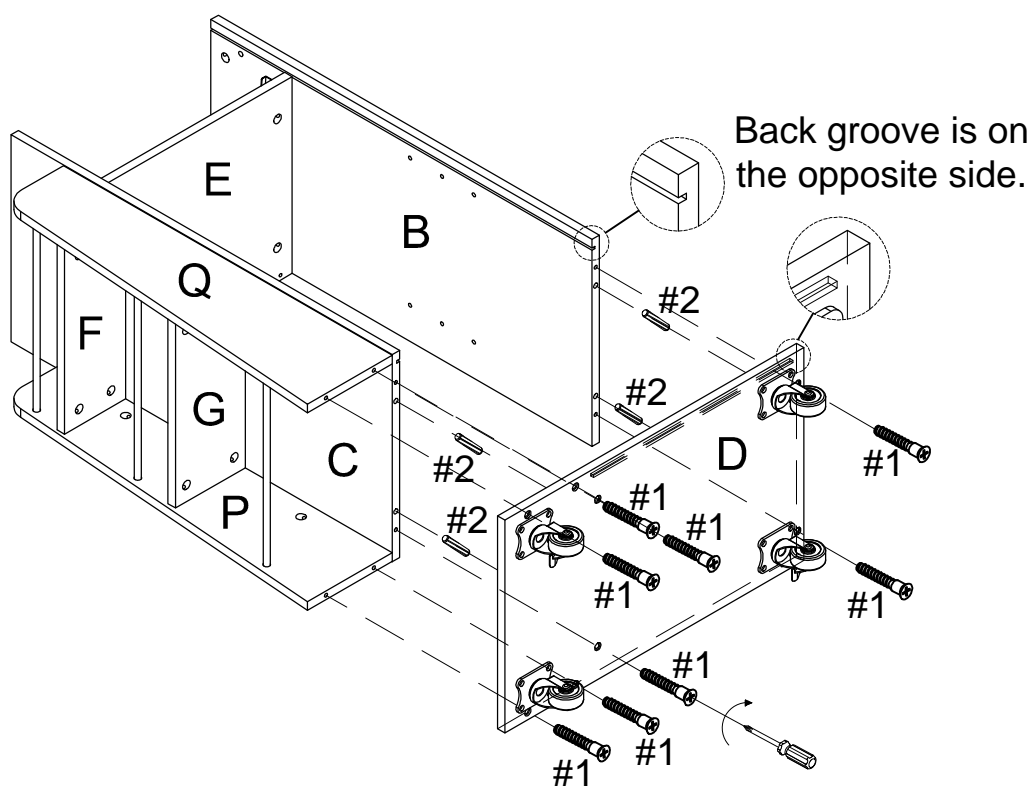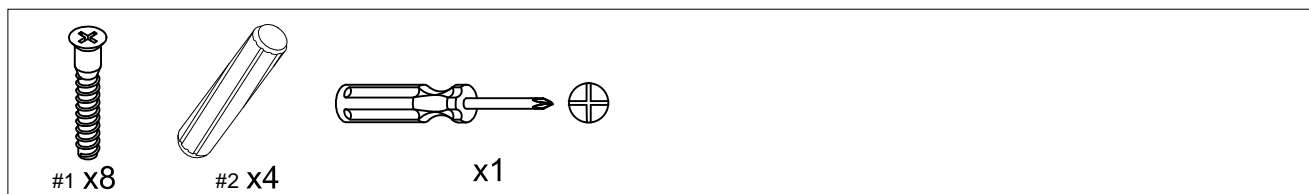




Step 11.

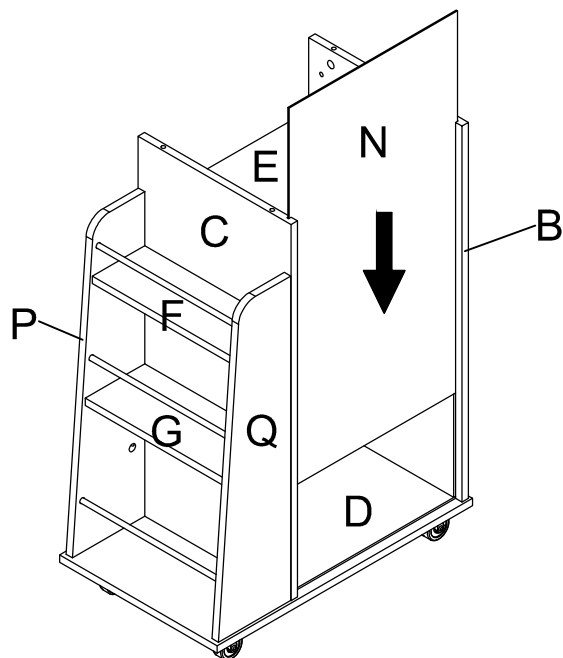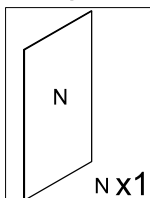


Step 12.

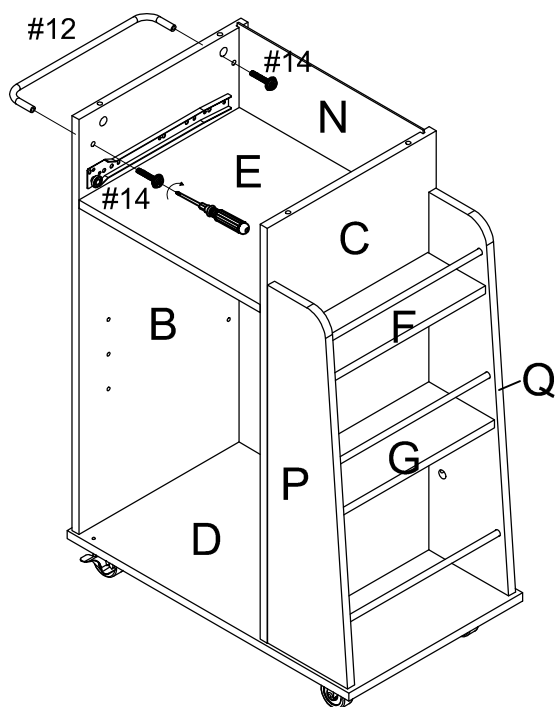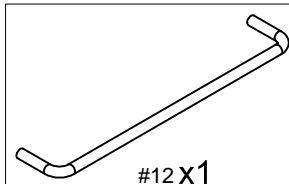




Step 13.

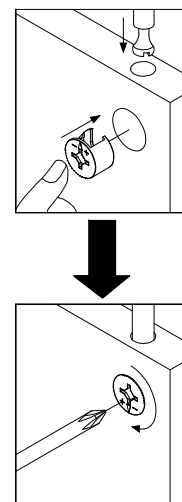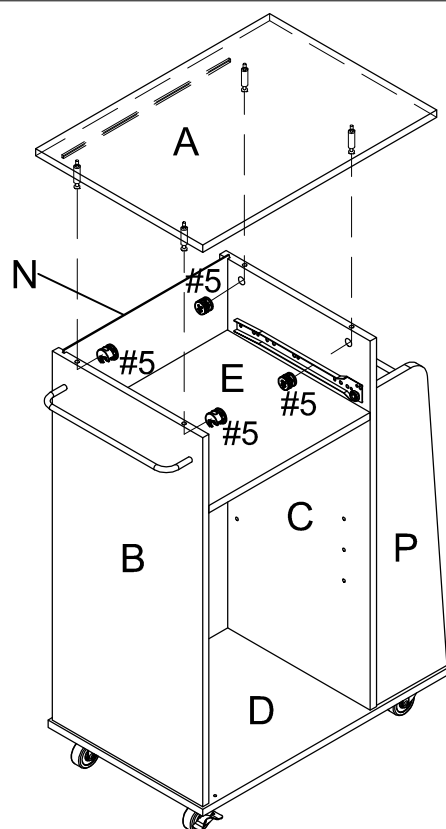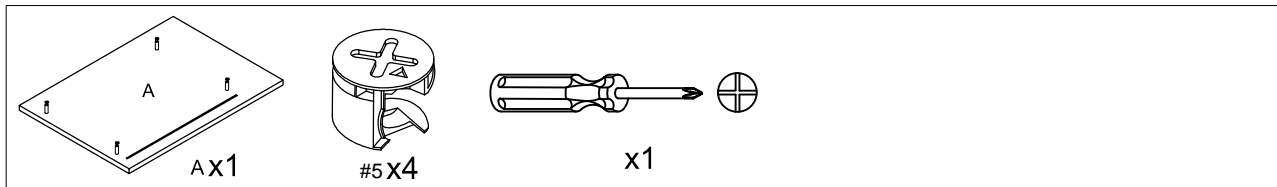

Step 14.

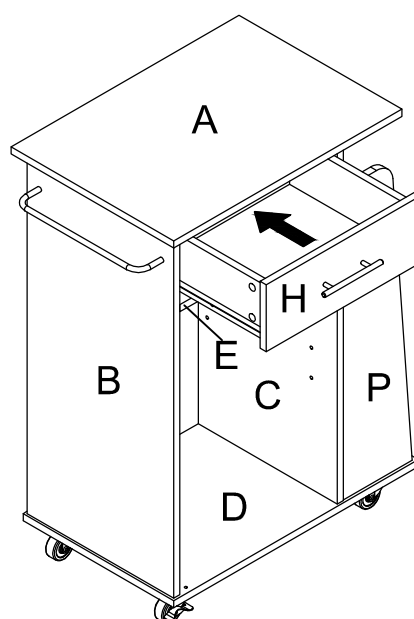


Step 15.

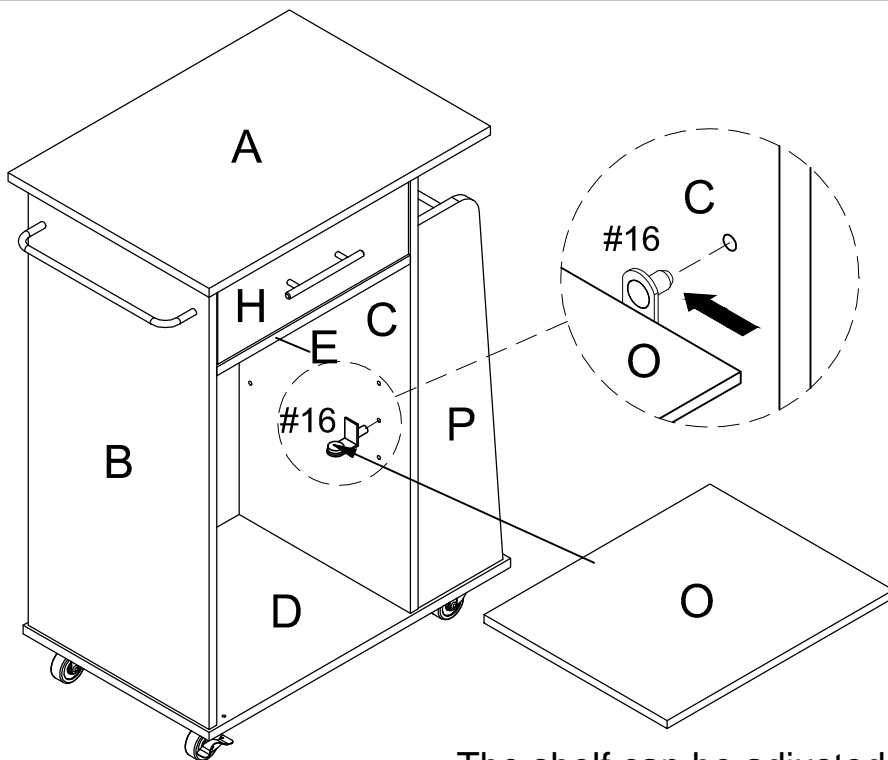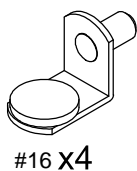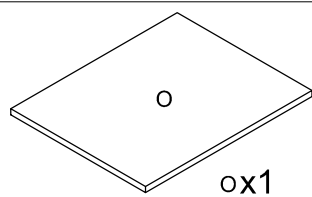

The shelf can be adjusted up and down with three heights.


Step 16.



Rx1




#15 X1



#18 X1




x1

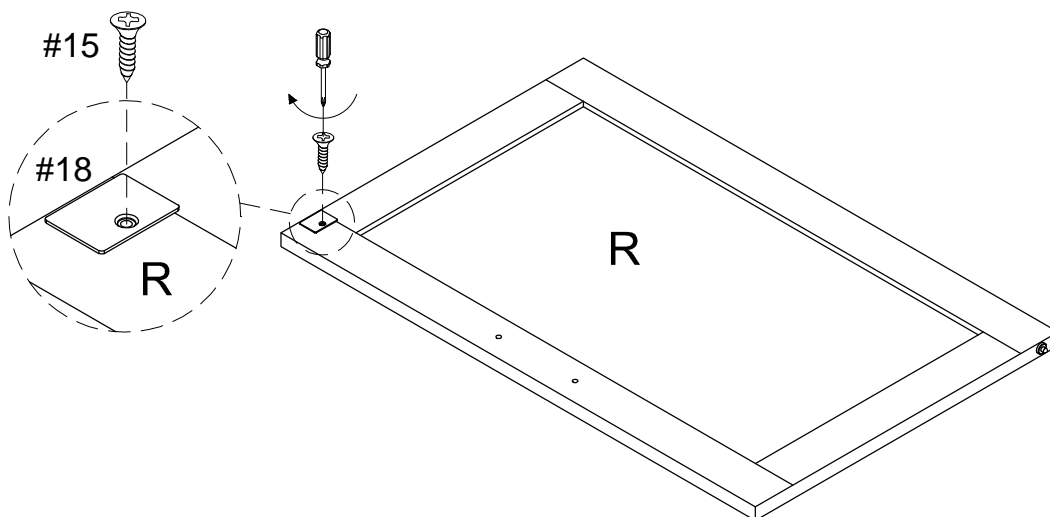




13

Step 17.

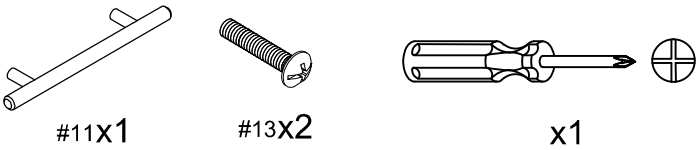

PIN PIVOT CAVITY

PIN

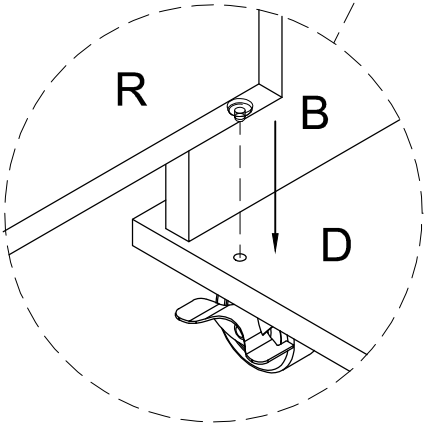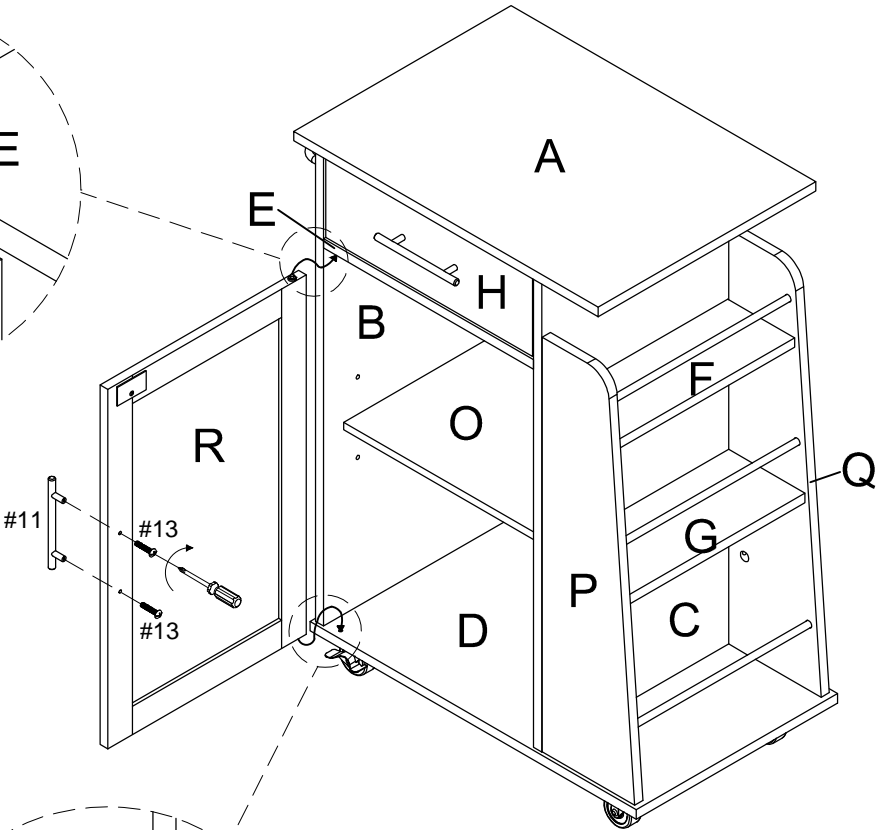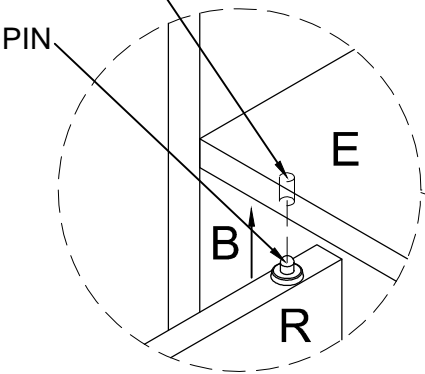

Step 18.

