

FOLDING ROPE ACCENT CHAIR


Assembly Instructions



Everything we make is incredibly simple to set up, including your new chair. You won't need any additional tools.

Parts List

A x 1
SEAT FRAME




B x 1
BACK CHAIR



C x 1
RIGHT LEG



D x 1
LEFT LEG



Hardware List

HW1 x 6
Bolt M6x70mm



HW2 x 6
Bolt M6x25mm




HW3 x 1
Allen key



1

Align the screw holes on the Right Leg (C) to the screw holes on the right side of the Seat Frame (A) and Back Chair (B). Use the Allen Key (HW3) to screw in the Bolts (HW1) to attach the Back Chair (B) to the Right Leg (C) in the spots shown below. Use the Allen Key (HW3) to screw in the Bolts (HW2) to attach the Seat Frame (A) to the Right Leg (C) in the spots shown below. Repeat to attach the Left Leg (D) to the left side of the Seat Frame (A) and Back Chair (B). Make sure all bolts are fully tightened after assembly.

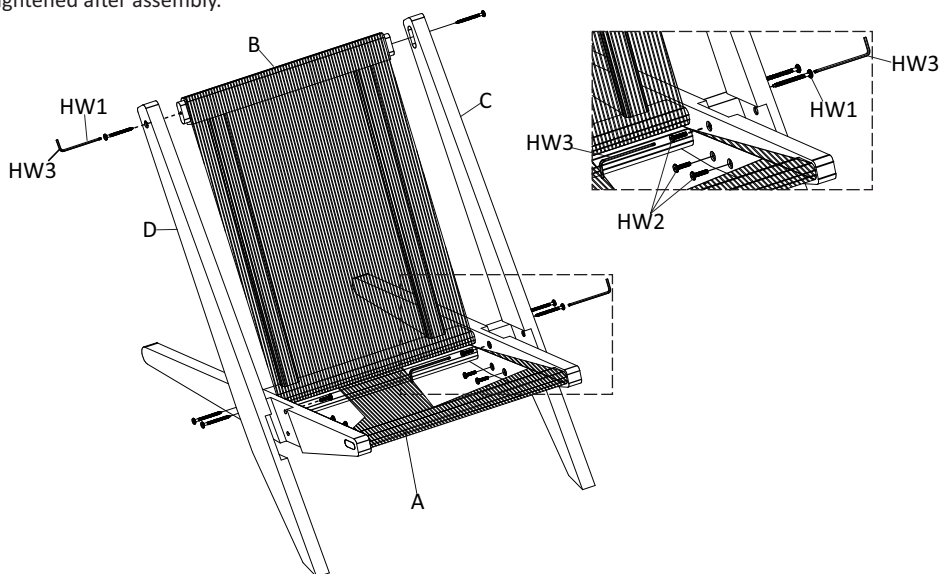

2

Place the chair in the place where you will use it. We'd love to see it

