



# ASSEMBLY INSTRUCTION


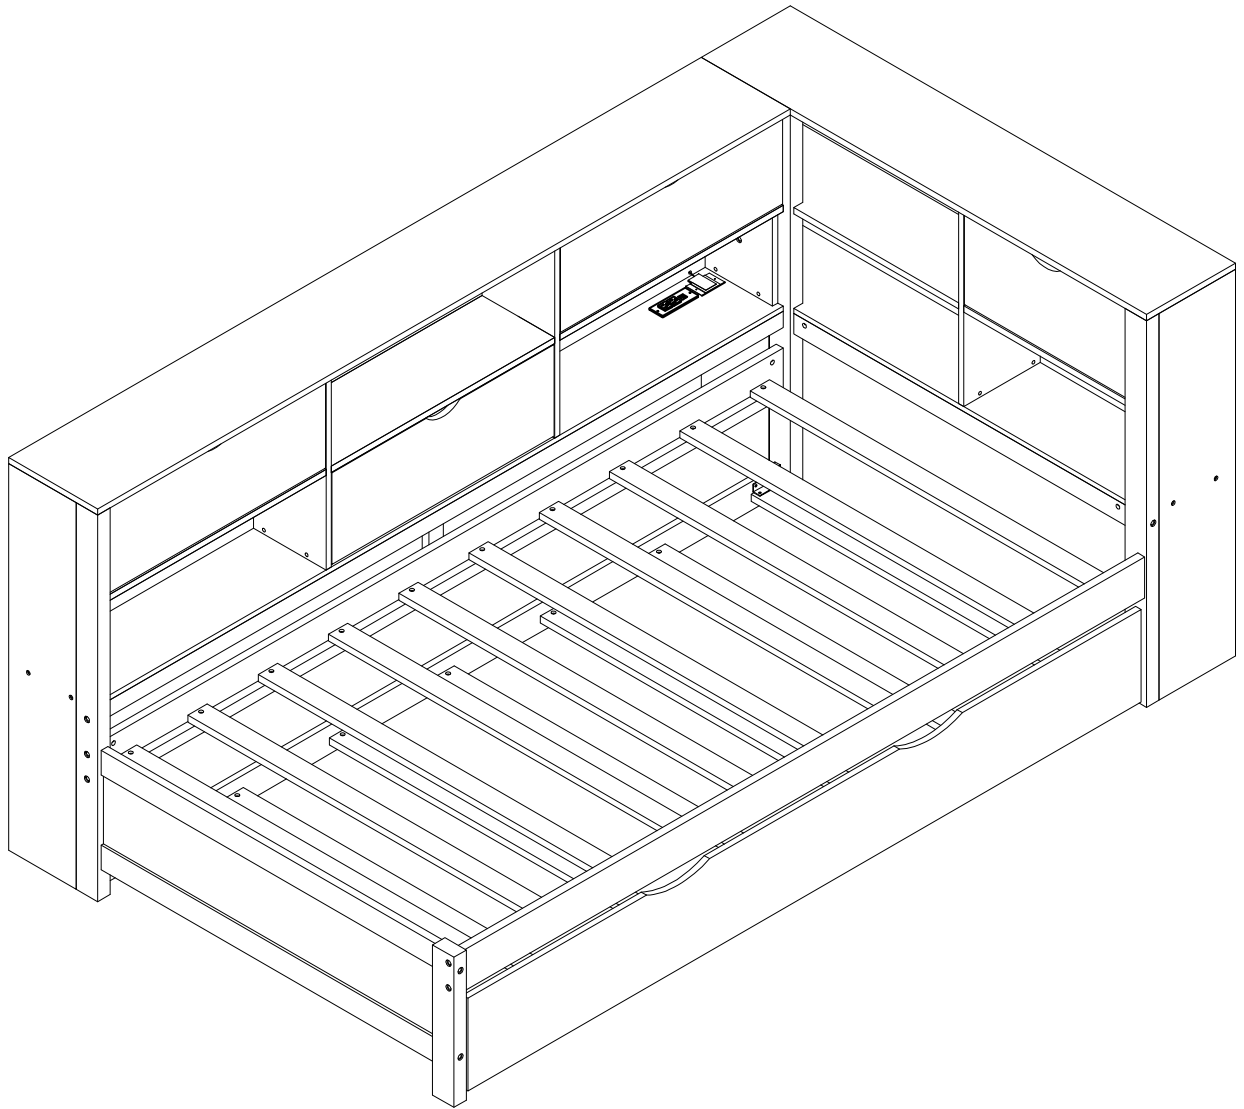










SKU CODE: N701P174991K/N701P174992K

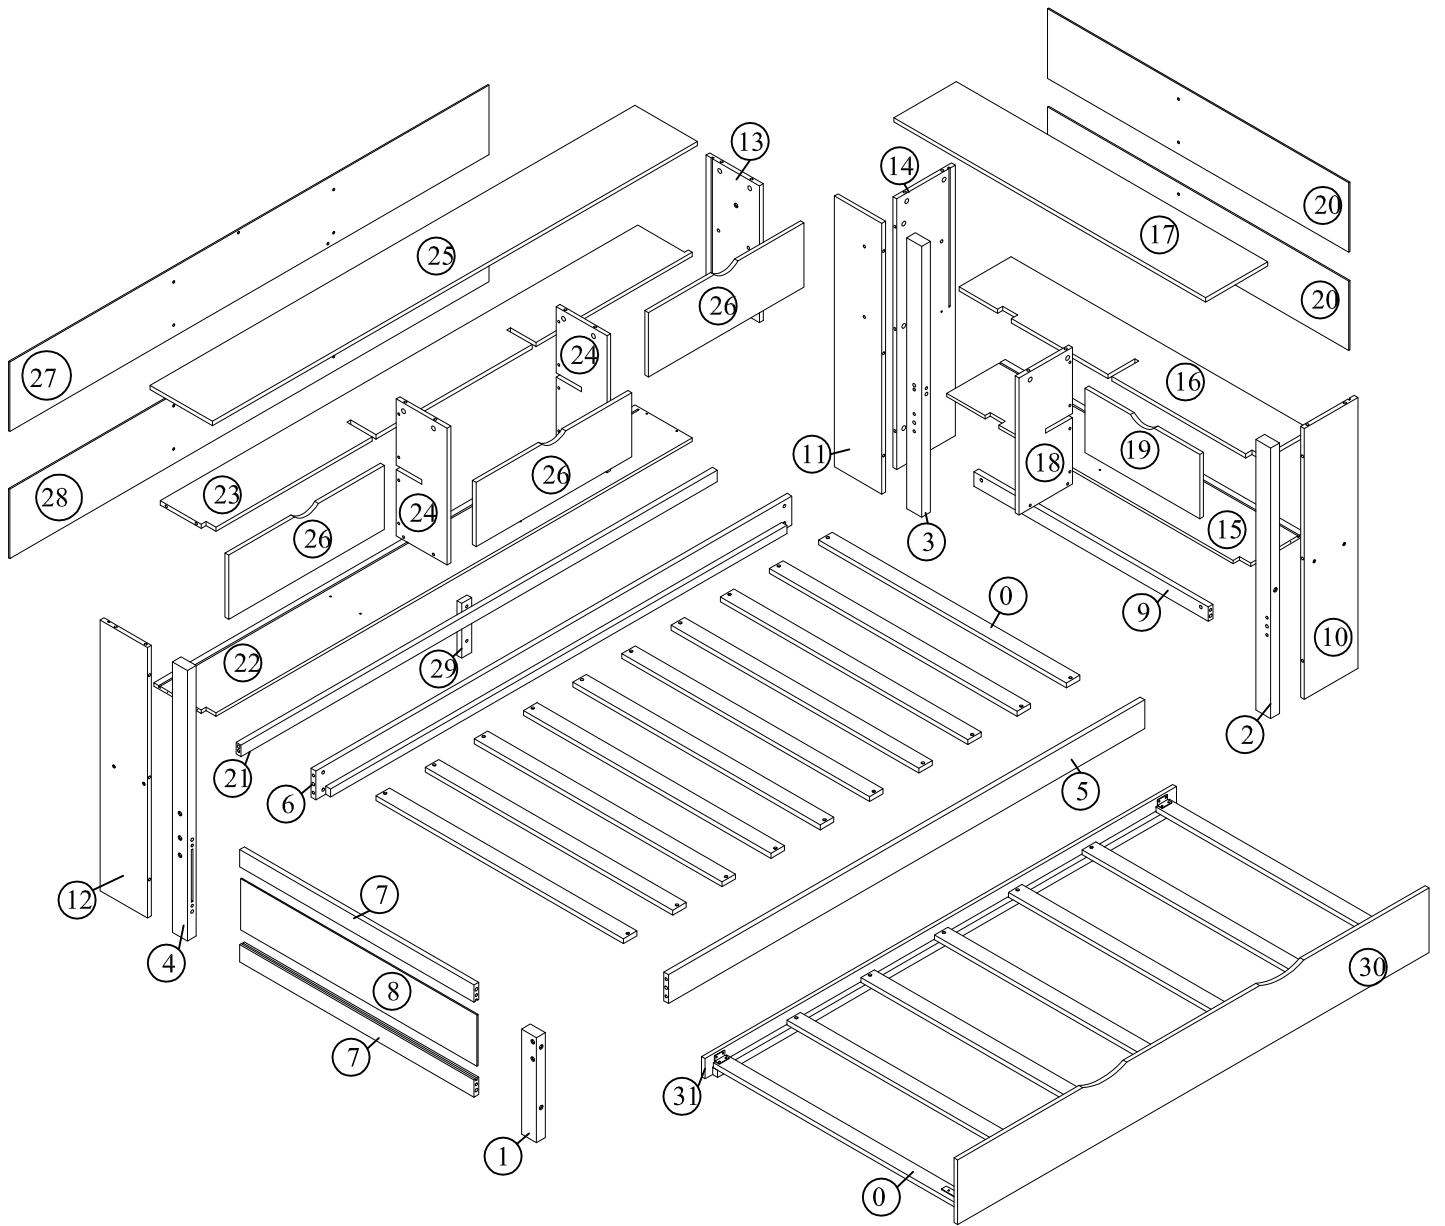









# Detail view
















# Part List (N701P174991K)

<p style="font-size: 24px; margin: 0;">① x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Footboard</p>	<p style="font-size: 24px; margin: 0;">② x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Headboard</p>
<p style="font-size: 24px; margin: 0;">③ x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Headboard</p>	<p style="font-size: 24px; margin: 0;">④ x1</p>  <p style="text-align: center; margin-top: 10px;">Leg Footboard</p>
<p style="font-size: 24px; margin: 0;">⑧ x1</p>  <p style="text-align: center; margin-top: 10px;">Panel Footboard</p>	<p style="font-size: 24px; margin: 0;">⑩ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Headboard Leg</p>
<p style="font-size: 24px; margin: 0;">⑪ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Headboard Leg</p>	<p style="font-size: 24px; margin: 0;">⑫ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Footboard Leg</p>
<p style="font-size: 24px; margin: 0;">⑬ x1</p>  <p style="text-align: center; margin-top: 10px;">Side Bookshelf</p>	<p style="font-size: 24px; margin: 0;">⑭ x1</p>  <p style="text-align: center; margin-top: 10px;">Frame Headboard Leg</p>
<p style="font-size: 24px; margin: 0;">⑮ x1</p>  <p style="text-align: center; margin-top: 10px;">Bookshelf Headboard</p>	<p style="font-size: 24px; margin: 0;">⑯ x1</p>  <p style="text-align: center; margin-top: 10px;">Bookshelf</p>




















# Part List (N701P174991K)

<p><b>17</b> x1</p>  <p style="text-align: center;">Top Bookshelf</p>	<p><b>18</b> x1</p>  <p style="text-align: center;">Mid Bookshelf</p>
<p><b>19</b> x1</p>  <p style="text-align: center;">Door Bookshelf</p>	<p><b>20</b> x2</p>  <p style="text-align: center;">Panel Bookshelf</p>
<p><b>24</b> x2</p>  <p style="text-align: center;">Mid Bookshelf</p>	<p><b>26</b> x3</p>  <p style="text-align: center;">Door Bookshelf</p>
<p><b>29</b> x1</p>  <p style="text-align: center;">Support Shelf</p>	<p><b>0</b> x3</p>  <p style="text-align: center;">Slats</p>


# Part List (N701P174992K)

<p><b>0</b> x14</p>  <p style="text-align: center;">Slats</p>	<p><b>5</b> x1</p>  <p style="text-align: center;">Side rail</p>
<p><b>6</b> x1</p>  <p style="text-align: center;">Side rail</p>	<p><b>7</b> x2</p>  <p style="text-align: center;">Crossbar Footboard</p>
<p><b>9</b> x1</p>  <p style="text-align: center;">Crossbar - Headboard</p>	<p><b>21</b> x1</p>  <p style="text-align: center;">Crossbar</p>
<p><b>22</b> x1</p>  <p style="text-align: center;">Bookshelf</p>	<p><b>23</b> x1</p>  <p style="text-align: center;">Bookshelf</p>
<p><b>25</b> x1</p>  <p style="text-align: center;">Top Bookshelf</p>	<p><b>27</b> x1</p>  <p style="text-align: center;">Panel Bookshelf</p>
<p><b>28</b> x1</p>  <p style="text-align: center;">Panel Bookshelf</p>	<p><b>30</b> x1</p>  <p style="text-align: center;">Front Trundle</p>
<p><b>31</b> x1</p>  <p style="text-align: center;">Back Trundle</p>	




# Hardware List (N7017174991K)

No.	OUTLOOK	DESC	QTY
(A)		Dowel Ø10*40mm	12
(B)		Bolts 1/4"*30mm	04
(C)		Bolts 1/4"*80mm	10
(D)		Bolts 1/4"*110mm	06
(E)		Cross dowel 1/4"*13mm	16
(F)		Screws #6*12mm	76
(G)		Screws #7*12mm	32
(H)		Screws #8*30mm	38
(I)		Screws #8*35mm	14
(J)		Round head screw #8*25mm	12
(K)		Connecting Bolt	34
(L)		Connector Housing	34
(M)		Base L long	02
(N)		Base L small	02
(O)		Wheels	04
(P)		Power outlet	01
(Q)		Led light	01
(R)		Base L	03
(S)		Inhaler Magnet	08

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







# Hardware List (N7017174991K)


No.	OUTLOOK	DESC	QTY
(T)		Door Hinge	08
(U)		Wood stops	02
(V)		Allen key 60*22*4mm	01

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







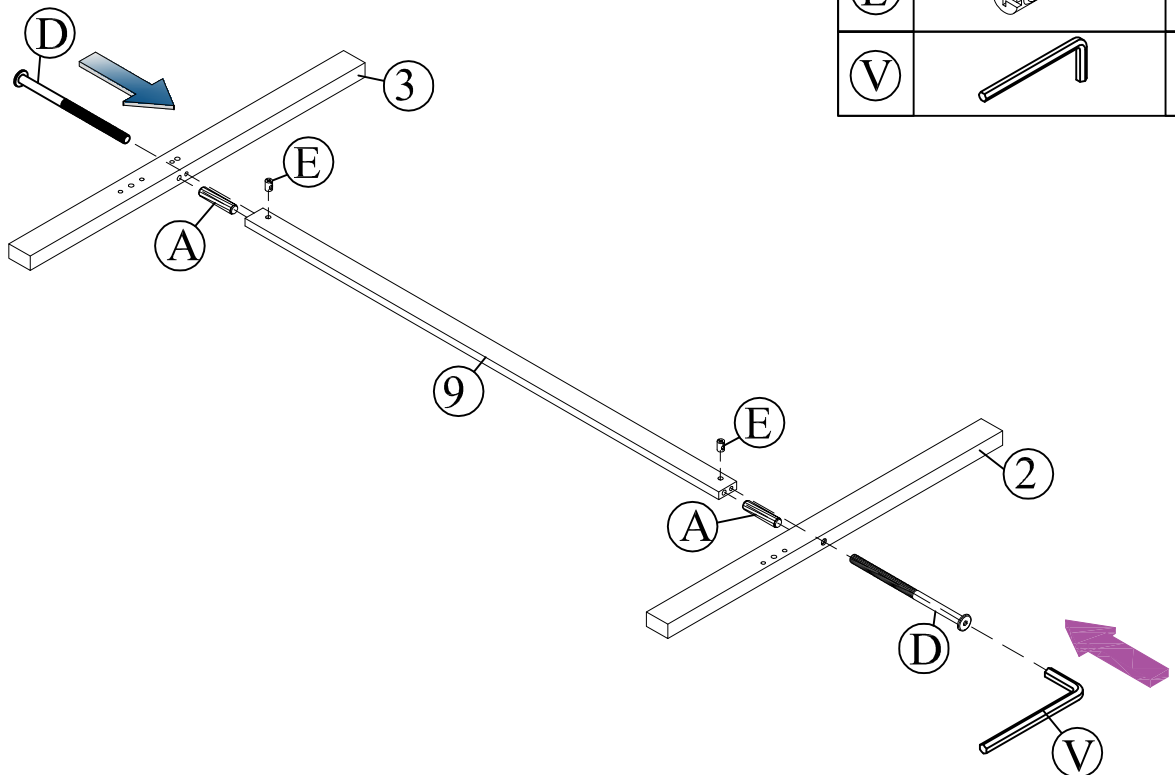
STEP 1:

(A)		04
(D)		04
(E)		04
(V)		01

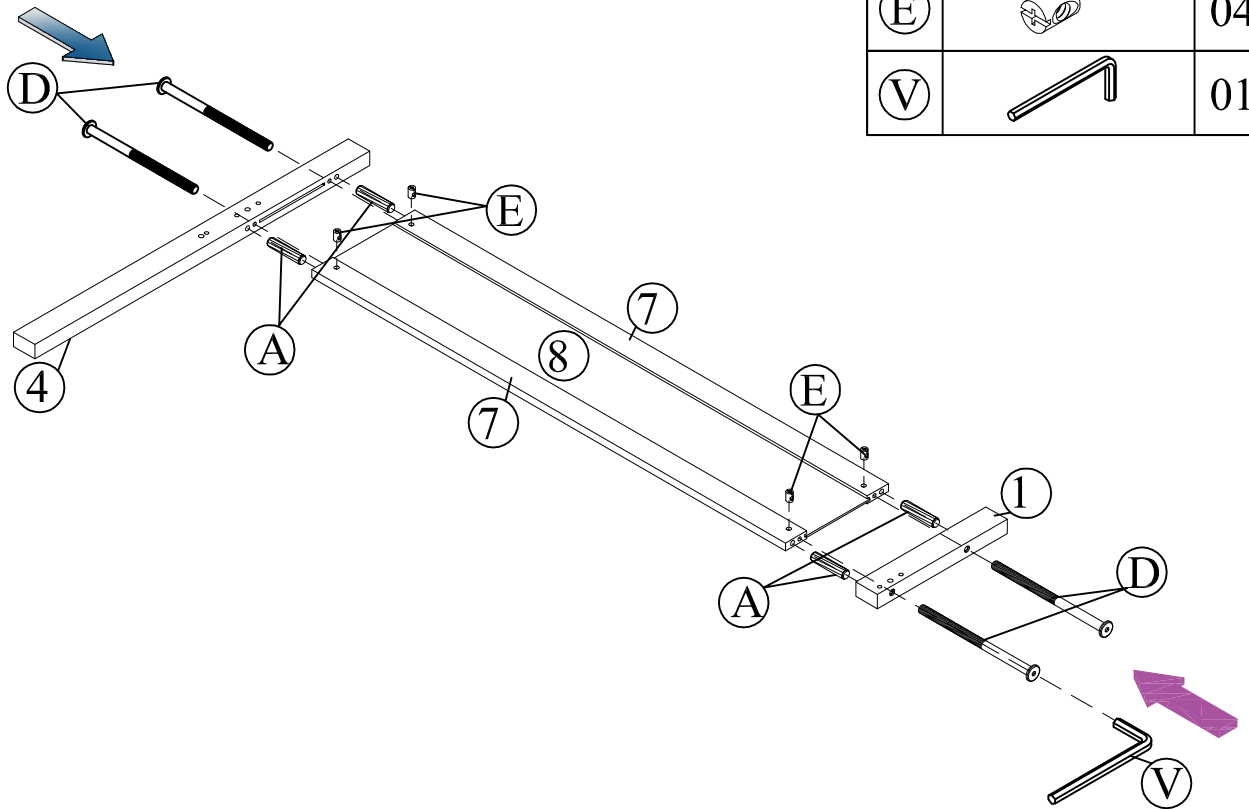






STEP 2:

(A)		02
(D)		02
(E)		02
(V)		01

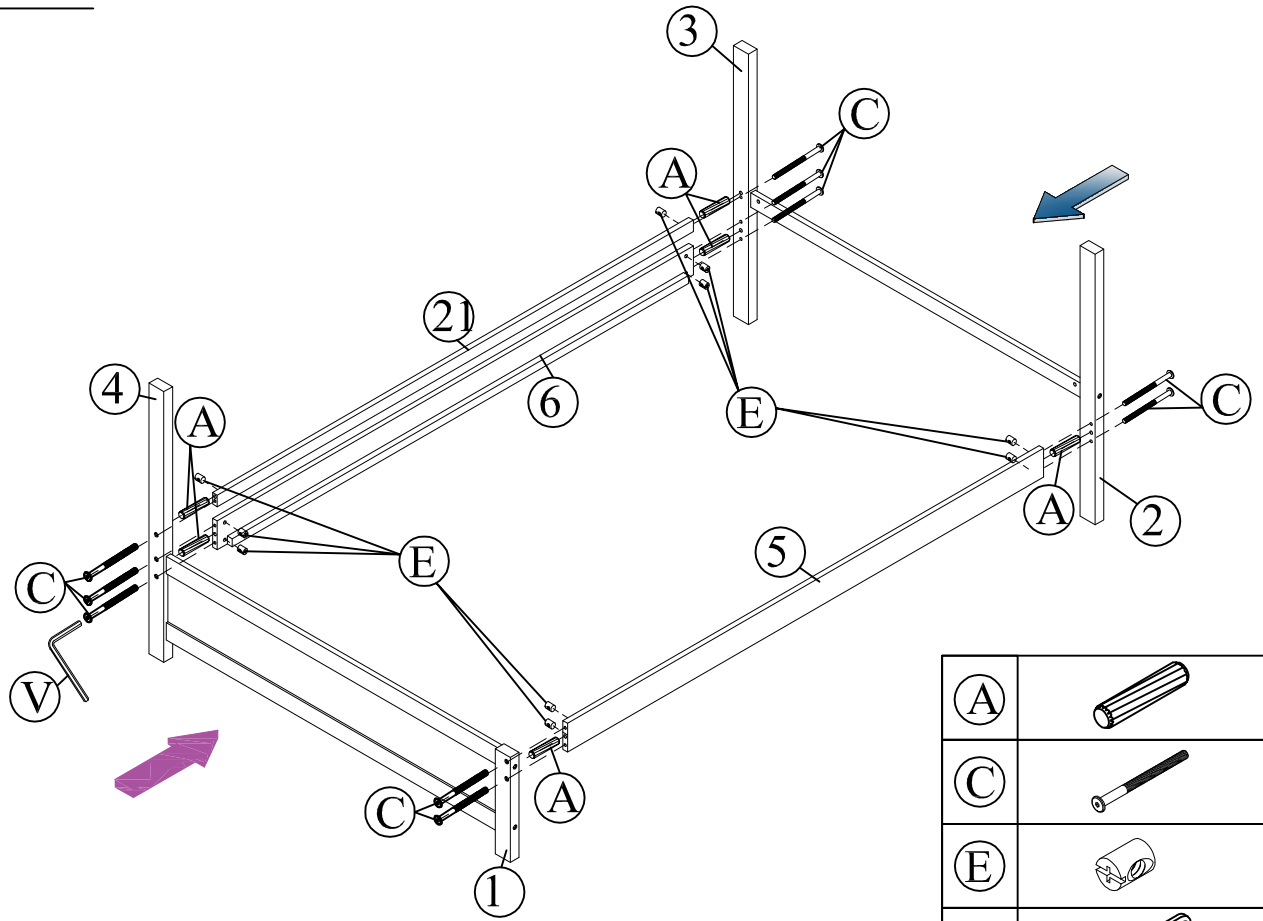


STEP 3:





(A)		06
(C)		10
(E)		10
(V)		01

STEP 4:

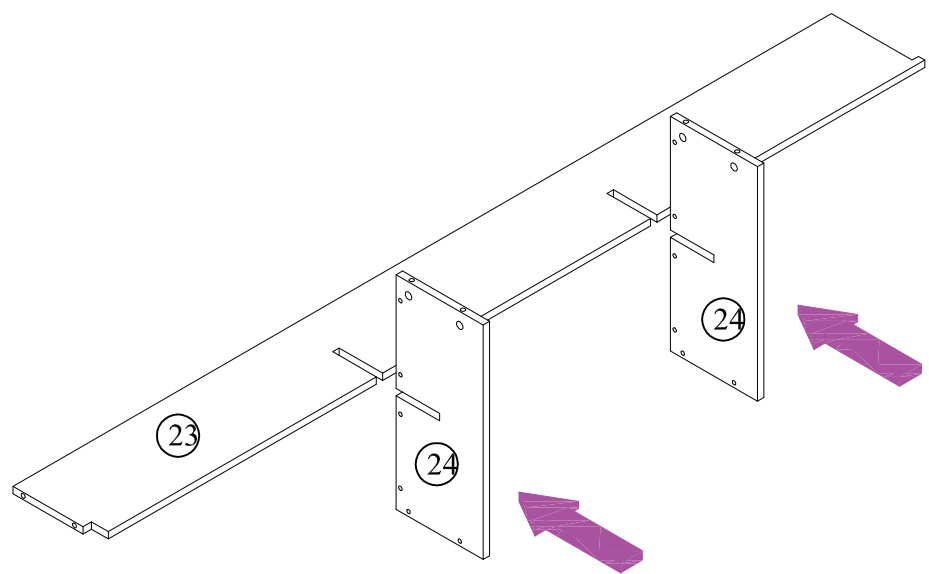



STEP 5:

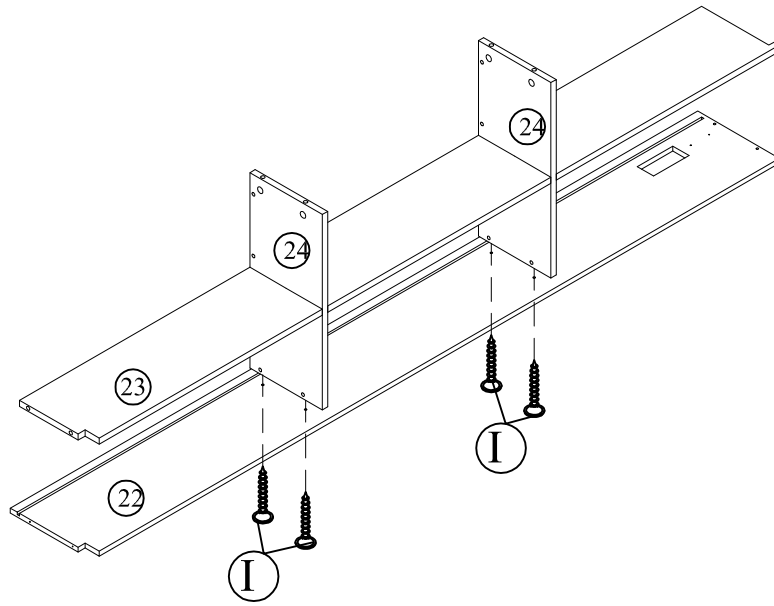


I		04
---	---	----



STEP 6:

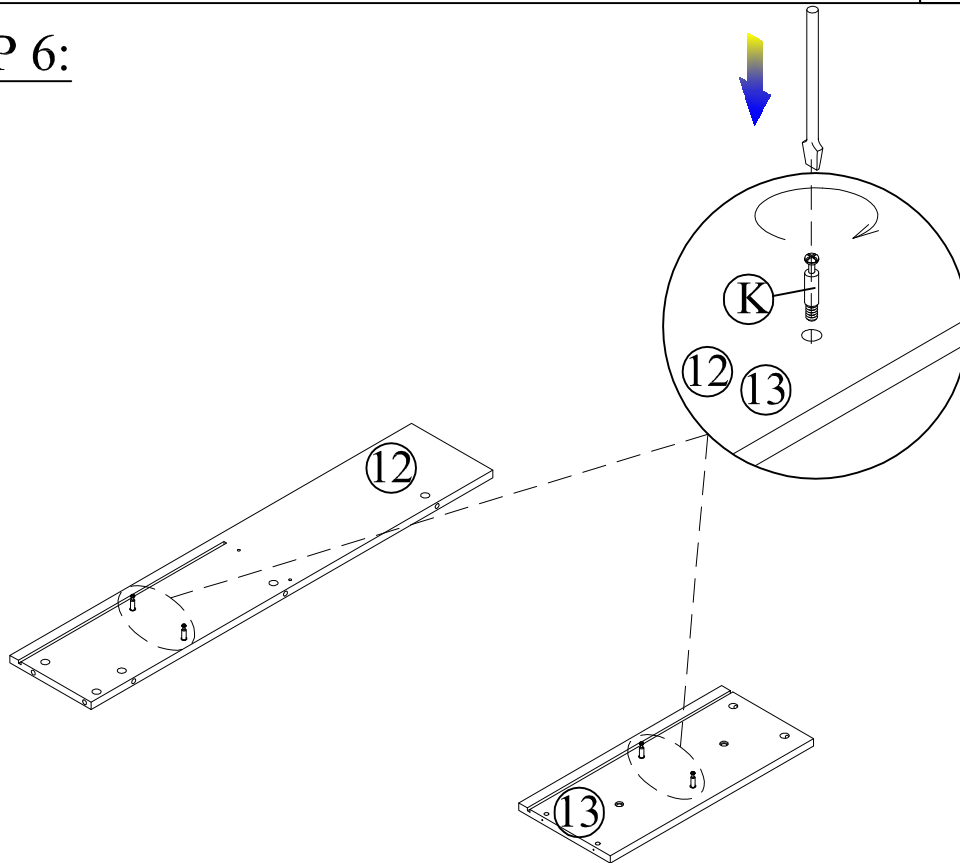


K		04
---	---	----

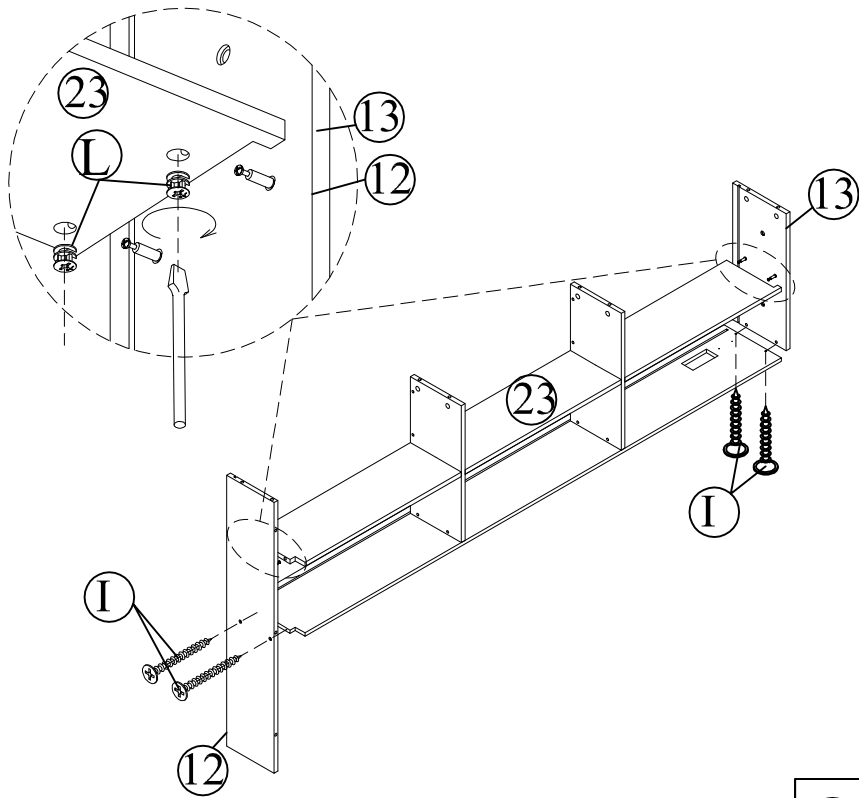

# STEP 7:



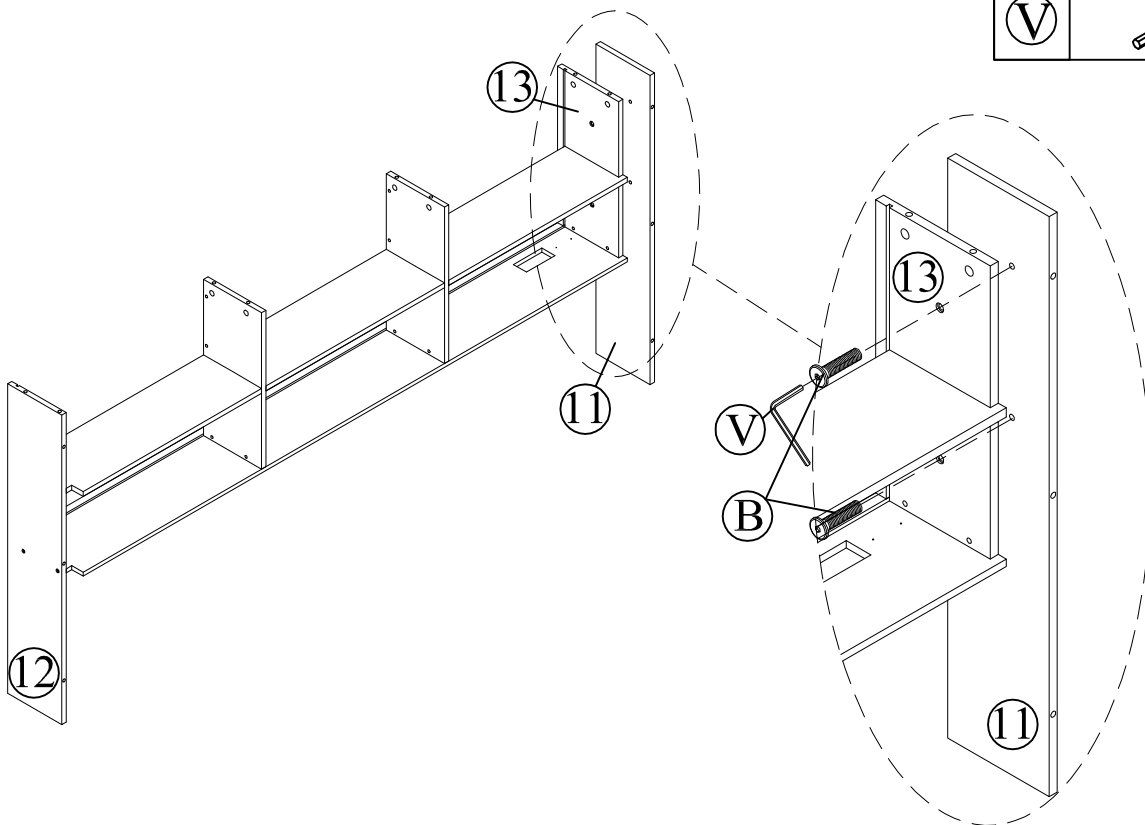


ⓐ		04
Ⓛ		04


# STEP 8:



ⓑ		02
Ⓥ		01


**STEP 9:**

(B)		02
(K)		06
(V)		01

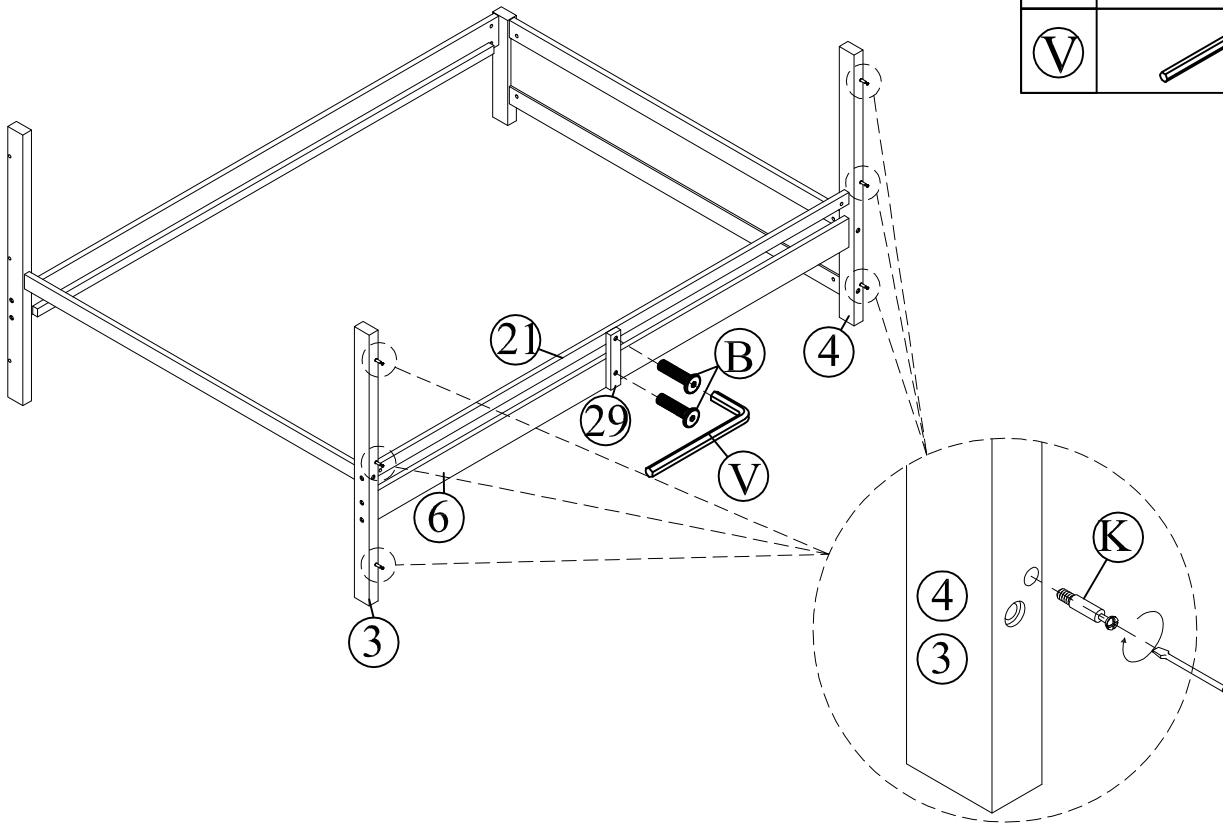


**STEP 10**



(L)		06
-----	---	----

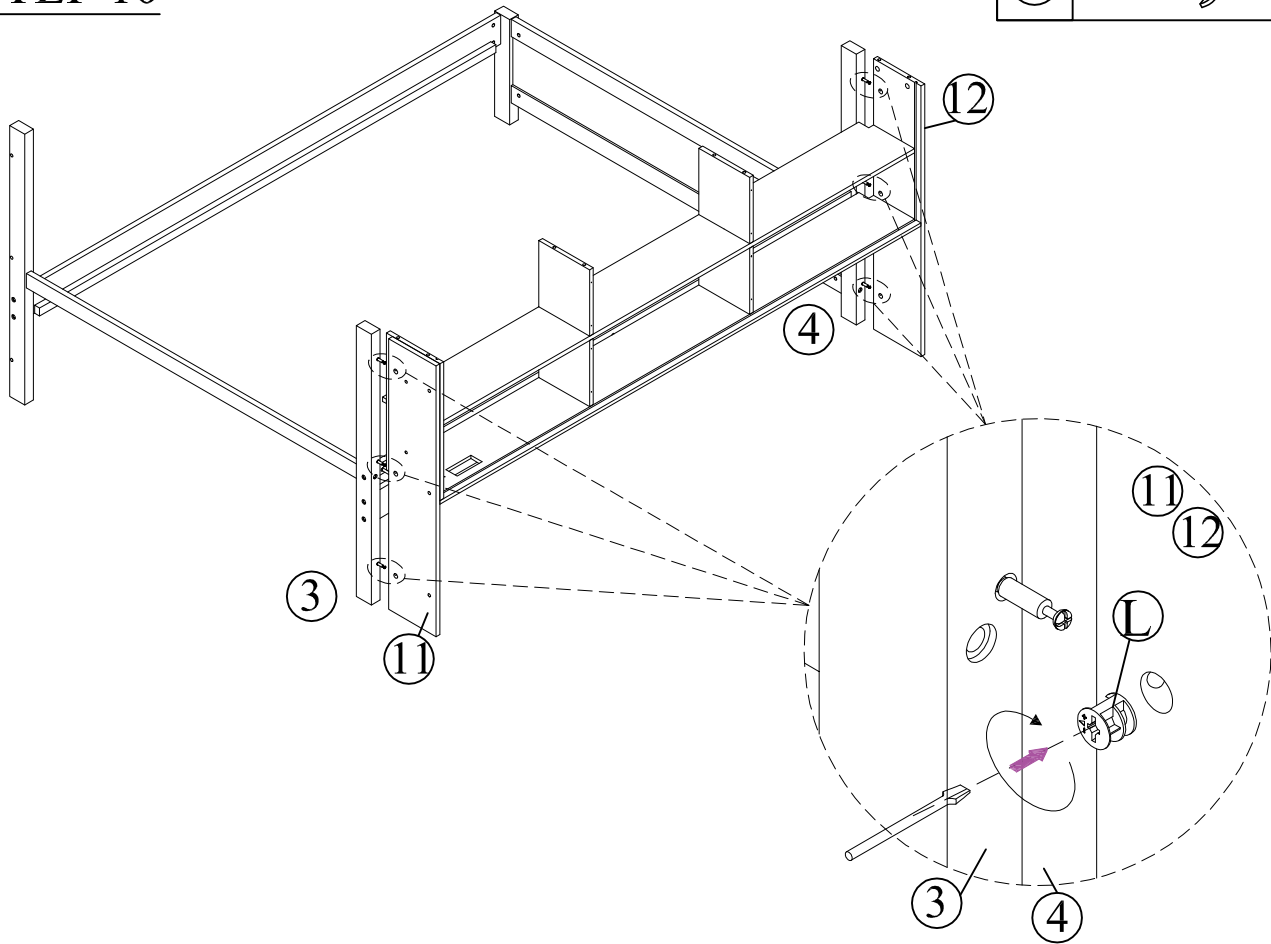


## STEP 11:

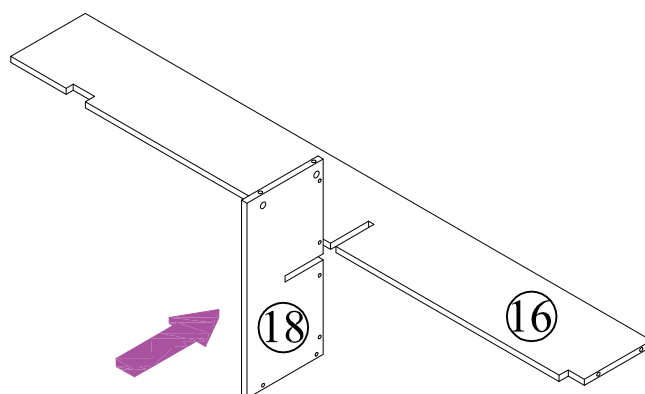


## STEP 12:

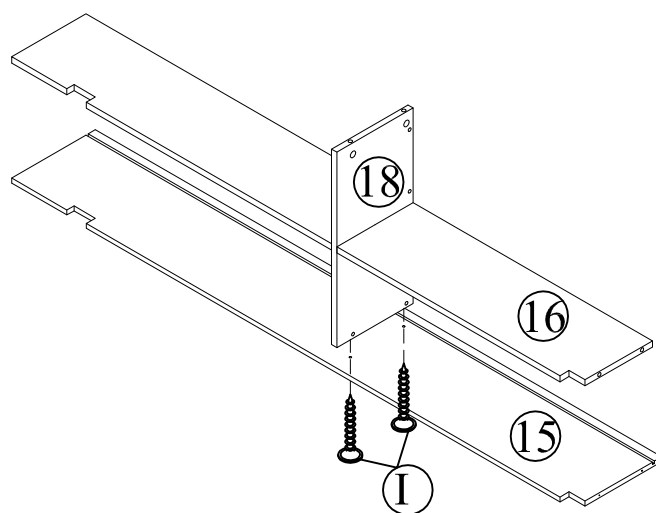


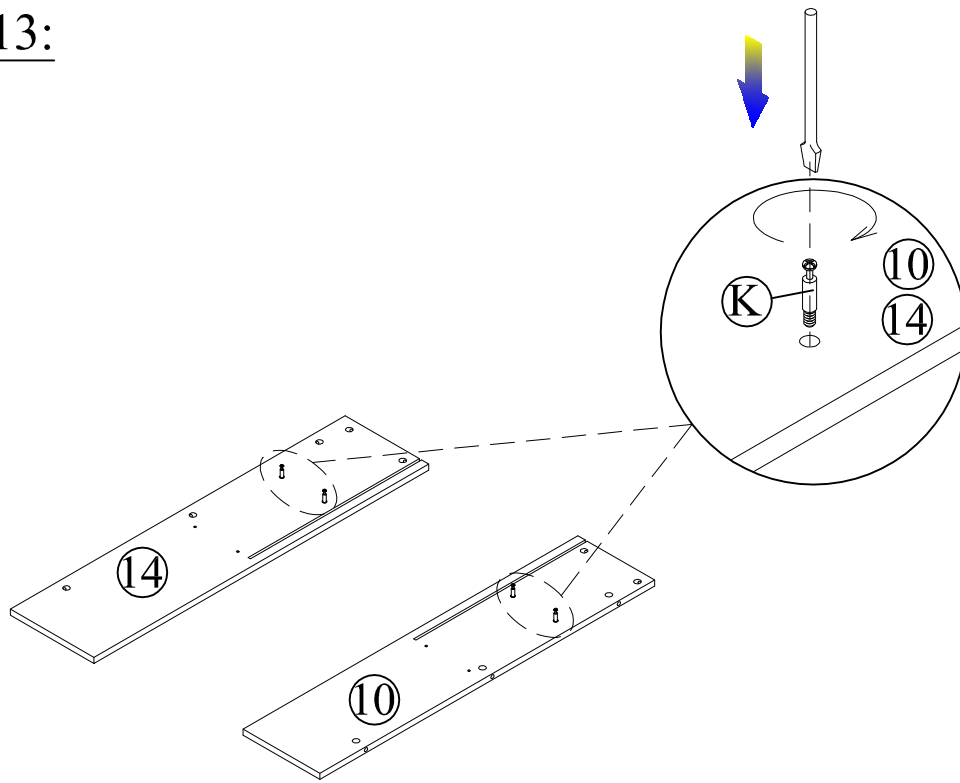

STEP 13:




K		04
---	---	----

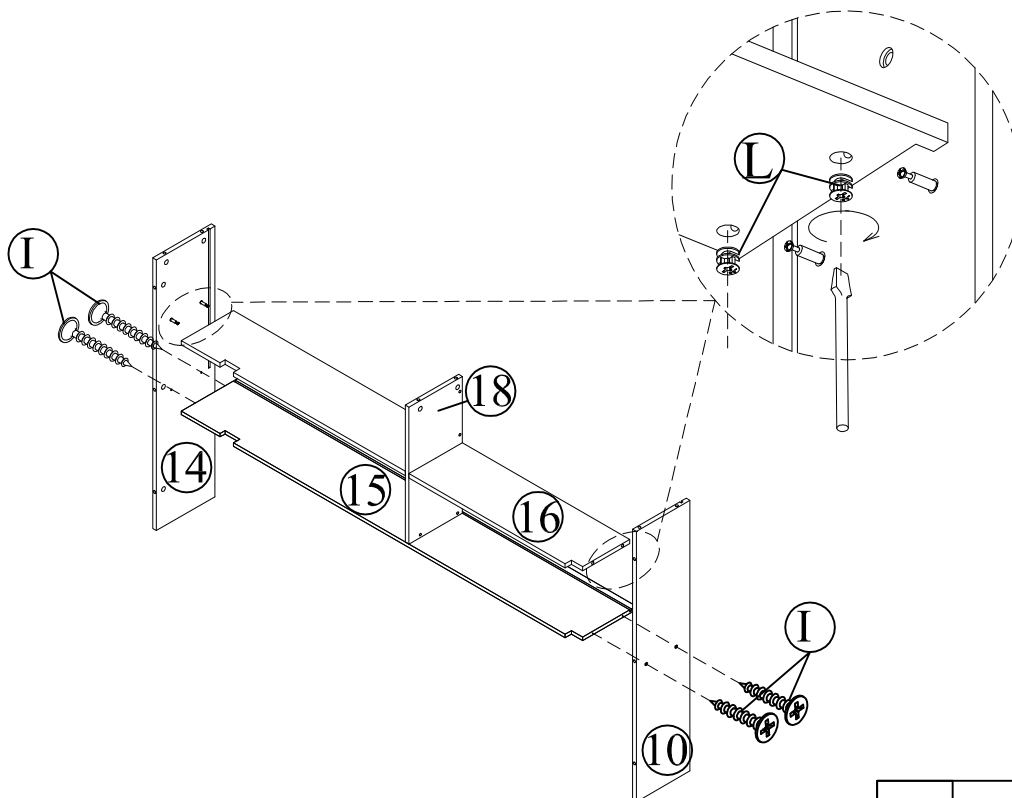
STEP 14:




I		04
L		04

**STEP 15:**

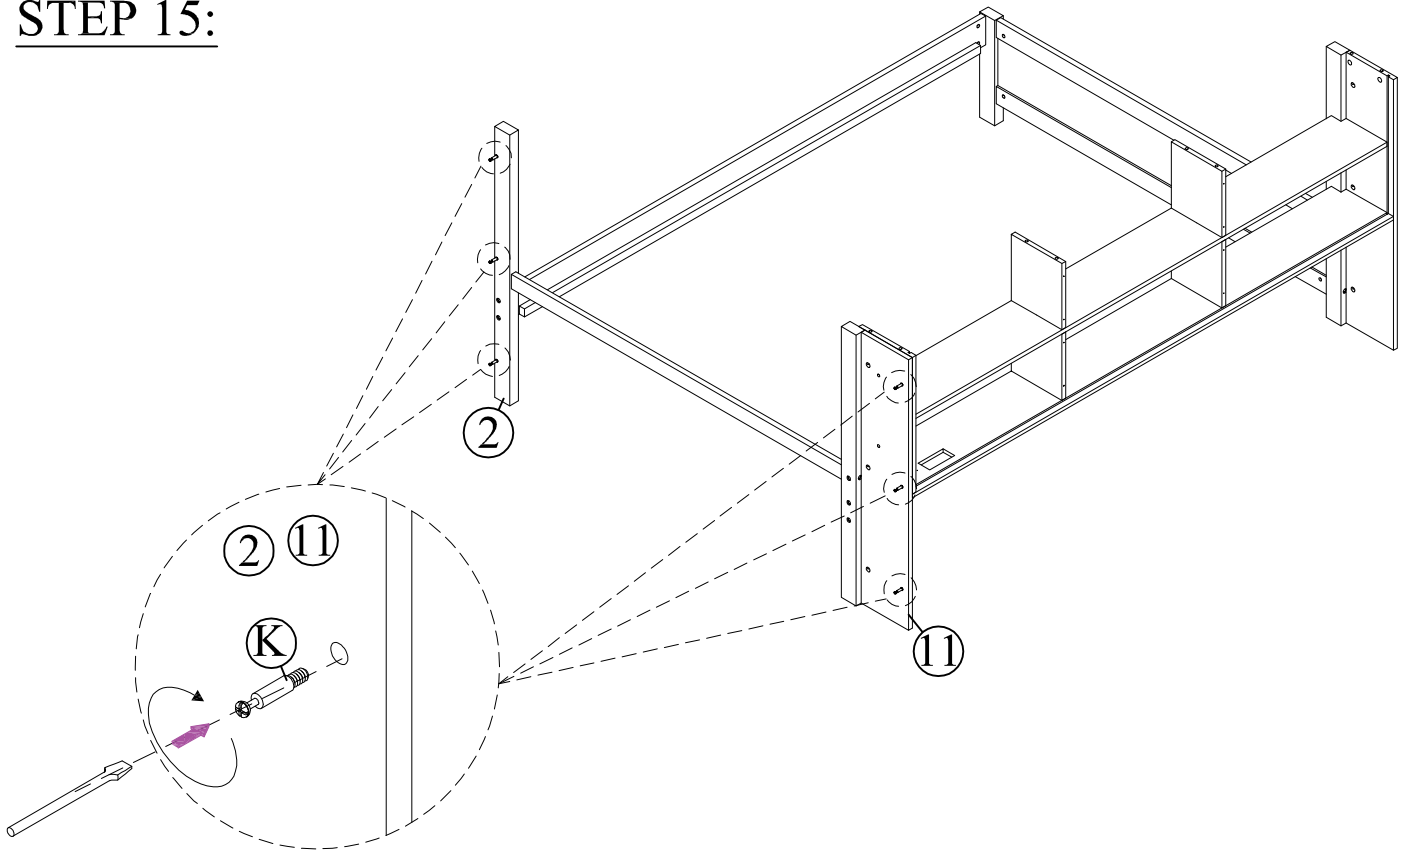



(K)		06
-----	---	----


**STEP 16:**

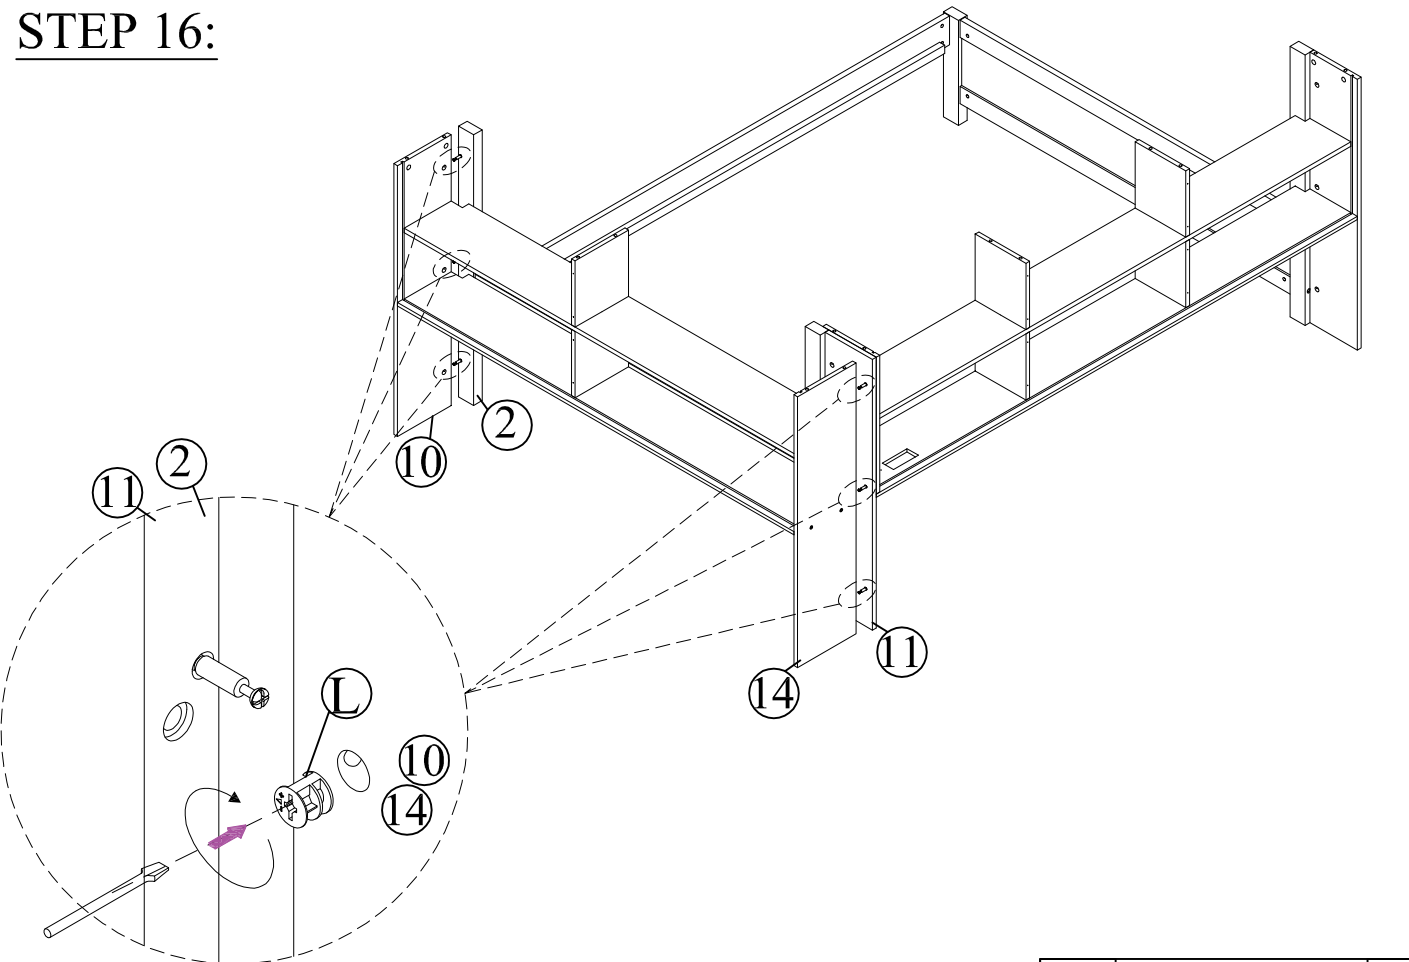


(L)		06
-----	---	----


**STEP 17:**

(F)		02
(P)		01

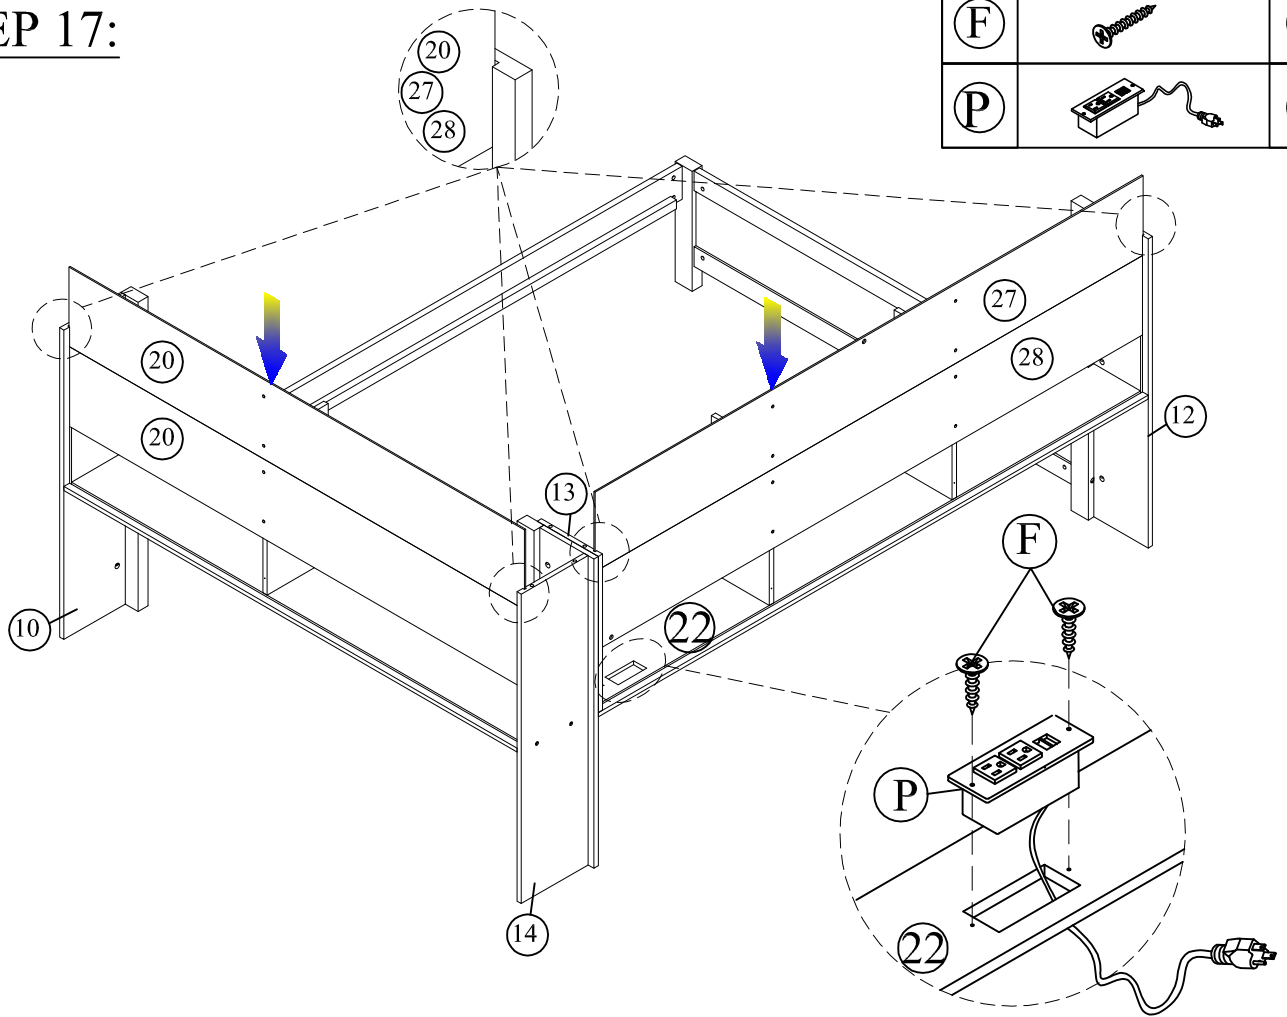

**STEP 18:**

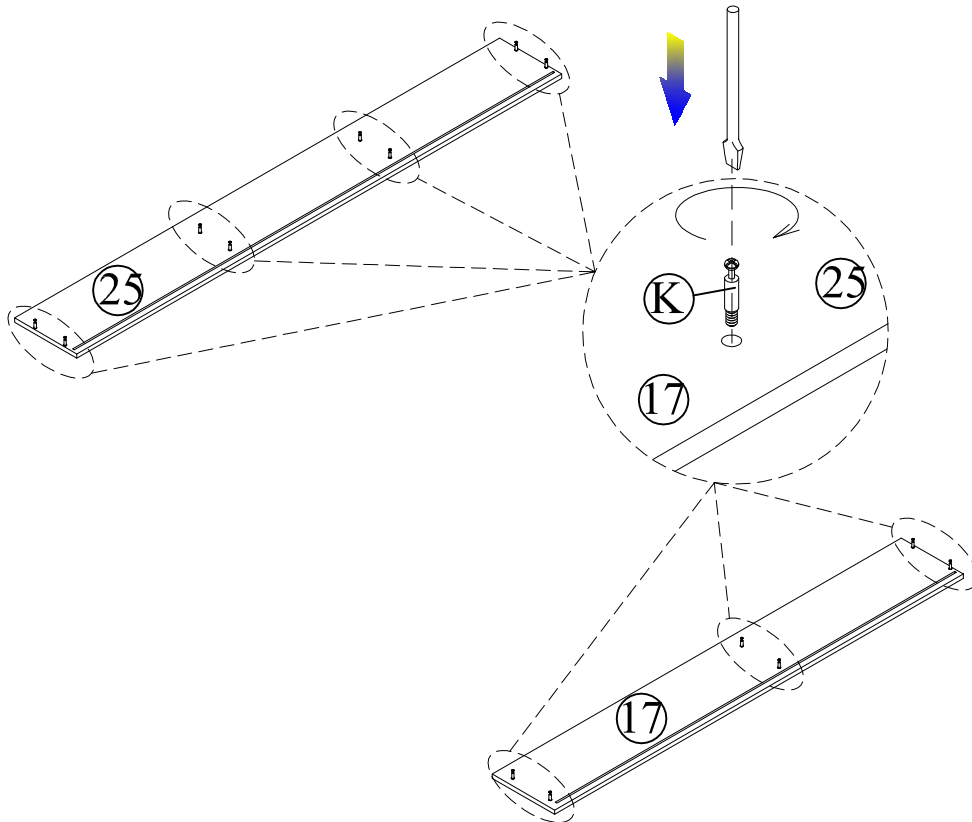


(K)		14
-----	---	----

STEP 19:


L



14

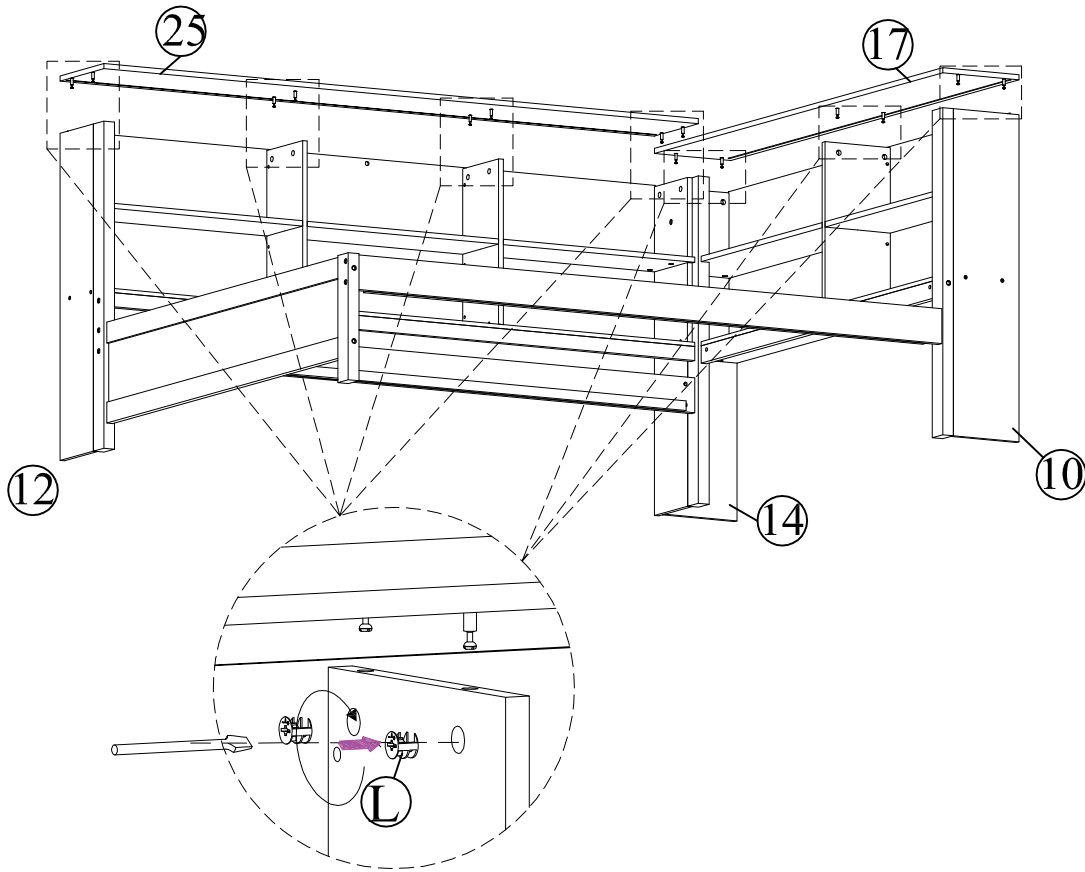

STEP 20:

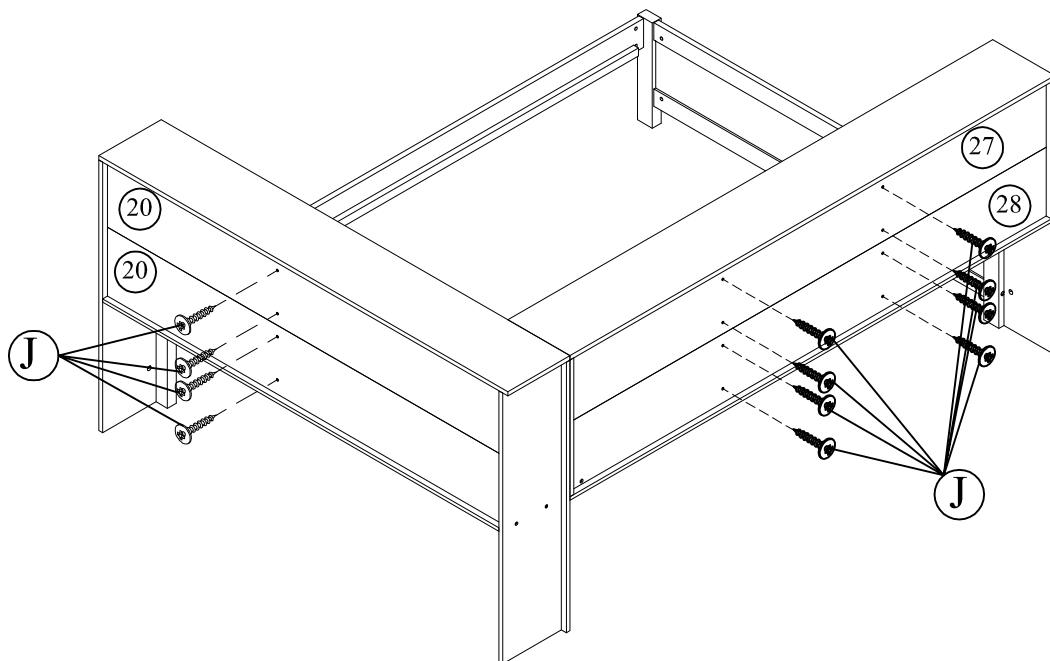




J




12



STEP 21:

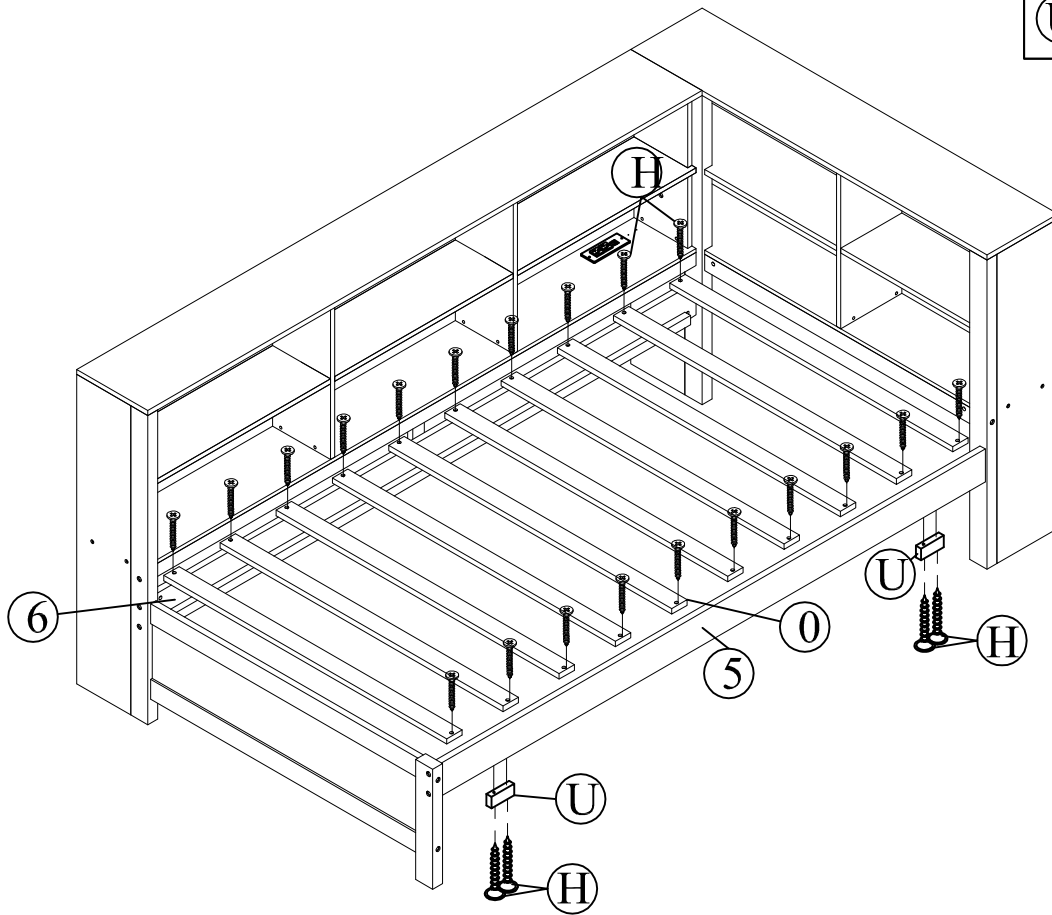(H)		24
(U)		02

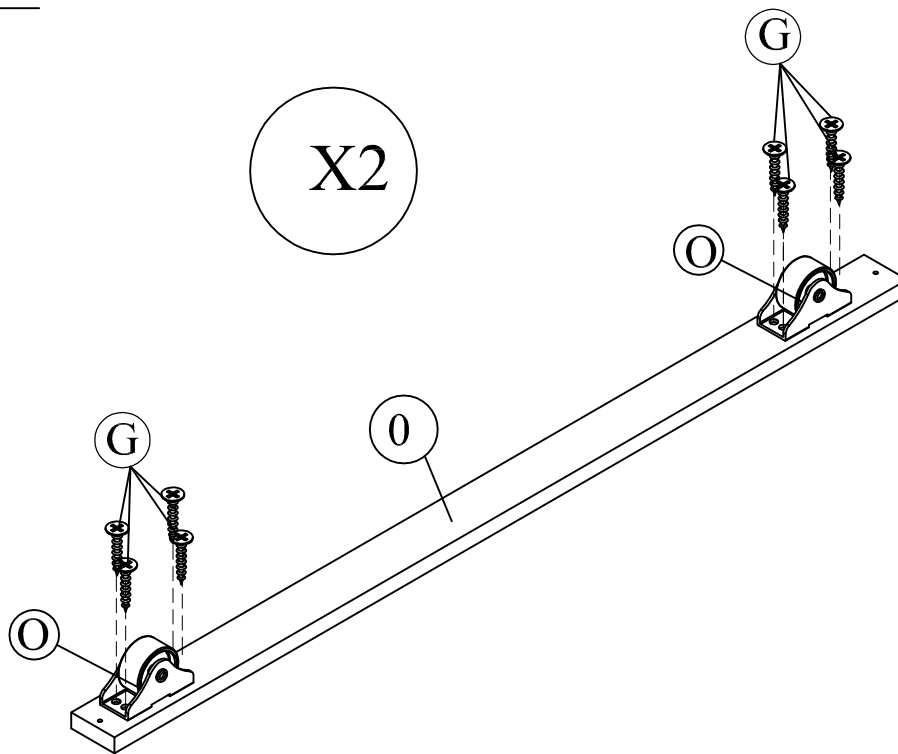


STEP 22:






(G)		16
(O)		04


**STEP 23:**

(H)		14
-----	--	----

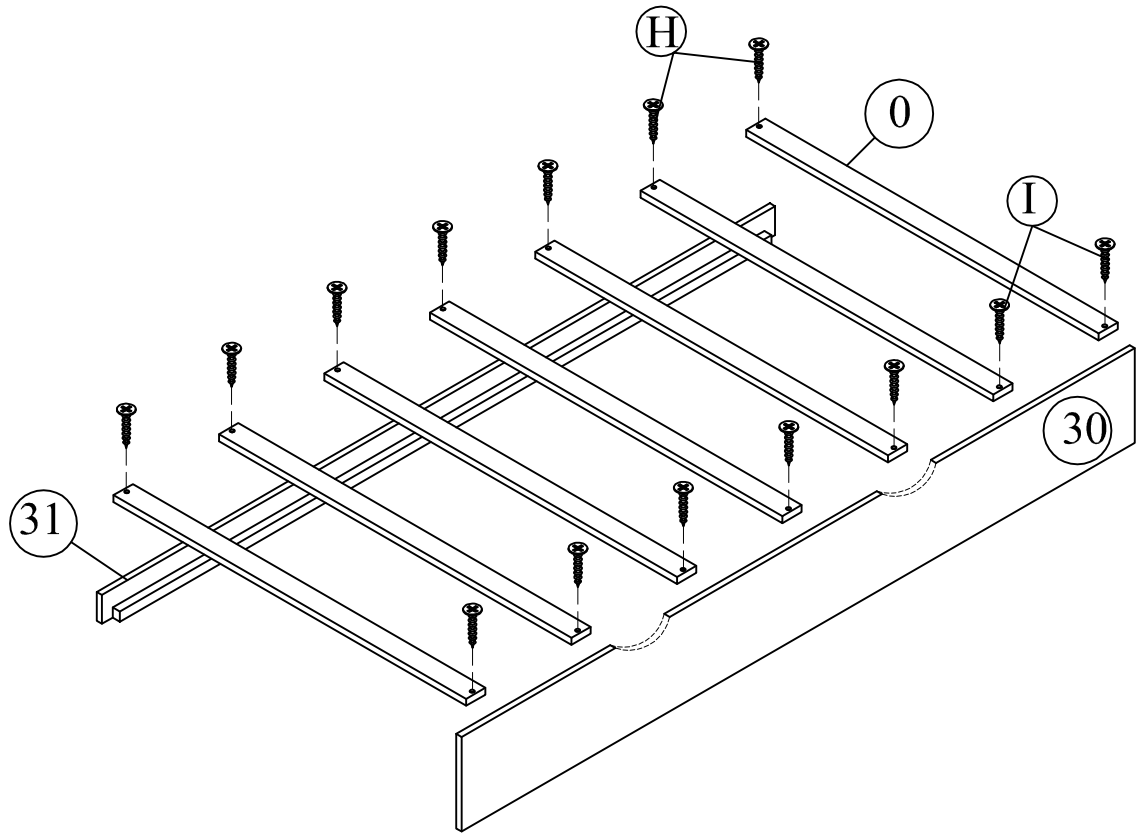




**STEP 24:**

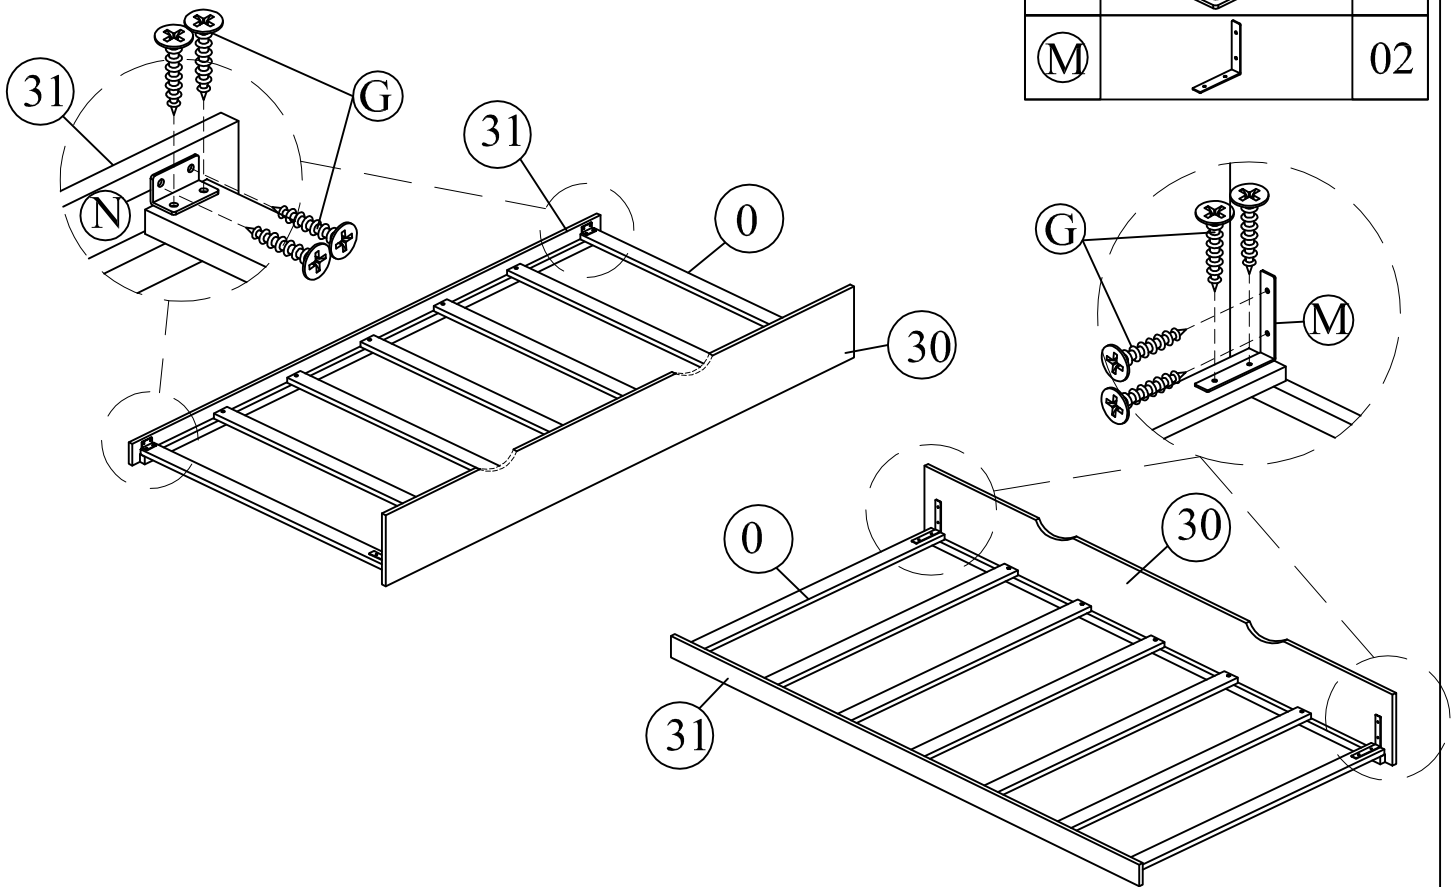(G)		16
(N)		02
(M)		02






# STEP 25

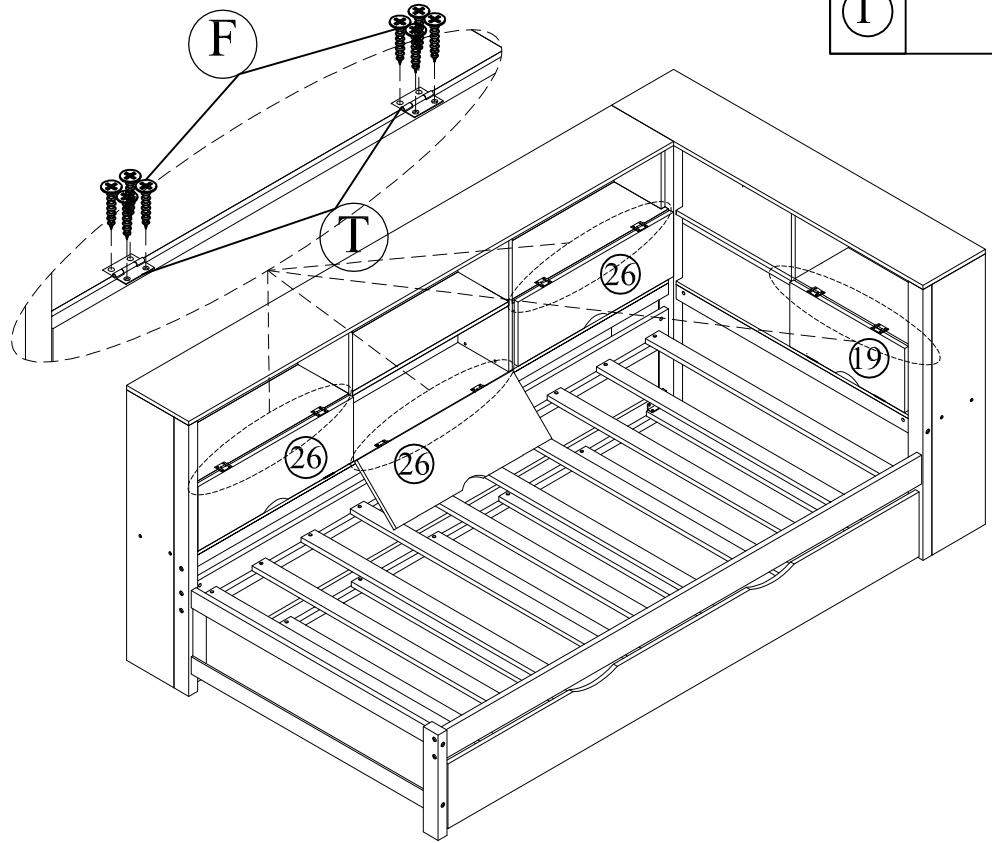(F)		32
(T)		08




# STEP 26

(F)		32
(S)		08


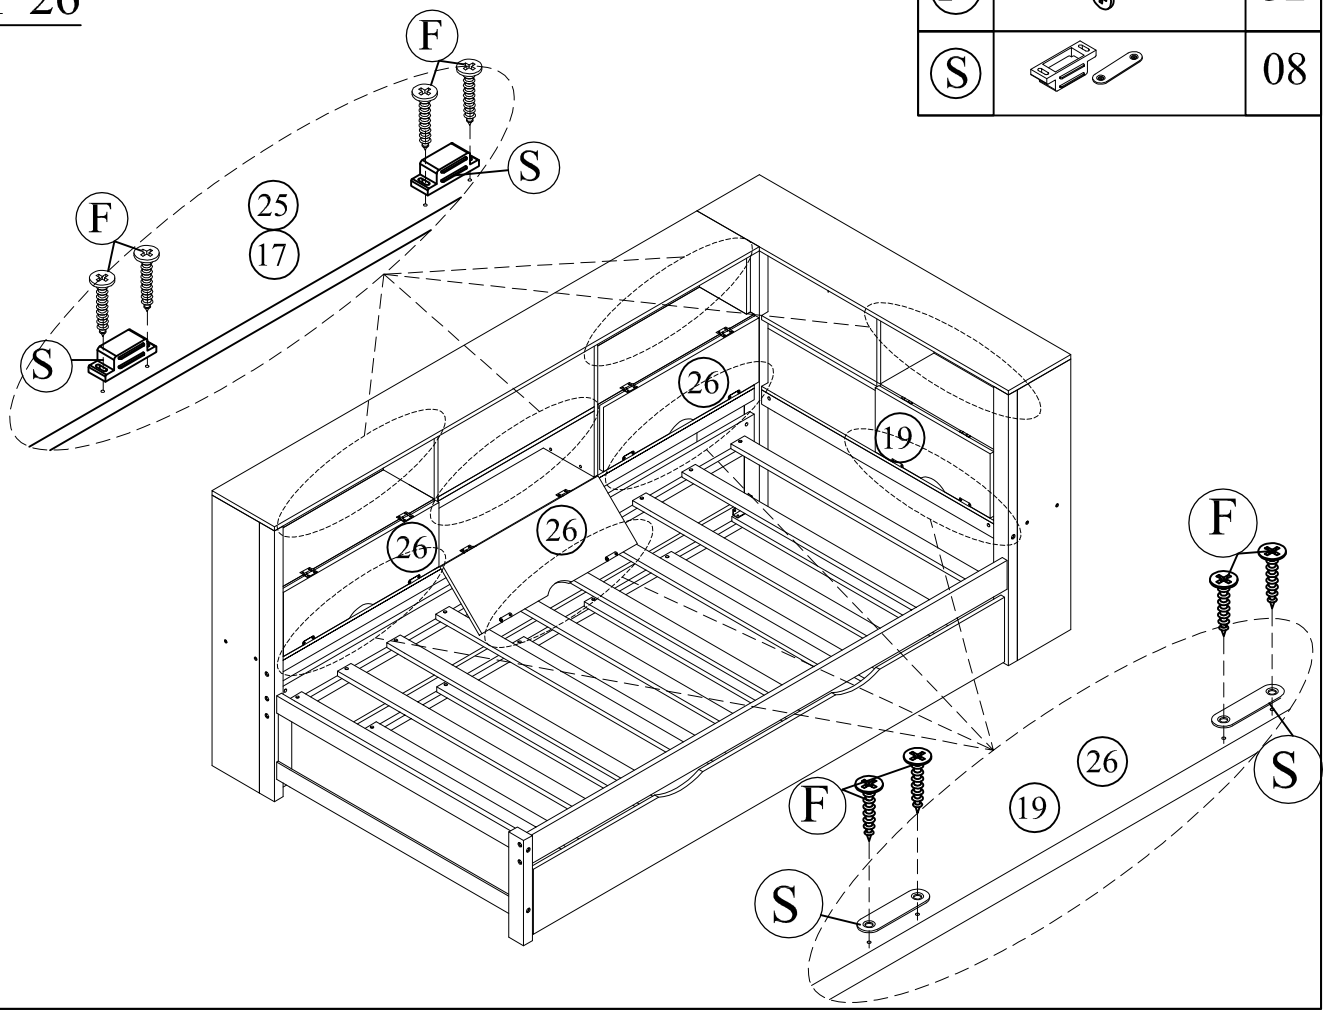




# STEP 27:

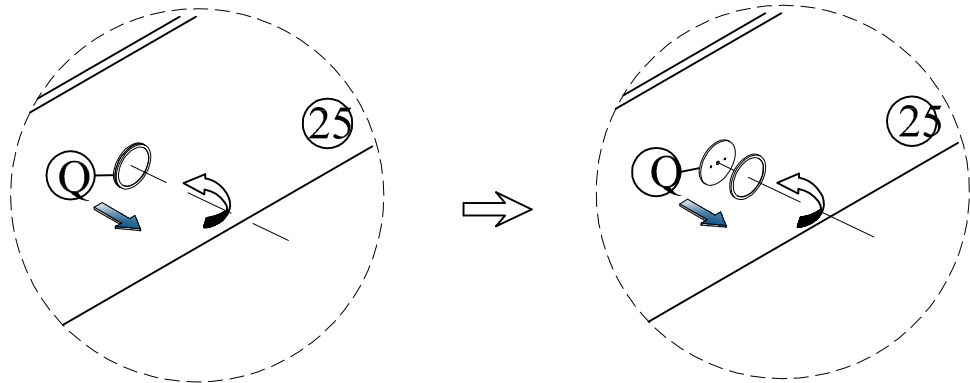I. Twist to open the front Led light




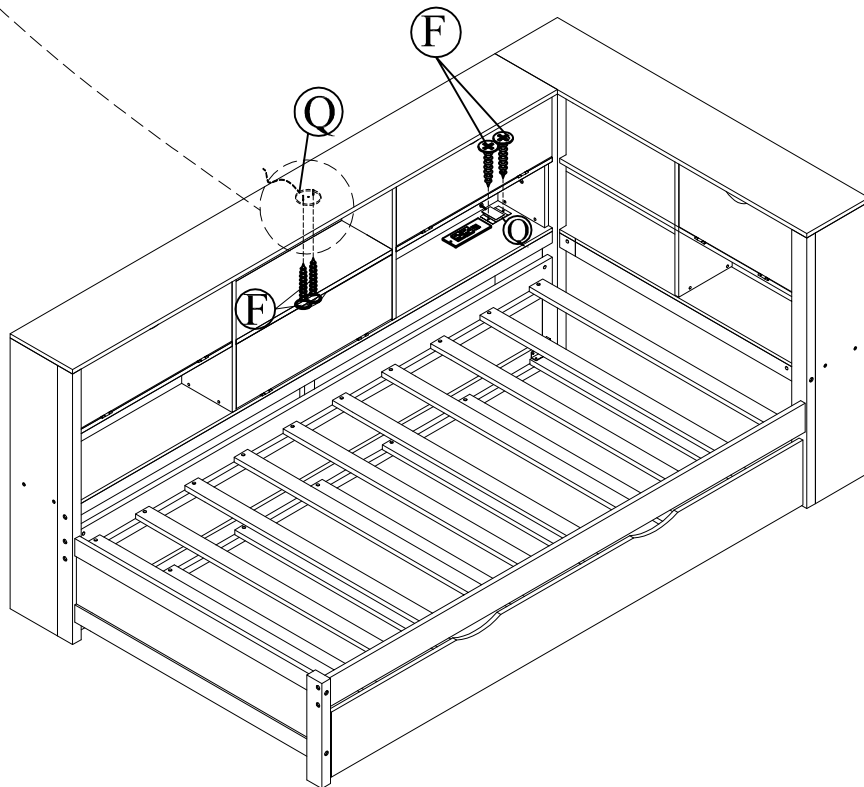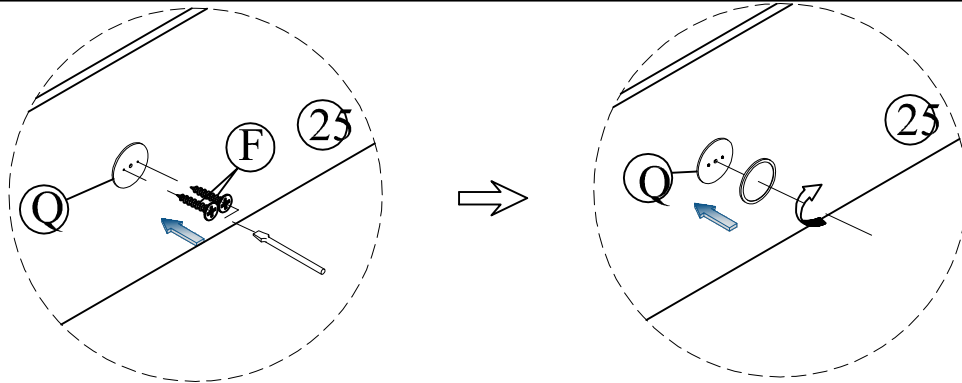

II. Attack screws #6\*12mm to back side and twist to close



(F)		04
(Q)		01

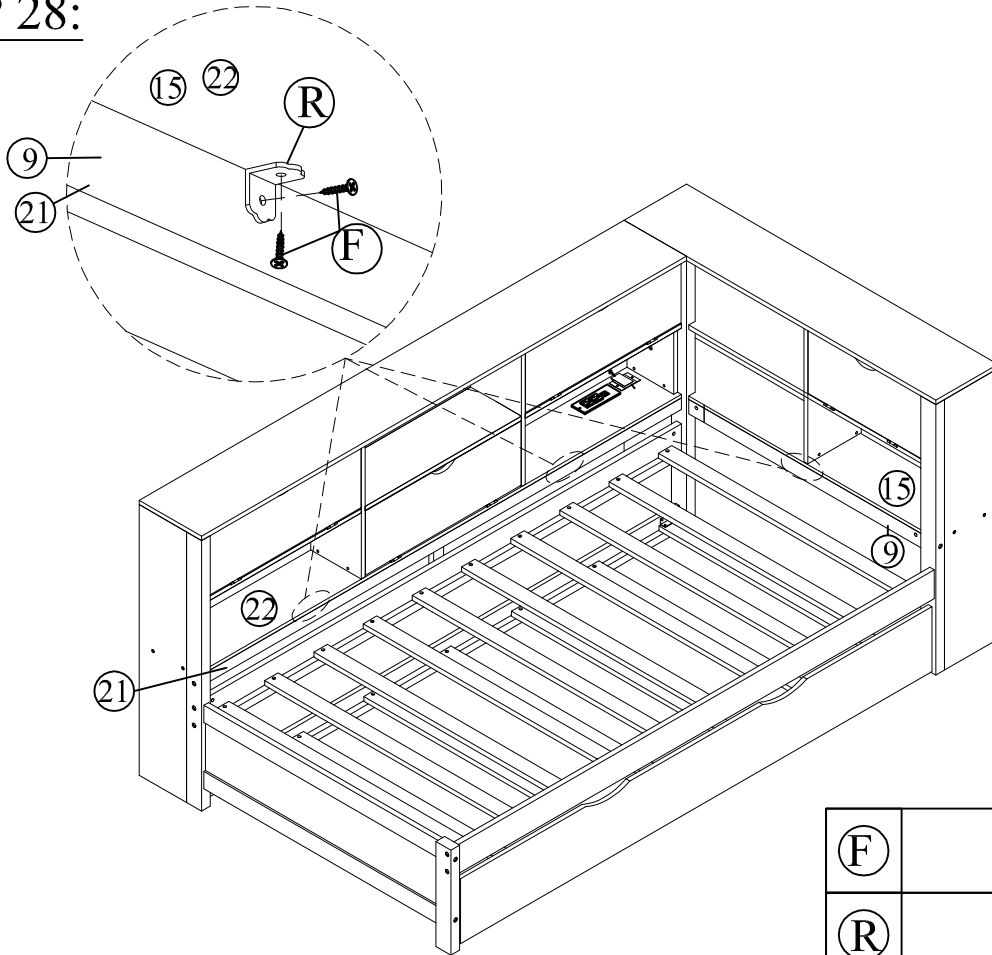**STEP 28:**



(F)		06
(R)		03

**FINAL:**

