

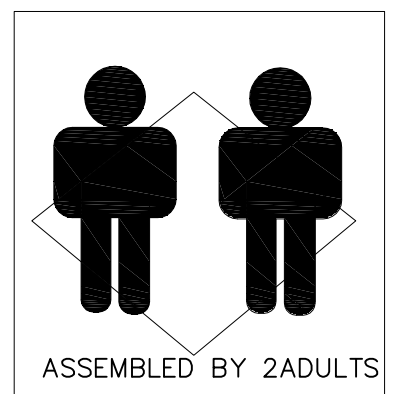
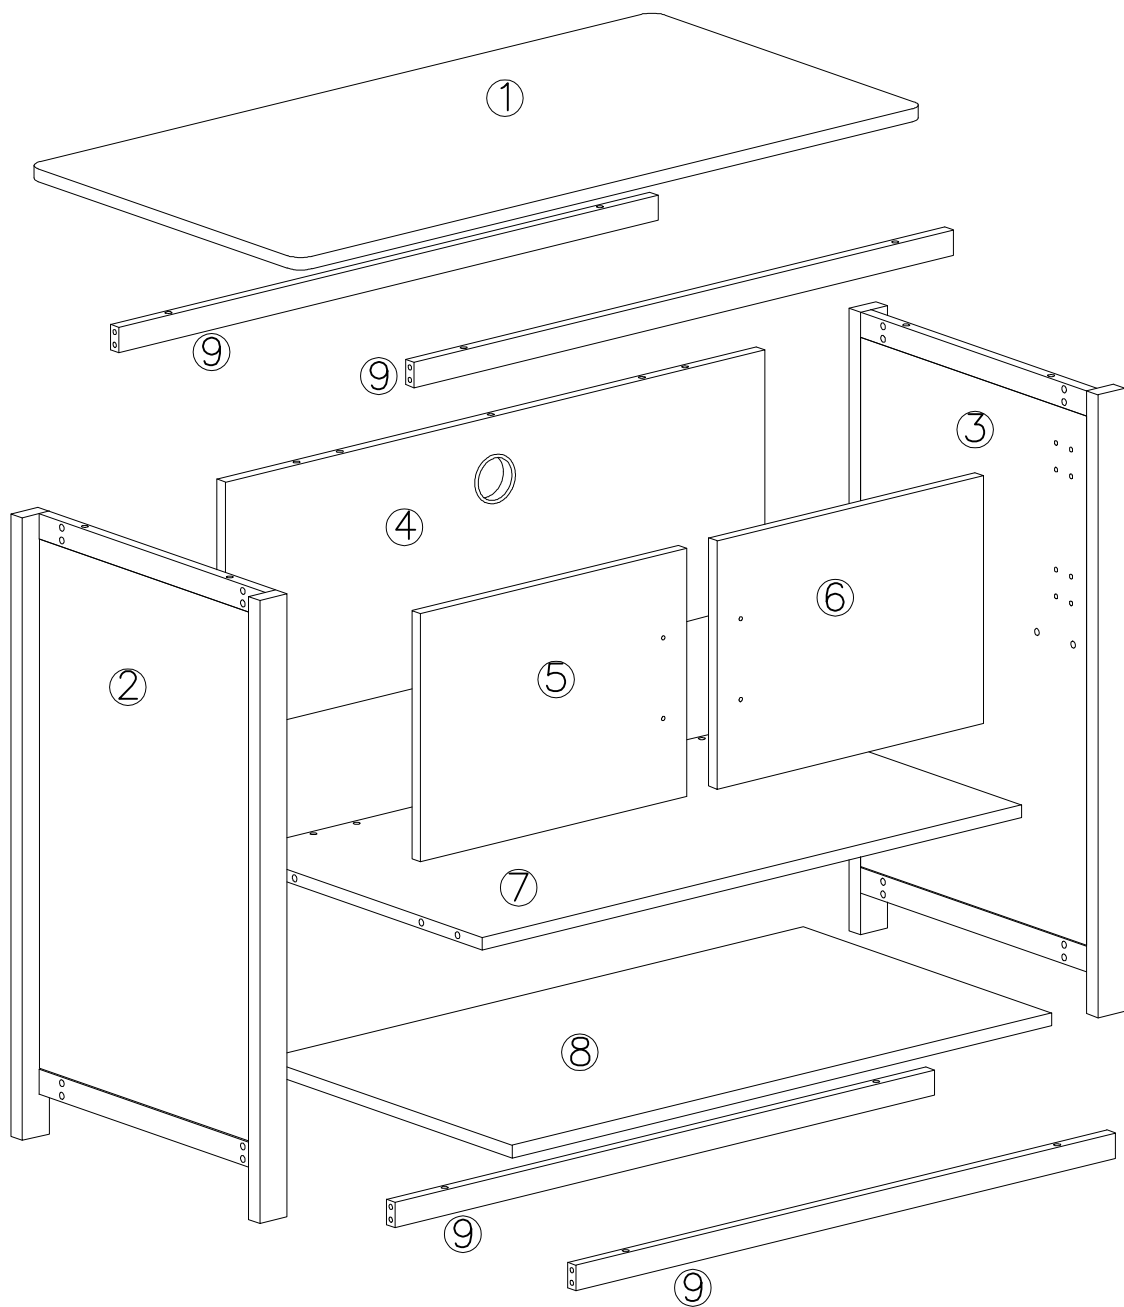



Assembly Instructions









**Friendly remind: The box comes with all needed tools
but we recommend you to use your own normal size
Philip screwdriver and hex key to speed up the work.**

A	X7+1	B	X7+1	C	X8+1	D	X3+1	E	X1	F	X32+1	G	X24+1	H	X2
															
Φ 6X35		Φ 15X12		Φ 8X30		Φ 7X47		M4X55		3. 5*14mm		M6*40mm		46*16*14mm	

I	X2	J	X2	K	X4+1	L	X4	M	X1	N	X4	O	X1
													
45*12*1mm		102*16*8mm		M4*18mm		M8*32		65*34*5				Φ 20	



STEP 1

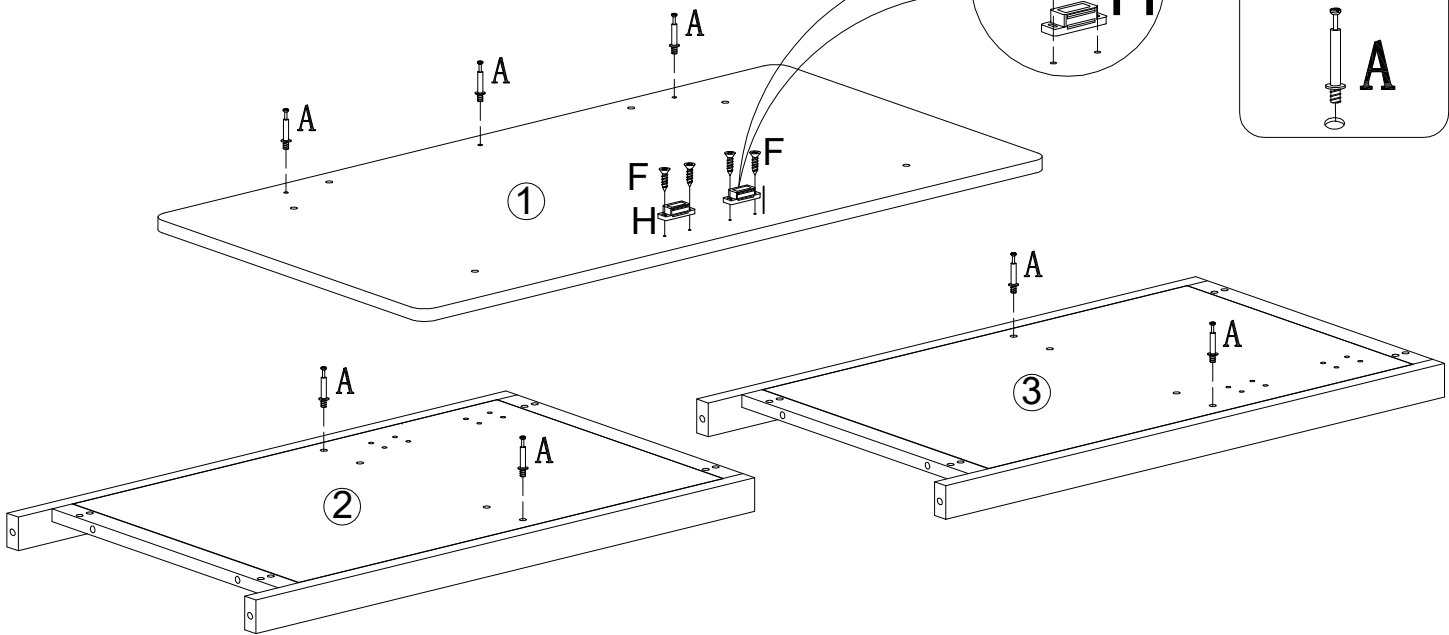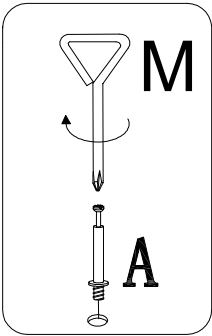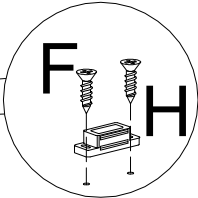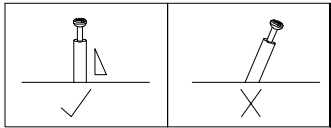


Step 1: Install Connector Bolts A x3 into Part ① using provided Tool M. Install lush and straight as shown in the diagram. Install Part Hx2 using screws F x4. Install Connector Bolts A x2 into both Part ② & ③.

A	X7	F	X4	H	X2	M	X1
							
Φ 6X35		3. 5*14mm		46*16*14mm		65*34*5	


STEP 2

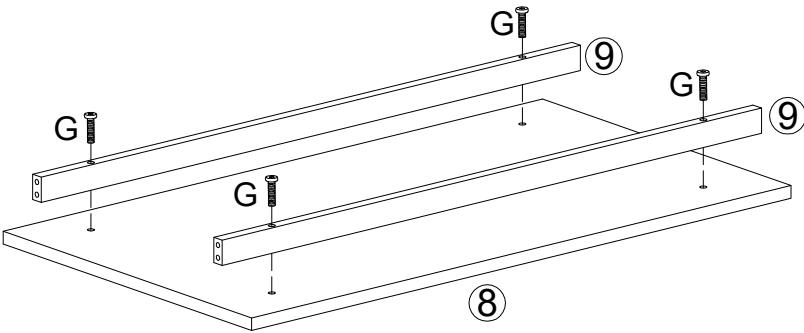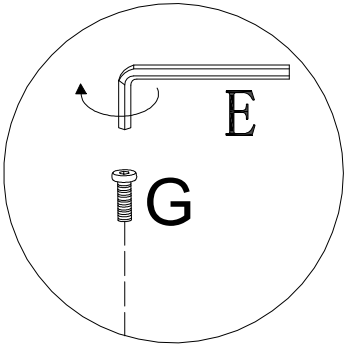


Step 2: Install Rails Part ⑨ x2 on Part ⑧ using screws G.

G	X4	E	X1
			
M6X40mm		M4X55	


STEP 3

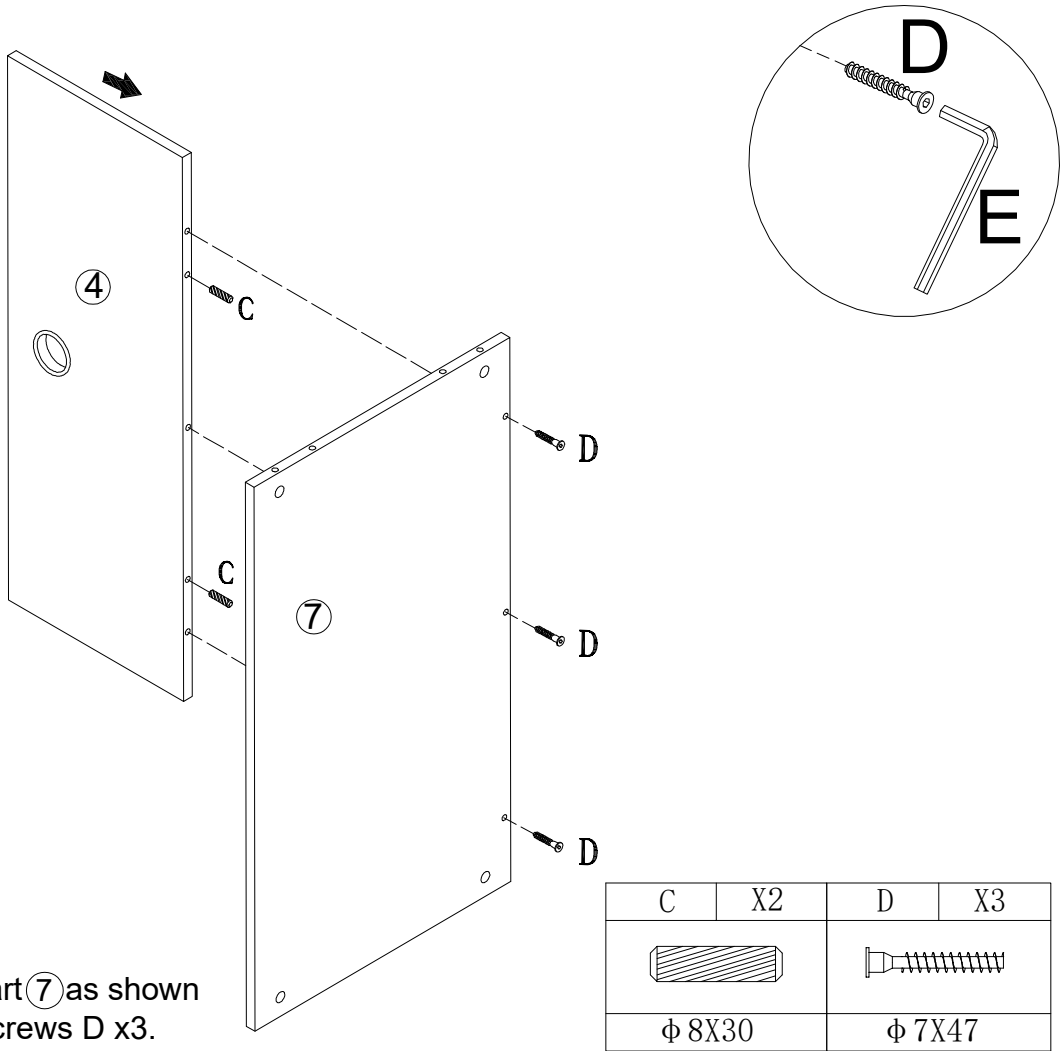

STEP 4

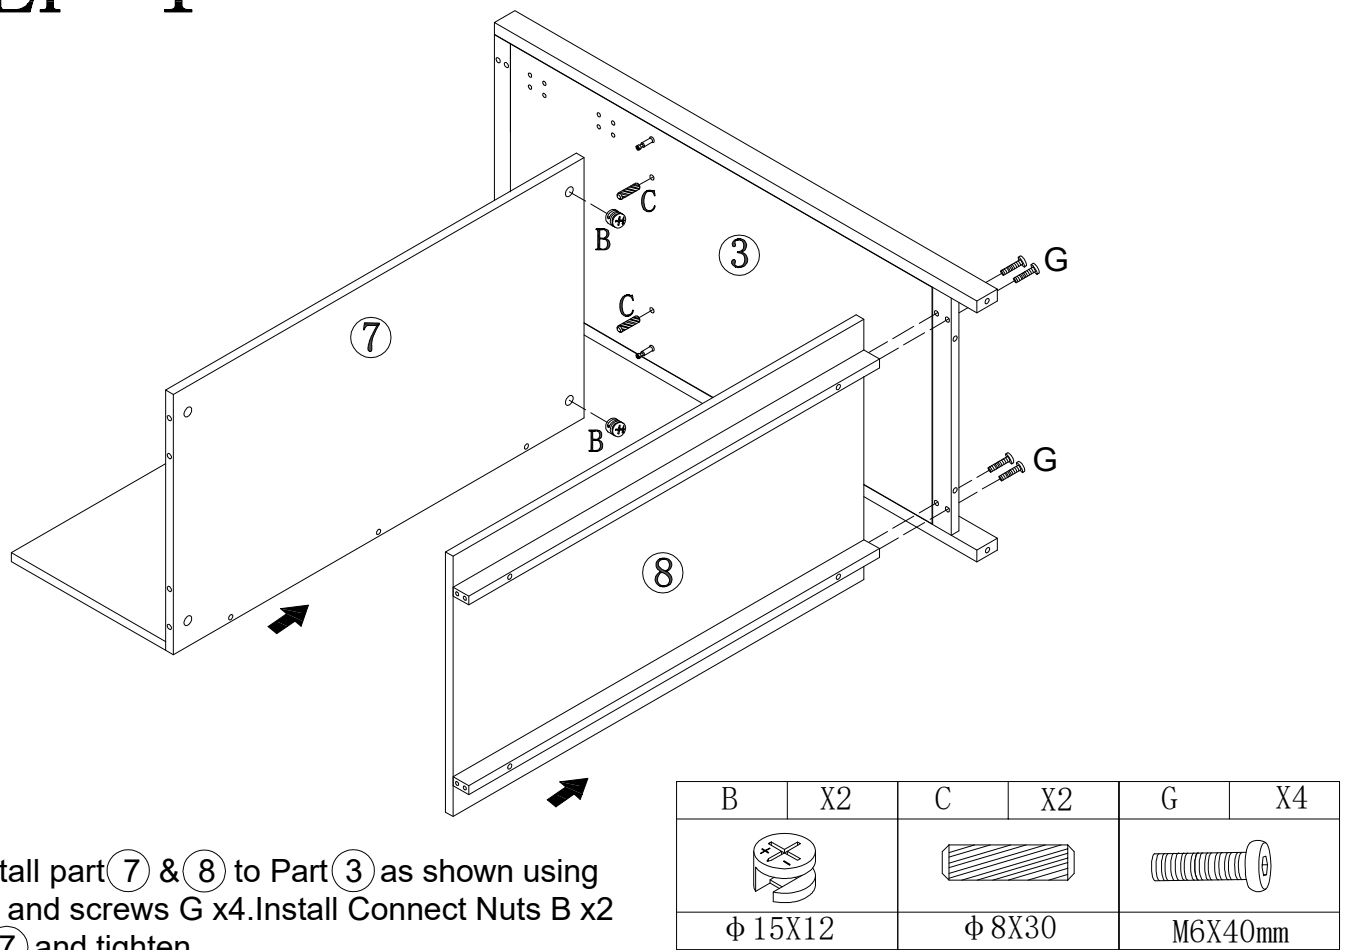


STEP 5

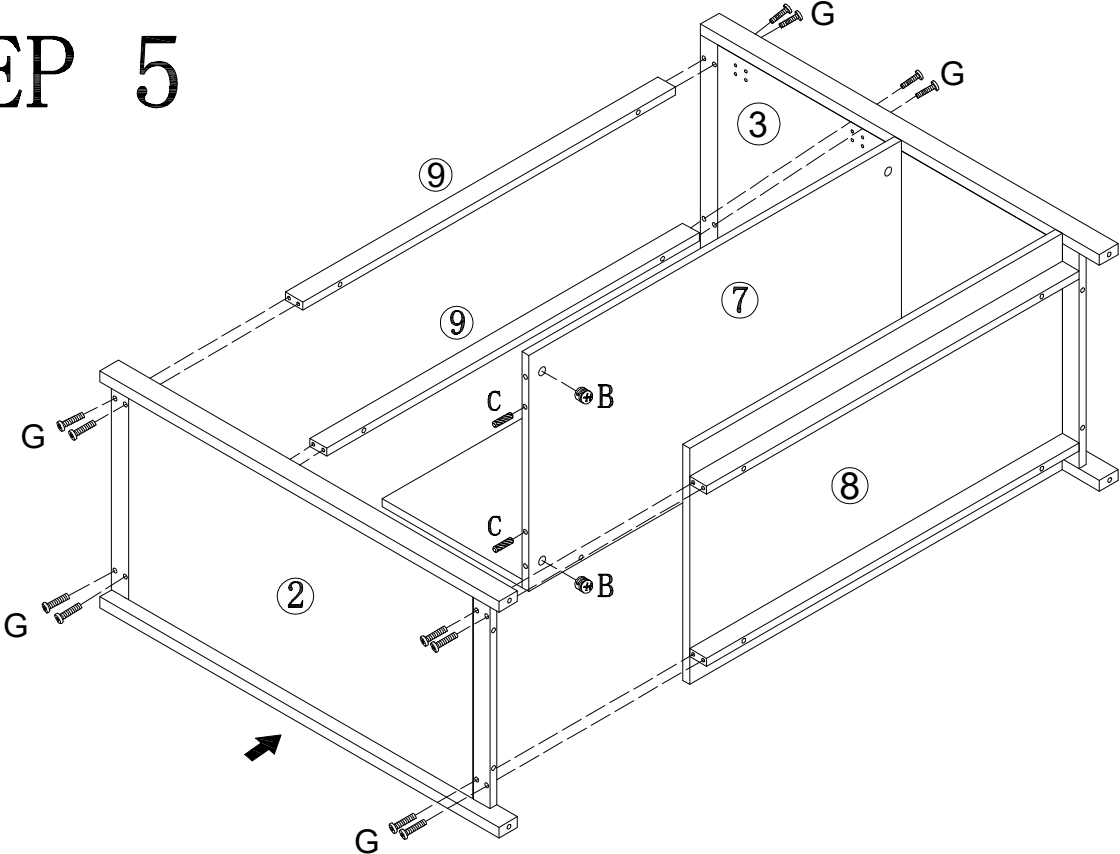

Step 5: Firstly Install Dowel C x2. Then Install Rails Part 9 x2 on both Parts 2 & 3 using screws G x8 as shown. Further attach Part 2 to Part 8 using screws G x4 on the bottom. Last install Connect Nuts B x2 into Parts 7 and tighten.

B	X2	C	X2	G	X12
					
ϕ 15X12		ϕ 8X30		M6X40mm	



STEP 6

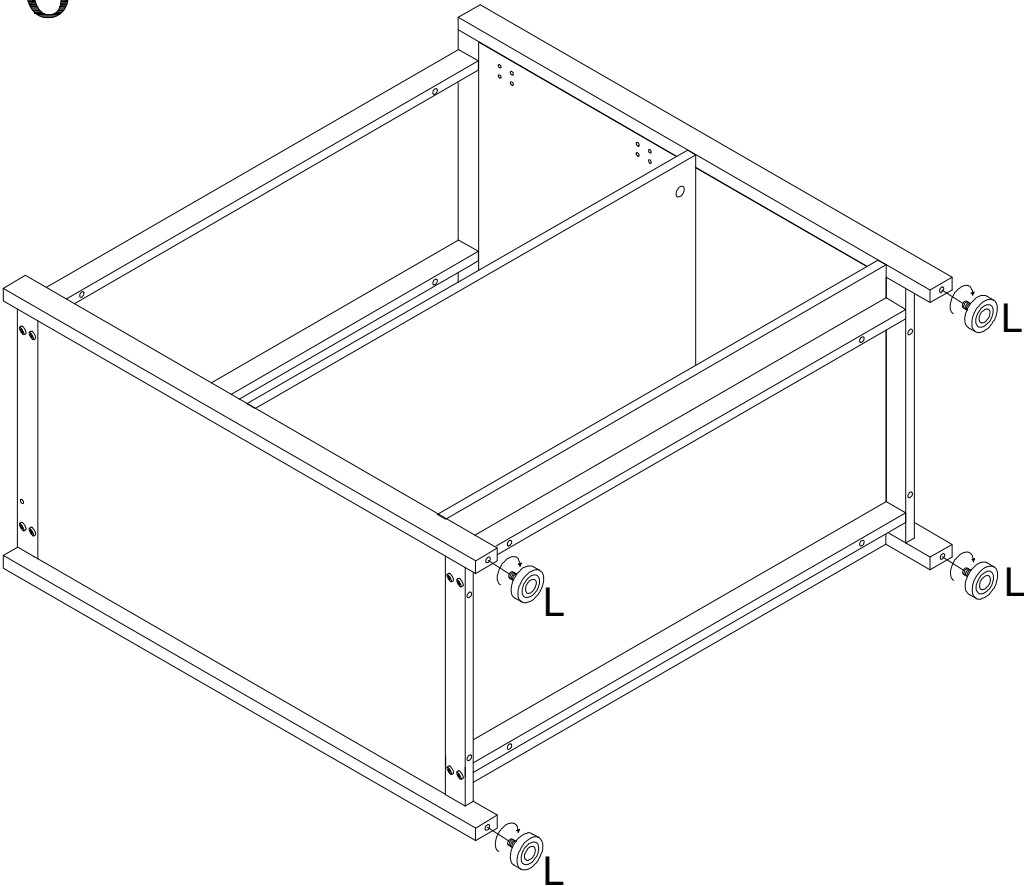


Step 6: Install Adjustable feet pads L x4 on the bottom.

L	X4
	
ϕ M8*32	




STEP 7

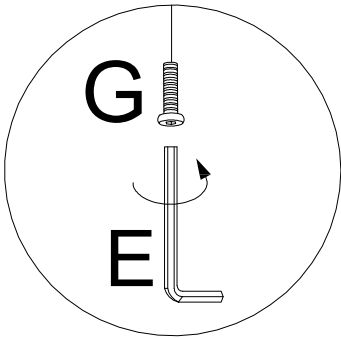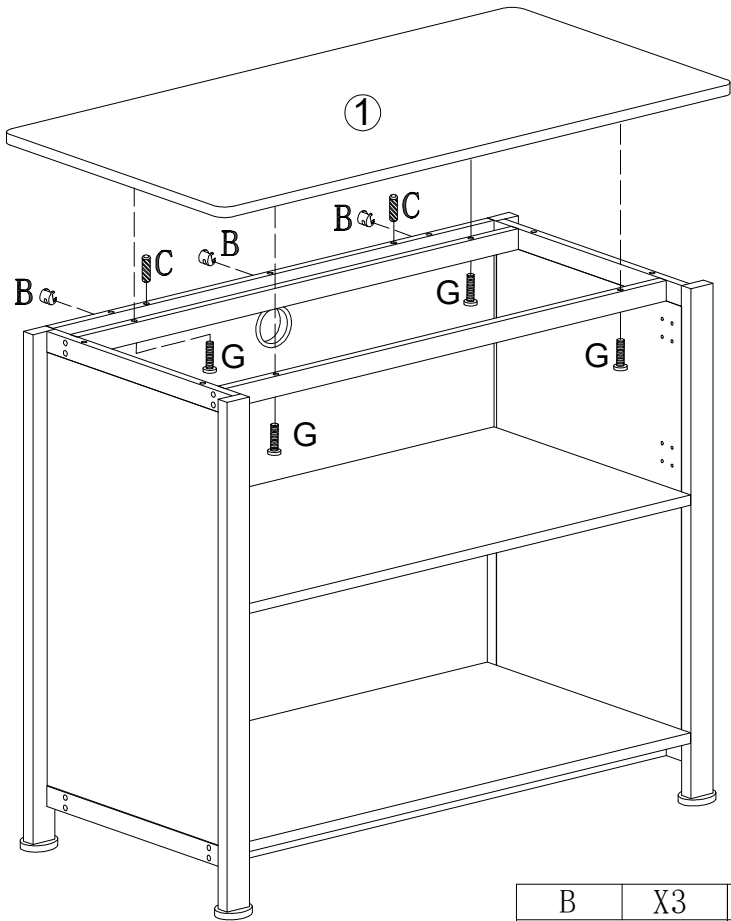

Step 7: Install Dowel C x2 into Parts 7 as shown. Attach Part 1 to Rails Part 9 x2 using screws G x4. Install Connect Nuts B x3 and tighten.

B	X3	C	X2	G	X4
					
ϕ 15X12		ϕ 8X30		M6X40mm	


STEP 8

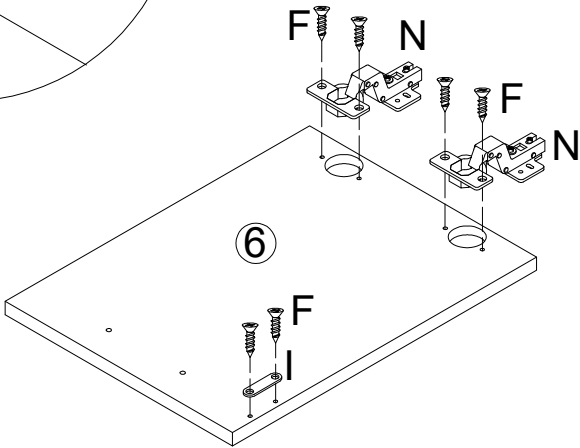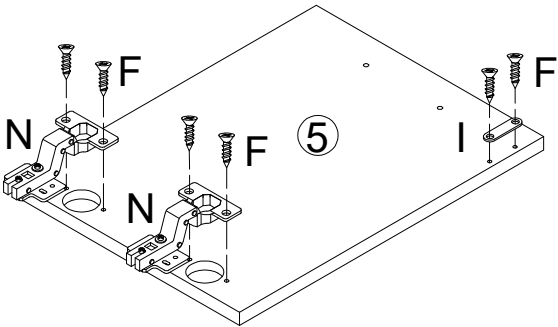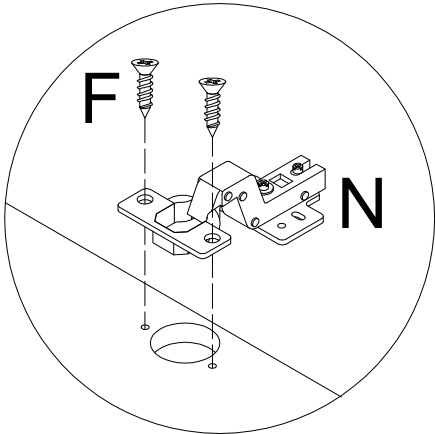

Step 8: Install door hinges Part N x4 into Parts 5 & 6 as shown using screws F x8. Also attach Door catch I x2 into Parts 5 & 6 using screws F x4.

F	X12	I	X2	N	X4
					
3. 5*14mm		45*12*1mm			


STEP 9

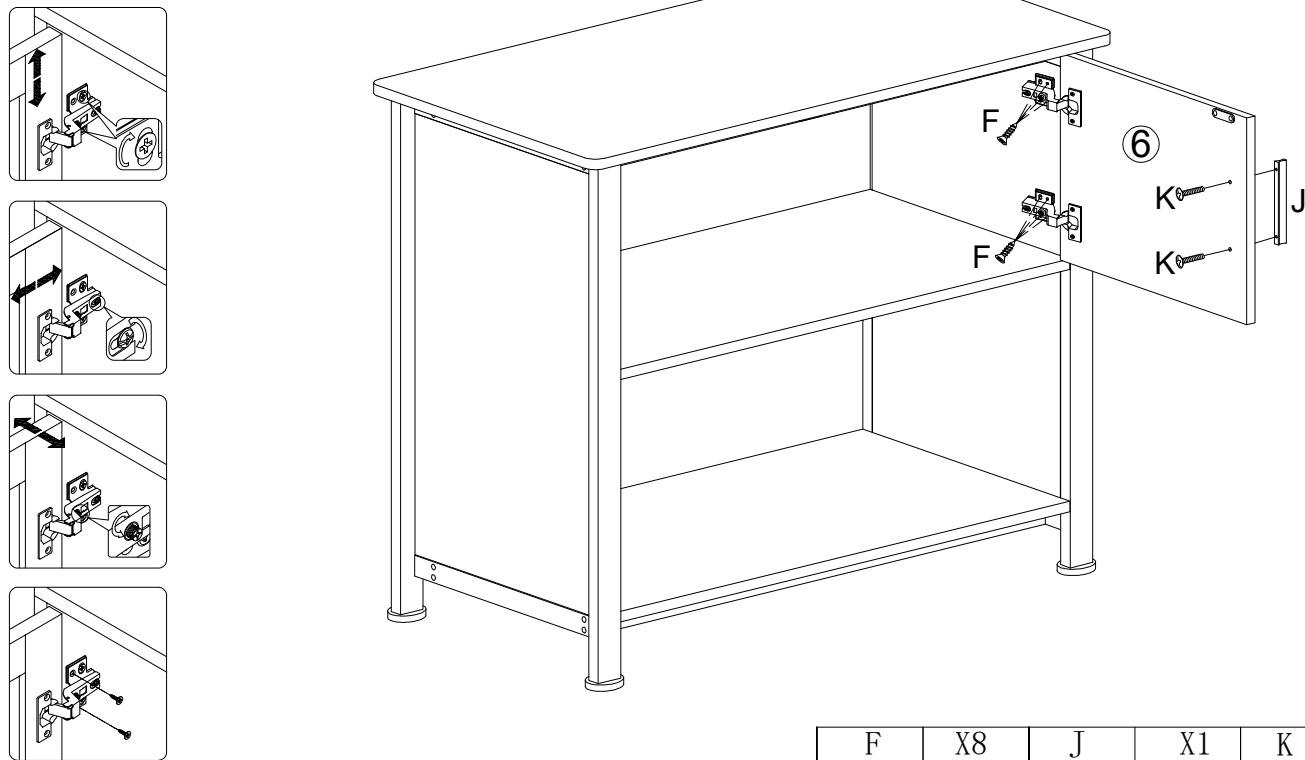

Step 9-10: Attach each door as shown using screws F (x2 per hinge) Also Attach each door hand Part J using screws K.


F	X8	J	X1	K	X2
					
3.5*14mm		102*16*8mm		M4*18mm	

STEP 10

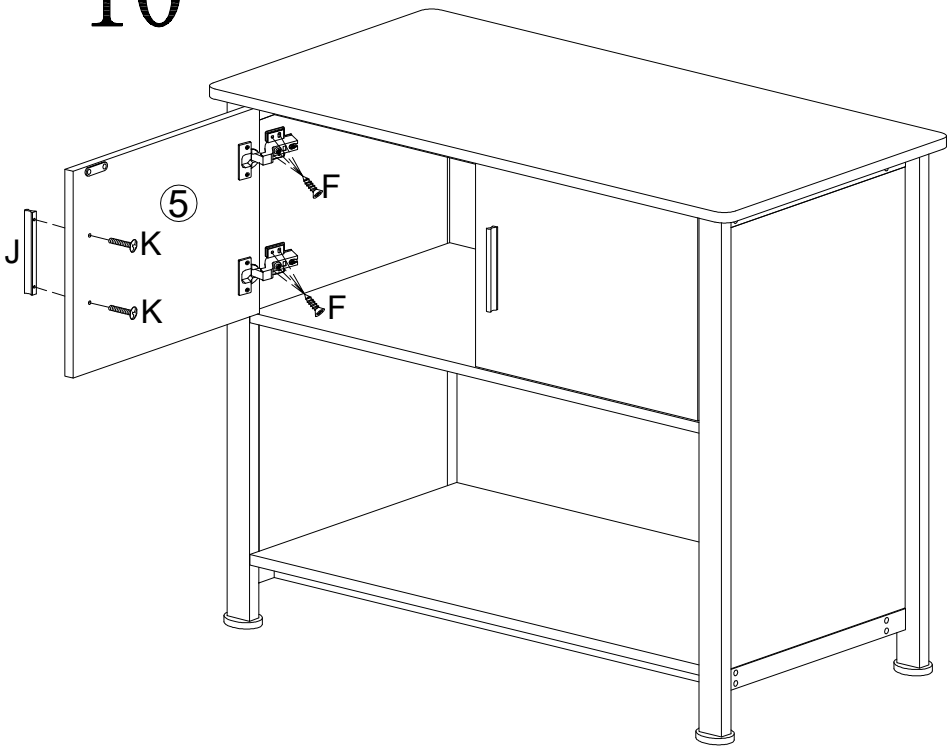

F	X8	J	X1	K	X2
					
3.5*14mm		102*16*8mm		M4*18mm	

STEP 11

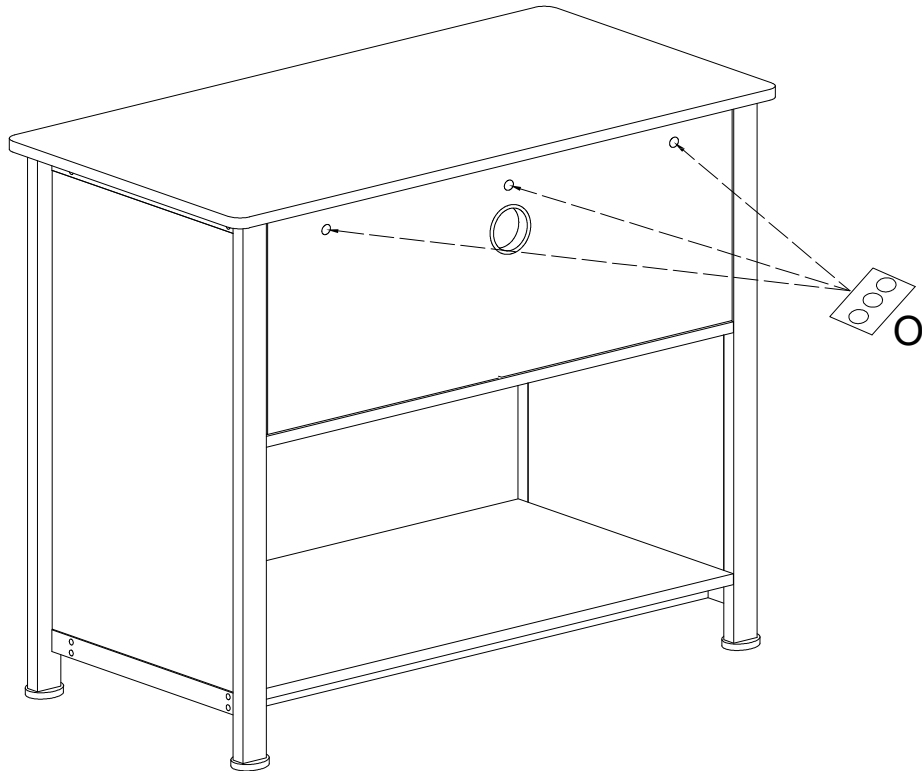

Step 11: Add stickers Part O x3 to cover holes in the back of the unit as shown so as to looks better.

0	X1
φ 20	

Enjoy your new unit 😊

