
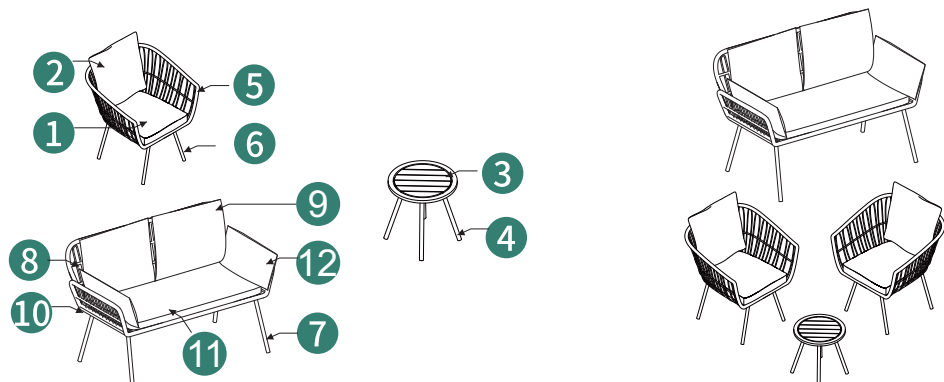
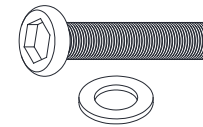
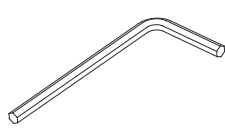
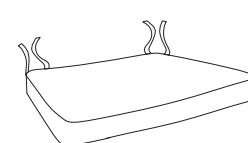
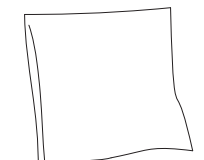
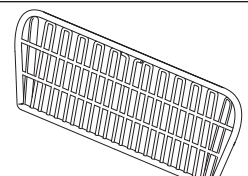
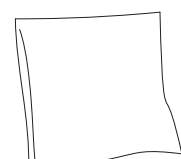

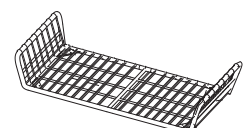
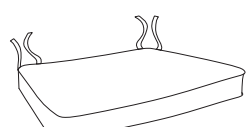

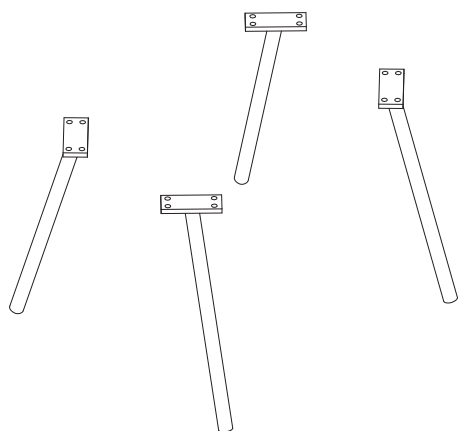


"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"

-  1. Assemble product on a flat, clean surface.
 2. Ensure that all screws are placed in correct positions prior to tightening.
 3. If a screw cannot be inserted, loosen it and try again. Once all screws are aligned and inserted, tighten them in a crisscross pattern.
 4. Do not fully tighten all screws until assembly is completed.


		
Item no.	Reference Image	Qty.
A	 M6x15	X 64
B	 M6x40	X 5
-		X 2

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		x2	7		x4
2		x2	8		x1
3		x1	9		x2
4		x4	10		x1
5		x2	11		x1
6		x8	12		x2

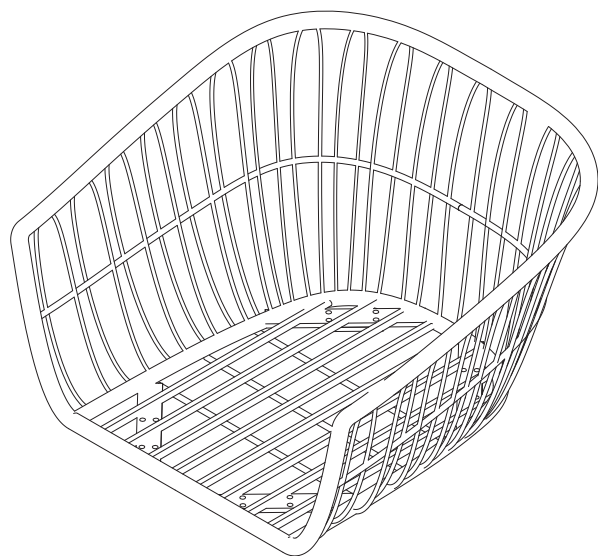

2 SETS

1




Ⓐ 32PCS







⑤ 2PCS










⑥ 8PCS

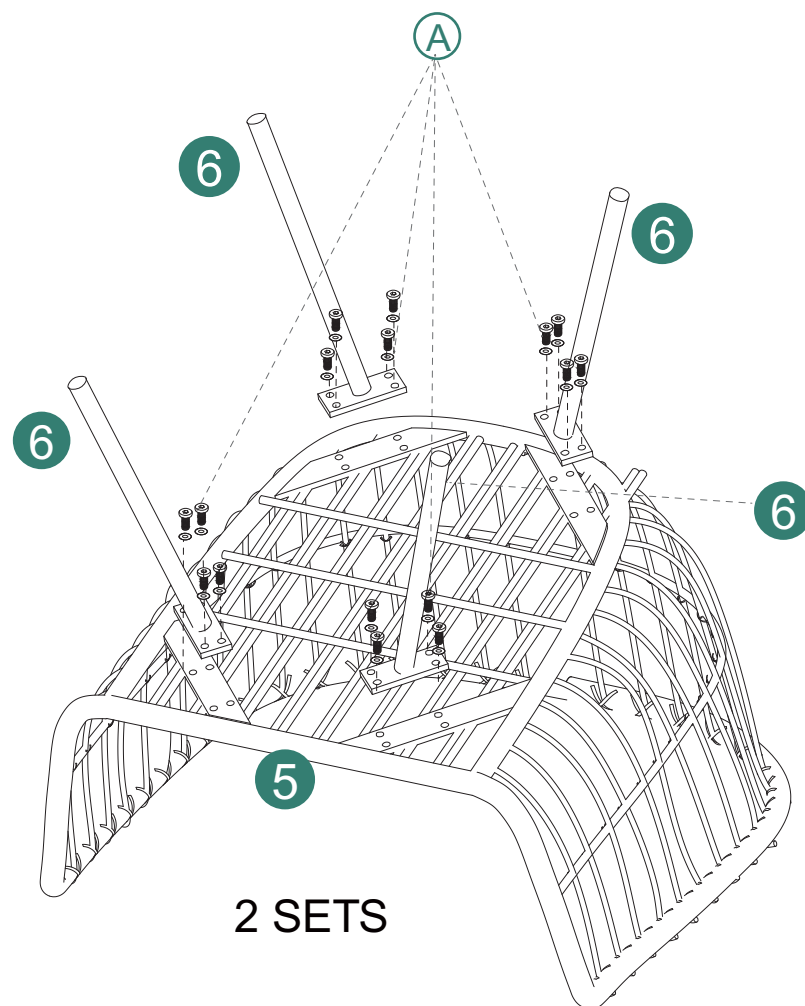

2 SETS

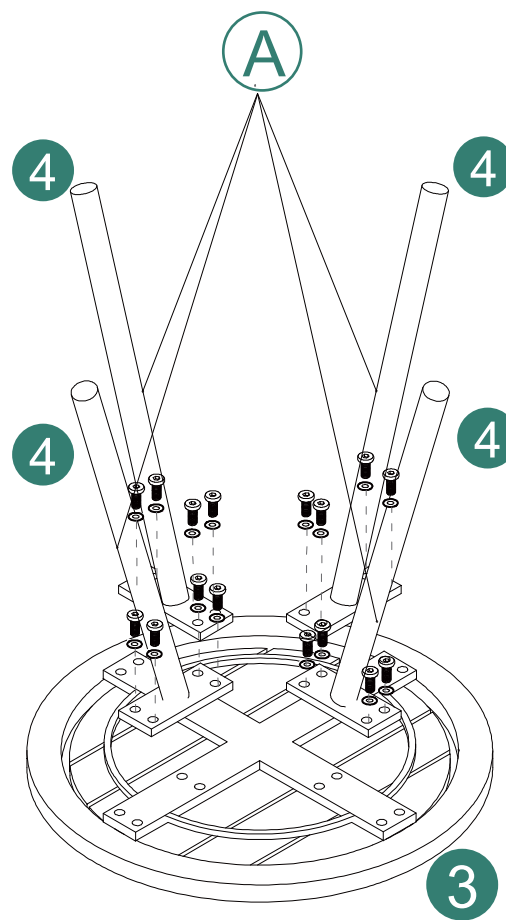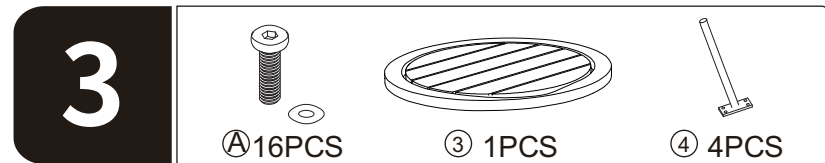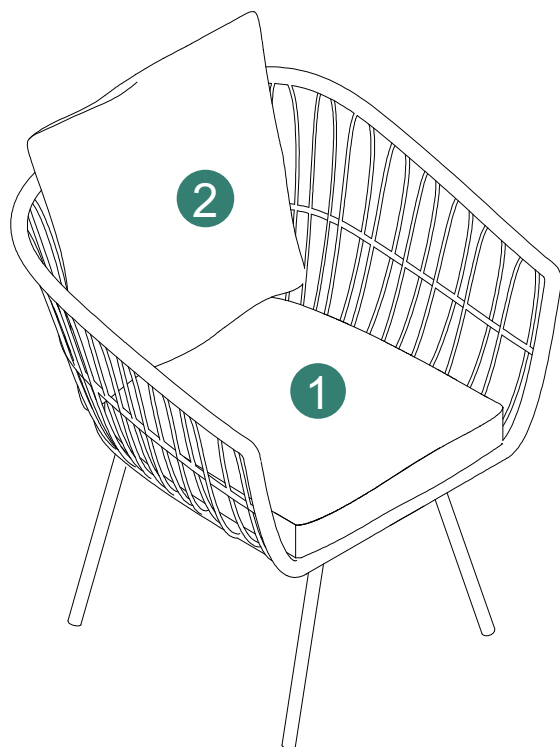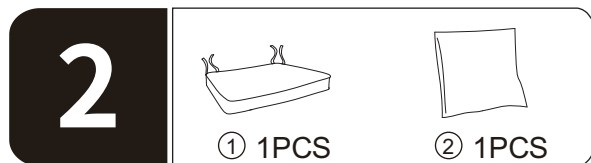

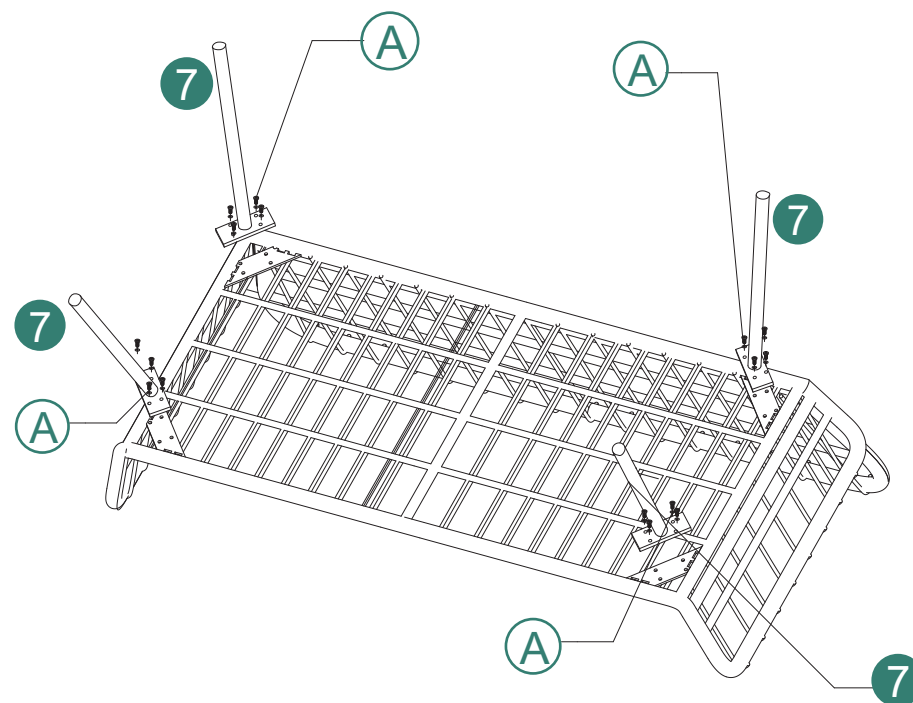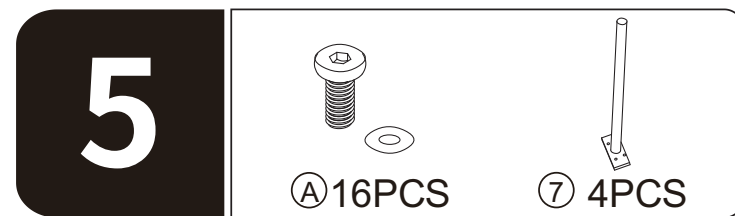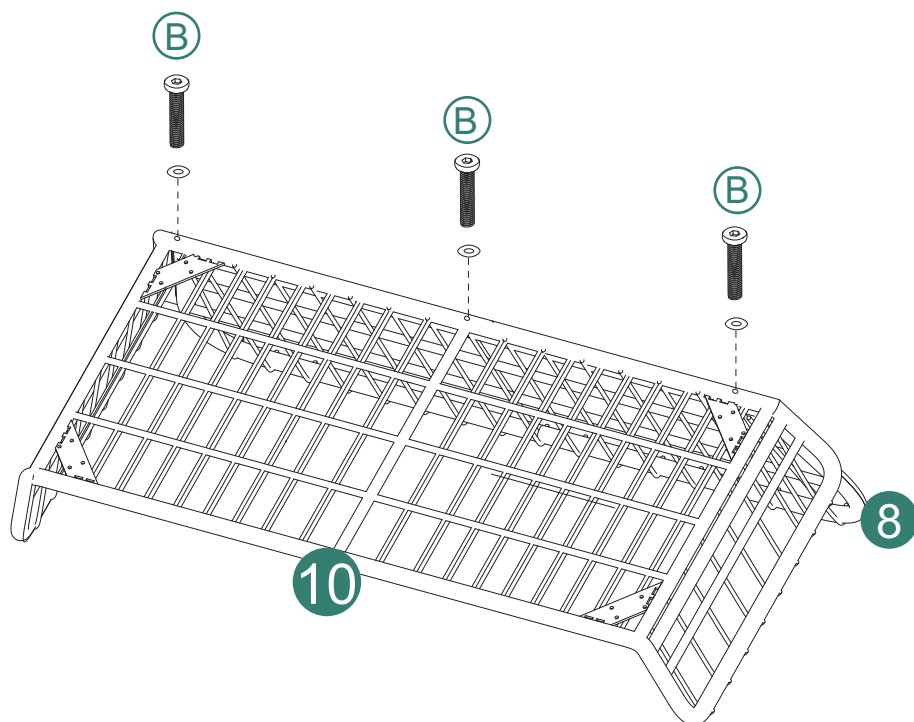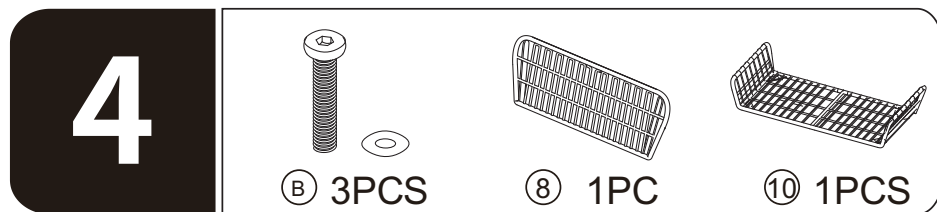

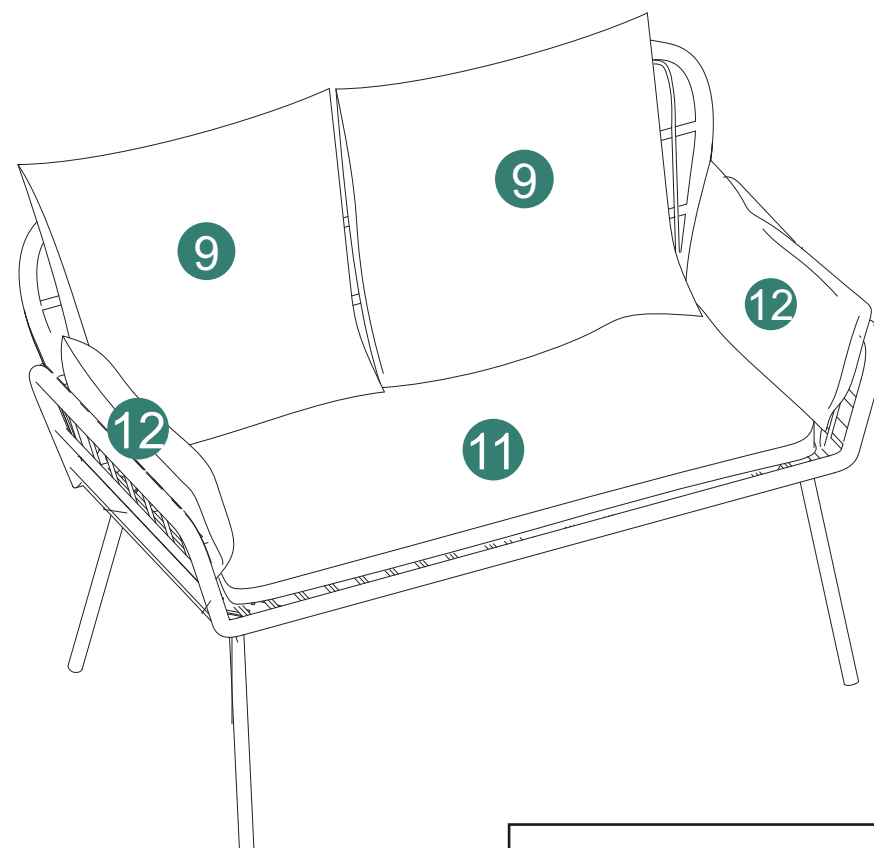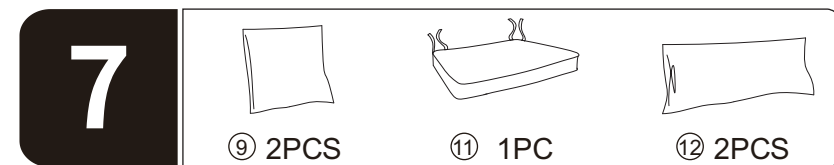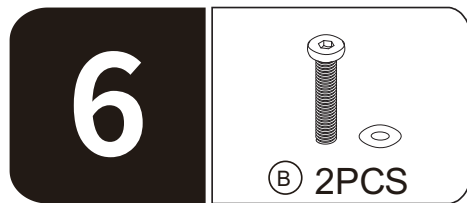

Installation Completed